

Приложение IRC 01 F (версия 18.02.09 01:12)

Модели оригинальных пультов и соответствующие им коды пульта IRC приведены в разделе "Коды пульта IRC 01 F".

Функции всех кнопок для каждого кода пульта IRC можно узнать из таблиц данного приложения.

Пульт IRC может иметь дополнительные функции (если указаны в столбце "Доп. функция"). Доступ к ним осуществляется при помощи кнопки SHIFT (см. в инструкции рис.1, п.16). Для доступа к дополнительным функциям нажмите кнопку SHIFT и, удерживая её нажатой, нажмите ту кнопку, дополнительная функция которой Вам необходима.

После первой установки батареек

Кнопка устройства пульта IRC	Код пульта IRC	Кнопка устройства пульта IRC	Код пульта IRC
TV	101	SHIFT + TV*	105
VCR	102	SHIFT + VCR*	106
AUX	103	SHIFT + AUX*	107
SAT	104	SHIFT + SAT*	108

* Нажмите кнопку SHIFT и, удерживая её нажатой, нажмите и отпустите одну из кнопок пульта: TV, VCR, AUX или SAT.

Доступные коды пульта IRC 01 F

Номер базы кодов (диапазон кодов)	Устройство базы кодов	Доступные коды пульта IRC
1 (101-199)	TV	101 - 116
2 (201-299)	VCR	201 - 207
3 (301-399)	AUX	301 - 323
4 (401-499)	-	Нет
5 (501-599)	TV	501 - 599
6 (601-699)	TV	601 - 699
7 (701-799)	TV	701 - 787
8 (801-899)	SAT	801 - 899
9 (901-999)	SAT	901 - 999

Коды пульта IRC 01 F

Коды к устройствам марки AIIWA

Модель*	Устр-во	Код
210-Y8810	TV	112
42LE71213	TV	114
HOF12H057GPD10	TV	111
HOF14J016GPD10	TV	115
JH-11370	TV/AUX	110
RC-5VP06	VCR	201
RC-5VP07	VCR	201
RC-5VT03	TV	106
RC-6AS01	AUX, CD, DVD	301,302
RC-6AS09	AUX, CD, DVD	301,302
RC-6AS14	AUX, CD, DVD	301,302
RC-6AT03	AUX, CD, DVD	303
RC-6VT01	TV	101
RC-6VT05	TV	101
RC-6VT06	TV	101
RC-7AS06	AUX, CD, DVD	301,302
RC-7AS08	AUX, CD, DVD	301,302
RC-7AS09	AUX, CD, DVD	301,302
RC-7VC01	TV/VCR	105
RC-7VR11	VCR	206
RC-8AT05	AUX, CD, DVD	303
RC-8VP02	VCR	201
RC-A950LE (CD)	AUX, CD, DVD	321
RC-A950LE (TAPE)	AUX, CD, DVD	322
RC-AAS01	AUX, CD, DVD	306
RC-AAS11	AUX, CD, DVD	301,302
RC-AAT11	AUX, CD, DVD	307
RC-AAT20	AUX, CD, DVD	301,302
RC-AAT22	AUX, CD, DVD	308
RC-AVT02	TV	109
RC-BAR01	AUX, CD, DVD	323
RC-BAS03	AUX, CD, DVD	301,302
RC-BAS11	AUX, CD, DVD	301,302
RC-BVR08	VCR	205
RC-C202	AUX, CD, DVD	313
RC-C950	AUX, CD, DVD	316
RC-CAS02	AUX, CD, DVD	301,302
RC-CAS03	AUX, CD, DVD	301,302
RC-CAS10	AUX, CD, DVD	301,302
RC-CD2	AUX, CD, DVD	303
RC-EX08	AUX, CD, DVD	307
RC-T1000	TV/VCR	107
RC-T1400E	TV/VCR	102
RC-T1400KE AE	TV/VCR	108
RC-T1410	TV/VCR	102

Модель	Устр-во	Код
RC-T145	AUX, CD, DVD	304
RC-T145 (AUDIO)	AUX, CD, DVD	305
RC-T148	AUX, CD, DVD	304
RC-T148 (AUDIO)	AUX, CD, DVD	305
RC-T2000	TV/VCR	107
RC-T2001	TV	104
RC-T501	AUX, CD, DVD	301,302
RC-T511 (CD)	AUX, CD, DVD	319
RC-T511 (DECK)	AUX, CD, DVD	320
RC-T514	AUX, CD, DVD	301,302
RC-T516	AUX, CD, DVD	301,302
RC-TC100	VCR	201
RC-TC141KE	TV	101
RC-TC400	VCR	201
RC-TE102S	VCR	204
RC-TE212	VCR	201
RC-TE212E	VCR	201
RC-TE313	VCR	201
RC-TE515	VCR	201
RC-TEP1	VCR	203
RC-TER1	VCR	203
RC-TF150	VCR	201
RC-TFK500	VCR	206
RC-TFX600	VCR	206
RC-TG07	VCR	201
RC-TG100	VCR	201
RC-TG50P	VCR	201
RC-TG75P	VCR	201
RC-TG97	VCR	201
RC-TM10	VCR	204
RC-TN320EX	AUX, CD, DVD	301,302
RC-TN520EX	AUX, CD, DVD	301,302
RC-TN55F (CD)	AUX, CD, DVD	319
RC-TN55F (DECK)	AUX, CD, DVD	320
RC-TN990	AUX, CD, DVD	301,302
RC-TN999	AUX, CD, DVD	301,302
RC-TT1420K	TV/VCR	105
RC-TT1420KER	TV/VCR	105
RC-TV2	TV	103
RC-TXE10	VCR	201
RC-TXG200	VCR	206
RC-TXG700	VCR	206
RC-TXG710	VCR	206
RC-TZ3000ML (CD)	AUX, CD, DVD	317
RC-TZ3000ML (DECK)	AUX, CD, DVD	318

Модель	Устр-во	Код
RC-TZ7000ML (CD)	AUX, CD, DVD	319
RC-TZ7000ML (DECK)	AUX, CD, DVD	320
RC-TZ720	AUX, CD, DVD	301,302
RC-TZ800	AUX, CD, DVD	301,302
RC-W101 (DECK 1)	AUX, CD, DVD	314
RC-W101 (DECK 2)	AUX, CD, DVD	315
RC-ZAS01	AUX, CD, DVD	301,302
RC-ZAS04	AUX, CD, DVD	306
RC-ZAS05	AUX, CD, DVD	306
RC-ZAS17	AUX, CD, DVD	301,302
RC-ZVT03	TV	101
RC-ZVT03C	TV	101
RC-ZVT09	TV	101
RC-ZVT10	TV	101
RC-ZVT16	TV	101
RM-Z1S002	AUX, CD, DVD	312
RM-Z1S010	AUX, CD, DVD	307
RM-Z20001	AUX, CD, DVD	301,302
RM-Z20002	AUX, CD, DVD	309
RM-Z20008	AUX, CD, DVD	311
RM-Z20010	AUX, CD, DVD	309
RM-Z20012	AUX, CD, DVD	309
RM-Z20013	AUX, CD, DVD	310
RM-Z20018	AUX, CD, DVD	301,302
RM-Z20019	AUX, CD, DVD	301,302
RM-Z20027	AUX, CD, DVD	301,302
RM-Z20051	AUX, CD, DVD	310
TV-01	TV	115
TV-VCR-01	TV/VCR	108
VCR-01	VCR	207
VCR-02	VCR	202
Y-72C	TV	116
YS52D-B	TV	113

* По каталогу «IRC»

Коды к TV устройствам различных марок

Марка	Код
AEG	544
AIWA	502, 503, 523, 528, 579, 634, 678, 710, 712, 716
AKAI	501, 503, 512, 516, 520, 522, 524, 525, 537, 538, 540, 545, 546, 547, 550, 571, 572, 582, 583, 584, 585, 598, 608, 613, 626, 652, 673, 691, 704, 722, 731, 769
AKIRA	511, 514, 516, 524, 525, 537, 538, 541, 545, 547, 556, 577, 586, 594, 597, 598, 601, 623, 626, 629, 631, 649, 666, 680, 689, 690, 693, 717, 739
AMCOL	501, 525, 545, 747
ANITECH	501, 525, 726
ATLANTA	501, 751
AVEST	537, 538, 539, 766
BANG & OLUFSEN	728, 737
BBK	522, 551, 594, 597, 684, 701
BEKO	525, 530, 535, 559, 723, 742
BIGSTON	501, 503
BLAUPUNKT	512
BORK	525, 547, 646, 766
BRAND	711
BROKSONIC	501
CAMERON	550, 567, 675, 697, 702
CASIO	529, 705, 706
CASKA	761
CHANGHONG	516, 642
CLATRONIC	501
CONTEC	501, 603, 604, 613
CORTLAND	644
CROWN	501, 503, 511, 524, 525, 530, 571
DAEWOO	501, 508, 518, 520, 525, 526, 536, 538, 539, 546, 565, 571, 576, 598, 613, 685, 687, 692
DARTLAND	501
DAYTRON	501
DIGITAL	547
DISTAR	562, 616
DNS	596, 702, 708
DUAL	746
ELEKTA	501, 503, 520, 525, 527, 615
ELEKTRONIKA	583
ELENBERG	538, 545, 550, 565, 567, 579, 581, 644, 655, 676, 683, 717, 785
EPLUTUS	537, 644, 677, 682, 697, 724
ERC	537, 631, 764
ERISSON	511, 514, 516, 525, 526, 537, 538, 541, 550, 556, 561, 568, 586, 596, 599, 623, 626, 629, 631, 711, 712, 714, 739, 747, 779, 786
EVGO	538, 540, 630
FINLUX	501, 511, 583, 589, 608, 732, 758, 774
FUJITSU	544, 573
FUNAI	501, 502, 503, 504, 505, 525, 537, 538, 581, 603, 764
FUSION	596, 642, 705, 706
GBS	501, 520, 525, 571, 583
GENERAL	537, 556
GOLD STAR - LG	501, 512, 518, 525, 527, 559, 570, 583, 584, 589, 609, 613, 642, 706, 742, 750, 765
GRUNDIG	501, 512, 525, 606, 662, 718, 719, 733
HAIER	518, 526, 561, 574, 657, 667, 669, 707, 778
HAPPY	501
HCM	501, 525
HELIX	701, 702
HIL	503
HITACHI	501, 515, 518, 522, 525, 537, 544, 548, 554, 578, 584, 587, 588, 604, 613, 640, 729, 749, 775, 783
HORIZONT	525, 540, 545, 550, 559, 583, 672, 771
HPC	546
HYUNDAI	516, 522, 525, 526, 537, 540, 541, 546, 547, 550, 556, 580, 596, 597, 599, 626, 642, 650, 655, 705, 711, 714, 717, 760
INNO-HIT	501, 525, 571
IRBIS	596, 714
IVA (ИВА)	537, 561, 637
IZUMI	516, 537, 596, 663, 691, 695, 705, 711
JINLIPI	537, 637, 766
JVC	513, 515, 593, 604, 727
KAMACROWN	571
KANSAI	501, 525
KENSTAR	516
KITT	613, 726
KNEISSEL	753
KONKA	560, 581, 616, 717
LOEWE	542, 709, 744
METZ	745
MITSUBISHI	501, 520, 522, 525, 604, 611, 722, 728, 744
MIYOTA	537, 644, 656
MTC	501, 583
MULTITECH	501
MYSTERY	516, 537, 597, 642, 650, 653, 701, 702, 773, 780
NASH	537
NEC	501, 517, 520, 526, 552, 604, 625, 722
NESCO	501, 525
NOKIA	519, 584, 610, 614, 616, 740, 746, 767
NOVA	501, 616, 638
NOVEX	516, 546, 599
NTT	759
OMEGA	501, 571
ONIDA	513
ONIKS	516, 525, 537, 545, 546, 547
ONWA	524, 525
ORBITA	635
ORION	501, 503, 506, 507, 509, 516, 525, 528, 537, 591, 603, 617, 619, 627, 641, 643, 664, 715, 720, 722, 729, 746
ORSON	526, 537
PANASONIC	512, 531, 532, 752
PHILIPS	501, 511, 524, 525, 540, 549, 628, 639, 707, 748
PHOENIX	613
PHOENIX GOLD	708
PIONEER	555, 566, 575, 647, 666
PIXELVIEW	525
PLANTRON	735
POLAR	525, 526, 537, 538, 540, 543, 547, 581, 596, 599, 663, 664, 683, 703, 711, 717
POLAROID	525
POWER VISION	501

Коды к TV устройствам различных марок

Марка	Код
PREMIERA	773
PRESTIGIO	564, 656
PRIMA	522, 547
PROLOGY	653, 655, 777, 784
RADUGA	525, 545, 569, 583, 743
RAINFORD	525, 537, 544, 545
RECOR	511, 525
REKORD	520, 525, 526, 537, 538, 539, 545, 547, 725, 736, 743, 747
RFT	535, 728
ROADSTAR	501, 508, 525, 571
ROLSEN	503, 516, 525, 537, 538, 540, 543, 546, 564, 576, 592, 594, 596, 649, 656, 669, 684, 714, 768, 770
ROVERSCAN	662, 770
RUBIN	504, 516, 525, 537, 546, 583, 619, 665, 714, 776
SABA	510, 521, 602, 756
SALORA	584
SAMSUNG	501, 525, 526, 529, 563, 580, 595, 608, 612, 613, 622, 641, 645, 688, 723, 741
SANSUI	524, 525, 538, 556, 695
SANYO	501, 519, 522, 525, 530, 540, 550, 558, 604, 608, 610, 618, 621, 696, 722, 730, 734, 738
SATELLITE	616
SCARLETT	541, 545
SCHNEIDER	525, 540, 571, 771
SELECO	736, 763
SETRO	520
SHARP	526, 544, 548, 604, 707, 721
SHERION	616
SHIVAKI	501, 503, 508, 516, 518, 520, 525, 526, 527, 536, 538, 539, 540, 545, 546, 547, 550, 556, 580, 583, 585, 596, 599, 609, 619, 630, 632, 635, 636, 643, 644, 664, 681, 694, 743
SIEMENS	512, 525, 660, 726, 734
SIESTA	501, 537, 637
SILELIS	613
SILVER	633
SITRONICS	503, 516, 525, 537, 538, 540, 543, 545, 594, 626, 629, 661, 671, 672, 674, 679, 680, 686, 766
SOKOL	516, 525, 547, 635
SONY	533, 604, 659, 722
SPEKTR	525, 538, 668
START	525, 537, 545, 546, 547
STASSFURT	535, 618
STINOL	525
SUPER	537, 561, 644, 653, 654, 655, 666, 677, 682, 724, 754, 772, 780
SUPRA	501, 508, 516, 518, 520, 525, 527, 529, 536, 537, 541, 563, 579, 580, 596, 597, 612, 643, 687, 690, 705, 706, 712, 713
SUZUKI	516, 556
SVEN	781
TCL	538, 540
TECHNO	501, 525, 538, 544, 546, 556, 568, 579, 596, 599, 644, 664, 703
TECKTON	522, 582, 601, 669, 670
TELEFUNKEN	510, 521, 590, 602, 605, 708, 756, 757
TELEVISION	501, 525, 616
THOMSON	509, 510, 521, 550, 579, 602, 624, 642, 702, 756
TOSHIBA	516, 553, 604, 651, 699, 744
TRONY	516, 525, 537, 538, 550
TVT	511, 525, 530, 535, 538, 583, 586, 620, 723, 742
UNITED	525
VARTA	642
VESTEL	525, 544, 556, 583, 619
VIEWSONIC	557, 698
VITA	547
VITEK	537, 650
VITYAS	525
VOLNA (ВОЛНА)	635
VR	516, 537, 702, 714, 786
WALTHAM	503, 509, 511, 583, 584, 607, 613, 729, 762
XORO	522, 526, 545, 782, 787
НЕИЗВЕСТНАЯ МАРКА	546, 574, 596, 648, 656, 666, 711, 755

Коды к SAT устройствам различных марок

Марка	Код
AIR TONE	968
ALFA GOLD	828
AMINO (СТРИМ)	829, 902
ARION	835
ASTON	811
BBK	931
BIG SAT	839, 840, 903, 936
BIG STAR	965
CADENA	958, 962
CONTINENT	886, 975
COSHIP	855
DAEWOO	872
D-COLOR	946
DELTA SYSTEMS	985
DIVISAT	957, 958
D-LINK	923
DNS	968
DR.HD	983
DRE (GENERAL SATELLITE)	804, 868, 888, 907, 933, 954
DREAM	819
DUNE	927, 934
ECHOSPACE	862
ECHOSTAR	808, 809, 822
ELTEX	987
EUROSKY	840, 880
EUROSTAR	863
EUSTON	825
EVO	965
GALAXY INNOVATIONS	878, 881, 908, 911, 912, 917, 924
GLOBALTEQ	833
GLOBO	909, 915, 925, 935, 945, 956, 973, 999
GOLD STAR - LG	871
GOLDEN INTERSTAR	821, 841, 879, 918
GOLDEN MEDIA	847, 912
GOLDMASTER	911
HITACHI	824, 832
HIVION	929
HOME	968
HOMECAST (ВОЛЯ)	820, 831, 836
HUMAX	803, 804, 823, 848, 860, 861, 905, 949
HYUNDAI	968
ID DIGITAL	804
INTEK	984
KAON	820
KOSMOS	855, 856
LANS	970
LOCUS	946
LUMAX	852, 873, 907, 913, 965, 994
MAG	988
MEDIA COM	825
MOTOROLA	883, 884, 901
MYSTERY	910, 997
NDS	814
NEXT	864
NOKIA	813
NOT	941
ONLIME	905
OPENBOX	827, 835, 869, 870, 911, 990, 991
OPENTECH	972
OPENTEL	865
ORBITA	946, 995
ORIEL	887, 926, 941, 948, 955, 986
PACE	801, 932, 953
PATIX DIGITAL	992
PAUXIS	842, 859
PHILIPS	857, 899
PIONEER	851
POLAR	858
REFLECT	959
RIKOR	916, 947
ROLSEN	930, 941, 942, 961
SAGEMCOM	906
SAMSUNG	803, 810, 812, 854
SEG	818
SEZAM	882
SKY VISION	952, 966, 977, 982
SKYMASTER	830
SKYWAY	911
SKYWORTH	989
STAR	833
STAR TRACK	826, 835, 943
STARNET	885
STRONG	805, 806, 815, 816, 817, 828, 830, 914
SUNNIWELL	875
SUPERBOX	903
SUPERMAX	821, 866, 880, 924
SUPRA	950, 960, 962
TECHNOSAT	852, 853
TEL-ANT	960
TELEFUNKEN	961, 968
TESLER	926
TOP BOX	965
TOPFIELD	837, 838, 877, 891
TOSHIBA	876
TV STAR	967
TVJET	946, 976
VESTEL	820, 824
VU+	919, 920, 921, 922

Коды к SAT устройствам различных марок

Марка	Код
WORLD VISION	821, 928, 951, 952
XSAT (НТВ+)	801, 802, 807, 906, 972, 984, 998
YUXING	904
ZYXEL	874
БИЛАЙН	883, 884, 901, 923
ВОЛГАТЕЛЕКОМ	842, 843, 844, 845, 846, 847, 849, 850, 858, 867
ДОМ.RU	820, 905
ДОМОЛИНК	874, 904
МТС	855, 964, 974, 979, 980, 989, 993
НЕИЗВЕСТНАЯ МАРКА	834, 835, 842, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 903, 904, 937, 938, 939, 940, 944, 945, 969, 971, 978, 996
РОСТЕЛЕКОМ	874, 904, 923, 963
СИГНАЛ	968
ТЕЛЕКАРТА	867, 909, 973
ТЕЛЕЦИФРА	968

Функции кнопок пульта IRC 01 F к TV устройствам

Кнопки пульта IRC 01 F	Код 101		Код 102		Код 103		Код 104		Код 105	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	CAPTION						AUX/INPUT		PROG CFM	
AUDIO; NICAM	SURROUND								F/T/B	
VIDEO; SYS	COLOR SYSTEM		PAL/SECAM		SYSTEM		TV SYSTEM		V.PLUS+; PROGR.	
☐; ZOOM	100+		AUTO TRACKING						AUTO TRACKING	
▼; TV	TV/VIDEO						TV/SAT		TV MONITOR	
☐; ↻	PRESET		PRESET						COUN. MEM.; ZERO	
☐; LOCK	RESET	CHILD LOCK	COUNTER RESET				TIME SEL.; ⏮		COUNTER RESET	
▲; FAV			COUNTER MEMOR.						EJECT	
○	POWER		ON/STANDBY		STANDBY		STANDBY; ⏻		POWER	
AV	AV MODE		TV MONITOR		AV/TV		TV/VCR; ⏻; AUDIO B		INPUT SELECT	
⏸	MUTE; ⏸		MUTE/NORMAL		MUTE		MUTE; ⏸		MUTE/NORMAL	
MENU	MENU		BAR SELECT		FUNCTION		PICTURE SELECT		MENU	
EXIT										
▲	CHANNEL +; ▲; P▲		FINE TUN. (TRK.)▲						↑	
◀	VOLUME -; ◀		SET -				CONTR.; PIC.; MIN		←	
OK	ENTER; ENTER/STR		ENTER				PICTURE SELECT		ENTER; HOLD	
▶	VOLUME +; ▶		SET +				CONT.; PIC.; HOUR		→	
▼	CHANNEL -; ▼; P▼		FINE TUN. (TRK.)▼						↓	
*; SETUP	SELECT		AFT						STATUS	
♪; TITLE	⏮/⏭; MTS				BAND				ONE TOUCH.; OTPB	
☐			PROG. CFM						TEXT/MIX/TV	ONCE
GUIDE	GAME		CLOCK PROGRAM				TIME SET		AFT	DAILY
⏻	SLEEP	ON TIMER	SLEEP	TIMER REC	SLEEP		SLEEP; ⏻		SLEEP	TIMER REC
☐	LIST/FLOW		INDEX				TIMER SELECT		INDEX	WEEKLY
RED; ●	RED; COLOR SYS.		REPEAT	REC/OTR					RED	REC/OTR
GREEN; ⏮	GREEN; CHILD LOC.								GREEN	
YELLOW; ⏭	YELLOW; ⏮/⏭; MTS								YELLOW	
BLUE; ⏮	BLUE; SURROUND		▶; SLOW						BLUE	▶; SLOW
☐	☐; DISPLAY		CALL		DISPLAY		DISPLAY; ☐		CALL	
☐	Q-VIEW; PREV.CH		QUICK VIEW		P/C		CH. REC.; SYS.; PRE.		QUICK VIEW	
VOL -	VOLUME -; ◀		VOLUME/CONT. ▼		VOLUME ▼		VOL -; ◀		VOLUME ▼	FINE TUN. (TRK.) ▼
VOL +	VOLUME +; ▶		VOLUME/CONT. ▲		VOLUME ▲		VOL +; ▶		VOLUME ▲	FINE TUN. (TRK.) ▲
CH V; ⏮	CHANNEL -; ▼; P▼		CHANNEL ▼		CHANNEL ▼		CH -; PROG. -		CHANNEL ▼	SET -; REVEAL
CH A; ⏭	CHANNEL +; ▲; P▲		CHANNEL ▲		CHANNEL ▲		CH +; PROG. +		CHANNEL ▲	SET +; BROWSE
⏮; SAT	P-; /-;		SP/LP		P - -				1- SPEED; SP/LP	
CLEAR; X			CANCEL						2- CANCEL; DISP CAN.	
⏮; ●	☐		◀; REW						3- ◀; (REW)	SUB PAGE
▶; i	☐		▶; PLAY						4- ▶ (PLAY)	PAGE INDEX
▶; ?	☐		▶; F.FWD						5- ▶; (F.FWD)	REVEAL
■; X	☐		■; STOP						■ (STOP)	ENTER; HOLD
; ⏻	☐; 16:9; ASPECT		; PAUSE/STILL						(PAUSE/STILL)	BROWSE
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0/VCR		1, 2, ... 9, 0/AV		1, 2, ... 9, 0	

Функции кнопок пульта IRC 01 F к TV устройствам

Кнопки пульта IRC 01 F	Код 106		Код 107		Код 108		Код 109		Код 110	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			⊕ +						▶; SUBTITLE	
AUDIO; NICAM	SURROUND								; NICAM	
VIDEO; SYS	SYSTEM				PAL/SECAM					
☐; ZOOM			REPEAT		AUTO TRACKING				ZOOM	
▼; TV	TV/VIDEO		⊖ -		TV MONITOR				⏮; SIZE	
☐; ↻			PRESET	MEMORY	PRESET					
☐; LOCK			ADD/DEL.; RESET		COUNTER RESET					
▲; FAV			▲; EJECT		COUNTER MEMOR.					
○	STANDBY		FUNCTION		ON/STANDBY		○		○; POWER	
AV	AV MODE/BAND		TV/VCR				☐; ☐		SOURCE	
⏸	MUTE/SKIP		MUTE		MUTE/NORMAL		⏸		⏸	
MENU			MENU; PROG.CH.		BAR SELECT		MENU		MENU	
EXIT			ERASE							
▲			⊕ +		FINE TUN. (TRK.)▲				▲	
◀			⊖ -		SET -				◀	
OK			SELECT; CALL		ENTER		NORMAL; OK; ☐		OK	
▶			⊕ +		SET +				▶	
▼			⊖ -		FINE TUN. (TRK.)▼				▼	
*; SETUP	FUNCTION		INDEX		AFT				P.M.	
♪; TITLE			TAPE SPEED						S.M.	
☐			TIME SEARCH		INDEX		☐		TEXT	
GUIDE			CLOCK SET; SEL.		PROG. CFM				MIX	
⏻	SLEEP		SLEEP	TIMER SET	SLEEP	TIMER REC	SLEEP; ☐			
☐			ON SCREEN		CLOCK PROGRAM		☐		SUBTITLE	
RED; ●			RED	●; RECORD	REPEAT	REC/OTR	RED; SKIP		RED; 3D	
GREEN; ⏮			GREEN	▶			GREEN; MOVE		GREEN; P.M.	
YELLOW; ⏭			YELLOW				YELLOW; DELETE		YELLOW; S.M.	
BLUE; ⏮			BLUE	SLOW	▶; SLOW		BLUE; MODE		BLUE; ZOOM	
☐	DISPLAY		CLOCK/COUNTER		QUICK VIEW		RECALL; ☐		INFO.	
☐			PREVIOUS	P/C	CALL				RETURN	
VOL -	VOLUME ▼		VOL -		VOLUME/CONT. ▼		◀; ◀; ☐		VOL -	
VOL +	VOLUME ▲		VOL +		VOLUME/CONT. ▲		▶; ▶; ☐		VOL +	
CH V; ⏮	CHANNEL ▼		CH/SET -		CHANNEL ▼		▼; P		PR ▼	⏮; SIZE
CH A; ⏭	CHANNEL ▲		CH/SET +		CHANNEL ▲		▲; P		PR ▲	▶; SUBTITLE
⏮; SAT	1-5-		-/-		SP/LP					
CLEAR; X			CLEAR/RESET		CANCEL		☐			
⏮; ●			◀; REW		◀; REW		☐		◀; REVEAL	
▶; i			▶; PLAY		▶; PLAY		☐		▶; INDEX	INDEX
▶; ?			▶; F.FWD		▶; F.FWD		☐		▶; MIX	REVEAL
■; X			■; STOP		■; STOP		☐		■; HOLD	HOLD
; ⏻			; PAUSE/STILL		; PAUSE/STILL		☐		; INDEX	SIZE
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0/AV		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 01 F к TV устройствам

Кнопки пульта IRC 01 F	Код 111		Код 112		Код 113		Код 114		Код 115	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	DTV/PVR		HDMI		DTV				You Tube	
AUDIO ; NICAM	NICAM		I/II ; AUDIO LANG		AUDIO		AUDIO	NICAM	NICAM ; I/II	
VIDEO ; SYS			YpBPr						3D	
☐ ; ZOOM	ZOOM		ASPECT		ASPECT		ZOOM		ZOOM	
▼ ; TV	TV/RADIO		TV		TV/RADIO				TV/RADIO	
☐ ; ↗	USB	AUTO	USB		NICAM/A2 ; MEDIA		MIX		CHN LIST	
☐ ; LOCK	☐ ; FREEZE	FREEZE ; HOLD	FREEZE		FREEZE				FREEZE ; HOLD	
▲ ; FAV	FAV		FAV		FAV		FAV		FAV ; SIZE	
○	○		○ ; POWER		○		○		○ ; POWER	
AV	SOURCE		INPUT		SOURCE		SOURCE		SOURCE	
⌘	⌘		⌘ ; MUTE		⌘		⌘		⌘	
MENU	MENU		MENU		MENU		MENU		MENU	HOME ; ☘
EXIT	EXIT ; CANCEL		EXIT		EXIT				EXIT	
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀		◀		◀	
OK	OK		OK		ENTER		OK		OK ; ENTER	
▶	▶		▶		▶		▶		▶	
▼	▼		▼		▼		▼		▼	
⌘ ; SETUP	P.P		PICTURE		P.MODE		HOME		P.M. ; PICTURE	
♪ ; TITLE	S.M		SOUND		S.MODE		RADIO		S.M. ; SOUND	
☐	☐ ; TEXT	☐ ; MIX	TEXT	MIX	TEXT		TEXT		TEXT	PVR LIST
GUIDE	EPG		TIME		EPG		EPG		EPG	
⏸	SLEEP		SLEEP		SLEEP		T.SHIFT		SLEEP	AD ; SUB-PAGE
☐	☐ ; SUBTITLE		SUBTITLE		SUBTITLE		SUBTITLE		SUBTITLE	
RED ; ●	RED		RED		RED	● ; AUTO	RED ; RADIO	REC	RED	● ; REC
GREEN ; ▯	GREEN		GREEN		GREEN		GREEN ; AUDIO		GREEN	
YELLOW ; ◀	YELLOW		YELLOW		YELLOW		YELLOW ; INFO		YELLOW	
BLUE ; ▶	BLUE		BLUE		BLUE		BLUE ; ZOOM		BLUE	
☐	INFO		INFO		DISPLAY		INFO		INFO.	
☐	RETURN		RECALL		☐		BACK		RETURN	RETURN ; BACK
VOL -	V -		VOL ▼		VOL ▼		VOL -		VOL -	
VOL +	V +		VOL ▲		VOL ▲		VOL +		VOL +	
CH V ; ◀	P v	◀	PROG ▼		CH ▼	◀	PR -	◀ ; REC	PR - ; PR V	◀ ; SIZE
CH A ; ▶	P ▲	▶	PROG ▲		CH ▲	S.PAGE ; ▶	PR +	▶ ; NICAM	PR + ; PR A	▶ ; SUB-PAGE
± ; SAT	CH.LIST		CH.LIST		-/- ; LIST				QUICK ; HOLD	
CLEAR ; X	EXIT ; ☐ ; CANCEL		CANCEL		T.SHIFT		CANCEL		RETURN ; BACK	CANCEL
◀ ; ○	◀	☐ ; SUB-PAGE	SUBCODE		REVEAL ; ◀	S.PAGE	◀ ; EPG	SUB-PAGE	◀ ; REVEAL	SUB-PAGE
▶ ; i	▶ ; II	☐ ; INDEX	INDEX		HOLD ; II	INDEX	II ; T.SHIFT	INDEX	▶ ; II ; INDEX	INDEX
▶ ; ?	▶	☐ ; REVEAL	REVEAL		SIZE ; ▶	REVEAL	▶ ; FAV	REVEAL	▶ ; MIX	REVEAL
■ ; X	■	FREEZE ; HOLD	HOLD		INDEX ; ■	HOLD	■	HOLD	■ ; CANCEL	HOLD
II ; ⏸	▶ / II	☐ ; SIZE	SIZE		HOLD ; II	SIZE	II ; T.SHIFT	SIZE	▶ / II ; INDEX	SIZE
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 01 F к TV устройствам

Кнопки пульта IRC 01 F	Код 116	
	Функция	Доп. функция
▲ ; DVD	PVR LIST	
AUDIO ; NICAM	NICAM/A2	
VIDEO ; SYS	MEDIA	
☐ ; ZOOM	ASPECT	
▼ ; TV	DTV/RADIO	
☐ ; ↗	AUTO ; GOTO	
☐ ; LOCK	FREEZE	
▲ ; FAV	FAV	
○	○	
AV	SOURCE	
⌘	⌘	
MENU	MENU	
EXIT	EXIT	
▲	▲	
◀	◀	
OK	ENTER ; OK	
▶	▶	
▼	▼	
⌘ ; SETUP	P.MODE	
♪ ; TITLE	S.MODE	
☐	TEXT	
GUIDE	EPG	
⏸	SLEEP	TIME SHIFT
☐	S.TITLE ; SUBTITLE	
RED ; ●	RED	REC
GREEN ; ▯	GREEN	
YELLOW ; ◀	YELLOW	
BLUE ; ▶	BLUE	
☐	DISPLAY	
☐	☐	
VOL -	VOL ▼ ; VOL -	
VOL +	VOL ▲ ; VOL +	
CH V ; ◀	CH ▼ ; CH -	◀ ; TIME SHIFT
CH A ; ▶	CH ▲ ; CH +	▶
± ; SAT	-/- ; --	
CLEAR ; X	CH.LIST	
◀ ; ○	◀ ; FAV	S.PAGE ; CH.LIST
▶ ; i	II	INDEX ; EPG
▶ ; ?	▶	REVEAL ; PVR LIST
■ ; X	■	HOLD ; DTV/RADIO
II ; ⏸	II	SIZE ; REC
1, 2, ... 9, 0	1, 2, ... 9, 0	

Функции кнопок пульта IRC 01 F к VCR устройствам

Кнопки пульта IRC 01 F	Код 201		Код 202		Код 203		Код 204		Код 205	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			DVD		CENTER TRACKING				OUTPUT SELECT	
AUDIO; NICAM	NTSC PB		AUDIO						AUDIO	
VIDEO; SYS	SYSTEM		VCR	PRESET; SYSTEM	INPUT SELECT				VHS; VCR	
☐; ZOOM	SUPER CLEAR		INDEX SEARCH		AUTO TRACKING				JOG	
▼; TV	CH		ERASE		MEMORY				TV/VCR	
☐; ↗	COUNTER MEMORY		QUICK-FIND		PRESET				AUTO	PRESET
☐; LOCK	COUNTER RESET		AUTO REPEAT		COUNTER RESET				RESET	CHILD LOCK
▲; FAV	EJECT; ▲		▲; EJECT		EJECT				▲; EJECT	
⊖	POWER		FUNCTION		POWER/TIMER REC		POWER		⊖; POWER	
AV	INPUT		TV/VCR		TV/VCR				TV/AV; AV	
⌘			MUTE	MUTE VPT					ez POWER OFF	
MENU	MENU		PR.CHECK; MENU		MENU		MENU		MENU; i; SETUP	AUTO TRK
EXIT			JOG/SHUTTLE						ERASE	
▲	INDEX SEARCH +		▲		SET +; SET ▲				▲; +	
◀			◀		SLOW -; SLOW ▼				◀	
OK	AUTO TRACKING		B. SELECT; C.SET		ENTER				OK; CLK/CNT	
▶			▶		SLOW +; SLOW ▲				▶	
▼	INDEX SEARCH -		▼		SET -; SET ▼				▼; -	
*; SETUP			INFO		TV MONITOR				SHOW VIEW; *	ez REPEAT
♪; TITLE			TOP MENU						KARAOKE	REPEAT AUTO
☐			MONITOR	TIMER REC; T. SET	AFT				VISS;INDEX;SEAR.	START; Q. DEBUT
GUIDE	PROG; SP/LP		TAPE SPEED	TIMER; T-SET	PROGRAM				SKIP/MEMO	LENGTH; Q.DUREE
⊖	TIMER PRGM	TIMER REC	SLEEP	ALARM	CLOCK SET	TIMER REC			TIMER	TIMER
☐			CLOCK/COUNTER	TIME SEARCH	CLOCK/COUNTER				CLOCK/COUNTER	CLOCK
RED; ●	REPEAT	● REC	MEMORY COUNTER	● REC; RECORD	REPEAT	REC/OTR		● REC	MARK	●; REC/OTR
GREEN; ►			F ADV		SKIP SEARCH				►; F/ADV	S. REC
YELLOW; ◀			►		CH SKIP				TRK ▼; SELECT ▼	REC END SEARCH
BLUE; ►	SLOW; ►		►; SLOW		SLOW				TRK ▲; SELECT ▲	OTPB
☐	CLOCK/COUNTER		RECAL.;DISPL.;SEL.	CORRECT;ON SCR.	INDEX				ENTER; DISPLAY	
☐	NEXT; >		P/C	REPEAT	CALL				ZERO ◻	
VOL -	TRACKING -		VOL -		TRACKING -;F.T.▼				SLOW -	TRACKING ▼
VOL +	TRACKING +		VOL +		TRACKING +;F.T.▲				SLOW +	TRACKING ▲
CH V; ◀	CHANNEL ▼		CH./SET (TRAC.) -		CHANNEL ▼		P -		PR ▼	◀
CH A; ►	CHANNEL ▲		CH./SET (TRAC.) +		CHANNEL ▲		P +		PR ▲	►
+-; SAT	-/-		-/-	+100; +10	SPEED; SP/LP				SP/LP; LP; SPEED	RALENTI
CLEAR; X	CANCEL; CLEAR		CLEAR RESET	RESET ADD/CLEAR	CANCEL				CLEAR	CM SKIP; AD-SKIP
◀; ●	◀; REW		◀; REW		◀; REW			◀; (REW)	◀; REW	◀
▶; i	▶; PLAY		▶; PLAY		▶; PLAY			▶; (PLAY)	▶; PLAY	
▶; ?	▶; F.FWD		▶; F.FWD	ALT ?	▶; F.FWD			▶; (F.FWD)	▶; F.FWD	▶
■; X	■; STOP		■; STOP		■; STOP			■; (STOP)	■; STOP	
; ⏸	; PAUSE/STILL		; PAUSE/STILL	⏸	; PAUSE/STILL			; (PAUSE)	; PAUSE/STILL	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0				1, 2, ... 9, 0	

Функции кнопок пульта IRC 01 F к VCR устройствам

Кнопки пульта IRC 01 F	Код 206		Код 207	
	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	INDEX SEARCH			
AUDIO; NICAM	A. MONITOR			
VIDEO; SYS	INDEX MARK			
☐; ZOOM	INDEX ERASE		SPEED SP/EP	
▼; TV	CH			
☐; ↗	COUNTER MEMORY			
☐; LOCK	COUNTER RESET		RESET	
▲; FAV	▲; EJECT			
⊖	POWER		POWER	
AV	INPUT		TV/VCR	
⌘				
MENU	MENU; OSD MENU			
EXIT				
▲	▲	⊖	TRACKING ▲	
◀	◀	⊖		
OK	OK		ENTER	
▶	▶	⊖		
▼	▼	⊖	TRACKING ▼	
*; SETUP	KARAOKE		PROG.CFM	
♪; TITLE	ONE TOUCH PLAYB			
☐	AUTO TUN PRESET		AUTO TRACKING	
GUIDE	CLOCK PRESET		PROGRAM	
⊖	COUNTER/CLOCK	T-REC	CLOCK/SET	TIMER REC
☐	SUPER CLEAR			
RED; ●	KAR. SEARCH ◀	●; REC/OTR		REC/OTR
GREEN; ►	KAR. SEARCH ►	OTR		
YELLOW; ◀	◀ SEARCH/IND.			
BLUE; ►	► SEARCH/IND.			
☐	COUNTER DISPLAY		COUNTER/CLOCK	
☐	A-TR			
VOL -	TRACKING -		SET ▼	
VOL +	TRACKING +		SET ▲	
CH V; ◀	CHANNEL ▼		CHANNEL ▼	
CH A; ►	CHANNEL ▲		CHANNEL ▲	
+-; SAT	TAPE SPEED			
CLEAR; X	CANCEL; CLEAR		CANCEL	
◀; ●	◀; REW		◀; REW	
▶; i	▶; PLAY		▶; PLAY	
▶; ?	▶; FF		▶; F.FWD	
■; X	■; STOP		■; STOP	
; ⏸	; PAUSE/STILL		PAUSE/STILL	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 01 F к AUX устройствам

Кнопки пульта IRC 01 F	Код 301		Код 302		Код 303		Код 304		Код 305	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	DSP PRGM ; SURR.		DSP PRGM ; SURR.		MARK		SP/EP (NTSC)			
AUDIO ; NICAM	T-BASS ; SOUND		SOUND ; TONE				AUDIO MONITOR			
VIDEO ; SYS	VIDEO/AUX ; PHON.		VIDEO/AUX ; PHON.				SYSTEM			
☐ ; ZOOM	ZOOM		SPECTRUM							
▼ ; TV	DOLBY ; DSP MAN.		KARAOKE		GEQ					
☐ ; ↗	MPX	TUNER MEMORY	TREBLE		MEMORY		COUNTER MEMORY			
☐ ; LOCK	KARAOKE		BASS				COUNTER RESET			
▲ ; FAV	▲ ; OPEN/CLOSE		▲ ; OPEN/CLOSE				COUNTER CALL			
⊖	POWER		POWER		POWER		POWER		POWER AUDIO C.	
AV	TUNER BAND; BAND		TUNER BAND							
✳	MUTE ; MUTING						MUTE			
MENU	PRGM ; PROGRAM	DIGEST	PRGM ; PROGRAM				SET		FUNCTION AUDIO	
EXIT	DISC SKIP	DISC 5	DISC SKIP				ERASE			
▲	▲ PRESET ; ALBUM	DISC 1	▶▶ PRESET							
◀	▼ ; WINDOW DOWN	DISC 2	VOLUME ▼ ; -				< SELECT			
OK	ENTER	DISPLAY ; K.ENTER	ENTER							
▶	▲ ; WINDOW UP	DISC 3	VOLUME ▲ ; +				> SELECT			
▼	▼ PRESET ; ALBUM	DISC 4	◀◀ PRESET							
✳ ; SETUP	PBC	MARK	FUNCTION ; PHONO		TUNER BAND		CLOCK CALL		OPTION AUDIO C.	
♪ ; TITLE	FM MODE ; T.MODE	GEQ ; TREBLE	FM MODE ; T.MODE		TUNER MODE/OSC		TUNER LINE			
☐	FUNCTION ; PHONO	GEQ ; GEQ PRGM	DISC SELECT		PBC		TIMER			
GUIDE	REC MODE	GEQ MANUAL	SEL. CLOCK/TIMER		DIGEST		CLOCK			
⊖	SLEEP	TIMER	SLEEP	SET CLOCK/TIMER	SLEEP		OFF TIMER	TIMER REC ●		
☐ ; ●	EDIT/REMAIN; CHEK		EDIT/REMAIN; CHEK		TIMER		ON TIMER			
RED ; ●	REC/REC MUTE	● ; REC/REC MUTE	DIMMER	DISC 1	REPEAT			● RECORD		
GREEN ; ▶	DISC DIRECT PLAY	TAPE ◀ ▶ ; DECK1/2	TAPE ◀ ▶ ; DECK1/2	DISC 2						
YELLOW ; ◀	GEQ 2 ; REV MODE	PRGM GEQ	DISC/ALBUM	DISC 3	CLOCK					
BLUE ; ▶	SLOW	MANUAL GEQ	SLOW	DISC 4	SLOW					
☐	DISPLAY	ON SCREEN	DISPLAY ; K.ENTER		OSD		CH CALL			
☐	REPEAT	RANDOM/REPEAT	RANDOM/REPEAT		RANDOM					
VOL -	VOLUME ▼ ; -		VOLUME ▼ ; -		VOLUME ▼ ; DOWN		VOLUME V		VOLUME V AUDIO	
VOL +	VOLUME ▲ ; +		VOLUME ▲ ; +		VOLUME ▲ ; UP		VOLUME ▲		VOLUME ▲ AUDIO	
CH V ; ◀◀	◀◀ PRESET		◀◀ PRESET		◀◀ TUN. - ; ◀◀ SKIP		CHANNEL V			
CH ▲ ; ▶▶	▶▶ PRESET		▶▶ PRESET		▶▶ TUN. + ; ▶▶ SKIP		CHANNEL ▲			
± ; SAT	+10	10	+10		10+		11			
CLEAR ; X	BBE		CLEAR		CANCEL		12			
◀◀ ; ●	◀◀ ; TUN.DOWN	CLOCK	◀◀ ; TUN.DOWN	CLOCK	◀◀ TUN. - ; ◀◀ SKIP		◀◀ REW			
▶▶ ; i	▶▶ ; DIR. ; PRES.	CD ▶▶ II	▶▶ ; DIR. ; PRES.	CD ▶▶ II	▶▶ II ; PLAY/PAUSE		▶▶ PLAY			
▶▶ ; ?	▶▶ ; TUN. UP		▶▶ ; TUN. UP		▶▶ TUN. + ; ▶▶ SKIP		▶▶ FWD			
■ ; ✕	■ ; CLEAR		■ ; CLEAR		■ ; STOP/◁ RET.		■ STOP			
■ ; ⬇	■ ; SET		■ ; SET		■ ; PLAY/PAUSE		■ PAUSE			
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 10			

Функции кнопок пульта IRC 01 F к AUX устройствам

Кнопки пульта IRC 01 F	Код 306		Код 307		Код 308		Код 309		Код 310	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	CD				CD/CD BLANK SKIP		DVD		CD	
AUDIO ; NICAM	MONO TUNER		EQ		DSURROUND		AUDIO	DOSG ; BASS	AUDIO	
VIDEO ; SYS	VIDEO/AUX				AUX/MD		NIGHT MODE		PLAY MODE	MD (VIDEO)
☐ ; ZOOM	TAPE ; DECK 1/2				RANDOM		DIMMER		A/B ; TAPE	
▼ ; TV	CD EDIT/CHECK				TAPE		TUNER/BAND; BAND	SONY TV DIRECT	TUNER/BAND	
☐ ; ↗	KARAOKE		MEMORY		EQ		MEMORY	KARAOKE	TUNER MEMORY	PLAY MODE/TUN.
☐ ; LOCK							ANGLE	A. FORMAT MODE	ANGLE	
▲ ; FAV	▲ ; OPEN/CLOSE						▲ ; OPEN/CLOSE		SOUND FIELD	
⊖	POWER		POWER ; OPERATE		POWER		⊖	TV ⊖	⊖	
AV							AUTO FORMAT DIR.	TV/VIDEO	USB	
✳							MUTING		ECHO	
MENU	DISC DIR. PLAY 01		MODE		MODE		MENU	A. MENU ; KARAOKE	DVD MENU	AMP MENU
EXIT	DISC DIR. PLAY 02						↻ ; RETURN		↻ ; RETURN	
▲	DISC DIR. PLAY 03						↑ ; ▲	MIC VOL +	↑	
◀	DISC DIR. PLAY 04						⬅ ; ◀	MIC ECHO -	⬅	
OK	DISC DIR. PLAY 05				EDIT		ENTER	ENTER	ENTER	
▶	DISC DIR. PLAY 06						➡ ; ▶	MIC ECHO +	➡	
▼	DISC DIR. PLAY 07						⬇ ; ▼	MIC VOL -	⬇	
✳ ; SETUP			FUNCTION				DVD SETUP		DVD SETUP	GAME
♪ ; TITLE	TUNER ; BAND		BAND		TUNER/BAND		TUNER MENU	FM MODE; ST./MON.	DVD TOP MENU	FM MODE
☐	MANUAL SELECT				BBE		FUNCTION		FUNCTION	EFFECT ON/OFF
GUIDE	PRGM				PROGRAM		PLAY MODE; PROG.		SET CLOCK/TIMER	P FILE
⊖	SLEEP				SLEEP		SLEEP	NAME	SLEEP	PRESET EQ
☐	CLOCK				TIMER		SUBTITLE		SUBTITLE	SURROUND
RED ; ●	RANDOM/REPEAT	● / REC ✳	REPEAT		REPEAT	● ; REC/REC MUTE	REPEAT	SOUND FIELD -	REPEAT	REPEAT/FM MODE
GREEN ; ▶	SURROUND				MONO		DSGX; BASS LEVEL	SOUND FIELD +	SEL. CLOCK/TIMER	EQ
YELLOW ; ◀	DOLBY PRO LOGIC				T-BASS		DVD TOP MENU	KEYCON b	◀ ; SLOW -	KARAOKE
BLUE ; ▶	T-BASS				CLOCK		DVD MENU	KEYCON #	▶ ; SLOW +	i-BASS
☐	TIMER		DISPLAY		DISPLAY		DISPLAY		DISPLAY	
☐	MD ; DISC DIR. PLAY				DISPLAY COLOR		DVD DISPLAY	REPEAT/FM MODE	DVD DISPLAY	
VOL -	VOL ▼		VOL ▼		VOLUME -		VOLUME -	TV VOL -	VOL - ; VOLUME -	b
VOL +	VOL ▲		VOL ▲		VOLUME +		VOLUME +	TV VOL +	VOL + ; VOLUME +	#
CH V ; ◀◀	◀◀ ; TUN.DOWN		◀◀ ; TUN.DOWN		◀◀ ; TUN.DOWN		◀◀ PRESET - ; PREV	TV CH -	◀◀ ; PRESET - / PREV	ALBUM - ; ◻ -
CH ▲ ; ▶▶	▶▶ ; TUN. UP		▶▶ ; TUN. UP		▶▶ ; TUNING UP		▶▶ PRESET + ; NEXT	TV CH +	▶▶ ; PRESET + / NEXT	ALBUM + ; ◻ +
± ; SAT	+10		+10				± ; >10		D.SKIP ; DISC SKIP	D. SKIP
CLEAR ; X	GEQ		CLEAR		CLEAR		CLEAR		CLEAR	CLEAR
◀◀ ; ●	◀◀ ; TUN.DOWN		◀◀ ; TUN.DOWN		◀◀ ; TUN.DOWN		◀◀ ; SLOW ◀ ; TUN.-		◀◀ ; TUNING -	
▶▶ ; i	▶▶ ; PRESET		▶▶ ; PLAY		▶▶ ; PRESET		▶▶ ; PLAY/SELECT		▶▶ ; SELECT	
▶▶ ; ?	▶▶ ; TUN. UP		▶▶ ; TUNING UP		▶▶ ; TUNING UP		▶▶ ; SLOW ▶ ; TUN.+		▶▶ ; TUNING +	
■ ; ✕	■ ; CLEAR		■ ; STOP		■ ; CLEAR		■ ; STOP		■	
■ ; ⬇	■ ; SET		■ ; PAUSE		■ ; SET		■ ; PAUSE		■	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 10/0		1, 2, ... 9, 10/0	

Функции кнопок пульта IRC 01 F к AUX устройствам

Кнопки пульта IRC 01 F	Код 311		Код 312		Код 313		Код 314		Код 315	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	DVD									
AUDIO; NICAM	AUDIO		T-BASS							
VIDEO; SYS	VIDEO									
☐; ZOOM	AV3 (OPT)									
▼; TV	TV/VIDEO									
☐; ↻	MEMORY									
☐; LOCK	ANGLE							COUNT.RESET (D.1)	COUNT.RESET (D.2)	
▲; FAV					▲; OPEN/CLOSE					
○	I/O	TV I/O								
AV	INPUT SELECT	TV/VIDEO (TV)								
✳	MUTING							●; REC MUTE (D. 1)	●; REC MUTE (D. 2)	
MENU	i; SETUP/MENU		MODE		PRGM / CHECK					
EXIT	↵; RETURN		ALBUM +							
▲	▲									
◀	◀	TUNING -								
OK	ENTER; OK									
▶	▶	TUNING +								
▼	▼		ALBUM -							
✳; SETUP	DISC MENU							SYN. DUB. HIGH	SYN. DUB. HIGH	
♪; TITLE	TITLE		BAND				SYN. DUB. NORMAL	SYN. DUB. NORMAL	SYN. DUB. NORMAL	
☐	SOUND FIELD				EDIT PR.; A-B REP.					
GUIDE	PROGRAM		PROGRAM							
☐	SUBTITLE									
RED; ●	REPEAT	●; ITR			REPEAT/BLANK		DUAL REC 1+2	●; REC (DECK 1)	DUAL REC 1+2	●; REC (DECK 2)
GREEN; ►	A-B									
YELLOW; ◀							◀; PLAY (DECK 1)		◀; PLAY (DECK 2)	
BLUE; ►	TUNER FM/AM									
☐	DISPLAY CLK/CNT		DISPLAY		DISPLAY		DISPLAY		DISPLAY	
☐	SP/LP		REPEAT		RANDOM					
VOL -	VOLUME -	VOL - (TV)								
VOL +	VOLUME +	VOL + (TV)								
CH V; ◀	◀	CH - (TV)	◀; TUNE -		◀; ◀ SEARCH					
CH A; ▶	▶	CH + (TV)	▶; TUNE +		▶; ▶ SEARCH					
±; SAT	CM SKIP		>10		10+					
CLEAR; X	CLEAR									
◀; ●	◀; ◀ SCAN/SLOW		◀; TUNE -		◀; ◀ SEARCH		◀◀ (DECK 1)		◀◀ (DECK 2)	
▶; i	▶; PLAY		▶		▶; ▶ PLAY/PAUSE		▶; PLAY (DECK 1)		▶; PLAY (DECK 2)	
▶; ?	▶; ▶ SCAN/SLOW		▶; TUNE +		▶; ▶ SEARCH		▶▶ (DECK 1)		▶▶ (DECK 2)	
■; ✳	■; STOP		■		■; STOP/CLEAR		■; STOP (DECK 1)		■; STOP (DECK 2)	
■; ⏸	■; PAUSE/STEP		▶		▶/■; PLAY/PAUSE		■; PAUSE (DECK 1)		■; PAUSE (DECK 2)	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0/10		1, 2, ... 9, 0					

Функции кнопок пульта IRC 01 F к AUX устройствам

Кнопки пульта IRC 01 F	Код 316		Код 317		Код 318		Код 319		Код 320	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			CD				CD			
AUDIO; NICAM			PHONO	AI A/B			PHONO	KARAOKE VOCAL		
VIDEO; SYS			VIDEO1/DAT				VIDEO1/DAT			
☐; ZOOM			PRGM/CONT EDIT				TUNER			
▼; TV			TAPE				TAPE			
☐; ↻	CAL SYNC REC		LW				LW; TUNER			
☐; LOCK	CHECK		MW				MW; AM			
▲; FAV	▲		AUTO/AI EDIT				▲ (CD)	▲; OPEN/CLOSE		
○			POWER				POWER			
AV	AC		VIDEO2/AUX				VIDEO2/AUX			
✳			MUTE				MUTE			
MENU	FADE IN		PRGM/CHECK				PRGM/CHECK	RANDOM		
EXIT	FADE OUT		BBE				VOCAL FADER			
▲			▲				▲	TUNING ▲		
◀			◀				◀			
OK			MANUAL				DSP OFF/ON	SET		
▶			▶				▶			
▼			▼				▼	TUNING ▼		
✳; SETUP	PLAY SYNC REC		FM	KARAOKE VOC.			FM; BAND	DOLBY SURROUND		
♪; TITLE	STOP SYNC REC		FM MODE	T-BASS			FM MODE	VOLUME SELECT		
☐	EDIT		PRGM				PRGM	DSP		
GUIDE	PRGM		TIMER STANDBY				TIMER STANDBY	GEQ		
☐	TIME		SLEEP				SLEEP	AUTO/AI EDIT		
☐	BLANK		DISC 5				DISC 5	PRGM/CONT EDIT		
RED; ●	REPEAT 1/ALL		DISC 1				DISC 1	MANUAL		●/● (DECK2)
GREEN; ►	REPEAT A—B		DISC 2				DISC 2	AI A/B		
YELLOW; ◀	INDEX ←		DISC 3				DISC 3	T-BASS		
BLUE; ►	INDEX →		DISC 4				DISC 4	BBE		
☐			DISPLAY				DISPLAY	DISPLAY		
☐	RANDOM		GEQ OFF/ON				DISPLAY;	REPEAT		
VOL -	VOLUME ▽		VOLUME ▽; DOWN				VOLUME ▽; DOWN			
VOL +	VOLUME ▲		VOLUME ▲; UP				VOLUME ▲; UP			
CH V; ◀	◀		◀; ◀ SEARCH				◀; ◀ SEARCH			
CH A; ▶	▶		▶; ▶ SEARCH				▶; ▶ SEARCH			
±; SAT	10<		+10; MEMORY				+10; MEMORY			
CLEAR; X	DELETE		■; CLEAR				■; CLEAR			
◀; ●	◀		◀; ◀ SEARCH				◀; ◀ SEARCH			
▶; i	▶; PLAY		▶				▶			
▶; ?	▶		▶; ▶ SEARCH				▶; ▶ SEARCH			
■; ✳	■; STOP		■; CLEAR				■; CLEAR			
■; ⏸	■; PAUSE		▶				▶			
1, 2, ... 9, 0	1, 2, ... 9, 10		1, 2, ... 9, 10/0				1, 2, ... 9, 10/0			

Функции кнопок пульта IRC 01 F к AUX устройствам

Кнопки пульта IRC 01 F	Код 321		Код 322		Код 323	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	CD				DVD/CD	
AUDIO ; NICAM	PHONO				AUDIO	SURROUND
VIDEO ; SYS	VIDEO/AUX				VIDEO1	VIDEO2
☐ ; ZOOM					ZOOM	
▼ ; TV	TUNER				TV	
☐ ; ↻	MW				TUNER/BAND	
☐ ; LOCK	LW				☐ ; ANGLE	
▲ ; FAV					CABLE/SAT.	
⊖	POWER				POWER	
AV					TV/VIDEO	DIGITAL/ANALOG
✳			● (DECK 1)	● (DECK 2)	MUTE	
MENU	PRGM				MENU	PRGM
EXIT					↻ ; RETURN	
▲	▲				▲	CENTER +
◀	◀				◀	REAR -
OK	GEQ OFF/ON				ENTER	
▶	▶				▶	REAR +
▼	▼				▼	CENTER -
✳ ; SETUP	FM				SETUP	MIDNIGHT
♪ ; TITLE	FM MODE				TITLE/CHP.	BASS/TRE
☐	PRGM CD				TOP MENU	
GUIDE	MANUAL				SP SETUP	
⊖	SLEEP				SLEEP	
☐					SUBTITLE	
RED ; ●	TAPE 1		● ; REC (DECK 1)	● ; REC (DECK 2)	REPEAT	
GREEN ; ▮	TAPE 2/DAT				MONO TU	
YELLOW ; ◀	11		◀ (DECK 1)	◀ (DECK 2)	SLOW ◀	
BLUE ; ▮	12				SLOW ▮	
☐	DISPLAY				ON SCREEN	
☐					RANDOM	
VOL -	VOLUME ▼				VOLUME -	SUBWOOFER -
VOL +	VOLUME ▲				VOLUME +	SUBWOOFER +
CH V ; ◀◀	◀◀				◀◀	
CH A ; ▶▶	▶▶				▶▶	
± ; SAT	10<				+10	
CLEAR ; X					C	
◀◀ ; ●	◀◀		◀◀ MS (DECK 1)	◀◀ MS (DECK 2)	◀◀ ; TUNING -	
▶ ; i	▶		▶ (DECK 1)	▶ (DECK 2)	▶ ; PRESET	
▶▶ ; ?	▶▶		▶▶ MS (DECK 1)	▶▶ MS (DECK 2)	▶▶ ; TUNING +	
■ ; X	■		■ (DECK 1)	■ (DECK 2)	■ ; CLEAR	
▮ ; ⬇	▮				▮ ; SET	
1, 2, ... 9, 0	1, 2, ... 9, 10/0				1, 2, ... 9, 0	

Функции кнопок пульта IRC 01 F к TV устройствам

Кнопки пульта IRC 01 F	Коды 501-787	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM		
VIDEO ; SYS		
☐ ; ZOOM		
▼ ; TV		
☐ ; ↻		
☐ ; LOCK		
▲ ; FAV		
⊖	POWER ; ⊖	
AV	TV/VIDEO ; TV/AV	
✳	MUTE ; ✳	
MENU		
EXIT		
▲		
◀		
OK		
▶		
▼		
✳ ; SETUP		
♪ ; TITLE		
☐		
GUIDE		
⊖		
☐		
RED ; ●		
GREEN ; ▮		
YELLOW ; ◀		
BLUE ; ▮		
☐		
☐		
VOL -	VOLUME ▼ ; ◀-	
VOL +	VOLUME ▲ ; ▶+	
CH V ; ◀◀	CHANNEL ▼ ; P-	
CH A ; ▶▶	CHANNEL ▲ ; P+	
± ; SAT		
CLEAR ; X		
◀◀ ; ●		
▶ ; i		
▶▶ ; ?		
■ ; X		
▮ ; ⬇		
1, 2, ... 9, 0	1, 2, ... 9, 0	

Для просмотра функций кнопок баз кодов 8 и 9 (SAT, STB, DVB устройства) перейдите по следующей ссылке <http://www.pult-irc.ru/files/manual/SatCodesForIrcF.pdf>