

Приложение IRC 08 F (версия 18.10.26 03:08)

Модели оригинальных пультов и соответствующие им коды пульта IRC приведены в разделе "Коды пульта IRC 08 F".

Функции всех кнопок для каждого кода пульта IRC можно узнать из таблиц данного приложения.

Пульт IRC может иметь дополнительные функции (если указаны в столбце "Доп. функция"). Доступ к ним осуществляется при помощи кнопки SHIFT (см. в инструкции рис.1, п.16). Для доступа к дополнительным функциям нажмите кнопку SHIFT и, удерживая её нажатой, нажмите ту кнопку, дополнительная функция которой Вам необходима.

После первой установки батареек

Кнопка устройства пульта IRC	Код пульта IRC
TV	105
VCR	101
AUX	102
SAT	103

Кнопка устройства пульта IRC	Код пульта IRC
SHIFT + TV*	107
SHIFT + VCR*	108
SHIFT + AUX*	109
SHIFT + SAT*	208

* Нажмите кнопку SHIFT и, удерживая её нажатой, нажмите и отпустите одну из кнопок пульта: TV, VCR, AUX или SAT.

Доступные коды пульта IRC 08 F

Номер базы кодов (диапазон кодов)	Устройство базы кодов	Доступные коды пульта IRC
1 (101-199)	TV	101 - 116
2 (201-299)	VCR	201 - 211
3 (301-399)	AUX	301 - 315
4 (401-499)	-	Нет
5 (501-599)	TV	501 - 599
6 (601-699)	TV	601 - 699
7 (701-799)	TV	701 - 796
8 (801-899)	SAT	801 - 899
9 (901-999)	SAT	901 - 999

Коды пульта IRC 08 F

Коды к устройствам марки JVC

Модель*	Устр-во	Код
C210CK (TV)	TV	101
C210CK (VCR)	VCR	211
C210EKX (TV)	TV	101
C210EKX (VCR)	VCR	211
CT-51E	TV	104
CT-54E	TV	104
CT-56	TV	104
CT-58	TV	104
CT-70FC (TV)	TV	101
CT-70FC (VCR)	VCR	211
CT-74FC (TV)	TV	101
CT-74FC (VCR)	VCR	211
CT-77FC (TV)	TV	101
CT-77FC (VCR)	VCR	211
CT-810ME	TV	108
KT1157-SX	TV	115
KT1157-SX-W	TV	115
LP20337-013	VCR	208
LP30451-001	VCR	208
LP30767-001	VCR	208
P6936451A	TV	110
PQ10181AE	VCR	201
PQ10344AE	VCR	208
PQ11202	TV	106
PQ11202H19	TV	106
PQ11374 (TV)	TV	105
PQ11374 (VCR)	VCR	208
RC-076 (DVD)	AUX, CD, DVD	301
RC-076 (TV)	TV	105
RC-076 (VCR)	VCR	208
RM-C1013	TV	105
RM-C1023	TV	105
RM-C110 (DVD)	AUX, CD, DVD	301
RM-C110 (TV)	TV	105
RM-C1100 (TV)	TV	105
RM-C1100 (VCR)	VCR	208
RM-C1120	TV	105
RM-C114 (DVD)	AUX, CD, DVD	301
RM-C114 (TV)	TV	105
RM-C1150	TV	105
RM-C1171	TV	114
RM-C122	TV	114
RM-C1261	TV	105
RM-C1281	TV	105
RM-C1285	TV	105

Модель	Устр-во	Код
RM-C1286	TV	105
RM-C1309	TV	105
RM-C1350	TV	105
RM-C1351	TV	105
RM-C1390	TV	105
RM-C1502	TV	105
RM-C1512B	TV	105
RM-C1808 (DVD)	AUX, CD, DVD	301
RM-C1808 (TV)	TV	105
RM-C1808 (VCR)	VCR	208
RM-C1816S (DVD)	AUX, CD, DVD	301
RM-C1816S (TV)	TV	111
RM-C1816S (VCR)	VCR	208
RM-C1830	TV	113
RM-C1855 (AUDIO)	AUX, CD, DVD	303
RM-C1855 (DVD)	AUX, CD, DVD	301
RM-C1855 (TV)	TV	114
RM-C1855 (VCR)	VCR	208
RM-C1861 (DVD)	AUX, CD, DVD	301
RM-C1861 (TV)	TV	114
RM-C1861 (VCR)	VCR	208
RM-C1897S (DVD)	AUX, CD, DVD	301
RM-C1897S (TV)	TV	111
RM-C1897S (VCR)	VCR	208
RM-C1932 (TV)	TV	111
RM-C214	TV	105
RM-C220	TV	105
RM-C223	TV	105
RM-C232	TV	105
RM-C237	TV	105
RM-C239	TV	105
RM-C3184	TV	116
RM-C333	TV	105
RM-C334	TV	105
RM-C355	TV	105
RM-C360	TV	105
RM-C364	TV	105
RM-C407	TV	101
RM-C408	TV	109
RM-C408F	TV	101
RM-C410 (TV)	TV	101
RM-C410 (VCR)	VCR	211
RM-C430F	TV	101
RM-C438	TV	105
RM-C439	TV	105

Модель	Устр-во	Код
RM-C440	TV	109
RM-C457	TV	105
RM-C461	TV	105
RM-C462	TV	105
RM-C463	TV	105
RM-C470	TV	102
RM-C482	TV	107
RM-C483	TV	107
RM-C485	TV	102
RM-C488	TV	107
RM-C490	TV	102
RM-C498	TV	105
RM-C530	TV	105
RM-C54 (DVD)	AUX, CD, DVD	301
RM-C54 (TV)	TV	105
RM-C54 (VCR)	VCR	208
RM-C548	TV	105
RM-C549	TV	105
RM-C565	TV	105
RM-C601 (TV)	TV	101
RM-C601 (VCR)	VCR	211
RM-C620F (TV)	TV	101
RM-C620F (VCR)	VCR	211
RM-C637	TV	105
RM-C680 (TV)	TV	101
RM-C680 (VCR)	VCR	211
RM-C683 (TV)	TV	102
RM-C683 (VCR)	VCR	209
RM-C696	TV	102
RM-C702 (TV)	TV	103
RM-C702 (VCR)	VCR	209
RM-C703 (TV)	TV	103
RM-C703 (VCR)	VCR	209
RM-C704 (TV)	TV	103
RM-C704 (VCR)	VCR	209
RM-C707 (TV)	TV	103
RM-C707 (VCR)	VCR	209
RM-C711 (TV)	TV	103
RM-C711 (VCR)	VCR	209
RM-C712 (TV)	TV	103
RM-C712 (VCR)	VCR	209
RM-C795	TV	105
RM-C795 (VCR)	VCR	209
RM-C860B (TV)	TV	106
RM-C860B (VCR)	VCR	209

Модель	Устр-во	Код
RM-C92	TV	105
RM-C993 (TV)	TV	112
RM-C993 (VCR)	VCR	203
RMP-720	TV	106
RMP-800	TV	106
RMP-880	TV	106
RMP-910	TV	106
RM-RX1003	AUX, CD, DVD	302
RM-RX270BK	AUX, CD, DVD	302
RM-RXC1001	AUX, CD, DVD	302
RM-RXQ1E	AUX, CD, DVD	302
RM-RXQW35	AUX, CD, DVD	302
RM-RXU1000	AUX, CD, DVD	302
RM-RXU9RMD	AUX, CD, DVD	311
RM-SDR011E (DVD)	AUX, CD, DVD	310
RM-SDR011E (TV)	TV	112
RM-SDR017E (DVD)	AUX, CD, DVD	310
RM-SDR017E (TV)	TV	112
RM-SDR019A (DVD)	AUX, CD, DVD	310
RM-SDR019A (TV)	TV	112
RM-SDR052E (DVD)	AUX, CD, DVD	310
RM-SDR052E (TV)	TV	112
RM-SDXU100U (AUDIO)	AUX, CD, DVD	315
RM-SDXU100U (TV)	TV	112
RM-SED302TXU (CD)	AUX, CD, DVD	303
RM-SED302TXU (DECK)	AUX, CD, DVD	304, 305
RM-SED40TEU (CD)	AUX, CD, DVD	303
RM-SED40TEU (DECK)	AUX, CD, DVD	304, 305
RM-SES30XU (CD)	AUX, CD, DVD	303
RM-SES30XU (DECK)	AUX, CD, DVD	304, 305
RM-SES500U (CD)	AUX, CD, DVD	303
RM-SES500U (DECK)	AUX, CD, DVD	304, 305
RM-SFSSD7R	AUX, CD, DVD	306
RM-SHX210R	AUX, CD, DVD	314
RM-SHX23R	AUX, CD, DVD	314
RM-SMXG500R	AUX, CD, DVD	312
RM-SMXJ100E	AUX, CD, DVD	313
RM-SMXJ10E (CD)	AUX, CD, DVD	303
RM-SMXJ10E (TAPE)	AUX, CD, DVD	304, 305
RM-SMXJ30E	AUX, CD, DVD	307
RM-SMXJ555V	AUX, CD, DVD	308
RM-SMXJ750R	AUX, CD, DVD	314
RM-SMXK30R	AUX, CD, DVD	309
RM-SRCBZ5E	AUX, CD, DVD	302
RM-SXV034U	AUX, CD, DVD	301

* По каталогу «IRC»

Коды пульта IRC 08 F

Коды к TV, VCR, AUX устройствам марки JVC

Модель	Устр-во	Код
RM-SXV042J (DVD)	AUX, CD, DVD	301
RM-SXV042J (TV)	TV	105
RM-SXV055U (DVD)	AUX, CD, DVD	301
RM-SXV055U (TV)	TV	105
RM-SXV057A	AUX, CD, DVD	301
RM-SXV058A	AUX, CD, DVD	301
RM-SXV065A (DVD)	AUX, CD, DVD	301
RM-SXV065A (TV)	TV	105
RM-SXV069M	AUX, CD, DVD	301
RM-SXVFA95J (DVD)	AUX, CD, DVD	301
RM-SXVM555E	AUX, CD, DVD	301
SOME MODELS	VCR	202
SOME MODELS	VCR	203
SOME MODELS	VCR	204
SOME MODELS	VCR	205
SOME MODELS	VCR	206
SOME MODELS	VCR	207
SOME MODELS	VCR	210
UR64EC1623	VCR	208

Коды к TV устройствам различных марок

Марка	Код
AEG	544
AIWA	502, 503, 523, 528, 579, 634, 678, 706, 710, 712, 716
AKAI	501, 503, 512, 516, 520, 522, 524, 525, 537, 538, 540, 545, 546, 547, 550, 571, 572, 582, 583, 584, 585, 596, 598, 608, 613, 626, 652, 673, 691, 704, 708, 711, 722, 731, 769
AKIRA	511, 514, 516, 524, 525, 537, 538, 541, 545, 547, 556, 577, 586, 594, 597, 598, 601, 623, 626, 629, 631, 649, 666, 680, 689, 690, 693, 717, 739, 796
AMCOL	501, 525, 545, 747
ANITECH	501, 525, 616, 726
ATLANTA	501, 751
AVEST	537, 538, 539, 766
BANG & OLUFSEN	728, 737
BBK	522, 551, 594, 597, 684, 701, 788, 792, 793
BEKO	525, 530, 535, 559, 723, 742
BIGSTON	501, 503
BLAUPUNKT	512
BORK	525, 547, 646, 766
BRAND	711
BROKSONIC	501
CAMERON	538, 550, 567, 675, 697, 702, 792, 794
CASIO	529, 705, 706
CASKA	761
CHANGHONG	516, 642
CLATRONIC	501, 545, 559, 571, 742
CONTEC	501, 603, 604, 613
CORTLAND	644
CROWN	501, 503, 511, 524, 525, 530, 571
DAEWOO	501, 508, 518, 520, 525, 526, 536, 538, 539, 546, 565, 571, 576, 598, 613, 685, 687, 692
DARTLAND	501
DAYTRON	501
DEXP	516, 702
DIGITAL	547
DISTAR	562, 616
DNS	596, 702, 708
DUAL	746
ELEKTA	501, 503, 520, 525, 527, 615
ELEKTRONIKA	583
ELENBERG	538, 545, 550, 565, 567, 579, 581, 644, 655, 676, 683, 717, 785
EPLUTUS	537, 644, 677, 682, 697, 724
ERC	537, 631, 764
ERISSON	511, 514, 516, 525, 526, 537, 538, 541, 550, 556, 561, 568, 586, 596, 599, 623, 626, 629, 631, 711, 712, 714, 739, 747, 779, 786, 795
EVGO	538, 540, 630
FINLUX	501, 511, 583, 589, 608, 732, 758, 774
FUJITSU	544, 573
FUNAI	501, 502, 503, 504, 505, 525, 537, 538, 581, 603, 764
FUSION	596, 642, 699, 705, 706
GBS	501, 520, 525, 571, 583
GENERAL	537, 556
GOLD STAR - LG	501, 512, 518, 525, 527, 559, 570, 583, 584, 589, 609, 613, 642, 706, 712, 742, 750, 765
GRUNDIG	501, 512, 525, 606, 662, 718, 719, 733
HAIER	518, 526, 561, 574, 657, 667, 669, 707, 778
HAPPY	501
HARPER	706
HCM	501, 503, 525
HELIX	701, 702, 708
HIL	503
HITACHI	501, 515, 518, 522, 525, 537, 544, 548, 554, 578, 584, 587, 588, 604, 613, 640, 729, 749, 775, 783
HORIZONT	525, 540, 545, 550, 559, 583, 664, 672, 771
HPC	546
HYUNDAI	516, 518, 522, 525, 526, 537, 538, 540, 541, 546, 547, 550, 556, 580, 596, 597, 599, 626, 642, 648, 650, 655, 705, 711, 714, 717, 760
INNO-HIT	501, 525, 571
IRBIS	596, 714
IVA (MBA)	537, 561, 637
IZUMI	516, 537, 596, 663, 691, 695, 703, 705, 711, 792
JINLIPI	537, 637, 766
JVC	513, 515, 593, 604, 727
KAMACROWN	571
KANSAI	501, 525
KENSTAR	516
KITT	503, 613, 616, 726
KNEISSEL	753
KONKA	537, 538, 560, 561, 581, 616, 626, 717
KRONMARK	596
LOEWE	542, 709, 744
METZ	745
MITSUBISHI	501, 520, 522, 525, 604, 611, 722, 728, 744
MIYOTA	537, 644, 656
MTC	501, 583
MULTITECH	501, 525
MYSTERY	516, 537, 597, 642, 650, 653, 701, 702, 708, 773, 780, 789
NASH	537
NEC	501, 517, 520, 526, 552, 604, 625, 722
NESCO	501, 525
NOKIA	519, 584, 610, 614, 616, 740, 746, 767
NOVA	501, 616, 638
NOVEX	516, 546, 599
NTT	759
OMEGA	501, 571
ONIDA	513
ONIKS	516, 525, 537, 545, 546, 547, 680
ONWA	524, 525
OPERA	644, 666, 682
ORBITA	635
ORION	501, 503, 506, 507, 509, 516, 525, 528, 537, 591, 603, 617, 619, 627, 641, 643, 664, 715, 720, 722, 729, 746
ORSON	526, 537
PANASONIC	512, 531, 532, 752
PHANTOM	644
PHILIPS	501, 511, 524, 525, 540, 549, 628, 639, 707, 748
PHOENIX	613
PHOENIX GOLD	708

Коды к TV устройствам различных марок

Марка	Код
PIONEER	548, 555, 566, 575, 647, 666
PIXELVIEW	525
PLANTRON	735
POLAR	525, 526, 537, 538, 540, 543, 546, 547, 581, 596, 599, 663, 664, 683, 703, 711, 717
POLAROID	525
PREMIERA	773
PRESTIGIO	564, 656
PRIMA	522, 547
PROLOGY	653, 655, 777, 784
RADUGA	525, 545, 569, 583, 743
RAINFORD	525, 537, 544, 545
RECOR	511, 525
REKORD	520, 525, 526, 537, 538, 539, 545, 547, 725, 736, 743, 747
RFT	535, 618, 728
ROADSTAR	501, 508, 525, 571
ROLSEN	503, 516, 525, 537, 538, 540, 543, 546, 564, 576, 592, 594, 596, 649, 656, 669, 684, 714, 768, 770
ROVERSCAN	662, 770
ROYAL	501, 503, 525, 616
RUBIN	504, 516, 525, 537, 546, 583, 619, 665, 714, 776
SABA	509, 510, 521, 602, 756
SALORA	584
SAMSUNG	501, 525, 526, 529, 563, 580, 595, 596, 608, 612, 613, 622, 641, 645, 688, 723, 741
SANSUI	524, 525, 538, 556, 695
SANYO	501, 519, 522, 525, 530, 540, 550, 558, 604, 608, 610, 618, 621, 696, 722, 730, 734, 738
SATURN	702, 708
SCARLETT	541, 545
SCHNEIDER	525, 540, 571, 771
SELECO	736, 763
SETRO	520
SHARP	526, 544, 548, 604, 707, 721
SHERION	616
SHIVAKI	501, 503, 508, 516, 518, 520, 525, 526, 527, 536, 538, 539, 540, 545, 546, 547, 550, 556, 580, 583, 585, 596, 599, 609, 619, 630, 632, 635, 636, 643, 644, 664, 681, 694, 708, 743, 791
SIEMENS	512, 525, 660, 726, 734
SIESTA	501, 537, 637
SILELIS	613
SILVER	633
SITRONICS	503, 516, 525, 537, 538, 540, 543, 545, 594, 626, 629, 661, 671, 672, 674, 679, 680, 686, 766
SOKOL	516, 525, 547, 635
SONY	533, 604, 659, 722
SPEKTR	525, 538, 668
START	525, 537, 545, 546, 547
STASSFURT	535, 618
STINOL	525
SUPER	537, 561, 644, 653, 654, 655, 666, 677, 682, 724, 754, 772, 780
SUPER GENERAL	537
SUPRA	501, 508, 516, 518, 520, 525, 527, 529, 536, 537, 541, 563, 579, 580, 596, 597, 612, 642, 643, 687, 690, 705, 706, 712, 713, 790
SUZUKI	516, 556
SVEN	574
TCL	538, 540, 642
TEAC	525
TECHNICS	537, 538
TECHNO	501, 525, 538, 544, 546, 556, 568, 579, 596, 599, 644, 664, 703, 791
TECKTON	522, 582, 601, 669, 670
TELEFUNKEN	510, 521, 561, 590, 602, 605, 642, 708, 712, 714, 756, 757
TELEVISION	501, 525, 616
THOMSON	509, 510, 521, 550, 579, 602, 624, 642, 702, 756
TOSHIBA	516, 553, 604, 651, 744
TRONY	516, 525, 537, 538, 550, 657
TVT	511, 525, 530, 535, 538, 583, 586, 620, 630, 723, 742
UNITED	525
VARTA	642
VESTEL	525, 544, 556, 583, 619
VIEWSONIC	557, 698
VITA	547
VITEK	537, 650
VITYAS	525
VOLNA (ВОЛНА)	635
VR	516, 537, 565, 702, 714, 786
WALTHAM	503, 509, 511, 583, 584, 607, 613, 729, 762
XORO	522, 526, 545, 781, 782, 787
НЕИЗВЕСТНАЯ МАРКА	525, 546, 574, 596, 648, 656, 666, 711, 755

Коды к SAT устройствам различных марок

Марка	Код
AIR TONE	968
ALFA GOLD	828
AMINO (СТРИМ)	829, 902
ARION	835
ASTON	811
BBK	931
BIG SAT	839, 840, 903, 936
BIG STAR	965
CADENA	958, 962
CONTINENT	886, 975
COSHIP	855
DAEWOO	872
D-COLOR	946
DELTA SYSTEMS	985
DIVISAT	957, 958
D-LINK	923
DNS	968
DR.HD	983
DRE (GENERAL SATELLITE)	804, 868, 888, 907, 933, 954
DREAM	819
DUNE	927, 934
ECHOSPACE	862
ECHOSTAR	808, 809, 822
ELTEX	987
EUROSKY	840, 880
EUROSTAR	863
EUSTON	825
EVO	965
GALAXY INNOVATIONS	878, 881, 908, 911, 912, 917, 924
GLOBALTEQ	833
GLOBO	909, 915, 925, 935, 945, 956, 973, 999
GOLD STAR - LG	871
GOLDEN INTERSTAR	821, 841, 879, 918
GOLDEN MEDIA	847, 912
GOLDMASTER	911
HITACHI	824, 832
HIVION	929
HOME	968
HOMECAST (ВОЛЯ)	820, 831, 836
HUMAX	803, 804, 823, 848, 860, 861, 905, 949
HYUNDAI	968
ID DIGITAL	804
INTEK	984
KAON	820
KOSMOS	855, 856
LANS	970
LOCUS	946
LUMAX	852, 873, 907, 913, 965, 994
MAG	988
MEDIA COM	825
MOTOROLA	883, 884, 901
MYSTERY	910, 997
NDS	814
NEXT	864
NOKIA	813
NOT	941
ONLIME	905
OPENBOX	827, 835, 869, 870, 911, 990, 991
OPENTECH	972
OPENTEL	865
ORBITA	946, 995
ORIEL	887, 926, 941, 948, 955, 986
PACE	801, 932, 953
PATIX DIGITAL	992
PAUXIS	842, 859
PHILIPS	857, 899
PIONEER	851
POLAR	858
REFLECT	959
RIKOR	916, 947
ROLSEN	930, 941, 942, 961
SAGEMCOM	906
SAMSUNG	803, 810, 812, 854
SEG	818
SEZAM	882
SKY VISION	952, 966, 977, 982
SKYMASTER	830
SKYWAY	911
SKYWORTH	989
STAR	833
STAR TRACK	826, 835, 943
STARNET	885
STRONG	805, 806, 815, 816, 817, 828, 830, 914
SUNNIWELL	875
SUPERBOX	903
SUPERMAX	821, 866, 880, 924
SUPRA	950, 960, 962
TECHNOSAT	852, 853
TEL-ANT	960
TELEFUNKEN	961, 968
TESLER	926
TOP BOX	965
TOPFIELD	837, 838, 877, 891
TOSHIBA	876
TV STAR	967
TVJET	946, 976
VESTEL	820, 824
VU+	919, 920, 921, 922

Коды к SAT устройствам различных марок

Марка	Код
WORLD VISION	821, 928, 951, 952
XSAT (НТВ+)	801, 802, 807, 906, 972, 984, 998
YUXING	904
ZYXEL	874
БИЛАЙН	883, 884, 901, 923
ВОЛГАТЕЛЕКОМ	842, 843, 844, 845, 846, 847, 849, 850, 858, 867
ДОМ.RU	820, 905
ДОМОЛИНК	874, 904
МТС	855, 964, 974, 979, 980, 989, 993
НЕИЗВЕСТНАЯ МАРКА	834, 835, 842, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 903, 904, 937, 938, 939, 940, 944, 945, 969, 971, 978, 996
РОСТЕЛЕКОМ	874, 904, 923, 963
СИГНАЛ	968
ТЕЛЕКАРТА	867, 909, 973
ТЕЛЕЦИФРА	968

Функции кнопок пульта IRC 08 F к TV устройствам

Кнопки пульта IRC 08 F	Код 101		Код 102		Код 103		Код 104		Код 105	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			S		TV		N		TV/AV/PC	
AUDIO; NICAM			SOUND SYSTEM		BALANCE L	BALANCE R			SOUND SYSTEM	SURR.; L.SPAT.;
VIDEO; SYS			P/S/N; COL. SYS.		VIDEO 1				COLOUR SYSTEM	
ZOOM			RED; ZOOM		CANCEL DISPLAY				ZOOM	ECO SENSOR
TV	TV		TV		TV				TV	
			CH PRESET	→	MEMORY	MEMO STORE			PIP	STORE; >;
LOCK	NORM; RESET		VSM	→←; STD	STANDARD VSM	RESET;			VSM STD	FREEZE; ;
FAV			EE						MODE; F.T/L; STROBE	
	POWER				POWER				POWER; /I	
AV	AV		VIDEO		VIDEO 2; AV		TV/VIDEO		TV/VIDEO; AV; EXIT	
	MUTE				MUTE		MUTE; *		MUTE; MUTING; *	
MENU	MENU; OK		MENU; OK		FUNCTION	POWER (VTR)			MENU; OK	DVD MENU
EXIT									BACK	
▲	*		MENU UP		BASS +		*		PIC.AD.▲; MENU▲	
◀	-		MENU-		LEVEL -		-		PIC.AD.; MENU-; ◀	
OK			MENU; OK						OK	
▶	+		MENU+		LEVEL +		+		PIC.AD.▲; MENU+; ▶	
▼	*		MENU DOWN		BASS -		*		PIC.AD.▼; MENU▼	
SETUP			VSM; PIC. MODE		MODE				VSM; PIC. MODE	PICTURE MODE
TITLE					I-II				SOUND MODE	I-II
					TEXT	MIX			TV/TEXT/MIX; *	MULTI; *
GUIDE					BROWSE				PICTURE BOOSTER	AAC
	APM; OFF TIMER		OFF TIMER		APM; TIMER OFF		TIME		SLEEP; OFF TIMER	AUTO VNR
	MPM; ON TIMER		T/L; F/T/L		MPM; TIMER ON				POSITION	SWAP; *
RED; ●			RED; ZOOM		RED; PAGE 1	●; REC (VTR)	-		RED; ZOOM	CH PRESET
GREEN; ►			GREEN; ○		GREEN; PAGE 2		+		GREEN; ●; 3D	CHANNEL SCAN
YELLOW; ◀			YELLOW		YELLOW; PAGE 3		-		YELLOW; ○	HYPER BASS
BLUE; ►			BLUE		BLUE; PAGE 4		+		BLUE; PICTURE	SOUND TURBO
	ON SCREEN		i		ON SCREEN	POSITION	DISPLAY		DISPLAY; ○; *	
	20+				DISPLAY VSM		RETURN+		RETURN+	
VOL -	VOL -				VOLUME -	TREBLE -	VOL -; /-		VOLUME -; /-	
VOL +	VOL +				VOLUME +	TREBLE +	VOL +; /+		VOLUME +; /+	
CH V; ◀	CH ▼		CHANNEL ▼		CHANNEL -	CHANNEL - (VTR)	CHANNEL -; P ▼		CHANNEL -; P ▼	SUB-P -
CH A; ▶	CH ▲		CHANNEL ▲		CHANNEL +	CHANNEL + (VTR)	CHANNEL +; P ▲		CHANNEL +; P ▲	SUB-P +
SAT	10+		-/		-/		-/		-/	
CLEAR; X					CH CC		11		CANCEL; *; MULTI	
◀; ●	10				PAGE TIME	◀; REW (VTR)	12		S.PAG.; *; C.SYS	
▶; i	11				RESET; *	▶; PLAY (VTR)	13		INDEX; *; *	
▶; ?	12				REVEAL	▶; FWD (VTR)	14		REVEAL; *; STROB.	NEXT
■; X					HOLD	■; STOP (VTR)	15		HOLD; *; A; *	
■; ◆					SIZE	■; PAUSE (VTR)	16/AV		SIZE; *; NEXT; *	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 10		1, 2, ... 9, 0/AV	

Функции кнопок пульта IRC 08 F к TV устройствам

Кнопки пульта IRC 08 F	Код 106		Код 107		Код 108		Код 109		Код 110	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	SC3								AI	
AUDIO; NICAM	I-II	○	SOUND THEATRE						CH I/II	
VIDEO; SYS	P/S/N		VIDEO 2		VIDEO B		VIDEO		N R	
ZOOM	16:9								EXCH	
TV	T/L MODE		TV		TV		TV		CH	
			S		VIDEO C				P in P	
LOCK	VSM	→	EE		STD		RESET; STANDARD		NORM; U-N-L; →←	
FAV))((
	POWER		POWER		POWER		POWER	○ (VTR)	○; POWER	
AV	AV	S	VIDEO; VIDEO 1		VIDEO A				TV/VIDEO	
	MUTE		MUTE		MUTE				*; MUTE	
MENU	MENU; *		MENU						MENU	
EXIT									RETURN; SELECT	ESC
▲	▲	*	FUN ▲		BRIGHT +		BRIGHT +		▲	
◀	◀; -	-	FUN -		COLOUR -		CONTRAST -		◀	
OK									ENTER	
▶	▶; +	+	FUN +		COLOUR +		CONTRAST +		▶	
▼	▼	*	FUN ▼		BRIGHT -		BRIGHT -		▼	
SETUP	VSM		COLOUR SYSTEM		NTSC; G				PICTURE; P.MODE	
TITLE			SOUND SYSTEM						SOUND; S.MODE	
			VSM						PIP TV/AV; TV/TEXT	MIX
GUIDE	VNR								GAME	UNL
					OFF TIMER		TIMER OFF		TIMER	
							TIMER ON		SUB; PCM/FM	-
RED; ●	RED				R		COLOUR -	●; REC	RED	1*
GREEN; ►	GREEN						COLOUR +		GREEN	2*
YELLOW; ◀	YELLOW	-					L BALANCE		YELLOW	3*
BLUE; ►	BLUE	+					R BALANCE		BLUE	
			DISPLAY		ON SCREEN		SCREEN ON		RECALL	POS
	P/C								LST-CH; STATUS	
VOL -	VOL -		VOL -		VOLUME ▼		VOLUME -		◀	-; REVEAL
VOL +	VOL +		VOL +		VOLUME ▲		VOLUME +		▶	+; SUBCODE
CH V; ◀	P -; ▼		CH ▼		CHANNEL ▼		CHANNEL -	CHANNEL - (VTR)	▼	PIP CH ▼
CH A; ▶	P +; ▲		CH ▲		CHANNEL ▲		CHANNEL +	CHANNEL + (VTR)	▲	PIP CH ▲
SAT			-/		11		10+		0; -/	
CLEAR; X					12		20+		TIME; CANCEL	
◀; ●							◀; REW		+; SUBCODE	
▶; i							▶; PLAY		INDEX	
▶; ?							▶; FF		-; REVEAL	REVEAL
■; X							■; STOP		HOLD	
■; ◆							■; PAUSE / STILL		FREEZE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 10		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 08 F к TV устройствам

Кнопки пульта IRC 08 F	Код 111		Код 112		Код 113		Код 114		Код 115	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD			VERTICAL POS. ▲				BASS			
AUDIO ; NICAM	Ⓞ I/II		SOUND SYSTEM	Ⓞ I/II			SOUND SYSTEM	Ⓞ I/II	AUDIO	
VIDEO ; SYS			COLOUR SYSTEM	COLOUR SYS. PIP			COLOUR SYSTEM			
▣ ; ZOOM	ZOOM		ZOOM CINEMA	FULL	ZOOM		ZOOM		ASPECT	
▼ ; TV	TV/DTV ; TV		VERTICAL POS. ▼				ECO		TV. RD	
⏪ ; ⏩	Ⓜ ; PC Ⓜ	➤	PIP	STORE	Ⓜ ; Ⓜ	➤	Ⓜ	➤	PROG	
Ⓜ ; LOCK	F.T/L		RESET	FREEZE PIP			F.T/L		S	
▲ ; FAV			ECO SENSOR						FAV	
Ⓞ	Ⓞ/I		POWER	POWER BASS	Ⓞ/I		POWER ; Ⓞ/I		Ⓞ	
AV	AV		TV/VIDEO	SOURCE	TV/VIDEO		TV/VIDEO ; AV	TV/AV/PC	INPUT	
⌘	⌘		MUTE		⌘		MUTING ; ⌘		Ⓜx	
MENU	MENU		MENU		MENU		MENU	DVD MENU	MENU	
EXIT	BACK				BACK		BACK		EXIT	
▲	▲		▲ PICTURE/SOUND		▲ ; SUB-P ▲		▲		▲	
◀	◀		◀ PICTURE/SOUND		◀		◀		◀	
OK	OK				OK		OK		OK	
▶	▶		▶ PICTURE/SOUND		▶		▶		▶	
▼	▼		▼ PICTURE/SOUND		▼ ; SUB-P ▼		▼		▼	
⌘ ; SETUP			PICTURE MODE				PICTURE MODE	PICTURE MODE	P.MODE	
♪ ; TITLE	Ⓞ ; ♪ ; GUIDE	♪ ; PC Ⓜ	SOUND MODE	SURROUND	♪		SOUND MODE	Ⓜ ; ♪	S.MODE	
Ⓜ	Ⓜ		TV/TXT/MIX	MODE	Ⓜ		TEXT ; Ⓜ		TEXT	
GUIDE	Ⓜ ; GUIDE		PROGRAMME	REGULAR	Ⓜ		CINEMA SURR. ; Ⓞ		GUIDE	
Ⓞ	Ⓞ		OFF TIMER				TIMER ; SLEEP		SLEEP	
Ⓜ	Ⓜ ; Ⓜ		THEATRE ; STATUS	CINEMA 1/2			PICTURE BOOSTER		LIST	
RED ; ●	RED ; ZOOM		RED	SWAP PIP	RED ; ZOOM		RED ; ZOOM		RED	●
GREEN ; ▯	GREEN ; Ⓞ		GREEN	STROBE PIP	GREEN ; CINEMA		GREEN ; Ⓜ		GREEN	
YELLOW ; ◀	YELLOW		YELLOW	PANORAMIC	YELLOW		YELLOW ; Ⓞ		YELLOW	
BLUE ; ▯	BLUE		BLUE	LIVE	BLUE		BLUE ; PICTURE		BLUE	
Ⓜ	●		DISPLAY	POSITION PIP	DISPLAY		DISPLAY ; Ⓞ		i	
Ⓜ	BACK		AUTO		RETURN+		RETURN+		Ⓜ	
VOL -	↙		VOLUME -		VOLUME -		VOLUME ; ◀ ; ↙		VOL -	
VOL +	↘		VOLUME +		VOLUME +		VOLUME + ; ▶ ; ↘		VOL +	
CH V ; ◀	P ▼		CHANNEL (PAGE) -		CHANNEL ▼		CHANNEL - ; ▼ ; P ▼		CH -	◀
CH A ; ▶	P ▲		CHANNEL (PAGE) +		CHANNEL ▲		CHANNEL+ ; ▲ ; P ▲		CH +	▶
± ; SAT			-/-	≥10			-/-		MIX	
CLEAR ; X	Ⓜ ; I-II		CANCEL	10	Ⓜ ; ♪		Ⓜ		BACK	
◀ ; ●	Ⓜ ; Ⓜ		SUB PAGE		F.T/L		Ⓜ ; Ⓜ ; ▼		◀	SUB.PAGE
▶ ; i	Ⓜ ; Ⓜ		INDEX		Ⓜ		Ⓜ		▶	INDEX
▶▶ ; ?	Ⓜ ; TV/RADIO		REVEAL		Ⓜ		Ⓜ ; Ⓞ		▶▶	REVEAL
■ ; X	Ⓜ		HOLD		Ⓜ ; Ⓜ		Ⓜ ; ▲		■	HOLD
■ ; Ⓜ	Ⓜ ; GUIDE		SIZE		Ⓜ ; Ⓜ		Ⓜ		■	SIZE
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 08 F к TV устройствам

Кнопки пульта IRC 08 F	Код 116	
	Функция	Доп. функция
▲ ; DVD	NETFLIX	
AUDIO ; NICAM	LANG.	
VIDEO ; SYS	Ⓜ	
▣ ; ZOOM	Ⓜ	
▼ ; TV	Ⓜ	
⏪ ; ⏩	YouTube	
Ⓜ ; LOCK		
▲ ; FAV	★Q	
Ⓞ	Ⓞ	
AV	Ⓜ	
⌘	⌘	
MENU	MENU	
EXIT	EXIT	
▲	▲	
◀	◀	
OK	OK	
▶	▶	
▼	▼	
⌘ ; SETUP	Q.MENU ; Ⓜ	
♪ ; TITLE	BACK	
Ⓜ	TXT ; Ⓜ	
GUIDE	EPG ; Ⓜ	
Ⓞ	Ⓞ	
Ⓜ	SUBT.	
RED ; ●	RED	●
GREEN ; ▯	GREEN	
YELLOW ; ◀	YELLOW	
BLUE ; ▯	BLUE	
Ⓜ	i	
Ⓜ	Ⓜ	
VOL -	V -	
VOL +	V +	
CH V ; ◀	P V	
CH A ; ▶	P A	
± ; SAT		
CLEAR ; X		
◀ ; ●	◀	
▶ ; i	▶	
▶▶ ; ?	▶▶	
■ ; X	■	
■ ; Ⓜ	■	
1, 2, ... 9, 0	1, 2, ... 9, 0	

Функции кнопок пульта IRC 08 F к VCR устройствам

Кнопки пульта IRC 08 F	Код 201		Код 202		Код 203		Код 204		Код 205	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD					SP/LP		SP/LP		-	
AUDIO ; NICAM			☐		CONTR AUDIO		CONTR AUDIO		-	
VIDEO ; SYS					VTR CANC		VTR CANC		-	
☐ ; ZOOM	X2				SWAP EXCH.		SWAP EXCH.		-	
▼ ; TV					VPS VTV		VPS VTV		-	
☐ ; ↗					MEMO COMPT.	MEMO COMPT.	MEMO COMPT.	MEMO COMPT.	-	
☐ ; LOCK	RESET				0000 COMPT.		0000 COMPT.		-	
▲ ; FAV			EJECT		EJECT ; ▲		EJECT		EJECT	
⊖	POWER		POWER		POWER ; ⊖		POWER		POWER	
AV	VCR		VT		TV/VCR		TV/VIDEO		VCR	
✳	OFF									
MENU	PROG		PROG		VHS PROG		VHS PROG		M	
EXIT					GO-TO A.DIR		GO-TO A.DIR		-	
▲					IMAGE +		IMAGE +		-	
◀					SELECT -		SELECT -		-	
OK	SELECT				SELECT		SELECT			
▶					SELECT +		SELECT +		+	
▼					IMAGE -		IMAGE -			
✳ ; SETUP	ON				ON SCREEN		ON SCREEN		A	
♪ ; TITLE					DAILY ROT.		DISPLAY ERASE		B	
☐	SET	10-26	☐		MODE DIGIT.		MODE DIGIT.		PROG	
GUIDE	A. DIR.	11-27			RECH		RECH		C	
⊖	CLOCK	12-28			TIMER		TIMER		TIMER	
☐	CLOCK SET	13-29			ADAPT IMAGE		ADAPT IMAGE		D	
RED ; ●	REPEAT	● REC	RED ; ☐	● REC	MARQ ; PRG MARK	● REC	MARQ ; PRG MARK	● REC	E	● REC
GREEN ; ►	►	14-30	GREEN ; ☐	● ; (-)	SEARCH RECH.		SEARCH RECH.		F	
YELLOW ; ◀	◀	15-31	YELLOW ; P		INDEX ◀		INDEX ◀			
BLUE ; ►	►	16-32	BLUE ; VT		INDEX ►		INDEX ►		►	
☐	COUNTER				DISPLAY		DISPLAY		X2	
☐					P/C ; SOMMA.		P/C ; SOMMA.		P/C	
VOL -	▼ ; ◀				RECH ◀		RECH ◀		TRACK -	
VOL +	▲ ; ►				RECH ►		RECH ►		TRACK +	
CH V ; ◀	P -		P -		P -		P -		P -	
CH A ; ►	P +		P +		P +		P +		P +	
± ; SAT	-/		-/		-/ ; INDEX		-/ ; INDEX		-/	
CLEAR ; X	CANCEL				DISPLAY ERASE		DAILY ROT.			
◀ ; ●	◀ (REW)		◀ (REW)		◀ (REW)		◀ (REW)		◀ (REW)	
▶ ; i	▶ (PLAY)		▶ (PLAY)		▶ (PLAY)		▶ (PLAY)		▶ (PLAY)	
▶ ; ?	▶ (F.FWD)		▶ (F.FWD)		▶ (F.FWD)		▶ (F.FWD)		▶ (F.FWD)	
■ ; ✕	■ (STOP)		■ (STOP)		■ (STOP)		■ (STOP)		■ (STOP)	
; ⏸	(PAUSE)		(PAUSE)		(PAUSE)		(PAUSE)		(PAUSE)	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 08 F к VCR устройствам

Кнопки пульта IRC 08 F	Код 206		Код 207		Код 208		Код 209		Код 210	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD					▲				I-HQ/PB	
AUDIO ; NICAM					III ; SP/EP				I-HQ	
VIDEO ; SYS					INDEX Plus +				AUTO TRACKING	
☐ ; ZOOM					TRACKING +				SHOW VIEW	
▼ ; TV					▼				TV/VCR	
☐ ; ↗					C.MEMORY/ADD		⊖ ● M		VPT	
☐ ; LOCK					AUTO TRACK.				COUNTER RESET	
▲ ; FAV	EJECT		EJECT		TRACKING -		EJECT		EJECT ; ▲	
⊖	POWER		POWER		⊖ ; POWER		POWER		POWER	
AV					TV/VCR		VCR		AV	
✳					AUDIO ; ✳					
MENU	PROG		PROG		MENU ; PROG.				MENU	
EXIT									(-)	
▲					▲		▲		MULTI SPEED +	
◀					◀		◀		PICT. - ; STEADY ▶	⊖
OK					OK ; SELECT ; OSD	OSD ; ENTER			OK	
▶					▶	▶			PICT. + ; STEADY ◀	⊖
▼					▼	▼			MULTI SPEED -	
✳ ; SETUP					TITLE				JOG SHUT	
♪ ; TITLE					INFO				VERT.	
☐					PROG				TV TEXT	
GUIDE					⊖		TIMER		PROG	
⊖	TIMER		TIMER		⊖ ?				TIMER	
☐					⊖				PROG LIST	
RED ; ●		● REC		● REC	⊖	● REC		● REC	RED	● REC
GREEN ; ►					⊖				GREEN	
YELLOW ; ◀					⊖	DATE -			YELLOW	
BLUE ; ►	►		►		⊖	DATE +			BLUE	SLOW ; STILL
☐					-/- ; DISPLAY				DISPLAY	
☐	P/C		P/C		RE-VIEW				REPEAT	
VOL -	VOL -		VOL -		◀ ; ▶	START DEBUT -	<<		◀ ; TRACKING ◀	
VOL +	VOL +		VOL +		▶ ; ◀	START DEBUT +	>>		▶ ; TRACKING ▶	
CH V ; ◀	P -		P -		PROG - ; ▼	STOP FIN -	P -		CH ▼	◀
CH A ; ►	P +		P +		PROG + ; ▲	STOP FIN +	P +		CH ▲	▶
± ; SAT	-/		-/		30 SEC ▶				SP/LP	
CLEAR ; X					X ; 0000 ; CANCEL				CANCEL (S/W)	
◀ ; ●	◀ (REW)		◀ (REW)		◀ ; ◀ ; REW		◀ (REW)		◀ ; REW	
▶ ; i	▶ (PLAY)		▶ (PLAY)		▶ ; ▶ ; PLAY		▶ (PLAY)		▶ ; PLAY	
▶ ; ?	▶ (F.FWD)		▶ (F.FWD)		▶ ; ▶ ; F.FWD		▶ (F.FWD)		▶ ; F.FWD	NEXT
■ ; ✕	■ (STOP)		■ (STOP)		■ ; ▼ ; STOP		■ (STOP)		■ ; STOP	
; ⏸	(PAUSE)		(PAUSE)		; PAUSE		(PAUSE)		; PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 08 F к VCR устройствам

Кнопки пульта IRC 08 F	Код 211	
	Функция	Доп. функция
▲; DVD		
AUDIO; NICAM		
VIDEO; SYS		
☐; ZOOM		
▼; TV		
☐; ↗	☐ M	
☐; LOCK		
▲; FAV		
⊖	POWER	
AV	VCR	
✳		
MENU		
EXIT		
▲		
◀		
OK		
▶		
▼		
✳; SETUP		
♪; TITLE		
☐		
GUIDE		
⊖	TIMER	
☐		
RED; ●		● REC
GREEN; ▮		
YELLOW; ◀		
BLUE; ▮		
☐		
☐		
VOL -		
VOL +		
CH V; ◀◀	<<	
CH A; ▶▶	>>	
±; SAT		
CLEAR; X		
◀◀; ●	◀◀ (REW)	
▶; i	▶ (PLAY)	
▶▶; ?	▶▶ (F.FWD)	
■; ✕	■ (STOP)	
▮; ⏸	▮ (PAUSE)	
1, 2, ..., 9, 0		

Функции кнопок пульта IRC 08 F к AUX устройствам

Кнопки пульта IRC 08 F	Код 301		Код 302		Код 303		Код 304		Код 305	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	DVD/CARD		TUNING UP		TUNER		TUNER		TUNER	
AUDIO; NICAM	AUDIO; S.FREQ	3D PHONIC; SOUND	SOUND		FM MODE / MUTE	ACTIVE BASS EX.	SOUND EFFECT		SOUND EFFECT	
VIDEO; SYS	SLIDE EFFECT		DIMMER		VIDEO		VIDEO		VIDEO	
☐; ZOOM	ZOOM		BASS BO.; AHB PRO		HALL					
▼; TV	DISC SELECT		TUNING DOWN		FM/AM; TUNER		FM/AM; TUNER		FM/AM; TUNER	
☐; ↗	PAGE	THEATER POS.;	AUTO PRESET		DOME		PRESET		PRESET	
☐; LOCK	STROBE		TONE		PRESET					
▲; FAV	▲; OPEN/CLOSE		OPEN / CLOSE; ▲		▲ CD					
⊖	⊖/I; STANDBY/ON	TV ⊖/I	POWER (AC); ⊖/I		POWER; ⊖/I	AUTO POWER OFF	POWER; ⊖/I	AUTO POWER OFF	POWER; ⊖/I	AUTO POWER OFF
AV	ANGLE; SLIDE EF.	TV/VIDEO	TAPE / AUX		AUX		AUX		AUX	
✳	DIMMER				FADE MUTING		FADE MUTING		FADE MUTING	
MENU	MENU				PLAY MODE					
EXIT	RETURN				VOCAL MASKING					
▲	▲		BASS +		ROCK		OUT SPEAKER		OUT SPEAKER	
◀	◀	ZOOM -	TREBLE -		POPS					
OK	ENTER	ENTER	TREBLE +		CLASSIC		AUTO SPEAKER		AUTO SPEAKER	
▶	▶	ZOOM +	BASS -		CAR					
▼	▼				CINEMA		IN SPEAKER		IN SPEAKER	
✳; SETUP	CHOICE; SET UP				AUTO SPEAKER					
♪; TITLE	TITLE; TOP MENU	TITLE/GROUP	TUNER/BAN.; FM/AM		SOUND MODE	SOUND EFFECT	SOUND MODE		SOUND MODE	
☐	PLAY MODE		PROGRAM		BGM		FM MODE / MUTE		FM MODE / MUTE	
GUIDE	DIGEST				PROGRAM		ECHO LEVEL		ECHO LEVEL	
⊖	TIME; DISPLAY		SLEEP		SLEEP; WAKE UP		SLEEP; WAKE UP		SLEEP; WAKE UP	
☐	SUBTITLE		AUTO/MONO STER.		H.PHONE	D.CLUB				
RED; ●	REPEAT		REPEAT		DISC 1	▲ DISC 1	A (DECK)		A (DECK)	●; REC PAUSE
GREEN; ▮	DISC 1		1-DISC CONTROL	▲1-DISC CONTROL	DISC 2	▲ DISC 2	B (DECK)		B (DECK)	
YELLOW; ◀	DISC 2		2-DISC CONTROL	▲2-DISC CONTROL	DISC 3	▲ DISC 3	ACTIVE BASS EX.		ACTIVE BASS EX.	
BLUE; ▮	DISC 3		3-DISC CONTROL	▲3-DISC CONTROL	IN SPEAKER	OUT SPEAKER	VOCAL MASKING		VOCAL MASKING	
☐	DISPLAY	CHOICE; ON SCR.	DISPLAY		ECHO LEVEL					
☐	◀		RANDOM		SHIFT		SHIFT		SHIFT	
VOL -	AMP VOL +	TV VOL -	VOLUME -		VOLUME -; VOL. ▼		VOLUME -; VOL. ▼		VOLUME -; VOL. ▼	
VOL +	AMP VOL -	TV VOL +	VOLUME +		VOLUME +; VOL. ▲		VOLUME +; VOL. ▲		VOLUME +; VOL. ▲	
CH V; ◀◀	◀◀; PREVIOUS	TV CH -	SEARCH TUN. ◀◀		◀◀ (CD)					
CH A; ▶▶	▶▶; NEXT	TV CH +	SEARCH TUN. ▶▶		▶▶ (CD)					
±; SAT	10	+10	10+		+10		+10		+10	
CLEAR; X	X; CANCEL		CONTINUE		CANCEL					
◀◀; ●	◀◀; SLOW -		SEARCH TUN. ◀◀		◀◀ (CD)		◀◀ (DECK A)		◀◀ (DECK B)	
▶; i	▶; SELECT		CD ▶/I		▶/I (CD)		▶ (DECK A)	◀ (DECK A)	▶ (DECK B)	◀ (DECK B)
▶▶; ?	▶▶; SLOW +		SEARCH TUN. ▶▶		▶▶ (CD)		▶▶ (DECK A)		▶▶ (DECK B)	
■; ✕	■; CLEAR		■ / CLEAR		■ (CD)		■ (DECK A)		■ (DECK B)	
▮; ⏸	▮; STROBE		CD ▶/I		▶/I (CD)					
1, 2, ..., 9, 0	1, 2, ..., 9, 0		1, 2, ..., 9, 0		1, 2, ..., 9, 10		1, 2, ..., 9, 10		1, 2, ..., 9, 10	

Функции кнопок пульта IRC 08 F к AUX устройствам

Кнопки пульта IRC 08 F	Код 306		Код 307		Код 308		Код 309		Код 310	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD			CD 1		CD 1		CD 1		DVD	
AUDIO ; NICAM			ACTIVE BASS EX.		VOCAL MASKING		ACTIVE BASS EX.		AUDIO	
VIDEO ; SYS					V.INTRO		FM MODE		VHS	
☐ ; ZOOM	RANDOM				HIGHLIGHT		TAPE A/B		? ; HELP	
▼ ; TV			CD 2		CD 2		CD 2		HDD	
☐ ; ↗	AUTO PRESET		CD 3		CD 3		CD 3		PROG. SCAN	
☐ ; LOCK	AHB PRO								ANGLE; LIVE	
▲ ; FAV	▲ CD								▲ ; OPEN/CLOSE	
○	○/I		○/I		○/I		STANDBY/ON ; ○/I		○/I ; STANDBY/ON	
AV	MD/AUX		AUX		AUX		AUX		TV/VIDEO	
✳	FADE MUTING		FADE MUTING		FADE MUTING		FADE MUTING			
MENU									MENU	MEMO/MARK
EXIT									RETURN	
▲	UP				# KEY CONTROL		SELECT +		▲	
◀									◀	
OK	SET								ENTER	
▶									▶	
▼	DOWN				b KEY CONTROL		SELECT -		▼	
✳ ; SETUP	FM MODE		FM MODE		FM MODE		DISPLAY MODE		SET UP	
♪ ; TITLE	FM/AM		SOUND MODE		SOUND MODE		SOUND MODE		TOP MENU	LIVE
☐	DIMMER		FM/AM		FM/AM		FM/AM		PROGRAMME	
GUIDE	PROGRAM				ECHO		PROG./RANDOM		NAVIGATION	GUIDE
⏻	SLEEP		SLEEP		SLEEP		SLEEP		VPS/PDC ○	VHS ○
☐	DOOR SLIDE				SUBTITLE		PTY/EON		SUBTITLE	
RED ; ●	REPEAT		TAPE A	REC PAUSE	TAPE A	REC PAUSE	REPEAT		DUBBING	● ; REC
GREEN ; ▮	BASS		TAPE B		TAPE B				EDIT	REC MODE;
YELLOW ; ◀	TREBLE								○	
BLUE ; ▮	PTY/EON								○	
☐	DISPLAY				ON SCREEN				DISPLAY	INFO
☐	DISPLAY MODE				■ ; Ω				ON SCREEN	
VOL -	VOLUME -		VOLUME -		VOLUME -		VOLUME -		JUMP -	
VOL +	VOLUME +		VOLUME +		VOLUME +		VOLUME +		JUMP +	
CH V ; ◀◀	◀◀		◀◀/◀◀		◀◀/◀◀		◀◀/◀◀		CH/PR -	◀◀ ; PREVIOUS
CH A ; ▶▶	▶▶		▶▶/▶▶		▶▶/▶▶		▶▶/▶▶		CH/PR +	▶▶ ; NEXT
± ; SAT			+10		+10		+10		REC LINK ; SAT ○	
CLEAR ; X	CANCEL								X ; CANCEL	
◀◀ ; ○	◀◀		◀◀/◀◀		◀◀/◀◀ PREV		◀◀/◀◀		◀◀ ; SLOW -	
▶ ; i	▶/▮ CD		▶/▮ CD	▶ TAPE	▶/▮ CD;SEL/STILL	▶ TAPE	▶/▮ CD	▶ TAPE	▶ ; PLAY/SELECT	
▶▶ ; ?	▶▶		▶▶/▶▶		▶▶/▶▶ NEXT		▶▶/▶▶		▶▶ ; SLOW +	
■ ; X	■		■		■ ; Ω		■		■ ; STOP/CLEAR	
▮ ; ⏻	▶/▮ CD		▶/▮ CD		▶/▮ CD;SEL/STILL		▶/▮ CD		▮ ; PAUSE	
1, 2, ... 9, 0			1, 2, ... 9, 10		1, 2, ... 9, 10		1, 2, ... 9, 10		1, 2, ... 9, 0 ; AUX	

Функции кнопок пульта IRC 08 F к AUX устройствам

Кнопки пульта IRC 08 F	Код 311		Код 312		Код 313		Код 314		Код 315	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	TREBLE		DISC SKIP		DISC SKIP		◀ ▶ TAPE		DVD LEVEL	SURROUND MODE
AUDIO ; NICAM	BASS		SUBWOOFER		FM MODE		FM/AM		AUDIO/MPX	SOUND MODE
VIDEO ; SYS									ANGLE	
☐ ; ZOOM	AHB PRO						RANDOM		ZOOM	
▼ ; TV	TUNER BAND						◀ ▶ TAPE		CHANNEL LEVEL	
☐ ; ↗	AUTO PRESET		TAPE A/B		TUNING MODE		TAPE A/B		VFP ; SCAN MODE	DIMMER
☐ ; LOCK									PAGE	
▲ ; FAV	CD ▲				▲ CD				VARIO BASS	
○	○/I		○/I ; STANDBY/ON		○/I		○/I		○/I AUDIO	
AV	TAPE/AUX		AUX		AUX		AUX		FM/AM/AUX	
✳			FADE MUTING		FADE MUTING		FADE MUTING		FADE MUTING	
MENU	CHARA				PROGRAM/SET		PROGRAM		MENU/PL	
EXIT	CANCEL						PROGRAM CANCEL		RETURN	
▲	UP		VOLUME +		VOL. +		SUBWOOFER +		▲	
◀	<		◀◀◀◀		◀◀ ; ◀◀		SELECT -		◀	SUB. LEVEL -
OK	SET		■		FADE MUTING		PTY SEARCH		ENTER/SET	
▶	>		▶▶▶▶		▶▶ ; ▶▶		SELECT +		▶	SUB. LEVEL +
▼	DOWN		VOLUME -		VOL. -		SUBWOOFER -		▼	
✳ ; SETUP	DIMMER		SOUND MODE		FM/AM		DISPLAY MODE		SET UP	KARAOKE SETTING
♪ ; TITLE	EDIT/TITLE						SOUND MODE		GROUP/TITLE	VOCAL SUPPORT
☐	PTY/EON						FM MODE		TOP MENU/PG	MIC MIX
GUIDE	PROGRAM						SOUND TURBO		KARAOKE	V.MASKING
⏻	SLEEP		SLEEP		SLEEP		SLEEP		SLEEP	CLOCK/TIMER
☐	FM MODE		PTY/EON		TIMER ON/OFF		CD 5		SUB TITLE	RESERVE
RED ; ●	REPEAT		FM MODE		ACTIVE BASS EX.		CD 1	REC START/STOP	DISC 1	DISC 5
GREEN ; ▮	RANDOM		FM/AM		SOUND MODE		CD 2		DISC 2	▶ USB MEMORY
YELLOW ; ◀			SELECT -		TAPE A/B		CD 3		DISC 3	◀ ▶ TAPE-A
BLUE ; ▮			SELECT +		▶ (TAPE)		CD 4		DISC 4	◀ ▶ TAPE-B
☐	DISPLAY		DISPLAY MODE				PTY/EON		ON SCREEN	DISPLAY
☐	DISPLAY MODE				REPEAT		REPEAT		○ REV. MODE	REPEAT
VOL -	VOLUME -		VOLUME -		VOL. -		VOLUME -		VOL. - (AUDIO)	MIC VOL. -
VOL +	VOLUME +		VOLUME +		VOL. +		VOLUME +		VOL. + (AUDIO)	MIC VOL. +
CH V ; ◀◀	◀◀		◀◀◀◀		◀◀ ; ◀◀		◀◀/◀◀		◀◀ ; PREV	
CH A ; ▶▶	▶▶		▶▶▶▶		▶▶ ; ▶▶		▶▶/▶▶		▶▶ ; NEXT	
± ; SAT			+10		+10		+10		≥10	10
CLEAR ; X							BEEP ON/OFF		CANCEL	REPEAT A-B
◀◀ ; ○	◀◀		◀◀◀◀		◀◀ ; ◀◀		◀◀/◀◀		◀◀ ; SLOW -	
▶ ; i	▶/▮ CD		▶/▮ (CD)	▶ (TAPE)	▶/▮ (CD)		▶/▮ CD		▶ DVD/CD	
▶▶ ; ?	▶▶		▶▶▶▶		▶▶ ; ▶▶		▶▶/▶▶		▶▶ ; SLOW +	
■ ; X	■		■		■		■		■	
▮ ; ⏻	▶/▮ MD		▶/▮ (CD)		▶/▮ (CD)		▶/▮ CD		▮ FM/PLAY MODE	
1, 2, ... 9, 0			1, 2, ... 9, 10		1, 2, ... 9, 10		1, 2, ... 9, 10		1, 2, ... 9, 0	

Функции кнопок пульта IRC 08 F к TV устройствам

Кнопки пульта IRC 08 F	Коды 501-796	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM		
VIDEO ; SYS		
☐ ; ZOOM		
▼ ; TV		
⏪ ; ↻		
☒ ; LOCK		
▲ ; FAV		
⏻	POWER ; ⏻	
AV	TV/VIDEO ; TV/AV	
⌘	MUTE ; ⌘	
MENU		
EXIT		
▲		
◀		
OK		
▶		
▼		
⌘ ; SETUP		
🎵 ; TITLE		
☐		
GUIDE		
⏻		
☐		
RED ; ●		
GREEN ; ▬		
YELLOW ; ◀		
BLUE ; ▶		
☐		
☐		
VOL -	VOLUME ▼ ; ▬-	
VOL +	VOLUME ▲ ; ▬+	
CH V ; ◀◀	CHANNEL ▼ ; P -	
CH ▲ ; ▶▶	CHANNEL ▲ ; P +	
⊕ ; SAT		
CLEAR ; X		
◀◀ ; ●		
▶▶ ; i		
▶▶ ; ?		
■ ; ✕		
⏮ ; ⏭		
1, 2, ... 9, 0	1, 2, ... 9, 0	

Для просмотра функций кнопок баз кодов 8 и 9 (SAT, STB, DVB устройства) перейдите по следующей ссылке <http://www.pult-irc.ru/files/manual/SatCodesForIrcF.pdf>