

Приложение IRC 112 F (версия 17.09.14 01:02)

Модели оригинальных пультов и соответствующие им коды пульта IRC приведены в разделе "Коды пульта IRC 112 F".

Функции всех кнопок для каждого кода пульта IRC можно узнать из таблиц данного приложения.

Пульт IRC может иметь дополнительные функции (если указаны в столбце "Доп. функция"). Доступ к ним осуществляется при помощи кнопки SHIFT (см. в инструкции рис.1, п.16). Для доступа к дополнительным функциям нажмите кнопку SHIFT и, удерживая её нажатой, нажмите ту кнопку, дополнительная функция которой Вам необходима.

После первой установки батареек

Кнопка устройства пульта IRC	Код пульта IRC	Кнопка устройства пульта IRC	Код пульта IRC
TV	101	SHIFT + TV*	105
VCR	102	SHIFT + VCR*	106
AUX	103	SHIFT + AUX*	107
SAT	104	SHIFT + SAT*	108

* Нажмите кнопку SHIFT и, удерживая её нажатой, нажмите и отпустите одну из кнопок пульта: TV, VCR, AUX или SAT.

Доступные коды пульта IRC 112 F

Номер базы кодов (диапазон кодов)	Устройство базы кодов	Доступные коды пульта IRC
1 (101-199)	TV	101 - 129
2 (201-299)	-	Нет
3 (301-399)	AUX	301 - 310
4 (401-499)	SAT	401
5 (501-599)	TV	501 - 599
6 (601-699)	TV	601 - 699
7 (701-799)	TV	701 - 799
8 (801-899)	SAT	801 - 899
9 (901-999)	SAT	901 - 999

Коды пульта IRC 112 F

Коды к устройствам марки POLAR

Модель*	Устр-во	Код	Модель	Устр-во	Код
81LTV6004	TV/AUX	124	WS-178	TV/AUX	112
8897	TV	128	WS-178A	TV	116
9341	TV	115	XS-155	SAT, STB, DVB	401
DV-1015	AUX, CD, DVD	302	XS-155A	TV	108
DV-3030	AUX, CD, DVD	304	YC-63	TV/AUX	117
DVD-REM-01	AUX, CD, DVD	305	YX10350A	AUX, CD, DVD	308
DVD-REMOTE-01	AUX, CD, DVD	305			
DY-5188B	TV	121			
HX-P12	TV	120			
HYPPFD-0142	AUX, CD, DVD	303			
JX-9001-1-B	AUX, CD, DVD	306			
JX-9003	AUX, CD, DVD	309			
K10N-C5	TV	106			
KK-Y261Q	TV	127			
KK-Y267B	TV	110			
KK-Y271N	TV	119			
KZG-104	AUX, CD, DVD	310			
NT11106-109	TV	115			
R303	TV	109			
RC-0201	TV	105			
RC-0401	TV	107			
RC0701	TV	107			
RC1153012	TV	102			
RC-2101MC	TV	101			
RC-2201	TV	101			
RC-28	TV	103			
RC35	TV	108			
RC52L-01	TV	125			
RC-600	TV	103			
RC-W001TV	TV	102			
RM-2909NT	TV	101			
SF0701	TV	107			
SF-072	TV	104			
SF091	AUX, CD, DVD	301			
SJ-0051C	AUX, CD, DVD	307			
TV-01	TV	111			
TV-02	TV	120			
TV-03	TV	107			
TV-04	TV	126			
TV-05	TV/AUX	123			
TV-05A	TV/AUX	122			
TV-06	TV/AUX	114			
TV-07	TV/AUX	118			
TV-08	TV	129			
TV-DVD-01	TV/AUX	113			

* По каталогу «IRC»

Коды к TV устройствам различных марок

Марка	Код
AEG	544
AIWA	502, 503, 523, 528, 579, 634, 678, 710, 712, 716
AKAI	501, 503, 512, 516, 520, 522, 524, 525, 537, 538, 540, 545, 546, 547, 550, 571, 572, 582, 583, 584, 585, 598, 608, 613, 626, 652, 673, 691, 704, 722, 731, 769
AKIRA	511, 514, 516, 524, 525, 537, 538, 541, 545, 547, 556, 577, 586, 594, 597, 598, 601, 623, 626, 629, 631, 649, 666, 680, 689, 690, 693, 717, 739, 796, 797, 798, 799
AMCOL	501, 525, 545, 747
ANITECH	501, 525, 726
ATLANTA	501, 751
AVEST	537, 538, 539, 766
BANG & OLUFSEN	728, 737
BBK	522, 551, 594, 597, 684, 701, 788, 792, 793
BEKO	525, 530, 535, 559, 723, 742
BIGSTON	501, 503
BLAUPUNKT	512
BORK	525, 547, 646, 766
BRAND	711
BROKSONIC	501
CAMERON	550, 567, 675, 697, 702, 792, 794
CASIO	529, 705, 706
CASKA	761
CHANGHONG	516, 642
CLATRONIC	501
CONTEC	501, 603, 604, 613
CORTLAND	644
CROWN	501, 503, 511, 524, 525, 530, 571
DAEWOO	501, 508, 518, 520, 525, 526, 536, 538, 539, 546, 565, 571, 576, 598, 613, 685, 687, 692
DARTLAND	501
DAYTRON	501
DIGITAL	547
DISTAR	562, 616
DNS	596, 702, 708
DUAL	746
ELEKTA	501, 503, 520, 525, 527, 615
ELEKTRONIKA	583
ELENBERG	538, 545, 550, 565, 567, 579, 581, 644, 655, 676, 683, 717, 785
EPLUTUS	537, 644, 677, 682, 697, 724
ERC	537, 631, 764
ERISSON	511, 514, 516, 525, 526, 537, 538, 541, 550, 556, 561, 568, 586, 596, 599, 623, 626, 629, 631, 711, 712, 714, 739, 747, 779, 786, 795
EVGO	538, 540, 630
FINLUX	501, 511, 583, 589, 608, 732, 758, 774
FUJITSU	544, 573
FUNAI	501, 502, 503, 504, 505, 525, 537, 538, 581, 603, 764
FUSION	596, 642, 705, 706
GBS	501, 520, 525, 571, 583
GENERAL	537, 556
GOLD STAR - LG	501, 512, 518, 525, 527, 559, 570, 583, 584, 589, 609, 613, 642, 706, 742, 750, 765
GRUNDIG	501, 512, 525, 606, 662, 718, 719, 733
HAIER	518, 526, 561, 574, 657, 667, 669, 707, 778
HAPPY	501
HCM	501, 525
HELIX	701, 702
HIL	503
HITACHI	501, 515, 518, 522, 525, 537, 544, 548, 554, 578, 584, 587, 588, 604, 613, 640, 729, 749, 775, 783
HORIZONT	525, 540, 545, 550, 559, 583, 672, 771
HPC	546
HYUNDAI	516, 522, 525, 526, 537, 540, 541, 546, 547, 550, 556, 580, 596, 597, 599, 626, 642, 650, 655, 705, 711, 714, 717, 760
INNO-HIT	501, 525, 571
IRBIS	596, 714
IVA (ИВА)	537, 561, 637
IZUMI	516, 537, 596, 663, 691, 695, 705, 711, 792
JINLIPI	537, 637, 766
JVC	513, 515, 593, 604, 727
KAMACROWN	571
KANSAI	501, 525
KENSTAR	516
KITT	613, 726
KNEISSEL	753
KONKA	560, 581, 616, 717
LOEWE	542, 709, 744
METZ	745
MITSUBISHI	501, 520, 522, 525, 604, 611, 722, 728, 744
MIYOTA	537, 644, 656
MTC	501, 583
MULTITECH	501
MYSTERY	516, 537, 597, 642, 650, 653, 701, 702, 773, 780, 789
NASH	537
NEC	501, 517, 520, 526, 552, 604, 625, 722
NESCO	501, 525
NOKIA	519, 584, 610, 614, 616, 740, 746, 767
NOVA	501, 616, 638
NOVEX	516, 546, 599
NTT	759
OMEGA	501, 571
ONIDA	513
ONIKS	516, 525, 537, 545, 546, 547
ONWA	524, 525
ORBITA	635
ORION	501, 503, 506, 507, 509, 516, 525, 528, 537, 591, 603, 617, 619, 627, 641, 643, 664, 715, 720, 722, 729, 746
ORSON	526, 537
PANASONIC	512, 531, 532, 752
PHILIPS	501, 511, 524, 525, 540, 549, 628, 639, 707, 748
PHOENIX	613
PHOENIX GOLD	708
PIONEER	555, 566, 575, 647, 666
PIXELVIEW	525
PLANTRON	735
POLAR	525, 526, 537, 538, 540, 543, 547, 581, 596, 599, 663, 664, 683, 703, 711, 717
POLAROID	525
POWER VISION	501

Коды к TV устройствам различных марок

Марка	Код
PREMIERA	773
PRESTIGIO	564, 656
PRIMA	522, 547
PROLOGY	653, 655, 777, 784
RADUGA	525, 545, 569, 583, 743
RAINFORD	525, 537, 544, 545
RECOR	511, 525
REKORD	520, 525, 526, 537, 538, 539, 545, 547, 725, 736, 743, 747
RFT	535, 728
ROADSTAR	501, 508, 525, 571
ROLSEN	503, 516, 525, 537, 538, 540, 543, 546, 564, 576, 592, 594, 596, 649, 656, 669, 684, 714, 768, 770
ROVERSCAN	662, 770
RUBIN	504, 516, 525, 537, 546, 583, 619, 665, 714, 776
SABA	510, 521, 602, 756
SALORA	584
SAMSUNG	501, 525, 526, 529, 563, 580, 595, 608, 612, 613, 622, 641, 645, 688, 723, 741
SANSUI	524, 525, 538, 556, 695
SANYO	501, 519, 522, 525, 530, 540, 550, 558, 604, 608, 610, 618, 621, 696, 722, 730, 734, 738
SATELLITE	616
SCARLETT	541, 545
SCHNEIDER	525, 540, 571, 771
SELECO	736, 763
SETRO	520
SHARP	526, 544, 548, 604, 707, 721
SHERION	616
SHIVAKI	501, 503, 508, 516, 518, 520, 525, 526, 527, 536, 538, 539, 540, 545, 546, 547, 550, 556, 580, 583, 585, 596, 599, 609, 619, 630, 632, 635, 636, 643, 644, 664, 681, 694, 743, 791
SIEMENS	512, 525, 660, 726, 734
SIESTA	501, 537, 637
SILELIS	613
SILVER	633
SITRONICS	503, 516, 525, 537, 538, 540, 543, 545, 594, 626, 629, 661, 671, 672, 674, 679, 680, 686, 766
SOKOL	516, 525, 547, 635
SONY	533, 604, 659, 722
SPEKTR	525, 538, 668
START	525, 537, 545, 546, 547
STASSFURT	535, 618
STINOL	525
SUPER	537, 561, 644, 653, 654, 655, 666, 677, 682, 724, 754, 772, 780
SUPRA	501, 508, 516, 518, 520, 525, 527, 529, 536, 537, 541, 563, 579, 580, 596, 597, 612, 643, 687, 690, 705, 706, 712, 713, 790
SUZUKI	516, 556
SVEN	781
TCL	538, 540
TECHNO	501, 525, 538, 544, 546, 556, 568, 579, 596, 599, 644, 664, 703, 791
TECKTON	522, 582, 601, 669, 670
TELEFUNKEN	510, 521, 590, 602, 605, 708, 756, 757
TELEVISION	501, 525, 616
THOMSON	509, 510, 521, 550, 579, 602, 624, 642, 702, 756
TOSHIBA	516, 553, 604, 651, 699, 744
TRONY	516, 525, 537, 538, 550
TVT	511, 525, 530, 535, 538, 583, 586, 620, 723, 742
UNITED	525
VARTA	642
VESTEL	525, 544, 556, 583, 619
VIEWSONIC	557, 698
VITA	547
VITEK	537, 650
VITYAS	525
VOLNA (ВОЛНА)	635
VR	516, 537, 702, 714, 786
WALTHAM	503, 509, 511, 583, 584, 607, 613, 729, 762
XORO	522, 526, 545, 782, 787
НЕИЗВЕСТНАЯ МАРКА	546, 574, 596, 648, 656, 666, 711, 755

Коды к SAT устройствам различных марок

Марка	Код
AIR TONE	968
ALFA GOLD	828
AMINO (СТРИМ)	829, 902
ARION	835
ASTON	811
BBK	931
BIG SAT	839, 840, 903, 936
BIG STAR	965
CADENA	958, 962
CONTINENT	886, 975
COSHIP	855
DAEWOO	872
D-COLOR	946
DELTA SYSTEMS	985
DIVISAT	957, 958
D-LINK	923
DNS	968
DR.HD	983
DRE (GENERAL SATELLITE)	804, 868, 888, 907, 933, 954
DREAM	819
DUNE	927, 934
ECHOSPACE	862
ECHOSTAR	808, 809, 822
ELTEX	987
EUROSKY	840, 880
EUROSTAR	863
EUSTON	825
EVO	965
GALAXY INNOVATIONS	878, 881, 908, 911, 912, 917, 924
GLOBALTEQ	833
GLOBO	909, 915, 925, 935, 945, 956, 973, 999
GOLD STAR - LG	871
GOLDEN INTERSTAR	821, 841, 879, 918
GOLDEN MEDIA	847, 912
GOLDMASTER	911
HITACHI	824, 832
HIVION	929
HOME	968
HOMECAST (ВОЛЯ)	820, 831, 836
HUMAX	803, 804, 823, 848, 860, 861, 905, 949
HYUNDAI	968
ID DIGITAL	804
INTEK	984
KAON	820
KOSMOS	855, 856
LANS	970
LOCUS	946
LUMAX	852, 873, 907, 913, 965, 994
MAG	988
MEDIA COM	825
MOTOROLA	883, 884, 901
MYSTERY	910, 997
NDS	814
NEXT	864
NOKIA	813
NOT	941
ONLIME	905
OPENBOX	827, 835, 869, 870, 911, 990, 991
OPENTECH	972
OPENTEL	865
ORBITA	946, 995
ORIEL	887, 926, 941, 948, 955, 986
PACE	801, 932, 953
PATIX DIGITAL	992
PAUXIS	842, 859
PHILIPS	857, 899
PIONEER	851
POLAR	858
REFLECT	959
RIKOR	916, 947
ROLSEN	930, 941, 942, 961
SAGEMCOM	906
SAMSUNG	803, 810, 812, 854
SEG	818
SEZAM	882
SKY VISION	952, 966, 977, 982
SKYMASTER	830
SKYWAY	911
SKYWORTH	989
STAR	833
STAR TRACK	826, 835, 943
STARNET	885
STRONG	805, 806, 815, 816, 817, 828, 830, 914
SUNNIWELL	875
SUPERBOX	903
SUPERMAX	821, 866, 880, 924
SUPRA	950, 960, 962
TECHNOSAT	852, 853
TEL-ANT	960
TELEFUNKEN	961, 968
TESLER	926
TOP BOX	965
TOPFIELD	837, 838, 877, 891
TOSHIBA	876
TV STAR	967
TVJET	946, 976
VESTEL	820, 824
VU+	919, 920, 921, 922

Коды к SAT устройствам различных марок

Марка	Код
WORLD VISION	821, 928, 951, 952
XSAT (НТВ+)	801, 802, 807, 906, 972, 984, 998
YUXING	904
ZYXEL	874
БИЛАЙН	883, 884, 901, 923
ВОЛГАТЕЛЕКОМ	842, 843, 844, 845, 846, 847, 849, 850, 858, 867
ДОМ.RU	820, 905
ДОМОЛИНК	874, 904
МТС	855, 964, 974, 979, 980, 989, 993
НЕИЗВЕСТНАЯ МАРКА	834, 835, 842, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 903, 904, 937, 938, 939, 940, 944, 945, 969, 971, 978, 996
РОСТЕЛЕКОМ	874, 904, 923, 963
СИГНАЛ	968
ТЕЛЕКАРТА	867, 909, 973
ТЕЛЕЦИФРА	968

Функции кнопок пульта IRC 112 F к TV устройствам

Кнопки пульта IRC 112 F	Код 101		Код 102		Код 103		Код 104		Код 105	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD					DBB	HUE +	DVD		⊞; SURROUND	
AUDIO; NICAM	SOUND; PIC		S.SYS; SOUND SYS		II; Ⓞ; M; STEREO		AUDIO		Ⓞ/II; S.MODE; ⊞	
VIDEO; SYS	SYS.; BOOKMARK		COLOR SYS.		PAL/SECAM; NIC.		PP		Ⓞ; STORE; ADD	
Ⓞ; ZOOM					Ⓞ				ZOOM; P.SIZE; ⊞	
▼; TV					TV; ⊞	HUE -			Ⓞ; TV	
Ⓞ; ↗					▶; AST; SEAR.; Q.V.				PIP ON; PIP; ⊞	CH.SCAN; ▲
Ⓞ; LOCK	ANA; PIC.; NORMAL				▶; ◀; P.P.; OK				STILL; ⊞	Ⓞ; K.LOCK
▲; FAV			FAVORITE; SURF		MEMO				SWAP; ⊞	Ⓞ
Ⓞ	Ⓞ; STANDBY		STANDBY; ⊞		Ⓞ; OFF; STAND BY		Ⓞ		POWER; ⊞	
AV	TV/AV; ⊞		TV/AV		AV; ◀; AV	▶; CLEAR	AV/TV		VIDEO; ◀; AV; ⊞	
Ⓞ	Ⓞ; MUTE		MUTE		Ⓞ; MUTE		Ⓞ		MUTE; Ⓞ	
MENU	MENU; M		MENU; MENU/INS		MENU		MENU	DISC MENU	MENU; ⊞; F.MENU	
EXIT					Arret					
▲	↑		P + ▲; PRO. ▲		Ⓞ; ▲	Ⓞ+	CH ▲		P +; P ▲; ⊞	
◀	←		V - ◀; VOL. ◀		FINE -; FT; TUNE ◀	Ⓞ-	VOL ◀		◀; VOL ◀	
OK			OK		MENU; F; PIC; SEL		OK			
▶	→		V + ▶; VOL. ▶		FINE+; FT+; TUNE▶	Ⓞ+	VOL ▶		▶; VOL ▶	
▼	↓		P - ▼; PRO. ▼		Ⓞ -; ▼	Ⓞ-	CH ▼		P -; P ▼; ⊞	
Ⓞ; SETUP	PIC; PICTURE		PIC.; DEL.; PIC./DEL.		SMART CONT. PICT				▶; P.STD; ⊞	
♪; TITLE	SOUND MODE				SMART CO. SOUND		Ⓞ		▶; S.STD; ◀	
Ⓞ	WOOFER; CALEND.		CALENDAR		Ⓞ; TTR; TTX	Ⓞ; TMM	TEXT	MIX	TTX/MIX; ⊞; TEXT	Ⓞ; MIX
GUIDE			CAPS		SYS; 13-24		REP		HELP; ?	
Ⓞ	SLEEP; ⊞; INTRO		SLEEP		TIMER; SLEEP; ⊞		●	TIME; ⊞	Ⓞ; SLEEP; ⊞	
Ⓞ	CALL		NOTE; NOTEBOOK		Ⓞ; SPAT; ⊞		SUB		LANGUAG.; HELP; ?	Ⓞ; LIST
RED; ●	S.EFFECT		AT		RED; ♯	♯-	RED; ◀		RED	LOCAT.; ROTAT.; ⊞
GREEN; ▶	BBE		S.EFFECT		GREEN; ♯	♯+	GREEN; ▶		GREEN	FACTORY; H1
YELLOW; ◀			B.E		YELLOW; ⊞	◀	YELLOW; ▶		YELLOW	3-SPEED; H2
BLUE; ▶			SURROUND		BLUE; ⊞	▶	BLUE; ■		BLUE	
Ⓞ	Ⓞ; DISPLAY		DISPLAY		DISPLAY; STAT.; ⊞		Ⓞ		DISPLAY; ⊞; ⊞	
Ⓞ	RECALL; DISPLAY		RECALL; A/CH		P◀P; Q.VIEW; ⊞		Ⓞ		PP CH; PRE CH; ◀	P/C
VOL -	VOLUME -; ◀		V - ◀; VOL. ◀		VOL -; ◀; -	▶; ◀	VOL ◀		◀; VOL ◀	
VOL +	VOLUME +; ▶		V + ▶; VOL. ▶		VOL +; ▶; +	▶; ▶	VOL ▶		▶; VOL ▶	
CH V; ◀	PROGRAM -; ▼		P - ▼; PRO. ▼		P -; CH -; PROG -	◀	CH ▼		P -; P ▼; ⊞	
CH ▲; ▶	PROGRAM +; ▲		P + ▲; PRO. ▲		P +; CH +; PROG +	▶	CH ▲		P +; P ▲; ⊞	
Ⓞ; SAT	Ⓞ				-/-; PAGE+; ⊞				-/-; +100; ⊞	
CLEAR; X	SKIP				P/C; TPD; PAGE -; ⊞	Ⓞ; SYS; PIP; ⊞			X; ⊞; CANCEL; ERASE	
◀; ⊞					Ⓞ; TSC; SUB.PAGE		◀		Ⓞ; SUBPAGE	
▶; i			GAME		Ⓞ; X; T INDEX; ⊞		▶		Ⓞ; INDEX	
▶; ?					Ⓞ; REV		▶		Ⓞ; REVEAL	
■; X					Ⓞ; TPH; STORE		■		Ⓞ; HOLD	
■; ⊞					Ⓞ; TST		■		Ⓞ; SIZE; F/T/B	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 112 F к TV устройствам

Кнопки пульта IRC 112 F	Код 106		Код 107		Код 108		Код 109		Код 110	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD					ARC	ARC				
AUDIO; NICAM			SOUND; ⊞		SSM; SPM	III			III	
VIDEO; SYS	VIDEO		VIDEO; PP		PSM; PPM; PP				EQU	
Ⓞ; ZOOM	SORT				POSITION				DOUBLE HEIGHT	
▼; TV			TV		TV/PC					
Ⓞ; ↗	SCAN		Ⓞ		PIP			AUTO/LIST		
Ⓞ; LOCK	AUTO		PP		EYE				S.S	
▲; FAV					FAV.PR; ⊞					
Ⓞ	Ⓞ		Ⓞ; POWER		Ⓞ; POWER		Ⓞ; POWER; СЕТЬ		Ⓞ; POWER	
AV	VIDEO		AV; AV/TV		TV/AV; AV; AV/TV	INPUT	TV/AV; ТВ/АВ		TV/AV	
Ⓞ	MUTE		Ⓞ		Ⓞ; MUTE; ◀		Ⓞ; MUTE		Ⓞ; MUTE	
MENU	MENU		MENU; OK		MENU		ВВОД; MENU		MENU	
EXIT	PREVIOUS				SWAP					
▲			▲		PR ▲		PR ▲; CH ▲		PROG. ▲	
◀			◀		VOL ◀		3B ◀; VOL ▼		VOL ◀	
OK			OK		OK		ВВОД; MENU		MENU	
▶			▶		VOL ▶		3B ▶; VOL ▲		VOL ▶	
▼			▼		PR ▼		PR ▼; CH ▼		PROG. ▼	
Ⓞ; SETUP	P.MODE				SUPER PICTURE; Γ	DRP	FUZZY; РЕЖИМ		PICTURE	
♪; TITLE	S.MODE		III		SUPER SOUND; ⊞				SOUND	
Ⓞ	TEXT		Ⓞ; TXT; TEXT		Ⓞ; TEXT/MIX; TXT		TV/TXT; ТВ/ТЕКСТ		TEX ON	
GUIDE	CAL		MODE		MODE		Ⓞ; EXPAND		TEX OFF	
Ⓞ	SLEEP		Ⓞ; SLEEP		SLEEP; ⊞	MODE; ⊞; SLEEP	ВРЕМЯ; TIME		TIMER	
Ⓞ	MIX		Ⓞ; MIX		MIX; ⊞		ТВ+TT; MIX		MIX	
RED; ●	RED		RED		RED; PIP. PR -		RED		RED	
GREEN; ▶	GREEN		GREEN		GREEN; PIP. PR +		GREEN		GREEN	
YELLOW; ◀	YELLOW		YELLOW		YELLOW; PIP. SWAP		YELLOW		YELLOW	
BLUE; ▶	BLUE		BLUE		BLUE; PIP. INPUT		BLUE		CYAN	
Ⓞ	DISPLAY		Ⓞ		Ⓞ; LIST		ДИСПЛ.; DISP		Q.VIEW	
Ⓞ	RECALL		Ⓞ; ⊞		FAV.PR; ⊞		Q.VIEW; ⊞		PREVIOUS PAGE	
VOL -	VOL -		◀; VOL ◀; ◀		VOL ◀		3B ◀; VOL ▼		VOL ◀	
VOL +	VOL +		▶; VOL ▶; ▶		VOL ▶		3B ▶; VOL ▲		VOL ▶	
CH V; ◀	CH -		P ▼; CH ▼; ▼	Ⓞ	PR ▼	PR ▼	PR ▼; CH ▼		PROG. ▼	
CH ▲; ▶	CH +		P ▲; CH ▲; ▲	Ⓞ	PR ▲	PR ▲	PR ▲; CH ▲		PROG. ▲	
Ⓞ; SAT	---				*	*	-/-		-/-	
CLEAR; X	CANCEL		X; ⊞; ⊞		Ⓞ; UPDATE; POSIT.		СБРОС; CANCEL		CANCEL	
◀; ⊞	SUBCODE		Ⓞ; TIME		Ⓞ; TIME; ⊞		ЛИСТАТЬ; BROWS.		SUB.PAGE	
▶; i	INDEX		Ⓞ; i; WHITE; ⊞		Ⓞ; LIST; SCAN; i		ИНДЕКС; INDEX		INDEX	
▶; ?	REVEAL		Ⓞ; ?; ⊞		Ⓞ; REVEAL; ?		Ⓞ; REVEAL		REVEAL	
■; X	HOLD		Ⓞ; HOLD; ⊞; ⊞		Ⓞ; HOLD; STILL		СТОП; HOLD		HOLD	
■; ⊞	SIZE		Ⓞ; ⊞; ⊞		Ⓞ; ⊞; Q.VIEW				SWAP	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 112 F к TV устройствам

Кнопки пульта IRC 112 F	Код 111		Код 112		Код 113		Код 114		Код 115	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			PAGE +		▶▶					
AUDIO; NICAM			AUDIO	I/II	AUDIO		NICAM/A2			
VIDEO; SYS		↔								
☐; ZOOM			SCALER				16:9		ZOOM; ☐	
▼; TV			PAGE -		◀◀					
☐; ↕										
☐; LOCK	LOCK		ANGLE		ANGLE		AUTO		SCAN	☐; LOCK
▲; FAV			FAV; ▲		▲; AUTO					
⊖	POWER		⊖; POWER		⊖; STANDBY		⊖; POWER		POWER; ⊖; ST-BY	
AV	TV/AV		SOURCE		INPUT		INPUT		TV/AV; TB/AB; AV	
⊘	MUTE		⊘; MUTE		⊘; MUTE		⊘; MUTE		MUTE; ⊘	
MENU	MENU		S.PAGE; DVD-MENU		LCD MENU	D. MENU	MENU		MENU; МЕНЮ	
EXIT			EXIT		DVD-SETUP; EXIT		EXIT			
▲	↑		▲		▲		▲		CH +; PR ▲; ↑; P +	
◀	←		◀		◀		◀		V -; 3B ▼; ←; ↙	
OK	MENU		OK		ENTER		OK		MENU; МЕНЮ	
▶	→		▶		▶		▶		V +; 3B ▲; →; ↘	
▼	↓		▼		▼		▼		CH -; PR ▼; ↓; P -	
⊘; SETUP	PIC		P.MODE	SETUP	P.MODE	DVD-SETUP	P.MODE		↔; P.M.; PICT.	
♪; TITLE	S.MODE		S.MODE	TITLE	S.MODE	TITLE	S.MODE		↔; S.MODE	
☐	MSG		TEXT	MIX	CC		TXT		TEXT; GAME	
GUIDE			PBC		MTS					
⊖	SLEEP		SLEEP		SLEEP		SLEEP		ТАЙМЕР; SLEEP	
☐	FIRE		S.TITLE; SUBTITLE		SUBTITLE				MIX; CALENDAR	
RED; ●			RED; GOTO		RED; PROG		RED; ◀		RED; PICT; ИЗОБП.	
GREEN; ▶			GREEN; A-B		GREEN; INTRO		GREEN; ▶▶		GREEN; ⊖; CLOCK	
YELLOW; ◀			YELLOW; REPEAT		BLUE; YELL.; REP.		YELLOW; ◀◀		YEL.; TIME; ТАЙМЕР	
BLUE; ▶			BLUE; ANGLE		YELL.; BLUE; A-B	SLOW	BLUE; ▶▶		BLUE; SOUND; ЗВУК	
☐	CALL		CALL	i; DISPLAY	DISPLAY		DISPLAY		?; CALL; ☐; DISP	
☐	QV		RECALL		☐; ANGLE		☐		QV; ☐; A/CH; ALT	
VOL -	VOL -		VOL -	RADIO; ZOOM -	VOL -		VOL -		V -; 3B ▼; ←; ↙	
VOL +	VOL +		VOL +	EPG; ZOOM +	VOL +		VOL +		V +; 3B ▲; →; ↘	
CH V; ◀	CH -		CH -		CH -	◀◀	CH -		CH -; PR ▼; ↓; P -	
CH A; ▶	CH +		CH +		CH +	▶▶	CH +		CH +; PR ▲; ↑; P +	
↔; SAT	↔		↔		↔		↔		↔	
CLEAR; X			CANCEL		GOTO	CANCEL	CANCEL		CANCEL	
◀◀; ●			◀◀	S.PAGE	◀◀; SIZE	SUBPAGE	◀◀	SUBPAGE	SUBCODE	
▶; i			▶	INDEX	▶▶; INDEX	INDEX	▶	INDEX	REVEAL	
▶▶; ?			▶▶	REVEAL	▶▶; SUBPAGE	REVEAL	▶▶	REVEAL	REVEAL	
■; X			■	HOLD	■; CANCEL	HOLD	■	HOLD	HOLD; GAME	
; ⬇			/▶	SIZE	; INDEX	SIZE		SIZE		
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 112 F к TV устройствам

Кнопки пульта IRC 112 F	Код 116		Код 117		Код 118		Код 119		Код 120	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			FAV +		FAV +					
AUDIO; NICAM		III	NICAM		AUDIO	NICAM/A2			AUDIO; CALENDAR	
VIDEO; SYS									SYS.; MODE; GAME	
☐; ZOOM	SCALER		ASPECT		ASPECT				ZOOM; PIC; ☐; MAR.	
▼; TV			FAV -		TV/RADIO	FAV -				
☐; ↕					MEDIA				P.P; AUTO; P.MODE	
☐; LOCK									GAME; AUDIO; LOCK	
▲; FAV			FAV		FAV					
⊖	⊖; POWER		⊖; POWER		⊖; POWER		⊖; STANDBY		⊖; POWER	
AV	TV/AV		INPUT		INPUT		TV/AV		VIDEO; TV/AV; AV	
⊘	⊘; MUTE		⊘; MUTE		⊘; MUTE		⊘; MUTE		⊘; MUTE	
MENU	MENU		MENU		MENU		MENU		MENU; M	
EXIT	EXIT		EXIT		EXIT					
▲	▲		▲		▲		PROG ▲		CH +; P+; ▲	
◀	◀		◀		◀		VOL ◀		VOL -; ◀-; V-; ◀	
OK	OK		ENTER		ENTER		MENU		MENU; M	
▶	▶		▶		▶		VOL ▶		VOL +; ▶+; V+; ▶	
▼	▼		▼		▼		PROG ▼		CH -; P-; ▼	
⊘; SETUP	P.MODE		P.MODE		P.MODE		PIC. MODE		☐ L/R; GAME; PICT.	
♪; TITLE	S.MODE		S.MODE		S.MODE		SND. MODE		↔ U/D; SOUND; S.M	
☐	TEXT		TEXT		TEXT	MIX			GAME	
GUIDE			EPG		EPG				LANG; SCAN; OPTIO.	
⊖	SLEEP		SLEEP		SLEEP		SLEEP		SLEEP; ⊖	
☐	MIX		SUBTITLE		SUBTITLE					
RED; ●	RED		RED	●	RED	●; REC				
GREEN; ▶	GREEN		GREEN		GREEN					
YELLOW; ◀	YELLOW		YELLOW		YELLOW					
BLUE; ▶	BLUE		BLUE		CYAN					
☐	CALL		DISPLAY		DISPLAY				CALL; DISPLAY; OSD	
☐	RECALL		☐		☐		Q.VIEW		☐; RECALL; QV	
VOL -	VOL -		VOL -		VOL -		VOL ◀		VOL -; ◀-; V-; ◀	
VOL +	VOL +		VOL +		VOL +		VOL ▶		VOL +; ▶+; V+; ▶	
CH V; ◀	CH -		CH -	◀◀	CH -	◀◀; PREV	PROG ▼		CH -; P-; ▼	
CH A; ▶	CH +		CH +	▶▶	CH +	▶▶; NEXT	PROG ▲		CH +; P+; ▲	
↔; SAT	↔		↔		↔		↔		↔	
CLEAR; X	CANCEL		CANCEL		CANCEL					
◀◀; ●	SUBPAGE		◀◀	SUBPAGE	◀◀; REV	SUBPAGE				
▶; i	INDEX		▶▶	INDEX	▶▶; PLAY/PAUSE	INDEX				
▶▶; ?	REVEAL		▶▶	REVEAL	▶▶; FWD	REVEAL				
■; X	HOLD		■	HOLD	■; STOP	HOLD				
; ⬇	SIZE		/▶	SIZE	; PLAY/PAUSE	SIZE				
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 112 F к TV устройствам

Кнопки пульта IRC 112 F	Код 121		Код 122		Код 123		Код 124		Код 125	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			▶▶; FAV+		▶▶; FAV+		▶▶; HOLD		FAV +	
AUDIO; NICAM	A-AUDIO; AUDIO								; AUDIO	
VIDEO; SYS	SYS		R.LIST		R.LIST					
☐; ZOOM	ZOOM		ASPECT		ASPECT		SCALER		ZOOM; SIZE	
▼; TV			◀◀; FAV-		◀◀; FAV-		◀◀; TEXT		FAV -	
☐; ↻	SCAN		TV/RADIO		TV/RADIO		ADDDEL			
☐; LOCK	PP; P.P		AUTO		AUTO		FREEZE			
▲; FAV			▲; AUTO	FAV	▲; AUTO	FAV	FAV		FAV	
⊖	POWER		⊖; POWER		⊖; POWER		⊖; POWER		⊖; POWER	
AV	TV/AV; AV/TV		INPUT		INPUT		SOURCE		SOURCE	
⌘	MUTE		⌘; MUTE		⌘; MUTE		⌘; MUTE		⌘; MUTE	
MENU	MENU		MENU		MENU		MENU		MENU	
EXIT			EXIT		EXIT		EXIT		EXIT	
▲	CH +		▲		▲		▲		▲	
◀	VOL -		◀		◀		◀		◀	
OK	SELECT		ENTER		ENTER		OK		OK; ENTER	
▶	VOL +		▶		▶		▶		▶	
▼	CH -		▼		▼		▼		▼	
⌘; SETUP			PICTURE		PICTURE		PMODE		PMODE	
♪; TITLE			SOUND		SOUND		SMODE		SMODE	
☐	GAME		TEXT		TEXT		TEXT		TEXT	
GUIDE			EPG		EPG		MEDIA		LIST	
⊖	SLEEP		SLEEP		SLEEP		SLEEP		SLEEP	
☐			SUB TITLE		SUB TITLE		SUBTITLE		REPEAT; SUBTITLE	
RED; ●	RED; ZOOM		RED	REC	RED	REC	RED		RED	REPEAT
GREEN; ▶▶	GREEN; SYS		GREEN		GREEN		GREEN		GREEN	A-B
YELLOW; ◀◀	YELLOW; GAME		YELLOW		YELLOW		YELLOW		YELLOW	
BLUE; ▶▶	BLUE; SCAN		BLUE		BLUE		BLUE		BLUE	
☐	DISP/LOC; CALL		DISPLAY		DISPLAY		CALL		INFO; DISPLAY	
☐	RECALL; RETRON						RECALL		☐	
VOL -	VOL -		VOL -		VOL -		VOL -		V -	
VOL +	VOL +		VOL +		VOL +		VOL +		V +	
CH V; ◀◀	CH -		CH ▼	◀◀; FAV-	CH ▼		CH -	◀◀; TEXT	P -	◀◀; PAG -
CH A; ▶▶	CH +		CH ▲	▶▶; FAV+	CH ▲		CH +	▶▶; HOLD	P +	▶▶; PAG +
⊖; SAT	-/-		-		-		-		-	
CLEAR; X							CANCEL			
◀◀; ●			◀◀	SUBPAGE	◀◀	SUBPAGE	◀◀; CANCEL	SUBPAGE	◀◀	SUBPAGE
▶▶; i			▶▶; REVEAL	INDEX	▶▶; REVEAL	INDEX	▶▶; REVEAL	INDEX	▶▶; MIX	INDEX
▶▶; ?			▶▶	REVEAL	▶▶	REVEAL	▶▶; REVEAL	REVEAL	▶▶	REVEAL
■; X			■; SUBPAGE	HOLD	■; SUBPAGE	HOLD	■; FAV	HOLD	■	HOLD
■; ⊖			■; HOLD	SIZE	■; HOLD	SIZE	■	SIZE	■; MIX	SIZE
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 112 F к TV устройствам

Кнопки пульта IRC 112 F	Код 126		Код 127		Код 128		Код 129	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	FAV +							
AUDIO; NICAM	ROOT; AUDIO	NICAM			AUDIO			
VIDEO; SYS	REPEAT		SYSTEM		SYS			
☐; ZOOM	ASPECT; ZOOM; SIZ		ZOOM				ZOOM; ☐; ☐; SIZE	
▼; TV	FAV -		TV/AV					
☐; ↻	AUTO		PP		SCAN		SCAN; REVEAL; RES.	
☐; LOCK	A-B		LOCK		P.P		☐; LOCK; SUBTTIT.	
▲; FAV	FAV							
⊖	⊖; POWER		POWER		⊖		⊖	
AV	INPUT		TV/AV		AV		TV/AV	
⌘	⌘; MUTE		MUTE		⌘		⌘; MUTE	
MENU	MENU		MENU		MENU		MENU	
EXIT	EXIT							
▲	▲		PROG. ▲		P +; P ▲		▲	
◀	◀		VOL ◀		V -; ◀		◀	
OK	ENTER; OK		MENU		SELECT		MENU	
▶	▶		VOL ▶		V +; ▶		▶	
▼	▼		PROG. ▼		P -; P ▼		▼	
⌘; SETUP	P.MODE; - P -		PICTURE				- P -; P.P; P.MODE	
♪; TITLE	S.MODE; - S -	TV/RADIO					- S -; SOUND	
☐	TEXT		OPTION				TEXT	
GUIDE	EPG				GAME		GAME; HOLD	
⊖	SLEEP; ZZZ		SLEEP		SLEEP		⊖; SLEEP	
☐	SUBTITLE						CALENDAR; MIX	
RED; ●	RED	REC'					RED; PICTURE; ☐	
GREEN; ▶▶	GREEN						GREEN; ⊖	
YELLOW; ◀◀	YELLOW						YELLOW; TIMER	
BLUE; ▶▶	BLUE						BLUE; SOUND; SUR.	
☐	DISP; DISPLAY		DISPLAY		DISP		CALL; ?; DISP; ☐	
☐	☐; ☐		RECALL		☐; ☐		☐; QV; ALT	
VOL -	V-; VOL-		VOL ◀		V -; ◀		V -; ◀; VOL -; ◀	
VOL +	V+; VOL+		VOL ▶		V +; ▶		V +; ▶; VOL +; ▶	
CH V; ◀◀	P -; CH -; CH ▼	◀◀; INDEX	PROG. ▼		P -; P ▼		P -; PR -; CH -; ▼	
CH A; ▶▶	P +; CH +; CH ▲	▶▶; SIZE	PROG. ▲		P +; P ▲		P +; PR +; CH +; ▲	
⊖; SAT	GOTO		-/-		-/-		-	
CLEAR; X							CANCEL	
◀◀; ●	◀◀; REVEAL	SUBPAGE					SUBCODE	
▶▶; i	▶▶; TEXT	INDEX						
▶▶; ?	▶▶; SUBPAGE	REVEAL					REVEAL	
■; X	■; HOLD	HOLD					HOLD	
■; ⊖	■; TEXT	SIZE					SIZE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 112 F к AUX устройствам

Кнопки пульта IRC 112 F	Код 301		Код 302		Код 303		Код 304		Код 305	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD			#				EQ		EQ	
AUDIO ; NICAM	AUDIO		LANGUAGE		AUDIO		AUDIO		LANGUAGE	
VIDEO ; SYS	MODE		N/P		P/N		IS/PS		VIDEO	
☐ ; ZOOM	ZOOM		ZOOM		ZOOM		ZOOM		ZOOM	
▼ ; TV			b		TV MODE				MARK	
☐ ; ↗	SEARCH MODE		MIC				SEARCH		SEARCH	
☐ ; LOCK	TEST TONE		CHANNEL		SHUFFLE				V-REMOTE	
▲ ; FAV	OPEN/CLOSE ; ▲		EJECT		▲		▲ ; OPEN/CLOSE		▲	
○	○ ; OPER. ; STANDBY		POWER		POWER		STANDBY		○	
AV	ANGLE		ANGLE		ANGLE				ANGLE	
⌘	MUTE		MUTE		MUTE				MUTE	
MENU	MENU		MENU		MENU		MENU ; ≡		MENU	
EXIT			GOTO		RESUME					
▲	▲		↑		▲		▲		▲	
◀	◀		←		◀		◀		◀	
OK	SELECT ; OK		↵		ENTER / ▶		ENTER		ENTER	
▶	▶		→		▶		▶		▶	
▼	▼		↓		▼		▼		▼	
* ; SETUP	SETUP		SETUP		SETUP		SET UP		SET UP	
♪ ; TITLE	TITLE		TITLE		TITLE		TITLE		TITLE	KARAOKE ; A-LINE
☐	PROGRAM		PBC	DIGEST	KODAK T.E. ; I/P		PROG		PROG	
GUIDE	SHUFFLE		PROGRAM		PROGRAM		INTRO		INTRO	
⊖	TIME ; DISPLAY		RANDOM							
☐	SUBTITLE		SUBTITLE		SUB-T		SUBTITLE		SUBTITLE	
RED ; ●	REPEAT		REPEAT		REPEAT		REPEAT		REPEAT	
GREEN ; ▶	A→B ; A-B		STEP		STEP		KARAOKE ; A-B		STEP	
YELLOW ; ◀	SPEAKER VOL		A-B		A-B RPT		V-REMOTE		A-B	
BLUE ; ▶	SOUND EFFECT		SLOW		SLOW		MARK		SLOW	
☐	DISPL. ; SETUP ; REP.		DISPLAY		DISPLAY		DISPLAY		DISPLAY	
↶	RETURN		RETURN		GOTO		↶ ; RETURN		RETURN	
VOL -	VOLUME -		VOLUME -		VOL -		VOL -		VOL -	
VOL +	VOLUME +		VOLUME +		VOL +		VOL +		VOL +	
CH V ; ◀	◀◀ SKIP / FRAME		◀◀		◀◀ SKIP		◀◀ ; PREV		◀◀	
CH A ; ▶	▶▶ SKIP / FRAME		▶▶		▶▶ SKIP		▶▶ ; NEXT		▶▶	
± ; SAT	+10		+10		+10		+10		+10	
CLEAR ; X	C ; WATCH TV/C		CLEAR		CLEAR		CLEAR		CLEAR	
◀ ; ○	◀◀ SLOW / SEARCH		◀◀		◀◀ ; REV		◀◀ ; REV		◀◀	
▶ ; i	▶▶ / II ; PLAY / PAUSE		▶▶		▶▶		▶▶ ; PLAY / ENTER		▶▶ ; PLAY / PAUSE	
▶▶ ; ?	▶▶ SLOW / SEARCH		▶▶		▶▶ ; FWD		▶▶ ; FF		▶▶	
■ ; X	■ ; STOP		■		■ ; STOP		■ ; STOP		■ ; STOP	
II ; ⬇	II ; PLAY / PAUSE		II		II ; PAUSE		II ; PAUSE / STEP		II ; PLAY / PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 112 F к AUX устройствам

Кнопки пульта IRC 112 F	Код 306		Код 307		Код 308		Код 309		Код 310	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	RAN		DVD		RANDOM		KARAOKE		DVD/RADIO	TUNING UP
AUDIO ; NICAM	AUDIO	R/L	AUDIO	A-LINE	LANGUAGE	L/R	LANGUAGE	R/L	AUDIO	ST/MONO
VIDEO ; SYS	N/P		VIDEO	V-REMOTE	N/P		N/P		VIDEO	N/P
☐ ; ZOOM	ZOOM		ZOOM		ZOOM		ZOOM		ZOOM	
▼ ; TV			AM/FM ; TUNER		INTRO		VIEW		VOL MODE	TUNING DN
☐ ; ↗	VIEW		SEARCH		P-SCAN		P-SCAN		SEARCH	MEMO
☐ ; LOCK	P/I		ANGLE		EQ		3D		DIGEST	
▲ ; FAV	▲ ; OPEN/CLOSE		▲		▲ ; OPEN/CLOSE		▲		▲ ; OPEN/CLOSE	
○					POWER		○		○ ; POWER	
AV	ANGLE		AUX		ANGLE		ANGLE		ANGLE	
⌘	MUTE		⌘		MUTE		MUTE		MUTE	
MENU	MENU		MENU	MARK/MEMO	ROOT MENU		MENU		MENU	
EXIT	RESUME									
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀		◀ ; ECHO -		◀	
OK	ENTER		ENTER		ENTER		ENTER		ENTER	
▶	▶		▶		▶		▶ ; ECHO +		▶	
▼	▼		▼		▼		▼		▼	
* ; SETUP	SETUP	3D	SETUP		SETUP		SETUP		SETUP	
♪ ; TITLE	TITLE		TITLE		TITLE MENU		TITLE		TITLE	AM/FM
☐	PBC		SEL		PBC		PBC		PBC	
GUIDE	PROG		PROG		PROG		PROG		PROG	
⊖			INTRO		TIME		TIME			
☐	SUBTITLE		SUBTITLE		SUBTITLE		SUBTITLE		SUBTITLE	
RED ; ●	REPEAT		○ ; REPEAT		REPEAT		REPEAT		REPEAT	3D
GREEN ; ▶	STEP		⊖ ; A-B		STEP		STEP		STEP	EQ
YELLOW ; ◀	A-B		EQ		A-B		A-B		A-B	
BLUE ; ▶	SLOW		SLOW		SLOW		SLOW		SLOW	
☐	OSD		DISPLAY		OSD		OSD		OSD	
↶	RETURN	GOTO	RETURN		RETURN		RETURN		RETURN	
VOL -	VOL -		VOL -		VOL -		VOL -		VOL -	
VOL +	VOL +		VOL +		VOL +		VOL +		VOL +	
CH V ; ◀	◀◀		◀◀		◀◀		◀◀		CH -	◀◀ ; PREV
CH A ; ▶	▶▶		▶▶		▶▶		▶▶		CH +	▶▶ ; NEXT
± ; SAT	+10		+10		+10		+10		+10	
CLEAR ; X	CLEAR		CLEAR							
◀ ; ○	◀◀		◀◀		◀◀		◀◀		◀◀ ; F.REV	
▶ ; i	▶▶		▶▶		▶▶	PLAY/PAUSE	▶▶		▶▶ ; PLAY	
▶▶ ; ?	▶▶		▶▶		▶▶		▶▶		▶▶ ; F.FWD	
■ ; X	■ ; STOP		■		■	STOP	■		■ ; STOP	
II ; ⬇	II ; PLAY/PAUSE		II		II ; PAUSE	PLAY/PAUSE	II ; PAUSE		II ; PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 10		1, 2, ... 9, 0	

Функции кнопок пульта IRC 112 F к SAT устройствам

Кнопки пульта IRC 112 F	Код 401	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM	LANGUAGE	
VIDEO ; SYS	TV FORMAT	
⏏ ; ZOOM		
▼ ; TV		
⏏ ; ↻		
🔒 ; LOCK		
▲ ; FAV		
⏻	⏻ ; POWER	
AV		
🔇	🔇 ; MUTE	
MENU	MENU ; ⏏	
EXIT	→⏏ ; EXIT	
▲	▲	
◀	◀	
OK	OK	
▶	▶	
▼	▼	
⌘ ; SETUP		
🎵 ; TITLE	□ ; TV/RADIO	
📄	📄 ; TEXT	
GUIDE	GUIDE	
⌚	TIMER	
📄	SUBTITLE	
RED ; ●	RED	
GREEN ; ▢	GREEN	
YELLOW ; ◀	YELLOW	
BLUE ; ▢	BLUE	
📄	📄 ; INFO	
↻		
VOL -	VOL -	
VOL +	VOL +	
CH V ; ◀◀	P - ; CH -	
CH A ; ▶▶	P + ; CH +	
⊕ ; SAT		
CLEAR ; X		
◀◀ ; ●		
▶ ; i		
▶▶ ; ?		
■ ; X		
⏸ ; ⏻	⏸ ; PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0	

Функции кнопок пульта IRC 112 F к TV устройствам

Кнопки пульта IRC 112 F	Коды 501-799	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM		
VIDEO ; SYS		
⏏ ; ZOOM		
▼ ; TV		
⏏ ; ↻		
🔒 ; LOCK		
▲ ; FAV		
⏻	POWER ; ⏻	
AV	TV/VIDEO ; TV/AV	
🔇	MUTE ; 🔇	
MENU		
EXIT		
▲		
◀		
OK		
▶		
▼		
⌘ ; SETUP		
🎵 ; TITLE		
📄		
GUIDE		
⌚		
📄		
RED ; ●		
GREEN ; ▢		
YELLOW ; ◀		
BLUE ; ▢		
📄		
↻		
VOL -	VOLUME ▼ ; ◀-	
VOL +	VOLUME ▲ ; ▶+	
CH V ; ◀◀	CHANNEL ▼ ; P -	
CH A ; ▶▶	CHANNEL ▲ ; P +	
⊕ ; SAT		
CLEAR ; X		
◀◀ ; ●		
▶ ; i		
▶▶ ; ?		
■ ; X		
⏸ ; ⏻		
1, 2, ... 9, 0	1, 2, ... 9, 0	

Для просмотра функций кнопок баз кодов 8 и 9 (SAT, STB, DVB устройства) перейдите по следующей ссылке <http://www.pult-irc.ru/files/manual/SatCodesForIrcF.pdf>