

Приложение IRC 11 F (версия 18.12.07 02:29)

Модели оригинальных пультов и соответствующие им коды пульта IRC приведены в разделе "Коды пульта IRC 11 F".

Функции всех кнопок для каждого кода пульта IRC можно узнать из таблиц данного приложения.

Пульт IRC может иметь дополнительные функции (если указаны в столбце "Доп. функция"). Доступ к ним осуществляется при помощи кнопки SHIFT (см. в инструкции рис.1, п.16). Для доступа к дополнительным функциям нажмите кнопку SHIFT и, удерживая её нажатой, нажмите ту кнопку, дополнительная функция которой Вам необходима.

После первой установки батареек

Кнопка устройства пульта IRC	Код пульта IRC	Кнопка устройства пульта IRC	Код пульта IRC
TV	101	SHIFT + TV*	120
VCR	103	SHIFT + VCR*	301
AUX	111	SHIFT + AUX*	302
SAT	119	SHIFT + SAT*	303

* Нажмите кнопку SHIFT и, удерживая её нажатой, нажмите и отпустите одну из кнопок пульта: TV, VCR, AUX или SAT.

Доступные коды пульта IRC 11 F

Номер базы кодов (диапазон кодов)	Устройство базы кодов	Доступные коды пульта IRC
1 (101-199)	TV	101 - 133
2 (201-299)	VCR	201 - 207
3 (301-399)	AUX	301 - 303
4 (401-499)	-	Нет
5 (501-599)	TV	501 - 599
6 (601-699)	TV	601 - 699
7 (701-799)	TV	701 - 799
8 (801-899)	SAT	801 - 899
9 (901-999)	SAT	901 - 999

Коды пульта IRC 11 F

Коды к устройствам марки ORION

Модель*	Устр-во	Код
076100D030	VCR	201
076100G010	TV	102
076100Q001	TV	111
076100Q006	TV	111
076100T001	TV	111
0761088001	TV/VCR	105
0761089001	TV/VCR	105
076200W011	VCR	201
0762057001	TV/VCR	105
0762057080	TV/VCR	105
0762057110	TV/VCR	120
0762061030	VCR	202
0762061040	VCR	202
0762090001	TV/VCR	105
0766064010	TV/VCR	124
0766072030	VCR	201
0766072050	VCR	201
0766072100	VCR	201
0766093040	TV/VCR	104
0766094010	TV/VCR	124
0766099010	VCR	201
07660B0060	TV	119
07660BU130	AUX, CD, DVD	301
07660BV020	VCR	201
07660CF050	VCR	201
076B060140	VCR	202
076D0N001	VCR	201
076G008140	VCR	201
076G000040	VCR	201
076G020010	TV/VCR	120
076G020140	TV/VCR	120
076G020170	TV/VCR	120
076G0292006	TV/VCR	105
076G031010	TV/VCR	120
076G031011	TV/VCR	120
076G031040	TV/VCR	120
076G033050	TV	106
076G033060	TV	106
076G037011	TV	111
076G03701A	TV	111
076G043060	TV	106
076G045020	VCR	201
076G045050	VCR	201
076G045080	VCR	201
076G045130	VCR	201

Модель	Устр-во	Код
076G046020	TV	101
076G046040	TV	101
076G046070	TV	101
076G047080	TV	101
076G047140	TV	101
076G047170	TV	101
076G047180	TV	101
076G066001	TV/VCR	105
076G090010	TV	111
076G092006	TV/VCR	105
076G0AA050	VCR	201
076G0AA130	VCR	201
076L049020	TV/VCR	105
076L052030	TV	101
076L052040	TV	101
076L052050	TV	101
076L052070	TV	101
076L052080	TV	101
076L067050	TV	101
076L067070	TV	101
076L067090	TV	101
076L067110	TV	101
076L078030	TV	103
076L078070	TV	103
076L078080	TV	103
076L078090	TV	103
076R077100	TV	103
076R0AP010	TV	119
076R0AP060	TV	119
076R0BR010	TV	119
076R0BR020	TV	119
14K	TV	113
2008001	AUX, CD, DVD	302
7028/6325	TV	108
A76100Q005	TV	111
A76G090020	TV/VCR	105
A76M027002	TV	111
A76M028030	TV	111
A76M028040	TV	111
COMBI2690	TV/VCR	120
COMBI3690	TV/VCR	120
COMBI3695	TV/VCR	120
COMBI5000	TV/VCR	120
COMBI5005	TV/VCR	120
COMBI5190	TV/VCR	120

Модель	Устр-во	Код
COMBI6000	TV/VCR	120
COMPUTER 04	TV	109
CT-142R	TV	110
CT-149TX	TV	102
CT-208	TV	102
DVD-01	AUX, CD, DVD	303
EURS3733	TV	110
GIOIELLO390	TV	101
HCS-4	TV	111
HRS0232011100	TV/VCR	105
INFRA-03	TV	109
INFRA-04	TV	109
INFRA-09I	TV	107
INFRA-09II	TV	109
IR5016	TV	101
IR6325	TV	108
IR6540	TV	108
MD11	TV/VCR	120
MG940	VCR	201
N700E	VCR	201
OLT-30100	TV	133
OLT-32102	TV	131
R56	TV	111
RC-07	VCR	201
RC-08	VCR	201
RC-1030	TV	123
RC-13	TV	106
RC-25	TV	112
RC-30A	TV	126
RC-31	TV/VCR	120
RC-33	TV	102
RC-37	TV	111
RC-37-01	TV	111
RC-37-04	TV	101
RC-38	TV	111
RC-40	TV	110
RC-41	TV	116
RC-43	TV	106
RC-44	VCR	201
RC-46	TV	101
RC-47	TV	101
RC-49	TV/VCR	105
RC-52	TV	101
RC-53	TV	111
RC-56	TV	111

Модель	Устр-во	Код
RC-5691	TV	117
RC-57	TV/VCR	105
RC-57	VCR	205
RC-58	VCR	206
RC-60	VCR	202
RC-66	TV/VCR	105
RC-67	TV	101
RC-78	TV	103
RC-81	VCR	207
RC-88	TV/VCR	105
RC-89	TV/VCR	105
RC-90	TV/VCR	105
RC-92	TV/VCR	105
RC-98	TV	110
RCD	VCR	201
RCE	VCR	201
RCG	TV	102
RCQ	TV	111
RC-R16-0A	TV	125
RCW	VCR	201
RGNTM601	VCR	201
SOME MODELS	TV/VCR	204
SOME MODELS	VCR	203
TELECOMPUTER 4300	TV	107
TELECOMPUTER 4800	TV	114
TELECOMPUTER 4900	TV	107
TELECOMPUTER 6900	TV	107
TM101	TV	102
TRC011	TV	118
TRC021	TV	118
TV-01	TV/AUX	127
TV-02	TV	121
TV-03	TV	128
TV-04	TV	122
TV-05	TV	129
TV-06	TV	130
TV-07	TV	132
WS-178	TV	115

* По каталогу «IRC»

Коды к TV устройствам различных марок

Марка	Код
AEG	544
AIWA	502, 503, 523, 528, 579, 634, 678, 706, 710, 712, 716
AKAI	501, 503, 512, 516, 520, 522, 524, 525, 537, 538, 540, 545, 546, 547, 550, 571, 572, 582, 583, 584, 585, 596, 598, 608, 613, 626, 652, 673, 691, 704, 708, 711, 722, 731, 769
AKIRA	511, 514, 516, 524, 525, 537, 538, 541, 545, 547, 556, 577, 586, 594, 597, 598, 601, 623, 626, 629, 631, 649, 666, 680, 689, 690, 693, 717, 739, 796, 797, 798, 799
AMCOL	501, 525, 545, 747
ANITECH	501, 525, 616, 726
ATLANTA	501, 751
AVEST	537, 538, 539, 766
BANG & OLUFSEN	728, 737
BBK	522, 551, 594, 597, 684, 701, 788, 792, 793
BEKO	525, 530, 535, 559, 723, 742
BIGSTON	501, 503
BLAUPUNKT	512
BORK	525, 547, 646, 766
BRAND	711
BROKSONIC	501
CAMERON	538, 550, 567, 675, 697, 702, 792, 794
CASIO	529, 705, 706
CASKA	761
CHANGHONG	516, 642
CLATRONIC	501, 545, 559, 571, 742
CONTEC	501, 603, 604, 613
CORTLAND	644
CROWN	501, 503, 511, 524, 525, 530, 571
DAEWOO	501, 508, 518, 520, 525, 526, 536, 538, 539, 546, 565, 571, 576, 598, 613, 685, 687, 692
DARTLAND	501
DAYTRON	501
DEXP	516, 702
DIGITAL	547
DISTAR	562, 616
DNS	596, 702, 708
DUAL	746
ELEKTA	501, 503, 520, 525, 527, 615
ELEKTRONIKA	583
ELENBERG	538, 545, 550, 565, 567, 579, 581, 644, 655, 676, 683, 717, 785
EPLUTUS	537, 644, 677, 682, 697, 724
ERC	537, 631, 764
ERISSON	511, 514, 516, 525, 526, 537, 538, 541, 550, 556, 561, 568, 586, 596, 599, 623, 626, 629, 631, 711, 712, 714, 739, 747, 779, 786, 795
EVGO	538, 540, 630
FINLUX	501, 511, 583, 589, 608, 732, 758, 774
FUJITSU	544, 573
FUNAI	501, 502, 503, 504, 505, 525, 537, 538, 581, 603, 764
FUSION	596, 642, 699, 705, 706
GBS	501, 520, 525, 571, 583
GENERAL	537, 556
GOLD STAR - LG	501, 512, 518, 525, 527, 559, 570, 583, 584, 589, 609, 613, 642, 706, 712, 742, 750, 765
GRUNDIG	501, 512, 525, 606, 662, 718, 719, 733
HAIER	518, 526, 561, 574, 657, 667, 669, 707, 778
HAPPY	501
HARPER	706
HCM	501, 503, 525
HELIX	701, 702, 708
HIL	503
HITACHI	501, 515, 518, 522, 525, 537, 544, 548, 554, 578, 584, 587, 588, 604, 613, 640, 729, 749, 775, 783
HORIZONT	525, 540, 545, 550, 559, 583, 664, 672, 771
HPC	546
HYUNDAI	516, 518, 522, 525, 526, 537, 538, 540, 541, 546, 547, 550, 556, 580, 596, 597, 599, 626, 642, 648, 650, 655, 705, 711, 714, 717, 760
INNO-HIT	501, 525, 571
IRBIS	596, 714
IVA (MBA)	537, 561, 637
IZUMI	516, 537, 596, 663, 691, 695, 703, 705, 711, 792
JINLIPI	537, 637, 766
JVC	513, 515, 593, 604, 727
KAMACROWN	571
KANSAI	501, 525
KENSTAR	516
KITT	503, 613, 616, 726
KNEISSEL	753
KONKA	537, 538, 560, 561, 581, 616, 626, 717
KRONMARK	596
LOEWE	542, 709, 744
METZ	745
MITSUBISHI	501, 520, 522, 525, 604, 611, 722, 728, 744
MIYOTA	537, 644, 656
MTC	501, 583
MULTITECH	501, 525
MYSTERY	516, 537, 597, 642, 650, 653, 701, 702, 708, 773, 780, 789
NASH	537
NEC	501, 517, 520, 526, 552, 604, 625, 722
NESCO	501, 525
NOKIA	519, 584, 610, 614, 616, 740, 746, 767
NOVA	501, 616, 638
NOVEX	516, 546, 599
NTT	759
OMEGA	501, 571
ONIDA	513
ONIKS	516, 525, 537, 545, 546, 547, 680
ONWA	524, 525
OPERA	644, 666, 682
ORBITA	635
ORION	501, 503, 506, 507, 509, 516, 525, 528, 537, 591, 603, 617, 619, 627, 641, 643, 664, 715, 720, 722, 729, 746
ORSON	526, 537
PANASONIC	512, 531, 532, 752
PHANTOM	644
PHILIPS	501, 511, 524, 525, 540, 549, 628, 639, 707, 748
PHOENIX	613
PHOENIX GOLD	708

Коды к TV устройствам различных марок

Марка	Код
PIONEER	548, 555, 566, 575, 647, 666
PIXELVIEW	525
PLANTRON	735
POLAR	525, 526, 537, 538, 540, 543, 546, 547, 581, 596, 599, 663, 664, 683, 703, 711, 717
POLAROID	525
PREMIERA	773
PRESTIGIO	564, 656
PRIMA	522, 547
PROLOGY	653, 655, 777, 784
RADUGA	525, 545, 569, 583, 743
RAINFORD	525, 537, 544, 545
RECOR	511, 525
REKORD	520, 525, 526, 537, 538, 539, 545, 547, 725, 736, 743, 747
RFT	535, 618, 728
ROADSTAR	501, 508, 525, 571
ROLSEN	503, 516, 525, 537, 538, 540, 543, 546, 564, 576, 592, 594, 596, 649, 656, 669, 684, 714, 768, 770
ROVERSCAN	662, 770
ROYAL	501, 503, 525, 616
RUBIN	504, 516, 525, 537, 546, 583, 619, 665, 714, 776
SABA	509, 510, 521, 602, 756
SALORA	584
SAMSUNG	501, 525, 526, 529, 563, 580, 595, 596, 608, 612, 613, 622, 641, 645, 688, 723, 741
SANSUI	524, 525, 538, 556, 695
SANYO	501, 519, 522, 525, 530, 540, 550, 558, 604, 608, 610, 618, 621, 696, 722, 730, 734, 738
SATURN	702, 708
SCARLETT	541, 545
SCHNEIDER	525, 540, 571, 771
SELECO	736, 763
SETRO	520
SHARP	526, 544, 548, 604, 707, 721
SHERION	616
SHIVAKI	501, 503, 508, 516, 518, 520, 525, 526, 527, 536, 538, 539, 540, 545, 546, 547, 550, 556, 580, 583, 585, 596, 599, 609, 619, 630, 632, 635, 636, 643, 644, 664, 681, 694, 708, 743, 791
SIEMENS	512, 525, 660, 726, 734
SIESTA	501, 537, 637
SILELIS	613
SILVER	633
SITRONICS	503, 516, 525, 537, 538, 540, 543, 545, 594, 626, 629, 661, 671, 672, 674, 679, 680, 686, 766
SOKOL	516, 525, 547, 635
SONY	533, 604, 659, 722
SPEKTR	525, 538, 668
START	525, 537, 545, 546, 547
STASSFURT	535, 618
STINOL	525
SUPER	537, 561, 644, 653, 654, 655, 666, 677, 682, 724, 754, 772, 780
SUPER GENERAL	537
SUPRA	501, 508, 516, 518, 520, 525, 527, 529, 536, 537, 541, 563, 579, 580, 596, 597, 612, 642, 643, 687, 690, 705, 706, 712, 713, 790
SUZUKI	516, 556
SVEN	574
TCL	538, 540, 642
TEAC	525
TECHNICS	537, 538
TECHNO	501, 525, 538, 544, 546, 556, 568, 579, 596, 599, 644, 664, 703, 791
TECKTON	522, 582, 601, 669, 670
TELEFUNKEN	510, 521, 561, 590, 602, 605, 642, 708, 712, 714, 756, 757
TELEVISION	501, 525, 616
THOMSON	509, 510, 521, 550, 579, 602, 624, 642, 702, 756
TOSHIBA	516, 553, 604, 651, 744
TRONY	516, 525, 537, 538, 550, 657
TVT	511, 525, 530, 535, 538, 583, 586, 620, 630, 723, 742
UNITED	525
VARTA	642
VESTEL	525, 544, 556, 583, 619
VIEWSONIC	557, 698
VITA	547
VITEK	537, 650
VITYAS	525
VOLNA (ВОЛНА)	635
VR	516, 537, 565, 702, 714, 786
WALTHAM	503, 509, 511, 583, 584, 607, 613, 729, 762
XORO	522, 526, 545, 781, 782, 787
НЕИЗВЕСТНАЯ МАРКА	525, 546, 574, 596, 648, 656, 666, 711, 755

Коды к SAT устройствам различных марок

Марка	Код
AIRTONE	968
ALFA GOLD	828
AMINO (СТРИМ)	829, 902
ARION	835
ARRIS	883
ASTON	811
BBK	931
BIG STAR	965
BIGSAT	839, 840, 903, 936
CADENA	958, 962
CONTINENT	886, 975
COSHIP	855
DAEWOO	872
D-COLOR	946, 961
DELTA SYSTEMS	985
DIGIFORS	946
DIVISAT	957, 958
D-LINK	923
DNS	950, 968
DR.HD	983
DRE	804, 888
DREAM	819
DUNE	927, 934
ECHOSPACE	862
EHOSTAR	808, 809, 822
ELTEX	987
EPLUTUS	961
EUROSKY	840, 981
EUROSTAR	863
EUSTON	825
EVO	965
GALAXY INNOVATIONS	878, 881, 908, 911, 912, 917, 924
GENERAL SATELLITE	804, 868, 888, 907, 933, 954
GLOBALTEQ	833
GLOBO	909, 915, 925, 935, 945, 956, 971, 973, 995, 999
GOLD STAR - LG	871
GOLDEN INTERSTAR	821, 841, 879, 918
GOLDEN MEDIA	847, 912
GOLDMASTER	911
HD BOX	847, 911
HITACHI	824, 832
HIVION	929
HOME	968
HOMECAST (ВОЛЯ)	820, 831, 836
HUMAX	803, 804, 823, 848, 860, 861, 905, 949
HYUNDAI	968
ID DIGITAL	804
INTEK	984
INTERCROSS	988
KAON	820, 949
KARTINA TV	934
KOSMOS	855, 856
LANS	970
LOCUS	946
LUMAX	852, 873, 907, 913, 965, 994
MAG	988
MEDIA COM	825
MOTOROLA	883, 884, 901, 974
MYSTERY	910, 997
NDS	814
NEXT	864
NOKIA	813
NOT	941
ONLIME	905
OPENBOX	827, 835, 869, 870, 911, 990, 991
OPENTECH	972
OPENTEL	865
OPTICUM	971
ORBITA	946, 995
ORIEL	887, 926, 941, 948, 955, 986
PACE	801, 932, 953
PATIX DIGITAL	946, 967, 992
PAUXIS	842, 859
PERFEO	960, 981
PHILIPS	857, 899
PIONEER	851
POLAR	858
REFLECT	959
REXANT	977
RIKOR	916, 947
ROLSEN	930, 941, 942, 961
SAGEMCOM	906
SAMSUNG	803, 810, 812, 854
SEG	818
SELENGA	946
SEZAM	882
SKY VISION	952, 966, 977, 982
SKYMASTER	830
SKYWAY	911
SKYWORTH	989
STAR	833
STAR TRACK	826, 835, 943
STARNET	885
STRONG	805, 806, 815, 816, 817, 828, 830, 914
SUNNIWELL	875
SUPERBOX	903
SUPERMAX	821, 866, 880, 924
SUPRA	950, 960, 962

Коды к SAT устройствам различных марок

Марка	Код
TECHNOSAT	852, 853
TEL-ANT	960
TELEFUNKEN	961, 968
TESLER	926
TOP BOX	965
TOPFIELD	837, 838, 877, 891
TOSHIBA	876
TV STAR	967
TVJET	946, 976
VESTEL	820, 824
VU+	919, 920, 921, 922
WORLD VISION	821, 928, 951, 952, 961, 968
XSAT	801, 807
XSAT (НТВ+)	801, 802, 807, 906, 972, 984, 998
YUXING	904
ZUXEL	874
БИЛЛАЙН	883, 884, 901, 923
ВОЛГАТЕЛЕКОМ	842, 843, 844, 845, 846, 847, 849, 850, 858, 867
ДОМ.RU	820, 905
ДОМОЛИНК	874, 904
МТС	829, 855, 902, 964, 974, 979, 980, 989, 993
НЕИЗВЕСТНАЯ МАРКА	834, 835, 842, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 903, 904, 937, 938, 939, 940, 944, 945, 969, 971, 978, 996
РОСТЕЛЕКОМ	874, 904, 923, 963, 988, 993
СИГНАЛ	867, 968
ТЕЛЕКАРТА	867, 909, 973
ТЕЛЕЦИФРА	968

Функции кнопок пульта IRC 11 F к TV устройствам

Кнопки пульта IRC 11 F	Код 101		Код 102		Код 103		Код 104		Код 105	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	RANDOM									
AUDIO; NICAM	MONO/AUTO						CH.1/2			
VIDEO; SYS	PAL/SECAM		■; VIDEO		PAL/SECAM		SPEED		PAL/SECAM	
☐; ZOOM	ROTATE						AUTO TRACKING			
▼; TV	SEARCH		TV		SEARCH				VCP ON; TV	
☐; ↻	PRESET		☐; A/B		PRESET		MEMORY COUNTER			
☐; LOCK	NORMAL		NORM; RESET		AUTO MEMORY		RESET COUNTER			
▲; FAV	STORE						RESET			
○	POWER		○		POWER		POWER		POWER; TV ON	
AV	TV/AV				TV/AV		TV MONI.		VCR	
✳	MUTE		✳		MUTE; NORMAL		MUTE		MUTE	
MENU	BAR SELECT				BAR SELECT		MENU			
EXIT										
▲	TUNING ▲ (0000)		☉+		TUNING ▲		SET ▲			
◀			☉-				TRACKING ▼			
OK	BAND SELECT				BAND SELECT		ENTER			
▶			☉+				TRACKING ▲			
▼	TUNING ▼ (RESET)		☉-		TUNING ▼		SET ▼			
✳; SETUP	AFT				AFT					
♪; TITLE	tone 1/2									
☐; GUIDE	INITIAL		TEXT		TEXT/MIX/TV		TV/CAP/TEXT			
☐	SLEEP		TIME; TEXT CL		BROWSE		PROG.CFM			
☐	LIST		MIX		SLEEP		SLEEP	TIMER REC	SLEEP	
RED; ●	TIME SELECT		-		STATUS					
GREEN; ▮	TIME SET		-		TIME SELECT			REC/OTR		
YELLOW; ◀	○; TIMER		L ▮; TP OFF		TIME SET					
BLUE; ▮			R ▮; TP ON							
☐	QUICK VIEW		☐		QUICK VIEW		QUICK VIEW			
☐	CH CALL				CH CALL		CALL		REPEAT	
VOL -	VOLUME ▼		↘		VOL ▼ (M)		VOLUME ▼		VOLUME -	
VOL +	VOLUME ▲		↗		VOL ▲ (H)		VOLUME ▲		VOLUME +	
CH V; ◀	PAGE +/-; CH ▼		PROGR -; HOLD		CH ▼		CH ▼		P -	
CH A; ▶	PAGE +/-; CH ▲		PROGR +; REVEAL		CH ▲		CH ▲		P +	
±; SAT			10						1*	
CLEAR; X	☐		20		DISPLAY CANCEL		CANCEL		2*	
◀; ●	☐						◀; REW		◀; REW	
▶; i							▶; PLAY		▶; PLAY	
▶; ?	☐				REVEAL		▶; F.FWD		▶; FF	
■; X	HOLD				HOLD		■; STOP		■; STOP	
▮; ⬇	☐				F/T/B		▮; PAUSE/STILL		▮; STILL	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2 ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 11 F к TV устройствам

Кнопки пульта IRC 11 F	Код 106		Код 107		Код 108		Код 109		Код 110	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	FINE TUNING ▲		Ω		SCART RGB	☉+	☐			
AUDIO; NICAM	AUDIO 1/2		A/B; I-II; DUAL		MONO					
VIDEO; SYS	PAL/SECAM		A/B; I-II		SCART VIDEO		VCR			
☐; ZOOM	SEARCH		16:9; ☐	☐			AV O			
▼; TV	FINE TUNING ▼		☐		☐	☉-	☐			
☐; ↻	PRESET		PIP	S; ☐; >>	☐		◇; ☐; M+			
☐; LOCK	NORMAL		→←; NORM; PP	M; MEMO	☐		→←			
▲; FAV	STORE		L/F		☐		AV *			
○	○		○; ST-BY		○		○		POWER	
AV	TV/AV		AV		AV	AV 1-2 CHECK	AV; U/V SAV	F AFC; AV		
✳	MUTE		✳; MUTE		✳		✳		MUTE	
MENU			MENU		M					
EXIT			☐							
▲	☉+		☉+		PK +		☉+			
◀	☉-	☉-; RESET	☉-	☉-	◀		☉-	☉-		
OK	BAR ON/OFF		OK							
▶	☉+	☉+; 0000	☉+	☉+	▶		☉+	☉+		
▼	☉-		☉-		PK -		☉-	☉-		
✳; SETUP			☐		☐		☐			
♪; TITLE	tone 1/2		☐; SPATIAL; MENU	☐; ☐	☐		☐			
☐; GUIDE	PERITEL 1/2		TEXT; ☐	☐; APP	☐		☐			
☐	SLEEP		PK		CAN		☐			
☐			☐	☐; SLEEP	☐		☐			
RED; ●	☉; ▼; LIST		STILL; ☐; ☐		☐; AB; MIX		CH; ☐			
GREEN; ▮	☉; ▲; RANDOM		RED		☉-	☉-	RED			
YELLOW; ◀	☐; STORE		GREEN		☉+	☉+	GREEN			
BLUE; ▮	↘R; ROTATE		YELLOW		☉-	☉-	YELLOW			
☐	CH CALL		BLUE		☉+	☉+	BLUE			
☐			DISPLAY; ☐; OSD	i TOP	CAN +					
VOL -	VOL ▼	☉; ▼; ☐	P/F; P/C	☐	P/C; S+ VHS		P/C		VOLUME -	
VOL +	VOL ▲	☉; ▲; INITIAL	☐; ◀	P/MHz ◀	☐		☐		VOLUME +	
CH V; ◀	PROGRAM ▼		☐; ▶	P/MHz ▶	☐		☐			
CH A; ▶	PROGRAM ▲		CH -; PR -; ▼; LIST	PAG -	P -	PAG -	P -	-1		
±; SAT	-/-; CS		CH +; PR +; ▲	PAG +	P +	PAG +	P +	+1		
CLEAR; X	☐; BAR ON/OFF				-/-		1-		1-	
◀; ●			X		WHITE		2-		2-	
▶; i			☐		☐		☐; ☐	<<		
▶; ?			☐; X		☐; 100; R		☐			
■; X	HOLD; ☐		☐		☐; ☐; ?		☐; ☐	>>		
▮; ⬇	☐		☐; NICCAM		☐		☐			
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2 ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 11 F к TV устройствам

Кнопки пульта IRC 11 F	Код 111		Код 112		Код 113		Код 114		Код 115	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			AUX/INPUT		COLOUR +; ☉ +					
AUDIO; NICAM	MONO/STEREO; 1/2									III
VIDEO; SYS	PAL/SECAM		TV SYSTEM		MODE; P/S					SCALER
☐; ZOOM					SIZE					
▼; TV	☐; TV		TV/SAT		COLOUR -; ☉ -					
☐; ↗					PIP		MEMO			
☐; LOCK	NORMAL		TIME SEL.; ⏮		STILL		NORM			
▲; FAV					FC		> <			
⊖	⊖; STAND BY		STANDBY; ⊖		POWER; ⊖		⊖		⊖; POWER	
AV	TV/AV; AV		TV/VCR; Ⓞ; AUDIO B		TV/VIDEO; TV/AV		AV		TV/AV	
⌘	⌘; MUTE		MUTE; ⌘		MUTE; ⌘		⌘		⌘; MUTE	
MENU			PICTURE SELECT		FUNCT; MENU				MENU	
EXIT									EXIT	
▲	☉ ▲; BRIGHT ▲				FUN+; +; ▲; ZOOM		☉ + ☉ +	☉ + ☉ +	▲	
◀	☉ ▼; CONTR. ▼	☉ ▼; COL. ▼; RESET	CONTR.-; PIC.-; MIN		☉ -; ☉ -		<	☉ - ☉ -	◀	
OK			PICTURE SELECT		PIC SEL; FUNCT		SELE		OK; SELECT	
▶	☉ ▲; CONTR. ▲	☉ ▲; COL. ▲; 0000	CONT.+; PIC.+; HOUR		☉ +; ☉ +		>	☉ + ☉ +	▶	
▼	☉ ▼; BRIGHT ▼				FUN-; -; ▼; -PI-		☉ - ☉ -	☉ - ☉ -	▼	
⌘; SETUP					PIC; SET ON TIME				P.MODE	
♪; TITLE	TONE 1/2				X ON TIME				S.MODE	
☐	☐; TEXT				MIN; MINUTE				TEXT	
GUIDE			TIME SET		HOUR; HR CLOCK		TV/TX			
⊖	SLEEP		SLEEP; ⊖		SLEEP; OFF TIME.; ⊖		R		SLEEP	
☐	☐; MIX		TIMER SELECT				MIX		MIX	
RED; ●	↕ ▼; REV; ☐				1-; 10-		12-27		RED	
GREEN; ▨	↕ ▲; INITIAL				2-		13-28		GREEN	
YELLOW; ▨	↕ ▼; STORE				3-; SCAN		14-29		YELLOW	
BLUE; ▨	↕ ▲; ROTATE				4-; MSG		15-30		BLUE	
☐	☐; Ⓞ; STATUS		DISPLAY; ☐		RECALL; DISPLAY		INDICE		CALL	
☐			CH. REC.; SYS. PRE.		⌘; Q. VIEW; Ⓞ		P/C		RECALL	
VOL -	VOLUME ▼; ▼	☉ ▼; LIST	VOL -; ▼		VOLUME ▼; ▼		▼		VOL -	
VOL +	VOLUME ▲; ▲	☉ ▲; BROW.; RAND.	VOL +; ▲		VOLUME ▲; ▲		▲		VOL +	
CH V; ⏮	PROGR ▼; CH. ▼		CH -; PROG. -		CHANNEL ▼; P -		-		CH -	
CH A; ⏭	PROGR ▲; CH. ▲		CH +; PROG. +		CHANNEL ▲; P +		+		CH +	
⊕; SAT	-		1-		⊕		-/-		-/-	
CLEAR; X	DISPLAY CANC.; ☐		2-		RESET; CANCEL; X		11-26		CANCEL	
⏮; ●	☐		3-				☐		SUBPAGE	
▶; i			4-				☐		INDEX	
▶; ?	☐; REVEAL		5-				?		REVEAL	
▨; X	☐; HOLD				⌘		☐		HOLD	
▨; Ⓞ	☐; F/T/B				ZOOM		☐		SIZE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0/AV		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 11 F к TV устройствам

Кнопки пульта IRC 11 F	Код 116		Код 117		Код 118		Код 119		Код 120	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	→; TUN +		☉ +		S/M; S					
AUDIO; NICAM										
VIDEO; SYS							COLOR SYSTEM		PAL/SECAM	
☐; ZOOM					HP; ⏮→				AUTO TRACKING	
▼; TV	←; TUN -		☉ -		TV; VT					
☐; ↗	MEMO				→; 100		AUTO MEMORY		PRESET	
☐; LOCK	IDEAL				→←		NORMAL		COUNTER RESET	
▲; FAV					⏮				COUNTER MEMOR.	
⊖	OFF		⊖		⊖		POWER		ON/STANDBY	
AV	VCR		TV/AV		AV		TV/AV		TV MONITOR	
⌘	MUTE		⌘		⌘		MUTE		MUTE/NORMAL	
MENU	BAND		MENU		M		MENU		BAR SELECT	
EXIT										
▲	+		☉ +		☉ +		TUNING ▲		FINE TUN. (TRK.) ▲	
◀	AUTO ←		☉ -		☉ -		SET -		SET -	
OK	SELECT				☉ -		ENTER		ENTER	
▶	AUTO →		☉ +		☉ +		SET +		SET +	
▼	-		☉ -		☉ -		TUNING ▼		FINE TUN. (TRK.) ▼	
⌘; SETUP	☉; SELECT		PIC		☉		AFT/SKIP		AFT	
♪; TITLE	AFC-MONO				☉					
☐					☉		TEXT/MIX/TV		PROG. CFM	
GUIDE					☉		BROWSE		CLOCK PROGRAM	
⊖	⊖ OFF; SLEEP		⊖		SLP		SLEEP		SLEEP	TIMER REC
☐					☐		STATUS		INDEX	
RED; ●							RED		REPEAT	REC/OTR
GREEN; ▨							GREEN			
YELLOW; ▨							YELLOW			
BLUE; ▨							BLUE		▨; SLOW	
☐	CALL		☐		↔; STOP; HP		QUICK VIEW		CALL	
☐			☐		C/RCL; C		CH CALL		QUICK VIEW	
VOL -	↔; VOL -		V -		↔		VOL ▼		VOLUME/CONT. ▼	
VOL +	↔; VOL +		V +		↔		VOL ▲		VOLUME/CONT. ▲	
CH V; ⏮	P -		P -		- / P-1		CH/PAGE ▼		CHANNEL ▼	
CH A; ⏭	P +		P +		+ / P+1		CH/PAGE ▲		CHANNEL ▲	
⊕; SAT	1-		-/-		-/-		-/-		SP/LP	
CLEAR; X	2-				1-		DISPLAY CANCEL		CANCEL	
⏮; ●							TIME TEXT		⏮; REW	
▶; i									▶; PLAY	
▶; ?							REVEAL		▶; F.FWD	
▨; X							HOLD		▨; STOP	
▨; Ⓞ							F/T/B		▨; PAUSE/STILL	
1, 2, ... 9, 0	1, 2, ... 9, 0/AV		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 11 F к TV устройствам

Кнопки пульта IRC 11 F	Код 121		Код 122		Код 123		Код 124		Код 125	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD										
AUDIO; NICAM	Ⓞ		AUDIO		AUDIO		PROG CFM			
VIDEO; SYS			SYS; C-SYS; Сист-а		VIDEO		F/T/B			
☐; ZOOM	☐/WIDE		ZOOM		☐		V.PLUS+; PROGR.			
▼; TV	TV; DTV		—		☐		AUTO TRACKING			
☐; ↗	☐; ☐				PP		TV MONITOR			
☐; LOCK	PP		PP; →←; P.MODE		NORMAL		COUN. MEM.;ZERO		→ ←	
▲; FAV							COUNTER RESET			
⊖	⊖		POWER; ⊖		⊖		EJECT			
AV	☐; ☐; SOURCE		TV/AV; TB/AB		☐→		POWER		⊖	
⌘	⌘		MUTE; ⌘		MUTE		INPUT SELECT		AV	
MENU	MENU; ☐; SL; M		MENU; PRESET		PROG		MUTE/NORMAL		⌘	
EXIT							MENU		MENU	
▲	▲		CH +; P +; CH ▲; ▲						▲; CH +	
◀	◀; -		V -; VOL -; ◀						◀; VOL -	
OK	OK	OK	MENU; PRESET				ENTER; HOLD		MENU	
▶	▶; +		V +; VOL +; ▶				→		▶; VOL +	
▼	▼		CH -; P -; CH ▼; ▼				↓		▼; CH -	
⌘; SETUP			PICTURE; PIC		I-II		STATUS			
♪; TITLE	I-II		AUDIO; SOUND		☐		ONE TOUCH.;OTPB			
☐	☐		GAME		☐		TEXT/MIX/TV	ONCE	TEXT	
GUIDE	S		WOOF		ZAP; +		AFT	DAILY		
⊖	SLEEP; ⊖		SLEEP; ZOOM				SLEEP	TIMER REC	SLP	
☐			CLOCK;OPTION; ☐		☐		INDEX	WEEKLY		
RED; ●	RED; SND; ▲				RED; MEMO		RED	REC/OTR	RED; ▲	
GREEN; ►	GREEN; PIC; ▼				GREEN; AUDIO		GREEN		GREEN; ▼	
YELLOW; ◀	YELLOW; FEATURE				YELLOW; VIDEO		YELLOW		YELLOW; →	
BLUE; ►	BLUE; INSTALL				BLUE; EXTRA		BLUE	►; SLOW	BLUE; ←	
☐	INFO; ☐; i		OSD; DISPLAY; CALL		DISPLAY		CALL		DSP	
☐	PP; SWAP		REP; RECALL; ALT.				QUICK VIEW		☐	
VOL -	VOL -; V -		V -; VOL -; ◀				VOLUME ▼	FINE TUN. (TRK) ▼	◀; VOL -	
VOL +	VOL +; V +		V +; VOL +; ▶				VOLUME ▲	FINE TUN. (TRK) ▲	▶; VOL +	
CH V; ◀	P ▼; P -		CH -; P -; CH ▼; ▼		P -		CHANNEL ▼	SET -; -; REVEAL	▼; CH -	
CH ▲; ▶	P ▲; P +		CH +; P +; CH ▲; ▲		P +		CHANNEL ▲	SET +; +; BROWSE	▲; CH +	
+/SAT	-; +; EXIT		-; -; -; -		-; -		SPEED; SP/LP		-/-	
CLEAR; X	☐; X; ☐				☐		CANCEL; DISP CAN.			
◀; ●	☐; ●				☐		◀(REW)	SUB PAGE		
▶; i	☐; i; GUIDE				☐		▶(PLAY)	PAGE INDEX	CALL; UPDATE	
▶; ?	☐; ?				☐		▶▶(F.FWD)	REVEAL	GAME; REVEAL	
■; X	☐; X; ☐				☐		■(STOP)	ENTER; HOLD	HOLD	
■; ⬇	☐; ⬇; ☐/WIDE				☐		■(PAUSE/STILL)	BROWSE	UNDO; SIZE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 11 F к TV устройствам

Кнопки пульта IRC 11 F	Код 126		Код 127		Код 128		Код 129		Код 130	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	FINE TUNING +		FAV +						FAV +	
AUDIO; NICAM			AUDIO; NICAM		NICAM		I/II; AUDIO		NICAM	
VIDEO; SYS	PREVIOUS; SYST.		MEDIA							
☐; ZOOM	10X		ZOOM; REVEAL	ASPECT	ASPECT		P.SIZE		SIZE	
▼; TV	FINE TUNING -		FAV -; REPEAT				◀		FAV -	
☐; ↗			AUTO		CH.LIST		REPEAT			
☐; LOCK	PIC RESET; NORM.		VGA				A-B			
▲; FAV			FAV		FAV		FAV.CH		FAV	
⊖	POWER		⊖; POWER		⊖; POWER		POWER		⊖	
AV	TV/AV		SOURCE	AV	INPUT		SOURCE		SOURCE	
⌘	MUTE		⌘; MUTE		⌘; MUTE		MUTE		MUTE	
MENU	MENU		TV MENU		MENU		MENU		MENU	
EXIT	SKIP		EXIT		EXIT		EXIT		EXIT	
▲	MENU +		▲		▲		▲		▲	
◀	VOL -; -		◀		◀		◀		◀	
OK			ENTER		OK		OK		ENTER	
▶	VOL +; +		▶		▶		▶		▶	
▼	MENU -		▼		▼		▼		▼	
⌘; SETUP	PIC SEL; FUNCTION		P.MODE		P.MODE		P.MODE		PMODE	
♪; TITLE	BAND		S.MODE		S.MODE		S.MODE		SMODE	
☐			TEXT		TEXT		TEXT		TEXT	
GUIDE			HDMI		EPG					
⊖	SLEEP		SLEEP		SLEEP		SLEEP		SLEEP	
☐			SUBTITLE		SUBTITLE		SUBTITLE		SUBTITLE	
RED; ●			RED		RED ●; REC.		RED		RED; ◀	
GREEN; ►			GREEN		GREEN		GREEN		GREEN; ▶	
YELLOW; ◀			YELLOW		YELLOW		YELLOW		YELLOW; ◀	
BLUE; ►			BLUE		BLUE		BLUE		BLUE; ▶	
☐	STATUS; DISPLAY		DISPLAY		DISPLAY		INFO		INDEX	
☐	PREVIOUS; SYST.		☐		☐		JUMP		☐	
VOL -	VOL -; -		VOL -		VOL -		V-		VOL -	
VOL +	VOL +; +		VOL +		VOL +		V+		VOL +	
CH V; ◀	PROG -; MENU -		CH -	◀; INDEX	CH -	◀	P-	◀	CH V	◀
CH ▲; ▶	PROG +; MENU +		CH +	▶; SIZE	CH +	▶	P+	▶	CH ▲	▶
+/SAT			-/-				GOTO		-/-	
CLEAR; X			REPEAT		CANCEL		ROOT			
◀; ●			◀; TEXT	SUBPAGE	◀; SUBPAGE	SUBPAGE	◀		◀	
▶; i			▶	INDEX	▶; TIME SHIFT	INDEX	▶		▶	INDEX
▶; ?			▶▶	REVEAL	▶▶	REVEAL	▶▶		▶▶	
■; X			■; SUBPAGE	HOLD	■; CANCEL	HOLD	■		■	
■; ⬇			■	SIZE	■	SIZE	■		■	SIZE
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 11 F к TV устройствам

Кнопки пульта IRC 11 F	Код 131		Код 132		Код 133	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	▶▶; EPG		▶▶; SUBPAGE		▶▶; NEXT; SUBPAGE	
AUDIO; NICAM	NICAM		AUDIO		A-B; I/II	
VIDEO; SYS					REPEAT	
☐; ZOOM	ASPECT				ZOOM	
▼; TV	◀◀; REVEAL		◀◀; REVEAL		◀◀; PREV.; MIX	
☐; ↻			TV/RADIO		FAV+	
☐; LOCK			FREEZE		FREEZE; ▽	
▲; FAV	FAV		MIX; FAV.LIST		FAV.LIST	
○	○; POWER		○; STANDBY		○; STANDBY	
AV	INPUT		☐; SOURCE		☐; SOURCE	
⌘	⌘; MUTE		⌘; MUTE		⌘; MUTE	
MENU	MENU		☐; MENU		☐; MENU	
EXIT	EXIT		EXIT		EXIT	
▲	▲		▲		▲	
◀	◀		◀		◀	
OK	OK		ENTER		ENTER	
▶	▶		▶		▶	
▼	▼		▼		▼	
*; SETUP	P.MODE		P.MODE		P.MODE	
♪; TITLE	S.MODE		S.MODE		S.MODE; - / -	
☐	TEXT		TXT		TEXT	
GUIDE	EPG		EPG		CH.LIST	
⏻	SLEEP		TIME SHIFT			
☐	SUBTITLE		SIZE; SUBTITLE			
RED; ●	RED	●; REC	RED	●; RECORD	RED	
GREEN; ▶▶	GREEN		GREEN		GREEN	
YELLOW; ◀◀	YELLOW		YELLOW		YELLOW	
BLUE; ▶▶	BLUE		BLUE		BLUE	
☐	DISPLAY		☐; DISPLAY		☐	
☐	☐		☐; RECALL		☐; RECALL	
VOL -	VOL -		VOL -		VOL -	
VOL +	VOL +		VOL +		VOL +	
CH V; ◀◀	CH -	◀◀; REVEAL	CH V	◀◀; REVEAL	CH V	◀◀; PREV.; MIX
CH A; ▶▶	CH +	▶▶; EPG	CH A	▶▶; SUBPAGE	CH A	▶▶; NEXT; SUBPAGE
+; SAT	CH.LIST					
CLEAR; X	CANCEL		CANCEL; AUDIO			
◀◀; ●	◀◀; CANCEL	SUBPAGE	◀◀; INDEX	SUBPAGE	◀◀; FB; REVEAL	SUBPAGE
▶▶; i	▶▶; TIMESHIFT	INDEX	▶▶; TIME SHIFT	INDEX	▶▶; TEXT	INDEX
▶▶; ?	▶▶	REVEAL	▶▶; HOLD	REVEAL	▶▶; FF; HOLD	REVEAL
■; X	■; SIZE	HOLD	■; EPG	HOLD	■; STOP; INDEX	HOLD
■; ⏻	■; TIMESHIFT	SIZE	■; TIME SHIFT	SIZE	■; TEXT	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 11 F к VCR устройствам

Кнопки пульта IRC 11 F	Код 201		Код 202		Код 203		Код 204		Код 205	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	CENTER TRACKING						DVD			
AUDIO; NICAM							AUDIO			
VIDEO; SYS	INPUT SELECT						VCR	PRESET; SYSTEM		
☐; ZOOM	AUTO TRACKING				X2		INDEX SEARCH			
▼; TV	MEMORY						ERASE			
☐; ↻	PRESET						QUICK-FIND			
☐; LOCK	COUNTER RESET		AUTO TRACKING		RESET		AUTO REPEAT			
▲; FAV	EJECT						▲; EJECT			
○	POWER/TIMER REC		POWER		POWER		FUNCTION		POWER	
AV	TV/VCR				VCR		TV/VCR			
⌘					OFF		MUTE	MUTE VPT		
MENU	MENU				PROG		PR.CHECK; MENU	⌘		
EXIT							JOG/SHUTTLE	⌘		
▲	SET +; SET ▲						▲	⌘		
◀	SLOW -; SLOW ▼						◀	⌘		
OK	ENTER				SELECT		B. SELECT; C.SET	-		
▶	SLOW +; SLOW ▲						▶	⌘		
▼	SET -; SET ▼						▼	⌘		
*; SETUP	TV MONITOR				ON		INFO	⌘		
♪; TITLE							TOP MENU	⌘		
☐	AFT				SET	10-26	MONITOR	TIMER REC; T. SET		
GUIDE	PROGRAM				A. DIR.	11-27	TAPE SPEED	TIMER; T-SET		
☐	CLOCK SET	TIMER REC			CLOCK	12-28	SLEEP	ALARM		
☐	CLOCK/COUNTER				CLOCK SET	13-29	CLOCK/COUNTER	TIME SEARCH		
RED; ●	REPEAT	REC/OTR		● REC	REPEAT	● REC	MEMORY COUNTER	● REC; RECORD		
GREEN; ▶▶	SKIP SEARCH				▶	14-30	F ADV	⌘		
YELLOW; ◀◀	CH SKIP				◀◀	15-31	▶	⌘		
BLUE; ▶▶	SLOW				▶▶	16-32	▶▶; SLOW			
☐	INDEX				COUNTER		RECAL.;DISPL.;SEL	CORRECT;ON SCR.		
☐	CALL		REPEAT		☐		P/C	REPEAT	REPEAT	
VOL -	TRACKING -; F.T.▼				▼; ◀◀		VOL -			
VOL +	TRACKING +; F.T.▲				▲; ▶▶		VOL +			
CH V; ◀◀	CHANNEL ▼		TRACKING ▼		P -		CH/SET (TRAC.) -			
CH A; ▶▶	CHANNEL ▲		TRACKING ▲		P +		CH/SET (TRAC.) +			
+; SAT	SPEED; SP/LP				-/-		-/-	+100; +10		
CLEAR; X	CANCEL				CANCEL		CLEAR RESET	RESET ADD/CLEAR		
◀◀; ●	◀◀; REW		◀◀; REW		◀◀(REW)		◀◀; REW		◀◀; REW	
▶▶; i	▶▶; PLAY		▶▶; PLAY		▶▶(PLAY)		▶▶; PLAY		▶▶; PLAY	
▶▶; ?	▶▶; F.FWD		▶▶; F.FWD		▶▶(F.FWD)		▶▶; F.FWD	ALT ?	▶▶; F.FWD	
■; X	■; STOP		STOP		■(STOP)		■; STOP		■; STOP	
■; ⏻	■; PAUSE/STILL		PAUSE/STILL		■(PAUSE)		■; PAUSE/STILL	⏻	■; STILL	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 11 F к VCR устройствам

Кнопки пульта IRC 11 F	Код 206		Код 207	
	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD				
AUDIO ; NICAM				
VIDEO ; SYS				
☐ ; ZOOM				
▼ ; TV				
☐ ; ↗				
☐ ; LOCK				
▲ ; FAV				
○	POWER		POWER	
AV			A	
✳				
MENU				
EXIT				
▲				
◀				
OK				
▶				
▼				
✳ ; SETUP				
♪ ; TITLE				
☐				
GUIDE				
☐				
☐				
RED ; ●		REC		● ; REC
GREEN ; ►				
YELLOW ; ◀				
BLUE ; ►				
☐				
☐	REPEAT			
VOL -				
VOL +				
CH V ; ◀◀				
CH A ; ►►				
± ; SAT			1*	
CLEAR ; X			2*	
◀◀ ; ●	◀◀ SEARCH		◀◀ ; REW	
▶ ; i	▶ ; PLAY		▶ ; PLAY	
▶▶ ; ?	▶▶ SEARCH		▶▶ ; FF	
■ ; X	■		■ ; STOP	
; ⏏			; PAUSE/STILL	
1, 2, ... 9, 0			1, 2, ... 9, A/0	

Функции кнопок пульта IRC 11 F к AUX устройствам

Кнопки пульта IRC 11 F	Код 301		Код 302		Код 303	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD					LANGUAGE	
AUDIO ; NICAM	AUDIO		LANGUAGE		R/L	
VIDEO ; SYS	PLAY MODE		P/N		N/P	
☐ ; ZOOM	ZOOM		ZOOM		ZOOM	
▼ ; TV					KARAOKE	
☐ ; ↗					PSCAN	
☐ ; LOCK	ANGLE		ANGLE		EQ	
▲ ; FAV	OPEN/CLOSE		▲		▲ ; OPEN/CLOSE	
○	○		STANDBY		○ ; POWER	
AV					ANGLE	
✳			MUTE		MUTE	
MENU	MENU		MENU		MENU	
EXIT	RETURN				RETURN	
▲	▲		↑		▲	#
◀	◀		←		◀	
OK	SELECT		ENTER		ENTER	h
▶	▶		→		▶	
▼	▼		↓		▼	b
✳ ; SETUP	SET UP		SETUP		SETUP	
♪ ; TITLE	TITLE		TITLE		TITLE	
☐	MARKER		PBC		PBC	
GUIDE			PROG		PROG	
☐					TIME	
☐	SUB TITLE		SUBTITLE		SUBTITLE	
RED ; ●	REPEAT A-B		REPEAT		REPEAT	
GREEN ; ►			STEP		STEP	
YELLOW ; ◀	SLOW ◀		A-B		A-B	
BLUE ; ►	SLOW ►		SLOW		SLOW	
☐	DISPLAY		DISPLAY		OSD	
☐	JUMP		GOTO		GOTO	
VOL -			VOL -		VOL -	
VOL +			VOL +		VOL +	
CH V ; ◀◀	◀◀ SKIP		◀◀		◀◀	
CH A ; ►►	►► SKIP		►►		►►	
± ; SAT			10+		10+	
CLEAR ; X	CLEAR		CLEAR		CLEAR	
◀◀ ; ●	◀◀ SEARCH		◀◀		◀◀	
▶ ; i	▶ ; PLAY		▶ ; PLAY		▶	
▶▶ ; ?	▶▶ SEARCH		▶▶		▶▶	
■ ; X	■ ; STOP		STOP		■	
; ⏏	; PAUSE/STILL		; PAUSE		▶	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 10		1, 2, ... 9, 10	

Функции кнопок пульта IRC 11 F к TV устройствам

Кнопки пульта IRC 11 F	Коды 501-799	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM		
VIDEO ; SYS		
☐ ; ZOOM		
▼ ; TV		
⏪ ; ↵		
☒ ; LOCK		
▲ ; FAV		
⏻	POWER ; ⏻	
AV	TV/VIDEO ; TV/AV	
⌘	MUTE ; ⌘	
MENU		
EXIT		
▲		
◀		
OK		
▶		
▼		
⌘ ; SETUP		
🎵 ; TITLE		
☐		
GUIDE		
⏻		
☐		
RED ; ●		
GREEN ; ▬		
YELLOW ; ◀		
BLUE ; ▶		
☐		
☐		
VOL -	VOLUME ▼ ; ▬-	
VOL +	VOLUME ▲ ; ▬+	
CH V ; ◀◀	CHANNEL ▼ ; P -	
CH ▲ ; ▶▶	CHANNEL ▲ ; P +	
⊕ ; SAT		
CLEAR ; X		
◀◀ ; ●		
▶▶ ; i		
▶▶ ; ?		
■ ; X		
⏻ ; ⏻		
1, 2, ... 9, 0	1, 2, ... 9, 0	

Для просмотра функций кнопок баз кодов 8 и 9 (SAT, STB, DVB устройства) перейдите по следующей ссылке <http://www.pult-irc.ru/files/manual/SatCodesForIrcF.pdf>