

Приложение IRC 13 F (версия 18.04.23 03:16)

Модели оригинальных пультов и соответствующие им коды пульта IRC приведены в разделе "Коды пульта IRC 13 F".

Функции всех кнопок для каждого кода пульта IRC можно узнать из таблиц данного приложения.

Пульт IRC может иметь дополнительные функции (если указаны в столбце "Доп. функция"). Доступ к ним осуществляется при помощи кнопки SHIFT (см. в инструкции рис.1, п.16). Для доступа к дополнительным функциям нажмите кнопку SHIFT и, удерживая её нажатой, нажмите ту кнопку, дополнительная функция которой Вам необходима.

После первой установки батареек

Кнопка устройства пульта IRC	Код пульта IRC
TV	110
VCR	111
AUX	112
SAT	101

Кнопка устройства пульта IRC	Код пульта IRC
SHIFT + TV*	102
SHIFT + VCR*	103
SHIFT + AUX*	106
SHIFT + SAT*	107

* Нажмите кнопку SHIFT и, удерживая её нажатой, нажмите и отпустите одну из кнопок пульта: TV, VCR, AUX или SAT.

Доступные коды пульта IRC 13 F

Номер базы кодов (диапазон кодов)	Устройство базы кодов	Доступные коды пульта IRC
1 (101-199)	TV	101 - 127
2 (201-299)	VCR	201 - 207
3 (301-399)	AUX	301 - 323
4 (401-499)	SAT	401 - 402
5 (501-599)	TV	501 - 599
6 (601-699)	TV	601 - 699
7 (701-799)	TV	701 - 760
8 (801-899)	SAT	801 - 899
9 (901-999)	SAT	901 - 999

Коды пульта IRC 13 F

Коды к устройствам марки PHILIPS

Модель*	Устр-во	Код
2422 549 01911	TV	110
2422 549 01932	AUX, CD, DVD	312
2422 549 01933	AUX, CD, DVD	312
2422 549 02188	AUX, CD, DVD	312
2422 549 02344	TV	113
2422 549 02362	TV	113
2422 549 02454	TV	113
2422 549 90301	TV	124
2422 549 90467	TV	124
2422 549 90477	TV	124
2422 5490 2543	TV	124
313924872121 (DVD)	AUX, CD, DVD	314
313924872121 (TV)	TV	101,102
313925870051 (AUX)	AUX, CD, DVD	305
313925870051 (DISC)	AUX, CD, DVD	303
313925870051 (TUNER)	AUX, CD, DVD	304
313925870051 (TV1)	TV	110
313925870051 (TV2)	TV	101,102
3140	TV	123
5800	TV	103
9965 100 18965 (DISC)	AUX, CD, DVD	311
9965 100 18965 (MP3 LINK)	AUX, CD, DVD	309
9965 100 18965 (TUN)	AUX, CD, DVD	323
9965 100 18965 (USB)	AUX, CD, DVD	316
9965 100 21067	AUX, CD, DVD	315
BNE700F01011	TV/VCR	109
CD-04 (AUX)	AUX, CD, DVD	309
CD-04 (DISC)	AUX, CD, DVD	317
CD-04 (TUNER)	AUX, CD, DVD	308
CD-04 (USB)	AUX, CD, DVD	316
CD-05 (DISC)	AUX, CD, DVD	317
CD-05 (MP3-LINK)	AUX, CD, DVD	309
CD-05 (TUNER)	AUX, CD, DVD	308
CD-05 (USB)	AUX, CD, DVD	316
CDRC22APD67A-L001 (CD)	AUX, CD, DVD	311
CDRC22APD67A-L001 (TUNER)	AUX, CD, DVD	308
CDRC22APD67A-L001 (USB)	AUX, CD, DVD	316
COMBI	TV/VCR	106
DVD-01	AUX, CD, DVD	301
DVD-05	AUX, CD, DVD	321
DVD-VCR	AUX, CD, DVD	301
F35510	TV	105
FWM185	AUX, CD, DVD	311
G0046GESA	VCR	201
G0263GESA	VCR	201

Модель	Устр-во	Код
HOF13L798GPD13	TV	126
HOF16H303GPD24	TV	126
HT120414	TV	124
HT120725	TV	124
IR-RMC	HOME APPLIANCES	207
MAGNAVOX (TV)	TV	122
MAGNAVOX (VCR)	VCR	206
MC-1275 (AUX)	AUX, CD, DVD	309
MC-1275 (CD)	AUX, CD, DVD	311
MC-1275 (TUNER)	AUX, CD, DVD	308
MC-1275 (USB)	AUX, CD, DVD	316
N9044PD (TV)	TV	103
N9044PD (VCR)	VCR	201
RC0301	TV	101,102
RC-0301	TV	103
RC0764	TV	101,102
RC0770	TV	101,102
RC1123333	TV/VCR	108
RC1153038	TV	116
RC1463801	AUX, CD, DVD	310
RC1553802 (AUX)	AUX, CD, DVD	308
RC1553802 (DVD)	AUX, CD, DVD	301
RC1553802 (TV)	TV	111
RC1683701 (AUX)	AUX, CD, DVD	308
RC1683701 (DVD)	AUX, CD, DVD	301
RC1683701 (TV)	TV	112
RC1683801	TV	111
RC1683803	TV	111
RC19002	TV	110
RC19036002 (ACC)	AUX, CD, DVD	303
RC19036002 (TV)	TV	114
RC19036002 (VCR)	VCR	201
RC19039001	TV	114
RC19041001 (ACC)	AUX, CD, DVD	303
RC19041001 (TV)	TV	114
RC19041001 (VCR)	VCR	201
RC19042001	TV	114
RC19042002	TV	110
RC19042004 (TV)	TV	101,102
RC19042004 (VCR)	VCR	201
RC19042011 (DVD)	AUX, CD, DVD	301
RC19042011 (TV)	TV	110
RC19046006	AUX, CD, DVD	306
RC1913300101	AUX, CD, DVD	301
RC19137005	AUX, CD, DVD	318

Модель	Устр-во	Код
RC19241001 (AUX)	AUX, CD, DVD	322
RC19241001 (DISC)	AUX, CD, DVD	321
RC19241001 (TUNER)	AUX, CD, DVD	323
RC19241001 (TV/AV)	TV	101,102
RC19245013 (AUX/DI)	AUX, CD, DVD	309
RC19245013 (DISC)	AUX, CD, DVD	301
RC19245013 (TUNER)	AUX, CD, DVD	308
RC19245013 (TV/AV)	TV	101,102
RC19245014 (DVD)	AUX, CD, DVD	301
RC19245014 (VCR)	VCR	205
RC19245015 (AUX)	AUX, CD, DVD	309
RC19245015 (DISC)	AUX, CD, DVD	301
RC19245015 (TUNER)	AUX, CD, DVD	308
RC19245015 (TV)	TV	101,102
RC19335001	TV	114
RC19335004	TV	114
RC19335018	TV	117
RC19335019	TV	111
RC19335024	TV	111
RC2001	TV	101,102
RC2006	TV	101,102
RC2023601	TV	112
RC2023615	TV	111
RC2033 (DVD)	AUX, CD, DVD	301
RC2033 (TV)	TV	110
RC2034301	TV	112
RC2036 (AMP)	AUX, CD, DVD	313
RC2036 (CD)	AUX, CD, DVD	311
RC2036 (DVD)	AUX, CD, DVD	301
RC2036 (TV)	TV	101,102
RC2036 (VCR)	VCR	204
RC2037	TV	115
RC2048 (DVD)	AUX, CD, DVD	301
RC2048 (TV)	TV	110
RC2056	AUX, CD, DVD	302
RC2062 (DVD)	AUX, CD, DVD	301
RC2062 (TV)	TV	110
RC2080 (DVD)	AUX, CD, DVD	301
RC2080 (TV)	TV	110
RC-20A	TV	118
RC-21	TV	104
RC2143801	TV	110
RC-21A	TV	104
RC25109 (TV)	TV	101,102
RC25109 (VCR)	VCR	205

Модель	Устр-во	Код
RC2533	TV	107
RC2543 (TV)	TV	107
RC2543 (VCR)	VCR	205
RC2560-01	AUX, CD, DVD	301
RC2563-01 (DVD)	AUX, CD, DVD	301
RC2563-01 (TV)	TV	107
RC2563-01 (VCR)	VCR	205
RC2592	TV	110
RC2683203	TV	124
RC-2802	AUX, CD, DVD	320
RC2813802	TV	124
RC282603-01	TV	101,102
RC282605	TV	101,102
RC2K16	AUX, CD, DVD	301
RC-3004	TV	105
RC3154602	TV	126
RC4301 (DVD)	AUX, CD, DVD	301
RC4301 (TV)	TV	110
RC4310 (TV)	TV	110
RC4330	TV	111
RC4337 (DVD)	AUX, CD, DVD	301
RC4337 (TV)	TV	110
RC4344 (TV)	TV	110
RC4361 (AMP)	AUX, CD, DVD	308
RC4361 (DVD)	AUX, CD, DVD	301
RC4361 (TV)	TV	110
RC4361 (VCR)	VCR	204
RC4401 (AUX)	AUX, CD, DVD	311
RC4401 (DVD)	AUX, CD, DVD	301
RC4401 (STB)	SAT, STB, DVB	401
RC4401 (TV)	TV	110
RC4401 (VCR)	VCR	203
RC4404 (AUX)	AUX, CD, DVD	311
RC4404 (DVD)	AUX, CD, DVD	301
RC4404 (STB)	SAT, STB, DVB	401
RC4404 (TV)	TV	110
RC4404 (VCR)	VCR	203
RC4450	TV	110
RC4491R	TV	113
RC4492	TV	113
RC4495	TV	113
RC4500	TV	124
RC5	TV	103
RC-500	TV	103

* По каталогу «IRC»

Коды пульта IRC 13 F

Коды к TV, VCR, AUX, SAT устройствам марки PHILIPS

Модель	Устр-во	Код
RC5001	TV	103
RC5002	TV	103
RC5004	TV	103
RC5050	TV	103
RC5102	TV	103
RC5121	TV	103
RC5140	TV	103
RC5141	TV	103
RC5150	TV	103
RC5151	TV	103
RC5154	TV	103
RC5171	TV	103
RC5172	TV	103
RC5176	TV	103
RC5177	TV	103
RC5201	TV	103
RC5203	TV	103
RC5204	TV	103
RC5205	TV	103
RC5240	TV	103
RC5241	TV	103
RC5242	TV	103
RC5249	TV	103
RC5250	TV	103
RC5260	TV	103
RC5267	TV	103
RC5268	TV	103
RC5274	TV	103
RC5275	TV	103
RC5276	TV	103
RC5300	TV	103
RC5301	TV	103
RC5302	TV	103
RC5310	TV	103
RC5320	TV	103
RC5325	TV	103
RC-5330	AUX, CD, DVD	319
RC5331	TV	103
RC5336	TV	103
RC5349	TV	103
RC5350	TV	103
RC5351	TV	103
RC5352	TV	103
RC5353	TV	103
RC5354	TV	103

Модель	Устр-во	Код
RC5355	TV	103
RC5356	TV	103
RC5357	TV	103
RC5358	TV	103
RC5360	TV	103
RC-5360	AUX, CD, DVD	312
RC5365	TV	103
RC5368	TV	103
RC5370	TV	103
RC5371	TV	103
RC5372	TV	103
RC5373	TV	103
RC5374	TV	103
RC5375	TV	103
RC5376	TV	103
RC5380	TV	103
RC5383	TV	103
RC5390	TV	103
RC5391	TV	103
RC5392	TV	103
RC5393	TV	103
RC5410	TV	103
RC5420	TV	103
RC5460	TV	103
RC5461	TV	103
RC5466	TV	103
RC5469	TV	103
RC5470	TV	103
RC5471	TV	103
RC5525	TV	103
RC5526	TV	103
RC5527	TV	103
RC5531	TV	103
RC5536	TV	103
RC5537	TV	103
RC5538	TV	103
RC5540	TV	103
RC5541	TV	103
RC5542	TV	103
RC5543	TV	103
RC5545	TV	103
RC5561	TV	103
RC5576	TV	103
RC5601	TV	103
RC5610	TV	103

Модель	Устр-во	Код
RC-5610	AUX, CD, DVD	312
RC5611	TV	103
RC5612	TV	103
RC5701	TV	103
RC5801	TV	103
RC5802	TV	103
RC5901	TV	103
RC5902	TV	103
RC5903	TV	103
RC5904	TV	103
RC5905	TV	103
RC5907	TV	103
RC5908	TV	103
RC5910	TV	101,102
RC-5910	AUX, CD, DVD	320
RC5913	TV	103
RC5914	TV	101,102
RC5915	TV	101,102
RC5916	TV	103
RC5917	TV	103
RC5918	TV	101,102
RC5920	TV	101,102
RC5930	TV	101,102
RC5931	TV	101,102
RC5942	TV	103
RC5991	TV	103
RC5992	TV	103
RC5993	TV	103
RC5995	TV	103
RC6007	TV	101,102
RC6008N	TV	103
RC6401	TV	101,102
RC6403	TV	101,102
RC6404	TV	101,102
RC6411	TV	101,102
RC6412	TV	101,102
RC6413	TV	101,102
RC6414	TV	101,102
RC6415	TV	101,102
RC6416	TV	101,102
RC6441	TV	101,102
RC6502	TV	101,102
RC6511	TV	101,102
RC6512	TV	101,102
RC6513	TV	101,102

Модель	Устр-во	Код
RC6802	TV	103
RC6804	TV	103
RC6805	TV	103
RC6902	TV	103
RC6932	TV	101,102
RC6940	TV	103
RC7101	TV	101,102
RC7102	TV	101,102
RC7103	TV	101,102
RC7104	TV	101,102
RC7111	TV	101,102
RC7112	TV	101,102
RC7113	TV	101,102
RC7114	TV	101,102
RC7115	TV	101,102
RC7116	TV	101,102
RC7117	TV	101,102
RC7118	TV	101,102
RC7131	TV	101,102
RC7132	TV	101,102
RC7133	TV	101,102
RC7134	TV	101,102
RC7135	TV	101,102
RC7136	TV	101,102
RC7137	TV	101,102
RC7138	TV	101,102
RC7141	TV	101,102
RC7320	TV	101,102
RC7403	TV	101,102
RC7421	TV	101,102
RC7500	TV	101,102
RC7501	TV	101,102
RC7502	TV	101,102
RC7503	TV	101,102
RC7507	TV	101,102
RC7512	TV	101,102
RC7535	TV	101,102
RC7540	TV	101,102
RC7801	TV	103
RC7802	TV	103
RC7805	TV	103
RC7807	TV	103
RC7809	TV	103
RC7812	TV	103
RC7815	TV	103

Модель	Устр-во	Код
RC7848	TV	101,102
RC7875	TV	103
RC7940	TV	103
RC7944	TV	103
RC7952	TV	101,102
RC7953	TV	101,102
RC7954	TV	101,102
RC8101	TV	101,102
RC8105	TV	101,102
RC8154	TV	103
RC8201	TV	101,102
RC8205	TV	101,102
RC9010	TV	103
RC9020	TV	103
RC903	TV	103
RC9030	TV	103
RC9031	TV	103
RC9032	TV	101,102
RC9041	TV	103
RC9050	TV	103
RC9051	TV	101,102
RC9055	TV	101,102
RC9057	TV	101,102
RC905X	TV	101,102
RC9060	TV	103
RC9067	TV	101,102
RC9070	TV	101,102
RC9071	TV	101,102
RC9073	TV	101,102
RC9076	TV	101,102
RC9078	TV	103
RC9102	TV	103
RC9131	TV	103
RC9133	TV	103
RCLE011	TV	114
RCLE012	TV	114
RH6622/01	TV	101,102
RH6620/01	TV	101,102
RT102	VCR	201
RT200	VCR	201
RT202	VCR	201
RT204 (TV)	TV	101,102
RT204 (VCR)	VCR	201
RT241	VCR	201
RT267	VCR	201

Модель	Устр-во	Код
RT352	TV/VCR	109
RT410	VCR	201
RT415	VCR	201
RT442-53	VCR	201
RT5994	VCR	201
RT712	TV/VCR	108
RT721	TV/VCR	109
RT760	TV/VCR	106
RT765	TV/VCR	106
RT770-104	TV/VCR	108
RT787	TV/VCR	106
RT790-101	TV/VCR	108
RT790-201	TV/VCR	108
RT7905 (VCR)	VCR	201
RT796	TV/VCR	106
RT797	TV/VCR	106
SAT-01	SAT, STB, DVB	402
SF217	TV	110
SF224	AUX, CD, DVD	315
SF224-1	AUX, CD, DVD	312
SF253	TV	113
SRP2008B	TV	127
STV521	TV	103
SW-0145	TV	119
SW-0145A	TV	125
T-21K8	TV	120
TC4829-01	AUX, CD, DVD	307
TV-01	TV	103
TV-02	TV	121
TV-03	TV	103
TV-06	TV	103
TV-VCR-01 (TV)	TV	103
TV-VCR-01 (VCR)	VCR	206
TV-VCR-02	TV/VCR	109
U25P4 (TV)	TV	103
U25P4 (VCR)	VCR	201
VCR-09	VCR	202

Коды к TV устройствам различных марок

Марка	Код
AEG	544
AIWA	502, 503, 523, 528, 579, 634, 678, 710, 712, 716
AKAI	501, 503, 512, 516, 520, 522, 524, 525, 537, 538, 540, 545, 546, 547, 550, 571, 572, 582, 583, 584, 585, 598, 608, 613, 626, 652, 673, 691, 704, 722, 731
AKIRA	511, 514, 516, 524, 525, 537, 538, 541, 545, 547, 556, 577, 586, 594, 597, 598, 601, 623, 626, 629, 631, 649, 666, 680, 689, 690, 693, 717, 739
AMCOL	501, 525, 545, 747
ANITECH	501, 525, 726
ATLANTA	501, 751
AVEST	537, 538, 539
BANG & OLUFSEN	728, 737
BBK	522, 551, 594, 597, 684, 701
BEKO	525, 530, 535, 559, 723, 742
BIGSTON	501, 503
BLAUPUNKT	512
BORK	525, 547, 646
BRAND	711
BROKSONIC	501
CAMERON	550, 567, 675, 697, 702
CASIO	529, 705, 706
CHANGHONG	516, 642
CLATRONIC	501
CONTEC	501, 603, 604, 613
CORTLAND	644
CROWN	501, 503, 511, 524, 525, 530, 571
DAEWOO	501, 508, 518, 520, 525, 526, 536, 538, 539, 546, 565, 571, 576, 598, 613, 685, 687, 692
DARTLAND	501
DAYTRON	501
DIGITAL	547
DISTAR	562, 616
DNS	596, 702, 708
DUAL	746
ELEKTA	501, 503, 520, 525, 527, 615
ELEKTRONIKA	583
ELENBERG	538, 545, 550, 565, 567, 579, 581, 644, 655, 676, 683, 717
EPLUTUS	537, 644, 677, 682, 697, 724
ERC	537, 631
ERISSON	511, 514, 516, 525, 526, 537, 538, 541, 550, 556, 561, 568, 586, 596, 599, 623, 626, 629, 631, 711, 712, 714, 739, 747
EVGO	538, 540, 630
FINLUX	501, 511, 583, 589, 608, 732, 758
FUJITSU	544, 573
FUNAI	501, 502, 503, 504, 505, 525, 537, 538, 581, 603
FUSION	596, 642, 705, 706
GBS	501, 520, 525, 571, 583
GENERAL	537, 556
GOLD STAR - LG	501, 512, 518, 525, 527, 559, 570, 583, 584, 589, 609, 613, 642, 706, 742, 750
GRUNDIG	501, 512, 525, 606, 662, 718, 719, 733
HAIER	518, 526, 561, 574, 657, 667, 669, 707
HAPPY	501
HCM	501, 525
HELIX	701, 702
HIL	503
HITACHI	501, 515, 518, 522, 525, 537, 544, 548, 554, 578, 584, 587, 588, 604, 613, 640, 729, 749
HORIZONT	525, 540, 545, 550, 559, 583, 672
HPC	546
HYUNDAI	516, 522, 525, 526, 537, 540, 541, 546, 547, 550, 556, 580, 596, 597, 599, 626, 642, 650, 655, 705, 711, 714, 717, 760
INNO-HIT	501, 525, 571
IRBIS	596, 714
IVA (MBA)	537, 561, 637
IZUMI	516, 537, 596, 663, 691, 695, 705, 711
JINLIPI	537, 637
JVC	513, 515, 593, 604, 727
KAMACROWN	571
KANSAI	501, 525
KENSTAR	516
KITT	613, 726
KNEISSEL	753
KONKA	560, 581, 616, 717
LOEWE	542, 709, 744
METZ	745
mitsubishi	501, 520, 522, 525, 604, 611, 722, 728, 744
MIYOTA	537, 644, 656
MTC	501, 583
MULTITECH	501
MYSTERY	516, 537, 597, 642, 650, 653, 701, 702
NASH	537
NEC	501, 517, 520, 526, 552, 604, 625, 722
NESCO	501, 525
NOKIA	519, 584, 610, 614, 616, 740, 746
NOVA	501, 616, 638
NOVEX	516, 546, 599
NTT	759
OMEGA	501, 571
ONIDA	513
ONIKS	516, 525, 537, 545, 546, 547
ONWA	524, 525
ORBITA	635
ORION	501, 503, 506, 507, 509, 516, 525, 528, 537, 591, 603, 617, 619, 627, 641, 643, 664, 715, 720, 722, 729, 746
ORSON	526, 537
PANASONIC	512, 531, 532, 752
PHILIPS	501, 511, 524, 525, 540, 549, 628, 639, 707, 748
PHOENIX	613
PHOENIX GOLD	708
PIONEER	555, 566, 575, 647, 666
PIXELVIEW	525
PLANTRON	735
POLAR	525, 526, 537, 538, 540, 543, 547, 581, 596, 599, 663, 664, 683, 703, 711, 717
POLAROID	525
POWER VISION	501
PRESTIGIO	564, 656

Коды к TV устройствам различных марок

Марка	Код
PRIMA	522, 547
PROLOGY	653, 655
RADUGA	525, 545, 569, 583, 743
RAINFORD	525, 537, 544, 545
RECOR	511, 525
REKORD	520, 525, 526, 537, 538, 539, 545, 547, 725, 736, 743, 747
RFT	535, 728
ROADSTAR	501, 508, 525, 571
ROLSEN	503, 516, 525, 537, 538, 540, 543, 546, 564, 576, 592, 594, 596, 649, 656, 669, 684, 714
ROVERSCAN	662
RUBIN	504, 516, 525, 537, 546, 583, 619, 665, 714
SABA	510, 521, 602, 756
SALORA	584
SAMSUNG	501, 525, 526, 529, 563, 580, 595, 608, 612, 613, 622, 641, 645, 688, 723, 741
SANSUI	524, 525, 538, 556, 695
SANYO	501, 519, 522, 525, 530, 540, 550, 558, 604, 608, 610, 618, 621, 696, 722, 730, 734, 738
SATELLITE	616
SCARLETT	541, 545
SCHNEIDER	525, 540, 571
SELECO	736
SETRO	520
SHARP	526, 544, 548, 604, 707, 721
SHERION	616
SHIVAKI	501, 503, 508, 516, 518, 520, 525, 526, 527, 536, 538, 539, 540, 545, 546, 547, 550, 556, 580, 583, 585, 596, 599, 609, 619, 630, 632, 635, 636, 643, 644, 664, 681, 694, 743
SIEMENS	512, 525, 660, 726, 734
SIESTA	501, 537, 637
SILELIS	613
SILVER	633
SITRONICS	503, 516, 525, 537, 538, 540, 543, 545, 594, 626, 629, 661, 671, 672, 674, 679, 680, 686
SOKOL	516, 525, 547, 635
SONY	533, 604, 659, 722
SPEKTR	525, 538, 668
START	525, 537, 545, 546, 547
STASSFURT	535, 618
STINOL	525
SUPER	537, 561, 644, 653, 654, 655, 666, 677, 682, 724, 754
SUPRA	501, 508, 516, 518, 520, 525, 527, 529, 536, 537, 541, 563, 579, 580, 596, 597, 612, 643, 687, 690, 705, 706, 712, 713
SUZUKI	516, 556
TCL	538, 540
TECHNO	501, 525, 538, 544, 546, 556, 568, 579, 596, 599, 644, 664, 703
TECKTON	522, 582, 601, 669, 670
TELEFUNKEN	510, 521, 590, 602, 605, 708, 756, 757
TELEVISION	501, 525, 616
THOMSON	509, 510, 521, 550, 579, 602, 624, 642, 702, 756
TOSHIBA	516, 553, 604, 651, 699, 744
TRONY	516, 525, 537, 538, 550
TVT	511, 525, 530, 535, 538, 583, 586, 620, 723, 742
UNITED	525
VARTA	642
VESTEL	525, 544, 556, 583, 619
VIEWSONIC	557, 698
VITA	547
VITEK	537, 650
VITYAS	525
VOLNA (ВОЛНА)	635
VR	516, 537, 702, 714
WALTHAM	503, 509, 511, 583, 584, 607, 613, 729
XORO	522, 526, 545
НЕИЗВЕСТНАЯ МАРКА	546, 574, 596, 648, 656, 666, 711, 755

Коды к SAT устройствам различных марок

Марка	Код
AIR TONE	968
ALFA GOLD	828
AMINO (СТРИМ)	829, 902
ARION	835
ASTON	811
BBK	931
BIG SAT	839, 840, 903, 936
BIG STAR	965
CADENA	958, 962
CONTINENT	886, 975
COSHIP	855
DAEWOO	872
D-COLOR	946
DELTA SYSTEMS	985
DIVISAT	957, 958
D-LINK	923
DNS	968
DR.HD	983
DRE (GENERAL SATELLITE)	804, 868, 888, 907, 933, 954
DREAM	819
DUNE	927, 934
ECHOSPACE	862
ECHOSTAR	808, 809, 822
ELTEX	987
EUROSKY	840, 880
EUROSTAR	863
EUSTON	825
EVO	965
GALAXY INNOVATIONS	878, 881, 908, 911, 912, 917, 924
GLOBALTEQ	833
GLOBO	909, 915, 925, 935, 945, 956, 973, 999
GOLD STAR - LG	871
GOLDEN INTERSTAR	821, 841, 879, 918
GOLDEN MEDIA	847, 912
GOLDMASTER	911
HITACHI	824, 832
HIVION	929
HOME	968
HOMECAST (ВОЛЯ)	820, 831, 836
HUMAX	803, 804, 823, 848, 860, 861, 905, 949
HYUNDAI	968
ID DIGITAL	804
INTEK	984
KAON	820
KOSMOS	855, 856
LANS	970
LOCUS	946
LUMAX	852, 873, 907, 913, 965, 994
MAG	988
MEDIA COM	825
MOTOROLA	883, 884, 901
MYSTERY	910, 997
NDS	814
NEXT	864
NOKIA	813
NOT	941
ONLIME	905
OPENBOX	827, 835, 869, 870, 911, 990, 991
OPENTECH	972
OPENTEL	865
ORBITA	946, 995
ORIEL	887, 926, 941, 948, 955, 986
PACE	801, 932, 953
PATIX DIGITAL	992
PAUXIS	842, 859
PHILIPS	857, 899
PIONEER	851
POLAR	858
REFLECT	959
RIKOR	916, 947
ROLSEN	930, 941, 942, 961
SAGEMCOM	906
SAMSUNG	803, 810, 812, 854
SEG	818
SEZAM	882
SKY VISION	952, 966, 977, 982
SKYMASTER	830
SKYWAY	911
SKYWORTH	989
STAR	833
STAR TRACK	826, 835, 943
STARNET	885
STRONG	805, 806, 815, 816, 817, 828, 830, 914
SUNNIWELL	875
SUPERBOX	903
SUPERMAX	821, 866, 880, 924
SUPRA	950, 960, 962
TECHNOSAT	852, 853
TEL-ANT	960
TELEFUNKEN	961, 968
TESLER	926
TOP BOX	965
TOPFIELD	837, 838, 877, 891
TOSHIBA	876
TV STAR	967
TVJET	946, 976
VESTEL	820, 824
VU+	919, 920, 921, 922

Коды к SAT устройствам различных марок

Марка	Код
WORLD VISION	821, 928, 951, 952
XSAT (НТВ+)	801, 802, 807, 906, 972, 984, 998
YUXING	904
ZYXEL	874
БИЛАЙН	883, 884, 901, 923
ВОЛГАТЕЛЕКОМ	842, 843, 844, 845, 846, 847, 849, 850, 858, 867
ДОМ.RU	820, 905
ДОМОЛИНК	874, 904
МТС	855, 964, 974, 979, 980, 989, 993
НЕИЗВЕСТНАЯ МАРКА	834, 835, 842, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 903, 904, 937, 938, 939, 940, 944, 945, 969, 971, 978, 996
РОСТЕЛЕКОМ	874, 904, 923, 963
СИГНАЛ	968
ТЕЛЕКАРТА	867, 909, 973
ТЕЛЕЦИФРА	968

Функции кнопок пульта IRC 13 F к TV устройствам

Кнопки пульта IRC 13 F	Код 111		Код 112		Код 113		Код 114		Код 115	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD										
AUDIO; NICAM	MY AUDIO		I-II; []		[] ; INCR.SURR		INCR. SURR.; []		UP PIP CH	
VIDEO; SYS			A/D		[] ; OPTIONS		PIP SOURCE		INCR.SURR.	
[] ; ZOOM	[] ; []		[] ; []		[] ; FORMAT		[]		VCR+/RECORD	
▼; TV					TV		PIP POSITION		SWAP	
[] ; []	[]		[]		[]		ON/OFF		DN PIP CH	
[] ; LOCK	[]		[] ; ACTIVE CTRL		AMBILIGHT		FREEZE		PIP ON/OFF	
▲; FAV			OPTION		MODE (AMBILIGHT)		SWAP		FREEZE	
○	○		○		○		○ ; POWER		OPEN/CLOSE	
AV	AV; []		AV; []		[] ; SOURCE		[] ; AV; []		POWER	
[] ; MUTE	[] ; MUTE		[] ; MUTE		[] ; MUTE		[] ; MUTE		SOURCE	
MENU	MENU		MENU; MENU TV	MENU DIGITAL	[] ; MENU; []		MENU		[] ; MUTE	
EXIT	○		○		DISC MENU		EXIT		MENU	
▲	▲		▲		▲		▲		STATUS/EXIT	
◀	◀		◀		◀		◀		▲	
OK	OK		OK		OK		OK		◀	
▶	▶		▶		▶		▶		▶	
▼	▼		▼		▼		▼		▼	
[] ; SETUP	SMART []		SMART []		[] ; PICTURE		SMART [] ; AUTO P.		PICTURE	
[] ; TITLE	SMART []		SMART []		[] ; SOUND		SMART [] ; AUTO S.		SOUND	
[]	[]		[]		TELETEXT; MHEG		[] ; OK		M.MEDIA	
GUIDE	I-II; []		[] ; EPG		[] ; GUIDE; []		[] ; SLEEP		GUIDE/TV	
○	[] ; OK		[]		CLOCK		I-II		SLEEP TIMER	
[]	[] ; OK		[]		SUBTITLE		RED		POSITION	
RED; ●	RED; TV		RED; []		RED; DEMO	●	GREEN		RED; ITR/RECORD	M-LINK
GREEN; []	GREEN; PC		GREEN; []		GREEN; SCENEA		GREEN	[]	GREEN; H. VIDEO	M-LINK SOURCE
YELLOW; []	YELLOW; []		YELLOW; []		Y.; [] ; SUBTITLE		YELLOW		YELLOW; H. MOVIE	TUNER A-B
BLUE; []	BLUE; HD; []		BLUE		BLUE; AD		BLUE		BLUE; PERSONAL	
[]	[]		[]		[] ; INFO		[] ; EXIT; STATUS		STATUS/EXIT; INFO	
[]	[]		[] ; BACK		[] ; BACK; P/P; PoP		A/CH; []		A/CH	
VOL -	VOL -; []		VOL -		[]		[] ; VOL -		VOL -	
VOL +	VOL +; []		VOL +		[]		[] ; VOL +		VOL +	
CH V; []	P -; CH -		P -		P -	AUREA DOWN	CH -		CH -	
CH A; []	P +; CH +		P +		P +	AUREA UP	CH +		CH +	
[] ; SAT	[] ; BLUE		[] ; TV/RADIO		NET TV		[] ; RADIO		SURF	
CLEAR; X			CANCEL		CANCEL		CC	[]	CC	
[] ; []					[]		[] ; CLOCK		[]	
[] ; i					[]		[]		[]	
[] ; ?	[]		[]		[]		[] ; I-II		[]	
[] ; []	[] ; []		[]		[] ; CANCEL		[] ; A/CH		[]	
[] ; []			[]		[]		[] ; SURF		[]	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 13 F к TV устройствам

Кнопки пульта IRC 13 F	Код 116		Код 117		Код 118		Код 119		Код 120	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD										
AUDIO; NICAM	S.SYS; SOUND SYS		PAY TV +				PC			
VIDEO; SYS	COLOR SYS.		[] ; ALARM ON				DUAL I-II		I/II	
[] ; ZOOM			[]				VIDEO			
▼; TV			PAY TV -				ZOOM			
[] ; []			[] ; ALARM OFF				TV			
[] ; LOCK					NORMAL		AD			
▲; FAV	FAVORITE; SURF						FREEZE		[]	
○	STANDBY; []		○		○		FAV		○	
AV	TV/AV				TV/VCR; TV/AV		○ ; POWER		AV	
[] ; MUTE	MUTE		[]		[] ; []		SOURCE	HDMI	[]	
MENU	MENU; MENU/INS		MENU				[]		[]	
EXIT							MENU/EXIT		MENU	
▲	P + ▲; PRO. ▲		▲		▲		▲		▲	
◀	V - ◀; VOL. ◀		◀		◀		◀		◀	
OK	OK		OK		OK		OK		OK	
▶	V + ▶; VOL. ▶		▶		▶		▶		▶	
▼	P - ▼; PRO. ▼		▼		▼		▼		▼	
[] ; SETUP	PIC.; DEL.; PIC./DEL.		SMART []		PICTURE		[] ; PICTURE		PICTURE	
[] ; TITLE			SMART []				[] ; SOUND		SOUND	
[]	CALENDAR		[] ; TEXT		TEXT; TV/TXT		TELETEXT	MIX	[]	
GUIDE	CAPS						EPG		[]	
○	SLEEP		SLEEP		SLEEP; []		SLEEP		[]	
[]	NOTE; NOTEBOOK				MIX		SUBTITLE		[]	
RED; ●	AT		RED; [] ; ALAR. OFF		RED; R		RED		RED; PICTURE	
GREEN; []	S.EFFECT		GREEN; PAY TV -		GREEN; G		GREEN		GREEN; SOUND	
YELLOW; []	B.E		YELLOW; INFO -		YELLOW; Y		YELLOW		YELLOW	
BLUE; []	SURROUND		BLUE; RADIO -		BLUE; C		BLUE		BLUE	
[]	DISPLAY				DISPLAY; INDEX; []		INFO		OSD	
[]	RECALL; A/CH						PRE CH		A/CH; SURF	
VOL -	V - ◀; VOL. ◀		[]	INFO -	[] ; FLOF		VOL -		VOL -	
VOL +	V + ▶; VOL. ▶		[]	INFO +	[] ; LIST		VOL +		VOL +	
CH V; []	P - ▼; PRO. ▼		TV -	RADIO -	CH ▼ ; PR/Pg -		CH ▼		CH -	
CH A; []	P + ▲; PRO. ▲		TV +	RADIO +	CH ▲ ; PR/Pg +		CH ▲		CH +	
[] ; SAT					10+ ; /--		CH-LIST			
CLEAR; X										
[] ; []					SUB PAGE		SUBPAGE			
[] ; i	GAME				INDEX		INDEX			
[] ; ?					REV		✓ ; REVEAL			
[] ; []					NORMAL ; HOLD		[]		[]	
[] ; []					EXP		SIZE			
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 13 F к TV устройствам

Кнопки пульта IRC 13 F	Код 121		Код 122		Код 123		Код 124		Код 125	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	PC		PIP CH UP		⏪		⏸; ADJUST		HDMI	
AUDIO; NICAM	MPX		INCRD. STEREO		I-II		3D		DUAL I-II	
VIDEO; SYS	WIDE		POSITION		⏩		⏸; OPTIONS; ≡		VIDEO; YPbPr	
⏮; ZOOM	⏮		SWAP		⏮		⏮; FORMAT		ZOOM	
▼; TV	SCART		PIP CH DN		⏮		SMART TV		TV; VIDEO	
⏮; ↗			ON/OFF		⏮	INSTALL	AMBLIGHT		AD; USB	
⏮; LOCK			FREEZE		PP				FREEZE	
▲; FAV			SOURCE						FAV	
⊖	⊖		POWER		⊖		⊖		⊖; POWER	
AV	AV		AV		⏮		⏮; SOURCE		SOURCE	
⏮	MUTE		MUTE		⏮		⏮		⏮	
MENU	MENU		MENU		MENU		⏮		MENU/EXIT	
EXIT	EXIT		STATUS; EXIT		E		EXIT		MENU/EXIT	
▲	▲		▲		ZOOM +		▲		▲	
◀	◀		◀		MENU -		◀		◀	
OK	OK	ENTER			MENU +		OK		OK	
▶	▶		▶		ZOOM -		▶		▶	
▼	▼		▼				▼		▼	
*; SETUP	ENTER		SMART PICTURE		⏮		⏮; TV; ⏮ (HOLD)		⏮; PIC.; VIDEO	
♪; TITLE			SMART SOUND		⏮		≡; LIST		♪; SOUND; AUDIO	
⏮	TTX/MIX		MULTI MEDIA		⏮		TEXT; TELET.; INFO		TELETEXT	MIX
GUIDE			LOCATOR				≡; LIST; Q; FIND; ⏮		EPG	
⊖	SLEEP		SLEEP		⊖				SLEEP	
⏮	SUBTITLE		TUNER A/B		⏮		SUBTITLE; ⏮		SUBTITLE	
RED; ●	RED				RED; A		RED	●	RED	
GREEN; ▯	GREEN				GREEN; B		GREEN; ECO		GREEN	
YELLOW; ◀	YELLOW				YELLOW; C		YELLOW		YELLOW	
BLUE; ▯	BLUE				BLUE; D		BLUE		BLUE	
⏮	DISPLAY		STATUS; EXIT				⏮; INFO		INFO	
⏮	RECALL		A/CH		P<P		⏮; ⏮ (ONCE)		PRE CH	
VOL -	VOL -		VOL -		◀		-		VOL -	
VOL +	VOL +		VOL +		▶		+		VOL +	
CH V; ◀	CH -		CH -		P -		CH -; ◀		CH ▼	
CH A; ▶	CH +		CH +		P +		CH +; ▶		CH ▲	
⏮; SAT			SURF						CH-LIST	
CLEAR; X			CC		X				PC	
◀; ●	SUBPAGE				⏮		◀		SUBPAGE	
▶; i	INDEX						▶		INDEX	
▶; ?	REVEAL				?		▶		✓; REVEAL	
■; X	HOLD				⏮		■		HOLD	
■; ⏮	SIZE				⏮		■		SIZE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 13 F к TV устройствам

Кнопки пульта IRC 13 F	Код 126		Код 127	
	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	★; TOP PICKS			
AUDIO; NICAM	●			
VIDEO; SYS	⏮			
⏮; ZOOM	⏮; FORMAT		⏮	
▼; TV	EXIT ⏮		TV	
⏮; ↗	≡; LIST			
⏮; LOCK	⏮; SEARCH			
▲; FAV	NETFLIX			
⊖	⊖		⊖	
AV	SOURCES; ⏮		AV	
⏮	⏮		⏮	
MENU	⏮		MENU	
EXIT	EXIT ⏮		EXIT	
▲	▲		▲	
◀	◀		◀	
OK	OK		OK	
▶	▶		▶	
▼	▼		▼	
*; SETUP	*; SETUP			
♪; TITLE	≡; OPTION			
⏮	TEXT		⏮	
GUIDE	⏮; TV GUIDE		GUIDE	
⊖	●			
⏮	SUBTITLE			
RED; ●	RED	●	RED	●
GREEN; ▯	GREEN		GREEN	
YELLOW; ◀	YELLOW		YELLOW	
BLUE; ▯	BLUE		BLUE	
⏮	i+; INFO		INFO	
⏮	⏮; BACK		⏮; P<P	
VOL -	◀; ⏮		VOL -	
VOL +	▶; ⏮		VOL +	
CH V; ◀	-; ≡		CH -	
CH A; ▶	+; ≡		CH +	
⏮; SAT	.		⏮	
CLEAR; X	CC			
◀; ●	◀		◀	
▶; i	▶		▶	
▶; ?	▶		▶	
■; X	■		■	
■; ⏮	■		■	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 13 F к VCR устройствам

Кнопки пульта IRC 13 F	Код 201		Код 202		Код 203		Код 204		Код 205	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	DVD	TRACKING ▲	TV CH ▲							
AUDIO; NICAM	AUDIO; ♪		AUDIO						⏪	
VIDEO; SYS	SYSTEM								I-II	
🔍; ZOOM	↔; GO-TO								VCR	
▼; TV	SV/V+	TRACKING ▼	TV CH ▼						SH. VIEW; VIDEO P.	
🔍; 🔍	🔍	CH SEARCH	AS.SEARCH						TV/VCR	
🔒; LOCK	🔒; CH MEMO								SEARCH	
▲; FAV	▲; EJECT		EJECT						MARKER	
⊖	⊖; VCR POWER		⊖ VCR	⊖ TV	⊖		POWER		▲; OPEN/CLOSE	
AV	VCR/TV	VCR	VCR/TV		VTR/TV				⊖; POWER	
🔇	MUTE (TV)								INPUT	
MENU	MENU; DISPLAY		MENU		MENU		MENU		MENU	
EXIT	SKIP; SKIP SEARCH									
▲	▲	VAR. SLOW ▲	▲		↑; P+		▲		▲	
◀	◀ INDEX		◀		←		◀		◀	
OK	SEL; P/C; CH/PRG.; -	→ INDEX	OK/STATUS		OK		OK		OK	
▶	▶	→ INDEX	▶		→		▶		▶	
▼	▼	VAR. SLOW ▼	▼		↓; P-		▼		▼	
✳; SETUP	M; MEMO COUNT.		SMART PICTURE		SELECT					
🔊; TITLE	SP/LP; REC.; SPEED									
🕒	CLOCK	CLOCK							⊖; PROGRAM	
⊖	⊖; MENU		TIMER		TIMER				CLOCK	
🕒	TIMER SET								🕒	
RED; ●	OTR; OTR ●	●; A ●		● REC /OTR	●		●; REC		●	
GREEN; ▶▶	▶▶									
YELLOW; ◀◀	◀◀									
BLUE; ▶▶	▶▶; SLOW	FRAME ADVAN.; ▶▶	STILL/SLOW		▶▶; INDEX					
🔍	🔍; EXIT/STATUS		OK/STATUS		🔍				i; DISPLAY	
🔍	SEL; P/C; CH/PRG.; -	↔	ALT				P◀P; T/C		P◀P	
VOL -	↘	↘ (TV)	TV VOL ▼		←					
VOL +	↗	↗ (TV)	TV VOL ▲		→					
CH V; ◀◀	-; CH ▼		VCR CH ▼	◀◀; SLOW -	↓; P-		CH -		P -	
CH A; ▶▶	+; CH ▲		VCR CH ▲	▶▶; SLOW +	↑; P+		CH +		P +	
±; SAT	-/+; +		SPEED						LP	
CLEAR; X	X; RES.; CLEAR; CAN.		CLEAR		CL; ANNUL				CLEAR	
◀◀; ●	◀◀	🔍	◀; REW		◀◀		◀◀		◀◀	🔍
▶▶; i	▶▶; PLAY	3▶▶; N▶▶; X 2 PLAY	▶; PLAY		▶▶		▶▶; PLAY		▶▶; PLAY	🔍
▶▶; ?	▶▶	🔍	▶▶; FF		▶▶		▶▶		▶▶	🔍
■; ✕	■; STOP; ■		▼; STOP		■		■; STOP		■; STOP	🔍
■; ⏸	■; ⏸; F.ADV	■	STILL/SLOW		■; ARRET IMAGE		■; PAUSE		■; PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 13 F к VCR устройствам

Кнопки пульта IRC 13 F	Код 206		Код 207	
	Функция	Доп. функция	Функция	Доп. функция
▲; DVD				
AUDIO; NICAM	AUDIO			
VIDEO; SYS	SYSTEM			
🔍; ZOOM				
▼; TV				
🔍; 🔍				
🔒; LOCK				
▲; FAV				
⊖	⊖; STANDBY		⊖	
AV				
🔇	MUTE			
MENU	MENU			
EXIT	STATUS/EXIT			
▲	▲			
◀	◀			
OK	MENU			
▶	▶			
▼	▼			
✳; SETUP				
🔊; TITLE				
🕒				
GUIDE				
⊖				
🕒				
RED; ●		●; REC		
GREEN; ▶▶				
YELLOW; ◀◀				
BLUE; ▶▶	SLOW			
🔍	▶▶; INDEX		⊖	
🔍				
VOL -	VOL -; ↘		-	
VOL +	VOL +; ↗		+	
CH V; ◀◀	PROG -; P-		-	
CH A; ▶▶	PROG +; P+		+	
±; SAT				
CLEAR; X	CLEAR			
◀◀; ●	◀◀; REW; ◀			
▶▶; i	▶▶; PLAY; ▲			
▶▶; ?	▶▶; FWD; ▶			
■; ✕	■; STOP; ▼			
■; ⏸	■; STILL			
1, 2, ... 9, 0	1, 2, ... 9, 0			

Функции кнопок пульта IRC 13 F к AUX устройствам

Кнопки пульта IRC 13 F	Код 301		Код 302		Код 303		Код 304		Код 305	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	DISC ; DVD	SHUFFLE	▶ ; NEXT		CD UP SAMP.					
AUDIO ; NICAM	AUDIO	AUDIO DIRECT	AUDIO		AUDIO					
VIDEO ; SYS	MOVIE		MONITOR							
☐ ; ZOOM	ZOOM ; q		q ; ZOOM		ZOOM					
▼ ; TV	PREVIEW ; SCAN	SEARCH	◀ ; PREVIOUS							
☐ ; ↻	☐	SCAN	SCAN							
☐ ; LOCK	F.T.S ; PROGRAM	☐ ; DISC/LOCK			NIGHT					
▲ ; FAV	▲ ; OPEN/CLOSE	ANGLE	✕ ; F.S.S		ANGLE					
○	POWER ; ○		○ ; ON/OFF		○		○		○	
AV										
⌘	MUTE	⌘ ; TV MUTE			⌘ ; MUTE					
MENU	MENU DISC ; MENU	DISC MENU	SYSTEM MENU		MENU SYSTEM		PROGRAM		PROGRAM	
EXIT	RESUME		RETURN		RETURN ; TITLE					
▲	▲	-	▲		▲		▲		▲	
◀	◀	-	◀		◀		◀		◀	
OK	OK	⌘	OK		OK		OK		OK	
▶	▶	-	▶		▶		▶		▶	
▼	▼	-	▼		▼		▼		▼	
⌘ ; SETUP	MENU SYS. ; SET UP	ACTIVE CONTROL	DISC MENU		MENU DISC					
♪ ; TITLE	T ; TITLE	SMART ♪			TITLE					
☐	☐	T-C ; TITLE/CHAP	☐ ; ANGLE		PROGRAM					
GUIDE	PBC ON/OFF	SOUND MODE	DIM		DIM					
☐	☐	TIME SEARCH	TIMER							
☐	SUBTITLE ; ☐	☐	☐ ; SUBTITLE		SUBTITLE					
RED ; ●	REC	INSTANT ; ●	REPEAT	● ; REC/OTR	BASS					
GREEN ; ▶	MODE	DIMMER	A-B REPEAT		TREBLE					
YELLOW ; ◀	SEARCH MODE	PAGE			SURR.					
BLUE ; ▶	SLOW ; ▶	MARKER	▶ ; SLOW		SOUND					
☐	DISPLAY ; BIT RATE	OSD MENU ; DISPL.	SELECT		DISPLAY					
☐	RET. ; RESUM. ; TITLE	REPEAT	A/CH		REPEAT					
VOL -	↘				VOL -					
VOL +	↗	+			VOL +					
CH V ; ◀◀	◀◀ ; ◀◀ ; ◀		CH -		◀◀ ; ◀◀					
CH A ; ▶▶	▶▶ ; ▶▶ ; ▶		CH +		▶▶ ; ▶▶					
± ; SAT	10	A-B REPEAT	T/C		A-B REPEAT					
CLEAR ; X	CLEAR	C	CLEAR							
◀◀ ; ●	◀◀		◀◀ ; REVERSE		◀◀ ; ◀◀		◀◀		◀◀	
▶ ; i	▶ ; PLAY		▶ ; PLAY		▶ ; ▶▶		▶▶		▶▶	
▶▶ ; ?	▶▶		▶▶ ; FORWARD		▶▶ ; ▶▶		▶▶		▶▶	
■ ; X	■ ; STOP		■ ; STOP		■		■		■	
; ⏸	; PAUSE	ZOOM ; ☐	; PAUSE/STEP							
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 13 F к AUX устройствам

Кнопки пульта IRC 13 F	Код 306		Код 307		Код 308		Код 309		Код 310	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	JUMP FWD		DVD		SUBW +		SUBW +		AUDIO	
AUDIO ; NICAM			TV ; AUDIO		SURROUND ; LOUD		SURROUND ; LOUD			
VIDEO ; SYS			TONE		NIGHT		NIGHT			
☐ ; ZOOM					I-II ; ☐ ; RDS				ZOOM	
▼ ; TV	JUMP BACK		DISC ; ☐		SUBW -		SUBW -			
☐ ; ↻	TUNER ; Y				PROG					
☐ ; LOCK	SELECT				PROG					
▲ ; FAV			▲ ; OPEN / CLOSE							
○	○ ; STANDBY		○		○		○ ; POWER			
AV	TV/HDD		VCR		AUX		AUX/DI ; MP3-LINK			
⌘			⌘ ; MUTE		⌘ ; MUTE		MUTE		MUTE	
MENU	MENU SYSTEM		MENU ; SYSTEM		MENU				MENU	
EXIT	EDIT		EXIT							
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀		◀		◀	
OK	OK		OK		OK		OK		OK	
▶	▶		▶		▶		▶		▶	
▼	▼		▼		▼		▼		▼	
⌘ ; SETUP	MENU DISC		MODE		DBB				SETUP	
♪ ; TITLE	DISC MANAGER		TITLE		SOUND ; DSC		SOUND ; DSC		LANGUAGE	
☐	CAM ; ☐		TUNER ; ☐		☐		DBB		ANGLE	
GUIDE	GUIDE/TV		RDS SE. ; INDEX ; ☐		DIM		DIM		PLAY MODE	
☐	☐ ; TIMER		SLEEP		SLEEP ; TIMER	TIMER	SLEEP ; TIMER	TIMER ; TIMER		
☐	HDD BROWSER		CDR ; ☐		TUNER		TIMER		SUBTITLE	
RED ; ●	RED	● ; REC/OTR			REAR -		REAR -		REPEAT	
GREEN ; ▶	GREEN				REAR +		REAR +		A>B	
YELLOW ; ◀	YELLOW		◀ ; ◀		CENTER -		CENTER -			
BLUE ; ▶	BLUE		▶ ; ▶		CENTER +		CENTER +		▶▶	
☐	☐ ; INFO		DISPLAY		DISPLAY		DISPLAY ; CLOCK/D.		OSD	
☐	☐ ; RETURN		RDS DI. ; REPEAT ; ☐		☐				RETURN	
VOL -			VOL -		VOL -		VOL -	TV VOL -	VOL -	
VOL +			VOL +		VOL +		VOL +	TV VOL +	VOL +	
CH V ; ◀◀	CHANNEL -		◀◀		P - ; ◀◀		◀◀		◀◀	
CH A ; ▶▶	CHANNEL +		▶▶		P + ; ▶▶		▶▶		▶▶	
± ; SAT	T/C									
CLEAR ; X										
◀◀ ; ●	◀◀		◀◀		◀◀				◀◀	
▶ ; i	▶ ; PLAY		▶ ; OK		▶ ; ▶▶				▶▶	
▶▶ ; ?	▶▶		▶▶						▶▶	
■ ; X	■ ; STOP		■ ; FM MODE		■		■		■	
; ⏸	; PAUSE									
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 13 F к AUX устройствам

Кнопки пульта IRC 13 F	Код 311		Код 312		Код 313		Код 314		Код 315	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	CD ; DISC ; SOURCE		DISK						DISC	
AUDIO ; NICAM			AUDIO/CREAT. MP3						SOURCE ; AUDIO	
VIDEO ; SYS			COAX						AUX ; MP3 LINK	
☐ ; ZOOM			☐ ; ZOOM						☐ ; SCREEN FIT	
▼ ; TV			RADIO				TV/DVD		RADIO	
☐ ; ↗			AUX						AUDIO SYNC	
☐ ; LOCK			DOCK						ZOOM	
▲ ; FAV	▲ ; OPEN/CLOSE		▲						▲	
○	○ ; POWER		○		POWER		○ ; STANDBY-ON		○	
AV	CD ; DISC ; SOURCE		☛ ; USB						USB	
✳	MUTE		✳		✳				✳	
MENU	MENU ; CLK/DISP.		MENU ; DISC		MENU		SYSTEM MENU		MENU ; BACK ; ☐	
EXIT			MP3 LINK				EDIT		BACK ; ☐	
▲	▲ ; ▸		▲		▲		▲		▲	
◀	◀		◀		◀		◀		◀	
OK	OK		OK		OK		OK		OK	
▶	▶		▶		▶		▶		▶	
▼	▼ ; ▸		▼		▼		▼		▼	
✳ ; SETUP	DSC		SETUP ; ☐ ; OPTIONS				DISK MENU		OPTIONS ; SETUP ; ☐	
♪ ; TITLE	DBB		TITLE ; RETURN ; ☐				TUNER		SOUND	
☐	PROG		☐				SELECT		REPEAT ; PROGRAM	
GUIDE	TIMER ON/OFF		SOUND MODE				BROWSER		SURROUND ; SURR	
⏻	SLEEP		AUDIO SYNC				⏻ ; TIMER		SLEEP	
⏸	TIMER		SUBTITLE				REC MODE		SUBTITLE	
RED ; ●	REPEAT ; MODE		REPEAT ; PROGRAM	TREBLE			RED	● ; REC	KARAOKE	
GREEN ; ▸	REP ALL		REPEAT A-B	SURROUND			GREEN		VOCAL	
YELLOW ; ◀			VOCAL	BASS			YELLOW		SOUND MODES -	
BLUE ; ▸			KARAOKE				BLUE		SOUND MODES +	
☐	CLOCK		DISPLAY ; ☐ ; INFO						INFO ; ☐	
☐	SHUFFLE ; SHUF		RETURN ; ☐ ; BACK				☐ ; RETURN		REPEAT A-B	
VOL -	VOL - ; VOLUME ▼		↵		VOL -				VOL -	
VOL +	VOL + ; VOLUME ▲		↵		VOL +				VOL +	
CH V ; ◀	ALB/PRESET -		◀ ; ◀		CH -				◀	
CH A ; ▶	ALB/PRESET +		▶ ; ▶		CH +				▶	
± ; SAT			GOTO							
CLEAR ; X			VOLUME				T/C		ANGLE	
◀ ; ○	◀ ; REW		◀ ; ◀				◀		◀ ; ◀	
▶ ; i	▶ ; PLAY ; ▶		▶ ; ▶				▶ ; PLAY		▶ ; ▶	
▶ ; ?	▶ ; FWD		▶ ; ▶				▶		▶ ; ▶	
■ ; X	■ ; STOP		■ ; STOP				■ ; STOP		■	
⏸ ; ⏻	⏸ ; PAUSE		⏸				⏸ ; PAUSE		⏸	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 13 F к AUX устройствам

Кнопки пульта IRC 13 F	Код 316		Код 317		Код 318		Код 319		Код 320	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD			DISC							
AUDIO ; NICAM	AUDIO		AUDIO		AUDIO		AUDIO		AUDIO	
VIDEO ; SYS	USB				MODE					
☐ ; ZOOM	ZOOM		ZOOM		ZOOM		☐ ; ZOOM			
▼ ; TV									SMART TV	
☐ ; ↗					KARAOKE				↓	
☐ ; LOCK					KEY					
▲ ; FAV					VOCAL		▲		OPEN/CLOSE	▲
○	○ ; POWER		○		○ ; POWER		○		○	
AV	USB								SOURCE	
✳					MUTE		✳		☐	
MENU	SYSTEM MENU		SYSTEM MENU		MENU SYSTEM		MENU ; DISC		☐	
EXIT									☐	
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀		◀ ; ◀		◀	
OK	OK		OK		OK		OK		OK	
▶	▶		▶		▶		▶ ; ▶		▶	
▼	▼		▼		▼		▼		▼	
✳ ; SETUP	PROG		DISC MENU		DISC MENU		SETUP		D.MENU ; POP UP M.	
♪ ; TITLE	PROG				TITLE ; RETURN				TOP MENU	
☐			PROG ; ANGLE		ANGLE				☐ ; ☐	
GUIDE			MODE		PREVIEW					
⏻			SUBTITLE						SUBTITLE	
RED ; ●	SHUFFLE ; SHUF				SUBTITLE		SUBTITLE		RED	
GREEN ; ▸	REPEAT MODE ;				REPEAT		VOCAL		GREEN	
YELLOW ; ◀	REPEAT A-B				A-B REPEAT		KARAOKE		YELLOW	
BLUE ; ▸	REP ALL								BLUE	
☐	RDS ; DISPLAY		RDS ; DISPLAY		DISPLAY		☐ ; INFO		☐	
☐			REPEAT A-B		RETURN		☐ ; BACK		REPEAT	
VOL -									-	
VOL +									+	
CH V ; ◀	◀		◀		◀		◀		◀	
CH A ; ▶	▶		▶		▶		▶		▶	
± ; SAT	GOTO		GOTO							
CLEAR ; X	DEL									
◀ ; ○	◀ ; ◀		◀ ; ◀				◀		◀ ; ◀	
▶ ; i	▶ ; ▶		▶ ; ▶		▶ ; PLAY		▶		▶	
▶ ; ?	▶ ; ▶		▶ ; ▶				▶		▶ ; ▶	
■ ; X	■ ; STOP		■ ; STOP		■ ; STOP		■		■ ; ▲	
⏸ ; ⏻	⏸ ; PAUSE		⏸		⏸ ; PAUSE		⏸		⏸	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 13 F к AUX устройствам

Кнопки пульта IRC 13 F	Код 321		Код 322		Код 323	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	DISC		AUX/DI			
AUDIO ; NICAM	SYNC AUDIO		SURR.		SURR.	
VIDEO ; SYS			VOICE		VOICE	
☐ ; ZOOM	ZOOM					
▼ ; TV					TUNER ; TUN	
☐ ; ↗	USB				DBB	
☐ ; LOCK						
▲ ; FAV	▲ ; OPEN/CLOSE					
○	○		○		○ ; POWER	
AV	SOURCE AUDIO					
✳	⏸		MUTE		MUTE	
MENU	DISC MENU ; DISC				PROG.	
EXIT	↵ ; BACK					
▲	▲		▲		▲	
◀	◀ ; ◀◀		◀		◀	
OK	OK		OK		OK	
▶	▶ ; ▶▶		▶		▶	
▼	▼		▼		▼	
✳ ; SETUP	SYSTEM MENU		SEATING		SEATING	
♪ ; TITLE	RADIO		SOUND		SOUND	
☐	⏸		DIM		DIM	
GUIDE	PROGRAM		SLEEP		TIMER ON/OFF	
⏻					SLEEP	
☐					TIMER	
RED ; ●	REPEAT		TV VOL -		TV VOL -	
GREEN ; ▯	A-B REPEAT		TV VOL +		TV VOL +	
YELLOW ; ◀	SOUND		SUB -		SUB -	
BLUE ; ▶	SURR		SUB +		SUB +	
☐	≡ ; OPTIONS				CLOCK/DISPLAY	
↵	↵ ; BACK					
VOL -	◀ -		VOL -		VOL -	
VOL +	▶ +		VOL +		VOL +	
CH V ; ◀◀	◀ ; ◀◀ ; PREV		◀◀ ; PREV		◀◀ ; PREV	
CH A ; ▶▶	▶ ; ▶▶ ; NEXT		▶▶ ; NEXT		▶▶ ; NEXT	
± ; SAT						
CLEAR ; X	DISC SKIP					
◀◀ ; ●	◀ ; ◀◀					
▶ ; i	⏸ ; PLAY/PAUSE					
▶▶ ; ?	▶ ; ▶▶					
■ ; X	■ ; STOP		■ ; STOP		■ ; STOP	
⏸ ; ⏻	⏸ ; PLAY/PAUSE					
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 13 F к SAT устройствам

Кнопки пульта IRC 13 F	Код 401		Код 402	
	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	P+			
AUDIO ; NICAM				
VIDEO ; SYS				
☐ ; ZOOM				
▼ ; TV	P-			
☐ ; ↗			SERV	
☐ ; LOCK			PERSO	
▲ ; FAV				
○	○		○	
AV			TV/SAT	
✳			✳	
MENU	MENU		PROGR	
EXIT				
▲	▲		↑	
◀	◀		←	
OK	OK		OK	
▶	▶		→	
▼	▼		↓	
✳ ; SETUP			PILOT	
♪ ; TITLE				
☐				
GUIDE	GUIDE			
⏻				
☐			E	
RED ; ●	RED	●	A	
GREEN ; ▯	GREEN		B	
YELLOW ; ◀	YELLOW		C	
BLUE ; ▶	BLUE		D	
☐	☐		⏻	
↵	↵		↔	
VOL -	◀		←	
VOL +	▶		→	
CH V ; ◀◀	▼		↓	
CH A ; ▶▶	▲		↑	
± ; SAT				
CLEAR ; X			X	
◀◀ ; ●	◀ ; ◀◀			
▶ ; i	▶			
▶▶ ; ?	▶▶			
■ ; X	■			
⏸ ; ⏻	⏸ ; PLAY/PAUSE			
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 13 F к TV устройствам

Кнопки пульта IRC 13 F	Коды 501-760	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM		
VIDEO ; SYS		
☐ ; ZOOM		
▼ ; TV		
⏪ ; ↻		
☒ ; LOCK		
▲ ; FAV		
⏻	POWER ; ⏻	
AV	TV/VIDEO ; TV/AV	
⌘	MUTE ; ⌘	
MENU		
EXIT		
▲		
◀		
OK		
▶		
▼		
⌘ ; SETUP		
🎵 ; TITLE		
☐		
GUIDE		
⏻		
☐		
RED ; ●		
GREEN ; ▢		
YELLOW ; ◀		
BLUE ; ▶		
☐		
☐		
VOL -	VOLUME ▼ ; ▽-	
VOL +	VOLUME ▲ ; ▽+	
CH V ; ⏪	CHANNEL ▼ ; P -	
CH A ; ⏩	CHANNEL ▲ ; P +	
± ; SAT		
CLEAR ; X		
◀ ; ●		
▶ ; i		
▶ ; ?		
■ ; X		
⏻ ; ⏻		
1, 2, ... 9, 0	1, 2, ... 9, 0	

Для просмотра функций кнопок баз кодов 8 и 9 (SAT, STB, DVB устройства) перейдите по следующей ссылке <http://www.pult-irc.ru/files/manual/SatCodesForIrcF.pdf>