

Приложение IRC 14 F (версия 18.11.02 03:42)

Модели оригинальных пультов и соответствующие им коды пульта IRC приведены в разделе "Коды пульта IRC 14 F".

Функции всех кнопок для каждого кода пульта IRC можно узнать из таблиц данного приложения.

Пульт IRC может иметь дополнительные функции (если указаны в столбце "Доп. функция"). Доступ к ним осуществляется при помощи кнопки SHIFT (см. в инструкции рис.1, п.16). Для доступа к дополнительным функциям нажмите кнопку SHIFT и, удерживая её нажатой, нажмите ту кнопку, дополнительная функция которой Вам необходима.

После первой установки батареек

Кнопка устройства пульта IRC	Код пульта IRC	Кнопка устройства пульта IRC	Код пульта IRC
TV	101	SHIFT + TV*	105
VCR	102	SHIFT + VCR*	106
AUX	103	SHIFT + AUX*	301
SAT	104	SHIFT + SAT*	302

* Нажмите кнопку SHIFT и, удерживая её нажатой, нажмите и отпустите одну из кнопок пульта: TV, VCR, AUX или SAT.

Доступные коды пульта IRC 14 F

Номер базы кодов (диапазон кодов)	Устройство базы кодов	Доступные коды пульта IRC
1 (101-199)	TV	101 - 110
2 (201-299)	VCR	201 - 202
3 (301-399)	AUX	301 - 329
4 (401-499)	SAT	401
5 (501-599)	TV	501 - 599
6 (601-699)	TV	601 - 699
7 (701-799)	TV	701 - 735
8 (801-899)	SAT	801 - 899
9 (901-999)	SAT	901 - 999

Коды пульта IRC 14 F

Коды к устройствам марки PIONEER

Модель*	Устр-во	Код
076E0PP161	AUX, CD, DVD	305
104-DVD-TV	TV/AUX	107
AXD1463	TV	110
AXD1481	TV	105
AXD1495	TV	102
AXD1509 (DVD)	AUX, CD, DVD	305
AXD1509 (STB)	SAT, STB, DVB	401
AXD1509 (TV)	TV	103
AXD1509 (VCR)	VCR	201
AXD1515	TV	103
AXD1524-A	TV	102
AXD1529	TV	106
AXD1540	TV	103
AXD1552	TV	108
AXD1553	TV	108
AXD7305	AUX, CD, DVD	308
AXD7315	AUX, CD, DVD	309
AXD7337	AUX, CD, DVD	310
AXD7339	AUX, CD, DVD	310
AXD7339 (TV)	TV	102
AXD7389 (DVD)	AUX, CD, DVD	306
AXD7389 (DVR)	AUX, CD, DVD	307
AXD7389 (FM AM)	AUX, CD, DVD	320
AXD7389 (FRONT)	AUX, CD, DVD	319
AXD7389 (REC-R)	AUX, CD, DVD	317
AXD7389 (STB)	SAT, STB, DVB	401
AXD7398	AUX, CD, DVD	311
AXD7407	AUX, CD, DVD	313
AXD7440	AUX, CD, DVD	313
AXD7442 (MAIN)	AUX, CD, DVD	315
AXD7442 (SUB)	AUX, CD, DVD	316
AXD7442 (TV)	TV	102
AXD7601	AUX, CD, DVD	318
AXD7626	AUX, CD, DVD	314
AXD7656	AUX, CD, DVD	324
AXD7681	AUX, CD, DVD	322
AXD7685	AUX, CD, DVD	323
CAR DVD V	AUX, CD, DVD	329
CAR DVD VII	AUX, CD, DVD	329
CRB07	AUX, CD, DVD	305
CU-A010 (AMP)	AUX, CD, DVD	328
CU-A010 (CD)	AUX, CD, DVD	327
CU-A010 (TAPE)	VCR	202
CU-A010 (TUNER)	AUX, CD, DVD	320
CU-A013 (AMP)	AUX, CD, DVD	328

Модель	Устр-во	Код
CU-A013 (CD)	AUX, CD, DVD	327
CU-A013 (TAPE)	VCR	202
CU-A013 (TUNER)	AUX, CD, DVD	320
CU-A014 (AMP)	AUX, CD, DVD	328
CU-A014 (CD)	AUX, CD, DVD	327
CU-A014 (TAPE)	VCR	202
CU-A014 (TUNER)	AUX, CD, DVD	320
CU-A018 (AMP)	AUX, CD, DVD	328
CU-A018 (CD)	AUX, CD, DVD	327
CU-A018 (TAPE)	VCR	202
CU-A018 (TUNER)	AUX, CD, DVD	320
CU-DV037	AUX, CD, DVD	306
CU-DV042	AUX, CD, DVD	306
CU-DV054	AUX, CD, DVD	306
CU-SD058 (LD)	AUX, CD, DVD	304
CU-SD058 (TV)	TV	101
CU-SD058 (VCR)	VCR	201
CU-T022	VCR	202
CU-XD001 (CD)	AUX, CD, DVD	301
CU-XD001 (TAPE I)	AUX, CD, DVD	302
CU-XD001 (TAPE II)	AUX, CD, DVD	303
DVD-01	AUX, CD, DVD	312
DVD-02	AUX, CD, DVD	305
KR-08	TV	104
RC-2930	AUX, CD, DVD	326
RC-3073	AUX, CD, DVD	321
SA40GLD	TV/AUX	109
VXX2700	AUX, CD, DVD	306
VXX2702	AUX, CD, DVD	306
VXX2800	AUX, CD, DVD	305
VXX2801	AUX, CD, DVD	305
VXX2865	AUX, CD, DVD	305
VXX2908	AUX, CD, DVD	307
VXX2914	AUX, CD, DVD	305
VXX2969	AUX, CD, DVD	307
VXX3286	AUX, CD, DVD	325
VXX3287	AUX, CD, DVD	325
VXX3293	AUX, CD, DVD	325
XXD3058	AUX, CD, DVD	310
XXD3058 (TV)	TV	102
XXD3067	AUX, CD, DVD	317
XXD3076	AUX, CD, DVD	310
XXD3076 (TV)	TV	102
XXD3089 (DVD)	AUX, CD, DVD	306
XXD3089 (REC-R)	AUX, CD, DVD	317

Модель	Устр-во	Код
XXD3124	AUX, CD, DVD	313
XXD3135 (DVD)	AUX, CD, DVD	306
XXD3135 (DVR)	AUX, CD, DVD	307
XXD3135 (REC-R)	AUX, CD, DVD	317
XXD3156	AUX, CD, DVD	313

* По каталогу «IRC»

Коды к TV устройствам различных марок

Марка	Код
AEG	544
AIWA	502, 503, 523, 528, 579, 634, 678, 706, 710, 712, 716
AKAI	501, 503, 512, 516, 520, 522, 524, 525, 537, 538, 540, 545, 546, 547, 550, 571, 572, 582, 583, 584, 585, 596, 598, 608, 613, 626, 652, 673, 691, 704, 708, 711, 722, 731
AKIRA	511, 514, 516, 524, 525, 537, 538, 541, 545, 547, 556, 577, 586, 594, 597, 598, 601, 623, 626, 629, 631, 649, 666, 680, 689, 690, 693, 717
AMCOL	501, 525, 545
ANITECH	501, 525, 616, 726
ATLANTA	501
AVEST	537, 538, 539
BANG & OLUFSEN	728
BBK	522, 551, 594, 597, 684, 701
BEKO	525, 530, 535, 559, 723
BIGSTON	501, 503
BLAUPUNKT	512
BORK	525, 547, 646
BRAND	711
BROKSONIC	501
CAMERON	538, 550, 567, 675, 697, 702
CASIO	529, 705, 706
CHANGHONG	516, 642
CLATRONIC	501, 545, 559, 571
CONTEC	501, 603, 604, 613
CORTLAND	644
CROWN	501, 503, 511, 524, 525, 530, 571
DAEWOO	501, 508, 518, 520, 525, 526, 536, 538, 539, 546, 565, 571, 576, 598, 613, 685, 687, 692
DARTLAND	501
DAYTRON	501
DEXP	516, 702
DIGITAL	547
DISTAR	562, 616
DNS	596, 702, 708
ELEKTA	501, 503, 520, 525, 527, 615
ELEKTRONIKA	583
ELENBERG	538, 545, 550, 565, 567, 579, 581, 644, 655, 676, 683, 717
EPLUTUS	537, 644, 677, 682, 697, 724
ERC	537, 631
ERISSON	511, 514, 516, 525, 526, 537, 538, 541, 550, 556, 561, 568, 586, 596, 599, 623, 626, 629, 631, 711, 712, 714
EVGO	538, 540, 630
FINLUX	501, 511, 583, 589, 608, 732
FUJITSU	544, 573
FUNAI	501, 502, 503, 504, 505, 525, 537, 538, 581, 603
FUSION	596, 642, 699, 705, 706
GBS	501, 520, 525, 571, 583
GENERAL	537, 556
GOLD STAR - LG	501, 512, 518, 525, 527, 559, 570, 583, 584, 589, 609, 613, 642, 706, 712
GRUNDIG	501, 512, 525, 606, 662, 718, 719, 733
HAIER	518, 526, 561, 574, 657, 667, 669, 707
HAPPY	501
HARPER	706
HCM	501, 503, 525
HELIX	701, 702, 708
HIL	503
HITACHI	501, 515, 518, 522, 525, 537, 544, 548, 554, 578, 584, 587, 588, 604, 613, 640, 729
HORIZONT	525, 540, 545, 550, 559, 583, 664, 672
HPC	546
HYUNDAI	516, 518, 522, 525, 526, 537, 538, 540, 541, 546, 547, 550, 556, 580, 596, 597, 599, 626, 642, 648, 650, 655, 705, 711, 714, 717
INNO-HIT	501, 525, 571
IRBIS	596, 714
IVA (MBA)	537, 561, 637
IZUMI	516, 537, 596, 663, 691, 695, 703, 705, 711
JINLIPI	537, 637
JVC	513, 515, 593, 604, 727
KAMACROWN	571
KANSAI	501, 525
KENSTAR	516
KITT	503, 613, 616, 726
KONKA	537, 538, 560, 561, 581, 616, 626, 717
KRONMARK	596
LOEWE	542, 709
MITSUBISHI	501, 520, 522, 525, 604, 611, 722, 728
MIYOTA	537, 644, 656
MTC	501, 583
MULTITECH	501, 525
MYSTERY	516, 537, 597, 642, 650, 653, 701, 702, 708
NASH	537
NEC	501, 517, 520, 526, 552, 604, 625, 722
NESCO	501, 525
NOKIA	519, 584, 610, 614, 616
NOVA	501, 616, 638
NOVEX	516, 546, 599
OMEGA	501, 571
ONIDA	513
ONIKS	516, 525, 537, 545, 546, 547, 680
ONWA	524, 525
OPERA	644, 666, 682
ORBITA	635
ORION	501, 503, 506, 507, 509, 516, 525, 528, 537, 591, 603, 617, 619, 627, 641, 643, 664, 715, 720, 722, 729
ORSON	526, 537
PANASONIC	512, 531, 532
PHANTOM	644
PHILIPS	501, 511, 524, 525, 540, 549, 628, 639, 707
PHOENIX	613
PHOENIX GOLD	708
PIONEER	548, 555, 566, 575, 647, 666
PIXELVIEW	525
PLANTRON	735
POLAR	525, 526, 537, 538, 540, 543, 546, 547, 581, 596, 599, 663, 664, 683, 703, 711, 717
POLAROID	525

Коды к TV устройствам различных марок

Марка	Код
PRESTIGIO	564, 656
PRIMA	522, 547
PROLOGY	653, 655
RADUGA	525, 545, 569, 583
RAINFORD	525, 537, 544, 545
RECOR	511, 525
REKORD	520, 525, 526, 537, 538, 539, 545, 547, 725
RFT	535, 618, 728
ROADSTAR	501, 508, 525, 571
ROLSEN	503, 516, 525, 537, 538, 540, 543, 546, 564, 576, 592, 594, 596, 649, 656, 669, 684, 714
ROVERSCAN	662
ROYAL	501, 503, 525, 616
RUBIN	504, 516, 525, 537, 546, 583, 619, 665, 714
SABA	509, 510, 521, 602
SALORA	584
SAMSUNG	501, 525, 526, 529, 563, 580, 595, 596, 608, 612, 613, 622, 641, 645, 688, 723
SANSUI	524, 525, 538, 556, 695
SANYO	501, 519, 522, 525, 530, 540, 550, 558, 604, 608, 610, 618, 621, 696, 722, 730, 734
SATURN	702, 708
SCARLETT	541, 545
SCHNEIDER	525, 540, 571
SETRO	520
SHARP	526, 544, 548, 604, 707, 721
SHERION	616
SHIVAKI	501, 503, 508, 516, 518, 520, 525, 526, 527, 536, 538, 539, 540, 545, 546, 547, 550, 556, 580, 583, 585, 596, 599, 609, 619, 630, 632, 635, 636, 643, 644, 664, 681, 694, 708
SIEMENS	512, 525, 660, 726, 734
SIESTA	501, 537, 637
SILELIS	613
SILVER	633
SITRONICS	503, 516, 525, 537, 538, 540, 543, 545, 594, 626, 629, 661, 671, 672, 674, 679, 680, 686
SOKOL	516, 525, 547, 635
SONY	533, 604, 659, 722
SPEKTR	525, 538, 668
START	525, 537, 545, 546, 547
STASSFURT	535, 618
STINOL	525
SUPER	537, 561, 644, 653, 654, 655, 666, 677, 682, 724
SUPER GENERAL	537
SUPRA	501, 508, 516, 518, 520, 525, 527, 529, 536, 537, 541, 563, 579, 580, 596, 597, 612, 642, 643, 687, 690, 705, 706, 712, 713
SUZUKI	516, 556
SVEN	574
TCL	538, 540, 642
TEAC	525
TECHNICS	537, 538
TECHNO	501, 525, 538, 544, 546, 556, 568, 579, 596, 599, 644, 664, 703
TECKTON	522, 582, 601, 669, 670
TELEFUNKEN	510, 521, 561, 590, 602, 605, 642, 708, 712, 714
TELEVISION	501, 525, 616
THOMSON	509, 510, 521, 550, 579, 602, 624, 642, 702
TOSHIBA	516, 553, 604, 651
TRONY	516, 525, 537, 538, 550, 657
TVT	511, 525, 530, 535, 538, 583, 586, 620, 630, 723
UNITED	525
VARTA	642
VESTEL	525, 544, 556, 583, 619
VIEWSONIC	557, 698
VITA	547
VITEK	537, 650
VITYAS	525
VOLNA (ВОЛНА)	635
VR	516, 537, 565, 702, 714
WALTHAM	503, 509, 511, 583, 584, 607, 613, 729
XORO	522, 526, 545
НЕИЗВЕСТНАЯ МАРКА	525, 546, 574, 596, 648, 656, 666, 711

Коды к SAT устройствам различных марок

Марка	Код
AIR TONE	968
ALFA GOLD	828
AMINO (СТРИМ)	829, 902
ARION	835
ASTON	811
BBK	931
BIG SAT	839, 840, 903, 936
BIG STAR	965
CADENA	958, 962
CONTINENT	886, 975
COSHIP	855
DAEWOO	872
D-COLOR	946
DELTA SYSTEMS	985
DIVISAT	957, 958
D-LINK	923
DNS	968
DR.HD	983
DRE (GENERAL SATELLITE)	804, 868, 888, 907, 933, 954
DREAM	819
DUNE	927, 934
ECHOSPACE	862
ECHOSTAR	808, 809, 822
ELTEX	987
EUROSKY	840, 880
EUROSTAR	863
EUSTON	825
EVO	965
GALAXY INNOVATIONS	878, 881, 908, 911, 912, 917, 924
GLOBALTEQ	833
GLOBO	909, 915, 925, 935, 945, 956, 973, 999
GOLD STAR - LG	871
GOLDEN INTERSTAR	821, 841, 879, 918
GOLDEN MEDIA	847, 912
GOLDMASTER	911
HITACHI	824, 832
HIVION	929
HOME	968
HOMECAST (ВОЛЯ)	820, 831, 836
HUMAX	803, 804, 823, 848, 860, 861, 905, 949
HYUNDAI	968
ID DIGITAL	804
INTEK	984
KAON	820
KOSMOS	855, 856
LANS	970
LOCUS	946
LUMAX	852, 873, 907, 913, 965, 994
MAG	988
MEDIA COM	825
MOTOROLA	883, 884, 901
MYSTERY	910, 997
NDS	814
NEXT	864
NOKIA	813
NOT	941
ONLIME	905
OPENBOX	827, 835, 869, 870, 911, 990, 991
OPENTECH	972
OPENTEL	865
ORBITA	946, 995
ORIEL	887, 926, 941, 948, 955, 986
PACE	801, 932, 953
PATIX DIGITAL	992
PAUXIS	842, 859
PHILIPS	857, 899
PIONEER	851
POLAR	858
REFLECT	959
RIKOR	916, 947
ROLSEN	930, 941, 942, 961
SAGEMCOM	906
SAMSUNG	803, 810, 812, 854
SEG	818
SEZAM	882
SKY VISION	952, 966, 977, 982
SKYMASTER	830
SKYWAY	911
SKYWORTH	989
STAR	833
STAR TRACK	826, 835, 943
STARNET	885
STRONG	805, 806, 815, 816, 817, 828, 830, 914
SUNNIWELL	875
SUPERBOX	903
SUPERMAX	821, 866, 880, 924
SUPRA	950, 960, 962
TECHNOSAT	852, 853
TEL-ANT	960
TELEFUNKEN	961, 968
TESLER	926
TOP BOX	965
TOPFIELD	837, 838, 877, 891
TOSHIBA	876
TV STAR	967
TVJET	946, 976
VESTEL	820, 824
VU+	919, 920, 921, 922

Коды к SAT устройствам различных марок

Марка	Код
WORLD VISION	821, 928, 951, 952
XSAT (НТВ+)	801, 802, 807, 906, 972, 984, 998
YUXING	904
ZYXEL	874
БИЛАЙН	883, 884, 901, 923
ВОЛГАТЕЛЕКОМ	842, 843, 844, 845, 846, 847, 849, 850, 858, 867
ДОМ.RU	820, 905
ДОМОЛИНК	874, 904
МТС	855, 964, 974, 979, 980, 989, 993
НЕИЗВЕСТНАЯ МАРКА	834, 835, 842, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 903, 904, 937, 938, 939, 940, 944, 945, 969, 971, 978, 996
РОСТЕЛЕКОМ	874, 904, 923, 963
СИГНАЛ	968
ТЕЛЕКАРТА	867, 909, 973
ТЕЛЕЦИФРА	968

Функции кнопок пульта IRC 14 F к TV устройствам

Кнопки пульта IRC 14 F	Код 101		Код 102		Код 103		Код 104		Код 105	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			INPUT				DVD		PC	
AUDIO; NICAM	I-II		I-II		I-II		AV		I-II	
VIDEO; SYS	VNR		INPUT 4; VIDEO				S-VIDEO			
☐; ZOOM	☐		☐; ☐; S. SIZE		☐; ☐		VGA		☐; ☐	
▼; TV	☐		INPUT 2; RGB		TV/DTV		TV			
☐; ↗	☐		☐; SPLIT	AUTO SET UP	☐		AUTO		☐	
☐; LOCK	↔; / AV MEM		☐; ☐; FREEZE		☐		DVI			
▲; FAV			POINT ZOOM							
○	○		○; STANDBY/ON		○		○; POWER		○	
AV	☐		INPUT 1; RGB	INPUT 5; COMP-NT	INPUT 1		INPUT; AV/TV		INPUT 1	
✳	✳		✳; MUTING		✳		✳; MUTE		✳	
MENU			HOME MENU		HOME MENU		MENU		HOME MENU	
EXIT	RETURN		↵; RETURN		EXIT	↵; RETURN	ESC		↵; RETURN	
▲	C-P +		↑		↑		▲; CH +; PRO ▲		↑	
◀	↶		←		←		◀; VOL -; VOL ◀		←	
OK			ENTER; SET		ENTER		ENTER; MENU		ENTER	
▶	↷		→		→		▶; VOL +; VOL ▶		→	
▼	C-P -		↓		↓		▼; CH -; PRO ▼		↓	
✳; SETUP	PICTURE		☐; SWAP		↵; RETURN					
♪; TITLE	SOUND		☐; PIP SHIFT							
☐	☐		☐		☐				☐	
GUIDE	DPO		EPG		EPG				EPG	
☐	☐		☐		☐; ☐; INFO				☐; ☐	
RED; ●	RED		RED		RED	INPUT 2			RED	INPUT 2
GREEN; ▨	GREEN		GREEN		GREEN	INPUT 3			GREEN	INPUT 3
YELLOW; ▩	YELLOW		YELLOW		YELLOW	INPUT 4			YELLOW	INPUT 4
BLUE; ▪	BLUE		BLUE		BLUE	INPUT 5			BLUE	
☐	☐		☐; ☐; DISPLAY		☐; ☐; INFO		DISPLAY; DIS		☐; ☐	
☐	C/P		PC		PC		RETURN; ☐			
VOL -	↶		↶; VOLUME -		↶		◀; VOL -; VOL ◀		↶	
VOL +	↷		↷; VOLUME +		↷		▶; VOL +; VOL ▶		↷	
CH V; ◀	C-P -	☐	P -; ☐		P -; ☐		▼; CH -; PRO ▼		P -; ☐	
CH A; ▶	C-P +	☐	P +; ☐		P +; ☐		▲; CH +; PRO ▲		P +; ☐	
+/ SAT			-/		-/		-/; 10+		+	
CLEAR; X	☐		INPUT 3; D. RGB							
◀; ●	●		SUB INPUT							
▶; i	☐				☐				☐	
▶; ?	☐				☐				☐	
■; X	☐				☐; ☐				☐; ☐	
; ⏏	☐				☐; ☐				☐; ☐	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 14 F к TV устройствам

Кнопки пульта IRC 14 F	Код 106		Код 107		Код 108		Код 109		Код 110	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	☐		DVD		HDMI CONTROL		DVD/SD/USB		3D-Y/C	
AUDIO; NICAM	SOUND EFFECT		L/R		I-II		AUDIO		●; DQ VIRTUAL	
VIDEO; SYS	AV SELECTION		LANGUAGE		INPUT 2				ROTATE	
☐; ZOOM	☐		ZOOM		☐; ☐		ZOOM		☐; ☐	
▼; TV	☐		TV		TV/DTV		DVD/TV/AV			
☐; ↗	☐		SEARCH/GOTO		INPUT 3		AUTO SCAN		☐	
☐; LOCK	☐				☐; ☐				☐; ☐	
▲; FAV	FAVOURITE CH		EJECT							
○	○		○; POWER		○		○; LCD ON/OFF		○; ON/OFF	
AV	INPUT		AV		INPUT 1		DVD/TV/AV		☐; AV INPUT	
✳	✳		✳; MUTE		✳		✳; MUTE		✳; MUTE	
MENU	MENU		MENU		HOME MENU		MENU; PROGRAM		MENU	
EXIT	EXIT	BACK			EXIT				EXIT	
▲	↑		▲; CH +		↑		▲		↑	
◀	←		◀		←		◀		←	
OK	OK		ENTER		ENTER		OK		ENTER	
▶	→		▶		→		▶		→	
▼	↓		▼; CH -		↓		▼		↓	
✳; SETUP	BACK		SETUP		INPUT 4		SETUP		AV MODE	
♪; TITLE	I-II		TITLE/PBC		INPUT 5		TITLE		SOUND	
☐	☐				☐				☐	
GUIDE	LIST				EPG		PROG.; VREMOTE		OPC	
☐	SLEEP				☐		TIMING; SEARCH		SLEEP	
☐	☐		SUBTITLE		☐		SUBTITLE		SELECT ☐	
RED; ●	RED		REPEAT		RED		REPEAT		RED	
GREEN; ▨	GREEN		STEP		GREEN		A-B		GREEN	
YELLOW; ▩	YELLOW		A-B		YELLOW				YELLOW	
BLUE; ▪	BLUE		SLOW		BLUE				BLUE	
☐	☐		DISPLAY		☐; ☐		DISPLAY		☐; ☐	
☐	CH RETURN				↵; RETURN		STOP/RETURN		☐	
VOL -	↶		VOLUME -		↶		VOL -		↶; VOL -	
VOL +	↷		VOLUME +		↷		VOL +		↷; VOL +	
CH V; ◀	P -		▼; CH -	◀; PREV	P -; ☐		◀; CH -		CH ▼	
CH A; ▶	P +		▲; CH +	▶; NEXT	P +; ☐		▶; CH +		CH ▲	
+/ SAT	CH ENTER		+/; 10+		+/; ☐		+/; 10+		+/	
CLEAR; X	☐				PC				RETURN	
◀; ●	●		◀; REV				◀		☐	
▶; i	☐		▶; PLAY		☐		▶; PLAY/PAUSE		☐	
▶; ?	☐		▶; FWD		☐				☐	
■; X	☐		■; STOP		☐		STOP/RETURN		☐; ☐	
; ⏏	☐		; PLAY		☐		▶; PLAY/PAUSE		☐; ☐	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 14 F к VCR устройствам

Кнопки пульта IRC 14 F	Код 201		Код 202	
	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD				
AUDIO ; NICAM				
VIDEO ; SYS				
☐ ; ZOOM				
▼ ; TV				
☐ ; ↗			COUNTER MODE	
☐ ; LOCK			COUNTER RESET	
▲ ; FAV	▲			
○	○		POWER	
AV				
✳				
MENU			TAPE SELECT	
EXIT				
▲				
◀				
OK				
▶				
▼				
✳ ; SETUP				
♪ ; TITLE				
☐				
GUIDE				
☐				
☐				
RED ; ●		● REC	● (DECK I)	● (DECK II)
GREEN ; ►			○ (DECK I)	○ (DECK II)
YELLOW ; ◀			◀ (DECK I)	◀ (DECK II)
BLUE ; ►				
☐				
☐				
VOL -				
VOL +				
CH V ; ◀◀	CH -			
CH A ; ▶▶	CH +			
± ; SAT				
CLEAR ; X				
◀◀ ; ●	◀◀		◀◀ (DECK I)	◀◀ (DECK II)
▶ ; i	▶		▶ (DECK I)	▶ (DECK II)
▶▶ ; ?	▶▶		▶▶ (DECK I)	▶▶ (DECK II)
■ ; X	■ ; ■ / ▲		■ (DECK I)	■ (DECK II)
■ ; ⚡	■		■ (DECK I)	■ (DECK II)
1, 2, ... 9, 0	1, 2, ... 9, 0			

Функции кнопок пульта IRC 14 F к AUX устройствам

Кнопки пульта IRC 14 F	Код 301		Код 302		Код 303		Код 304		Код 305	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	DISC								USB ; DVD	
AUDIO ; NICAM	SFC MODE		SFC MODE		SFC MODE				AUDIO ; ☐	
VIDEO ; SYS	PGM MODE		PGM MODE		PGM MODE				PLAY MODE	
☐ ; ZOOM									ZOOM	
▼ ; TV										
☐ ; ↗										
☐ ; LOCK										
▲ ; FAV							▲		▲ ; OPEN/CLOSE	
○	POWER		POWER		POWER			○ ; STANDBY/ON		
AV									ANGLE ; ◀	
✳										
MENU	FUNCTION		FUNCTION		FUNCTION				MENU	
EXIT									RETURN	
▲									↑ ; KEY #	
◀	D. SURR. LEVEL -		D. SURR. LEVEL -		D. SURR. LEVEL -				← ; ECHO -	
OK									ENTER	
▶	D. SURR. LEVEL +		D. SURR. LEVEL +		D. SURR. LEVEL +				→ ; ECHO +	
▼									↓ ; KEY b	
✳ ; SETUP									SETUP ; HOM. MENU	
♪ ; TITLE	D. SURR. ON/OFF		D. SURR. ON/OFF		D. SURR. ON/OFF				TOP MENU	
☐	PGM									
GUIDE	TIMER WAKE UP		TIMER WAKE UP		TIMER WAKE UP					
☐	TIMER SLEEP		TIMER SLEEP		TIMER SLEEP					
☐	TIMER SNOOZE		TIMER SNOOZE		TIMER SNOOZE				SUBTITLE ; ☐	
RED ; ●						● TAPE II			SURROUND	
GREEN ; ►									KARAOKE	
YELLOW ; ◀			◀ TAPE I		◀ TAPE II					
BLUE ; ►										
☐									DISPLAY	
☐	RANDOM									
VOL -	VOLUME -		VOLUME -		VOLUME -					
VOL +	VOLUME +		VOLUME +		VOLUME +					
CH V ; ◀◀	STATION DOWN	◀◀	STATION DOWN		STATION DOWN		◀◀		◀◀ ; PREV	
CH A ; ▶▶	STATION UP	▶▶	STATION UP		STATION UP		▶▶		▶▶ ; NEXT	
± ; SAT										
CLEAR ; X									CLEAR	
◀◀ ; ●			◀◀ TAPE I		◀◀ TAPE II		◀◀		◀◀ ; ◀/■	
▶ ; i	▶ CD		▶ TAPE I		▶ TAPE II		▶		▶ ; PLAY	
▶▶ ; ?			▶▶ TAPE I		▶▶ TAPE II		▶▶		▶▶ ; ■/■	
■ ; X	■ CD		■ TAPE I		■ TAPE II		■ / ▲		■ ; STOP	
■ ; ⚡	■ CD		■ TAPE I		■ TAPE II		■		■ ; PAUSE	
1, 2, ... 9, 0										1, 2, ... 9, 0

Функции кнопок пульта IRC 14 F к AUX устройствам

Кнопки пульта IRC 14 F	Код 306		Код 307		Код 308		Код 309		Код 310	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	OUT ►►		DVD		DVD; CD		DVD/CD		DVD; CD	
AUDIO; NICAM	AUDIO		CD; AUDIO		AUDIO	SURROUND	AUDIO	SURROUND	AUDIO	SURROUND
VIDEO; SYS	VNR; DNR; V.ADJ		PLAY MODE		VIDEO; V1/V2/V3	SYSTEM	VIDEO		LINE; L1/L2; VIDEO	DIMMER
☐; ZOOM	FL; DIMMER		SHOW VIEW; +		DIMMER		DIMMER		ZOOM	
▼; TV	OUT ◀◀		TV/DVD		FM/AM; TUNER		TV		TV	
☐; ↻	F.MEM; FUN. MEMO.		HDD		SEARCH	MEMO. CONDITION	SEARCH	MIDNIGHT	AUTO	
☐; LOCK			◀; ANGLE		CH LEVEL	MEMORY LAST	QUIET		QUIET/MIDNIGHT	ADVANCED
▲; FAV	OPEN/CLOSE; ▲		▲; OPEN/CLOSE		TEST TONE		FM/AM		▲; OPEN/CLOSE	TUNER; FM/AM
○	○		○; STANDBY/ON	○ (TV)	○; STANDBY/ON	POWER (TV)	○; STANDBY/ON	○; POWER (TV)	○; STANDBY/ON	○ (TV)
AV	ANGLE		INPUT SELECT	INPUT SELECT (TV)	ANGLE	INPUT (TV)	ANGLE	INPUT (TV)	ANGLE	INPUT (TV)
✳			MUTE		MUTE		MUTE		MUTE	
MENU	MENU		MENU; PLAY LIST		MENU		MENU		SYS MENU	DVD MENU
EXIT	↵; RETURN		RETURN		↵; RETURN		↵; RETURN		RETURN	
▲	▲		↑		▲		▲		↑; TUNE +	
◀	◀		←		◀		◀		←; ST -	
OK	ENTER		ENTER		ENTER		ENTER		ENTER	
▶	▶		→		▶		▶		→; ST +	
▼	▼		↓		▼		▼		↓; TUNE -	
✳; SETUP	SETUP; MODE		HOME MENU	NAVI MARK	MENU SYSTEM	DVD SET UP	SYSTEM SETUP	DVD SETUP	SYSTEM SETUP	H. MENU; DVD SET.
♪; TITLE	TOP MENU; TITLE		TOP MENU; DISC N.	CHP MARK	TOP MENU	SOUND	TOP MENU	SOUND	TOP MENU	SOUND
☐			ONE TOUCH COPY	DISC HISTORY	DSP	MD	DSP		PROGRAM	VIRTUAL SB; PROG.
GUIDE	PROGRAM		GUIDE		PROGRAM	TAPE	PROGRAM		ROOM SETUP	DIALOGUE
☐	SEAR.MODE; CHP/T.		EASY TIMER	TIMER REC	CLOCK/TIMER		TIMER (CLOCK ADJ.)		TIMER/CLOCK	
☐	SUB TITLE		☐; SUBTITLE	HELP	SUB TITLE		SUBTITLE		SUBTITLE	
RED; ●	REPEAT	IN ◀◀	REC MODE	●; REC	REPEAT		REPEAT	CONDITION	REPEAT	BASS MODE
GREEN; ►	REPEAT A-B	IN ►►	TV DIRECT REC		A-B		A-B	TEST TONE	LANGUAGE	TEST TONE
YELLOW; ◀	◀; STEP / SLOW	OUT ◀◀	◀; STEP/SLOW	CHANNEL - (TV)	◀; STEP/SLOW	FOLDER/GROUP -	◀; STEP/SLOW	FOLDER -	◀; FRONT SURR.	FOLDER -
BLUE; ►	►; STEP / SLOW	OUT ►►	►; STEP/SLOW	CHANNEL + (TV)	►; STEP/SLOW	FOLDER/GROUP +	►; STEP/SLOW	FOLDER +	SR +	FOLDER +
☐	DISPLAY		DISPLAY	INFO	DISP SYSTEM	DVD DISP	SYSTEM DISP	DVD DISP	DISPLAY; SYS DISP	DVD DISP
☐	RANDOM		◀; BACK		RANDOM		LAST	RANDOM	DOOR OPEN CLOSE	RANDOM
VOL -	LAST MEMORY		VOLUME - (TV)		SYSTEM VOL -	VOL - (TV)	VOL -	VOL - (TV)	MASTER VOLUME -	VOL - (TV)
VOL +	CONDITION MEMO.		VOLUME + (TV)		SYSTEM VOL +	VOL + (TV)	VOL +	VOL + (TV)	MASTER VOLUME +	VOL + (TV)
CH V; ◀	◀; PREV		CHANNEL -; CH -	◀; PREV	◀; PREV	CH - (TV)	◀	CH - (TV)	◀	CH - (TV)
CH A; ►	►; NEXT		CHANNEL +; CH +	►; NEXT	►; NEXT +	CH + (TV)	►	CH + (TV)	►	CH + (TV)
+/ SAT	+10		→; SKIP		>10		>10	CH LEVEL	CH LEVEL	
CLEAR; X	CLEAR		CLEAR		CLR		CLEAR		CLR	
◀; ●	◀; REV		◀; REV SCAN		◀		◀		◀; ◀/◀	
▶; i	▶; PLAY		▶; PLAY		▶/		▶/	PLAY/PAUSE	▶	
▶; ?	▶; FWD		▶; FWD SCAN		▶; ▶/		▶		▶; ▶/▶	
■; X	■; STOP		■; STOP	☐; STOP REC	■		■		■	
; ⏸	; PAUSE		; PAUSE		▶/		▶/	PLAY/PAUSE		
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 10/0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 14 F к AUX устройствам

Кнопки пульта IRC 14 F	Код 311		Код 312		Код 313		Код 314		Код 315	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	DVD		DVD		DVD; CD; DVD/CD		DVD; CD		HDD/DVD	
AUDIO; NICAM	AUDIO	AUDIO INPUT	AUDIO		AUDIO		OPTICAL		AUDIO IN	
VIDEO; SYS	PLAY MODE	DIMMER	BAND; P/N		USB		SOUND		VIDEO IN	
☐; ZOOM	SHOW VIEW		ZOOM		ZOOM		HDMI IN		JUKEBOX	
▼; TV	TV/DVD				TUNER; FM/AM		ZOOM		TV/DVD	
☐; ↻	HDD		ANGLE		LINE OUT		SEARCH			
☐; LOCK	ANGLE		LOC RDM		ANGLE				PAUSE LIVE TV	
▲; FAV	FM/AM		LOUD		▲; OPEN/CLOSE		▲; OPEN/CLOSE		FM/AM	
○	○; STANDBY/ON	○; ST-BY/ON(TV)	PWR		○; STANDBY/ON	○ (TV)	○; STANDBY/ON	○ (TV)	○ RECEIVER	○ RECORDER
AV	VIDEO INPUT	INPUT (TV)	SOURCE		LINE	INPUT (TV)	☐; INPUT/TUNER	INPUT (TV)		
✳	MUTE		MUTE		MUTE		MUTE		SOUND RETRIEIER	
MENU	HOME MENU	DVD MENU; P.LIST	MENU		HOME MENU		☐; HOME MENU		HOME MENU	
EXIT	RETURN		RETURN		RETURN		↵; RETURN		RETURN	
▲	↑; TUNE +		▲	SEEK +; ↑	↑; TUNE +		▲; PESET ▲		↑	
◀	←; ST -		◀	VOL -; ←	←; ST -		◀; TUNE -		←; CM BACK ◀	
OK	ENTER		ENTER	SEL	ENTER		●; ENTER		ENTER	
▶	→; ST +		▶	VOL +; →	→; ST +		○; TUNE +		→; CM SKIP →	
▼	↓; TUNE -		▼	SEEK -; ↓	↓; TUNE -		∇; PRESET ∇		↓	
✳; SETUP	SYSTEM SETUP		SETUP		MENU	SYSTEM SETUP	MENU		MENU	
♪; TITLE	TOP MENU; D.NAVI.	SOUND	TITLE		TOP MENU		POPUP/TOP MENU		TOP MENU; D. NAVI.	SURROUND
☐	ONE TOUCH COPY	ADVANCED	PBC		FRT.SURR;EXT	TEST TONE	SPK LEVEL		REC MODE	
GUIDE	NAVI MARK	TEST TONE	ST PROG		MP3 EXP; V.ENH	KARAOKE	MARKER		GUIDE	
☐	DIALOGUE	SR+	DSP		SLEEP		SLEEP		ONE TOUCH COPY	TIMER REC
☐	SUBTITLE	SURROUND	SUB-T		SUBTITLE	ECHO	DIMMER		HELP	
RED; ●	REC MODE	●; REC	AMS; RPT		PLAYLIST 1	FRONT SURROUND	RED; A	●; USB REC	RED	●; REC
GREEN; ►	→; SKIP-CM	TV DIRECT REC	EQ		PLAYLIST 2	SURROUND	GREEN; B		GREEN	
YELLOW; ◀	◀; STEP/SLOW	CHANNEL - (TV)			PLAYLIST 3		YELLOW; C		YELLOW	
BLUE; ►	►; STEP/SLOW	CHANNEL + (TV)	SLOW		SOUND MODE	#	BLUE; D; ST/MONO		BLUE	
☐	DISPLAY		OSD		DISPLAY		☐; DISPLAY		INFO	
☐	◀; BACK-CM		?				☐; REPEAT		DISPLAY	
VOL -	VOLUME -	VOLUME - (TV)	VOL -; ←		VOLUME -	VOL - (TV)	VOL -	VOL - (TV)	VOLUME -	
VOL +	VOLUME +	VOLUME + (TV)	VOL +; →		VOLUME +	VOL + (TV)	VOL +	VOL + (TV)	VOLUME +	
CH V; ◀	CHANNEL -	◀; PREV	◀		◀	CH - (TV)	◀	CH - (TV)	◀; PREV	
CH A; ►	CHANNEL +	►; NEXT	►		►	CH + (TV)	►	CH + (TV)	►; NEXT	
+/ SAT	CH LEVEL		10+		SR+		▶; SKIP		▶; SKIP	
CLEAR; X	CLEAR		GOTO		CLEAR		CLEAR		CLEAR	
◀; ●	◀; REV SCAN		◀		◀; ◀/◀		◀; SCAN		◀; ◀/◀	
▶; i	▶; PLAY		▶		▶		▶; PLAY		▶; PLAY	
▶; ?	▶; FWD SCAN		▶		▶; ▶/▶		▶; SCAN		▶; ▶/▶	
■; X	■; STOP	☐; STOP REC	■/?		■		■; STOP		■; STOP	☐; STOP REC
; ⏸	; PAUSE						; PAUSE/STEP		; PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 14 F к AUX устройствам

Кнопки пульта IRC 14 F	Код 316		Код 317		Код 318		Код 319		Код 320	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD			DVD (INPUT SEL.)	DVD 5.1CH (IN.SEL.)	MIC VOL +					
AUDIO ; NICAM	AUDIO		AUDIO (DVD CON.)	SOUND MODE	EQ		AUDIO			
VIDEO ; SYS	PLAY MODE		DVR/VCR ; DVR	VIDEO	RESOLUTION					
☐ ; ZOOM	SR+		FL DIMMER	SR+						
▼ ; TV			TV/SAT ; TV (INPUT)	SBCh MODE	MIC VOL -					
☐ ; ↗			CD (INPUT SEL.)	SURROUND	MEM ; PGM				SEARCH	
☐ ; LOCK	ANGLE		STANDARD	CD-R/TAPE/MD	VOCAL FADER					
▲ ; FAV			MIDNIGHT/LOUD.		▲ ; OPEN/CLOSE					
○	○ RECEIVER	○ RECORDER	○ RECEIVER	○ DVD CONTROL	○ ; STANDBY/ON	○ (TV CONTROL)	○ SOURCE		○ SOURCE	
AV			INPUT ATT	AV DIRECT	INPUT (TV CON.)					
⌘			MUTE (REC. CON.)		MUTE					
MENU			MENU ; MC. SETUP	MENU (DVD)	MENU					
EXIT			↶ RETURN							
▲	↑/TUNE+		↑	↑ (DVD)	▲ ; PRESET ▲				TUNE+	
◀	←/ST-		←	← (DVD)	◀ ; TUNE -				ST- ; STATION -	
OK	ENTER		ENTER	ENTER (DVD)	ENTER		ENTER		ENTER	
▶	→/ST+		→	→ (DVD)	▶ ; TUNE +				ST+ ; STATION +	
▼	↓/TUNE-		↓	↓ (DVD)	▼ ; PRESET ▼				TUNE-	
* ; SETUP	SETUP		SYSTEM SETUP	PHASE	SETUP					
♪ ; TITLE	SOUND		FM (INPUT SEL.)	TOP MENU (DVD)	TOP MENU				BAND	
☐	MCACC		TUNER EDIT (REC.)	FRONT	FUNCTION				EON	
GUIDE	ADVANCED		DIALOG E (REC.)	FM AM					RF ATT	
☐			SLEEP		SLEEP				T.EDIT	
☐	SUBTITLE		SUB TITLE (DVD)		☐ ; SUBTITLE					
RED ; ●	TEST TONE		ADV. SURROUND	CLASS (TUNER)	RANDOM ; REPEAT	● ; USB REC			CLASS	
GREEN ; ►	SURROUND		STEREO/F.S.SURR	MPX (TUNER)	DIMMER				MPX	
YELLOW ; ◀			ACOUSTIC EQ	STATION - (TUNER)	ECHO VOL -				D.ACCESS	
BLUE ; ►			AUTO SURR	STATION + (TUNER)	ECHO VOL +					
☐	RDS DISP		DISPLAY (TUNER)		DISPLAY				DISPLAY	
☐			SIGNAL SEL		↶ ; RETURN					
VOL -	VOLUME -		VOLUME - (REC.)	TUNING - (TUNER)	VOL -	VOL - (TV CON.)				
VOL +	VOLUME +		VOLUME + (REC.)	TUNING + (TUNER)	VOL +	VOL + (TV CON.)				
CH V ; ◀	↓/TUNE-		◀ (DVD CONTROL)	LEVEL - (REC.)	◀◀ SKIP	CH - (TV CONTROL)	◀◀			
CH A ; ▶	↑/TUNE+		▶ (DVD CONTROL)	LEVEL + (REC.)	▶▶ SKIP	CH + (TV CONTROL)	▶▶			
± ; SAT			EFFECT/CH SEL				+10			
CLEAR ; X			AM (INPUT SEL.)		CLEAR					
◀ ; ●			◀◀ (DVD CONTROL)	EFFECT -	◀◀ SCAN		◀◀			
▶ ; i			▶ (DVD CONTROL)	TEST TONE	▶ ; ST/MONO PLAY		▶			
▶ ; ?			▶▶ (DVD CONTROL)	EFFECT +	▶▶ SCAN		▶▶			
■ ; X			■ (DVD CONTROL)		■ ; STOP		■			
■ ; ⏸			■ (DVD CONTROL)		■ ; PAUSE/STOP		■			
1, 2, ... 9, 0						1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0

Функции кнопок пульта IRC 14 F к AUX устройствам

Кнопки пульта IRC 14 F	Код 321		Код 322		Код 323		Код 324		Код 325	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD			DISC		DVD/USB		CD/SACD		DVD	
AUDIO ; NICAM	AUDIO		EQ		PTY ; AUDIO ; ASPM		AUDIO	SOUND RETRIEVER	AUDIO	
VIDEO ; SYS	HDMI		AUX		AUX		ANGLE		REC MODE	
☐ ; ZOOM	►/■				ZOOM		RESOLUTION	ZOOM	ONE TOUCH COPY	
▼ ; TV			TUNER		TUNER		NET CONTENTS		TV/DVD	
☐ ; ↗	KARAOKE		USB				TOOLS		HDD	
☐ ; LOCK	ANGLE						CONTINUED	KEY LOCK	TV PAUSE LIVE	
▲ ; FAV	▲ ; OPEN/CLOSE		▲ ; OPEN/CLOSE		▲ ; OPEN/CLOSE		▲ ; OPEN/CLOSE		▲ ; OPEN/CLOSE	
○	○ ; STANDBY/ON		○ ; STANDBY/ON		○ ; STANDBY/ON		○ ; STANDBY/ON	○ (TV)	○ ; STANDBY/ON	○ (TV CONTROL)
AV	CONTINUED		MODE		MODE		INPUT SELECT (TV)		INPUT SELECT	INPUT SELECT (TV)
⌘			* ; MUTE		MUTE		MUTE		* (TV)	
MENU	⏪ ; HOME MENU		DOCK MENU		MENU		⏪ ; HOME MENU		⏪ ; HOME MENU	MENU
EXIT	↶ ; RETURN				RETURN		↶ ; RETURN	EXIT	↶ ; RETURN	
▲	▲		↑		↑		▲		↑	
◀	◀		◀◀ ; ◀◀		◀		◀		◀	
OK	ENTER		ENTER		ENTER		ENTER		ENTER	
▶	▶		▶▶ ; ▶▶		→		▶		→	
▼	▼		↓		↓		▼		↓	
* ; SETUP	TOP MENU				TOP MENU		TOP MENU	SOUND	DISC NA.;TOP	PC VIDEO(HOME M.)
♪ ; TITLE	POPUP MENU		P.BASS		SYSTEM MENU		MENU;POPUP	KARAOKE	HELP	MUSUC (HOME M.)
☐	MEDIA GALLERY		iPod		iPod		FUNCTION		INFO	PHOTO (HOME M.)
GUIDE	FUNCTION		PROGRAM		PROG ; ANGLE		HOME MEDIA GAL.		GUIDE	
☐			SLEEP/TIMER		TIME ; SLEEP		SLEEP	DIMMER	TIMER REC	
☐	SUBTITLE				SUBTITLE		SUBTITLE	VIRTUAL 3D SOUND	SUBTITLE	
RED ; ●	RED ; PROGRAM		RDS		REPEAT ; A-B		RED ; PROGRAM	● ; USB REC	RED	● ; REC
GREEN ; ►	GREEN ;	►/■	ASPM ; PTY		RDS ; STEP		GREEN ; BOOKM.	A-B	GREEN	☐ ; STOP REC
YELLOW ; ◀	YELLOW ; ZOOM				EQ		YELLOW ; ZOOM	MIC VOL -	YELLOW	
BLUE ; ►	BLUE ; INDEX				P.BASS		BLUE ; INDEX	MIC VOL +	BLUE	
☐	DISPLAY		DISPLAY/CLOCK		CLOCK ; DISPLAY		DISPLAY		DISPLAY	ANGLE
☐	REPEAT						◀ ; REPLAY	REPEAT	◀ ; CM BACK	➡ ; CM SKIP
VOL -			VOL -		VOL -		VOL -	VOL - (TV)	VOL - (TV)	CH - (TV CONTROL)
VOL +			VOL +		VOL +		VOL +	VOL + (TV)	VOL + (TV)	CH + (TV CONTROL)
CH V ; ◀	◀		◀◀ ; ◀◀		◀◀ ; ◀◀		◀◀ ; ◀◀	CH - (TV)	CHANNEL -	◀◀ ; PREV
CH A ; ▶	▶		▶▶ ; ▶▶		▶▶ ; ▶▶		▶▶ ; ▶▶	CH + (TV)	CHANNEL +	▶▶ ; NEXT
± ; SAT	A-B				GOTO		▶▶ ; ▶▶		+	
CLEAR ; X	CLEAR						◀ ; SKIP SEARCH		CLEAR	
◀ ; ●			◀◀ ; ◀◀		◀◀ ; ◀◀		◀◀ ; REV		◀◀ ; ◀◀	
▶ ; i			▶ / ■		▶ / ■		▶ ; PLAY		▶ ; PLAY	
▶ ; ?			▶▶ ; ▶▶		▶▶ ; ▶▶		▶▶ ; FWD		▶▶ ; ▶▶	
■ ; X			■		■		■ ; STOP		■ ; STOP	☐ ; STOP REC
■ ; ⏸			■		■		■ ; PAUSE		■ ; PAUSE	
1, 2, ... 9, 0							1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 14 F к AUX устройствам

Кнопки пульта IRC 14 F	Код 326		Код 327		Код 328		Код 329	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	CD/SACD				CD		↑	
AUDIO ; NICAM	AUDIO	2nd AUDIO			PHONO		EQ	
VIDEO ; SYS	2nd VIDEO						R/L/SYS	
☐ ; ZOOM	CONTINUED	ZOOM					ZOOM	
▼ ; TV	HDMI				TUNER		↓	
☐ ; ↻	SKIP SEARCH							
☐ ; LOCK	ANGLE	KEYLOCK					▲	
▲ ; FAV	▲ ; OPEN/CLOSE						▲	
○	○ ; STANDBY/ON	○ (REC. CON.)			POWER (CD)		POWER	
AV	INPUT Ⓒ (REC.CO.)	INPUT Ⓓ (REC.CO.)				POWER (AMP)	MODE	
✳						LINE	⏏	
MENU	MENU;POPOP	BD (REC. CON.)	DISC SELECT (CD)					
EXIT	EXIT							
▲	▲						↑	
◀	◀						←	
OK	ENTER						ENTER	
▶	▶						→	
▼	▼						↓	
✳ ; SETUP	⬆ ; HOME MENU						SETUP	
♪ ; TITLE	TOP MENU						TITLE	
☐	FUNCTION						ANS	
GUIDE	HOME; MEDIA GAL.							
☐	FL DIMMER							
☐	SUBTITLE						SUBTITLE	
RED ; ●	RED ; PROGRAM					CD		
GREEN ; ▯	GREEN;					TUNER		
YELLOW ; ◀	YELLOW ; ZOOM	◀ ◀				PHONO		
BLUE ; ▯	BLUE ; INDEX	▯ ▯				LINE	SLOW	
☐	DISPLAY							
☐	☐ ; RETURN	REPEAT					RPT/AUTO	
VOL -	VOL - (REC. CON.)					VOLUME -	VOL -	
VOL +	VOL + (REC. CON.)					VOLUME +	VOL +	
CH V ; ◀◀	◀◀ ; ◀ ◀		◀◀ (CD)				CH-/◀◀	
CH A ; ▶▶	▶▶ ; ▶ ▶		▶▶ (CD)				CH+/▶▶	
± ; SAT	A-B						10+	
CLEAR ; X	CLEAR							
◀◀ ; ●	◀◀ ; REV		◀◀ (CD)				SK-/◀◀	
▶ ; i	▶ ; PLAY	REPLAY	▶ (CD)				▶▶	
▶▶ ; ?	▶▶ ; FWD		▶▶ (CD)				SK+/▶▶	
■ ; X	■ ; STOP		■ (CD)				■	
; ⏏	; PAUSE						▶▶	
1, 2, ... 9, 0	1, 2, ... 9, 0				TAPE 1, TAPE 2		1, 2, ... 9, 0	

Функции кнопок пульта IRC 14 F к SAT устройствам

Кнопки пульта IRC 14 F	Код 401	
	Функция	Доп. функция
▲ ; DVD	P +	
AUDIO ; NICAM		
VIDEO ; SYS		
☐ ; ZOOM		
▼ ; TV	P -	
☐ ; ↻		
☐ ; LOCK		
▲ ; FAV		
○	○	
AV		
✳		
MENU	MENU	
EXIT	EXIT	
▲	↑	
◀	←	
OK	ENTER	
▶	→	
▼	↓	
✳ ; SETUP		
♪ ; TITLE		
☐		
GUIDE	EPG	
☐		
☐	E	
RED ; ●	A	
GREEN ; ▯	B	
YELLOW ; ◀	C	
BLUE ; ▯	D	
☐	☐	
☐	RETURN	
VOL -	←	
VOL +	→	
CH V ; ◀◀	↓	
CH A ; ▶▶	↑	
± ; SAT		
CLEAR ; X		
◀◀ ; ●		
▶ ; i		
▶▶ ; ?		
■ ; X		
; ⏏		
1, 2, ... 9, 0	1, 2, ... 9, 0	

Функции кнопок пульта IRC 14 F к TV устройствам

Кнопки пульта IRC 14 F	Коды 501-735	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM		
VIDEO ; SYS		
☐ ; ZOOM		
▼ ; TV		
⏪ ; ⏩		
☒ ; LOCK		
▲ ; FAV		
⏻	POWER ; ⏻	
AV	TV/VIDEO ; TV/AV	
⌘	MUTE ; ⌘	
MENU		
EXIT		
▲		
◀		
OK		
▶		
▼		
⌘ ; SETUP		
🎵 ; TITLE		
☐		
GUIDE		
⏻		
☐		
RED ; ●		
GREEN ; ▢		
YELLOW ; ◀		
BLUE ; ▶		
☐		
☐		
VOL -	VOLUME ▼ ; ▽-	
VOL +	VOLUME ▲ ; ▽+	
CH V ; ⏪	CHANNEL ▼ ; P -	
CH A ; ⏩	CHANNEL ▲ ; P +	
± ; SAT		
CLEAR ; X		
⏪ ; ●		
▶ ; i		
▶ ; ?		
■ ; X		
⏻ ; ⏩		
1, 2, ... 9, 0	1, 2, ... 9, 0	

Для просмотра функций кнопок баз кодов 8 и 9 (SAT, STB, DVB устройства) перейдите по следующей ссылке <http://www.pult-irc.ru/files/manual/SatCodesForIrcF.pdf>