

Приложение IRC 16 F (версия 18.02.14 12:47)

Модели оригинальных пультов и соответствующие им коды пульта IRC приведены в разделе "Коды пульта IRC 16 F".

Функции всех кнопок для каждого кода пульта IRC можно узнать из таблиц данного приложения.

Пульт IRC может иметь дополнительные функции (если указаны в столбце "Доп. функция"). Доступ к ним осуществляется при помощи кнопки SHIFT (см. в инструкции рис.1, п.16). Для доступа к дополнительным функциям нажмите кнопку SHIFT и, удерживая её нажатой, нажмите ту кнопку, дополнительная функция которой Вам необходима.

После первой установки батареек

Кнопка устройства пульта IRC	Код пульта IRC	Кнопка устройства пульта IRC	Код пульта IRC
TV	102	SHIFT + TV*	116
VCR	113	SHIFT + VCR*	119
AUX	114	SHIFT + AUX*	122
SAT	115	SHIFT + SAT*	129

* Нажмите кнопку SHIFT и, удерживая её нажатой, нажмите и отпустите одну из кнопок пульта: TV, VCR, AUX или SAT.

Доступные коды пульта IRC 16 F

Номер базы кодов (диапазон кодов)	Устройство базы кодов	Доступные коды пульта IRC
1 (101-199)	TV	101 - 147
2 (201-299)	VCR	201 - 211
3 (301-399)	AUX	301 - 339
4 (401-499)	SAT	401 - 404
5 (501-599)	TV	501 - 599
6 (601-699)	TV	601 - 696
7 (701-799)	-	Нет
8 (801-899)	SAT	801 - 899
9 (901-999)	SAT	901 - 999

Коды пульта IRC 16 F

Коды к устройствам марки SAMSUNG

Модель*	Устр-во	Код
00001B (DVD,VCR)	AUX, CD, DVD	307
00001B (TV)	TV	115
00002A (TV)	TV	124
00002G	AUX, CD, DVD	307
00002R	AUX, CD, DVD	307
00005B	AUX, CD, DVD	329
00005B (SHUTTLE)	AUX, CD, DVD	335
00006C	TV/VCR	114
00008D	AUX, CD, DVD	306
00008E (DVD,VCR)	AUX, CD, DVD	306
00008E (TV)	TV	115
00008J	AUX, CD, DVD	306
00011A	AUX, CD, DVD	301
00011E	AUX, CD, DVD	301
00011K	AUX, CD, DVD	301
00013C	VCR	201
00015F (DVD,VCR)	AUX, CD, DVD	305
00015F (TV)	TV	115
00016F (TV)	TV	115
00016F (VCR)	VCR	201
00025A	AUX, CD, DVD	301
00025A (TV)	TV	119
00038A	TV	115
00043A	TV/VCR	137
00048A (VCR)	VCR	201
00048C (VCR)	VCR	201
00049A	VCR	210
00052E	AUX, CD, DVD	334
00054A	AUX, CD, DVD	311
00055G (DVD)	AUX, CD, DVD	332
00055G (TV)	TV	119
00071A	AUX, CD, DVD	301
00071H (DVD)	AUX, CD, DVD	311
00071H (TV)	TV	119
00072C (DVD)	AUX, CD, DVD	311
00072C (TV)	TV	119
00074A	AUX, CD, DVD	334
00084K (DVD)	AUX, CD, DVD	333
00084K (TV)	TV	119
00092A	AUX, CD, DVD	301
00092M	AUX, CD, DVD	301
00092S	AUX, CD, DVD	301
00092T	AUX, CD, DVD	301
00093Q	AUX, CD, DVD	301
00094V	AUX, CD, DVD	301

Модель	Устр-во	Код
00100A (PC)	AUX, CD, DVD	309
00100A (TV)	TV	122
00100A (VCR)	VCR	201
00104A	TV	119
00104B	TV	119
00104C	TV	119
00104D	TV	119
00104E	TV	119
00104J	TV	119
00104K	TV	119
00107C	TV/VCR	114
00128B	TV	119
00130A (DVD)	AUX, CD, DVD	301
00130A (TV)	TV	128
00130A (VCR)	VCR	201
00141D (TV)	TV	124
00143B (DVD)	AUX, CD, DVD	301
00143B (TV)	TV	123
00143B (VCR)	VCR	201
00198D	TV	119
00198E	TV	119
00198F	TV	119
00198G	TV	119
00198H	TV	119
00199D	TV	119
00200B (TV)	TV	119
00200B (VCR)	VCR	201
00204A	TV/AUX	125
00204B	TV/AUX	125
00217B	TV	118
00220A (PC)	AUX, CD, DVD	309
00220A (TV)	TV	120
00220A (VCR)	VCR	201
00221E	TV/VCR	114
00221F	TV/VCR	114
00268F (DVD)	AUX, CD, DVD	301
00268F (TV)	TV	121
00268F (VCR)	VCR	201
00268C (DVD)	AUX, CD, DVD	301
00268C (TV)	TV	123
00268C (VCR)	VCR	201
00302H	TV	124
00308 (DVD)	AUX, CD, DVD	301
00308 (MONITOR)	TV	123
00308 (VCR)	VCR	201

Модель	Устр-во	Код
0070-37	VCR	201
01053A	AUX, CD, DVD	301
01137C	AUX, CD, DVD	301
01169G	AUX, CD, DVD	304
01169G (TV)	TV	123
01225C	AUX, CD, DVD	304
01271A	AUX, CD, DVD	308
10075M (TV)	TV	116
10075M (VCR)	VCR	201
10079B	TV	116
10103H	TV	128
10107C	TV	115
10107N	TV	115
10116A	TV	115
10116B	TV	115
10124A (TV)	TV	115
10124A (VCR)	VCR	206
10129B	TV	115
10129C	TV	115
10129D (TV)	TV	115
10329D (VCR)	VCR	201
10329G (TV)	TV	115
10329G (VCR)	VCR	201
10357A	VCR	201
10414A	VCR	201
10420A	VCR	201
10420L	VCR	201
14909-502-210	AUX, CD, DVD	318
14909-503-360 (CD)	AUX, CD, DVD	319
14909-503-360 (TAPE)	AUX, CD, DVD	317
19239-0013-00	AUX, CD, DVD	318
19239-0031-01	AUX, CD, DVD	319
19239-0039-01	AUX, CD, DVD	320
32199101020	TV	101
33004430241	TV	101
33004-441-251	TV	104
33004540031	TV	102
3F14-0000-313	TV	101
3F14-00003-330	TV	101
3F14-00004-250	TV	101
3F14-00007-010	TV	105
3F14-00007-250	TV	101
3F14-00007-311	TV	101
3F14-00007-313	TV	101
3F14-00007-330	TV	107

Модель	Устр-во	Код
3F14-00007-410	TV	105
3F14-00009-103	TV	101
3F14-00016-040	TV	106
3F14-00024-060	TV	107
3F14-00031-040	TV	102
3F14-00031-050	TV	102
3F14-00031-071	TV	102
3F14-00031-170	TV	102
3F14-00031-181	TV	102
3F14-00031-211	TV	102
3F14-00032-140	TV	102
3F14-00032-300	TV	102
3F14-00033-060	TV	102
3F14-00033-061	TV	102
3F14-00033-270	TV	117
3F14-00033-320	TV	102
3F14-00033-360	TV	117
3F14-00033-470	TV	102
3F14-00034-140	TV	102
3F14-00034-141	TV	102
3F14-00034-402	TV	112
3F14-00034-480	TV	102
3F14-00034-510	TV	112
3F14-00034-781	TV	107
3F14-00034-790	TV	107
3F14-00034-840	TV	102
3F14-00034-843	TV	102
3F14-00034-981	TV	107
3F14-00034-A10	TV	112
3F14-00037-022 (TV)	TV	103
3F14-00037-022 (VCR)	VCR	201
3F14-00037-040	TV	115
3F14-00037-041 (TV)	VCR	201
3F14-00037-041 (VCR)	TV	115
3F14-00038-092	TV	115
3F14-00038-093	TV	115
3F14-00038-110	TV	112
3F14-00038-150	TV	126
3F14-00038-170 (TV)	TV	115
3F14-00038-170 (VCR)	VCR	201
3F14-00038-242 (TV)	TV	115
3F14-00038-242 (VCR)	VCR	203
3F14-00038-300	TV	115
3F14-00038-321	TV	115
3F14-00038-450 (TV)	TV	115

* По каталогу «IRC»

Коды пульта IRC 16 F

Коды к TV, VCR, AUX, SAT устройствам марки SAMSUNG

Модель	Устр-во	Код
3F14-00038-450 (VCR)	VCR	201
3F14-00040-060	TV/VCR	114
3F14-00040-061	TV/VCR	114
3F14-00040-071	TV/VCR	114
3F14-000401	VCR	202
3F14-00040-141	TV/VCR	114
3F14-00048-110	TV/VCR	114
3F14-00048-170	TV/VCR	114
3F14-00048-260	TV	116
3F14-00050-020	TV	116
3F14-00050-040 (TV)	TV	138
3F14-00050-040 (VCR)	VCR	201
3F14-0007-330II	TV	101
3F14-026050	TV	117
3GBB600649	TV	106
6100485891	TV	109
633-110	VCR	202
633-209	VCR	201
633-251	VCR	201
633-254	VCR	201
636-202	VCR	201
636-209	VCR	201
A931234567890	TV	102
AA59-00003A	TV/VCR	137
AA59-00332A	TV	129
AA59-00332C	TV	129
AA59-00332D	TV	129
AA59-00332E	TV	129
AA59-00332F	TV	129
AA59-00332G	TV	129
AA59-00332H	TV	129
AA59-00353A (TV)	TV	131
AA59-00353A (VCR)	VCR	201
AA59-00357B	TV	129
AA59-00357D	TV	129
AA59-00370B	TV	129
AA59-00385A	TV	124
AA59-00399A	TV	129
AA59-00401B	TV	129
AA59-00401C	TV	129
AA59-00421A	TV	129
AA59-00431A	TV	140
AA59-00560A	TV	140
AA59-00602A	TV	140
AA59-00741A	TV	140

Модель	Устр-во	Код
AA59-00742A	TV	140
AA59-00743A	TV	140
AA59-00793A	TV	140
AA59-00795A	TV	140
AA59-10014R	TV	115
AA59-10027P	TV/VCR	114
AA59-10032W	TV	115
AA59-10075F	TV/VCR	114
AA59-10075G	TV/VCR	114
AA59-10075J	TV/VCR	114
AA59-10075K	TV	115
AA59-10075W	TV/VCR	114
AA59-10076M	TV	115
AA59-10076P	TV	115
AA59-10079M	TV	116
AA59-10079S	TV	122
AA59-10079T	TV	122
AA59-10081F	TV	115
AA59-10081N	TV	115
AA59-10083T (TV)	TV	128
AA59-10083T (VCR)	VCR	201
AA59-10095U	TV	115
AA59-10107F	TV	124
AA59-10116A	TV	115
AH59-00004U (CD)	AUX, CD, DVD	312
AH59-00004U (TAPE)	AUX, CD, DVD	317
AH59-00043F (CD)	AUX, CD, DVD	312
AH59-00043F (TAPE)	AUX, CD, DVD	317
AH59-00043N	AUX, CD, DVD	312
AH59-00063A (DECK)	AUX, CD, DVD	317
AH59-00063A (DVD/CD)	AUX, CD, DVD	321
AH59-00134E (CD)	AUX, CD, DVD	312
AH59-00134E (TAPE)	AUX, CD, DVD	317
AH59-00134H (CD)	AUX, CD, DVD	312
AH59-00134H (TAPE)	AUX, CD, DVD	317
AH59-00134L (CD)	AUX, CD, DVD	312
AH59-00134L (TAPE)	AUX, CD, DVD	317
AH59-00134T (CD)	AUX, CD, DVD	312
AH59-00134T (TAPE)	AUX, CD, DVD	317
AH59-01049A	AUX, CD, DVD	302
AH59-01049B	AUX, CD, DVD	302
AH59-01049G	AUX, CD, DVD	302
AH59-01055A (CD)	AUX, CD, DVD	312
AH59-01055A (TAPE)	AUX, CD, DVD	317
AH59-01068B	AUX, CD, DVD	303

Модель	Устр-во	Код
AH59-01101G	AUX, CD, DVD	303
AH59-01159F (CD)	AUX, CD, DVD	322
AH59-01159F (TAPE)	AUX, CD, DVD	323
AH59-01159H (CD)	AUX, CD, DVD	322
AH59-01159H (TAPE)	AUX, CD, DVD	323
AH59-01159L (CD)	AUX, CD, DVD	322
AH59-01159L (TAPE)	AUX, CD, DVD	323
AH59-01159Q (CD)	AUX, CD, DVD	322
AH59-01159Q (TAPE)	AUX, CD, DVD	323
AH59-01159S (CD)	AUX, CD, DVD	322
AH59-01159S (TAPE)	AUX, CD, DVD	323
AH59-01175A	AUX, CD, DVD	315
AH59-01252G	AUX, CD, DVD	339
AH59-01317A	AUX, CD, DVD	304
AH59-01359A (CD)	AUX, CD, DVD	312
AH59-01359A (TAPE)	AUX, CD, DVD	317
AH59-01404B (DVD)	AUX, CD, DVD	304
AH59-01404B (TV)	TV	113
AH59-01418A	AUX, CD, DVD	310
AH59-01426A (DVD)	AUX, CD, DVD	304
AH59-01426A (TV)	TV	113
AH59-01511A	AUX, CD, DVD	304
AH59-01527G (DVD)	AUX, CD, DVD	304
AH59-01527G (TV)	TV	113
AH59-01617Q (DVD)	AUX, CD, DVD	304
AH59-01617Q (TV)	TV	113
AH59-01643C (DVD)	AUX, CD, DVD	304
AH59-01643C (TV)	TV	113
AH59-01644Z	AUX, CD, DVD	308
AH59-01662B (DVD)	AUX, CD, DVD	304
AH59-01662B (TV)	TV	124
AH59-01662V (DVD)	AUX, CD, DVD	304
AH59-01662V (TV)	TV	113
AH59-01695E	AUX, CD, DVD	316
AH59-01718A (DVD)	AUX, CD, DVD	304
AH59-01718A (TV)	TV	113
AH59-01778S (DVD)	AUX, CD, DVD	304
AH59-01778S (TV)	TV	113
AH59-01778T (DVD)	AUX, CD, DVD	304
AH59-01778T (TV)	TV	113
AH59-01787V	AUX, CD, DVD	331
AH59-01787R (DVD)	AUX, CD, DVD	304
AH59-01787R (TV)	TV	113
AH59-01907R	AUX, CD, DVD	304
AH59-01951E (DVD)	AUX, CD, DVD	313

Модель	Устр-во	Код
AH59-01951E (TV)	TV	113
AH59-01951G (DVD)	AUX, CD, DVD	313
AH59-01951G (TV)	TV	113
AH59-01960B	AUX, CD, DVD	314
AH59-02010E	AUX, CD, DVD	314
AH59-02146A	AUX, CD, DVD	330
AH59-02146S	AUX, CD, DVD	330
AH59-02361A (DVD)	AUX, CD, DVD	313
AH59-02361A (TV)	TV	140
AH59-02426A	AUX, CD, DVD	337
AH59-02692P	AUX, CD, DVD	338
AH59-10082A	AUX, CD, DVD	324
AH59-10085A	AUX, CD, DVD	319
AH59-10096A (CD)	AUX, CD, DVD	325
AH59-10096A (DECK 1)	AUX, CD, DVD	326
AH59-10096A (DECK 2)	AUX, CD, DVD	327
AH59-10120A (CD)	AUX, CD, DVD	312
AH59-10120A (TAPE)	AUX, CD, DVD	317
AH59-10124B	AUX, CD, DVD	312
AH64-50327A	AUX, CD, DVD	301
AH64-50361A	AUX, CD, DVD	301
AH64-50361A-A	AUX, CD, DVD	307
AH64-504361A	AUX, CD, DVD	301
AH81-00453A	AUX, CD, DVD	312
AIR COND-01	HOME APPLIANCES	211
AK59-00103D	AUX, CD, DVD	311
AK59-00103G	AUX, CD, DVD	311
AK59-00110A (DVD)	AUX, CD, DVD	333
AK59-00110A (TV)	TV	127
AK59-00117A	AUX, CD, DVD	311
AK59-00118A	AUX, CD, DVD	333
AK59-00133A	AUX, CD, DVD	336
AK59-00148A	AUX, CD, DVD	336
AK59-00148A (TV)	TV	119
AR-222	VCR	202
AR-3133 (CD)	AUX, CD, DVD	319
AR-3133 (TAPE)	AUX, CD, DVD	326
AR-427	VCR	202
AR-5027 (CD)	AUX, CD, DVD	312
AR-5027 (TAPE)	AUX, CD, DVD	317
AUX-01	AUX, CD, DVD	319
BN59-00343A (DVD)	AUX, CD, DVD	301
BN59-00343A (TV)	TV	127
BN59-00343A (VCR)	VCR	201
BN59-00366A	TV	136

Модель	Устр-во	Код
BN59-00378A (TV)	TV	143
BN59-00378C (TV)	TV	143
BN59-00397B (TV)	TV	139
BN59-00434C	TV	135
BN59-00437A	TV	129
BN59-00488A	TV	134
BN59-00507A	TV	113
BN59-00529A (DVD)	AUX, CD, DVD	301
BN59-00529A (TV)	TV	133
BN59-00529A (VCR)	VCR	201
BN59-00530A (DVD)	AUX, CD, DVD	301
BN59-00530A (TV)	TV	143
BN59-00530A (VCR)	VCR	201
BN59-00539A (DVD)	AUX, CD, DVD	301
BN59-00539A (TV)	TV	113
BN59-00539A (VCR)	VCR	201
BN59-00557A (DVD)	AUX, CD, DVD	301
BN59-00557A (TV)	TV	133
BN59-00557A (VCR)	VCR	201
BN59-00567A (DVD)	AUX, CD, DVD	301
BN59-00567A (TV)	TV	133
BN59-00567A (VCR)	VCR	201
BN59-00589A	TV	141
BN59-00602A (TV)	TV	113
BN59-00603A (DVD)	AUX, CD, DVD	301
BN59-00603A (TV)	TV	144
BN59-00603A (VCR)	VCR	201
BN59-00609A	TV	113
BN59-00683A	TV	142
BN59-00684B	TV	142
BN59-00685A	TV	140
BN59-00686A	TV	140
BN59-00863A	TV	140
BN59-00865A	TV	140
BN59-00940A	TV	140
BN59-00960A	TV	140
BN59-01039A	TV	140
BN59-01054A	TV	140
BN59-01069A	TV	146
BN59-01198C	TV	140
BN59-01199G	TV	140
BN59-01259B	TV	145
BP59-00042A (DVD)	AUX, CD, DVD	301
BP59-00042A (TV)	TV	130
BP59-00042A (VCR)	VCR	201

Модель	Устр-во	Код
CB528Z	TV	107
CH116	TV	107
CJ044	TV	115
CRM-E5A	HOME APPLIANCES	208
CRM-E6	HOME APPLIANCES	208
CRM-K3	HOME APPLIANCES	208
DSR-9000	SAT, STB, DVB	402
DSR-9400	SAT, STB, DVB	403
DSR-9500	SAT, STB, DVB	403
DVD-909	AUX, CD, DVD	307
I.R.C.	TV	105
KCD-11	AUX, CD, DVD	328
M701	TV	101
MF59-00242A	SAT, STB, DVB	403
MF59-00242C	SAT, STB, DVB	404
R43	TV	115
RC10302	VCR	203
RC633206	VCR	203
RC633208	VCR	203
RC633211	VCR	202
RC-7100	TV	111
RC-H1	HOME APPLIANCES	207
REM07	TV	101
REM101	TV	101
REM23	TV	101
RF1400009103	TV	101
RM-097	TV	105
RM-101	TV	101
RM-103	TV	107
RM-105	TV	117
RM-109	TV	102
RM-111	TV	117
RM-113	TV	132
RM-9210	VCR	203
RM-A1	HOME APPLIANCES	208
RM-E8	HOME APPLIANCES	209
SOME MODELS	TV	108
SV-91	VCR	206
TM07	TV	101
TV-01	TV	115
TV-02	TV	117
TV-03	TV	101
TV-04	TV	109
TV-05	TV	119
TV-06	TV	117

Модель	Устр-во	Код
TV-07	TV	107
TV-08	TV	110
TV-09	TV	102
TV-10	TV	147
VB1560	VCR	205
VB1561	VCR	205
VCR-02	VCR	201
VCR-05	VCR	203
VCR-06	VCR	201
VCR-07	VCR	203
VCR-08	VCR	206
VDS3300	SAT, STB, DVB	401

Коды к TV устройствам различных марок

Марка	Код
AEG	544
AIWA	502, 503, 523, 528, 579, 634, 678
AKAI	501, 503, 512, 516, 520, 522, 524, 525, 537, 538, 540, 545, 546, 547, 550, 571, 572, 582, 583, 584, 585, 598, 608, 613, 626, 652, 673, 691
AKIRA	511, 514, 516, 524, 525, 537, 538, 541, 545, 547, 556, 577, 586, 594, 597, 598, 601, 623, 626, 629, 631, 649, 666, 680, 689, 690, 693
AMCOL	501, 525, 545
ANITECH	501, 525
ATLANTA	501
AVEST	537, 538, 539
BBK	522, 551, 594, 597, 684
BEKO	525, 530, 535, 559
BIGSTON	501, 503
BLAUPUNKT	512
BORK	525, 547, 646
BROKSONIC	501
CAMERON	550, 567, 675
CASIO	529
CHANGHONG	516, 642
CLATRONIC	501
CONTEC	501, 603, 604, 613
CORTLAND	644
CROWN	501, 503, 511, 524, 525, 530, 571
DAEWOO	501, 508, 518, 520, 525, 526, 536, 538, 539, 546, 565, 571, 576, 598, 613, 685, 687, 692
DARTLAND	501
DAYTRON	501
DIGITAL	547
DISTAR	562, 616
DNS	596
ELEKTA	501, 503, 520, 525, 527, 615
ELEKTRONIKA	583
ELENBERG	538, 545, 550, 565, 567, 579, 581, 644, 655, 676, 683
EPLUTUS	537, 644, 677, 682
ERC	537, 631
ERISSON	511, 514, 516, 525, 526, 537, 538, 541, 550, 556, 561, 568, 586, 596, 599, 623, 626, 629, 631
EVGO	538, 540, 630
FINLUX	501, 511, 583, 589, 608
FUJITSU	544, 573
FUNAI	501, 502, 503, 504, 505, 525, 537, 538, 581, 603
FUSION	596, 642
GBS	501, 520, 525, 571, 583
GENERAL	537, 556
GOLD STAR - LG	501, 512, 518, 525, 527, 559, 570, 583, 584, 589, 609, 613, 642
GRUNDIG	501, 512, 525, 606, 662
HAIER	518, 526, 561, 574, 657, 667, 669
HAPPY	501
HCM	501, 525
HIL	503
HITACHI	501, 515, 518, 522, 525, 537, 544, 548, 554, 578, 584, 587, 588, 604, 613, 640
HORIZONT	525, 540, 545, 550, 559, 583, 672
HPC	546
HYUNDAI	516, 522, 525, 526, 537, 540, 541, 546, 547, 550, 556, 580, 596, 597, 599, 626, 642, 650, 655
INNO-HIT	501, 525, 571
IRBIS	596
IVA (MBA)	537, 561, 637
IZUMI	516, 537, 596, 663, 691, 695
JINLIPI	537, 637
JVC	513, 515, 593, 604
KAMACROWN	571
KANSAI	501, 525
KENSTAR	516
KITT	613
KONKA	560, 581, 616
LOEWE	542
MINISUBISHI	501, 520, 522, 525, 604, 611
MIYOTA	537, 644, 656
MTC	501, 583
MULTITECH	501
MYSTERY	516, 537, 597, 642, 650, 653
NASH	537
NEC	501, 517, 520, 526, 552, 604, 625
NESCO	501, 525
NOKIA	519, 584, 610, 614, 616
NOVA	501, 616, 638
NOVEX	516, 546, 599
OMEGA	501, 571
ONIDA	513
ONIKS	516, 525, 537, 545, 546, 547
ONWA	524, 525
ORBITA	635
ORION	501, 503, 506, 507, 509, 516, 525, 528, 537, 591, 603, 617, 619, 627, 641, 643, 664
ORSON	526, 537
PANASONIC	512, 531, 532
PHILIPS	501, 511, 524, 525, 540, 549, 628, 639
PHOENIX	613
PIONEER	555, 566, 575, 647, 666
PIXELVIEW	525
POLAR	525, 526, 537, 538, 540, 543, 547, 581, 596, 599, 663, 664, 683
POLAROID	525
POWER VISION	501
PRESTIGIO	564, 656
PRIMA	522, 547
PROLOGY	653, 655
RADUGA	525, 545, 569, 583
RAINFORD	525, 537, 544, 545
RECOR	511, 525
REKORD	520, 525, 526, 537, 538, 539, 545, 547
RFT	535
ROADSTAR	501, 508, 525, 571
ROLSEN	503, 516, 525, 537, 538, 540, 543, 546, 564, 576, 592, 594, 596, 649, 656, 669, 684

Коды к TV устройствам различных марок

Марка	Код
ROVERSCAN	662
RUBIN	504, 516, 525, 537, 546, 583, 619, 665
SABA	510, 521, 602
SALORA	584
SAMSUNG	501, 525, 526, 529, 563, 580, 595, 608, 612, 613, 622, 641, 645, 688
SANSUI	524, 525, 538, 556, 695
SANYO	501, 519, 522, 525, 530, 540, 550, 558, 604, 608, 610, 618, 621, 696
SATELLITE	616
SCARLETT	541, 545
SCHNEIDER	525, 540, 571
SETRO	520
SHARP	526, 544, 548, 604
SHERION	616
SHIVAKI	501, 503, 508, 516, 518, 520, 525, 526, 527, 536, 538, 539, 540, 545, 546, 547, 550, 556, 580, 583, 585, 596, 599, 609, 619, 630, 632, 635, 636, 643, 644, 664, 681, 694
SIEMENS	512, 525, 660
SIESTA	501, 537, 637
SILELIS	613
SILVER	633
SITRONICS	503, 516, 525, 537, 538, 540, 543, 545, 594, 626, 629, 661, 671, 672, 674, 679, 680, 686
SOKOL	516, 525, 547, 635
SONY	533, 604, 659
SPEKTR	525, 538, 668
START	525, 537, 545, 546, 547
STASSFURT	535, 618
STINOL	525
SUPER	537, 561, 644, 653, 654, 655, 666, 677, 682
SUPRA	501, 508, 516, 518, 520, 525, 527, 529, 536, 537, 541, 563, 579, 580, 596, 597, 612, 643, 687, 690
SUZUKI	516, 556
TCL	538, 540
TECHNO	501, 525, 538, 544, 546, 556, 568, 579, 596, 599, 644, 664
TECKTON	522, 582, 601, 669, 670
TELEFUNKEN	510, 521, 590, 602, 605
TELEVISION	501, 525, 616
THOMSON	509, 510, 521, 550, 579, 602, 624, 642
TOSHIBA	516, 553, 604, 651
TRONY	516, 525, 537, 538, 550
TVT	511, 525, 530, 535, 538, 583, 586, 620
UNITED	525
VARTA	642
VESTEL	525, 544, 556, 583, 619
VIEWSONIC	557
VITA	547
VITEK	537, 650
VITYAS	525
VOLNA (ВОЛНА)	635
VR	516, 537
WALTHAM	503, 509, 511, 583, 584, 607, 613
XORO	522, 526, 545
НЕИЗВЕСТНАЯ МАРКА	546, 574, 596, 648, 656, 666

Коды к SAT устройствам различных марок

Марка	Код
AIR TONE	968
ALFA GOLD	828
AMINO (СТРИМ)	829, 902
ARION	835
ASTON	811
BBK	931
BIG SAT	839, 840, 903, 936
BIG STAR	965
CADENA	958, 962
CONTINENT	886, 975
COSHIP	855
DAEWOO	872
D-COLOR	946
DELTA SYSTEMS	985
DIVISAT	957, 958
D-LINK	923
DNS	968
DR.HD	983
DRE (GENERAL SATELLITE)	804, 868, 888, 907, 933, 954
DREAM	819
DUNE	927, 934
ECHOSPACE	862
ECHOSTAR	808, 809, 822
ELTEX	987
EUROSKY	840, 880
EUROSTAR	863
EUSTON	825
EVO	965
GALAXY INNOVATIONS	878, 881, 908, 911, 912, 917, 924
GLOBALTEQ	833
GLOBO	909, 915, 925, 935, 945, 956, 973, 999
GOLD STAR - LG	871
GOLDEN INTERSTAR	821, 841, 879, 918
GOLDEN MEDIA	847, 912
GOLDMASTER	911
HITACHI	824, 832
HIVION	929
HOME	968
HOMECAST (ВОЛЯ)	820, 831, 836
HUMAX	803, 804, 823, 848, 860, 861, 905, 949
HYUNDAI	968
ID DIGITAL	804
INTEK	984
KAON	820
KOSMOS	855, 856
LANS	970
LOCUS	946
LUMAX	852, 873, 907, 913, 965, 994
MAG	988
MEDIA COM	825
MOTOROLA	883, 884, 901
MYSTERY	910, 997
NDS	814
NEXT	864
NOKIA	813
NOT	941
ONLIME	905
OPENBOX	827, 835, 869, 870, 911, 990, 991
OPENTECH	972
OPENTEL	865
ORBITA	946, 995
ORIEL	887, 926, 941, 948, 955, 986
PACE	801, 932, 953
PATIX DIGITAL	992
PAUXIS	842, 859
PHILIPS	857, 899
PIONEER	851
POLAR	858
REFLECT	959
RIKOR	916, 947
ROLSEN	930, 941, 942, 961
SAGEMCOM	906
SAMSUNG	803, 810, 812, 854
SEG	818
SEZAM	882
SKY VISION	952, 966, 977, 982
SKYMASTER	830
SKYWAY	911
SKYWORTH	989
STAR	833
STAR TRACK	826, 835, 943
STARNET	885
STRONG	805, 806, 815, 816, 817, 828, 830, 914
SUNNIWELL	875
SUPERBOX	903
SUPERMAX	821, 866, 880, 924
SUPRA	950, 960, 962
TECHNOSAT	852, 853
TEL-ANT	960
TELEFUNKEN	961, 968
TESLER	926
TOP BOX	965
TOPFIELD	837, 838, 877, 891
TOSHIBA	876
TV STAR	967
TVJET	946, 976
VESTEL	820, 824
VU+	919, 920, 921, 922

Коды к SAT устройствам различных марок

Марка	Код
WORLD VISION	821, 928, 951, 952
XSAT (НТВ+)	801, 802, 807, 906, 972, 984, 998
YUXING	904
ZYXEL	874
БИЛАЙН	883, 884, 901, 923
ВОЛГАТЕЛЕКОМ	842, 843, 844, 845, 846, 847, 849, 850, 858, 867
ДОМ.RU	820, 905
ДОМОЛИНК	874, 904
МТС	855, 964, 974, 979, 980, 989, 993
НЕИЗВЕСТНАЯ МАРКА	834, 835, 842, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 903, 904, 937, 938, 939, 940, 944, 945, 969, 971, 978, 996
РОСТЕЛЕКОМ	874, 904, 923, 963
СИГНАЛ	968
ТЕЛЕКАРТА	867, 909, 973
ТЕЛЕЦИФРА	968

Функции кнопок пульта IRC 16 F к TV устройствам

Кнопки пульта IRC 16 F	Код 101		Код 102		Код 103		Код 104		Код 105	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	COLOUR +; ☉ +		DBB	HUE +	←		☉; BROWSE; 9+ +		☉; FIN +	
AUDIO; NICAM			I-II; ☉; ☐; STEREO		☉		I/II; RGB			
VIDEO; SYS	MODE; P/S		PAL/SECAM; NIC.		☉		S-VIDEO; I-II			
☐; ZOOM	SIZE		☐		☐		ROTATE			
▼; TV	COLOUR -; ☉ -		TV; ☐	HUE -	☐		☐; LIST; 9+ -		☐; FIN -	
☐; ↗	PIP		▶; AST; SEAR.; Q.V.		☐; ☐		STORE	◆	☐; AUTO.S	
☐; LOCK	STILL		↔; P.P.; OK		☐	⊗	↔; P.C.; IPE			
▲; FAV	FC		MEMO		☐					
☐	POWER; ☐		☐; OFF; STAND BY		☐		☐		☐; POWER	
AV	TV/VIDEO; TV/AV		AV; ↔; VIDEO	☐; CLEAR	☐	☐ AV1	TV/AV		AV; TV/AV	
☐	MUTE; ☐		☐; MUTE; ☐		☐		☐		MUTE; MUTING	
MENU	FUNCT; MENU		MENU		MENU					
EXIT			Arret							
▲	FUN+; +; ▲; ZOOM		☐ +; ▲	☐ +	▲; ☐		☐ +	☐ +	☐ +	
◀	☐ -; ☐ -		FINE-; FT; TUNE◀	☐ -	◀		☐ -	☐ -		
OK	PIC SEL; FUNCT		MENU; F; PIC; SEL		◀					
▶	☐ +; ☐ +		FINE+; FT+; TUNE▶	☐ +	▶		☐ +	☐ +		
▼	FUN-; -; ▼; -PI-		☐ -; ▼	☐ -	▼; ☐		☐ -	☐ -	☐ -	
☐; SETUP	PIC; SET ON TIME		SMART CONT. PICT		☐		☐; PICTURE		☐; PIC; M.CH	
♪; TITLE	X ON TIME		SMART CO. SOUND		☐ / ∇ / III		☐ / ∇ / M/S		BAND	
☐	MIN; MINUTE		☐; TTR; TTX	☐; MIX; TMM	☐	☐				
GUIDE	HOUR; HR CLOCK		SYS; 13-24		☐		CS			
☐	SLEEP; OFF TIME; ☐		TIMER; SLEEP; ☐		☐				TIMER; NORM	
☐			☐; SPAT; ☐		☐		☐			
RED; ●	1-; 10~		RED; ♪; Pon	9+ -	RED		RED; INDEX	R	13	
GREEN; ▯	2-		GREEN; ♪; Pst	9+ +	GREEN		GREEN	G	14	
YELLOW; ▯	3-; SCAN		YELLOW; ☐; Psz	◀	YELLOW		YELLOW	Y	15	
BLUE; ▯	4-; MSG		BLUE; ☐; ←	▶	BLUE		BLUE	B	16	
☐	RECALL; DISPLAY		DISPLAY; STAT; ☐		☐		PIC; 2-; ☐			
☐	☐; Q. VIEW; ☐		P; P; Q. VIEW; ☐		☐; Pr.					
VOL -	VOLUME ▼; ↘		VOL -; ↘; -	↘; ↘; L	↘		↘	↘ L	↘; VOL.DOWN	
VOL +	VOLUME ▲; ↗		VOL +; ↗; +	↗; ↗; R	↗		↗	↗ R	↗; VOL.UP	
CH V; ◀	CHANNEL ▼; P -		P -; CH -; PROG -	↓	▼; ☐		PR -	→ -	# -; CH. DOWN	
CH A; ▶	CHANNEL ▲; P +		P +; CH +; PROG +	↑	▲; ☐		PR +	→ +	# +; CH. UP	
±; SAT	±		-/-; PAGE +; ☐		-/-; ☐		-/-; 1-; N/N		11	
CLEAR; X	RESET; CANCEL; X		PIC; TPD; PAGE -; ☐; SYS; PIP; ☐		X; ☐		☐; UPDATE		12	
◀; ☐			☐; TSC; SUB.PAGE		☐		☐			
▶; i			☐; X; T INDEX; ☐		☐		☐; S. KEY +			
▶; ?			☐; REV		☐		☐; S. KEY -			
☐; X			☐; TP; STORE		☐		☐			
☐; ☐			☐; TST		☐		☐			
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F к TV устройствам

Кнопки пульта IRC 16 F	Код 106		Код 107		Код 108		Код 109		Код 110	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	↘ R									
AUDIO; NICAM	Ω									
VIDEO; SYS	S									
☐; ZOOM	1/2									
▼; TV	↘									PIP OFF
☐; ↗	M									PIP
☐; LOCK	☐									CH SEARCH
▲; FAV										
☐	☐		POWER		POWER		POWER		☐; POWER	
AV	☐		TV/VIDEO				TV/VIDEO; TV		SOURCE	
☐	☐		☐		MUTE		MUTE		MUTE	
MENU									MENU	
EXIT									EXIT	
▲	☐ +		MODE ▲				BRIGHT ▲		▲	
◀	☐ -		FINE ▼				COLOR ▼		◀	
OK										
▶	☐ +		FINE ▲				COLOR ▲		▶	
▼	☐ -		MODE ▼				BRIGHT ▼		▼	
☐; SETUP	☐		P-MODE				Q.V.		☐	
♪; TITLE	☐								☐	
☐	☐								☐	
GUIDE							HOUR			
☐	☐ ?		SLEEP				MIN			
☐	☐						SLEEP			
RED; ●	RED		BRIGHT ▼				CLOCK			
GREEN; ▯	GREEN		BRIGHT ▲				ON TIME			
YELLOW; ▯	YELLOW		COLOR ▼				OFF TIME			
BLUE; ▯	BLUE		COLOR ▲							
☐	30		STD							
☐	P/C		RECALL				RECALL		☐	
VOL -	↘	☐ -	VOL ▼		VOLUME -		VOL ▼		☐	
VOL +	↗	☐ +	VOL ▲		VOLUME +		VOL ▲		☐	
CH V; ◀	P -	9+ -	CH ▼				CH ▼		☐	
CH A; ▶	P +	9+ +	CH ▲				CH ▲		☐	
±; SAT	±		1*		1-		1*			
CLEAR; X	20		2*		2-					
◀; ☐	☐									
▶; i	☐									
▶; ?	☐									
☐; X	☐									
☐; ☐	☐									
1, 2, ... 9, 0	1, 2, ... 9, 0/AV		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F к TV устройствам

Кнопки пульта IRC 16 F	Код 111		Код 112		Код 113		Код 114		Код 115	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			FINE ▲		DVD		TRK ▲; []		[] SURROUND	
AUDIO; NICAM					I-II; DUAL		LANG.SEL; []		[] S.MODE; []	
VIDEO; SYS			CAPTION		VCR		SHOW VIEW		[] STORE; ADD	
[] ZOOM	ZOOM		AUTO-PRG;A;SEAR.		SIZE	(●); SRS	[]		ZOOM; P.SIZE; []	
▼; TV	TV		FINE ▼		TV		TRK ▼; []		[] TV	
[]			PRE-CH		PIP		M; MEMORY; []	▶▶	PIP ON; PIP; []	CH.SCAN; ▲
[] LOCK			ERASE		[] SWAP		SP/LP		STILL; []	[] K.LOCK
▲; FAV					E.SAVING	Anynet	▲; EJECT		SWAP; []	[]
[]	[]		POWER		[] ; [] ; POWER		OFF; [] ; POWER		POWER; []	
AV	AV		TV/VIDEO		TV/VIDEO; [] ; []	HDMI	[] INPUT		VIDEO; [] ; AV; []	
[]	[]		[] MUTE		[] ; MUTE		MUTE; []		MUTE; []	
MENU	MENU		MENU		MENU; [] ; []		MENU; []	V_MENU	MENU; [] ; F.MENU	
EXIT			ESCAPE		EXIT; [] ; [] ; C.ANC.					
▲	P+	[] +	MODE ▲						P+; P▲; []	
◀	[]	[] -							[] ; VOL ◀	
OK	OK				[] ; ENTER					
▶	[]	[] +							[] ; VOL ▶	
▼	P-	[] -	MODE ▼						P-; P▼; []	
[] SETUP			P-MODE		[] ; TV	[] ; P.MODE	I-II; S.MODE		[] ; P.STD; []	
[] TITLE			AIR/CATV; TV/CATV		[] ; S.MODE		[] ; S.STD		[] ; S.STD; []	
[]	TEXT		DEMO		[] ; TTX/MIX		[] ; TV/TEXT	REC; [] ; ENRG.	TTX/MIX; [] ; TEXT	[] ; MIX
GUIDE			ADD		[] ; POSITION; []		[] ; P.STD; []	[] ; SLOW	HELP; ?	
[]	SLEEP		SLEEP		SLEEP		[] SLEEP		[] SLEEP; []	
[]	[]				CH MGR; CH LIST		CRYSTAL PB	[]	LANGUAGE; HELP; ?	[] ; LIST
RED; []	RED; FOTO				RED; [] ; P.MOD.	[] ; REC	RED; []	RED; []	RED; []	LOCAT.; ROTAT.; []
GREEN; []	GREEN; ZOOM				GREEN; [] ; S.M.	STB	GREEN; []	GREEN; []	GREEN	FACTORY; H1
YELLOW; []	YELLOW; ?				YELLOW; STILL	CABLE	YELLOW; INDEX; []	YELLOW; []	YELLOW	3-SPEED; H2
BLUE; []	BLUE; []				BLUE; P.SIZE	PC	BLUE; MENU; []	BLUE; []	BLUE	
[]	[]		STD; P-STD; DISPL.		[] ; INFO []		[]		DISPLAY; [] ; []	
[]	[]		RECALL		[] ; PRE-CH	RETURN; []	[] ; PRE-CH	P/C	PP CH; PRE CH; []	P/C
VOL -	[]		VOLUME ▼		VOLUME -; []		[]		[] ; VOL ◀	
VOL +	[]		VOLUME ▲		VOLUME +; []		[]		[] ; VOL ▶	
CH V; []	P-		CHANNEL ▼		CH; CH▼; P▼; []	P ▼	C/P▼; []		P-; P▼; []	
CH ▲; []	P+		CHANNEL ▲		CH+; CH▲; P▲; []	P ▲	C/P▲; []		P+; P▲; []	
[] SAT			+100		[]		[]		[] ; +100; []	
CLEAR; X					[] ; CANCEL		CLEAR; X; []		X; [] ; C.ANC.; ERASE	
[]					[] ; REW		[] ; REW; [] ; []		[] ; SUBPAGE	
[]	[]				[] ; PLAY/PAUSE	[]	[] ; PLAY; [] ; []		[] ; INDEX	
[]	[]				[] ; FF	[]	[] ; FF; [] ; []	[] ; SLOW; []	[] ; REVEAL	
[]	[]				[] ; STOP	[] ; PIP	[] ; STOP; [] ; []		[] ; HOLD	
[]	[]				[] ; PLAY/PAUSE	[] ; SOURCE	P/S; [] ; P/I	[]	[] ; SIZE; F/T/B	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F к TV устройствам

Кнопки пульта IRC 16 F	Код 116		Код 117		Код 118		Код 119		Код 120	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	PAGE ▲		Q.VIEW; +; ↑				[] SWAP		VCR/DVD DEVICE	
AUDIO; NICAM	[] ; S.STD		S-SEL				LOCATE; []		PERFECT FOCUS	
VIDEO; SYS	[] ; P.STD		P-SEL				SIZE		[] TV/VIDEO	
[] ZOOM	P.SIZE		SIZE				P.SIZE; [] ; []		POSITION/SIZE	
▼; TV	PAGE ▼		[] ; ↓		PC		TV; []		TV; []	
[]	PinP ON; PIP	▲; SCAN	PIP ON/OFF; IDIOMA		PIP; ON	AUTO	PIP ON	SCAN	PIP; PIP ON	SCAN
[] LOCK	[] SWAP	[] STILL	RESET; NORM/CL.		STILL; []		[] STILL PICTURE		[] SWAP	
▲; FAV	[] ROTATE; LOCAT.						[] STILL		LOCATE; []	
[]	[] POWER		POWER		POWER; []		POWER; []		POWER; []	
AV	[] TV/VIDEO	TV/VIDEO	TV/VIDEO		TV/VIDEO; []		VIDEO; [] ; []	TV/VIDEO	VIDEO; []	
[]	[] MUTE		MUTE		MUTE; []		MUTE; []		[] MUTE	
MENU	[] MENU		AUTO/MAN SYS.; +		MENU; []		MENU; []		MENU; [] ; []	
EXIT					EXIT					
▲	CH ▲; CH UP		MODE ▲				CH ▲			
◀										
OK	[] STORE								[]	
▶										
▼	CH ▼; CH DOWN		MODE ▼				CH ▼			
[] SETUP	[] P.MENU		PIC. MODE; P-MODE		P.STD; [] ; []		P.MENU; []		INFO.	
[] TITLE	[] S.MODE; MTS	[] SURROUND			S.STD; [] ; []		S.MODE; I-II; []		S.MODE; [] ; []	
[]	[] TV/TEXT	[] MIX	S-MODE; CLOCK		TTX/MIX; [] ; []		[] TTX/MIX		[] TEXT/MIX	
GUIDE	N.R		HOUR		MIX; []				TV DEVICE	
[]	[] SLEEP	SKIP TIMER	SLEEP; AC		SLEEP; []		SLEEP; [] ; []		SLEEP; [] ; []	
[]	[] LIST/FLOF		TIMER		LIST/FLOF; []		[] MIX		MIX	
RED; []	RED; PRE-CH		MINUTE; MIN		RED; P.SIZE		RED; TURBO		RED; []	AV-LINK []
GREEN; []	GREEN		TIME ON; MENU 2		GREEN		GREEN; S.MENU		G.; S.STD; [] ; []	AV-LINK []
YELLOW; []	YELLOW		TIME OFF; MENU 1		YELLOW		YEL.; S.STD; [] ; []		Y.; P.STD; [] ; []	PC DEVICE
BLUE; []	BLUE		MANUAL SYS.; X		BLUE; LOCATE		BLUE; P.STD; [] ; []		BLUE; [] ; MUTE	CABLE DEVICE
[]	[] DISPLAY	[] MULTI	RECALL		DISPLAY; []		DISPLAY; [] ; []		DISPLAY; [] ; []	
[]	P/C		ROTATE		PRE-CH					
VOL -	VOL -		VOUMEL ▼		[]		VOL -		[]	
VOL +	VOL +		VOLUME ▲		[]		VOL +		[]	
CH V; []	CH ▼; P-		CHANNEL ▼		P ▼; []		CHP ▼		CH/P ▼	CH ▼; P ▼
CH ▲; []	CH ▲; P+		CHANNEL ▲		P ▲; []		CH/P ▲		CH/P ▲	CH ▲; P ▲
[] SAT	[] ; +100		1*; []		[]		[]		[]	
CLEAR; X	[] CANCEL		2* ; STORE; =		CANCEL; []				[]	
[]	[] SUBPAGE				SUBPAGE; []				[]	
[]	[] INDEX				[]				[]	
[]	[] REVEAL				[]				[]	
[]	[] HOLD				DUAL III; []				[]	
[]	[] F/T/B; P.SIZE		STILL/STROBO		HOLD; []				[]	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		SIZE; []				[] P.SIZE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F к TV устройствам

Кнопки пульта IRC 16 F	Код 121		Код 122		Код 123		Код 124		Код 125	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	DVD DEVICE		VCR/DVD DEVICE	CABLE DEVICE	DVD DEVICE		DVD DEVICE	CABLE DEVICE		
AUDIO; NICAM	CABLE DEVICE		S.STD; - J -		CABLE DEVICE		A.SOUND			S.STD; - J -
VIDEO; SYS	VCR DEVICE		P.STD; - J -		VCR DEVICE		VCR DEVICE			P.STD; - J -
☐; ZOOM	P.SIZE; ☐; ☐	SIZE	P.SIZE; ☐		P.SIZE; ☐; ☐	SIZE	ASPECT; P.SIZE	SIZE		ZOOM
▼; TV	TV; ☐	TV DEVICE	TV DEVICE	PC DEVICE	TV; ☐	TV DEVICE	TV DEVICE	TV/PC		TV+DVD
☐; ↻	PIP ON	SCAN	PIP ON	SCAN; ▲	PIP ON	SCAN	PIP ON	CH.SCAN		☐
☐; LOCK	☐; STILL PICTURE		☐; STILL		☐; STILL		STILL			P.SIZE
▲; FAV			R/B				FAV.CH			▲; OPEN/CLOSE
○	○		POWER; ○		POWER; ○		POWER; ○			POWER; ○
AV	VIDEO; ☐; ☐	TV/VIDEO	TV/VIDEO; ☐		VIDEO; ☐	TV/VIDEO; SOURCE	TV/VIDEO; SOURCE	SOURCE; TV/VIDEO		INPUT; ☐
✳	MUTE; ✳		✳; MUTE		MUTE; ✳		MUTE; ✳			MUTE; ✳
MENU	MENU; ☐		☐; MENU		☐; MENU; ☐		☐; MENU			☐; MENU
EXIT			ESCAPE				EXIT; ↻; ZOOM			
▲	P ▲		CH ▲		▲		▲			▲
◀					◀		◀			◀
OK					☐+		☐+; ENTER			☐+
▶					▶		▶			▶
▼	P ▼		CH ▼		▼		▼			▼
✳; SETUP	P.MENU; ☐		P.MENU; ☐		INFO.		P.MODE; P.STD			☐; PROGRAM
J; TITLE	S-MODE; I-II; ☐		S-MODE; ☐/II	☐; SURROUND	S-MODE; ☐; ☐/II		S.MODE	SURROUND; ☐		I/II; AUDIO
☐	☐; TTX/MIX		☐; TV/TEXT	☐; MULTI	☐; TEXT/MIX		CAPTION			☐; TV/TEXT
GUIDE	DNLE		☐; LIST/FLOF		☐; MULTI		V.CHIP			STEP&NA
⏻	SLEEP; ☐; ☐		SLEEP; ☐		SLEEP; ☐		SLEEP			SLEEP
☐	☐; MIX		☐; MIX		MIX		R.SURF; SKIP TIME.			SUBTITLE
RED; ●	RED; TURBO	☐; SWAP	RED	☐; ROTATE	RED; INFO.	AV-LINK ●	MTS			RED; MENU; ☐
GREEN; ►	GREEN; S.MENU	☐; STILL	GREEN	☐; SWAP	G.; S.STD; - J -	AV-LINK ■	ADD/ERASE			GREEN; DISC MENU
YELLOW; ◀	YEL.; S.STD; - J -	LOCATE; ☐	YELLOW	☐; STORE	Y.; P.STD; - J -	☐; SWAP	LOCATE			YELLOW; TOP MENU
BLUE; ►	BLUE; P.STD; - J -		BLUE	CONV.	BLUE; SCAN-MODE	LOCATE; ☐	SWAP			BLUE; DISPLAY; ☐
☐	DISPLAY; ☐; ☐		DISPLAY; ☐		DISPLAY; ☐; ☐		DISPLAY; ☐; INFO			☐
VOL -	↘		VOL -		↘		PRE-CH			PRE-CH ○; ☐; RETURN
VOL +	↗		VOL +		↗		VOL -			↘
CH V; ◀	P ▼		CH ▼; PAGE ▼		P ▼	P ▼	CH ▼	CH ▼		P ▼; ☐
CH A; ▶	P ▲		CH ▲; PAGE ▲		P ▲	P ▲	CH ▲	CH ▲		P ▲; ☐
±; SAT	±; ☐		-/-		-/-		+100; -			▶; TTX_MIX
CLEAR; X			☐; CANCEL		☐		TURBO	TURBO		X; ☐; CLEAR
◀; ○	☐		☐; SUBPAGE		☐		◀; REW			◀; ANGLE
▶; i	☐		☐; INDEX		☐		▶; PLAY			▶; II
▶; ?	☐		☐; REVEAL		☐		▶; FF			▶; ☐
■; X	☐		☐; HOLD		☐		■; STOP			■; REPEAT
■; ⏻	☐		☐; F/T/B		☐					■; BOOKMARK
■; ⏻	☐									▶; II
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0			1, 2, ... 9, 0

Функции кнопок пульта IRC 16 F к TV устройствам

Кнопки пульта IRC 16 F	Код 126		Код 127		Код 128		Код 129		Код 130	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	DVD		DVD	CABLE	MULTI; ☐		DNLe		DVD	STB
AUDIO; NICAM	ST/DUAL		S.STD; - J -		- J ; S.STD		- J ; S.M.		S.M.; - J -	CATV
VIDEO; SYS	VIDEO		P.STD; - J -		- J ; P.STD		- J ; P.M.		P.M.; - J -	VCR
☐; ZOOM			☐; SIZE; ☐		ZOOM; ☐		☐; P.SIZE; ☐	ZOOM	☐; P.SIZE; ☐	
▼; TV	TV		TV		TV; ☐		TV; ☐		TV; ☐	TV
☐; ↻	GRAPHIC		PIP ON		PIP ON	CH.SCAN; ▲	PIP		PIP ON	
☐; LOCK			☐; LIST/FLOF		☐; STILL PICTURE	STILL; ☐	☐; STILL		☐; STILL	
▲; FAV			P.SIZE; ☐		SWAP; ☐	ROTATE; ☐	☐; SWAP		☐; SWAP	
○	POWER		POWER; ○		POWER; ○		○; POWER		○; POWER	
AV			TV/VIDEO; ☐	VCR	VIDEO; ☐		☐; VIDEO; ☐	TV/VIDEO; SOURCE	VIDEO; ☐; ☐	
✳			MUTE; ✳		MUTE; ✳		✳; MUTE		MUTE; ✳	
MENU	MENU		☐; MENU; ☐		MENU; ☐		MENU; ☐; ☐		MENU; ☐; ☐	
EXIT			EXIT				EXIT/TV ☐; ↻; ☐		EXIT; ↻	
▲	KEY +		▲		▲		▲; P ▲		▲	
◀	TEMPO -		◀		◀		◀; ☐		◀	
OK	S./SEL		☐+		◀; O.K		☐+; ENTER		ENTER; ◀	
▶	TEMPO +		▶		▶		▶; SIZE		▶	
▼	KEY -		▼		▼		▼; P ▼		▼	
✳; SETUP	P.SEL		PC		HELP; ?		W.LINK			
J; TITLE	KARAOKE/TV		DUAL I/II; ☐		☐/III; S.MODE		S.MENU			
☐	INDEX		☐; ☐; TEXT/MIX		☐; ☐; TEXT/MIX		☐; TTX/MIX		☐; TTX/MIX	
GUIDE	RES.		DOLBY VIRT.; ☐		?; HELP		ROTATE			
⏻	SLEEP		SLEEP; ☐; ☐				SLEEP; ☐; ☐		SLEEP; ☐	
☐	PSEUDO		☐; MIX		☐; MIX	DEVICE 1	☐; EZ.VIEW			
RED; ●			RED; ☐; SWAP		RED	AV LINK ●	RED; TURBO		RED; SURROUND; ☐	
GREEN; ►			GREEN; SOURCE		GREEN	AV LINK ■	GREEN; S.MENU		GREEN; S.M.; - J -	
YELLOW; ◀			YELLOW; P ▼		YELLOW	DEVICE 2	YELLO.; - J ; S.M.		YELLO.; P.M.; - J -	
BLUE; ►			BLUE; ☐; LOCATE		BLUE	DEVICE 3	BLUE; - J ; P.M.		BLUE; DUAL I-II	
☐	RECALL		DISPLAY; ☐		DISPLAY; ☐		INFO; ☐; ☐		INFO; ☐; ☐	
☐			PRE-CH				☐; PRE-CH		PRE-CH; ☐	
VOL -	VOL -		↘		VOL -; ↘		↘		↘	
VOL +	VOL +		↗		VOL +; ↗		↗		↗	
CH V; ◀	CH ▼		P ▼; ☐	P ▼	P ▼; ☐	CH ▼	P ▼; ☐		P ▼; ☐	P ▼
CH A; ▶	CH ▲		P ▲; ☐	P ▲	P ▲; ☐	CH ▲	P ▲; ☐		P ▲; ☐	P ▲
±; SAT	-/-		-/-		-/-		-/-; ☐		-/-; ☐	
CLEAR; X			☐; ☐; STILL		☐; CANCEL		☐		☐; ■	
◀; ○			SUBPAGE; ☐; P ▲		☐; TIME/SUBPAGE		◀; REW	☐; DUAL I-II	☐; ◀	◀
▶; i	START/STOP		☐		INFO; ☐		▶; II; PLAY/PAUSE	☐	i; CH.INFO	▶; II
▶; ?			☐		☐; REVEAL		▶; FF	☐	INFO; ☐; ☐	▶
■; X			☐				■; STOP	☐	☐; ▶; II	■
■; ⏻			☐; SIZE; ☐		☐; SIZE		▶; II; PLAY/PAUSE	☐	☐; ▶; II	▶; II
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F к TV устройствам

Кнопки пульта IRC 16 F	Код 131		Код 132		Код 133		Код 134		Код 135	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	DVD	VCR/DVD	→+ +		PC	DVD	PC		I-II; DUAL/MTS	
AUDIO; NICAM					CH MGR	CABLE	DUAL; I-II			
VIDEO; SYS	DNle				WISELINK	VCR				
☐; ZOOM	☐; P.SIZE; ☐				P.SIZE	STB	P.SIZE		☐; POSITION	
▼; TV	TV	CABLE	→- -		TV	TV	TV; ☐		P.SIZE	
☐; ↻	PIP ON		◇		PIP		PIP; ☐		☐; PIP	
☐; LOCK	☐; STILL		N/N		E.SAVING		☐; STILL		☐; SIZE	
▲; FAV			CS		FAV. CH				MAGIC-CH	
○	○; POWER		○		○; POWER		○; POWER		○; POWER	
AV	VIDEO; ☐	STB	AV/TV		SOURCE	SOURCE	☐; SOURCE; ☐		☐; SOURCE; ☐	
⌘	MUTE; ⌘		⌘		⌘; MUTE		⌘; MUTE		⌘; MUTE	
MENU	MENU; ☐; ☐		MENU; ☐; ☐		MENU; ☐; ☐		MENU; ☐; ☐; ☐		MENU; ☐; ☐; ☐	
EXIT	EXIT/TV ☐; →☐		EXIT; →☐		EXIT; →☐		EXIT ☐; →☐		EXIT; →☐	
▲	▲		☼+		▲		▲		▲	
◀	◀		○-	☼-	◀		◀		◀	
OK	ENTER; ←		○+	☼+	←; ENTER		ENTER; ←		ENTER; ←	
▶	▶		☼-		▶		▶		▶	
▼	▼		☐		▼		▼		▼	
⌘; SETUP	LIVE		☐		P.MODE		☐; P.M.		P.MODE	
♪; TITLE	SURROUND; ☐		I/II		S.MODE		☐; S.M.		☐; S.MODE	
☐	☐; TTX/MIX		☐		CAPTION		☐; TTX/MIX		☐; TTX/MIX	
GUIDE	DVR				MTS					
⏻	SLEEP; ☐				SLEEP		SLEEP; ☐			
☐			☐		POSITION		☐; AUTO PROG.			
RED; ●	RED; DVR MENU	REC	RED		RED; P.MODE	SRS (●)	RED; DUAL; I-II		RED; AUTO	
GREEN; ►	GREEN; TELEWEB	QUICK PLAY	GREEN		GREEN; S.MODE		GREEN; - / ; S.M.		GREEN; M/B; P.MOD.	
YELLOW; ◀	YELLOW; S.M.; - /		YELLOW	☼; ☐	YELLOW; STILL	D-NET	YELLOW; P.SIZE		YELLOW; P.SIZE	
BLUE; ►	BLUE; P.M.; - /		BLUE	☼; ☐	BLUE; P.SIZE	SWAP	BLUE; - / ; P.M.		BLUE; STILL	
☐	INFO; ☐; ☐		☐		INFO		INFO; ☐; ☐		☐; INFO ☐	
☐					PRE-CH		PRE-CH		☐; PRE-CH	
VOL -	↵		↵	↵	VOL -		↵		↵	
VOL +	↵		↵	↵	VOL +		↵		↵	
CH V; ◀	P ▼; ☐		PR ▼	☼; ☐	CH ▼	CH ▼	P ▼; ☐		CH/P ▼; ☐	
CH A; ▶	P ▲; ☐		PR +	☼; ☐	CH ▲	CH ▲	P ▲; ☐		CH/P ▲; ☐	
+/ SAT					-	ANTENNA	-/-; ☐		-/-; +100	
CLEAR; X	☐; DUAL I-II		☐		ADD/DEL		☐			
◀; ●	☐; HOME	◀; REW	☐		◀; REW		☐; ADD/DEL		☐	
▶; i	☐; PAUSE/PLAY	▶; II; PAUSE/PLAY	☐		▶; II; PAUSE/PLAY		☐		☐	
▶; ?	☐	▶; FF	☐		▶; FF		☐		☐	
■; X	☐; STOP	■; STOP	☐		■; STOP		☐		☐; PIP	
■; ☐	☐; P.SIZE; ☐	▶; II; PAUSE/PLAY	☐		▶; II; PAUSE/PLAY		☐		☐; SOURCE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F к TV устройствам

Кнопки пульта IRC 16 F	Код 136		Код 137		Код 138		Код 139		Код 140	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	OFF						DVD		SRS (●)	
AUDIO; NICAM	S. SEL (PIP)				- / ; S.STD		CABLE		☐; 3D	
VIDEO; SYS	SWAP (PIP)		MONITOR		- / ; P.STD		VCR		MEDIA. P; W.LINK	
☐; ZOOM	ZOOM				☐; ZOOM	☐; SWAP	P. SIZE; ☐	SIZE	P. SIZE	
▼; TV	SIZE (PIP)				☐; TV		TV		☐; TV	SOCIAL; TV
☐; ↻	PIP ON				PIP ON		PIP ON	SCAN	CH LIST; ☐	SEARCH
☐; LOCK	STILL				☐/III; S.MODE		SWAP; ☐		CON-T; SMART HUB	
▲; FAV	LOCATE (PIP)		▲; EJECT		☐; ROTATE		☐; POSITION		FAV. CH	
○	○; ON		○; POWER		○; POWER		○; POWER		○; POWER	
AV	SOURCE	SOURCE (PIP)	LINE IN		☐; AV	☐; AV	☐; SOURCE; ☐	SOURCE	☐; SOURCE; ☐	HDMI
⌘	⌘; MUTE		⌘; MUTE		⌘; MUTE		⌘; MUTE		⌘; MUTE	
MENU	MENU; ☐; ☐		☐; MENU		☐; F.MENU		MENU; ☐; ☐; ☐		MENU; ☐; ☐; ☐; LNA	
EXIT	EXIT; →☐						EXIT; →☐		EXIT; →☐; ☐	
▲	▲		TRK +		P ▲		▲		▲	
◀	◀		TRK -				◀		◀	
OK	←		TRK +				☐+; ENTER		☐+; ENTER	
▶	▶		TRK -				▶		▶	
▼	▼				P ▼		▼		▼	
⌘; SETUP	P. MODE		P.STD		☐; P.MENU		P.MODE; - /		P.MODE	E.MODE
♪; TITLE	S. MODE				♪; S.MENU		S.MODE; - / ; ☐		S.MODE	DUAL; I-II
☐			VISS		☐; TEXT	☐; MIX	☐; TTX/MIX		☐; TTX/MIX	DMA
GUIDE			P.PLUS						GUIDE	INTERNET; @TV
⏻	TIMER		REPEAT		☐; SLEEP		SLEEP; ☐		TOOLS; ☐; ☐	AD
☐	CLOCK DISPLAY		SPEED		i; INFO				SUBT.; AD/SUBT.	E-MANUAL; SUPP.
RED; ●	RED; AUTO		●; REC		RED		RED; Dnle		RED; A	●
GREEN; ►	GREEN; S. EFFECT		►; F.ADV SKIP		GREEN		GREEN; STILL		GREEN; B	STATUS
YELLOW; ◀	YELLOW; P. SIZE				YELLOW		YELLOW; DUAL I-II		YELLOW; C	HISTORY
BLUE; ►	BLUE; MDC		SLOW +		BLUE		BLUE; SRS T.; (●)		BLUE; D	FAMILY STORY
☐	INFO		DISPLAY		☐; DISPLAY		☐; INFO ☐		INFO; i; ☐	SPORTS
☐			PRE-CH		P/C				PRE-CH; ☐; ☐	RETURN; ☐; ☐
VOL -	VOL -		VOL -		↵		↵		↵	
VOL +	VOL +		VOL +		↵		↵		↵	
CH V; ◀	CH ▼		CH ▼		P ▼; ☐		P ▼; ☐	P ▼	P ▼; ☐	
CH A; ▶	CH ▲		CH ▲		P ▲; ☐		P ▲; ☐	P ▲	P ▲; ☐	
+/ SAT			+100		-/-		STB		-/-	
CLEAR; X			X; CANCEL				☐		☐	
◀; ●	☐; REW		◀; REW		☐; SUBPAGE		◀; REW		◀; REW	
▶; i	▶; PLAY		▶; PLAY		☐; INDEX		▶; II; PLAY/PAUSE		▶; II; PLAY/PAUSE	
▶; ?	▶; FF		▶; FF		☐; REVEAL		▶; FF		▶; FF	
■; X	■; STOP		■; STOP		☐; HOLD		■; STOP		■; STOP	
■; ☐	■; PAUSE		■; PAUSE		☐; F/T/B		▶; II; PLAY/PAUSE		■; STOP	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F к TV устройствам

Кнопки пульта IRC 16 F	Код 141		Код 142		Код 143		Код 144		Код 145	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			HDMI		DVD	CABLE	TV/DTV	DVD		
AUDIO; NICAM	↔; S.MODE				I-II; DUAL		I-II; DUAL			
VIDEO; SYS	↔; P.MODE		W.LINK		WISELINK	VCR	CH LIST	VCR		
☐; ZOOM	☐; P.SIZE		P.SIZE		☐; P.SIZE	☐; SWAP	☐; P.SIZE			
▼; TV	☐; TV		☐; TV/DTV		☐; TV	TV	TV	CABLE		
☐; ↗			CH.LIST		☐; PIP; PIP ON		☐; PIP			
☐; LOCK	☐; STILL		DMA		☐; STILL		STILL			
▲; FAV					PC		ANYNET			
⊖	⊖; POWER		⊖; POWER		⊖; POWER		⊖; POWER		⊖	
AV	☐; SOURCE; ☐		☐; SOURCE; ☐		☐; ☐; ☐	SOURCE	☐; SOURCE; ☐			
⌘	⌘; MUTE		⌘; MUTE		⌘; MUTE		⌘; MUTE		MUTE	
MENU	MENU; ☐; ☐		MENU; ☐; ☐		MENU; ☐; ☐		MENU; ☐; ☐			
EXIT	EXIT; ↗; ☐		EXIT; ↗; ☐		EXIT; ↗; ☐		EXIT; ↗; ☐		EXTRA	
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀		◀		◀	
OK	☐; ENTER		☐; ENTER		☐; ENTER		☐; ENTER/OK		OK	
▶	▶		▶		▶		▶		▶	
▼	▼		▼		▼		▼		▼	
⌘; SETUP			☐; TOOLS; ☐		☐; P.MODE; ↔		☐; P.MODE			
♪; TITLE			E.MODE		☐; S.MODE		D.MENU			
☐			☐; TTX/MIX		☐; TTX/MIX		☐; TTX/MIX			
GUIDE			GUIDE; ☐		CH MGR		GUIDE		EPG	
⊖	☐; SLEEP				☐; SLEEP					
☐	☐; TTX/MIX		SUBT.		SRS (●)		SUBTITLE			
RED; ●	RED; ↔; P.MOD.		RED	●	RED; STILL; TeleWeb		RED	●; REC		
GREEN; ►	GREEN; ↔; S.M.		GREEN		GREEN; HOME		GREEN			
YELLOW; ◀	YELLOW; ☐; STILL		YELLOW		YELLOW; DUAL I-II		YELLOW			
BLUE; ►	BLUE; ☐; P.SIZE		BLUE		BLUE; ☐; SURR.		BLUE			
☐	☐; INFO; ☐		INFO; i; ☐		INFO; i; ☐		INFO; i; ☐			
☐	☐; PRE-CH		PRE-CH; ☐	☐; RETURN; ☐	☐; PRE-CH; ☐		PRE-CH; ☐	☐; RETURN		
VOL -	◀		◀		◀		◀		VOL -	
VOL +	▶		▶		▶		▶		VOL +	
CH V; ◀	P V; ☐		P V; ☐		P V; ☐	P V	P V; ☐		CH -	
CH A; ▶	P A; ☐		P A; ☐		P A; ☐	P A	P A; ☐		CH +	
+/SAT	☐; -/		-/		-/	STB		STB		
CLEAR; X	☐		☐		☐		☐			
◀; ●	☐; DUAL I-II		◀	☐	◀; REW	☐; DNLe	◀; REW	☐		
▶; i	☐		▶	☐	▶; PLAY/PAUSE	☐	▶; PLAY/PAUSE	☐	▶	
▶; ?	☐		▶	☐	▶; FF	☐	▶; FF	☐		
■; X	☐		■	☐	■; STOP	☐; PIP; PIP ON	■; STOP	☐		
■; ⬇	☐		■	☐	■; PLAY/PAUSE	☐; P.MODE; ↔	■; PLAY/PAUSE	☐	■	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		123,123,123	

Функции кнопок пульта IRC 16 F к TV устройствам

Кнопки пульта IRC 16 F	Код 146		Код 147	
	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			FAV +	
AUDIO; NICAM	DUAL; I-II		ROOT; AUDIO	NICAM
VIDEO; SYS	HDMI		REPEAT	
☐; ZOOM	P.SIZE		ASPECT; ZOOM; SIZ	
▼; TV	INTERNET; @TV		FAV -	
☐; ↗	MEDIA.P		AUTO	
☐; LOCK	CH LIST; ☐		FREEZE	
▲; FAV			FAV	
⊖	⊖; POWER		⊖; POWER	
AV	☐; SOURCE; ☐		INPUT	
⌘	⌘; MUTE		⌘; MUTE	
MENU	☐; MENU; ☐		MENU	
EXIT	↗; EXIT; ☐		EXIT	
▲	▲		▲	
◀	◀		◀	
OK	☐; ENTER		ENTER; OK	
▶	▶		▶	
▼	▼		▼	
⌘; SETUP	☐; TOOLS; ☐		P.MODE; ↔	
♪; TITLE	S.MODE		S.MODE; ↔	TV/RADIO
☐	☐; TTX/MIX		TEXT	
GUIDE	GUIDE		EPG	
⊖	ALARM		SLEEP; ZZZ	
☐	SUBT.		SUBTITLE	
RED; ●	RED; A	●	RED	●
GREEN; ►	GREEN; B		GREEN	
YELLOW; ◀	YELLOW; C		YELLOW	
BLUE; ►	BLUE; D		BLUE	
☐	i; ☐; INFO		DISP; DISPLAY	
☐	☐; RETURN; ☐		☐; ☐	
VOL -	◀		V-; VOL-	
VOL +	▶		V+; VOL+	
CH V; ◀	P V; ☐		P-; CH-; CH▼	◀; INDEX
CH A; ▶	P A; ☐		P+; CH+; CH▲	▶; SIZE
+/SAT	CH LIST; ☐		GOTO	
CLEAR; X	PRE-CH; ☐	☐	A-B	
◀; ●	◀	☐	◀; REVEAL	SUBPAGE
▶; i	▶	☐	▶; TEXT	INDEX
▶; ?	▶	☐	▶; SUBPAGE	REVEAL
■; X	■	☐	■; HOLD	HOLD
■; ⬇	■	☐	■; TEXT	SIZE
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F к VCR устройствам

Кнопки пульта IRC 16 F	Код 201		Код 202		Код 203		Код 204		Код 205	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	FINE TRACK. ▲		SHIFT		START OTR; OTR ▲				TAPE FINDER +	
AUDIO ; NICAM	AUDIO ; OUTPUT		ADD		SHIFT				A. DUB	
VIDEO ; SYS	SYSTEM		MARK		MONITOR ; MO/SW					
☐ ; ZOOM	INDEX		MEMORY		MFT ; 2nd					
▼ ; TV	FINE TRACK. ▼		TAPE SPEED		LENG. OTR ; OTR ▼				TAPE FINDER -	
☐ ; ↗	MEMORY	PRESET	CH SEAR.;CLK/CNT	CH PRES. ; ERASE	SEARCH	PRESET ; CH.SET			MEMO	
☐ ; LOCK	SHIFT	MARK	CLK.CNT.; A.PROG		SKIP SEARCH				NORM	
▲ ; FAV	EJECT		EJECT		▲ ; EJECT				EJECT ; ▲	
○	○ ; POWER		POWER ; CЕТЬ		POWER		POWER	POWER	POWER ; ○	
AV	TV/VCR	INPUT	INPUT SELECT	VCR ; VCR/TV	VCR/TV	INPUT SELECT			AUX	
✳										
MENU	MENU ; PROG.	PROG.	MENU ; PROGRAM		PROG				MENU	
EXIT	ERASE	ERASE	D. TRK							
▲	▲	▲	15 ; SLOW ▲		SLOW +				▲	
◀	◀	◀ ; SOFTEN	SHUTTLE ◀◀		V-LOCK/MFT - ; -				◀	
OK	ENTER	OK	BAND SEL		BAND SELECT				ENTER	
▶	▶	▶ ; SHARPEN	SHUTTLE ▶▶		V-LOCK/MFT + ; +				▶	
▼	▼	▼	16 ; SLOW ▼		SLOW -				▼	
✳ ; SETUP	PICTURE ; IPC		MONITOR ; TV/CATV		CLOCK ; AUTO TRK.				VIEW SKIP/BLANK	
♪ ; TITLE	A.DUB		DUB ; A.DUB		MEMORY				O000 ; T-160	
☐	BAND		AFT	START OTR	CLOCK COUNT				S.Q.P. ; G-CODE	
GUIDE	AFT		ATR	OTR START	VPS				COUNT REMAIN	
☐	ShowView ; TIMER	CLOCK COUNTER	TIMER ; LENGTH	LENGHT OTR	TIMER				AUTO ; TIMER	
☐	Q-PRO		Q-PRO		CLOCK ; CLEAR				i ; INDEX	
RED ; ●	SEARCH	● REC ; REC/OTR	11 ; SKIP ENCORE	● ; REC ; 3АП	D. TRK	● REC	● REC	● REC	SP/LP ; TAPE SP.	● REC
GREEN ; ▯	D.TRK ; A.TRK		12	2nd; ▯ ПСК; F.ADV	Q-PRO				▯ ; F.ADV	
YELLOW ; ◀	SLOW ▼		13		MARK				SLOW - ; SPEED -	
BLUE ; ▯	SLOW ▯	▯ ; SLOW	14	SLOW ▯	SLOW ; ▯				SLOW - ; SPEED +	SLOW
☐	DISPLAY		DISPLAY	INDEX	DISPLAY				DISPLAY	
☐	☐ ; REPEAT		P/C ; CH 100		INDEX				☐ ; TV/VTR	REPEAT
VOL -	VOL ▼	SHUTTLE <<	TRACK ▼		TRK ▼				TRACKING ▼	
VOL +	VOL ▲	SHUTTLE >>	TRACK ▲		TRK ▲				TRACKING ▲	
CH V ; ◀	CH ▼ ; TRK ▼	-	P-; CH ▼;КАНАЛ ▼		CHANNEL ▼		P -		CH ▼	
CH A ; ▶	CH ▲ ; TRK ▲	+	P+; CH ▲;КАНАЛ ▲		CHANNEL ▲		P +		CH ▲	
± ; SAT	SPEED ; SP/LP		-/-; SYSTEM SEL.		TAPE SPEED				CH 1/2	
CLEAR ; X	CLEAR ; RESET		CLEAR RESET	ERASE	ERASE					
◀ ; ○	◀ ; REW ; ◀		◀◀ ; PH ; REW		◀◀ ; REW			◀◀ (REW)	◀◀ ; REW ; ◀	
▶ ; i	▶ ; PLAY/x2 ; ▲		▶ ; БОСП ; PLAY		▶ ; PLAY/x2			▶ (PLAY)	▶ ; PLAY ; ▲	
▶ ; ?	▶ ; F.FWD ; ▶		▶▶ ; ПБ ; F.F		▶▶ ; FF			▶▶ (F.FWD)	▶▶ ; F.FWD ; ▶	
■ ; X	■ ; STOP ; ■ / ▲ ; ▼		■ ; STOP ; СТОП		■ ; STOP			■ (STOP)	■ ; STOP ; ▼	
■ ; ⏸	■ ; PAUSE ; P/S ; ▯		■ ; P/S ; ПАУЗА		■ / ▯ ; P/S F.ADV			■ (PAUSE)	■ ; PAUSE ; ENTER	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F к VCR устройствам

Кнопки пульта IRC 16 F	Код 206		Код 207		Код 208		Код 209		Код 210	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD										
AUDIO ; NICAM	AUDIO								AUDIO	
VIDEO ; SYS	MIC-DUB		MAC/PAL							
☐ ; ZOOM										
▼ ; TV			SCAN						TV/VCR	
☐ ; LOCK			STORE							
▲ ; FAV	▲ ; EJECT								▲ ; EJECT	
○	ON/STANDBY		POWER		START/STOP		START/STOP		STANDBY/ON	
AV	TV/VCR								INPUT	
✳			MUTE							
MENU	MENU		BAND				Z/MEMORY		MENU	
EXIT										
▲									▲	
◀									◀	
OK	ENTER		SELECT						OK	
▶									▶	
▼									▼	
✳ ; SETUP	LESSON		MODE				COUNTER			
♪ ; TITLE	KARAOKE		PL		TITLE ON/OFF		TITLE ON/OFF		DUB	
☐	A.TRK ; ATR		D.EMP						A.TRK	
GUIDE	MARK		V/H						IPC	
☐					SELF TIMER		SELF TIMER		TIMER	
☐	INDEX								INDEX	
RED ; ●	ERASE	REC/OTR; LINE REC			INT.REC; TIME LAP.		INT.REC			REC
GREEN ; ▯	ERASE						DATE			
YELLOW ; ◀							TIME			
BLUE ; ▯	SLOW									
☐	DISPLAY				DISPLAY; DATA SC.		DATA SCREEN		DISPLAY	
☐	NEXT									
VOL -	TRACKING ▼		TUNE ▼						TRK ▼	
VOL +	TRACKING ▲		TUNE ▲						TRK ▲	
CH V ; ◀	SELECT ▼		PR ▼		W ; ZOOM W		W		PROG ▼	
CH A ; ▶	SELECT ▲		PR ▲		T ; ZOOM T		T		PROG ▲	
± ; SAT									SPEED	
CLEAR ; X									CLR/RST	
◀ ; ○	◀ ; REW				◀◀ ; REW		REW ; EDIT -		◀◀	
▶ ; i	▶ ; PLAY				▶ ; PLAY		PLAY		▶▶	
▶ ; ?	▶▶ ; FF				▶▶ ; F.F		F/F ; EDIT +		▶▶	
■ ; X	■ / ▲ ; STOP/EJECT		■ ; STOP		■ ; STOP		STOP		■	
■ ; ⏸	■ ; PAUSE/STILL		■ ; STILL		■ ; STILL		STILL		■	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F к VCR устройствам

Кнопки пульта IRC 16 F	Код 211	
	Функция	Доп. функция
▲; DVD		
AUDIO; NICAM		
VIDEO; SYS		
☐; ZOOM		
▼; TV		
☐; ↗		
☐; LOCK		
▲; FAV		
○	○	
AV		
✳		
MENU	FAN MODE	
EXIT	COOL MODE	
▲		
◀		
OK		
▶		
▼		
✳; SETUP	ON/OFF E. SAVER	
♪; TITLE		
☐	FAN MODE	
GUIDE	COOL MODE	
☐	SLEEP	
☐	TIMER	
RED; ●	HIGH FAN	
GREEN; ▯	MED FAN	
YELLOW; ◀	LOW FAN	
BLUE; ▯		
☐		
↔	↔; SWING	
VOL -	TEMP V	
VOL +	TEMP A	
CH V; ◀	TEMP V	
CH A; ▶	TEMP A	
±; SAT		
CLEAR; X		
◀; ●		
▶; i		
▶; ?		
■; X		
■; ⬇		
1, 2, ... 9, 0	LOW, MED, HIGH	

Функции кнопок пульта IRC 16 F к AUX устройствам

Кнопки пульта IRC 16 F	Код 301		Код 302		Код 303		Код 304		Код 305	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	DVI SEL.		TEMPO +		DVD		DVD		DVD	
AUDIO; NICAM	AUDIO		AUDIO		MO/ST; AUDIO		EZ V.; S. MODE; AUD.	MELODY	AUDIO	
VIDEO; SYS	VIDEO SEL.		MALE/FEMALE		D.R.C		ASC; NTS/PAL; EZ V.	MOVIE	VCR	
☐; ZOOM	ZOOM; I.REPLAY		ZOOM		ZOOM; TV SYSTEM		ZOOM	MALE; FEM.; ZOOM	ZOOM; INPUT SEL.	
▼; TV	SACD/CD		TEMPO -	DECK 1/2	BAND TUNER		BAND TUNER	SD/HD	FM/AM	
☐; ↗	DIGEST; I.SKIP		HI-LIGHT		TEST TONE		TUN. MEM.; P. SCAN	SEARCH SONG	EZ VIEW	
☐; LOCK	ANGLE		ANGLE		ANGLE		LOGO; DIMMER		ANGLE; IPC	
▲; FAV	OPEN/CLOSE; ▲		SCORE		▲; OPEN/CLOSE		▲; OPEN/CLOSE	FAVORITE SONG	▲; OPEN/CLOSE	
○	POWER; ○/I		○/I		○/I		○/I; POWER		STANDBY/ON	
AV	DVD/M.STICK/AV-IN		AUX; SOUND EDIT		AUX		DIMMER; TV/VIDEO	TV/VIDEO	TV/VCR	
✳	VOL.CON.; PROG		MUTE		MUTE		MUTE; ✳		MUTE	
MENU	MENU; DISC MENU		MENU		MENU		MENU; ☐	SOUND EDIT	MENU	
EXIT	☐		DISC SKIP; S.SURR.				EXIT; ↗		A.DUB; RETURN	
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀		◀		◀	
OK	ENTER; ☐+		ENTER		ENTER		ENTER; ☐+		OK; +	
▶	▶		▶		▶		▶		▶	
▼	▼		▼		▼		▼		▼	
✳; SETUP	SET-UP; MENU		SETUP		SETUP		MOVIE; REP.; S.MOD.	SEL. HDMI AUDIO	DISC MENU	
♪; TITLE	TOP (TITLE) MENU	3D	TITLE	BAND TUNER	TITLE		DD PLII MODE	DD PLII EFFECT	TITLE; SPEED	
☐	MODE; PROG		SET; PROGRAM		PROGRAM		AUX; FUNC.; USB	USB	SOUND MODE	
GUIDE	BOOKMARK		SEARCH SONG		SOUND EDIT		MUSIC; DSP/EQ	TEST TONE	MARK; SEARCH	
☐	TIME SEARCH		TIMER ON/OFF; SPK.	SLEEP	SLEEP		SLEEP	ASC		
☐	SUBTITLE	SUBTITLE ON/OFF	SUBTITLE		SUB TITLE		SUB TITLE; S. SONG	V-H/P; SUPER 5.1	SUBTITLE; TIMER	
RED; ●	I.REP.; VOL.; ZOOM	○	KEY CONTROL b	EQ	DSP/DPLII MODE	REPEAT	b KEY CONTROL	REPEAT; DIGEST	SPEAKER	● REC
GREEN; ▯	I.REPLAY; ZOOM	○	KEY CONTROL #	MELODY	DSP/DPLII EFFECT	A +B REPEAT	# KEY CONTROL	REPEAT	TEST	
YELLOW; ◀	STEP; LCD ON/OFF	○	STEP	FANFARE	STEP	SPK MODE	SUPER 5.1; STEP	TEMPO -	BASS	
BLUE; ▯	SLOW	○	SLOW	SUBWOOF. LEVEL	SLOW	PRO LOGIC II	MO/ST; SLOW	TEMPO +	TREBLE	
☐	DISPLAY; INFO	INFO	DISPLAY		DISPLAY	REMAIN	INFO	REMAIN	INFO.	
↔	RETURN; ☐		RETURN	REPEAT	RETURN		RETURN; ⌂		MODE; REPEAT	
VOL -	PRE. INDEX		VOLUME -		VOLUME -		VOLUME -	MIC VOL -	AMP VOL. -	
VOL +	NEXT INDEX		VOLUME +		VOLUME +		VOLUME +	MIC VOL +	AMP VOL. +	
CH V; ◀	◀	PRE. PAGE	◀		◀		◀	▼ TUNING/CH	◀; ◀	PROG/TRK ▼
CH A; ▶	▶	NEXT PAGE	▶		▶		▶	▲ TUNING/CH	▶; ▶	PROG/TRK ▲
±; SAT	REPEAT	REPEAT A-B; KAR.	GO TO		GO TO		RESERVE			
CLEAR; X	CLEAR; CANCEL	C	MO/ST; CANC./CLR.		CLEAR		CANCEL		CLEAR	
◀; ●	◀		◀; DOWN TUNING	◀; TAPE	◀; DOWN TUNING		◀		◀; ◀	
▶; i	▶/II; PLAY		▶	◀; TAPE	▶		▶		▶	
▶; ?	▶		▶; UP TUNING	▶; TAPE	▶; UP TUNING		▶		▶; ▶	
■; X	■; STOP		■	■ TAPE	■		■; STOP		■	
■; ⬇	▶/II; PLAY		■		■		▶/II; PLAY		▶/II	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F к AUX устройствам

Кнопки пульта IRC 16 F	Код 306		Код 307		Код 308		Код 309		Код 310	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	DVD		DVD		ECHO +				TUNING ▲	
AUDIO ; NICAM	AUDIO		AUDIO ; SETUP		AUDIO				AUDIO	
VIDEO ; SYS	VCR		VCR		HIGHLITE				EZ VIEW	
☐ ; ZOOM			ZOOM;SVHS;SP-D		ZOOM				ZOOM	
▼ ; TV	TV/VCR		TV/VCR ; A.TRK		ECHO -				TUNING ▼	
☐ ; ↗	MARK ; SEARCH				DIMMER ; REMAIN	DIMMER			TAPE 1/2	SEARCH SONG
☐ ; LOCK	ANGLE ; IPC		ANGLE ; MUTE		ANGLE				BAND ; TUNER	TUNER MEMORY
▲ ; FAV	▲ ; OPEN/CLOSE		▲ ; OPEN/CLOSE		▲ ; OPEN/CLOSE	FAVORITE			▲ ; OPEN/CLOSE	FAVORITE SONG
○	STANDBY/ON		STANDBY/ON		○/I				○/I	MALE ; FEMALE
AV	INPUT SEL. ; F.ADV.		A.TRK;INP.SEL;TV.		MALE/FEMALE				AUX	
✳									✳ ; MUTE	
MENU	MENU		DISC MENU		MENU/PBC ; ☐				MENU ; ☐	
EXIT	RETURN				DISK SKIP				DISK SKIP	
▲	▲		▲		▲				▲	
◀	◀		◀		◀				◀	
OK	OK ; ↵		SETUP/ENTER		ENTER ; ↵				☐ ; ENTER	
▶	▶		▶		▶				▶	
▼	▼		▼		▼				▼	
✳ ; SETUP	DISC MENU		MODE ; REPEAT		SET UP	SLIDE MODE			SLIDE MODE	
♪ ; TITLE	KARAOKE		TITLE/SPEED		TITLE	SEARCH SONG			SOUND MODE	
☐	EZ VIEW		CLOCK/COUNTER		EZ VIEW				LOGO	
GUIDE	SPEED		RET./A.DUB;AUDIO		DIGEST				MELODY	
⏸	TIMER		SCR.FIT ; SVHS		LOGO				SLEEP	
☐	SUBTITLE		SUBTITLE ; TIMER		SUBTITLE				SUBTITLE	
RED ; ●		● REC	MARK/INDEX	● REC	KEYCON b	MELODY			b KEY CONTROL	
GREEN ; ▬			3D SOUND		KEYCON #	SCORE			# KEY CONTROL	
YELLOW ; ◀	F.ADV/STEP		DIGEST;F.ADV/STE.		STEP	FANFARE			STEP	
BLUE ; ▬					SLOW	RESERVE			SLOW	
☐	INFO.		DISPLAY		DISPLAY ; INFO				INFO	REMAIN
☐	MODE ; REPEAT		AN. ; KAR. ; LAST PR		☐ ; RETURN	REPEAT			☐ ; RETURN	REPEAT
VOL -	TRK ▼ ; VOLUME -		TRK ▼ ; VOLUME ▼		TEMPO -				VOLUME -	TEMPO -
VOL +	TRK ▲ ; VOLUME +		TRK ▲ ; VOLUME ▲		TEMPO +				VOLUME +	TEMPO +
CH V ; ◀	◀ ; ◀	PROG/TRK ▼	PROG/TRK▼;ECH▼	◀ ; REC	◀				◀	
CH A ; ▶	▶ ; ▶	PROG/TRK ▲	PROG/TRK▲;ECH▶	▶ ; FRAME/STEP	▶				▶	
± ; SAT					GOTO				RESERVE	
CLEAR ; X	CLEAR		CLEAR		CANCEL				CANCEL	
◀ ; ○	◀ ; ◀		◀ ; ◀		◀◀SCAN				◀◀	
▶ ; i	▶ ; ▬		▶ ; ▬		▶▶				▶▶	◀▶ TAPE
▶ ; ?	▶ ; ▶		▶ ; ▶		▶▶SCAN				▶▶	
■ ; X	■		■		■				■	
▬ ; ⏸	▬		▬		▬				▬	
▬ ; ⏸	▬		▬		▬				▬	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0				1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F к AUX устройствам

Кнопки пульта IRC 16 F	Код 311		Код 312		Код 313		Код 314		Код 315	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	DVD		MONO/ST; FM MOD.		DVD	TEMPO + ; TUN. M.	DVD		DVD	
AUDIO ; NICAM	AUDIO		S. LEVEL ; S.BASS		AUDIO ; FAV. SONG		AUDIO ; FAV. SONG			
VIDEO ; SYS	EZ VIEW		SHUFFLE CD		DSP/EQ		DEMO/DIMMER		NTSC/PAL	
☐ ; ZOOM	ZOOM		TUNING MODE		ZOOM ; MALE ; FEM.		ZOOM ; MALE FEM.		ZOOM	
▼ ; TV	USB		TUN. BAND ; BAND		TUNER	TEMPO - ; MO/ST	TUNER		T/SEARCH	
☐ ; ↗	BOOK MARK		EQ PRESET		PORT	SD/HD ; TUN. MEM.	USB	SD/HD ; TUN. MEM.		
☐ ; LOCK					RESERVE		RES. ; CD RIPPING			
▲ ; FAV	▲ ; OPEN/CLOSE		▲ ; OPEN/CLOSE		▲		▲			
○	○/I ; POWER		○ ; ON/STANDBY		○ ; POWER		○ ; POWER			
AV	VIDEO SEL.		AUX		AUX		AUX			
✳			✳ ; MUTE		MUTE ; ✳		✳ ; MUTE		MUTE	
MENU	☐ ; MENU		PROGRAM/SET		MENU ; ☐		MENU ; ☐		PROGRAM	
EXIT			DISC SKIP		EXIT ; ↵					
▲	▲				▲		▲		▲	
◀	◀				◀		◀		◀	
OK	ENTER ; ☐				ENTER ; ◀		ENTER ; ◀		▶▶ ; SELECT	
▶	▶				▶		▶		▶	
▼	▼				▼		▼		▼	
✳ ; SETUP	DISC MENU		FUNCTION		LOGO ; DIMMER		EXIT ; ↵			
♪ ; TITLE	☐ ; TOOLS		SOUND MODE		☐ PLII MODE	☐ PLII EFFECT	P.SOUND	DSP/EQ ; EQ	SOUND	
☐	I.REPLAY		POWER SOUND		SOUND EDIT		TIMER/CLOCK		SHUFFLE	
GUIDE	I.SKIP		BAND		ASC		ON/OFF TIMER		REPEAT	
⏸			TIMER ON/OFF	AL OFF SLEEP	SLEEP ; ECHO		SLEEP	SLEEP ; ECHO		
☐	SUBTITLE		TIMER/CLOCK		SUB T. ; SEA. SONG		SUBTITLE ; S. SONG			
RED ; ●	REPEAT	● ; RECORD	POWER SURR.		KEY CON. b ; TITLE		b KEY CONTROL	☐ PL II MODE	b	
GREEN ; ▬	KARAOKE ; A-B RE.		COUNTER RESET		KEY CON. # ; DISC		# KEY CONTROL	☐ PL II EFFECT	#	
YELLOW ; ◀	STEP		CD SYNC		P.BASS		STEP	CD RIPPING		
BLUE ; ▬			RANDOM		MO/ST ; SLOW		MO/ST ; SLOW	TREB/BASS	SLOW	
☐	i ; INFO		DISPLAY		INFO ; LYRIC VIEW		INFO ; LYRIC VIEW	REMAIN	VIEW	
☐	☐ ; RETURN		CD REPEAT	CD REPEAT A+B	RETURN ; ☐	REPEAT	☐ ; RETURN	REPEAT	RETURN	
VOL -			VOL. -		VOLUME -	MIC VOL -	VOLUME -	TEMPO -		
VOL +			VOL. +		VOLUME +	MIC VOL +	VOLUME +	TEMPO +		
CH V ; ◀	◀		CD ◀ ; ▼		◀	TUNING/CH ▼	◀	TUNING ▼	◀ ; PREV.	
CH A ; ▶	▶		CD ▶ ; ▲		▶	TUNING/CH ▲	▶	TUNING ▲	▶ ; NEXT	
± ; SAT			+10		S.VOL		LOGO			
CLEAR ; X	☐ ; CANCEL		+10 ; CNT. RESET		CANCEL		CANCEL			
◀ ; ○	◀ ; ◀		CD ◀ ; ▼		◀		◀		◀ ; PREV.	
▶ ; i	▶▶ ; PLAY		▶▶ CD		▶ ; PLAY		▶ ; PLAY		▶▶ ; SELECT	
▶ ; ?	▶▶		CD ▶▶ ; ▲		▶▶		▶▶		▶▶ ; NEXT	
■ ; X	■ ; STOP		■ CD		■ ; STOP		■ ; STOP		■	
▬ ; ⏸	▬ ; PLAY		▶▶ CD		▬ ; PAUSE		▬ ; PAUSE		▶▶ ; SELECT	
1, 2, ... 9, 0	1, 2, ... 9, 0				1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F к AUX устройствам

Кнопки пульта IRC 16 F	Код 316		Код 317		Код 318		Код 319		Код 320	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	DVD				CD		CD			
AUDIO ; NICAM	LOGO ; AUDIO		SUBWOOF. LEVEL		TAPE		TAPE		ST/MO	
VIDEO ; SYS	NT/PAL ; EZ VIEW		CD SYNC		VIDEO/AUX		EQ DISPLAY			
☐ ; ZOOM	ZOOM						EQ ON/FLAT			
▼ ; TV	TUNER BAND		TUNER BAND		TUNER		TUNER			
☐ ; ↗	P.SCAN ; TUN. MEM.		DECK 1/2, A/B		AUTO		TUNER MEMORY			
☐ ; LOCK	MELODY ; REP. A-B		COUNTER RESET				MODE ; M/ST ; FM			
▲ ; FAV	▲ ; OPEN/CLOSE						SHUF. ; RANDOM			
○	○ ; POWER		○ ; ON/STANDBY		POWER		POWER		POWER (AC)	
AV	AUX	MALE ; FEMALE	AUX				AUX	PHONO ; AUX		
⌘	⌘ ; MUTE		⌘ ; MUTE		MUTE		MUTE		MUTE	
MENU	MENU ; ☐		PROGRAM/SET		MEMO		PROGRAM		PROGRAM	
EXIT	DISC SKIP						DISC SKIP			
▲	▲				PRE SET ▲		PRESET ▲			
◀	◀				TUN ▼		TUNING ▼			
OK	ENTER ; ↵									
▶	▶				TUN ▲		TUNING ▲			
▼	▼				PRE SET ▼		PRESET ▼			
* ; SETUP	SURROUND MODE		FUNCTION		P/S		FUNCTION	HI-LITE ; INT.SCAN	FUNCTION	
♪ ; TITLE	SOUND MODE		SOUND MODE				BAND	FREQ. ; EQ PRESET	3MODE EQ	
☐	DIGEST ; FAV. SONG		TUNING MODE		BAND		TIMER ON/OFF		BAND	
GUIDE	SLIDE M. ; S. SONG		MONO/ST		CLOCK		CLOCK		CLK/ADJ	
⏻	SLEEP		TIMER ON/OFF		SLEEP		SLEEP ; AI SLEEP	AI SLEEP	SLEEP	
☐	SUBTITLE		AL OFF SLEEP		TIMER ON		TIMER SET	TIMER CHECK	TIMER ON/OFF	
RED ; ●	b KEY CONTROL		POWER SOUND	●/ ; REC/PAUSE			CD SYNCHRO	P.SCAN ; PRESET	INTRO	
GREEN ; ►	# KEY CONTROL		POWER SURR.				CD EDIT	MEMORY	SHUFFLE	
YELLOW ; ◀	STEP		EQ PRESET				LEVEL ▼	USER		
BLUE ; ►	SLOW ; TUN. MODE						LEVEL ▲	PRESET		
☐	INFO	REMAIN ; TAPE 1/2	TIMER/CLOCK				TIME DISPLAY		DISPLAY	
☐	○ ; RETURN	CD REPEAT					MODE ☐ ; ○ ; ☐	REPEAT	REPEAT	
VOL -	VOLUME -	TEMPO -	VOL. -		VOL -		VOLUME ▼		VOLUME -	
VOL +	VOLUME +	TEMPO +	VOL. +		VOL +		VOLUME ▲		VOLUME +	
CH V ; ◀	◀	TUNING ▼	▼		◀◀ SKIP		◀◀		PRESET HOR/MIN ▼	
CH A ; ▶	▶	TUNING ▲	▲		▶▶ SKIP		▶▶		PRESET HOR/MIN ▲	
± ; SAT	RESERVE		+10				+10 ; CD SYNCHRO		+10	
CLEAR ; X	CANCEL		+10 ; CNT. RESET				CURVE SPENA			
◀ ; ●	◀		◀◀ ; REW		◀◀ SKIP		◀◀◀ SKIP SEAR.		◀◀TUN./SKIP/SEAR.	
▶ ; i	▶▶ ; II	TAPE ◀▶	◀▶ TAPE ; F.PLAY	REV. M. ; ◀ ; R.PLAY	▶▶ ; PLAY/PAUSE		▶▶▶ ; PLAY/PAUSE		▶▶▶ ; PLAY/PAUSE	
▶ ; ?	▶▶		▶▶ ; FF		▶▶ SKIP		▶▶▶ ; SKIP SEAR.		▶▶▶TUN./SKIP/SEAR.	
■ ; X	■		■ ; STOP		■ ; STOP		■ ; STOP		■ ; STOP/CLEAR	
; ⏻	▶▶ ; II		●/ ; REC/PAUSE		▶▶ ; PLAY/PAUSE		▶▶▶ ; PLAY/PAUSE		▶▶▶ ; PLAY/PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0				1, 2, ... 8				1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F к AUX устройствам

Кнопки пульта IRC 16 F	Код 321		Код 322		Код 323		Код 324		Код 325	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	SPEAKER MODE				DECK 1/2				DOLBY PRO LOGIC	
AUDIO ; NICAM	AUDIO		MO/ST ; REP. A+B		MO/ST ; REP. A+B				MONO/ST	
VIDEO ; SYS	BOOK MARK		SHUFFLE		SRS WOW				TEST	
☐ ; ZOOM	ZOOM								DELAY	
▼ ; TV	TUNING MODE		BAND ; TUNER		BAND ; TUNER				BAND	
☐ ; ↗	☐ ; DOLBY SURR.				TREBLE/BASS				MEMORY	
☐ ; LOCK	ANGLE		COUNTER RESET		COUNTER RESET				SURROUND	
▲ ; FAV	▲ ; OPEN/CLOSE						▲ ; OPEN/CLOSE		▲	
○	○ ; ON/STANDBY		○/I		○/I		POWER		POWER	
AV	AUX		AUX		AUX					
⌘	MUTE		⌘ ; MUTE		⌘ ; MUTE				MUTE	
MENU	MENU		PROGRAM/SET		PROGRAM/SET		PROGRAM		PROGRAM	
EXIT	DISC SKIP		DISC SKIP						DISC SKIP	
▲	▲		TUNING ▲		TUNING ▲				LEVEL ▲	
◀	◀								TUNING -	
OK	ENTER						SELECT		CENTER	
▶	▶								TUNING +	
▼	▼		TUNING ▼		TUNING ▼				LEVEL ▼	
* ; SETUP	SETUP		DEMO/DIMMER		DEMO/DIMMER		DISC MODE		FUNCTION	
♪ ; TITLE	TITLE		EQ/S.BASS		EQ/S.BASS		SOUND		DSPI/EQ	
☐	BAND		RDS-PTY				INTRO		PRESET/MANUAL	
GUIDE	TIMER ON/OFF		TIMER/CLOCK		TIMER/CLOCK		RANDOM		TIMER CHECK	
⏻	SLEEP		SLEEP ; AL SLEEP		SLEEP ; AL SLEEP		TIME		SLEEP	
☐	SUB TITLE		TIMER ON/OFF		TIMER ON/OFF				ON/OFF TIMER	
RED ; ●	PROGRAM	S.BASS	MEDLEY		RDS-PTY		LAST MEMORY ; S/M		CD ; REPEAT	
GREEN ; ►	DSP/EQ	TEST TONE	TREBLE/BASS		MEDLEY		REPEAT		CD SYNCHRO	
YELLOW ; ◀	STEP	SOUND EDIT	SRS WOW		REV.MODE		SINGLE STEP ▶		L-CH	
BLUE ; ►	POWER SOUND				TAPE SPEED		SLOW MOTION ▶		R-CH	
☐	DISPLAY		RDS-DIPLAY		RDS-DIPLAY		DISPLAY		TAPE ; DISPLAY	
☐	RETURN	REPEAT	REPEAT				RETURN			
VOL -	VOLUME -		VOLUME -		VOLUME -				VOLUME -	
VOL +	VOLUME +		VOLUME +		VOLUME +				VOLUME +	
CH V ; ◀	▼		◀◀ (CD)				◀◀ ; PREVIOUS		◀◀	
CH A ; ▶	▲		▶▶ (CD)				▶▶ ; NEXT		▶▶	
± ; SAT			+10 ; TUNING MODE		+10 ; TUNING MODE					
CLEAR ; X	CLEAR						CLEAR		AI OFF	
◀ ; ●	◀◀ ; ◀◀		◀◀ (CD)		◀◀ (TAPE)		SEARCH ◀◀		◀◀	
▶ ; i	▶▶ ; DVD/CD		▶▶ (CD)		◀▶ (TAPE)		▶▶ ; SELECT		▶▶	
▶ ; ?	▶▶▶ ; ▶▶▶		▶▶ (CD)		▶▶ (TAPE)		SEARCH ▶▶		▶▶	
■ ; X	■		■ (CD)		■ (TAPE)		■ ; RETURN		■	
; ⏻	▶▶ ; DVD/CD		▶▶ (CD)				▶▶ ; SELECT		▶▶	
1, 2, ... 9, 0	1, 2, ... 9, 0						1, 2, ... 9, 0		1, 2, ... 9, +10	

Функции кнопок пульта IRC 16 F к AUX устройствам

Кнопки пульта IRC 16 F	Код 326		Код 327		Код 328		Код 329		Код 330	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	1+2 ; TAPE REPT.		1+2 ; TAPE REPT.				DVD		DVD ▶ ; AUX	
AUDIO ; NICAM	MONO/ST		MONO/ST				AUDIO		AUDIO	
VIDEO ; SYS	REV MODE		REV MODE				VCR		CD RIPPING	
☐ ; ZOOM							ZOOM ; ATR		ZOOM	
▼ ; TV							TV/VCR		TAPE ▶	
☐ ; ↗	MEMORY		MEMORY				SCREEN FIT ; SVHS		TUNER	TUNER MEMORY
☐ ; LOCK	AI OFF		AI OFF				ANGLE		ANGLE	
▲ ; FAV						OPEN/CLOSE	▲ ; OPEN/CLOSE		▲	
⊖	POWER		POWER			POWER	STANDBY/ON		⊖ ; POWER	
AV							INPUT		AUX ; USB	
⌘	MUTE		MUTE				MUTE		⌘ ; MUTE	
MENU	PRESET/MANUAL		PRESET/MANUAL			OK MENU	DISC MENU		☐ ; MENU	
EXIT									→EXIT	DISC SKIP
▲	TUNING -		TUNING -			KEY CONTROL ▲	▲		▲	
◀						TEMPO CONTR. ▼	◀		◀	
OK						OK MENU	ENTER ; ↵		☐ ; ENTER	
▶						TEMPO CONTR. ▲	▶		▶	
▼	TUNING +		TUNING +			KEY CONTROL ▼	▼		▼	
⌘ ; SETUP	FUNCTION		FUNCTION			SCORE	SETUP		P.SOUND	
♪ ; TITLE	DSP/EQ		DSP/EQ			MELODY	TITLE ; SPEED		P.BASS	DSP/EQ
☐	BAND		BAND				MARK ; INDEX		DIMMER ; DEMO	
GUIDE	TIMER CHECK		TIMER CHECK				FM/AM		TIMER/CLOCK	
⊖	SLEEP		SLEEP				TEST		SLEEP	TIMER ON/OFF
☐	ON/OFF ; TIMER		ON/OFF ; TIMER				SUBTITLE ; TIMER		SUBTITLE	
RED ; ●	● ; REC PAUSE					CONTINUE RESERV.	SOUND MODE ● ; REC		REPEAT	REC
GREEN ; ►						CHECK	SOUND EFFECT		A-B REPEAT	PARTY
YELLOW ; ◀	◀ (DECK 1)		◀ (DECK 2)			RESERVE	STEP		STEP	TREB/BASS
BLUE ; ►							SPEAKER		SLOW	ECHO
☐	TAPE ; DISPLAY		TAPE ; DISPLAY				DISPLAY		i INFO	REMAIN
☐						REPEAT	☐ ; RETURN/A.DUB		☐ ; RETURN	
VOL -	VOLUME -		VOLUME -				AMP VOL -		VOL -	MIC VOL -
VOL +	VOLUME +		VOLUME +				AMP VOL. +		VOL +	MIC VOL +
CH V ; ◀							PROG/TRK ▼		◀	TUNING ▼
CH A ; ►							PROG/TRK ▲		►	TUNING ▲
± ; SAT							MODE ; REPEAT		MO/ST	
CLEAR ; X						CANCEL	CLEAR		⊖ ; CANCEL	
◀ ; ●	◀ (DECK 1)		◀ (DECK 2)			MALE ; ◀ ; ◀ SKIP	◀ ; ◀		◀	
▶ ; i	▶ (DECK 1)		▶ (DECK 2)			▶ ; ▶ ; PLAY/PAUSE	▶ ; ▶		▶ ; PLAY	
▶ ; ?	▶ (DECK 1)		▶ (DECK 2)			FEMALE ; ▶ ; ▶ SKIP	▶ ; ▶		▶	
■ ; X	■ (DECK 1)		■ (DECK 2)			■ ; STOP	■ ; ▶		■ ; STOP	
■ ; ⬇	■ ; PAUSE		● ; REC PAUSE			▶ ; ▶ ; PLAY/PAUSE	▶ ; ▶		■ ; PAUSE	
1, 2, ... 9, 0						1, 2, ... 9, 0/10	1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F к AUX устройствам

Кнопки пульта IRC 16 F	Код 331		Код 332		Код 333		Код 334		Код 335	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	DVD		TV/DVD		DVD		DVD			
AUDIO ; NICAM	AUDIO		AUDIO		AUDIO		AUDIO			
VIDEO ; SYS	NT/PAL; TREB/BASS		REC MODE		VIDEO SEL.		VCR			
☐ ; ZOOM	ZOOM; REPEAT A-B				ZOOM		ZOOM			
▼ ; TV	ECHO				USB		TV/VCR			
☐ ; ↗	TUNER	TUNER MEMORY			REPEAT		MARK ; SEARCH			
☐ ; LOCK	DEMO/DIMMER				REPEAT A-B		ANGLE ; IPC			
▲ ; FAV	▲ ; EJECT		▲ ; OPEN/CLOSE		▲ ; OPEN/CLOSE		▲ ; OPEN/CLOSE			
⊖	⊖ ; POWER		STANDBY/ON		⊖ ; POWER		STANDBY/ON			
AV	AUX ; USB		INPUT SEL		HDMI SEL.		INPUT SEL			
⌘	⌘ ; MUTE									
MENU	☐ ; MENU		☐ ; MENU		☐ ; MENU		☐ ; MENU			
EXIT	→EXIT				→EXIT		☐ ; RETURN			
▲	▲		▲		▲		▲			
◀	◀		◀		◀		◀			
OK	☐ ; ENTER		☐ ; ENTER		☐ ; ENTER		☐ ; ENTER			
▶	▶		▶		▶		▶			
▼	▼		▼		▼		▼			
⌘ ; SETUP	SLIDE MODE		TITLE LIST; D. MENU		DISC MENU		DISC MENU			
♪ ; TITLE	P.SOUND	DSP/EQ	PLAY LIST; T. MENU		TITLE MENU		KARAOKE			
☐	DIGEST		TIMER ; MARKER		☐ ; TOOLS		EZ VIEW			
GUIDE	TIMER/CLOCK		REPEAT		KARAOKE					
⊖	SLEEP	ON/OFF TIMER	TIME SLIP				TIMER			
☐	SUBTITLE		SUBTITLE		SUBTITLE		SUBTITLE			
RED ; ●	KEY CONTROL b		KEYCON b	● ; REC	REPEAT	● ; RECORD	SHUTTLE ◀	● ; REC		
GREEN ; ►	KEY CONTROL #		KEYCON #		STEP		SHUTTLE ►	F.ADV/STEP		
YELLOW ; ◀	STEP; COUNT. RES.		◀		A-B REPEAT		KARAOKE SEAR. ◀			
BLUE ; ►	MO/ST ; SLOW		► ; RESERVE		I.REPLAY		KARAOKE SEAR. ►			
☐	INFO	REMAIN	INFO ; KARAOKE		INFO		INFO			
☐	☐ ; RETURN	REPEAT	☐ ; RETURN		☐ ; RETURN		MODE ; REPEAT			
VOL -	VOLUME -		TEMPO ▼		BOOKM. ; MARKER		TRK ▼ ; KEYCON b		⊖	
VOL +	VOLUME +		TEMPO ▲		EZ VIEW		TRK ▲ ; KEYCON #		⊖	
CH V ; ◀	◀	TUNING ▼	◀ ; MELODY		◀		PROG/TRK ▼	◀	⊖	
CH A ; ►	►	TUNING ▲	► ; FAVORITE		►		PROG/TRK ▲	►	⊖	
± ; SAT	LOGO ; REV. MODE		ANYKEY				SPEED ; USB			
CLEAR ; X	CANCEL		⊖ ; CANCEL		⊖ ; CANCEL		⊖ ; CANCEL			
◀ ; ●	◀		◀ ; SEARCH SONG		◀		◀			
▶ ; i	► ; PLAY	TAPE ◀ ▶	► ; PLAY		▶ ; PLAY		► ; PLAY			
▶ ; ?	▶		▶ ; FEMALE/MALE		▶		▶			
■ ; X	■ ; STOP		■ ; STOP		■ ; STOP		■ ; STOP			
■ ; ⬇	■ ; PLAY		■ ; PLAY		■ ; PAUSE		■ ; PLAY			
1, 2, ... 9, 0			1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0			

Функции кнопок пульта IRC 16 F к AUX устройствам

Кнопки пульта IRC 16 F	Код 336		Код 337		Код 338		Код 339	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD			DVD ; DISC SKIP				DVD	
AUDIO ; NICAM	AUDIO		EQ				MO/ST ; SLOW	
VIDEO ; SYS			SPEED ; CD REC				TAPE	
☐ ; ZOOM	FULL SCREEN		MY KARAOKE				ZOOM	
▼ ; TV							BAND ; TUNER	
☐ ; ↗	VIEW ; BONUS						TIMER/CLOCK	TUNER MEMORY
☐ ; LOCK			REPEAT				STEP ; CNT.RESET	
▲ ; FAV	▲						▲ ; OPEN/CLOSE	
○	○						○/л	
AV					☐ ; SOURCE		AUX	
✳			✳		☐		✳ ; MUTE	
MENU	HOME ; HOME		☐ ; HOME		SOUND EFFECT		☐ ; MENU	
EXIT	→☐ ; EXIT		→☐ ; EXIT				☐ ; RETURN	
▲	▲		▲ ; TUNING ▲				▲	
◀	◀		◀ ; b				◀	
OK	☐		☐				☐ ; ENTER	
▶	▶		▶ ; #				▶	
▼	▼		▼ ; TUNING ▼				▼	
✳ ; SETUP	☐ ; TOOLS		FUNCTION		☐ SOUND		SRS WOW	
♪ ; TITLE	POPUP;TITLE MENU		SOUND		SOUND CONTROL		EQ/S.BASS	TREBLE/BASS
☐	DISC MENU		☐ ; TOOLS				SLIDE MODE	
GUIDE	HUB ; SMART						DIGEST	
☐							SLEEP	TIMER ON/OFF
☐	SUBTITLE						SUB TITLE	
RED ; ●	A ; RED		RED ; A ; DISPLAY	● ; USB REC	BLUETOOTH		REPEAT	REP A↔B
GREEN ; ►	B ; GREEN		GREEN ; B ; MO/ST		WOOFER		STEP	
YELLOW ; ◀	C ; YELLOW		YELLOW ; C		AUTO POWER		REMAIN	
BLUE ; ►	D ; BLUE		BLUE ; D ; KEYCON				SLOW	
☐	i ; INFO		i ; INFO				INFO	EZ VIEW
☐	☐ ; RETURN		☐ ; RETURN		☐		☐ ; RETURN	
VOL -			VOL -	MIC VOL -	VOL -		VOLUME -	
VOL +			VOL +	MIC VOL +	VOL +		VOLUME +	
CH V ; ◀◀	◀◀		◀◀ ; RDS PTY		◀◀		TUNING V	
CH A ; ▶▶	▶▶		▶▶		▶▶		TUNING A	
± ; SAT	REPEAT						LOGO	
CLEAR ; X							CANCEL	
◀◀ ; ●	◀◀		◀◀				◀◀	
▶ ; i	▶		▶		▶▶		▶ ; ◀▶	
▶▶ ; ?	▶▶		▶▶ ; RDS DISPLAY				▶▶	
■ ; X	■		■				■	
■ ; ⬇	■		■		■		▶ ; ◀▶	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0				1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F к SAT устройствам

Кнопки пульта IRC 16 F	Код 401		Код 402		Код 403		Код 404	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	Pg Up ; CTP ▲		Pg +		Pg +		Pg +	
AUDIO ; NICAM	RADIO ; АУДИО		AUDIO		AUDIO		AUDIO	
VIDEO ; SYS	UHF ; МОДУЛЯТОР							
☐ ; ZOOM								
▼ ; TV	Pg Dn ; CTP ▼		Pg -		PG -		PG -	
☐ ; ↗								
☐ ; LOCK								
▲ ; FAV			FAV		FAV		FAV	
○	○		POWER		○ ; POWER		○ ; POWER	
AV	TV/SAT ; ТВ/СП							
✳	✳		MUTE		✳ ; MUTE		✳ ; MUTE	
MENU	MENU ; МЕНЮ		MENU		MENU ; ☐		MENU ; ☐	
EXIT	EXIT ; ВЫХОД		EXIT		→☐ ; EXIT		→☐ ; EXIT	
▲	P + ; ▲		CH + ; ▲		CH + ; ▲		▲	
◀	VOL - ; ◀		VOL - ; ◀		VOL - ; ◀		◀	
OK	OK ; ВВОД		OK		OK ; ☐		OK ; ☐	
▶	VOL + ; ▶		VOL + ; ▶		VOL + ; ▶		▶	
▼	P - ; ▼		CH - ; ▼		CH - ; ▼		▼	
✳ ; SETUP								
♪ ; TITLE	☐		TV/RADIO		TV/RADIO		TV/RADIO	
☐	☐		TEXT		TEXT		TEXT	
GUIDE	TV GUIDE ; ГИД		EPG		EPG		EPG	
☐			TIMER		TIMER		TIMER	
☐	☐							
RED ; ●			RED ; i		RED ; i		RED ; i	
GREEN ; ►			GREEN ; TEXT		GREEN ; TEXT		GREEN ; TEXT	
YELLOW ; ◀			YELLOW ; ALT		YELLOW ; ALT		YELLOW ; ALT	
BLUE ; ►			BLUE ; AUDIO		BLUE ; AUDIO		BLUE ; AUDIO	
☐	i ; ИИФ		i		i		i	
☐	RECALL ; ☐		LAST		LAST		LAST	
VOL -	VOL - ; ◀		VOL - ; ◀		VOL -		VOL -	
VOL +	VOL + ; ▶		VOL + ; ▶		VOL +		VOL +	
CH V ; ◀◀	P - ; ▼		CH - ; ▼		CH ▼		CH ▼	
CH A ; ▶▶	P + ; ▲		CH + ; ▲		CH ▲		CH ▲	
± ; SAT								
CLEAR ; X								
◀◀ ; ●								
▶ ; i								
▶▶ ; ?								
■ ; X								
■ ; ⬇								
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0/TIMER		1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F к TV устройствам

Кнопки пульта IRC 16 F	Коды 501-696	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM		
VIDEO ; SYS		
☐ ; ZOOM		
▼ ; TV		
⏪ ; ↵		
☒ ; LOCK		
▲ ; FAV		
⏻	POWER ; ⏻	
AV	TV/VIDEO ; TV/AV	
⌘	MUTE ; ⌘	
MENU		
EXIT		
▲		
◀		
OK		
▶		
▼		
⌘ ; SETUP		
🎵 ; TITLE		
☐		
GUIDE		
⏻		
☐		
RED ; ●		
GREEN ; ▢		
YELLOW ; ◀		
BLUE ; ▶		
☐		
☐		
VOL -	VOLUME ▼ ; ▽-	
VOL +	VOLUME ▲ ; ▽+	
CH V ; ◀◀	CHANNEL ▼ ; P -	
CH A ; ▶▶	CHANNEL ▲ ; P +	
± ; SAT		
CLEAR ; X		
◀◀ ; ●		
▶▶ ; i		
▶▶ ; ?		
■ ; X		
⏻ ; ⏻		
1, 2, ... 9, 0	1, 2, ... 9, 0	

Для просмотра функций кнопок баз кодов 8 и 9 (SAT, STB, DVB устройства) перейдите по следующей ссылке <http://www.pult-irc.ru/files/manual/SatCodesForIrcF.pdf>