

# Приложение IRC 17 F (версия 17.11.13 00:54)

Модели оригинальных пультов и соответствующие им коды пульта IRC приведены в разделе "Коды пульта IRC 17 F".

Функции всех кнопок для каждого кода пульта IRC можно узнать из таблиц данного приложения.

Пульт IRC может иметь дополнительные функции (если указаны в столбце "Доп. функция"). Доступ к ним осуществляется при помощи кнопки SHIFT (см. в инструкции рис.1, п.16). Для доступа к дополнительным функциям нажмите кнопку SHIFT и, удерживая её нажатой, нажмите ту кнопку, дополнительная функция которой Вам необходима.

## После первой установки батареек

Кнопка устройства пульта IRC	Код пульта IRC	Кнопка устройства пульта IRC	Код пульта IRC
TV	101	SHIFT + TV*	105
VCR	102	SHIFT + VCR*	106
AUX	103	SHIFT + AUX*	107
SAT	104	SHIFT + SAT*	108

\* Нажмите кнопку SHIFT и, удерживая её нажатой, нажмите и отпустите одну из кнопок пульта: TV, VCR, AUX или SAT.

## Доступные коды пульта IRC 17 F

Номер базы кодов (диапазон кодов)	Устройство базы кодов	Доступные коды пульта IRC
1 (101-199)	TV	101 - 123
2 (201-299)	VCR	201 - 205
3 (301-399)	AUX	301 - 306
4 (401-499)	-	Нет
5 (501-599)	TV	501 - 599
6 (601-699)	TV	601 - 699
7 (701-799)	TV	701 - 799
8 (801-899)	SAT	801 - 899
9 (901-999)	SAT	901 - 999

## Коды пульта IRC 17 F

### Коды к устройствам марки SANYO

Модель*	Устр-во	Код
060-01220-1.4	TV	106
11UV19-2	TV	113
1AV0010B01900	TV	106
1AV0110B00800	TV	106
1AV0U10B00800	TV	107
1AV0U10B01900	TV	106
1AV0U10B03200	TV	107
1AV0U10B04000	TV/VCR	114
1AV0U10B08600	AUX, CD, DVD	301
1AV0U10B31200	TV	115
440MT0009A	TV	119
4AA4U1T0010	TV	107
4AA4U1T0016	TV	106
4AA4U1T0023	TV	106
4AA4U1T0032	TV	106
4AA4U1T0055	TV	107
4AA4U1T0063	TV	106
4AA4U1T0064	TV	106
4AA4U1T0069A	TV	107
4AA4U1T0094	TV	106
4AA4U1T0102	TV	106
4AA4U1T069	VCR	201
4AA4U1T0092	TV	106
4AA4U1T0093	TV	106
A05209	VCR	205
A06209	VCR	205
B01032	VCR	205
B04802	VCR	204
CBP2146	TV	109
CBP2148	TV	108
CEP3100	TV	112
CG0127GESA	VCR	202,203
CPT6144	TV	110
CXE A	AUX, CD, DVD	301
CXGM	AUX, CD, DVD	301
CXHD	AUX, CD, DVD	301
CXHD (CURSOR)	AUX, CD, DVD	306
EUR5972A	TV	105
FXFA	TV	119
FXFB	TV	119
INFRARED RC	VCR	201
JXBA	TV	110
JXDA	TV	109
JXDB	TV	109
JXDJ	TV	109

Модель	Устр-во	Код
JXDK	TV	109
JXDR	TV	108
JXDS	TV	108
JXDV	TV	108
JXDW	TV	108
JXDZ	TV	108
JXGA	TV	111
JXGL	TV	111
JXGM	TV	111
JXGT	TV	106
JXGTUS0383	TV	106
JXHARC730	TV	108
JXHB	TV	108
JXHD	TV	108
JXHG	TV	106
JXHGS	TV	106
JXKB	TV	108
JXKE	TV	108
JXLB	TV	106
JXMEB (TV)	TV	115
JXMEB (VCR)	VCR	201
JXMRM	TV	115
JXPSB	TV	115
JXPSC	TV	115
JXRA	TV	106
JXRB	TV	106
JXRC	TV	107
JXTB	TV/VCR	114
KT1045-2	TV	123
MXE	TV	102
RB-A8501-EU	AUX, CD, DVD	303
RB-D5	AUX, CD, DVD	304
RB-DA100	AUX, CD, DVD	304
RB-SL20	AUX, CD, DVD	302
RB-SL25	AUX, CD, DVD	302
RB-SL33KR	AUX, CD, DVD	302
RC 218	TV	101
RC 222	TV	101
RC 228	TV	101
RC 238	TV	101
RC 243	TV	112
RC 254	TV	112
RC 258	TV	112
RC 279	TV	101
RC 282	TV	112

Модель	Устр-во	Код
RC 302	TV	112
RC 303	TV	101
RC 304	TV	101
RC 305	TV	112
RC 307	TV	110
RC 308	TV	110
RC 315	TV	112
RC 317	TV	110
RC 339	TV	101
RC 347	TV	110
RC 348	TV	110
RC 612	TV	110
RC 625	TV	110
RC 628	TV	110
RC 629	TV	110
RC 632	TV	112
RC 645	TV	112
RC 650	TV	109
RC 651	TV	109
RC 655	TV	109
RC 658	TV	109
RC 659	TV	109
RC 660	TV	108
RC 662	TV	108
RC 663	TV	108
RC 664	TV	108
RC 666	TV	108
RC 667	TV	108
RC 669	TV	106
RC 669JXLB	TV	106
RC 68	VCR	201
RC 688	TV	110
RC 699	TV	108
RC 699JXKB	TV	108
RC 700	TV	111
RC 700A	TV	111
RC 700JXGA	TV	111
RC 700JXGM	TV	111
RC 702	TV	111
RC 710	TV	111
RC 711	TV	106
RC 730	TV	108
RC 731	TV	108
RC 733	TV	108
RC EDO	TV	107

Модель	Устр-во	Код
RC EDOM	TV	107
RC-102-0F	TV	116
RC-2040	TV	113
RC-2100	TV	121
RC-2440	TV	113
RC-J11-0A	TV	122
RC-U42R-0L	TV	120
REM40	TV	103
REM80	TV	104
RM-40	TV	117
RMB1X	TV	118
SCR-18	AUX, CD, DVD	305
SF138	TV	113
TV-02	TV	101
UG 0006	TV	112
US 0049	TV	110
US 0211	TV	112
US 0383	TV	106
US 0384 (TV)	TV	106
US 0384 (VCR)	VCR	201
US 0388	TV	106
US 0389	TV	106

\* По каталогу «IRC»

**Коды к TV устройствам различных марок**

Марка	Код
AEG	544
AIWA	502, 503, 523, 528, 579, 634, 678, 710, 712, 716
AKAI	501, 503, 512, 516, 520, 522, 524, 525, 537, 538, 540, 545, 546, 547, 550, 571, 572, 582, 583, 584, 585, 598, 608, 613, 626, 652, 673, 691, 704, 722, 731, 769
AKIRA	511, 514, 516, 524, 525, 537, 538, 541, 545, 547, 556, 577, 586, 594, 597, 598, 601, 623, 626, 629, 631, 649, 666, 680, 689, 690, 693, 717, 739, 796, 797, 798, 799
AMCOL	501, 525, 545, 747
ANITECH	501, 525, 726
ATLANTA	501, 751
AVEST	537, 538, 539, 766
BANG & OLUFSEN	728, 737
BBK	522, 551, 594, 597, 684, 701, 788, 792, 793
BEKO	525, 530, 535, 559, 723, 742
BIGSTON	501, 503
BLAUPUNKT	512
BORK	525, 547, 646, 766
BRAND	711
BROKSONIC	501
CAMERON	550, 567, 675, 697, 702, 792, 794
CASIO	529, 705, 706
CASKA	761
CHANGHONG	516, 642
CLATRONIC	501
CONTEC	501, 603, 604, 613
CORTLAND	644
CROWN	501, 503, 511, 524, 525, 530, 571
DAEWOO	501, 508, 518, 520, 525, 526, 536, 538, 539, 546, 565, 571, 576, 598, 613, 685, 687, 692
DARTLAND	501
DAYTRON	501
DIGITAL	547
DISTAR	562, 616
DNS	596, 702, 708
DUAL	746
ELEKTA	501, 503, 520, 525, 527, 615
ELEKTRONIKA	583
ELENBERG	538, 545, 550, 565, 567, 579, 581, 644, 655, 676, 683, 717, 785
EPLUTUS	537, 644, 677, 682, 697, 724
ERC	537, 631, 764
ERISSON	511, 514, 516, 525, 526, 537, 538, 541, 550, 556, 561, 568, 586, 596, 599, 623, 626, 629, 631, 711, 712, 714, 739, 747, 779, 786, 795
EVGO	538, 540, 630
FINLUX	501, 511, 583, 589, 608, 732, 758, 774
FUJITSU	544, 573
FUNAI	501, 502, 503, 504, 505, 525, 537, 538, 581, 603, 764
FUSION	596, 642, 705, 706
GBS	501, 520, 525, 571, 583
GENERAL	537, 556
GOLD STAR - LG	501, 512, 518, 525, 527, 559, 570, 583, 584, 589, 609, 613, 642, 706, 742, 750, 765
GRUNDIG	501, 512, 525, 606, 662, 718, 719, 733
HAIER	518, 526, 561, 574, 657, 667, 669, 707, 778
HAPPY	501
HCM	501, 525
HELIX	701, 702
HIL	503
HITACHI	501, 515, 518, 522, 525, 537, 544, 548, 554, 578, 584, 587, 588, 604, 613, 640, 729, 749, 775, 783
HORIZONT	525, 540, 545, 550, 559, 583, 672, 771
HPC	546
HYUNDAI	516, 522, 525, 526, 537, 540, 541, 546, 547, 550, 556, 580, 596, 597, 599, 626, 642, 650, 655, 705, 711, 714, 717, 760
INNO-HIT	501, 525, 571
IRBIS	596, 714
IVA (ИВА)	537, 561, 637
IZUMI	516, 537, 596, 663, 691, 695, 705, 711, 792
JINLIPI	537, 637, 766
JVC	513, 515, 593, 604, 727
KAMACROWN	571
KANSAI	501, 525
KENSTAR	516
KITT	613, 726
KNEISSEL	753
KONKA	560, 581, 616, 717
LOEWE	542, 709, 744
METZ	745
MITSUBISHI	501, 520, 522, 525, 604, 611, 722, 728, 744
MIYOTA	537, 644, 656
MTC	501, 583
MULTITECH	501
MYSTERY	516, 537, 597, 642, 650, 653, 701, 702, 773, 780, 789
NASH	537
NEC	501, 517, 520, 526, 552, 604, 625, 722
NESCO	501, 525
NOKIA	519, 584, 610, 614, 616, 740, 746, 767
NOVA	501, 616, 638
NOVEX	516, 546, 599
NTT	759
OMEGA	501, 571
ONIDA	513
ONIKS	516, 525, 537, 545, 546, 547
ONWA	524, 525
ORBITA	635
ORION	501, 503, 506, 507, 509, 516, 525, 528, 537, 591, 603, 617, 619, 627, 641, 643, 664, 715, 720, 722, 729, 746
ORSON	526, 537
PANASONIC	512, 531, 532, 752
PHILIPS	501, 511, 524, 525, 540, 549, 628, 639, 707, 748
PHOENIX	613
PHOENIX GOLD	708
PIONEER	555, 566, 575, 647, 666
PIXELVIEW	525
PLANTRON	735
POLAR	525, 526, 537, 538, 540, 543, 547, 581, 596, 599, 663, 664, 683, 703, 711, 717
POLAROID	525
POWER VISION	501

**Коды к TV устройствам различных марок**

Марка	Код
PREMIERA	773
PRESTIGIO	564, 656
PRIMA	522, 547
PROLOGY	653, 655, 777, 784
RADUGA	525, 545, 569, 583, 743
RAINFORD	525, 537, 544, 545
RECOR	511, 525
REKORD	520, 525, 526, 537, 538, 539, 545, 547, 725, 736, 743, 747
RFT	535, 728
ROADSTAR	501, 508, 525, 571
ROLSEN	503, 516, 525, 537, 538, 540, 543, 546, 564, 576, 592, 594, 596, 649, 656, 669, 684, 714, 768, 770
ROVERSCAN	662, 770
RUBIN	504, 516, 525, 537, 546, 583, 619, 665, 714, 776
SABA	510, 521, 602, 756
SALORA	584
SAMSUNG	501, 525, 526, 529, 563, 580, 595, 608, 612, 613, 622, 641, 645, 688, 723, 741
SANSUI	524, 525, 538, 556, 695
SANYO	501, 519, 522, 525, 530, 540, 550, 558, 604, 608, 610, 618, 621, 696, 722, 730, 734, 738
SATELLITE	616
SCARLETT	541, 545
SCHNEIDER	525, 540, 571, 771
SELECO	736, 763
SETRO	520
SHARP	526, 544, 548, 604, 707, 721
SHERION	616
SHIVAKI	501, 503, 508, 516, 518, 520, 525, 526, 527, 536, 538, 539, 540, 545, 546, 547, 550, 556, 580, 583, 585, 596, 599, 609, 619, 630, 632, 635, 636, 643, 644, 664, 681, 694, 743, 791
SIEMENS	512, 525, 660, 726, 734
SIESTA	501, 537, 637
SILELIS	613
SILVER	633
SITRONICS	503, 516, 525, 537, 538, 540, 543, 545, 594, 626, 629, 661, 671, 672, 674, 679, 680, 686, 766
SOKOL	516, 525, 547, 635
SONY	533, 604, 659, 722
SPEKTR	525, 538, 668
START	525, 537, 545, 546, 547
STASSFURT	535, 618
STINOL	525
SUPER	537, 561, 644, 653, 654, 655, 666, 677, 682, 724, 754, 772, 780
SUPRA	501, 508, 516, 518, 520, 525, 527, 529, 536, 537, 541, 563, 579, 580, 596, 597, 612, 643, 687, 690, 705, 706, 712, 713, 790
SUZUKI	516, 556
SVEN	781
TCL	538, 540
TECHNO	501, 525, 538, 544, 546, 556, 568, 579, 596, 599, 644, 664, 703, 791
TECKTON	522, 582, 601, 669, 670
TELEFUNKEN	510, 521, 590, 602, 605, 708, 756, 757
TELEVISION	501, 525, 616
THOMSON	509, 510, 521, 550, 579, 602, 624, 642, 702, 756
TOSHIBA	516, 553, 604, 651, 699, 744
TRONY	516, 525, 537, 538, 550
TVT	511, 525, 530, 535, 538, 583, 586, 620, 723, 742
UNITED	525
VARTA	642
VESTEL	525, 544, 556, 583, 619
VIEWSONIC	557, 698
VITA	547
VITEK	537, 650
VITYAS	525
VOLNA (ВОЛНА)	635
VR	516, 537, 702, 714, 786
WALTHAM	503, 509, 511, 583, 584, 607, 613, 729, 762
XORO	522, 526, 545, 782, 787
НЕИЗВЕСТНАЯ МАРКА	546, 574, 596, 648, 656, 666, 711, 755

Коды к SAT устройствам различных марок

Марка	Код
AIR TONE	968
ALFA GOLD	828
AMINO (СТРИМ)	829, 902
ARION	835
ASTON	811
BBK	931
BIG SAT	839, 840, 903, 936
BIG STAR	965
CADENA	958, 962
CONTINENT	886, 975
COSHIP	855
DAEWOO	872
D-COLOR	946
DELTA SYSTEMS	985
DIVISAT	957, 958
D-LINK	923
DNS	968
DR.HD	983
DRE (GENERAL SATELLITE)	804, 868, 888, 907, 933, 954
DREAM	819
DUNE	927, 934
ECHOSPACE	862
ECHOSTAR	808, 809, 822
ELTEX	987
EUROSKY	840, 880
EUROSTAR	863
EUSTON	825
EVO	965
GALAXY INNOVATIONS	878, 881, 908, 911, 912, 917, 924
GLOBALTEQ	833
GLOBO	909, 915, 925, 935, 945, 956, 973, 999
GOLD STAR - LG	871
GOLDEN INTERSTAR	821, 841, 879, 918
GOLDEN MEDIA	847, 912
GOLDMASTER	911
HITACHI	824, 832
HIVION	929
HOME	968
HOMECAST (ВОЛЯ)	820, 831, 836
HUMAX	803, 804, 823, 848, 860, 861, 905, 949
HYUNDAI	968
ID DIGITAL	804
INTEK	984
KAON	820
KOSMOS	855, 856
LANS	970
LOCUS	946
LUMAX	852, 873, 907, 913, 965, 994
MAG	988
MEDIA COM	825
MOTOROLA	883, 884, 901
MYSTERY	910, 997
NDS	814
NEXT	864
NOKIA	813
NOT	941
ONLIME	905
OPENBOX	827, 835, 869, 870, 911, 990, 991
OPENTECH	972
OPENTEL	865
ORBITA	946, 995
ORIEL	887, 926, 941, 948, 955, 986
PACE	801, 932, 953
PATIX DIGITAL	992
PAUXIS	842, 859
PHILIPS	857, 899
PIONEER	851
POLAR	858
REFLECT	959
RIKOR	916, 947
ROLSEN	930, 941, 942, 961
SAGEMCOM	906
SAMSUNG	803, 810, 812, 854
SEG	818
SEZAM	882
SKY VISION	952, 966, 977, 982
SKYMASTER	830
SKYWAY	911
SKYWORTH	989
STAR	833
STAR TRACK	826, 835, 943
STARNET	885
STRONG	805, 806, 815, 816, 817, 828, 830, 914
SUNNIWELL	875
SUPERBOX	903
SUPERMAX	821, 866, 880, 924
SUPRA	950, 960, 962
TECHNOSAT	852, 853
TEL-ANT	960
TELEFUNKEN	961, 968
TESLER	926
TOP BOX	965
TOPFIELD	837, 838, 877, 891
TOSHIBA	876
TV STAR	967
TVJET	946, 976
VESTEL	820, 824
VU+	919, 920, 921, 922

**Коды к SAT устройствам различных марок**

Марка	Код
WORLD VISION	821, 928, 951, 952
XSAT (НТВ+)	801, 802, 807, 906, 972, 984, 998
YUXING	904
ZYXEL	874
БИЛАЙН	883, 884, 901, 923
ВОЛГАТЕЛЕКОМ	842, 843, 844, 845, 846, 847, 849, 850, 858, 867
ДОМ.RU	820, 905
ДОМОЛИНК	874, 904
МТС	855, 964, 974, 979, 980, 989, 993
НЕИЗВЕСТНАЯ МАРКА	834, 835, 842, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 903, 904, 937, 938, 939, 940, 944, 945, 969, 971, 978, 996
РОСТЕЛЕКОМ	874, 904, 923, 963
СИГНАЛ	968
ТЕЛЕКАРТА	867, 909, 973
ТЕЛЕЦИФРА	968

Функции кнопок пульта IRC 17 F к TV устройствам

Кнопки пульта IRC 17 F	Код 101		Код 102		Код 103		Код 104		Код 105	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD							>+; FT+		COLOUR+; ☉+	
AUDIO; NICAM	∠ N				CD/O		9; ↑ ↓			
VIDEO; SYS	⊙ N		■; VIDEO				STD		MODE; P/S	
☐; ZOOM							☐		SIZE	
▼; TV			TV		TV		<-; FT-		COLOUR-; ☉-	
☐; ↗			☐; A/B		PAGE		M; STORE		PIP	
☐; LOCK	⌘; ○ N		NORM; RESET		⌘		⌘		STILL	
▲; FAV									FC	
○	○		○		○		○		POWER; ○	
AV	TV/VIDEO				AV		AV		TV/VIDEO; TV/AV	
⌘	MUTE; ⌘		⌘		⌘		⌘		MUTE; ⌘	
MENU									FUNCT; MENU	
EXIT										
▲	☉+		☉+		☉+		☉+		FUN+; +; ▲; ZOOM	
◀	○-		○-		○-	☉-	○-	☉-	☉-; ○-	
OK									PIC SEL; FUNCT	
▶	○+		○+		○+	☉+	○+	☉+	☉+; ○+	
▼	☉-		☉-		☉-		☉-		FUN-; -; ▼; -PI-	
⌘; SETUP					SC; ☐		☐		PIC; SET ON TIME	
♪; TITLE					STD		A-B; ☐☐		X ON TIME	
☐			TEXT		☐				MIN; MINUTE	
GUIDE									HOUR; HR CLOCK	
⊙	TIME		TIME; TEXT CL		⊙		⊙	-; SLEEP	SLEEP; OFF TIME.; ☐	
☐			MIX		☐		☐			
RED; ●	☉-				DPY-	9;-	RED; P1	9;-	1-; 10-	
GREEN; ▯	☉+				DPY+; STR	9;+	GREEN; P2	9;+	2-	
YELLOW; ▯	☉-		L ⌘; TP OFF		FT-		YELLOW; P3	▯	3-; SCAN	
BLUE; ▯	☉+		R ⌘; TP ON		FT+	▯R	BLUE; P4	▯R	4-; MSG	
☐	DISPLAY		☐☐		STATUS		DISPLAY	▯R	RECALL; DISPLAY	
☐	P/C				P/C		P/C		⌘; Q. VIEW; ☐	
VOL-	VOL-; ▾		▾		▾	⚡-	▾	⚡-	VOLUME ▾; ▾-	
VOL+	VOL+; ▴		▴		▴	⚡+	▴	⚡+	VOLUME ▴; ▴+	
CH V; ⌘			PROGR-; HOLD		P-		P-		CHANNEL ▾; P-	
CH A; ⌘			PROGR+; REVEAL		P+		P+		CHANNEL ▴; P+	
±; SAT	-/-		10		-/-		-/-; 1-	3-	±	
CLEAR; X	11		20		☐; CLEAR		2-	C	RESET; CANCEL; X	
◀; ●	12				☐; ☐II		☐	- <<		
▶; i	13				☐		☐			
▶; ?	14				☐; ☐I		☐	>> +		
■; X	15				☐		☐		⌘	
▯; ⚡	16/AV								ZOOM	
1, 2, ... 9, 0	1, 2, ... 9, 10		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0/AV		1, 2, ... 9, 0	

Функции кнопок пульта IRC 17 F к TV устройствам

Кнопки пульта IRC 17 F	Код 106		Код 107		Код 108		Код 109		Код 110	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			V. TON		<>+		☐; BROWSE; 9;+		VOL+	
AUDIO; NICAM			9; ▯; AUDIO				I/II; RGB			
VIDEO; SYS			MODE	☉			S-VIDEO; HI			
☐; ZOOM			<>				ROTATE			
▼; TV	TV; C; ☐		TV; ☐		<>		☐; LIST; 9;+		VOL-	
☐; ↗	MEMORY		PIP	MEMO	☐		STORE	◆		
☐; LOCK	→←		→←		→←		→←; IPE		NORM	RESET
▲; FAV			8							
○	○		○		○		○		○	○
AV	AV		AV; TV/AV		AV		TV/AV		AV	
⌘	⌘		⌘		⌘		⌘		⌘	
MENU	MENU		MENU; SURROUND							
EXIT	P/C		STOP							
▲	☉+		☐☐		☉+		☉+	⚡+	☉+	
◀	○-	☐☐-	▾		○-		○-	☉-	☉-	☉-
OK			☐							
▶	○+	PICTURE; ☐☐+	▯		○+		○+	☉+	☉+	☉+
▼	☉-		☐☐		☉-		☉-	⚡-	☉-	☉-
⌘; SETUP	PICTURE		☐☐	Ω	☉+		☐; PICTURE			
♪; TITLE	LIST		☐☐	☉	☉+		CD/0; M/S			
☐	☐☐		☐☐	☉☐	☐☐		CS		☐; PERI TV	
GUIDE	CLOCK; S. PAGE		FL.BANK; TXT MODE		FLOF LIST					
⊙	TIMER; ☐		☐; →←	☐; A/B BANK	☐				TIME	
☐	☐		HELP; ☐		☐		☐		☐	
RED; ●	R		RED		RED		RED; INDEX	R	COLOR-	
GREEN; ▯	G		GREEN		GREEN		GREEN	G	COLOR+	
YELLOW; ▯	Y		YELLOW		YELLOW		YELLOW	Y	BR-	
BLUE; ▯	B		BLUE		BLUE		BLUE	B	BR+	
☐	RECALL; S		☐		☐		P/C; 2-; ☐		P/C; 2-	
☐	P/S; ALT		P/C; 2-; CS; BANK		P/C				VOL-	
VOL-	▾	☐-			▾		▾	▯ ▯ L	VOL+	
VOL+	▴	☐+			▴		▴	▯ ▯ R	P-	
CH V; ⌘	P-		P ▾		P-		PR-	→-	P+	
CH A; ⌘	P+		P ▴		P+		PR+	→+	-/-; 1-	
±; SAT	-/-		-/-; 1-		-/-		-/-; 1-; N/N		*	
CLEAR; X	CANCEL		☐		☐		☐; UPDATE			
◀; ●			☐		☐		☐			
▶; i	☐; INDEX		☐; MENU		☐		☐; S. KEY+			
▶; ?	☐; REVEAL		☐		☐		☐; S. KEY-		REV	
■; X	☐; STOP		☐		☐					
▯; ⚡	☐; SIZE		☐		☐				SIZE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 17 F к TV устройствам

Кнопки пульта IRC 17 F	Код 111		Код 112		Код 113		Код 114		Код 115	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	□+								BASS; [B]	
AUDIO; NICAM					□				S.SYS; SYSTEM	
VIDEO; SYS									C.SYS	
▣; ZOOM					▣; WIDE				SWAP	
▼; TV	□-				TV; DTV				CH SCAN	
□; ↻					▣; □		MEMORY		SURROUND	
▣; LOCK	→←		→←		PP		→←		∇ A/B	
▲; FAV					○		RESET		○	
○	○		○		○		○		TV/AV	
AV			TV/VCR		▣; ▣; SOURCE		TV/▣		*	
*	*		*		▣		*		MENU; F	
MENU					MENU; ▣; SL; M		MENU			
EXIT										
▲	☼+		☼+		▲		P▲		P▲; CH▲	
◀	○-		○-		▲; -		◀		◀; ◀	
OK					OK	OK	OK			
▶	☼+		☼+		▶; +		▶		▶; ▶	
▼	☼-		☼-		▼		P▼		P▼; CH▼	
*; SETUP			B						PIC MODE; PICTURE	
♪; TITLE			<OD>		I-II				SOUND; ▣	
▣	□▣				▣		INDEX		TXT/TV	
GUIDE					S		ATR			
⏻	▣; ●		A; SLEEP		SLEEP; ○		●	TIMER REC	TIMER; ▣	
□							F; □			
RED; ●	RED; 13				RED; SND.; ▲			● REC	RED	
GREEN; ▣	GREEN; 14				GREEN; PIC.; ▼				GREEN	
YELLOW; ◀	YELLOW; 15/av				YELLOW; FEATURE				YELLOW	
BLUE; ▣	BLUE; 16/av				BLUE; INSTALL				BLUE	
▣	i				INFO; ▣; i		▣		▣; ▣	
▣	P&P				PP; SWAP		P&P		P&P; ▣	
VOL -	◀		◀		VOL -; V-		◀		◀; ◀	
VOL +	▶		▶		VOL +; V+		▶		▶; ▶	
CH V; ◀	P -; ○○-				P▼; P-		P▼		P▼; CH▼	
CH A; ▶	P +; ○○+				P▲; P+		P▲		P▲; CH▲	
⏪; SAT	-/-; UPDATE		11 - 27		-/-; EXIT		-/-		-/-; ▣	
CLEAR; X	17-28		12 - 28		▣; X; ▣		SP/LP		▣	
◀; ●			13 - 29		▣; ●		◀(REW)		▣	
▶; i	P/C; ▣		14 - 30		▣; i; GUIDE		▶(PLAY)		▣	
▶; ?			15 - 31		▣; ?		▶(F.FWD)		▣	
▣; X			16 - 32; AV		▣; X; ▣		▣(STOP)		▣	
▣; ⏻			17 - 32		▣; ⏻; ▣; WIDE		▣(PAUSE)		▣	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 10		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 17 F к TV устройствам

Кнопки пульта IRC 17 F	Код 116		Код 117		Код 118		Код 119		Код 120	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	PIP-POS		B.E; WOOFER; DVB						○+	
AUDIO; NICAM	STEREO		S.EFFECT		S.SYS; SOUND SYS				○	
VIDEO; SYS	FREEZE; ●		GAME		COLOR SYS.		VIDEO MODE			
▣; ZOOM	ZOOM; Q		SRS; SIZE; ESS/EPS							
▼; TV	POP		SCAN						○-	
□; ↻	PIP		LOCK/CAPS; CAPS						AUTO	
▣; LOCK	AUTO; CHILD LOCK		FAVORITE		FAVORITE; SURF		CAPTION			
▲; FAV	FAV.		○; STANDBY		STANDBY; ○		POWER		○; POWER	
○	○		TV/AV		TV/AV				▣; SOURCE	
AV	▣; SOURCE		MUTE		MUTE		MUTE		*; MUTE	
*	*; MUTE		MENU		MENU; MENU/INS		AUTO (MENU)		▣; MENU	
MENU	MENU; ▣		EXIT							
EXIT										
▲	▲				P + ▲; PRO. ▲		+(MENU)		CH▲	
◀	◀				V - ◀; VOL. ◀		-(MENU)		VOL▼	
OK	ENTER		OK; EXIT		OK				▣/OK	
▶	▶				V + ▶; VOL. ▶		+(MENU)		VOL▲	
▼	▼				P - ▼; PRO. ▼		-(MENU)		CH▼	
*; SETUP	P.MODE		PICTURE		PIC.; DEL.; PIC./DEL.		MENU; SETUP		P.P	
♪; TITLE	S.MODE		SOUND; S.SYS.				DIGICON (MENU)		S.P	
▣	TEXT	M.WIN	TXT		CALENDAR				▣; TELETEXT	
GUIDE	SORT; SWAP	ACT.WIN	NOTEBOOK		CAPS				POS	
⏻	○; SLEEP		SLEEP		SLEEP		SLEEP		TIMER	
□	MIX		CALENDAR		NOTE; NOTEBOOK				▣; MIX	
RED; ●	RED; P.MODE		RED; DISPL.; INDEX		AT				RED; ○; STEREO	
GREEN; ▣	GREEN; S.MODE		GREEN; ZOOM/INS.		S.EFFECT				GREEN; ○; TIMER	
YELLOW; ◀	YELLOW; FAV.		YELLOW; FAVORITE		B.E				YELLOW; □; DSP	
BLUE; ▣	BLUE; ○; SLEEP		CYAN; RECALL		SURROUND				BLUE; AUTO	
▣	▣; DSP/CAPS		DISPLAY; INDEX		DISPLAY		DISPLAY		▣; DSP	
▣	▣		CYAN; RECALL		RECALL; A/CH		CH-RECALL		▣	
VOL -	VOLUME -		VOL. ◀		V - ◀; VOL. ◀		VOLUME▼		VOL▼	
VOL +	VOLUME +		VOL. ▶		V + ▶; VOL. ▶		VOLUME▲		VOL▲	
CH V; ◀	CHANNEL -		PRO. ▼		P - ▼; PRO. ▼		CH▼		CH▼	
CH A; ▶	CHANNEL +		EXPAND; -/-		P + ▲; PRO. ▲		CH▲		CH▲	
⏪; SAT	-/-								-/-	
CLEAR; X			SUBPAGE						○; CLOCK	
◀; ●	TIMER		MIX		GAME				▣; INDEX	
▶; i	UPDATE		REVEAL; CLOCK						▣; REVEAL	
▶; ?	REVEAL		AT; HOLD						▣; HOLD	
▣; X	HOLD		UPDATE						▣	
▣; ⏻	SIZE		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 17 F к TV устройствам

Кнопки пульта IRC 17 F	Код 121		Код 122		Код 123	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD					VGA	
AUDIO; NICAM	I-II		STEREO			
VIDEO; SYS			?		YPbPr	
☐; ZOOM	ZOOM		☐; ZOOM		ASPECT	
▼; TV	TV		TV/RADIO		TV	
☐; ↗	PIP		?			
☐; LOCK	PP		FREEZE			
▲; FAV			FAV.; D.FAV.		USB	
○	○		○; POWER		○	
AV	AV		↔		↔	
⌘	⌘		⌘; MUTE		MUTE	
MENU	MENU		☐; MENU		☐	
EXIT			☐; EXIT		EXIT	
▲	▲		▲		▲	
◀	◀		◀		◀	
OK	OK		OK		OK	
▶	▶		▶		▶	
▼	▼		▼		▼	
*; SETUP			☐; P.MODE		P.M	
♪; TITLE			♪; S.MODE		S.M	
☐	TEXT		☐; TELETEXT/MIX		CH.LIST	
GUIDE			EPG			
⏻	?/TIME		SLEEP		SLEEP	
☐	LIST		☐; DTV MENU			
RED; ●	RED; AV		RED; STEREO		RED	
GREEN; ▨	GREEN; LIST		GREEN; SLEEP		GREEN	
YELLOW; ◀	YELLOW; ZOOM		YELLOW; FREEZE		YELLOW	
BLUE; ▨	BLUE; PIP		BLUE; AUTO; C.LOC		BLUE	
☐			i; INFO		DISPLAY	
☐	P<P		☐		RECALL	
VOL -	V -		VOL V		VOL -	
VOL +	V +		VOL A		VOL +	
CH V; ◀	P -		CH -		CH -	◀
CH A; ▶	P +		CH +		CH +	▶
±; SAT			?		◀	
CLEAR; X			☐; UPDATE		▶	
◀; ○			CC; SUB.PAGE		◀	
▶; i			☐; INDEX		▶	
▶; ?			☐; REVEAL		▶	
■; X	?/TIME; ☐		☐; HOLD		■	
■; ⏻			☐; SIZE		■	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 17 F к VCR устройствам

Кнопки пульта IRC 17 F	Код 201		Код 202		Код 203		Код 204		Код 205	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			TRACKING ▲		DVD				SLOW +	
AUDIO; NICAM					AUDIO OUT				AUDIO	
VIDEO; SYS			MODE OSD		VCR	VIDEO WIP.; S.PIC.		SYSTEM; ⏻	SP/LP	
☐; ZOOM	EJECT		x2		G; REV. SEARCH	QUICK-FIND		INDEX	ZOOM	SIZE
▼; TV			TRACKING ▼		LCD ON/OFF			MON TV	SLOW -	
☐; ↗	MEMO REPEAT		100	MEMORY; ZERO B.	SEARCH	STORE; SET		MEMORY	PIP	SCAN
☐; LOCK	→←; RESET		C-LOCK; ⏻		100			ATR; ⏻	RESET	MEM.
▲; FAV	▲		▲; EJECT		▲; EJECT	SKIP SEARCH		▲; EJECT	▲	
○	POWER		OPERATE		OPERATE			○; POWER	○	
AV	VCR		TV/AV; INPUT; SP/LP		TV/AV; INPUT SEL.	INPUT; SIMUL		TV VTR	TV/AV	
⌘			MUTE		SHUT ON/OFF			⌘	⌘	
MENU	CHECK; PROG		OSP; MENU	1 ⏻	OSP; MENU	SEARCH MODE		MENU; OK	PROG; SEARCH	
EXIT				2 ⏻	CANCEL	ADD/ERASE				
▲	▲		▲	3 ⏻	▲			▲	▲	
◀	◀		◀	4 ⏻	◀			◀	◀	←
OK	OK; ☐				OSP; CONFIR.; CALL			OK	OK	
▶	▶			5 ⏻	▶			▶	▶	→
▼	▼			6 ⏻	▼			▼	▼	
*; SETUP			PROG; MENU		MODE OSD; ON SC.			VPS	CHECK	
♪; TITLE			SHUT ON/OFF		SP/LP; TAPE SPEED			VPT	AUDIO DUB	
☐	VPS		TIME; ⏻		TIME; ⏻			PROG	MARK	
GUIDE	MARK		CLOCK		CLOCK				X2	
⏻			TIMER ON/OFF	TIME REC	TIMER ON/OFF	G-CODE/T.; PROG		CLOCK		
☐	CL; PROG		OSP; CONFIR.; CALL		OSP; CONFIR.; CAL			0000	REMAIN	
RED; ●	REPEAT; TRACK	● REC	SP/LP; TAPE SPEED	● REC	SET	● REC		RED	● REC	MEMORY REPEAT
GREEN; ▨	F. ADV.		▨; F.ADV	1 ⏻	▨; F.ADV			GREEN	STROBE	REL
YELLOW; ▨	REW PLAY			2 ⏻	RENTAL REWIND			YELLOW	◀ REV PLAY	W
BLUE; ▨			▨; SLOW	3 ⏻	▨; SLOW			BLUE; CLOCK	SLOW	ART
☐	REMAIN		DISPLAY; M. OSD		DISPLAY; M. OSD			DISPLAY	RECALL	
☐			REPEAT; ⏻		REPEAT; ⏻				TRACK	
VOL -	SLOW -		SLOW -; DPSS ◀		SLOW -; DPSS ◀			SLOW -	▶	
VOL +	SLOW +		SLOW +; DPSS ▶		SLOW +; DPSS ▶			SLOW +	▶	
CH V; ◀	P -; -		CHANNEL -		CHANNEL -	TRACKING ▼		P -	▼	
CH A; ▶	P +; +		CHANNEL +		CHANNEL +	TRACKING ▲		P +	▲	
±; SAT	-/-		-/-		-/-	+10		SP/LP	INS	
CLEAR; X	-/-		CLEAR; C. RESET		CLEAR; C. RESET			CL	CANCEL	
◀; ○	◀; REW		◀; REW		◀; REW			◀	◀ (REW)	
▶; i	▶; PLAY		▶; PLAY		▶; PLAY			▶	▶ (PLAY)	
▶; ?	▶; F.FWD		▶; F.FWD		▶; F.FWD			▶	▶ (F.FWD)	
■; X	■; STOP		■; STOP		■; STOP			■	■ (STOP)	
■; ⏻	■; PAUSE		■; PAUSE		■; PAUSE			■	■ (PAUSE)	
1, 2, ... 9, 0	1, 2, ... 9, 0/AV		1, 2, ... 9, 0		1, 2, ... 9, 0			1, 2, ... 9, 0/AV	1, 2, ... 9, 0	



Функции кнопок пульта IRC 17 F к AUX устройствам

Кнопки пульта IRC 17 F	Код 301		Код 302		Код 303		Код 304		Код 305	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	D.ZOOM ▲		KARAOKE ON/OFF		SOUND		TAPE			
AUDIO; NICAM			AUDIO		AUDIO		SOUND PRESET			
VIDEO; SYS	VIDEO		PICTURE MODE		ANGLE		VIDEO			
☐; ZOOM			ZOOM		ZOOM		RANDOM			
▼; TV	D.ZOOM ▼		VOCAL		TU/BAND		TUNER/BAND			
☐; ↗	AUTO IMAGE		SEARCH MODE		SEARCH MODE		MEMORY			
☐; LOCK	NORMAL; ↗↖		ANGLE		SET/CLEAR		PRESET			
▲; FAV			OPEN/CLOSE		ADJUST					
○	○; ON-OFF		○/ON		○/ON		○/ON		START/STOP	
AV			ANGLE REPLAY		FM MODE					
✳	MUTE; ✳				MUTE					
MENU	MENU; PIC.☐		MENU		MENU					
EXIT			RETURN		RETURN					
▲	▲		▲		▲					
◀	◀; LEVEL -		◀		◀					
OK	SELECT		ENT		ENTER					
▶	▶; LEVEL +		▶		▶					
▼	▼		▼		▼					
✳; SETUP			SETUP		SET UP					
♪; TITLE			TITLE; TOP MENU		TITLE		FM MODE			
☐	NO SHOW		PROGRAM/RAND.		PROG	PRESET/PTY CK				
GUIDE	N		SURROUND		FUNCTION	RDS				
⏻	P-TIMER		SUBTITLE CHANGE		SLEEP	TIMER	SLEEP			
☐	COMPUTER		SUBTITLE ON/OFF		SUBTITLE	CLOCK				
RED; ●	FOCUS ▼		REPEAT; PLAY MO.		REPEAT	TEST TONE				
GREEN; ▮	FOCUS ▲		A-B REPEAT		A.REPLAY	SURROUND				
YELLOW; ◀	ZOOM ▼		◀; REV SLOW		◀; REV SLOW	BASS				
BLUE; ▮	ZOOM ▲		▮; FWD SLOW		▮; FWD SLOW	TRIM				
☐			ON SCREEN		ON SCREEN					
☐			LAST/MEMO		LAST MEMO		REPEAT			
VOL -	VOLUME -; ↘		KEY -		VOLUME -		VOLUME -			
VOL +	VOLUME +; ↗		KEY +		VOLUME +		VOLUME +			
CH V; ◀	KEYSTONE ▼		◀ PREV		◀; PREV		◀; ◀		SCENE SEARCH -	
CH A; ▶	KEYSTONE ▲		▶ NEXT		▶; NEXT		▶; ▶		SCENE SEARCH +	
±; SAT			+10		+10					
CLEAR; X			C; CLEAR		CLEAR	-				
◀; ●	LENS SHIFT ▼		◀ REV		◀; REV		◀; ◀		◀	
▶; i	LENS SHIFT		▶ PLAY		▶; PLAY		▶; ▮		▶	
▶; ?	LENS SHIFT ▲		▶ FWD		▶; FWD		▶; ▶		▶	
■; ✳			■		■; STOP		■		■	
▮; ⏻	FREEZE		▮ PAUSE/STEP		▮; PAUSE/STILL		▶/▮		▮	
1, 2, ... 9, 0			1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0			

Функции кнопок пульта IRC 17 F к AUX устройствам

Кнопки пульта IRC 17 F	Код 306	
	Функция	Доп. функция
▲; DVD		
AUDIO; NICAM		
VIDEO; SYS		
☐; ZOOM		
▼; TV		
☐; ↗		
☐; LOCK		
▲; FAV		
○		
AV		
✳		
MENU	☐	
EXIT	☐	
▲	▲	
◀	◀	
OK	OK	
▶	▶	
▼	▼	
✳; SETUP		
♪; TITLE		
☐		
GUIDE		
⏻		
☐		
RED; ●		
GREEN; ▮		
YELLOW; ◀		
BLUE; ▮		
☐		
☐		
VOL -		
VOL +		
CH V; ◀		
CH A; ▶		
±; SAT		
CLEAR; X		
◀; ●		
▶; i		
▶; ?		
■; ✳		
▮; ⏻		
1, 2, ... 9, 0		

## Функции кнопок пульта IRC 17 F к TV устройствам

Кнопки пульта IRC 17 F	Коды 501-799	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM		
VIDEO ; SYS		
☐ ; ZOOM		
▼ ; TV		
⏪ ; ⏩		
☒ ; LOCK		
▲ ; FAV		
⏻	POWER ; ⏻	
AV	TV/VIDEO ; TV/AV	
⌘	MUTE ; ⌘	
MENU		
EXIT		
▲		
◀		
OK		
▶		
▼		
⌘ ; SETUP		
🎵 ; TITLE		
☐		
GUIDE		
⏻		
☐		
RED ; ●		
GREEN ; ▢		
YELLOW ; ◀		
BLUE ; ▶		
☐		
☐		
VOL -	VOLUME ▼ ; ▽-	
VOL +	VOLUME ▲ ; ▽+	
CH V ; ⏪	CHANNEL ▼ ; P -	
CH A ; ⏩	CHANNEL ▲ ; P +	
⊕ ; SAT		
CLEAR ; X		
⏪ ; ●		
▶ ; i		
▶ ; ?		
■ ; X		
⏻ ; ⏩		
1, 2, ... 9, 0	1, 2, ... 9, 0	

Для просмотра функций кнопок баз кодов 8 и 9 (SAT, STB, DVB устройства) перейдите по следующей ссылке <http://www.pult-irc.ru/files/manual/SatCodesForIrcF.pdf>