

Приложение IRC 18 F (версия 17.10.27 03:37)

Модели оригинальных пультов и соответствующие им коды пульта IRC приведены в разделе "Коды пульта IRC 18 F".

Функции всех кнопок для каждого кода пульта IRC можно узнать из таблиц данного приложения.

Пульт IRC может иметь дополнительные функции (если указаны в столбце "Доп. функция"). Доступ к ним осуществляется при помощи кнопки SHIFT (см. в инструкции рис.1, п.16). Для доступа к дополнительным функциям нажмите кнопку SHIFT и, удерживая её нажатой, нажмите ту кнопку, дополнительная функция которой Вам необходима.

После первой установки батареек

Кнопка устройства пульта IRC	Код пульта IRC
TV	104
VCR	108
AUX	111
SAT	112

Кнопка устройства пульта IRC	Код пульта IRC
SHIFT + TV*	113
SHIFT + VCR*	114
SHIFT + AUX*	115
SHIFT + SAT*	314

* Нажмите кнопку SHIFT и, удерживая её нажатой, нажмите и отпустите одну из кнопок пульта: TV, VCR, AUX или SAT.

Доступные коды пульта IRC 18 F

Номер базы кодов (диапазон кодов)	Устройство базы кодов	Доступные коды пульта IRC
1 (101-199)	TV	101 - 122
2 (201-299)	VCR	201 - 205
3 (301-399)	AUX	301 - 320
4 (401-499)	-	Нет
5 (501-599)	TV	501 - 599
6 (601-699)	TV	601 - 699
7 (701-799)	TV	701 - 788
8 (801-899)	SAT	801 - 899
9 (901-999)	SAT	901 - 999

Коды пульта IRC 18 F

Коды к устройствам марки SHARP

Модель*	Устр-во	Код
010240	TV	114
92LCN500H-0001	AUX, CD, DVD	315
92LWIR24900103	AUX, CD, DVD	318
AA59-10081F	TV	109
CG00370CESA	TV	102
CG0063	TV	101
CG007399BMSA	TV	104
CG0100076	TV	103
CG01005PESA	TV	103
CG01014BMSA	TV	104
CG01021BMSA	TV	102
CG0121CESA	TV	101
CG0123CESA	TV	101
CG0125CESA	TV	101
CG0143CESA	TV	101
CG0175CESA	TV	101
CG0195CESA	TV	101
CG0204CESA	TV	101
CG0207CESA	TV	101
CG0251CESA	TV	101
CG0265	TV	104
CG0292CESA	TV	101
CG0293CESA	TV	101
CG0299CESA	TV	101
CG0299CESB	TV	101
CG0303CESA	TV	101
CG0320CESA	TV	101
CG0351CESA	TV	102
CG0412CESA	TV	101
CG0421CESA	TV	101
CG0454	TV	101
CG0456	TV	101
CG0466CESB	TV	102
CG0483	TV	102
CG0488CESA	TV	102
CG0488CESB	TV	102
CG0488CESC	TV	102
CG0488CESD	TV	102
CG0488CSB	TV	102
CG0489CESA	TV	102
CG0498CESA	TV	102
CG0508CESA	TV	102
CG0517CESA	TV	102
CG0527CESA	TV	102
CG0552CESA	TV	104

Модель	Устр-во	Код
CG0568	TV	102
CG0570CESA	TV	104
CG0579CESA	TV	103
CG0585PESA	TV	102
CG0594CESA	TV	103
CG0605CESA	TV	103
CG0617PESA	TV	102
CG0618PESA	TV	102
CG0641CESA	TV	103
CG0682CESA	TV	103
CG0719PESA	TV	102
CG0730CESA	TV	103
CG0739BMSA	TV	104
CG0755CESB	TV	101
CG0755PESA	TV	101
CG0755PESA/I	TV	102
CG0777PESA	TV	102
CG0827CESA	TV	104
CG0833PESA	TV	102
CG0835PESA	TV	102
CG0853PESA	TV	102
CG1005PESA	TV	103
CG1017BMSA	TV	104
CG1021BMSA	TV	102
DVS-S1	AUX, CD, DVD	314
G0008AJ	VCR	201,202
G0009KJ	TV	102
G0018KJ	TV	106
G0023KJ	TV	106
G0034AJ	VCR	201,202
G0068AJ (TV)	TV	104
G0068AJ (VCR)	VCR	201,202
G0101AJSA (TV)	TV	102
G0101AJSA (VCR)	VCR	201,202
G0126AJ	VCR	201,202
G0139AJ	VCR	201,202
G0162AJ	VCR	201,202
G0165AJ	VCR	201,202
G0191AJ	VCR	201,202
G0242AJ	VCR	201,202
G0379GE	VCR	201,202
G0466GE	VCR	201,202
G0537GE (TV)	TV	104
G0537GE (VCR)	VCR	201,202
G0552CESA (TV)	TV	102

Модель	Устр-во	Код
G0552CESA (VCR)	VCR	201,202
G0556CESA (TV)	TV	102
G0556CESA (VCR)	VCR	203
G0599PE	TV	110
G0643PESA	TV	102
G0716GE	VCR	201,202
G0756CE	TV	102
G0764PE	TV	102
G0765CE	TV	102
G0768	VCR	201,202
G0783PE	TV	102
G0784GE	VCR	201,202
G0796GE (VCR)	VCR	201,202
G0798	VCR	201,202
G0806CESA	TV	102
G0817PE	TV	102
G0824PE	TV	102
G0826PE	TV	102
G0833PE	TV	102
G0855	VCR	201,202
G0859PESA	TV	102
G0870CE	VCR	201,202
G0880GE	VCR	201,202
G0901GE	VCR	201,202
G0924PESA	TV	102
G0927AJ	VCR	201,202
G0963CE	VCR	201,202
G0996GE	VCR	201,202
G1023BMSA	TV	104
G1031BMSA	TV	104
G1035CESA	TV/VCR	108
G1042PESA	TV	102
G1044BMSA	TV	104
G1046PESA	TV/VCR	111
G1050BMSA	TV	104
G1051BMSA	TV	104
G1059SA	TV	113
G1060SA	TV	113
G1061SA (TV)	TV	104
G1061SA (VCR)	VCR	201,202
G1063GE	VCR	201,202
G1065PESA	TV	102
G1069PESA	TV	102
G1071PESA	TV	102
G1073PESA	TV	102

Модель	Устр-во	Код
G1077PESA	TV	102
G1084PESA	TV	105
G1085PESA	TV	105
G1095PESA	TV	107
G1133AJ	VCR	201,202
G1133PESA	TV	106
G1169PESA	TV	106
G1180CESA (TV)	TV	107
G1180CESA (VCR)	VCR	203
G1209AJ	VCR	201,202
G1242PESA	TV/VCR	108
G1265PESA	TV/VCR	112
G1273PESA	TV	106
G1274AJ	VCR	201,202
G1274AJ (TV)	TV	104
G1274PESA	TV	106
G1284PESA	TV/VCR	111
G1336SA	TV/VCR	111
G1342SA	TV	106
G1348SA	TV	107
G1351SA	TV	107
G1384SA	TV	106
G1388SA	TV	106
G1438SA	TV	107
G1459CESA	TV	115
G1572SA	TV	107
G1577SB	TV	107
G1606SB	TV	107
G1656CESA	TV	114
GA026WJSA	TV	115
GA031WJSA	TV	114
GA040WJ	VCR	201,202
GA041WJ	VCR	201,202
GA074WJSA	TV	114
GA133SB	TV	107
GA152WJSA	TV	118
GA160WJSA	TV	114
GA188SA	TV	106
GA204SA (DVD)	AUX, CD, DVD	314
GA204SA (TV/VCR)	TV/VCR	116
GA290WJSA	TV	115
GA296SB	TV	107
GA297WJSA	TV	114
GA307SA	TV	106
GA307SB	TV	106

* По каталогу «IRC»

Коды пульта IRC 18 F

Коды к TV, VCR, AUX устройствам марки SHARP

Модель	Устр-во	Код
GA339WJSA	TV	114
GA387WJSA	TV	114
GA455WJSA	TV	114
GA460WJSA	TV	114
GA472WJSA	TV	114
GA481WJSA	TV	114
GA520WJSA	TV	114
GA544WJSA	TV	114
GA574WJSA	TV	114
GA771WJSA	TV	114
GA841WJSA	TV	114
GB042WJSA	TV	122
GB074WJSA	TV	114
GJ210	TV	119
LCDPROJECTOR	AUX, CD, DVD	302
NA522ED	AUX, CD, DVD	314
NA545FD (DVD)	AUX, CD, DVD	314
NA545FD (VCR)	VCR	201,202
NB034	AUX, CD, DVD	319
RC1910	TV	121
RC2530SC	AUX, CD, DVD	313
RC2530SC-A	AUX, CD, DVD	313
RC5010	TV	117
RC5112	TV	121
R-CONT1322A	AUX, CD, DVD	312
R-CONT1674A	AUX, CD, DVD	303
RCONT1706A (CD)	AUX, CD, DVD	301
RCONT1706A (TAPE)	AUX, CD, DVD	312
RCONT1753A	AUX, CD, DVD	301
RCONT1781A (CD)	AUX, CD, DVD	307
RCONT1781A (TAPE)	AUX, CD, DVD	317
RL57S	TV	120
RRMCG0002AWSA (CD)	AUX, CD, DVD	304
RRMCG0002AWSA (TAPE)	AUX, CD, DVD	312
RRMCG0004AWSA	AUX, CD, DVD	303
RRMCG0007AJSA (TV)	TV	118
RRMCG0007AJSA (VCR)	VCR	201,202
RRMCG001	VCR	204
RRMCG0022AWSA (CD)	AUX, CD, DVD	304
RRMCG0022AWSA (TAPE1)	AUX, CD, DVD	305
RRMCG0022AWSA (TAPE2)	AUX, CD, DVD	306
RRMCG0039AWSA (CD)	AUX, CD, DVD	304
RRMCG0039AWSA (TAPE1)	AUX, CD, DVD	305
RRMCG0039AWSA (TAPE2)	AUX, CD, DVD	306
RRMCG0052AWSA	AUX, CD, DVD	307

Модель	Устр-во	Код
RRMCG0063	TV	101
RRMCG0064AWSA (CD)	AUX, CD, DVD	304
RRMCG0064AWSA (TAPE1)	AUX, CD, DVD	305
RRMCG0064AWSA (TAPE2)	AUX, CD, DVD	306
RRMCG0089AJSA	TV	105
RRMCG0130AFSA (CD)	AUX, CD, DVD	311
RRMCG0130AFSA (TAPE)	AUX, CD, DVD	312
RRMCG0133AWSA (CD)	AUX, CD, DVD	309
RRMCG0133AWSA (MD)	AUX, CD, DVD	308
RRMCG0143CESA	TV	101
RRMCG0221AWSA	AUX, CD, DVD	310
RRMCG0351CESB	TV	102
RRMCG0369AWSA	AUX, CD, DVD	316
RRMCG0369AWSA (DVD)	AUX, CD, DVD	314
RRMCG0369AWSA (TV)	TV	104
RRMCG0369AWSA (VCR)	VCR	201,202
RRMCG0466CESB	TV	102
RRMCG0483PESA	TV	102
RRMCG0488CESA	TV	102
RRMCG0488CESB	TV	102
RRMCG0489CESA	TV	102
RRMCG0498CESA	TV	102
RRMCG0511CESA	TV	102
RRMCG0517CESA	TV	102
RRMCG0568PESA	TV	102
RRMCG0579CESA	TV	104
RRMCG0582	TV	103
RRMCG0617PESA	TV	102
RRMCG0623CESA	TV	102
RRMCG0628	TV	102
RRMCG0640	TV	102
RRMCG0641CESA	TV	104
RRMCG0668PESA	TV	102
RRMCG0688PESA	TV	102
RRMCG0711CESA	TV	102
RRMCG0721	TV	102
RRMCG0722	TV	102
RRMCG0724	TV	102
RRMCG0727	TV	102
RRMCG0739BMSA	TV	104
RRMCG0777PE	TV	102
RRMCG0797CESA	TV	102
RRMCG0829CESA	TV	104
RRMCG0889CESA	TV	104
RRMCG0891CESA	TV	104

Модель	Устр-во	Код
RRMCG0916PESA	TV	102
RRMCG1011BMSA	TV	102
RRMCG1014BMSA	TV	104
RRMCG1017BMSA	TV	104
RRMCG1019	TV	102
RRMCG1676CESA	TV	115
RRMCGA178WJSA (DVD)	AUX, CD, DVD	314
RRMCGA178WJSA (VCR)	VCR	201,202
RRMCGA292AWSA	AUX, CD, DVD	320
TV-01	TV	102
TV-02	TV	103
TV-VCR-TEXT (TV)	TV	104
TV-VCR-TEXT (VCR)	VCR	203
VCR4800	VCR	205
VCR5200	VCR	205
VCR5400	VCR	205
VCR6400	VCR	205

Коды к TV устройствам различных марок

Марка	Код
AEG	544
AIWA	502, 503, 523, 528, 579, 634, 678, 710, 712, 716
AKAI	501, 503, 512, 516, 520, 522, 524, 525, 537, 538, 540, 545, 546, 547, 550, 571, 572, 582, 583, 584, 585, 598, 608, 613, 626, 652, 673, 691, 704, 722, 731, 769
AKIRA	511, 514, 516, 524, 525, 537, 538, 541, 545, 547, 556, 577, 586, 594, 597, 598, 601, 623, 626, 629, 631, 649, 666, 680, 689, 690, 693, 717, 739
AMCOL	501, 525, 545, 747
ANITECH	501, 525, 726
ATLANTA	501, 751
AVEST	537, 538, 539, 766
BANG & OLUFSEN	728, 737
BBK	522, 551, 594, 597, 684, 701, 788
BEKO	525, 530, 535, 559, 723, 742
BIGSTON	501, 503
BLAUPUNKT	512
BORK	525, 547, 646, 766
BRAND	711
BROKSONIC	501
CAMERON	550, 567, 675, 697, 702
CASIO	529, 705, 706
CASKA	761
CHANGHONG	516, 642
CLATRONIC	501
CONTEC	501, 603, 604, 613
CORTLAND	644
CROWN	501, 503, 511, 524, 525, 530, 571
DAEWOO	501, 508, 518, 520, 525, 526, 536, 538, 539, 546, 565, 571, 576, 598, 613, 685, 687, 692
DARTLAND	501
DAYTRON	501
DIGITAL	547
DISTAR	562, 616
DNS	596, 702, 708
DUAL	746
ELEKTA	501, 503, 520, 525, 527, 615
ELEKTRONIKA	583
ELENBERG	538, 545, 550, 565, 567, 579, 581, 644, 655, 676, 683, 717, 785
EPLUTUS	537, 644, 677, 682, 697, 724
ERC	537, 631, 764
ERISSON	511, 514, 516, 525, 526, 537, 538, 541, 550, 556, 561, 568, 586, 596, 599, 623, 626, 629, 631, 711, 712, 714, 739, 747, 779, 786
EVGO	538, 540, 630
FINLUX	501, 511, 583, 589, 608, 732, 758, 774
FUJITSU	544, 573
FUNAI	501, 502, 503, 504, 505, 525, 537, 538, 581, 603, 764
FUSION	596, 642, 705, 706
GBS	501, 520, 525, 571, 583
GENERAL	537, 556
GOLD STAR - LG	501, 512, 518, 525, 527, 559, 570, 583, 584, 589, 609, 613, 642, 706, 742, 750, 765
GRUNDIG	501, 512, 525, 606, 662, 718, 719, 733
HAIER	518, 526, 561, 574, 657, 667, 669, 707, 778
HAPPY	501
HCM	501, 525
HELIX	701, 702
HIL	503
HITACHI	501, 515, 518, 522, 525, 537, 544, 548, 554, 578, 584, 587, 588, 604, 613, 640, 729, 749, 775, 783
HORIZONT	525, 540, 545, 550, 559, 583, 672, 771
HPC	546
HYUNDAI	516, 522, 525, 526, 537, 540, 541, 546, 547, 550, 556, 580, 596, 597, 599, 626, 642, 650, 655, 705, 711, 714, 717, 760
INNO-HIT	501, 525, 571
IRBIS	596, 714
IVA (ИВА)	537, 561, 637
IZUMI	516, 537, 596, 663, 691, 695, 705, 711
JINLIPI	537, 637, 766
JVC	513, 515, 593, 604, 727
KAMACROWN	571
KANSAI	501, 525
KENSTAR	516
KITT	613, 726
KNEISSEL	753
KONKA	560, 581, 616, 717
LOEWE	542, 709, 744
METZ	745
MITSUBISHI	501, 520, 522, 525, 604, 611, 722, 728, 744
MIYOTA	537, 644, 656
MTC	501, 583
MULTITECH	501
MYSTERY	516, 537, 597, 642, 650, 653, 701, 702, 773, 780
NASH	537
NEC	501, 517, 520, 526, 552, 604, 625, 722
NESCO	501, 525
NOKIA	519, 584, 610, 614, 616, 740, 746, 767
NOVA	501, 616, 638
NOVEX	516, 546, 599
NTT	759
OMEGA	501, 571
ONIDA	513
ONIKS	516, 525, 537, 545, 546, 547
ONWA	524, 525
ORBITA	635
ORION	501, 503, 506, 507, 509, 516, 525, 528, 537, 591, 603, 617, 619, 627, 641, 643, 664, 715, 720, 722, 729, 746
ORSON	526, 537
PANASONIC	512, 531, 532, 752
PHILIPS	501, 511, 524, 525, 540, 549, 628, 639, 707, 748
PHOENIX	613
PHOENIX GOLD	708
PIONEER	555, 566, 575, 647, 666
PIXELVIEW	525
PLANTRON	735
POLAR	525, 526, 537, 538, 540, 543, 547, 581, 596, 599, 663, 664, 683, 703, 711, 717
POLAROID	525
POWER VISION	501

Коды к TV устройствам различных марок

Марка	Код
PREMIERA	773
PRESTIGIO	564, 656
PRIMA	522, 547
PROLOGY	653, 655, 777, 784
RADUGA	525, 545, 569, 583, 743
RAINFORD	525, 537, 544, 545
RECOR	511, 525
REKORD	520, 525, 526, 537, 538, 539, 545, 547, 725, 736, 743, 747
RFT	535, 728
ROADSTAR	501, 508, 525, 571
ROLSEN	503, 516, 525, 537, 538, 540, 543, 546, 564, 576, 592, 594, 596, 649, 656, 669, 684, 714, 768, 770
ROVERSCAN	662, 770
RUBIN	504, 516, 525, 537, 546, 583, 619, 665, 714, 776
SABA	510, 521, 602, 756
SALORA	584
SAMSUNG	501, 525, 526, 529, 563, 580, 595, 608, 612, 613, 622, 641, 645, 688, 723, 741
SANSUI	524, 525, 538, 556, 695
SANYO	501, 519, 522, 525, 530, 540, 550, 558, 604, 608, 610, 618, 621, 696, 722, 730, 734, 738
SATELLITE	616
SCARLETT	541, 545
SCHNEIDER	525, 540, 571, 771
SELECO	736, 763
SETRO	520
SHARP	526, 544, 548, 604, 707, 721
SHERION	616
SHIVAKI	501, 503, 508, 516, 518, 520, 525, 526, 527, 536, 538, 539, 540, 545, 546, 547, 550, 556, 580, 583, 585, 596, 599, 609, 619, 630, 632, 635, 636, 643, 644, 664, 681, 694, 743
SIEMENS	512, 525, 660, 726, 734
SIESTA	501, 537, 637
SILELIS	613
SILVER	633
SITRONICS	503, 516, 525, 537, 538, 540, 543, 545, 594, 626, 629, 661, 671, 672, 674, 679, 680, 686, 766
SOKOL	516, 525, 547, 635
SONY	533, 604, 659, 722
SPEKTR	525, 538, 668
START	525, 537, 545, 546, 547
STASSFURT	535, 618
STINOL	525
SUPER	537, 561, 644, 653, 654, 655, 666, 677, 682, 724, 754, 772, 780
SUPRA	501, 508, 516, 518, 520, 525, 527, 529, 536, 537, 541, 563, 579, 580, 596, 597, 612, 643, 687, 690, 705, 706, 712, 713
SUZUKI	516, 556
SVEN	781
TCL	538, 540
TECHNO	501, 525, 538, 544, 546, 556, 568, 579, 596, 599, 644, 664, 703
TECKTON	522, 582, 601, 669, 670
TELEFUNKEN	510, 521, 590, 602, 605, 708, 756, 757
TELEVISION	501, 525, 616
THOMSON	509, 510, 521, 550, 579, 602, 624, 642, 702, 756
TOSHIBA	516, 553, 604, 651, 699, 744
TRONY	516, 525, 537, 538, 550
TVT	511, 525, 530, 535, 538, 583, 586, 620, 723, 742
UNITED	525
VARTA	642
VESTEL	525, 544, 556, 583, 619
VIEWSONIC	557, 698
VITA	547
VITEK	537, 650
VITYAS	525
VOLNA (ВОЛНА)	635
VR	516, 537, 702, 714, 786
WALTHAM	503, 509, 511, 583, 584, 607, 613, 729, 762
XORO	522, 526, 545, 782, 787
НЕИЗВЕСТНАЯ МАРКА	546, 574, 596, 648, 656, 666, 711, 755

Коды к SAT устройствам различных марок

Марка	Код
AIR TONE	968
ALFA GOLD	828
AMINO (СТРИМ)	829, 902
ARION	835
ASTON	811
BBK	931
BIG SAT	839, 840, 903, 936
BIG STAR	965
CADENA	958, 962
CONTINENT	886, 975
COSHIP	855
DAEWOO	872
D-COLOR	946
DELTA SYSTEMS	985
DIVISAT	957, 958
D-LINK	923
DNS	968
DR.HD	983
DRE (GENERAL SATELLITE)	804, 868, 888, 907, 933, 954
DREAM	819
DUNE	927, 934
ECHOSPACE	862
ECHOSTAR	808, 809, 822
ELTEX	987
EUROSKY	840, 880
EUROSTAR	863
EUSTON	825
EVO	965
GALAXY INNOVATIONS	878, 881, 908, 911, 912, 917, 924
GLOBALTEQ	833
GLOBO	909, 915, 925, 935, 945, 956, 973, 999
GOLD STAR - LG	871
GOLDEN INTERSTAR	821, 841, 879, 918
GOLDEN MEDIA	847, 912
GOLDMASTER	911
HITACHI	824, 832
HIVION	929
HOME	968
HOMECAST (ВОЛЯ)	820, 831, 836
HUMAX	803, 804, 823, 848, 860, 861, 905, 949
HYUNDAI	968
ID DIGITAL	804
INTEK	984
KAON	820
KOSMOS	855, 856
LANS	970
LOCUS	946
LUMAX	852, 873, 907, 913, 965, 994
MAG	988
MEDIA COM	825
MOTOROLA	883, 884, 901
MYSTERY	910, 997
NDS	814
NEXT	864
NOKIA	813
NOT	941
ONLIME	905
OPENBOX	827, 835, 869, 870, 911, 990, 991
OPENTECH	972
OPENTEL	865
ORBITA	946, 995
ORIEL	887, 926, 941, 948, 955, 986
PACE	801, 932, 953
PATIX DIGITAL	992
PAUXIS	842, 859
PHILIPS	857, 899
PIONEER	851
POLAR	858
REFLECT	959
RIKOR	916, 947
ROLSEN	930, 941, 942, 961
SAGEMCOM	906
SAMSUNG	803, 810, 812, 854
SEG	818
SEZAM	882
SKY VISION	952, 966, 977, 982
SKYMASTER	830
SKYWAY	911
SKYWORTH	989
STAR	833
STAR TRACK	826, 835, 943
STARNET	885
STRONG	805, 806, 815, 816, 817, 828, 830, 914
SUNNIWELL	875
SUPERBOX	903
SUPERMAX	821, 866, 880, 924
SUPRA	950, 960, 962
TECHNOSAT	852, 853
TEL-ANT	960
TELEFUNKEN	961, 968
TESLER	926
TOP BOX	965
TOPFIELD	837, 838, 877, 891
TOSHIBA	876
TV STAR	967
TVJET	946, 976
VESTEL	820, 824
VU+	919, 920, 921, 922

Коды к SAT устройствам различных марок

Марка	Код
WORLD VISION	821, 928, 951, 952
XSAT (НТВ+)	801, 802, 807, 906, 972, 984, 998
YUXING	904
ZYXEL	874
БИЛАЙН	883, 884, 901, 923
ВОЛГАТЕЛЕКОМ	842, 843, 844, 845, 846, 847, 849, 850, 858, 867
ДОМ.RU	820, 905
ДОМОЛИНК	874, 904
МТС	855, 964, 974, 979, 980, 989, 993
НЕИЗВЕСТНАЯ МАРКА	834, 835, 842, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 903, 904, 937, 938, 939, 940, 944, 945, 969, 971, 978, 996
РОСТЕЛЕКОМ	874, 904, 923, 963
СИГНАЛ	968
ТЕЛЕКАРТА	867, 909, 973
ТЕЛЕЦИФРА	968

Функции кнопок пульта IRC 18 F к TV устройствам

Кнопки пульта IRC 18 F	Код 101		Код 102		Код 103		Код 104		Код 105	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD			BLUE BACK			F. TUN ►	⏏			
AUDIO ; NICAM	↙ N		S-NORM		S-NORM		S-NORM ; S N		SOUND SYSTEM	
VIDEO ; SYS	⊙ N		SYSTEM		P-NORM ; N		P-NORM ; P N		COLOUR SYSTEM	
⏏ ; ZOOM			SURROUND				P→		FINE TUNING	
▼ ; TV			TV ; □		TV	F.TUN ◀	TV ; □			
⏏ ; ↗			MPX-MODE ; ⏏ III		PRESET		PIP	Pr↔ ; PRESET	P-NORM	
⏏ ; LOCK	⏏ ; N		NORM ; P-NORM		MEMO		⏏		S-NORM	
▲ ; FAV			MONO		▽		S→		NR	
⊙	⊙		⊙I		⊙		⊙		⊙	
AV	TV/VIDEO		AV ; TV/VIDEO		AV ; TV/VIDEO		AV ; TV/VIDEO		TV/VIDEO	
⏏	MUTE ; ⏏		⏏		⏏		⏏		⏏	
MENU							F↔ ; MENU			
EXIT					SKIP		⏏		SKIP	
▲	⊙ +		+ ; ▲	⊙ +	⊙ +		▲		▲	
◀	⊙ -		◀	⊙ -	⊙ -	⊙ -	PIP F			
OK							PIP L			
▶	⊙ +		▶	⊙ +	⊙ +	⊙ +	PIP Q			
▼	⊙ -		- ; ▼	⊙ -	⊙ -	⊙ -	▼		▼	
⏏ ; SETUP			P-MODE ; MODE		⏏		MODE		P-MODE	
🎵 ; TITLE			S-MODE		⏏		⏏		S-MODE	
⏏			⏏		⏏		⏏		BLUE BACK	
GUIDE			⏏		TELA AZUL		ON TIME ; ON ⏏			
⏏	TIME		OFF TIMER ; OFF ⏏		⊙		OFF TIME ; OFF ⏏		TIMER	
⏏			ON TIMER ; ON ⏏		DESL TIME		FLOF/LIST ; LIST		SURROUND	
RED ; ●	⊙ -		RED	20+	RED	⊙ -	RED			
GREEN ; ►	⊙ +		GREEN	30+	GREEN	⊙ +	GREEN			
YELLOW ; ◀	⊙ -		YELLOW	⊙ -	YELLOW	⊙ -	YELLOW			
BLUE ; ►	⊙ +		BLUE	⊙ +	BLUE	⊙ +	BLUE			
⏏	DISPLAY		⏏		⏏		⏏ ; ⏏		DISPLAY	
⏏	P/C		⏏		⏏		⏏	PIP ⏏		
VOL -	VOL - ; ◀		◀		◀	⊙ -	◀		◀	
VOL +	VOL + ; ▶		▶		▶	⊙ +	▶		▶	
CH V ; ◀			CH ▼	FINE TUNING ▼	CH ▼		P-		CH ▼	
CH A ; ►			CH ▲	FINE TUNING ▲	CH ▲		P+		CH ▲	
⏏ ; SAT	-/-		10+		-/- ; ⏏		10+		10+	
CLEAR ; X	11		⏏		P/C	-/- ; ⏏	⏏ ; P/C	⏏	20+	
◀ ; ●	12		⏏		⏏		⏏		30+	
▶ ; i	13		⏏		⏏		⏏			
▶ ; ?	14		⏏		⏏		⏏		40+	
■ ; X	15		⏏		⏏		⏏			
■ ; ⏏	16/AV		⏏		⏏		⏏			
1, 2, ... 9, 0	1, 2, ... 9, 10		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 18 F к TV устройствам

Кнопки пульта IRC 18 F	Код 106		Код 107		Код 108		Код 109		Код 110	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	MOVE		MPX MODE	MPX MONO	CH ▲		⏏ ; SURROUND			
AUDIO ; NICAM			LANGUAGE	SURR. ; SPATIALIZ.			⏏ ; S.MODE ; ⏏			
VIDEO ; SYS	PIP TV/VIDEO		VIDEO 1	VIDEO 2	TAPE SPEED		⏏ ; STORE ; ADD			
⏏ ; ZOOM	PIP SWAP		SIZE	PIP SWAP	TAMPER PROOF		ZOOM ; P.SIZE ; ⏏			
▼ ; TV	PIP FREEZE		□	CH SCAN	CH ▼		□ ; TV		CANAL	
⏏ ; ↗	PIP	CH SCAN	PIP	CH SCAN	CH SCAN		PIP ON ; PIP ; ⏏	CH.SCAN ; ▲	MEMORIA	
⏏ ; LOCK	NORMAL		NORMAL	PIP FREEZE	COUNTER RESET		STILL ; ⏏	⏏ ; K.LOCK	PAUSE	
▲ ; FAV	FAV. CH A		MOVE		EJECT/LOAD		SWAP ; ⏏	⏏		
⊙	⊙I		⊙I	AI-OPC;POW. SAVE	POWER	POWER VCR	POWER ; ⊙		ON-OFF	
AV	TV/VIDEO		TV/VIDEO	PIP TV/VIDEO	TV/VIDEO		VIDEO ; ◀ ; AV ; ⏏		TV/VIDEO	
⏏	⏏		MUTE ; ⏏		MUTE		MUTE ; ⏏			
MENU	MENU		MENU		MENU ; SETUP		MENU ; ⏏ ; F.MENU			
EXIT	RETURN				FLASHBACK					
▲			▲				P+ ; P ▲ ; ⏏		CONT +	
◀			◀				◀ ; VOL ◀		COLOR -	
OK			Ok		CONFIRM					
▶			▶		+		▶ ; VOL ▶		COLOR +	
▼			▼				P- ; P ▼ ; ⏏		CONT -	
⏏ ; SETUP	PICTURE;P/SOUND		COLOUR SYSTEM		SET		-+ ; P.STD ; ⏏			
🎵 ; TITLE	SOUN.SYS.;CH-SET		SOUND SYSTEM		MTS		+/- ; S.STD ; ◀			
⏏	FUNCTION ; FEAT.		⏏		CALENDAR		TTX/MIX ; ⏏ ; TEXT	⏏ ; MIX		
GUIDE	BILINGUAL		CH GUIDE		PROG		HELP ; ?			
⏏	TIMER		⏏		TIMER ON/OFF		⊙ ; SLEEP ; ⏏		SLEEP	
⏏			ENTE-NT; AV MODE		MESSAGE		LANGUAG ; HELP ; ?	⏏ ; LIST		
RED ; ●	FAV. CH A		R ; RED ; A			● REC	RED	LOCAT.;ROTAT. ; ⏏		
GREEN ; ►	FAV. CH B		G ; GREEN ; B		DPSS -		GREEN	FACTORY ; H1		
YELLOW ; ◀	FAV. CH C		Y ; YELLOW ; C		DPSS +		YELLOW	3-SPEED ; H2		
BLUE ; ►	FAV. CH D		B ; BLUE ; D		DISPLAY		BLUE			
⏏	⏏		DISPLAY ; ⏏	⏏	RETURN		DISPLAY ; ⏏ ; ⏏			
⏏	⏏		⏏		VOL ▼		PP CH ; PRE CH ; ⏏	P/C		
VOL -	◀		VOL - ; ◀		VOL ▲		◀ ; VOL ◀		VOLUME -	
VOL +	▶		VOL + ; ▶		VOL ▼		▶ ; VOL ▶		VOLUME +	
CH V ; ◀	CH ▼		CH ▼	PIP CH ▼	CH ▼		P- ; P ▼ ; ⏏			
CH A ; ►	CH ▲		CH ▲	PIP CH ▲	CH ▲		P+ ; P ▲ ; ⏏			
⏏ ; SAT	-/-		-/-		100		-/- ; +100 ; ⏏		11	
CLEAR ; X			⏏				X ; ⏏ ; CANC ; ERASE		12	
◀ ; ●			⏏		◀ (REW)		⏏ ; SUBPAGE			
▶ ; i			⏏		▶ (PLAY)		⏏ ; INDEX			
▶ ; ?			⏏		▶ (F.FWD)		⏏ ; REVEAL			
■ ; X			⏏		■ (STOP)		⏏ ; HOLD			
■ ; ⏏			⏏		■ (PAUSE/STILL)		⏏ ; SIZE ; F/T/B			
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 10	

Функции кнопок пульта IRC 18 F к TV устройствам

Кнопки пульта IRC 18 F	Код 111		Код 112		Код 113		Код 114		Код 115	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			VCR CH ▲				▲; 4	truD		3D-Y/C
AUDIO; NICAM			LANGUAGE				SURROUND	3D	(●); D; VIRTUAL	
VIDEO; SYS	SP/LP; TAPE SPEED		TV/VIDEO				BRIGHT; BACK.; OPC	APP		ROTATE
☐; ZOOM			SWAP				☐		☐; ☐	
▼; TV			VCR CH ▼		☐		▼; 4	truD		
☐; ↗			PIP				DTV; DTV/TV		☐	
☐; LOCK	C-LOCK; ☐		FREEZE	NORMAL	☐		OPTION		☐; ☐	
▲; FAV	EJECT/LOAD		MOVE				ATV			
○	OFF		TV ○	VCR ○	○		○; TV ○	○; EXT MEDIA	○; ON/OFF	
AV	TV/VIDEO		TV/VIDEO		TV/VIDEO		TV/MID; INPUT; 4	AV MODE	4; AV INPUT	
✳	✳		✳		✳		✳		✳; MUTE	
MENU	MENU		MENU		MENU		M; MENU	DTV MENU	MENU	
EXIT	RETURN						E; END	ESG	EXIT	
▲	-		CH ▲		CH ▲		▲		▲	
◀	DPSS ◀◀; -		VOL ▼		◀		◀		◀	
OK	CONFIRM						OK		ENTER	
▶	DPSS ▶▶; +		VOL ▲		▶		▶		▶	
▼	+		CH ▼		CH ▼		▼		▼	
✳; SETUP	SET		AI-OPC		☐		☐	ECO	AV MODE	
♪; TITLE					☐		SOUND; MPX; 4	RADIO; TV/RADIO	SOUND	
☐	PROG		SPATIALIZER		☐; ☐; ☐		T; TEXT; ☐; ☐; ☐	CONTROL	☐	
GUIDE							EPG; GUIDE	READY TIME SHIFT	OPC	
☐	TIMER ON/OFF						SLEEP	TIMER	SLEEP	
☐	COUNTER RESET		ENTERTAINMENT				SUBTITLE; ☐	LIST	SELECT ☐	
RED; ●		● REC			LIST		RED; R	●; REC	RED	
GREEN; ▶	F.ADV				GREEN		GREEN; G	TIME SHIFT	GREEN	
YELLOW; ◀					YELLOW		YELLOW; Y	○ TIME SHIFT	YELLOW	
BLUE; ▶	SLOW				BLUE		BLUE; B	○ TIME SHIFT	BLUE	
☐	DISPLAY		☐		☐; 4		☐; ☐	P.INFO	☐; ☐	
☐	☐		☐		☐		☐	ROTATE; DIS.MODE	☐	
VOL -	VOL -		VOL ▼		◀		◀; VOL -		◀; VOL -	
VOL +	VOL +		VOL ▲		▶		▶; VOL +		▶; VOL +	
CH V; ◀	CH -		CH ▼		CH ▼		CH ▼; P ▼		CH ▼	
CH A; ▶	CH +		CH ▲		CH ▲		CH ▲; P ▲		CH ▲	
+-; SAT	-/-		-/-		-/-		-/-	SAT	-/-	
CLEAR; X					☐		RETURN; ☐		RETURN	
◀; ●	◀◀(REW)		◀◀(REW)		☐		SUBPAGE; ☐	◀◀; REV	☐	
▶; i	▶(PLAY)		▶(PLAY)		☐		i; INFO	▶; PLAY	☐	
▶▶; ?	▶▶(F.FWD)		▶▶(F.FWD)		☐		REVEAL; ☐; SKIP	▶▶; FWD	☐	
■; ✳	■(STOP)		■(STOP)		☐		HOLD; ☐; STATUS	■; STOP	☐; ☐	
; ☐	(PAUSE/STILL)		(PAUSE/STILL)		☐		☐	REC ■; REC STOP	☐; ☐	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 18 F к TV устройствам

Кнопки пульта IRC 18 F	Код 116		Код 117		Код 118		Код 119		Код 120	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	DPSS ▶▶; +						HDMI		SCART	
AUDIO; NICAM			I-II						DUAL	
VIDEO; SYS	TAPE SPEED						VIDEO		VIDEO	
☐; ZOOM	ZERO BACK		☐				☐		ASPECT	
▼; TV	DPSS ◀◀; -		☐				PC		TV	
☐; ↗	SKIP SEARCH						YPbPr	DUAL	MIX	
☐; LOCK	☐						FREEZE			
▲; FAV	▲; EJECT						ECO		PC	
○	○ I		○		○ I		○ I		POWER	
AV	INPUT		☐		TV/VIDEO		4		4	
✳	✳		✳		MUTE		✳		MUTE	
MENU	TV/VCR MENU		M		MENU		MENU/EXIT		MENU	
EXIT							MENU/EXIT		EXIT	
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀		◀		◀	
OK	SET/ENTER		OK		ENTER		OK		OK	
▶	▶		▶		▶		▶		▶	
▼	▼		▼		▼		▼		▼	
✳; SETUP					BRIGHT				●; PICTURE	
♪; TITLE	SOUND						ADJ; VIDEO		♪; SOUND	
☐			☐				ADJ; AUDIO		TELETEXT	
GUIDE	☐ PROG.				MTS		TELETEXT	MIX	EPG	
☐	TIMER ON/OFF				SLEEP		SLEEP		SLEEP	
☐			☐		PIC.FLIP		SUBTITLE	PR LIST	SUBTITLE	
RED; ●		●; REC	RED				RED		RED	
GREEN; ▶			GREEN				GREEN		GREEN	
YELLOW; ◀			YELLOW				YELLOW		YELLOW	
BLUE; ▶	▶; SLOW		BLUE				BLUE		BLUE	
☐	☐		☐		DISPLAY; ON SCR.		☐		DISPLAY	
☐	☐		☐		FLASH-BACK; P.CH		PRE PR		PRE PR	
VOL -	◀		◀		VOL -		◀		◀	
VOL +	▶		▶		VOL +		▶		▶	
CH V; ◀	CH ▼		P/CH -		CH ▼		P ▼		P ▼	
CH A; ▶	CH ▲		P/CH +		CH ▲		P ▲		P ▲	
+-; SAT	-/-		-/-		100		-		PR LIST	
CLEAR; X	CLEAR		☐							
◀; ●	◀◀; REV		☐				SUBPAGE		SUBPAGE	
▶; i	▶; PLAY		☐				INDEX		INDEX	
▶▶; ?	▶▶; FWD		☐				REVEAL		REVEAL	
■; ✳	■; STOP		☐				HOLD		HOLD	
; ☐	; PAUSE/STILL		☐				SIZE		SIZE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 18 F к TV устройствам

Кнопки пульта IRC 18 F	Код 121		Код 122	
	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	▲; ▲			
AUDIO; NICAM	LANG		CD/PI	
VIDEO; SYS	SCREEN; ←→		AD	
☐; ZOOM	☐; WIDE		☐	
▼; TV	☐; PC; ▼	TV; ☐; TV/DTV	DTV/ATV	
☐; ↗	☐; PIP; INFO	SEARCH M.; ★/Q		
☐; LOCK	☐; Q.MENU	☐	FREEZE	
▲; FAV	FAV			
○	○		○I	
AV	AV; SOURCE; ▲☐		←☐	
⌘	⌘; MUTE		⌘	
MENU	☐; M; MENU		MENU	
EXIT	C; EXIT		EXIT	
▲	▲		▲	
←	←		←	
OK	OK; SELECT		OK	
→	→		→	
▼	▼		▼	
⌘; SETUP	⌘; HDMI CONTR.	⌘; ANGLE		
♪; TITLE	I-II			
☐	TXT; ☐; TEXT		☐	
GUIDE	EPG; ☐		EPG	
⏻	SLEEP		⏻	
☐	SUBTITLE; ☐		☐	
RED; ●	RED; SOUND; ▲; Z-M	●	RED	
GREEN; ▨	GREEN; PIC; ▼; REP.		GREEN	
YELLOW; ◀	YELLOW; FEAT.; R-T	MY BUTTON 1 ★	YELLOW	
BLUE; ▨	BLUE; INST.; TITLE	MY BUTTON 2 ★	BLUE	
☐	☐; INFO/?; i	DISPLAY; ★/☐	☐; ☐	
☐	SWAP; PP; ☐; ↗	PP; PP; PRESETS	☐; RETURN	
VOL -	V -; ▲-; V ▼		↘	
VOL +	V +; ▲+; V ▲		↗	
CH V; ◀	P -; P/CH -; CH ▼	◀	P V	
CH ▲; ▶	P +; P/CH +; CH ▲	▶	P ▲	
±; SAT	--; ☐; RETURN			
CLEAR; X	☐; ☐; GUIDE		☐	
◀; ●	◀	☐; SLEEP	☐	
▶; i	▶	☐	☐; ☐	
▶; ?	▶	☐	☐	
■; X	■	☐; WIDE	☐	
■; ⏻	■	☐; ☐	☐	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 18 F к VCR устройствам

Кнопки пульта IRC 18 F	Код 201		Код 202		Код 203		Код 204		Код 205	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	TRACKING ▲		DVD				OUTPUT SELECT		DVD	
AUDIO; NICAM			AUDIO OUT				AUDIO		AUDIO	
VIDEO; SYS	MODE OSD		VCR	VIDEO WIP.; S.PIC.			VHS; VCR		VCR	PRESET; SYSTEM
☐; ZOOM	x2		G; REV. SEARCH	QUICK-FIND			JOG		INDEX SEARCH	
▼; TV	TRACKING ▼		LCD ON/OFF				TV/VCR		ERASE	
☐; ↗	100	MEMORY; ZERO B.	SEARCH	STORE; SET			AUTO	PRESET	QUICK-FIND	
☐; LOCK	C-LOCK; ☐		100				RESET	CHILD LOCK	AUTO REPEAT	
▲; FAV	▲; EJECT		▲; EJECT	SKIP SEARCH			▲; EJECT		▲; EJECT	
○	OPERATE		OPERATE		POWER		○; POWER		FUNCTION	
AV	TV/AV; INPUT; SP/LP		TV/AV; INPUT SEL.	INPUT; SIMUL			TV/AV; AV		TV/VCR	
⌘	MUTE		SHUT ON/OFF				ez POWER OFF		MUTE	MUTE VPT
MENU	OSP; MENU	1 ☐	OSP; MENU	SEARCH MODE			MENU; i; SETUP	AUTO TRK	PR.CHECK; MENU	☐
EXIT	▲	2 ☐	CANCEL	ADD/ERASE			ERASE		JOG/SHUTTLE	☐
▲	▲	3 ☐	▲				▲; +		▲	☐
←	←	4 ☐	←				←		←	☐
OK	▶		OSP; CONFIR.; CALL				OK; CLK/CNT		B. SELECT; C.SET	☐
▶	▶	5 ☐					▶		▶	☐
▼	▼	6 ☐					▼; -		▼	☐
⌘; SETUP	PROG; MENU		MODE OSD; ON SC.				SHOW VIEW; *	ez REPEAT	INFO	☐
♪; TITLE	SHUT ON/OFF		SP/LP; TAPE SPEED				KARAOKE	REPEAT AUTO	TOP MENU	☐
☐	TIME; ☐		TIME; ☐				VISS; INDEX; SEAR.	START; Q. DEBUT	MONITOR	TIMER REC; T. SET
GUIDE	CLOCK		CLOCK				SKIP/MEMO	LENGTH; Q. DUREE	TAPE SPEED	TIMER; T-SET
⏻	TIMER ON/OFF	TIME REC	TIMER ON/OFF	G-CODE/T.; PROG			TIMER	TIMER	SLEEP	ALARM
☐	OSP; CONFIR.; CALL		OSP; CONFIR.; CAL				CLOCK/COUNTER	CLOCK	CLOCK/COUNTER	TIME SEARCH
RED; ●	SP/LP; TAPE SPEED	● REC	SET	● REC			MARK	●; REC/OTR	MEMORY COUNTER	● REC; RECORD
GREEN; ▨	▨; F.ADV	1 ☐	▨; F.ADV				▨; F/ADV	S. REC	F ADV	☐
YELLOW; ◀		2 ☐	RENTAL REWIND				TRK ▼; SELECT ▼	REC END SEARCH	▶	☐
BLUE; ▨	▨; SLOW	3 ☐	▨; SLOW				TRK ▲; SELECT ▲	OTPB	▨; SLOW	
☐	DISPLAY; M. OSD		DISPLAY; M. OSD				ENTER; DISPLAY		RECAL.; DISPL.; SEL	CORRECT; ON SCR.
☐	REPEAT; ☐		REPEAT; ☐				ZERO ☐		P/C	REPEAT
VOL -	SLOW -; DPSS ◀		SLOW -; DPSS ◀	-			SLOW -	TRACKING ▼	VOL -	
VOL +	SLOW +; DPSS ▶		SLOW +; DPSS ▶	+			SLOW +	TRACKING ▲	VOL +	
CH V; ◀	CHANNEL -		CHANNEL -	TRACKING ▼	CH ▼		PR ▼	◀	CH/SET (TRAC.) -	
CH ▲; ▶	CHANNEL +		CHANNEL +	TRACKING ▲	CH ▲		PR ▲	▶	CH/SET (TRAC.) +	
±; SAT	-/-		-/-	+10			SP/LP; LP; SPEED	RALENTI	-/-	+100; +10
CLEAR; X	CLEAR; C. RESET		CLEAR; C. RESET				CLEAR	CM SKIP; AD-SKIP	CLEAR RESET	RESET ADD/CLEAR
◀; ●	◀; REW		◀; REW				◀; REW	◀	◀; REW	
▶; i	▶; PLAY		▶; PLAY				▶; PLAY		▶; PLAY	
▶; ?	▶; F.FWD		▶; F.FWD				▶; F.FWD	▶	▶; F.FWD	ALT ?
■; X	■; STOP		■; STOP				■; STOP	■	■; STOP	
■; ⏻	■; PAUSE		■; PAUSE				■; PAUSE/STILL		■; PAUSE/STILL	◆
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0				1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 18 F к AUX устройствам

Кнопки пульта IRC 18 F	Код 301		Код 302		Код 303		Код 304		Код 305	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	CD				CD		CD		CD	
AUDIO ; NICAM	X-BASS		VIDEO2		X-BASS		X-BASS		X-BASS	
VIDEO ; SYS	TAPE		VIDEO1		TAPE		VIDEO/AUX		VIDEO/AUX	
☐ ; ZOOM	RANDOM		RESIZE		RANDOM		RANDOM		EQUALIZER MODE	
▼ ; TV	TUNER				TUNER		TUNER (BAND)		TUNER	
☐ ; ↗	MEMORY		AUTO SYNC		MEMORY		MEMORY			
☐ ; LOCK			FREEZE		X-BASS		VIDEO/AUX		VIDEO/AUX	
▲ ; FAV	PHONO/AUX				PHONO		PHONO			
⊖	POWER		OFF		POWER		POWER		POWER	
AV	VIDEO/AUX		ON		AUX		TAPE (1-2)		TAPE (1-2)	
✳			MUTE							
MENU			MENU				BAND		BAND	
EXIT	DISC SKIP						DISC SKIP			
▲	PRESET ▲		▲		PRESET ▲		PRESET ▲			
◀			◀		BALANCE ◀L		BALANCE LEFT		BALANCE LEFT	
OK			ENTER				BALANCE CENTER		BALANCE CENTER	
▶			▶		BALANCE R▶		BALANCE RIGHT		BALANCE RIGHT	
▼	PRESET ▼		▼		PRESET ▼		PRESET ▼			
✳ ; SETUP	BAND		LENS		BAND		DSP LIVE ; MODE		DSP LIVE ; MODE	
♪ ; TITLE	FM				FM		DSP PASS		DSP PASS	
☐	MW		BLACK SCREEN		MW		DSP VIRTUAL 1		DSP VIRTUAL 1	
GUIDE	LW		CHECK		SW1		DSP VIRTUAL 2		DSP VIRTUAL 2	
⊖	D1				SW2		DSP HALL		DSP HALL	
☐	D2		GAMMA		EQ MODE - HEAVY		DSP DOME		DSP DOME	
RED ; ●	D3		DATA1		EQ MODE - VOCAL		EQ MODE - FLAT		EQ MODE - FLAT	● II
GREEN ; ▶	D4		DATA2		EQ MODE - BGM		EQ MODE - HEAVY		EQ MODE - HEAVY	
YELLOW ; ◀	D5				EQ MODE - FLAT		EQ MODE - VOCAL		EQ MODE - VOCAL	
BLUE ; ▶	D6						EQ MODE - BGM		EQ MODE - BGM	
☐	CALL				CALL		EQUALIZER MODE			
↺	REPEAT				REPEAT ↺		CALL		REVERSE MODE	
VOL -	VOLUME ▼		VOL ▼		VOLUME ▼		VOLUME ▼		VOLUME ▼	
VOL +	VOLUME ▲		VOL ▲		VOLUME ▲		VOLUME ▲		VOLUME ▲	
CH V ; ◀◀	APSS ◀◀				APSS ◀◀◀◀REVIEW		◀◀ ; ◀◀		PRESET ▼	
CH A ; ▶▶	APSS ▶▶				APSS ▶▶ ; ▶▶ CUV		▶▶ ; ▶▶		PRESET ▲	
± ; SAT										
CLEAR ; X	CLEAR				CLEAR		CLEAR			
◀◀ ; ●	◀◀ REV				APSS ◀◀◀◀REVIEW		◀◀ ; ◀◀			
▶ ; i	▶ PLAY				▶ ; PLAY		▶ ↺		▶ (TAPE 1)	◀
▶▶ ; ?	▶▶ CUE				APSS ▶▶ ; ▶▶ CUV		▶▶ ; ▶▶			
■ ; ✕	■ STOP				■ ; STOP/CLEAR		■			
■ ; ⏸	■ PAUSE				■ ; PAUSE		■			
1, 2, ... 9, 0	1, 2, ... 9, 0						D1, D2, D3			

Функции кнопок пульта IRC 18 F к AUX устройствам

Кнопки пульта IRC 18 F	Код 306		Код 307		Код 308		Код 309		Код 310	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	CD				TUNING ▲		TUNING ▲		CD	
AUDIO ; NICAM	X-BASS		BASS/TREBLE		X-BASS		X-BASS		X-BASS ; EX.BASS	
VIDEO ; SYS	VIDEO/AUX				S.SYNC		S.SYNC		VIDEO-AUX	
☐ ; ZOOM	EQUALIZER MODE						MESSAGE			
▼ ; TV	TUNER				TUNING ▼		TUNING ▼		TUNER	
☐ ; ↗					PRE-EQ		PRE-EQ		AUTO MEMORY	
☐ ; LOCK	VIDEO/AUX				A.MARK		A. MARK		MEMORY	
▲ ; FAV										
⊖	POWER		POWER		POWER		POWER		I/O POWER	
AV	TAPE (1-2)		AUX		AUX		AUX		TAPE 1-2; TAPE A/B	
✳										
MENU	BAND		PRGM/CLEAR		TUNER BAND		TUNER BAND			
EXIT									DISC SKIP	
▲					▲		▲		TUNING/TIME ▲	
◀	BALANCE LEFT				◀		◀			
OK	BALANCE CENTER				ENTER		ENTER			
▶	BALANCE RIGHT				▶		▶			
▼					▼		▼		TUNING/TIME ▼	
✳ ; SETUP	DSP LIVE ; MODE				P-MODE		P-MODE		REVERSE MODE	
♪ ; TITLE	DSP PASS		TUNER BAND		ST-MODE		ST-MODE		EQ. MODE ; SOUND	
☐	DSP VIRTUAL 1				NAME/TOC EDIT		NAME/TOC EDIT		PTY	
GUIDE	DSP VIRTUAL 2				PROGRAM		PROGRAM			
⊖	DSP HALL				TIME		TIME		TIMER	
☐	DSP DOME				MESSAGE		TIMER/DELETE		CLOCK	
RED ; ●	EQ MODE - FLAT	● II			REC MODE	● REC	REC MODE	● REC		● II
GREEN ; ▶	EQ MODE - HEAVY									
YELLOW ; ◀	EQ MODE - VOCAL									
BLUE ; ▶	EQ MODE - BGM									
☐			CALL		TIMER/DELETE				RDS DISPLAY	
↺	REVERSE MODE				DISPLAY		DISPLAY		RANDOM	
VOL -	VOLUME ▼		VOLUME ▼		VOLUME ▼		VOLUME ▼		VOLUME ▼	
VOL +	VOLUME ▲		VOLUME ▲		VOLUME ▲		VOLUME ▲		VOLUME ▲	
CH V ; ◀◀	PRESET ▼		◀◀ ; ◀◀		◀◀		◀◀		PRESET ▼ ; ◀◀ ; ◀◀	
CH A ; ▶▶	PRESET ▲		▶▶ ; ▶▶		▶▶		▶▶		PRESET ▲ ; ▶▶ ; ▶▶	
± ; SAT					>10		>10			
CLEAR ; X			PRGM/CLEAR		CLEAR		CLEAR		CLEAR	
◀◀ ; ●	◀◀		◀◀ ; ◀◀		CURSOR ◀◀		CURSOR ◀◀		PRESET ▼ ; ◀◀ ; ◀◀	
▶ ; i	▶ (TAPE 2)		▶ ↺		▶ II (MD)		▶ II (CD)		▶	◀
▶▶ ; ?	▶▶		▶▶ ; ▶▶		CURSOR ▶▶		CURSOR ▶▶		PRESET ▲ ; ▶▶ ; ▶▶	
■ ; ✕	■		■		■ (MD)		■ (CD)		STOP ; ■	
■ ; ⏸	■ PAUSE		■		■ II (MD)		■ II (CD)		■	
1, 2, ... 9, 0			1, 2, ... 9, 0		1, 2, ... 9, 10/0		1, 2, ... 9, 10/0		DISC 1,2,3	

Функции кнопок пульта IRC 18 F к AUX устройствам

Кнопки пульта IRC 18 F	Код 311		Код 312		Код 313		Код 314		Код 315	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	CD		CD				VCR-DVD		DVD	
AUDIO; NICAM	TAPE (1-2)		X-BASS		AUDIO		☐; AUDIO		AUDIO	LANGUAGE
VIDEO; SYS			AUX; PHONO/AUX		MODE		☐; PROG.; MODE		NTSC/PAL	
☐; ZOOM					ZOOM		Q; ZOOM		ZOOM	
▼; TV							VCR/DVD SELECT.		TUNER	
☐; ↗	MEMORY				SEARCH MODE				MODE	
☐; LOCK					TEST TONE		☐; ANGLE		ANGLE	
▲; FAV	▲				OPEN/CLOSE; ▲		▲; OPEN/CLOSE		▲; OPEN/CLOSE	
○	POWER		POWER; OPERATE		○; OPER.; STANDBY		OPERATE		ON/STAND-BY	
AV	AUX		TAPE (1-2)		ANGLE				AUX	
☐					MUTE				MUTE	LISTENING
MENU					MENU		DVD MENU		MENU/PBC	
EXIT							☐; RETURN		RETURN	
▲					▲		▲		▲	
◀					◀		◀		◀	
OK					SELECT; OK		SET/ENTER		ENTER	
▶					▶		▶		▶	
▼					▼		▼		▼	
☐; SETUP					SETUP		DVD SETUP		SET UP	
♪; TITLE	TUNER		TUNER		TITLE		TITLE		TITLE	ST/MO
☐	CALL		CALL		PROGRAM		FUN.CONT.; DIR.SK.		PROG	
GUIDE					SHUFFLE		GAMMA		DIRECT	
☐					TIME; DISPLAY				SLEEP	
☐					SUBTITLE		SUB TITLE; ☐		SUBTITLE	
RED; ●			FM	REC; REC PAUSE	REPEAT		☐; REPEAT		REPEAT	
GREEN; ▨			MW		A→B; A-B		A-B		▨; STEP	
YELLOW; ◀			LW		SPEAKER VOL				A-B	
BLUE; ▨					SOUND EFFECT		▨; SLOW		▨; SLOW/MEM.	
☐	DISPLAY		DISPLAY		DISPL.; SETUP; REP.		☐; ON SCREEN		DISPLAY	
☐	REPEAT		REVERSE MODE		RETURN		DISPLAY		RETURN	
VOL -	VOLUME ▼		VOLUME ▼		VOLUME -		MARKER		ADJ/VOL -	
VOL +	VOLUME ▲		VOLUME ▲		VOLUME +		GAMMA		ADJ/VOL +	
CH V; ◀			PRESET ▼		◀ SKIP/FRAME		◀ SKIP		◀ TUNING	
CH A; ▶			PRESET ▲		▶ SKIP/FRAME		▶ SKIP		▶ TUNING	
±; SAT					+10		+10		>10	
CLEAR; X					C; WATCH TV/C		C; CLEAR			
◀; ○	APSS ◀; REVIEW		APSS ◀		◀ SLOW/SEARCH		◀; REV		◀ PRESET	
▶; i			▶	◀	▶/▨; PLAY/PAUSE		▶; PLAY		▶/▨	
▶; ?	APSS ▶; CUE		APSS ▶		▶ SLOW/SEARCH		▶; FWD		▶ PRESET	
▨; X	▨; CLEAR		▨ STOP		▨; STOP		▨; STOP		▨	
▨; ☐	▨		▨		▶/▨; PLAY/PAUSE		▨; PAUSE/STILL		▶/▨	
1, 2, ... 9, 0					1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 18 F к AUX устройствам

Кнопки пульта IRC 18 F	Код 316		Код 317		Код 318		Код 319		Код 320	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	TUNING ▲				#		▶ SKIP		PRESET ▲	
AUDIO; NICAM	STEREO				AUDIO		AUDIO		AUDIO IN	
VIDEO; SYS					MODE		REC MODE		DEMO/DIMMER	
☐; ZOOM	DIMMER				ZOOM		ZOOM		DISP (RDS)	
▼; TV	TUNING ▼				b		◀ SKIP		PRESET ▼	
☐; ↗	MULTI CHANNEL				h				MEMORY	
☐; LOCK					DIRECT		☐		ASPM (RDS)	
▲; FAV					▲; OPEN/CLOSE		▲; OPEN/CLOSE		PTY (RDS)	
○	ON/STAND-BY				○; ON/STAND-BY		OPERATE		ON/STAND-BY	
AV					ANGLE					
☐	MUTTING				☐; MUTE				☐	
MENU	TUNER/BAND				MENU/PBC		MENU/LIST		MENU	
EXIT					TITLE/RETURN		◀; RETURN; ☐			
▲	▲				▲		▲		▲ TUNING	
◀	◀				◀		◀		◀; ◀	
OK	ENTER				ENTER		ENTER		ENTER	
▶					▶		▶		▶; ▶	
▼					▼		▼		V TUNING	
☐; SETUP	AMP SET UP				SETUP		SETUP		TUNER	
♪; TITLE	SOUND MODE				TITLE/RETURN		TOP MENU		FOLDER	
☐	DIGITAL 1				FUNCTION					
GUIDE	DIGITAL 2				PROG					
☐	TIMER				SLEEP		TIMER PROG.		SLEEP (CLEAR)	
☐	CLOCK				SUBTITLE				CLOCK (TIMER)	
RED; ●	PTY-TI RDS		● ▨		REPEAT			REC/OTR	EQ (X-BASS)	
GREEN; ▨	ASPM RDS				A-B				▶/▨ USB	
YELLOW; ◀					MIC				DISPLAY (TV OUT)	
BLUE; ▨					▨; SLOW		RAPID PLAY		▶/▨ iPod	
☐	DISPLAY RDS				OSD		DISPLAY		DISPLAY	
☐	AMP RETURN				ECHO				PLAY MODE	
VOL -	VOLUME -				VOLUME -				VOL -	
VOL +	VOLUME +				VOLUME +				VOL +	
CH V; ◀	TUNER PRESET ▼				◀ PRESET		PROG. ▼	◀ SKIP	◀; ◀	
CH A; ▶	TUNER PRESET ▲				▶ PRESET		PROG. ▲	▶ SKIP	▶; ▶	
±; SAT					EQUALIZER		CM SKIP		10+	
CLEAR; X	CLEAR				LISTENING		CLEAR		SLEEP (CLEAR)	
◀; ○			APSS ◀		◀ TUNING		◀; REV		◀; ◀	
▶; i			▶	◀	▶/▨; PLAY/PAUSE		▶; PLAY		▶/▨ CD	
▶; ?			APSS ▶		▶ TUNING		▶; FWD		▶; ▶	
▨; X			▨		▨; STOP		▨; STOP		▨	
▨; ☐			▨		▶/▨; PLAY/PAUSE		▨; PAUSE		▶/▨ CD	
1, 2, ... 9, 0	LINE 1, 2, 3				1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 18 F к TV устройствам

Кнопки пульта IRC 18 F	Коды 501-788	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM		
VIDEO ; SYS		
☐ ; ZOOM		
▼ ; TV		
⏪ ; ↵		
☒ ; LOCK		
▲ ; FAV		
⏻	POWER ; ⏻	
AV	TV/VIDEO ; TV/AV	
✳	MUTE ; 🔇	
MENU		
EXIT		
▲		
◀		
OK		
▶		
▼		
✳ ; SETUP		
🎵 ; TITLE		
☐		
GUIDE		
⏻		
☐		
RED ; ●		
GREEN ; ▢		
YELLOW ; ◀		
BLUE ; ▶		
☐		
☐		
VOL -	VOLUME ▼ ; 🔊-	
VOL +	VOLUME ▲ ; 🔊+	
CH V ; ◀◀	CHANNEL ▼ ; P -	
CH ▲ ; ▶▶	CHANNEL ▲ ; P +	
⊕ ; SAT		
CLEAR ; X		
◀◀ ; ●		
▶▶ ; i		
▶▶ ; ?		
■ ; ✕		
⏮ ; ⏪		
1, 2, ... 9, 0	1, 2, ... 9, 0	

Для просмотра функций кнопок баз кодов 8 и 9 (SAT, STB, DVB устройства) перейдите по следующей ссылке <http://www.pult-irc.ru/files/manual/SatCodesForIrcF.pdf>