

Приложение IRC 192 F (версия от 30.05.17)

Модели оригинальных пультов и соответствующие им коды пульта IRC приведены в разделе "Коды пульта IRC 192 F".

Функции всех кнопок для каждого кода пульта IRC можно узнать из таблиц данного приложения.

Пульт IRC может иметь дополнительные функции (если указаны в столбце "Доп. функция"). Доступ к ним осуществляется при помощи кнопки SHIFT (см. в инструкции рис.1, п.16). Для доступа к дополнительным функциям нажмите кнопку SHIFT и, удерживая её нажатой, нажмите ту кнопку, дополнительная функция которой Вам необходима.

После первой установки батареек

Кнопка устройства пульта IRC	Код пульта IRC	Кнопка устройства пульта IRC	Код пульта IRC
TV	301	SHIFT + TV*	305
VCR	302	SHIFT + VCR*	306
AUX	303	SHIFT + AUX*	307
SAT	304	SHIFT + SAT*	308

* Нажмите кнопку SHIFT и, удерживая её нажатой, нажмите и отпустите одну из кнопок пульта: TV, VCR, AUX или SAT.

Доступные коды пульта IRC 192 F

Номер базы кодов (диапазон кодов)	Устройство базы кодов	Доступные коды пульта IRC
1 (101-199)	-	Нет
2 (201-299)	-	Нет
3 (301-399)	AUX	301 - 323
4 (401-499)	-	Нет
5 (501-599)	TV	501 - 599
6 (601-699)	TV	601 - 699
7 (701-799)	TV	701 - 799
8 (801-899)	SAT	801 - 899
9 (901-999)	SAT	901 - 999

Коды пульта IRC 192 F

Коды к устройствам марки YAMANA

Модель*	Устр-во	Код	Модель	Устр-во	Код
AUX-01	AUX, CD, DVD	321	V945690	AUX, CD, DVD	308
BDP121	AUX, CD, DVD	322	VU50620	AUX, CD, DVD	315
CRX-E200	AUX, CD, DVD	314	VU71330	AUX, CD, DVD	309
CRX-E400	AUX, CD, DVD	314	WY92710	AUX, CD, DVD	323
DVD-16	AUX, CD, DVD	313			
DVR-S200 (AMP)	AUX, CD, DVD	317			
DVR-S200 (DVD)	AUX, CD, DVD	316			
DVR-S200 (MD)	AUX, CD, DVD	319			
DVR-S200 (TUNER)	AUX, CD, DVD	318			
DVR-S60 (DVD)	AUX, CD, DVD	316			
DVR-S60 (TUN)	AUX, CD, DVD	315			
PPR-100	AUX, CD, DVD	311			
RAV16 (CD)	AUX, CD, DVD	310			
RAV16 (D1)	AUX, CD, DVD	301			
RAV16 (D2)	AUX, CD, DVD	303			
RAV16 (TUNER)	AUX, CD, DVD	302			
RAV211 (AMP DSP TUNER)	AUX, CD, DVD	301			
RAV237 (AMP)	AUX, CD, DVD	301			
RAV237 (CD)	AUX, CD, DVD	310			
RAV237 (CD1)	AUX, CD, DVD	309			
RAV237 (DVD)	AUX, CD, DVD	307			
RAV237 (MD)	AUX, CD, DVD	320			
RAV237 (TUNER)	AUX, CD, DVD	302			
RAV243 (AMP)	AUX, CD, DVD	301			
RAV243 (TUNER)	AUX, CD, DVD	302			
RAV24B (AMP)	AUX, CD, DVD	301			
RAV24B (TUNER)	AUX, CD, DVD	302			
RAV254 (AMP)	AUX, CD, DVD	301			
RAV254 (CD)	AUX, CD, DVD	310			
RAV254 (TUNER)	AUX, CD, DVD	305			
RAV255 (AMP)	AUX, CD, DVD	301			
RAV255 (CD)	AUX, CD, DVD	310			
RAV255 (TUNER)	AUX, CD, DVD	305			
RAV300 (AMP)	AUX, CD, DVD	301			
RAV300 (TUNER)	AUX, CD, DVD	302			
RAV307 (*)	AUX, CD, DVD	304			
RAV307 (AMP)	AUX, CD, DVD	303			
RAV307 (TUNER)	AUX, CD, DVD	305			
RAV333	AUX, CD, DVD	306			
RAX9	AUX, CD, DVD	310			
RC1113202	AUX, CD, DVD	307			
RC1143901	AUX, CD, DVD	307			
RCU	AUX, CD, DVD	312			
V302270	AUX, CD, DVD	309			
V492580	AUX, CD, DVD	309			

* По каталогу «IRC»

Коды к TV устройствам различных марок

Марка	Код
AEG	544
AIWA	502, 503, 523, 528, 579, 634, 678, 710, 712, 716
AKAI	501, 503, 512, 516, 520, 522, 524, 525, 537, 538, 540, 545, 546, 547, 550, 571, 572, 582, 583, 584, 585, 598, 608, 613, 626, 652, 673, 691, 704, 722, 731, 769
AKIRA	511, 514, 516, 524, 525, 537, 538, 541, 545, 547, 556, 577, 586, 594, 597, 598, 601, 623, 626, 629, 631, 649, 666, 680, 689, 690, 693, 717, 739, 796, 797, 798, 799
AMCOL	501, 525, 545, 747
ANITECH	501, 525, 726
ATLANTA	501, 751
AVEST	537, 538, 539, 766
BANG & OLUFSEN	728, 737
BBK	522, 551, 594, 597, 684, 701, 788, 792, 793
BEKO	525, 530, 535, 559, 723, 742
BIGSTON	501, 503
BLAUPUNKT	512
BORK	525, 547, 646, 766
BRAND	711
BROKSONIC	501
CAMERON	550, 567, 675, 697, 702, 792, 794
CASIO	529, 705, 706
CASKA	761
CHANGHONG	516, 642
CLATRONIC	501
CONTEC	501, 603, 604, 613
CORTLAND	644
CROWN	501, 503, 511, 524, 525, 530, 571
DAEWOO	501, 508, 518, 520, 525, 526, 536, 538, 539, 546, 565, 571, 576, 598, 613, 685, 687, 692
DARTLAND	501
DAYTRON	501
DIGITAL	547
DISTAR	562, 616
DNS	596, 702, 708
DUAL	746
ELEKTA	501, 503, 520, 525, 527, 615
ELEKTRONIKA	583
ELENBERG	538, 545, 550, 565, 567, 579, 581, 644, 655, 676, 683, 717, 785
EPLUTUS	537, 644, 677, 682, 697, 724
ERC	537, 631, 764
ERISSON	511, 514, 516, 525, 526, 537, 538, 541, 550, 556, 561, 568, 586, 596, 599, 623, 626, 629, 631, 711, 712, 714, 739, 747, 779, 786, 795
EVGO	538, 540, 630
FINLUX	501, 511, 583, 589, 608, 732, 758, 774
FUJITSU	544, 573
FUNAI	501, 502, 503, 504, 505, 525, 537, 538, 581, 603, 764
FUSION	596, 642, 705, 706
GBS	501, 520, 525, 571, 583
GENERAL	537, 556
GOLD STAR - LG	501, 512, 518, 525, 527, 559, 570, 583, 584, 589, 609, 613, 642, 706, 742, 750, 765
GRUNDIG	501, 512, 525, 606, 662, 718, 719, 733
HAIER	518, 526, 561, 574, 657, 667, 669, 707, 778
HAPPY	501
HCM	501, 525
HELIX	701, 702
HIL	503
HITACHI	501, 515, 518, 522, 525, 537, 544, 548, 554, 578, 584, 587, 588, 604, 613, 640, 729, 749, 775, 783
HORIZONT	525, 540, 545, 550, 559, 583, 672, 771
HPC	546
HYUNDAI	516, 522, 525, 526, 537, 540, 541, 546, 547, 550, 556, 580, 596, 597, 599, 626, 642, 650, 655, 705, 711, 714, 717, 760
INNO-HIT	501, 525, 571
IRBIS	596, 714
IVA (ИВА)	537, 561, 637
IZUMI	516, 537, 596, 663, 691, 695, 705, 711, 792
JINLIPI	537, 637, 766
JVC	513, 515, 593, 604, 727
KAMACROWN	571
KANSAI	501, 525
KENSTAR	516
KITT	613, 726
KNEISSEL	753
KONKA	560, 581, 616, 717
LOEWE	542, 709, 744
METZ	745
MITSUBISHI	501, 520, 522, 525, 604, 611, 722, 728, 744
MIYOTA	537, 644, 656
MTC	501, 583
MULTITECH	501
MYSTERY	516, 537, 597, 642, 650, 653, 701, 702, 773, 780, 789
NASH	537
NEC	501, 517, 520, 526, 552, 604, 625, 722
NESCO	501, 525
NOKIA	519, 584, 610, 614, 616, 740, 746, 767
NOVA	501, 616, 638
NOVEX	516, 546, 599
NTT	759
OMEGA	501, 571
ONIDA	513
ONIKS	516, 525, 537, 545, 546, 547
ONWA	524, 525
ORBITA	635
ORION	501, 503, 506, 507, 509, 516, 525, 528, 537, 591, 603, 617, 619, 627, 641, 643, 664, 715, 720, 722, 729, 746
ORSON	526, 537
PANASONIC	512, 531, 532, 752
PHILIPS	501, 511, 524, 525, 540, 549, 628, 639, 707, 748
PHOENIX	613
PHOENIX GOLD	708
PIONEER	555, 566, 575, 647, 666
PIXELVIEW	525
PLANTRON	735
POLAR	525, 526, 537, 538, 540, 543, 547, 581, 596, 599, 663, 664, 683, 703, 711, 717
POLAROID	525
POWER VISION	501

Коды к TV устройствам различных марок

Марка	Код
PREMIERA	773
PRESTIGIO	564, 656
PRIMA	522, 547
PROLOGY	653, 655, 777, 784
RADUGA	525, 545, 569, 583, 743
RAINFORD	525, 537, 544, 545
RECOR	511, 525
REKORD	520, 525, 526, 537, 538, 539, 545, 547, 725, 736, 743, 747
RFT	535, 728
ROADSTAR	501, 508, 525, 571
ROLSEN	503, 516, 525, 537, 538, 540, 543, 546, 564, 576, 592, 594, 596, 649, 656, 669, 684, 714, 768, 770
ROVERSCAN	662, 770
RUBIN	504, 516, 525, 537, 546, 583, 619, 665, 714, 776
SABA	510, 521, 602, 756
SALORA	584
SAMSUNG	501, 525, 526, 529, 563, 580, 595, 608, 612, 613, 622, 641, 645, 688, 723, 741
SANSUI	524, 525, 538, 556, 695
SANYO	501, 519, 522, 525, 530, 540, 550, 558, 604, 608, 610, 618, 621, 696, 722, 730, 734, 738
SATELLITE	616
SCARLETT	541, 545
SCHNEIDER	525, 540, 571, 771
SELECO	736, 763
SETRO	520
SHARP	526, 544, 548, 604, 707, 721
SHERION	616
SHIVAKI	501, 503, 508, 516, 518, 520, 525, 526, 527, 536, 538, 539, 540, 545, 546, 547, 550, 556, 580, 583, 585, 596, 599, 609, 619, 630, 632, 635, 636, 643, 644, 664, 681, 694, 743, 791
SIEMENS	512, 525, 660, 726, 734
SIESTA	501, 537, 637
SILELIS	613
SILVER	633
SITRONICS	503, 516, 525, 537, 538, 540, 543, 545, 594, 626, 629, 661, 671, 672, 674, 679, 680, 686, 766
SOKOL	516, 525, 547, 635
SONY	533, 604, 659, 722
SPEKTR	525, 538, 668
START	525, 537, 545, 546, 547
STASSFURT	535, 618
STINOL	525
SUPER	537, 561, 644, 653, 654, 655, 666, 677, 682, 724, 754, 772, 780
SUPRA	501, 508, 516, 518, 520, 525, 527, 529, 536, 537, 541, 563, 579, 580, 596, 597, 612, 643, 687, 690, 705, 706, 712, 713, 790
SUZUKI	516, 556
SVEN	781
TCL	538, 540
TECHNO	501, 525, 538, 544, 546, 556, 568, 579, 596, 599, 644, 664, 703, 791
TECKTON	522, 582, 601, 669, 670
TELEFUNKEN	510, 521, 590, 602, 605, 708, 756, 757
TELEVISION	501, 525, 616
THOMSON	509, 510, 521, 550, 579, 602, 624, 642, 702, 756
TOSHIBA	516, 553, 604, 651, 699, 744
TRONY	516, 525, 537, 538, 550
TVT	511, 525, 530, 535, 538, 583, 586, 620, 723, 742
UNITED	525
VARTA	642
VESTEL	525, 544, 556, 583, 619
VIEWSONIC	557, 698
VITA	547
VITEK	537, 650
VITYAS	525
VOLNA (ВОЛНА)	635
VR	516, 537, 702, 714, 786
WALTHAM	503, 509, 511, 583, 584, 607, 613, 729, 762
XORO	522, 526, 545, 782, 787
НЕИЗВЕСТНАЯ МАРКА	546, 574, 596, 648, 656, 666, 711, 755

Коды к SAT устройствам различных марок

Марка	Код
AIR TONE	968
ALFA GOLD	828
AMINO (СТРИМ)	829, 902
ARION	835
ASTON	811
BBK	931
BIG SAT	839, 840, 903, 936
BIG STAR	965
CADENA	958, 962
CONTINENT	886, 975
COSHIP	855
DAEWOO	872
D-COLOR	946
DELTA SYSTEMS	985
DIVISAT	957, 958
D-LINK	923
DNS	968
DR.HD	983
DRE (GENERAL SATELLITE)	804, 868, 888, 907, 933, 954
DREAM	819
DUNE	927, 934
ECHOSPACE	862
ECHOSTAR	808, 809, 822
ELTEX	987
EUROSKY	840, 880
EUROSTAR	863
EUSTON	825
EVO	965
GALAXY INNOVATIONS	878, 881, 908, 911, 912, 917, 924
GLOBALTEQ	833
GLOBO	909, 915, 925, 935, 945, 956, 973, 999
GOLD STAR - LG	871
GOLDEN INTERSTAR	821, 841, 879, 918
GOLDEN MEDIA	847, 912
GOLDMASTER	911
HITACHI	824, 832
HIVION	929
HOME	968
HOMECAST (ВОЛЯ)	820, 831, 836
HUMAX	803, 804, 823, 848, 860, 861, 905, 949
HYUNDAI	968
ID DIGITAL	804
INTEK	984
KAON	820
KOSMOS	855, 856
LANS	970
LOCUS	946
LUMAX	852, 873, 907, 913, 965, 994
MAG	988
MEDIA COM	825
MOTOROLA	883, 884, 901
MYSTERY	910, 997
NDS	814
NEXT	864
NOKIA	813
NOT	941
ONLIME	905
OPENBOX	827, 835, 869, 870, 911, 990, 991
OPENTECH	972
OPENTEL	865
ORBITA	946, 995
ORIEL	887, 926, 941, 948, 955, 986
PACE	801, 932, 953
PATIX DIGITAL	992
PAUXIS	842, 859
PHILIPS	857, 899
PIONEER	851
POLAR	858
REFLECT	959
RIKOR	916, 947
ROLSEN	930, 941, 942, 961
SAGEMCOM	906
SAMSUNG	803, 810, 812, 854
SEG	818
SEZAM	882
SKY VISION	952, 966, 977, 982
SKYMASTER	830
SKYWAY	911
SKYWORTH	989
STAR	833
STAR TRACK	826, 835, 943
STARNET	885
STRONG	805, 806, 815, 816, 817, 828, 830, 914
SUNNIWELL	875
SUPERBOX	903
SUPERMAX	821, 866, 880, 924
SUPRA	950, 960, 962
TECHNOSAT	852, 853
TEL-ANT	960
TELEFUNKEN	961, 968
TESLER	926
TOP BOX	965
TOPFIELD	837, 838, 877, 891
TOSHIBA	876
TV STAR	967
TVJET	946, 976
VESTEL	820, 824
VU+	919, 920, 921, 922

Коды к SAT устройствам различных марок

Марка	Код
WORLD VISION	821, 928, 951, 952
XSAT (НТВ+)	801, 802, 807, 906, 972, 984, 998
YUXING	904
ZYXEL	874
БИЛАЙН	883, 884, 901, 923
ВОЛГАТЕЛЕКОМ	842, 843, 844, 845, 846, 847, 849, 850, 858, 867
ДОМ.RU	820, 905
ДОМОЛИНК	874, 904
МТС	855, 964, 974, 979, 980, 989, 993
НЕИЗВЕСТНАЯ МАРКА	834, 835, 842, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 903, 904, 937, 938, 939, 940, 944, 945, 969, 971, 978, 996
РОСТЕЛЕКОМ	874, 904, 923, 963
СИГНАЛ	968
ТЕЛЕКАРТА	867, 909, 973
ТЕЛЕЦИФРА	968

Функции кнопок пульта IRC 192 F к AUX устройствам

Кнопки пульта IRC 192 F	Код 301		Код 302		Код 303		Код 304		Код 305	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	DVD	DVD/LD			DVD		DVD		DVD	
AUDIO; NICAM	STEREO; DTS		STEREO EFFECT		STEREO		CD		CD	
VIDEO; SYS	V-AUX		6CH INPUT		V-AUX		V-AUX		V-AUX	
ZOOM	DTS				MUSIC		ENT.		ENT.	
TV	DTV/CBL; D-TV				DVR		DVR		DTV/CBL	
CD	CD				DAB MEMORY		DAB MEMORY		DAB MEMORY	
LOCK	ENTERTAIN; DISCO				STANDARD		LEVEL		SRCH MODE	
FAV	MULTI CH IN; EXT.				MULTI CH IN		MULTI CH IN		MULTI CH IN	
STANDBY	STANDBY	PHONO; POWER	STANDBY		STANDBY		STANDBY		STANDBY	
AV	SYSTEM POWER		SYSTEM POWER		POWER		POWER		POWER	
MUTE	MUTE		MUTE		MUTE		MUTE		MUTE	
MENU	SET MENU		MENU		SET MENU		MENU			
EXIT	RETURN									
▲	▲				▲		▲		PRESET/CH ▲	
◀	◀				◀		◀		A/B/C/D/E	
OK	ENTER; SELECT	SELECT			ENTER		ENTER		ENTER	
▶	▶				▶		▶		A/B/C/D/E	
▼	▼				▼		▼		PRESET/CH ▼	
SETUP	NIGHT				SELECT					
TITLE	TUNER		TUNER		TUNER		TUNER		TUNER	
TEST	MOVIE; HALL				MOVIE				BAND	
GUIDE	LEVEL	EX/ES; 6.1/5.1			LEVEL					
SLEEP	SLEEP		SLEEP		SLEEP		SLEEP		SLEEP	
EXT. DEC	STRAIGHT EFFECT				ENTERTAIN					
RED; MD/CD-R	MD/CD-R	PHONO			CD		MD/CD-R		MD/CD-R	
GREEN; VCR	VCR 1; VCR				MD/CD-R		DTV/CBL		DVR	
YELLOW; DVR	DVR/VCR2				DTV/CBL					
BLUE; TAPE/MD	TAPE/MD									
ON SCREEN; DISP.	ON SCREEN; DISP.				DISPLAY		DISPLAY		DISPLAY	
DIRECT ST.	DIRECT ST.									
VOL -	VOLUME -		VOLUME -		VOLUME -		VOLUME -		VOLUME -	
VOL +	VOLUME +		VOLUME +		VOLUME +		VOLUME +		VOLUME +	
CH V; PROG -	PROG -	PRESET -	PRESET/CH ▼						FREQ/TEXT	
CH A; PROG +	PROG +	PRESET +	PRESET/CH ▲						EON	
SAT	CBL/SAT				*		*		*	
CLEAR; X	A/B/C/D/E				EXTD SUR.					
HALL; MOVIE THT.1	HALL; MOVIE THT.1				DIRECT ST.				MODE PTY SEEK	
JAZZ; MOVIE THT.2	JAZZ; MOVIE THT.2				SPEAKERS					
ROCK; MONO MOV.	ROCK; MONO MOV.				ENHANCER				ST. PTY SEEK	
MUSIC; TV SPORTS	MUSIC; TV SPORTS				NIGHT					
TV THTR; ROCK	TV THTR; ROCK				STRAIGHT					
1, 2, ... 9, 0	SPEAKERS A,B		1, 2, ... 8				1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 192 F к AUX устройствам

Кнопки пульта IRC 192 F	Код 306		Код 307		Код 308		Код 309		Код 310	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	BD DVD		DISC; DVD	SHUFFLE	PLAY SPEED	QUICK REPLAY	TAPE		CD/DVD	
AUDIO; NICAM	AUDIO 1		AUDIO	AUDIO DIRECT	AUDIO				TAPE	
VIDEO; SYS	V-AUX		MOVIE		PLAY MODE	EXT LINK			AUX	
ZOOM	AUDIO 2		ZOOM; Q		ZOOM		RANDOM			
TV	TV		PREVIEW; SCAN	SEARCH	DRIVE SELECT	DIRECT TV REC			MD	
MEMORY	MEMORY		SCAN		SHOW VIEW	ONE TOUCH MEM.	DISC SCAN			
LOCK	STEREO; ENHANC.		FTS; PROGRAM	DISC/LOCK	ANGLE; PAGE	POSITION MEMORY	DIMMER			
FAV	MUSIC		OPEN/CLOSE	ANGLE	OPEN/CLOSE		OPEN/CLOSE			
STANDBY	RECEIVER		POWER; STANDBY				SYNCHRO		STANDBY/ON	STANDBY
AV					INPUT SELECT	AV LINK	MODE		SYSTEM POWER	
MUTE	MUTE		MUTE	TV MUTE					MUTE	
MENU	OPTION		MENU DISC; MENU	DISC MENU	MENU; PLAY LIST	FUNCTIONS				
EXIT	RETURN		RESUME		EXIT	MANUAL SKIP				
▲	▲		▲		▲					
◀	◀		◀		◀		◀ DISC SKIP		PRESET - (TUNER)	
OK	ENTER		OK		ENTER; SEL.	FL SELECT	▶ DISC SKIP		A/B/C/D/E (TUNER)	
▶	▶		▶		▶				PRESET + (TUNER)	
▼	▼		▼		▼					
SETUP	SETUP		MENU SYS; SET UP	ACTIVE CONTROL	SETUP	ADV. DISC REVIEW	PEAK		PHONO	
TITLE	RADIO		T; TITLE	SMART	TOP MENU; TITLE	SOUND ENHANC.			TUNER	
MOVIE	MOVIE		T-C; TITLE/CHAP		PROGRAM	PROG/CHECK	TEXT/TIME; TIME			
GUIDE	SUR. DECODE		PBC ON/OFF	SOUND MODE	OFF/ON SUBTITLE	GROUP	PROG			
SLEEP	SLEEP		TIME SEARCH		SLEEP	TIME/SLIP/RET R.	TEXT/TIME; TIME			
STRIGHT	STRIGHT		SUBTITLE; MARKER		SUBTITLE	MARKER	SPACE			
RED; TUNER	TUNER		REC	INSTANT; REC	REPEAT MODE	REC			DECK A/B	
GREEN; FM	FM		MODE	DIMMER	A-B REPEAT	REC MODE			DIR A	
YELLOW; AM	AM		SEARCH MODE	PAGE	SLOW	F REC			DIR B	
BLUE; CD	CD		SLOW; MARKER		SLOW	AV ENHANCER			DISC SKIP	
INFO	INFO		DISPLAY; BIT RATE	OSD MENU; DISPL.	DISPLAY; ON SCR.	Q. QSD; STATUS	INDEX			
RET.; RESUM.; TITLE	REPEAT		REPEAT		RETURN	RANDOM	REPEAT; S/F REP.			
VOL -	VOLUME -		SKIP/INDEX		SKIP/INDEX				VOLUME -	
VOL +	VOLUME +		SKIP/INDEX		SKIP/INDEX				VOLUME +	
CH V; PRESET ▼	PRESET ▼		CH ▼; TR./V.-L.		SKIP/INDEX		SKIP		(CD)	
CH A; PRESET ▲	PRESET ▲		CH ▲; TR./V.-L. +		SKIP/INDEX		SKIP		(CD)	
SAT			10	A-B REPEAT	>=10					
CLEAR; X			CLEAR	C	CANCEL; CLEAR; DELETE		CLEAR			
TUNING ▼	TUNING ▼		SEARCH; SLOW/S.; REW		A; A.SRD; V.S.S.		SEARCH		(TAPE)	
i	PLAY		PLAY		B; BASS		PLAY		(CD)	(TAPE)
?	TUNING ▲		SLOWS.; FF		C; CINEMA		SEARCH		(TAPE)	
STOP	STOP		STOP		CREATE CHAPT.		STOP		(CD)	(TAPE)
PAUSE	PAUSE		PAUSE		D; D.ENH		PAUSE		(CD)	
1, 2, ... 9, 0	HDMI 1-4, AV 1-5		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0			

Функции кнопок пульта IRC 192 F к AUX устройствам

Кнопки пульта IRC 192 F	Код 311		Код 312		Код 313		Код 314		Код 315	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	TEMPO +						CD		DVD/CD	
AUDIO ; NICAM	TEMPO 0				AUDIO		TAPE		TAPE ; C TUNER	SURROUND
VIDEO ; SYS							AUX		VIDEO 1	VIDEO 2
☐ ; ZOOM					ZOOM		RANDOM ; B		RANDOM	LEVEL
▼ ; TV	TEMPO -						MD		MD/CD-R	
☐ ; ↻	SEARCH		MEMO						PRESET	FM MODE
☐ ; LOCK			A.MEMO						EDIT ; D TUNER	
▲ ; FAV			SEEK						▲ ; OPEN/CLOSE	
○			POWER		○/I		○/I ; POWER		POWER	
AV					USB				INPUT	VCR
✳			LOUD						MUTE	
MENU					MENU				LOCATION	TEST
EXIT					TOP MENU/RETURN					
▲	TRANSPOSE +				▲				▲	
◀	L PART DELECT				◀				◀	
OK	TRANSPOSE 0				ENTER				MUSIC	
▶	R PART SELECT				▶				▶	
▼	TRANSPOSE -				▼				▼	
✳ ; SETUP					SET UP		R.TIME ; E		MODE	
♪ ; TITLE			BAND	♪ ; TITLE	TOP MENU/RETURN		TUNER		TUNER	BASS
☐							TEXT/TIME		PROG ; B TUNER	GAME
GUIDE							PROG ; C		TIME ; A TUNER	SPORTS
☐							SLEEP		SLEEP	TIMER
☐					SUBTITLE		D		CLOCK	MUSIC
RED ; ●	REPEAT	RECORD			REPEAT		START DUBBING	TAPE REC/PAUSE	TAPE 1/2	REC/PAUSE
GREEN ; ►	A-B				REPEAT A-B		MODE DUBBING	MD REC/PAUSE	USER	
YELLOW ; ◀							TAPE DIRECTION		ADJUST	◀ ; PLAY (TAPE)
BLUE ; ►									DISC SKIP	FLAT
☐					ON SCREEN		DISPLAY		MOVIE	
☐							REP : A		REPEAT	
VOL -	VOLUME -		VOL -				VOLUME ▼		VOLUME -	TUNING -
VOL +	VOLUME +		VOL +				VOLUME ▲		VOLUME +	TUNING +
CH V ; ◀◀	◀◀ SONG SELECT		TUNE ▼	◀◀			PRESET ▼		PRESET ▼ (TUNER)	
CH A ; ▶▶	▶▶ SONG SELECT		TUNE ▲	▶▶			PRESET ▲		PRESET ▲ (TUNER)	
± ; SAT							+10 ; MODE-PTY		+10 ; E TUNER	
CLEAR ; X							+100 ; SEEK-START		SET/CLEAR	
◀◀ ; ●	◀◀ ; REV				◀◀		◀◀ ; ◀◀		◀◀ ; ◀◀ (CD)	◀◀ (TAPE)
▶ ; i	▶ ; PLAY				▶ /		▶ /		▶▶ ; PLAY/PA.(CD)	▶ ; PLAY (TAPE)
▶▶ ; ?	▶▶ ; FWD				▶▶ ; ▶▶		▶▶ ; ▶▶		▶▶ ; ▶▶ (CD)	▶▶ (TAPE)
■ ; ✕	■ ; STOP				■		■		■ ; STOP (CD)	■ ; STOP (TAPE)
; ⏸	; PAUSE				▶ /		▶ /		▶▶ ; PLAY/PA.(CD)	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, 3, 4, 5, 6		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 192 F к AUX устройствам

Кнопки пульта IRC 192 F	Код 316		Код 317		Код 318		Код 319		Код 320	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD			DVD/CD		DVD/CD					
AUDIO ; NICAM	AUDIO		STEREO							
VIDEO ; SYS	REPLAY		VIDEO 1		VIDEO 1					
☐ ; ZOOM	ZOOM		VIDEO 2		VIDEO 2					
▼ ; TV			MD/CD-R		MD/CD-R					
☐ ; ↻	SEARCH MODE		☐/DTS							
☐ ; LOCK	ANGLE		MATRIX 6.1							
▲ ; FAV	▲									
○			○/I ; POWER		○/I ; POWER					
AV			VCR		VCR					
✳			MUTE		MUTE					
MENU	MENU		SET MENU							
EXIT	RETURN									
▲	▲				PRESET ▲					
◀	◀ ; -									
OK	ENTER		SELECT							
▶ ; +	▶ ; +									
▼	▼				PRESET ▼					
✳ ; SETUP	SET UP		NIGHT							
♪ ; TITLE	TITLE		TUNER		TUNER					
☐	PROGRAM		TEST							
GUIDE	STATUS		SPORTS							
☐			SLEEP		SLEEP					
☐	SUBTITLE		GAME							
RED ; ●	REPEAT		CENTER -		MOVIE					● ; REC
GREEN ; ►	A-B		CENTER +		MUSIC					
YELLOW ; ◀	◀ SLOW		SURR -		SPORTS					
BLUE ; ►	▶ SLOW		SURR +		GAME					
☐	ON SCREEN		MOVIE							
☐	LAST MEMO		MUSIC						ON SCREEN	
VOL -			VOLUME -		VOLUME -					
VOL +			VOLUME +		VOLUME +					
CH V ; ◀◀	◀◀ SKIP		SW -		◀◀		◀◀		◀◀	
CH A ; ▶▶	▶▶ SKIP		SW +		▶▶		▶▶		▶▶	
± ; SAT	≥10				A/B/C/D/E		+10		11	
CLEAR ; X	CANCEL									
◀◀ ; ●	◀◀ SEARCH				◀◀		◀◀		◀◀	
▶ ; i	▶				▶		▶		▶	
▶▶ ; ?	▶▶ SEARCH				▶▶		▶▶		▶▶	
■ ; ✕					■		■		■	
; ⏸										
1, 2, ... 9, 0	1, 2, ... 9, 0				1, 2, ... , 8		1, 2, ... 9, 0		1, 2, ... 9, 10	

Функции кнопок пульта IRC 192 F к AUX устройствам

Кнопки пульта IRC 192 F	Код 321		Код 322		Код 323	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD			2ND AUDIO		CD	
AUDIO ; NICAM	ST/MO		AUDIO		iPod	
VIDEO ; SYS			SHUFFLE		AUX	
☐ ; ZOOM			ZOOM			
▼ ; TV					TUNER	
☐ ; ↗	MEMO.		PIP		MEMORY	
☐ ; LOCK			SEARCH			
▲ ; FAV	LOUD		▲		≡	
○	POWER		○		○	
AV			ANGLE		USB	
⌘	MUTE				MUTE	
MENU			HOME		MENU ; ▲	
EXIT			RETURN			
▲	TUNING ▲		▲		MENU ; ▲	
◀			◀		⏮ ; ◀	
OK			ENTER		ENTER	
▶			▶		⏭ ; ▶	
▼	TUNING ▼		▼		⏭ ; ▼	
* ; SETUP	BAND		SETUP			
♪ ; TITLE	MS		TOP MENU			
☐			POP-UP MENU		OPTION	
GUIDE			STATUS			
⊖					SLEEP	
☐			SUBTITLE			
RED ; ●			RED ; PROGRAM		PRESET <	
GREEN ; ►			GREEN ; MARKER		PRESET >	
YELLOW ; ◀			YELLOW ; DIGEST		↙	
BLUE ; ►			BLUE ; ZOOM		↘	
☐	SHIFT		ON SCREEN		DISPLAY	
☐			REPEAT		☐	
VOL -	◀-				VOLUME -	
VOL +	▶+				VOLUME +	
CH V ; ⏮			⏮		FOLDER ▼	⏮ ; ◀
CH A ; ⏭			⏭		FOLDER ▲	⏭ ; ▶
± ; SAT			A/B			
CLEAR ; X			CLEAR			
◀ ; ●			◀		TUNING ◀	
▶ ; i			▶		⏭ ; ▼	
▶ ; ?			▶		TUNING »	
■ ; X			■		■	
■ ; ⏭			■		⏭ ; ▼	
1, 2, ... 9, 0	M1,M2,M3,M4,M5		1, 2, ... 9, 0			

Функции кнопок пульта IRC 192 F к TV устройствам

Кнопки пульта IRC 192 F	Коды 501-799	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM		
VIDEO ; SYS		
☐ ; ZOOM		
▼ ; TV		
☐ ; ↗		
☐ ; LOCK		
▲ ; FAV		
○	POWER ; ○	
AV	TV/VIDEO ; TV/AV	
⌘	MUTE ; ⌘	
MENU		
EXIT		
▲		
◀		
OK		
▶		
▼		
* ; SETUP		
♪ ; TITLE		
☐		
GUIDE		
⊖		
☐		
RED ; ●		
GREEN ; ►		
YELLOW ; ◀		
BLUE ; ►		
☐		
☐		
VOL -	VOLUME ▼ ; ◀-	
VOL +	VOLUME ▲ ; ▶+	
CH V ; ⏮	CHANNEL ▼ ; P -	
CH A ; ⏭	CHANNEL ▲ ; P +	
± ; SAT		
CLEAR ; X		
◀ ; ●		
▶ ; i		
▶ ; ?		
■ ; X		
■ ; ⏭		
1, 2, ... 9, 0	1, 2, ... 9, 0	

Для просмотра функций кнопок баз кодов 8 и 9 (SAT, STB, DVB устройства) перейдите по следующей ссылке <http://www.pult-irc.ru/files/manual/SatCodesForIrcF.pdf>