

Приложение IRC 207 F (версия 18.03.31 01:28)

Модели оригинальных пультов и соответствующие им коды пульта IRC приведены в разделе "Коды пульта IRC 207 F".

Функции всех кнопок для каждого кода пульта IRC можно узнать из таблиц данного приложения.

Пульт IRC может иметь дополнительные функции (если указаны в столбце "Доп. функция"). Доступ к ним осуществляется при помощи кнопки SHIFT (см. в инструкции рис.1, п.16). Для доступа к дополнительным функциям нажмите кнопку SHIFT и, удерживая её нажатой, нажмите ту кнопку, дополнительная функция которой Вам необходима.

После первой установки батареек

Кнопка устройства пульта IRC	Код пульта IRC	Кнопка устройства пульта IRC	Код пульта IRC
TV	101	SHIFT + TV*	105
VCR	102	SHIFT + VCR*	106
AUX	103	SHIFT + AUX*	107
SAT	104	SHIFT + SAT*	108

* Нажмите кнопку SHIFT и, удерживая её нажатой, нажмите и отпустите одну из кнопок пульта: TV, VCR, AUX или SAT.

Доступные коды пульта IRC 207 F

Номер базы кодов (диапазон кодов)	Устройство базы кодов	Доступные коды пульта IRC
1 (101-199)	TV	101 - 114
2 (201-299)	-	Нет
3 (301-399)	AUX	301 - 304
4 (401-499)	-	Нет
5 (501-599)	TV	501 - 599
6 (601-699)	TV	601 - 699
7 (701-799)	TV	701 - 799
8 (801-899)	SAT	801 - 899
9 (901-999)	SAT	901 - 999

Коды пульта IRC 207 F

Коды к устройствам марки VR

Модель*	Устр-во	Код
1CE3	TV	101
800201	TV/AUX	106
CGE-868	AUX, CD, DVD	303
CT-21VUAS-G	TV	104
DVD-01	AUX, CD, DVD	301
GPRC 05-02	TV/AUX	110
HOF-54B-MA54MR	TV	113
HT-D902V	AUX, CD, DVD	304
LT-15N08V	TV/AUX	112
LT-19V05V	TV	111
LT-26L02V	TV	108
LT-32F05V	TV	114
MDG-054	TV/AUX	102
MDG-054A	TV/AUX	102
RC 33	AUX, CD, DVD	302
RC03-52	TV	101
TVD34-M1-1	TV	103
TV-DVD-01	TV/AUX	105
TV-DVD-02	TV/AUX	107
WD53B19	TV	109
ZY-55K9R	TV	101

* По каталогу «IRC»

Коды к TV устройствам различных марок

Марка	Код
AEG	544
AIWA	502, 503, 523, 528, 579, 634, 678, 710, 712, 716
AKAI	501, 503, 512, 516, 520, 522, 524, 525, 537, 538, 540, 545, 546, 547, 550, 571, 572, 582, 583, 584, 585, 598, 608, 613, 626, 652, 673, 691, 704, 722, 731, 769
AKIRA	511, 514, 516, 524, 525, 537, 538, 541, 545, 547, 556, 577, 586, 594, 597, 598, 601, 623, 626, 629, 631, 649, 666, 680, 689, 690, 693, 717, 739, 796, 797, 798, 799
AMCOL	501, 525, 545, 747
ANITECH	501, 525, 726
ATLANTA	501, 751
AVEST	537, 538, 539, 766
BANG & OLUFSEN	728, 737
BBK	522, 551, 594, 597, 684, 701, 788, 792, 793
BEKO	525, 530, 535, 559, 723, 742
BIGSTON	501, 503
BLAUPUNKT	512
BORK	525, 547, 646, 766
BRAND	711
BROKSONIC	501
CAMERON	550, 567, 675, 697, 702, 792, 794
CASIO	529, 705, 706
CASKA	761
CHANGHONG	516, 642
CLATRONIC	501
CONTEC	501, 603, 604, 613
CORTLAND	644
CROWN	501, 503, 511, 524, 525, 530, 571
DAEWOO	501, 508, 518, 520, 525, 526, 536, 538, 539, 546, 565, 571, 576, 598, 613, 685, 687, 692
DARTLAND	501
DAYTRON	501
DIGITAL	547
DISTAR	562, 616
DNS	596, 702, 708
DUAL	746
ELEKTA	501, 503, 520, 525, 527, 615
ELEKTRONIKA	583
ELENBERG	538, 545, 550, 565, 567, 579, 581, 644, 655, 676, 683, 717, 785
EPLUTUS	537, 644, 677, 682, 697, 724
ERC	537, 631, 764
ERISSON	511, 514, 516, 525, 526, 537, 538, 541, 550, 556, 561, 568, 586, 596, 599, 623, 626, 629, 631, 711, 712, 714, 739, 747, 779, 786, 795
EVGO	538, 540, 630
FINLUX	501, 511, 583, 589, 608, 732, 758, 774
FUJITSU	544, 573
FUNAI	501, 502, 503, 504, 505, 525, 537, 538, 581, 603, 764
FUSION	596, 642, 705, 706
GBS	501, 520, 525, 571, 583
GENERAL	537, 556
GOLD STAR - LG	501, 512, 518, 525, 527, 559, 570, 583, 584, 589, 609, 613, 642, 706, 742, 750, 765
GRUNDIG	501, 512, 525, 606, 662, 718, 719, 733
HAIER	518, 526, 561, 574, 657, 667, 669, 707, 778
HAPPY	501
HCM	501, 525
HELIX	701, 702
HIL	503
HITACHI	501, 515, 518, 522, 525, 537, 544, 548, 554, 578, 584, 587, 588, 604, 613, 640, 729, 749, 775, 783
HORIZONT	525, 540, 545, 550, 559, 583, 672, 771
HPC	546
HYUNDAI	516, 522, 525, 526, 537, 540, 541, 546, 547, 550, 556, 580, 596, 597, 599, 626, 642, 650, 655, 705, 711, 714, 717, 760
INNO-HIT	501, 525, 571
IRBIS	596, 714
IVA (ИВА)	537, 561, 637
IZUMI	516, 537, 596, 663, 691, 695, 705, 711, 792
JINLIPI	537, 637, 766
JVC	513, 515, 593, 604, 727
KAMACROWN	571
KANSAI	501, 525
KENSTAR	516
KITT	613, 726
KNEISSEL	753
KONKA	560, 581, 616, 717
LOEWE	542, 709, 744
METZ	745
MITSUBISHI	501, 520, 522, 525, 604, 611, 722, 728, 744
MIYOTA	537, 644, 656
MTC	501, 583
MULTITECH	501
MYSTERY	516, 537, 597, 642, 650, 653, 701, 702, 773, 780, 789
NASH	537
NEC	501, 517, 520, 526, 552, 604, 625, 722
NESCO	501, 525
NOKIA	519, 584, 610, 614, 616, 740, 746, 767
NOVA	501, 616, 638
NOVEX	516, 546, 599
NTT	759
OMEGA	501, 571
ONIDA	513
ONIKS	516, 525, 537, 545, 546, 547
ONWA	524, 525
ORBITA	635
ORION	501, 503, 506, 507, 509, 516, 525, 528, 537, 591, 603, 617, 619, 627, 641, 643, 664, 715, 720, 722, 729, 746
ORSON	526, 537
PANASONIC	512, 531, 532, 752
PHILIPS	501, 511, 524, 525, 540, 549, 628, 639, 707, 748
PHOENIX	613
PHOENIX GOLD	708
PIONEER	555, 566, 575, 647, 666
PIXELVIEW	525
PLANTRON	735
POLAR	525, 526, 537, 538, 540, 543, 547, 581, 596, 599, 663, 664, 683, 703, 711, 717
POLAROID	525
POWER VISION	501

Коды к TV устройствам различных марок

Марка	Код
PREMIERA	773
PRESTIGIO	564, 656
PRIMA	522, 547
PROLOGY	653, 655, 777, 784
RADUGA	525, 545, 569, 583, 743
RAINFORD	525, 537, 544, 545
RECOR	511, 525
REKORD	520, 525, 526, 537, 538, 539, 545, 547, 725, 736, 743, 747
RFT	535, 728
ROADSTAR	501, 508, 525, 571
ROLSEN	503, 516, 525, 537, 538, 540, 543, 546, 564, 576, 592, 594, 596, 649, 656, 669, 684, 714, 768, 770
ROVERSCAN	662, 770
RUBIN	504, 516, 525, 537, 546, 583, 619, 665, 714, 776
SABA	510, 521, 602, 756
SALORA	584
SAMSUNG	501, 525, 526, 529, 563, 580, 595, 608, 612, 613, 622, 641, 645, 688, 723, 741
SANSUI	524, 525, 538, 556, 695
SANYO	501, 519, 522, 525, 530, 540, 550, 558, 604, 608, 610, 618, 621, 696, 722, 730, 734, 738
SATELLITE	616
SCARLETT	541, 545
SCHNEIDER	525, 540, 571, 771
SELECO	736, 763
SETRO	520
SHARP	526, 544, 548, 604, 707, 721
SHERION	616
SHIVAKI	501, 503, 508, 516, 518, 520, 525, 526, 527, 536, 538, 539, 540, 545, 546, 547, 550, 556, 580, 583, 585, 596, 599, 609, 619, 630, 632, 635, 636, 643, 644, 664, 681, 694, 743, 791
SIEMENS	512, 525, 660, 726, 734
SIESTA	501, 537, 637
SILELIS	613
SILVER	633
SITRONICS	503, 516, 525, 537, 538, 540, 543, 545, 594, 626, 629, 661, 671, 672, 674, 679, 680, 686, 766
SOKOL	516, 525, 547, 635
SONY	533, 604, 659, 722
SPEKTR	525, 538, 668
START	525, 537, 545, 546, 547
STASSFURT	535, 618
STINOL	525
SUPER	537, 561, 644, 653, 654, 655, 666, 677, 682, 724, 754, 772, 780
SUPRA	501, 508, 516, 518, 520, 525, 527, 529, 536, 537, 541, 563, 579, 580, 596, 597, 612, 643, 687, 690, 705, 706, 712, 713, 790
SUZUKI	516, 556
SVEN	781
TCL	538, 540
TECHNO	501, 525, 538, 544, 546, 556, 568, 579, 596, 599, 644, 664, 703, 791
TECKTON	522, 582, 601, 669, 670
TELEFUNKEN	510, 521, 590, 602, 605, 708, 756, 757
TELEVISION	501, 525, 616
THOMSON	509, 510, 521, 550, 579, 602, 624, 642, 702, 756
TOSHIBA	516, 553, 604, 651, 699, 744
TRONY	516, 525, 537, 538, 550
TVT	511, 525, 530, 535, 538, 583, 586, 620, 723, 742
UNITED	525
VARTA	642
VESTEL	525, 544, 556, 583, 619
VIEWSONIC	557, 698
VITA	547
VITEK	537, 650
VITYAS	525
VOLNA (ВОЛНА)	635
VR	516, 537, 702, 714, 786
WALTHAM	503, 509, 511, 583, 584, 607, 613, 729, 762
XORO	522, 526, 545, 782, 787
НЕИЗВЕСТНАЯ МАРКА	546, 574, 596, 648, 656, 666, 711, 755

Коды к SAT устройствам различных марок

Марка	Код
AIR TONE	968
ALFA GOLD	828
AMINO (СТРИМ)	829, 902
ARION	835
ASTON	811
BBK	931
BIG SAT	839, 840, 903, 936
BIG STAR	965
CADENA	958, 962
CONTINENT	886, 975
COSHIP	855
DAEWOO	872
D-COLOR	946
DELTA SYSTEMS	985
DIVISAT	957, 958
D-LINK	923
DNS	968
DR.HD	983
DRE (GENERAL SATELLITE)	804, 868, 888, 907, 933, 954
DREAM	819
DUNE	927, 934
ECHOSPACE	862
ECHOSTAR	808, 809, 822
ELTEX	987
EUROSKY	840, 880
EUROSTAR	863
EUSTON	825
EVO	965
GALAXY INNOVATIONS	878, 881, 908, 911, 912, 917, 924
GLOBALTEQ	833
GLOBO	909, 915, 925, 935, 945, 956, 973, 999
GOLD STAR - LG	871
GOLDEN INTERSTAR	821, 841, 879, 918
GOLDEN MEDIA	847, 912
GOLDMASTER	911
HITACHI	824, 832
HIVION	929
HOME	968
HOMECAST (ВОЛЯ)	820, 831, 836
HUMAX	803, 804, 823, 848, 860, 861, 905, 949
HYUNDAI	968
ID DIGITAL	804
INTEK	984
KAON	820
KOSMOS	855, 856
LANS	970
LOCUS	946
LUMAX	852, 873, 907, 913, 965, 994
MAG	988
MEDIA COM	825
MOTOROLA	883, 884, 901
MYSTERY	910, 997
NDS	814
NEXT	864
NOKIA	813
NOT	941
ONLIME	905
OPENBOX	827, 835, 869, 870, 911, 990, 991
OPENTECH	972
OPENTEL	865
ORBITA	946, 995
ORIEL	887, 926, 941, 948, 955, 986
PACE	801, 932, 953
PATIX DIGITAL	992
PAUXIS	842, 859
PHILIPS	857, 899
PIONEER	851
POLAR	858
REFLECT	959
RIKOR	916, 947
ROLSEN	930, 941, 942, 961
SAGEMCOM	906
SAMSUNG	803, 810, 812, 854
SEG	818
SEZAM	882
SKY VISION	952, 966, 977, 982
SKYMASTER	830
SKYWAY	911
SKYWORTH	989
STAR	833
STAR TRACK	826, 835, 943
STARNET	885
STRONG	805, 806, 815, 816, 817, 828, 830, 914
SUNNIWELL	875
SUPERBOX	903
SUPERMAX	821, 866, 880, 924
SUPRA	950, 960, 962
TECHNOSAT	852, 853
TEL-ANT	960
TELEFUNKEN	961, 968
TESLER	926
TOP BOX	965
TOPFIELD	837, 838, 877, 891
TOSHIBA	876
TV STAR	967
TVJET	946, 976
VESTEL	820, 824
VU+	919, 920, 921, 922

Коды к SAT устройствам различных марок

Марка	Код
WORLD VISION	821, 928, 951, 952
XSAT (НТВ+)	801, 802, 807, 906, 972, 984, 998
YUXING	904
ZYXEL	874
БИЛАЙН	883, 884, 901, 923
ВОЛГАТЕЛЕКОМ	842, 843, 844, 845, 846, 847, 849, 850, 858, 867
ДОМ.RU	820, 905
ДОМОЛИНК	874, 904
МТС	855, 964, 974, 979, 980, 989, 993
НЕИЗВЕСТНАЯ МАРКА	834, 835, 842, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 903, 904, 937, 938, 939, 940, 944, 945, 969, 971, 978, 996
РОСТЕЛЕКОМ	874, 904, 923, 963
СИГНАЛ	968
ТЕЛЕКАРТА	867, 909, 973
ТЕЛЕЦИФРА	968

Функции кнопок пульта IRC 207 F к TV устройствам

Кнопки пульта IRC 207 F	Код 101		Код 102		Код 103		Код 104		Код 105	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			▶▶						▶▶	
AUDIO; NICAM	AUDIO; CALENDAR		AUDIO	MEDIA; I/II	HEAR		SOUND		LANG	
VIDEO; SYS	SYS.; MODE; GAME		ANGLE; INDEX	SYS.; ASPECT			PICTURE		MODE	
☐; ZOOM	ZOOM; PIC; ☐; MAR.		SYS.; ASPECT	ZOOM; SUB.PAGE	ZOOM		ZOOM		ZOOM	
▼; TV			◀◀						◀◀	
☐; ↻	P.P; AUTO; P.MODE		⊕		SCAN		SCAN		ANGLE	
☐; LOCK	GAME; AUDIO; LOCK		P.P	LOCK; SWAP	LOCK					
▲; FAV			▲; OPEN/CLOSE		FAV		EAST/WEST			
⊕	⊕; POWER		⊕; POWER		⊕; POWER		POWER		POWER	
AV	VIDEO; TV/AV; AV		TV/AV; SOURCE		TV/AV		TV/AV		SD/USB	
⌘	⌘; MUTE		MUTE		⌘; MUTE		MUTE		MUTE	
MENU	MENU; M		MENU	DVD MENU	MENU		MENU		MENU	
EXIT			GOTO							
▲	CH +; P+; ▲		▲		▲		▲		▲; CH +	
◀	VOL -; ◀; V-; ◀		◀		◀		◀		◀	
OK	MENU; M		ENTER		MENU		MENU		OK	
▶	VOL +; ▶; V+; ▶		▶		▶		▶		▶	
▼	CH -; P-; ▼		▼		▼		▼		▼; CH -	
⌘; SETUP	⌘ L/R; GAME; PICT.		DVD SETUP		P.MODE; PICTURE		P.MODE		SETUP	
♪; TITLE	♪ U/D; SOUND; S.M		ON/MIX; TITLE		S.MODE; SOUND		S.MODE		TITLE	
☐	GAME		OFF; SLOW; TEXT	CLOCK; MIX	CAL; CALENDAR		TEXT			
GUIDE	LANG; SCAN; OPTIO.		PROGRAM		BIO		SETUP			
⊕	SLEEP; ⊕		CLOCK; MIX		SLEEP		SLEEP		TIME	
☐			SUBTITLE		DEMO		MIX		SUB/COPY	
RED; ●			RED; MUTE				RED; SOUND		REP	
GREEN; ▶▶			GREEN; TV/AV				GREEN; PICTURE		A-B	
YELLOW; ◀◀			YELLOW; SYS.				YELLOW; TIMER			
BLUE; ▶▶			BLUE	OFF; SLOW; TEXT			BLUE; TUNE			
☐	CALL; DISPLAY; OSD		☐	DISPLAY	DISP; DSP		DISP		INFO	
☐	☐; RECALL; QV		Q.VIEW		RECALL; ☐; QV		RECALL		☐	
VOL -	VOL -; ◀; V-; ◀		VOL -		VOL -; ◀		VOL -		VOL -	
VOL +	VOL +; ▶; V+; ▶		VOL +		VOL +; ▶		VOL +		VOL +	
CH V; ◀◀	CH -; P-; ▼		PROG -	◀◀	CH -; P -; P -		CH -		▼; CH -	◀◀
CH ▲; ▶▶	CH +; P+; ▲		PROG +	▶▶	CH +; P ▲; P +		CH +		▲; CH +	▶▶
⌘; SAT	-/-		-/-; 10+		-/-; --		DIGIT		-/-	
CLEAR; X			REPEAT				CANCEL			
◀◀; ●			◀◀	ZOOM; SUB.PAGE			SUBCODE		◀◀	
▶▶; i			▶▶	ANGLE; INDEX			INDEX		▶▶	
▶▶; ?			▶▶	REVEAL			REVEAL		▶▶	
■; X			■	STOP			HOLD		■	
■; ⬇			▶▶	SIZE			SIZE		▶▶	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 207 F к TV устройствам

Кнопки пульта IRC 207 F	Код 106		Код 107		Код 108		Код 109		Код 110	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			DVD/TV		▶▶		▶▶		USB/CARD/DVD	
AUDIO; NICAM	AUDIO		AUDIO		LANGUAGE		AUDIO	LANGUAGE	AUDIO	
VIDEO; SYS	MODE		MODE		LIST		ANGLE		N/P	
☐; ZOOM	ZOOM				WIDE; 16:9	ZOOM	ASPECT	ZOOM	ZOOM	
▼; TV			DVD/TV		◀◀		◀◀		TFT/TV MODE	
☐; ↻			SEARCH		L/R		A-B		AUTO	
☐; LOCK			ANGLE		F1; FREEZE		STILL		ANGLE	
▲; FAV					FAV		▲		SKIP ON	
⊕	⊕; STANDBY				⊕; POWER		⊕; POWER		⊕; STANDBY	
AV	DVD/USB/SD		DVD/USB/SD		SOURCE		SOURCE		USB/CARD/DVD	
⌘	MUTE		MUTE		⌘; MUTE		⌘		MUTE	
MENU	MENU/PBC		MENU		MENU		MENU	DVD MENU	MENU	
EXIT	GOTO				EXIT		EXIT		GOTO	
▲	▲		▲		▲		▲		▲; CH +	
◀	◀		◀		◀		◀		◀	
OK	ENTER		ENTER		OK		ENTER		ENTER	
▶	▶		▶		▶		▶		▶	
▼	▼		▼		▼		▼		▼; CH -	
⌘; SETUP	SETUP		SETUP		SMART P; P.MODE		P.MODE	SETUP	SETUP	
♪; TITLE	TITLE		TITLE		SMART S; S.MODE	RADIO	S.MODE	TITLE	TITLE	
☐	TV SETUP		PBC		C; TTX		☐	MIX	PROGRAM	
GUIDE	PROG		PROGRAM		EPG		REPEAT		SWITCH	
⊕					☐		⊕	SLEEP; DVD MENU		
☐	SUBTITLE		SUBTITLE				☐; SUBTITLE		SUBTITLE	
RED; ●	REPEAT		REPEAT		RED; REC	●; REC	RED		REPEAT	
GREEN; ▶▶	A-B		AB		GREEN; SUBTITLE		GREEN		A-B	
YELLOW; ◀◀					YELLOW; FAV		YELLOW			
BLUE; ▶▶					BLUE; EPG		BLUE; MEDIA		SLOW	
☐	OSD		DISPLAY		INFO		●		DISP	
☐					☐		☐		⊕; INVERSION	
VOL -	-; VOL -		VOL -		VOL -		◀		VOL -	
VOL +	+; VOL +		VOL +		VOL +		▶		VOL +	
CH V; ◀◀	◀◀; CH -		◀◀		CH -; CH V	◀◀; HOLD	P ▼; P-	◀◀	▼; CH -	◀◀; PREV
CH ▲; ▶▶	▶▶; CH +		▶▶		CH +; CH ▲	▶▶; LIST	P ▲; P+	▶▶	▲; CH +	▶▶; NEXT
⌘; SAT	10+		10+				-/-; +10; STILL		10+	
CLEAR; X							GOTO			
◀◀; ●	◀◀		◀◀		◀◀; LANGUAGE		◀◀	☐	◀◀; FR	
▶▶; i	PLAY/PAUSE		▶▶		▶▶; INDEX	INDEX	▶▶	☐	▶▶; PLAY/PAUSE	
▶▶; ?	▶▶		▶▶		▶▶; RADIO	REVEAL	▶▶	☐	▶▶; FF	
■; X	STOP/RETURN		■		■; REVEAL	HOLD	■	☐	■; STOP	
■; ⬇	PLAY/PAUSE		▶▶		■; ZOOM		▶▶	☐	▶▶; PLAY/PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 207 F к TV устройствам

Кнопки пульта IRC 207 F	Код 111		Код 112		Код 113		Код 114	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD			▶▶ ; SIZE		DVD			
AUDIO ; NICAM	AUDIO		I/II ; AUDIO		STEREO ; AUDIO		NICAM	
VIDEO ; SYS	MEDIA		USB/SD		D-SUB ; VGA ; PC		SWAP PIP/POP	
☐ ; ZOOM	SCALE		ASPECT		ASPECT		ASPECT	
▼ ; TV	DTV/RADIO		◀◀ ; REVEAL		TV		TV	
☐ ; ↗	AUTO ; VGA AUTO		▲ ; MIX		SCART ; COMPON.	SCAN ; SUBTITLE	ON/OFF PIP/POP	
☐ ; LOCK	STILL		ANGLE		SET FAV		SIZE PIP/POP	
▲ ; FAV	FAV.		▲ ; MIX		FAV	▲ ; EJECT	POSITION PIP/POP	
○	○ ; POWER		○ ; STANDBY		○ ; POWER		○ ; POWER	
AV	SOURCE		SOURCE		SOURCE		SOURCE	
⌘	⌘ ; MUTE		⌘ ; MUTE		⌘ ; MUTE		⌘ ; MUTE	
MENU	MENU	REC MENU	MENU	DVD MENU	MENU	MENU	MENU	
EXIT	EXIT		EXIT		EXIT		EXIT	
▲	▲		▲		▲		▲	
◀	◀		◀		◀		◀	
OK	OK		ENTER		ENTER		OK	
▶	▶		▶		▶		▶	
▼	▼		▼		▼		▼	
⌘ ; SETUP	P.MODE		P.MODE	DVD-SETUP	P.M. ; PICTURE	SET UP	P.MODE	
♪ ; TITLE	S.MODE		S.MODE	TITLE	S.M. ; SOUND	TITLE	A.MODE	
☐	TEXT	MIX	TEXT		☐ ; ☐ ; TITLE		TTX/MIX	
GUIDE	EPG		PROG.		☐ ; CARD		LIST	
⏻	SLEEP	TIME ; REVEAL	SLEEP		SLEEP		SLEEP	
☐	SUBTITLE		SUBTITLE		SUBTITLE ; ASPECT	SUBTITLE	REPEAT ; SUBTITLE	
RED ; ●	RED	● ; REC	RED ; DVD-SETUP		RED ; ◀◀ ; FB		RED	
GREEN ; ▶▶	GREEN		GREEN ; GOTO		GREEN ; ▶▶ ; FF		GREEN	
YELLOW ; ◀◀	YELLOW		YELLOW ; A-B		YELLOW ; ◀◀ ; PREV		YELLOW	
BLUE ; ▶▶	BLUE		BLUE ; DVD MENU		BLUE ; ▶▶ ; NEXT	SLOW	BLUE	
☐	INFO		DISPLAY		DISPLAY		DISPLAY	
☐	☐	REPEAT ; SUBPAGE	RECALL ; RECALL		☐	REPEAT	RETURN	
VOL -	VOL -		VOL -		VOL -		VOL -	
VOL +	VOL +		VOL +		VOL +		VOL +	
CH V ; ◀◀	CH -	◀◀ ; MIX	CH -	◀◀ ; REVEAL	CH ▼		PROG -	◀◀ ; INDEX
CH A ; ▶▶	CH +	▶▶ ; TIME ; REVEAL	CH +	▶▶ ; SIZE	CH ▲		PROG +	▶▶ ; HOLD
± ; SAT	CH.LIST		-/-		☐ ; +10	GOTO	-/-	
CLEAR ; X	GOTO ; REVEAL				☐ ; MENU			
◀◀ ; ○	◀◀ ; TEXT	SUBPAGE	◀◀ ; SUBPAGE	SUBPAGE	◀◀	☐ ; GOTO	◀◀ ; LIST	SUB.PAGE
▶▶ ; i	▶▶ ; INDEX	INDEX	▶▶ ; TEXT	INDEX	▶▶ ; PLAY	☐ ; SET UP	▶▶ ; TTX/MIX	INDEX
▶▶ ; ?	▶▶ ; HOLD	REVEAL	▶▶ ; HOLD	REVEAL	▶▶	☐ ; SLOW	▶▶ ; TTX.SIZE	REVEAL
■ ; X	■ ; SIZE	HOLD	■ ; INDEX	HOLD	■ ; STOP	☐ ; REPEAT	■ ; SUB.PAGE	HOLD
■ ; ⏻	■ ; INDEX	SIZE	■ ; TEXT	SIZE	■ ; PAUSE	☐ ; ANGLE	■ ; TTX/MIX	TTX.SIZE
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 207 F к AUX устройствам

Кнопки пульта IRC 207 F	Код 301		Код 302		Код 303		Код 304	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD					DVD/MEDIA		ECHO +	
AUDIO ; NICAM	LANGUAGE	R/L	LANGUAGE	L/R	DISPLAY ; ▶▶ ; LANG.		MONO	
VIDEO ; SYS	V-MODE	P/N	N/P					
☐ ; ZOOM	ZOOM		ZOOM		☐ ; ZOOM			
▼ ; TV							ECHO -	
☐ ; ↗	USB COPY		RIPP. ; FILE COPY				STEREO	
☐ ; LOCK	DEFAULT		ANGLE				AUTO	
▲ ; FAV	▲ ; OPEN/CLOSE		▲ ; OPEN/CLOSE		▲ ; OPEN/CLOSE		USB/SD	
○	○ ; POWER		○ ; POWER		○ ; STANDBY		○ ; STANDBY	
AV	ANGLE		USB/DISC		☐ ; ANGLE		INPUT	
⌘	MUTE		MUTE		⌘ ; MUTE		MUTE	
MENU	MENU		MENU		☐ ; MENU/PBC		MEMORY	
EXIT								
▲	▲		▲		▲		TU. CH ▲	
◀	◀		◀		◀		SCAN ▼	
OK	ENTER		ENTER		OK		SCAN ▲	
▶	▶		▶		▶		TU. CH ▼	
▼	▼		▼		▼		TREBLE -	
⌘ ; SETUP	SETUP		SETUP		⌘ ; SETUP		TREBLE +	
♪ ; TITLE	TITLE		TITLE		■ ; TITLE			
☐	PBC		PBC		PROG.			
GUIDE	PROG		PROG					
⏻	TIME		TIME		Q ; TIME			
☐	SUBTITLE		SUBTITLE		☐ ; SUBTITL. ; COPY			
RED ; ●	REPEAT		REPEAT		○ ; REPEAT		M. VOL -	
GREEN ; ▶▶	STEP		A-B		A-B ; L/R		M. VOL +	
YELLOW ; ◀◀	A-B						BASS -	
BLUE ; ▶▶	SLOW				▶▶ ; SLOW		BASS +	
☐	OSD		DISPLAY		DISPLAY ; ▶▶ ; LANG.			
☐	STOP/RETURN		RETURN				REPEAT	
VOL -	VOL -		VOL -		↙		VOL -	
VOL +	VOL +		VOL +		↘		VOL +	
CH V ; ◀◀	◀◀ ; PREV		◀◀ ; PREV		◀◀ ; PREV		◀◀	
CH A ; ▶▶	▶▶ ; NEXT		▶▶ ; NEXT		▶▶ ; NEXT		▶▶	
± ; SAT	10+		10+					
CLEAR ; X	CLEAR		CLEAR					
◀◀ ; ○	◀◀ ; REV		◀◀ ; REV		◀◀ ; REV		◀◀	
▶▶ ; i	PLAY/PAUSE		▶▶ ; PLAY		▶▶ ; PLAY/PAUSE		▶▶	
▶▶ ; ?	▶▶ ; FWD		▶▶ ; FWD		▶▶ ; FWD		▶▶	
■ ; X	STOP/RETURN		■ ; STOP		■ ; STOP		■	
■ ; ⏻	PLAY/PAUSE		■ ; PAUSE		▶▶ ; PLAY/PAUSE		■	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0/10		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 207 F к TV устройствам

Кнопки пульта IRC 207 F	Коды 501-799	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM		
VIDEO ; SYS		
☐ ; ZOOM		
▼ ; TV		
⏪ ; ↻		
☒ ; LOCK		
▲ ; FAV		
⏻	POWER ; ⏻	
AV	TV/VIDEO ; TV/AV	
⌘	MUTE ; ⌘	
MENU		
EXIT		
▲		
◀		
OK		
▶		
▼		
⌘ ; SETUP		
🎵 ; TITLE		
☐		
GUIDE		
⏻		
☐		
RED ; ●		
GREEN ; ▢		
YELLOW ; ◀		
BLUE ; ▶		
☐		
☐		
VOL -	VOLUME ▼ ; ▽-	
VOL +	VOLUME ▲ ; ▽+	
CH V ; ◀◀	CHANNEL ▼ ; P -	
CH A ; ▶▶	CHANNEL ▲ ; P +	
± ; SAT		
CLEAR ; X		
◀◀ ; ●		
▶▶ ; i		
▶▶ ; ?		
■ ; X		
▢ ; ⏻		
1, 2, ... 9, 0	1, 2, ... 9, 0	

Для просмотра функций кнопок баз кодов 8 и 9 (SAT, STB, DVB устройства) перейдите по следующей ссылке <http://www.pult-irc.ru/files/manual/SatCodesForIrcF.pdf>