

Приложение IRC 21 F (версия 18.03.23 22:48)

Модели оригинальных пультов и соответствующие им коды пульта IRC приведены в разделе "Коды пульта IRC 21 F".

Функции всех кнопок для каждого кода пульта IRC можно узнать из таблиц данного приложения.

Пульт IRC может иметь дополнительные функции (если указаны в столбце "Доп. функция"). Доступ к ним осуществляется при помощи кнопки SHIFT (см. в инструкции рис.1, п.16). Для доступа к дополнительным функциям нажмите кнопку SHIFT и, удерживая её нажатой, нажмите ту кнопку, дополнительная функция которой Вам необходима.

После первой установки батареек

Кнопка устройства пульта IRC	Код пульта IRC
TV	108
VCR	107
AUX	106
SAT	105

Кнопка устройства пульта IRC	Код пульта IRC
SHIFT + TV*	102
SHIFT + VCR*	113
SHIFT + AUX*	309
SHIFT + SAT*	310

* Нажмите кнопку SHIFT и, удерживая её нажатой, нажмите и отпустите одну из кнопок пульта: TV, VCR, AUX или SAT.

Доступные коды пульта IRC 21 F

Номер базы кодов (диапазон кодов)	Устройство базы кодов	Доступные коды пульта IRC
1 (101-199)	TV	101 - 118
2 (201-299)	VCR	201 - 213
3 (301-399)	AUX	301 - 336
4 (401-499)	-	Нет
5 (501-599)	TV	501 - 599
6 (601-699)	TV	601 - 699
7 (701-799)	TV	701 - 728
8 (801-899)	SAT	801 - 899
9 (901-999)	SAT	901 - 999

Коды пульта IRC 21 F

Коды к устройствам марки SONY

Модель*	Устр-во	Код
208-2B	AUX, CD, DVD	320
DVD-01	AUX, CD, DVD	325
DVD-02	AUX, CD, DVD	324
DVD-03	AUX, CD, DVD	326
DVD-TV-AV	TV/AUX	319
HD-1702	AUX, CD, DVD	308
JX-2001B	AUX, CD, DVD	315
JX-3033A	AUX, CD, DVD	311
JX-9005B	AUX, CD, DVD	314
JX-9005B-1S	AUX, CD, DVD	307
JX-9005B-1S-A	AUX, CD, DVD	313
JX-9005S	AUX, CD, DVD	307
KB-228	AUX, CD, DVD	316
KM-228BRE	AUX, CD, DVD	312
KT-9833	AUX, CD, DVD	318
PD23	AUX, CD, DVD	308
RC-8620	AUX, CD, DVD	317
RM-105	TV	101
RM-604	TV	103
RM-604B	TV	103
RM-604F	TV	103
RM-605	TV	103
RM-606	TV	103
RM-606A	TV	103
RM-606S	TV	103
RM-609	TV	103
RM-610	TV	101
RM-611	TV	101
RM-613	TV	101
RM-613S	TV	101
RM-613ST	TV	101
RM-614	TV	101
RM-615P	TV	101
RM-620	TV	101
RM-621	TV	101
RM-622	TV	101
RM-623	TV	101
RM-624	TV	101
RM-625	TV	101
RM-630	TV	101
RM-631	TV	101
RM-632	TV	101
RM-633	TV	101
RM-634	TV	101
RM-635	TV	101

Модель	Устр-во	Код
RM-636	TV	101
RM-637	TV	101
RM-637C	TV	105
RM-640	TV	102
RM-641A	TV	102
RM-642A	TV	102
RM-644	TV	102
RM-646	TV	102
RM-649	TV	102
RM-650	TV	102
RM-651	TV	102
RM-652	TV	102
RM-653	TV	102
RM-654	TV	102
RM-655	TV	102
RM-656A	TV	102
RM-657	TV	102
RM-658	TV	102
RM-661	TV	102
RM-661A	TV	102
RM-662	TV	102
RM-663	TV	102
RM-664	TV	102
RM-665	TV	102
RM-668	TV	102
RM-669	TV	107
RM-670	TV	102
RM-671	TV	102
RM-672	TV	102
RM-673	TV	102
RM-674	TV	102
RM-676	TV	102
RM-677A	TV	102
RM-677C	TV	102
RM-679MTP	TV	104
RM-681	TV	108
RM-682	TV	108
RM-683	TV	108
RM-684	TV	108
RM-685	TV	108
RM-687B	TV	102
RM-687C	TV	102
RM-688	TV	107
RM-689	TV	107
RM-694	TV	107

Модель	Устр-во	Код
RM-698 (TV)	TV	107
RM-698 (VTR)	VCR	201
RM-698 (VTR1)	VCR	202
RM-698 (VTR2)	VCR	203
RM-698/II	TV	108
RM-717A	TV	107
RM-724	TV	107
RM-802	TV/VCR	109
RM-803	TV/VCR	109
RM-811 (TV)	TV	104
RM-811 (VTR1)	VCR	201
RM-811 (VTR2)	VCR	202
RM-811 (VTR3)	VCR	203
RM-816	TV	107
RM-817	TV	107
RM-818	TV	107
RM-821	TV	107
RM-826	TV	108
RM-827B	TV	102
RM-827S	TV	102
RM-827T	TV	102
RM-828	TV	107
RM-830 (TV)	TV	105
RM-830 (VTR)	VCR	201
RM-830 (VTR1)	VCR	202
RM-830 (VTR2)	VCR	203
RM-831	TV	105
RM-832 (TV)	TV	105
RM-832 (VTR)	VCR	201
RM-832 (VTR1)	VCR	202
RM-832 (VTR2)	VCR	203
RM-833	TV	105
RM-834	TV	108
RM-836	TV	105
RM-837	TV	105
RM-838	TV	105
RM-839	TV	105
RM-841	TV	108
RM-842	TV	107
RM-845P (TV)	TV	106
RM-845P (VCR)	VCR	203
RM-845T	TV	107
RM-846	TV/VCR	109
RM-847	TV/VCR	109
RM-849S	TV	107

Модель	Устр-во	Код
RM-849T	TV	107
RM-857	TV	106
RM-859	TV/VCR	109
RM-860	TV	106
RM-862 (MDP)	VCR	213
RM-862 (TV)	TV	105
RM-862 (VTR1)	VCR	201
RM-862 (VTR2)	VCR	202
RM-862 (VTR3)	VCR	203
RM-863	TV/VCR	109
RM-864	TV	105
RM-869	TV	107
RM-870	TV	107
RM-873	TV	106
RM-883	TV	106
RM-886	TV	105
RM-887	TV	106
RM-889	TV	106
RM-891	TV	106
RM-892	TV	106
RM-916 (DVD)	AUX, CD, DVD	304
RM-916 (TV)	TV	106
RM-916 (VTR1)	VCR	201
RM-916 (VTR2)	VCR	202
RM-916 (VTR3)	VCR	203
RM-932 (DVD)	AUX, CD, DVD	304
RM-932 (TV)	TV	106
RM-932 (VCR)	VCR	203
RM-934 (DVD)	AUX, CD, DVD	304
RM-934 (TV)	TV	106
RM-934 (VCR)	VCR	203
RM-936 (DVD)	AUX, CD, DVD	304
RM-936 (TV)	TV	106
RM-936 (VCR)	VCR	203
RM-938 (DVD)	AUX, CD, DVD	304
RM-938 (TV)	TV	106
RM-938 (VCR)	VCR	203
RM-940 (TV)	TV	106
RM-940 (VCR)	VCR	203
RM-943 (DVD)	AUX, CD, DVD	304
RM-943 (TV)	TV	106
RM-943 (VCR)	VCR	209, 210
RM-944	TV	106
RM-945 (DVD)	AUX, CD, DVD	304
RM-945 (TV)	TV	106

* По каталогу «IRC»

Коды пульта IRC 21 F

Коды к TV, VCR, AUX устройствам марки SONY

Модель	Устр-во	Код
RM-946	TV	106
RM-947	TV	106
RM-953	TV	116
RM-954	TV	115
RM-955	TV/VCR	110
RM-956	TV/VCR	110
RM-961 (DVD)	AUX, CD, DVD	304
RM-961 (TV)	TV	106
RM-961 (VTR1)	VCR	201
RM-961 (VTR2)	VCR	202
RM-961 (VTR3)	VCR	203
RM-963 (DVD)	AUX, CD, DVD	304
RM-963 (TV)	TV	106
RM-963 (VTR1)	VCR	201
RM-963 (VTR2)	VCR	202
RM-963 (VTR3)	VCR	203
RM-971	TV	112
RM-972 (DVD)	AUX, CD, DVD	304
RM-972 (TV)	TV	106
RM-972 (VCR)	VCR	209,210
RM-980	TV	112
RM-998	TV	114
RM-ADP001	AUX, CD, DVD	323
RM-ADP003	AUX, CD, DVD	323
RM-ADU047	AUX, CD, DVD	323
RM-ADU126	AUX, CD, DVD	323
RM-AMU001	AUX, CD, DVD	322
RM-AMU006	AUX, CD, DVD	331
RM-ANU005 (DVD)	AUX, CD, DVD	323
RM-ANU005 (TV)	TV	113
RM-C810	TV/VCR	109
RM-C813	TV/VCR	109
RM-C814	TV/VCR	110
RM-D10E (CD)	AUX, CD, DVD	328
RM-D10E (MD)	AUX, CD, DVD	329
RM-D195	AUX, CD, DVD	328
RM-D29M (CD)	AUX, CD, DVD	328
RM-D29M (MD)	AUX, CD, DVD	329
RM-D325	AUX, CD, DVD	328
RM-D47M (CD)	AUX, CD, DVD	328
RM-D47M (MD)	AUX, CD, DVD	329
RM-D7M (CD)	AUX, CD, DVD	328
RM-D7M (MD)	AUX, CD, DVD	329
RM-D820	AUX, CD, DVD	328
RM-D90	AUX, CD, DVD	328

Модель	Устр-во	Код
RM-EA001	TV	106
RM-EA002	TV	106
RM-ED002	TV	113
RM-ED005	TV	113
RM-ED006 (TV)	TV	113
RM-ED007	TV	113
RM-ED009	TV	113
RM-ED011	TV	113
RM-ED012 (TV)	TV	113
RM-ED047	TV	118
RM-ED053	TV	118
RM-ED058	TV	118
RM-GA002	TV	106
RM-GA003	TV	106
RM-GA019	TV	118
RM-K1T	TV	107
RM-PJM10	AUX, CD, DVD	301
RMS-03 (TV)	TV	107
RMS-03 (VCR)	VCR	203
RM-S33 (CD)	AUX, CD, DVD	333
RM-S33 (MD)	AUX, CD, DVD	332
RM-S33 (TAPE)	AUX, CD, DVD	334
RM-S51 (CD)	AUX, CD, DVD	333
RM-S51 (TAPE)	AUX, CD, DVD	334
RM-S61 (CD)	AUX, CD, DVD	333
RM-S61 (TAPE)	AUX, CD, DVD	334
RM-S71 (CD)	AUX, CD, DVD	333
RM-S71 (TAPE)	AUX, CD, DVD	334
RM-S755 (CD)	AUX, CD, DVD	333
RM-S755 (TAPE)	AUX, CD, DVD	334
RM-SC3	AUX, CD, DVD	331
RM-SP240	AUX, CD, DVD	309
RM-SP320	AUX, CD, DVD	323
RM-SP800	AUX, CD, DVD	309
RM-SR210	AUX, CD, DVD	331
RM-SS200	AUX, CD, DVD	309
RM-SS300	AUX, CD, DVD	310
RM-SS800	AUX, CD, DVD	303
RM-SS880	AUX, CD, DVD	302
RMT-146	VCR	201
RMT-152	VCR	201
RMT-251	VCR	201
RMT-445	VCR	202
RMT-AH101U	AUX, CD, DVD	336
RMT-B127P	AUX, CD, DVD	335

Модель	Устр-во	Код
RMT-D100A	AUX, CD, DVD	304
RMT-D108A	AUX, CD, DVD	306
RMT-D120P	AUX, CD, DVD	306
RMT-D126P	AUX, CD, DVD	305
RMT-D130A	AUX, CD, DVD	305
RMT-D141P	AUX, CD, DVD	305
RMT-D157P	AUX, CD, DVD	305
RMT-D166P	AUX, CD, DVD	305
RMT-D175P	AUX, CD, DVD	305
RMT-D230P	AUX, CD, DVD	330
RMT-D249P	AUX, CD, DVD	330
RMT-TX100E	TV	118
RMT-TX101E	TV	118
RMT-V100D	VCR	209,210
RMT-V109B	VCR	209,210
RMT-V110A	VCR	209,210
RMT-V115A	VCR	209,210
RMT-V125D	VCR	209,210
RMT-V127A	VCR	205,206
RMT-V127A (VTR1)	VCR	207,208
RMT-V127A (VTR2)	VCR	209,210
RMT-V132J	VCR	209,210
RMT-V136	VCR	209,210
RMT-V136J	VCR	209,210
RMT-V141F	VCR	209,210
RMT-V141K	VCR	209,210
RMT-V145A	VCR	209,210
RMT-V155H (TV)	TV	106
RMT-V155H (VCR)	VCR	209,210
RMT-V159D (TV)	TV	106
RMT-V159D (VCR)	VCR	209,210
RMT-V173B	VCR	209,210
RMT-V173C	VCR	209,210
RMT-V179	VCR	209,210
RMT-V179B	VCR	209,210
RMT-V181B	VCR	209,210
RMT-V181E	VCR	209,210
RMT-V181F	VCR	209,210
RMT-V181G	VCR	209,210
RMT-V181N	VCR	209,210
RMT-V197	VCR	212
RMT-V198C	VCR	209,210
RMT-V198D	VCR	209,210
RMT-V198F	VCR	209,210
RMT-V212A	VCR	209,210

Модель	Устр-во	Код
RMT-V216B (TV)	TV	106
RMT-V216B (VCR)	VCR	209,210
RMT-V223C	VCR	212
RMT-V248C (TV)	TV	106
RMT-V248C (VCR)	VCR	212
RMT-V257B	VCR	212
RMT-V259	VCR	212
RMT-V266A	VCR	212
RMT-V288B	VCR	212
RMT-V353B (VTR1)	VCR	205,206
RMT-V353B (VTR2)	VCR	207,208
RMT-V353B (VTR3)	VCR	209,210
RMT-V373 (VTR)	VCR	205,206
RMT-V373 (VTR1)	VCR	207,208
RMT-V373 (VTR2)	VCR	209,210
RMT-V405 (TV)	TV	106
RMT-V405 (VCR)	VCR	212
RMT-V406	VCR	212
RMT-V407A	VCR	212
RMT-X1000C (VTR1)	VCR	205,206
RMT-X1000C (VTR2)	VCR	207,208
RMT-X1000C (VTR3)	VCR	209,210
RM-V242	VCR	204
RM-W100	TV	106
RM-W104	TV	106
RM-W105 (AUX)	AUX, CD, DVD	309
RM-W105 (TV)	TV	106
RM-Y1103 (DVD)	AUX, CD, DVD	304
RM-Y1103 (TV)	TV	106
RM-Y1103 (VCR)	VCR	209,210
RM-Y119 (TV)	TV	106
RM-Y126	TV/VCR	111
RM-Y183 (DVD)	AUX, CD, DVD	304
RM-Y183 (TV)	TV	106
SOME MODELS	VCR	211
SZ653-2	AUX, CD, DVD	321
TV-DVD-01	TV/AUX	117
XF-402	TV/AUX	327

Коды к TV устройствам различных марок

Марка	Код
AEG	544
AIWA	502, 503, 523, 528, 579, 634, 678, 710, 712, 716
AKAI	501, 503, 512, 516, 520, 522, 524, 525, 537, 538, 540, 545, 546, 547, 550, 571, 572, 582, 583, 584, 585, 598, 608, 613, 626, 652, 673, 691, 704, 722
AKIRA	511, 514, 516, 524, 525, 537, 538, 541, 545, 547, 556, 577, 586, 594, 597, 598, 601, 623, 626, 629, 631, 649, 666, 680, 689, 690, 693, 717
AMCOL	501, 525, 545
ANITECH	501, 525, 726
ATLANTA	501
AVEST	537, 538, 539
BANG & OLUFSEN	728
BBK	522, 551, 594, 597, 684, 701
BEKO	525, 530, 535, 559, 723
BIGSTON	501, 503
BLAUPUNKT	512
BORK	525, 547, 646
BRAND	711
BROKSONIC	501
CAMERON	550, 567, 675, 697, 702
CASIO	529, 705, 706
CHANGHONG	516, 642
CLATRONIC	501
CONTEC	501, 603, 604, 613
CORTLAND	644
CROWN	501, 503, 511, 524, 525, 530, 571
DAEWOO	501, 508, 518, 520, 525, 526, 536, 538, 539, 546, 565, 571, 576, 598, 613, 685, 687, 692
DARTLAND	501
DAYTRON	501
DIGITAL	547
DISTAR	562, 616
DNS	596, 702, 708
ELEKTA	501, 503, 520, 525, 527, 615
ELEKTRONIKA	583
ELENBERG	538, 545, 550, 565, 567, 579, 581, 644, 655, 676, 683, 717
EPLUTUS	537, 644, 677, 682, 697, 724
ERC	537, 631
ERISSON	511, 514, 516, 525, 526, 537, 538, 541, 550, 556, 561, 568, 586, 596, 599, 623, 626, 629, 631, 711, 712, 714
EVGO	538, 540, 630
FINLUX	501, 511, 583, 589, 608
FUJITSU	544, 573
FUNAI	501, 502, 503, 504, 505, 525, 537, 538, 581, 603
FUSION	596, 642, 705, 706
GBS	501, 520, 525, 571, 583
GENERAL	537, 556
GOLD STAR - LG	501, 512, 518, 525, 527, 559, 570, 583, 584, 589, 609, 613, 642, 706
GRUNDIG	501, 512, 525, 606, 662, 718, 719
HAIER	518, 526, 561, 574, 657, 667, 669, 707
HAPPY	501
HCM	501, 525
HELIX	701, 702
HIL	503
HITACHI	501, 515, 518, 522, 525, 537, 544, 548, 554, 578, 584, 587, 588, 604, 613, 640
HORIZONT	525, 540, 545, 550, 559, 583, 672
HPC	546
HYUNDAI	516, 522, 525, 526, 537, 540, 541, 546, 547, 550, 556, 580, 596, 597, 599, 626, 642, 650, 655, 705, 711, 714, 717
INNO-HIT	501, 525, 571
IRBIS	596, 714
IVA (MBA)	537, 561, 637
IZUMI	516, 537, 596, 663, 691, 695, 705, 711
JINLIPI	537, 637
JVC	513, 515, 593, 604, 727
KAMACROWN	571
KANSAI	501, 525
KENSTAR	516
KITT	613, 726
KONKA	560, 581, 616, 717
LOEWE	542, 709
MITSUBISHI	501, 520, 522, 525, 604, 611, 722, 728
MIYOTA	537, 644, 656
MTC	501, 583
MULTITECH	501
MYSTERY	516, 537, 597, 642, 650, 653, 701, 702
NASH	537
NEC	501, 517, 520, 526, 552, 604, 625, 722
NESCO	501, 525
NOKIA	519, 584, 610, 614, 616
NOVA	501, 616, 638
NOVEX	516, 546, 599
OMEGA	501, 571
ONIDA	513
ONIKS	516, 525, 537, 545, 546, 547
ONWA	524, 525
ORBITA	635
ORION	501, 503, 506, 507, 509, 516, 525, 528, 537, 591, 603, 617, 619, 627, 641, 643, 664, 715, 720, 722
ORSON	526, 537
PANASONIC	512, 531, 532
PHILIPS	501, 511, 524, 525, 540, 549, 628, 639, 707
PHOENIX	613
PHOENIX GOLD	708
PIONEER	555, 566, 575, 647, 666
PIXELVIEW	525
POLAR	525, 526, 537, 538, 540, 543, 547, 581, 596, 599, 663, 664, 683, 703, 711, 717
POLAROID	525
POWER VISION	501
PRESTIGIO	564, 656
PRIMA	522, 547
PROLOGY	653, 655
RADUGA	525, 545, 569, 583
RAINFORD	525, 537, 544, 545
RECOR	511, 525

Коды к TV устройствам различных марок

Марка	Код
REKORD	520, 525, 526, 537, 538, 539, 545, 547, 725
RFT	535, 728
ROADSTAR	501, 508, 525, 571
ROLSEN	503, 516, 525, 537, 538, 540, 543, 546, 564, 576, 592, 594, 596, 649, 656, 669, 684, 714
ROVERSCAN	662
RUBIN	504, 516, 525, 537, 546, 583, 619, 665, 714
SABA	510, 521, 602
SALORA	584
SAMSUNG	501, 525, 526, 529, 563, 580, 595, 608, 612, 613, 622, 641, 645, 688, 723
SANSUI	524, 525, 538, 556, 695
SANYO	501, 519, 522, 525, 530, 540, 550, 558, 604, 608, 610, 618, 621, 696, 722
SATELLITE	616
SCARLETT	541, 545
SCHNEIDER	525, 540, 571
SETRO	520
SHARP	526, 544, 548, 604, 707, 721
SHERION	616
SHIVAKI	501, 503, 508, 516, 518, 520, 525, 526, 527, 536, 538, 539, 540, 545, 546, 547, 550, 556, 580, 583, 585, 596, 599, 609, 619, 630, 632, 635, 636, 643, 644, 664, 681, 694
SIEMENS	512, 525, 660, 726
SIESTA	501, 537, 637
SILELIS	613
SILVER	633
SITRONICS	503, 516, 525, 537, 538, 540, 543, 545, 594, 626, 629, 661, 671, 672, 674, 679, 680, 686
SOKOL	516, 525, 547, 635
SONY	533, 604, 659, 722
SPEKTR	525, 538, 668
START	525, 537, 545, 546, 547
STASSFURT	535, 618
STINOL	525
SUPER	537, 561, 644, 653, 654, 655, 666, 677, 682, 724
SUPRA	501, 508, 516, 518, 520, 525, 527, 529, 536, 537, 541, 563, 579, 580, 596, 597, 612, 643, 687, 690, 705, 706, 712, 713
SUZUKI	516, 556
TCL	538, 540
TECHNO	501, 525, 538, 544, 546, 556, 568, 579, 596, 599, 644, 664, 703
TECKTON	522, 582, 601, 669, 670
TELEFUNKEN	510, 521, 590, 602, 605, 708
TELEVISION	501, 525, 616
THOMSON	509, 510, 521, 550, 579, 602, 624, 642, 702
TOSHIBA	516, 553, 604, 651, 699
TRONY	516, 525, 537, 538, 550
TVT	511, 525, 530, 535, 538, 583, 586, 620, 723
UNITED	525
VARTA	642
VESTEL	525, 544, 556, 583, 619
VIEWSONIC	557, 698
VITA	547
VITEK	537, 650
VITYAS	525
VOLNA (ВОЛНА)	635
VR	516, 537, 702, 714
WALTHAM	503, 509, 511, 583, 584, 607, 613
XORO	522, 526, 545
НЕИЗВЕСТНАЯ МАРКА	546, 574, 596, 648, 656, 666, 711

Коды к SAT устройствам различных марок

Марка	Код
AIR TONE	968
ALFA GOLD	828
AMINO (СТРИМ)	829, 902
ARION	835
ASTON	811
BBK	931
BIG SAT	839, 840, 903, 936
BIG STAR	965
CADENA	958, 962
CONTINENT	886, 975
COSHIP	855
DAEWOO	872
D-COLOR	946
DELTA SYSTEMS	985
DIVISAT	957, 958
D-LINK	923
DNS	968
DR.HD	983
DRE (GENERAL SATELLITE)	804, 868, 888, 907, 933, 954
DREAM	819
DUNE	927, 934
ECHOSPACE	862
ECHOSTAR	808, 809, 822
ELTEX	987
EUROSKY	840, 880
EUROSTAR	863
EUSTON	825
EVO	965
GALAXY INNOVATIONS	878, 881, 908, 911, 912, 917, 924
GLOBALTEQ	833
GLOBO	909, 915, 925, 935, 945, 956, 973, 999
GOLD STAR - LG	871
GOLDEN INTERSTAR	821, 841, 879, 918
GOLDEN MEDIA	847, 912
GOLDMASTER	911
HITACHI	824, 832
HIVION	929
HOME	968
HOMECAST (ВОЛЯ)	820, 831, 836
HUMAX	803, 804, 823, 848, 860, 861, 905, 949
HYUNDAI	968
ID DIGITAL	804
INTEK	984
KAON	820
KOSMOS	855, 856
LANS	970
LOCUS	946
LUMAX	852, 873, 907, 913, 965, 994
MAG	988
MEDIA COM	825
MOTOROLA	883, 884, 901
MYSTERY	910, 997
NDS	814
NEXT	864
NOKIA	813
NOT	941
ONLIME	905
OPENBOX	827, 835, 869, 870, 911, 990, 991
OPENTECH	972
OPENTEL	865
ORBITA	946, 995
ORIEL	887, 926, 941, 948, 955, 986
PACE	801, 932, 953
PATIX DIGITAL	992
PAUXIS	842, 859
PHILIPS	857, 899
PIONEER	851
POLAR	858
REFLECT	959
RIKOR	916, 947
ROLSEN	930, 941, 942, 961
SAGEMCOM	906
SAMSUNG	803, 810, 812, 854
SEG	818
SEZAM	882
SKY VISION	952, 966, 977, 982
SKYMASTER	830
SKYWAY	911
SKYWORTH	989
STAR	833
STAR TRACK	826, 835, 943
STARNET	885
STRONG	805, 806, 815, 816, 817, 828, 830, 914
SUNNIWELL	875
SUPERBOX	903
SUPERMAX	821, 866, 880, 924
SUPRA	950, 960, 962
TECHNOSAT	852, 853
TEL-ANT	960
TELEFUNKEN	961, 968
TESLER	926
TOP BOX	965
TOPFIELD	837, 838, 877, 891
TOSHIBA	876
TV STAR	967
TVJET	946, 976
VESTEL	820, 824
VU+	919, 920, 921, 922

Коды к SAT устройствам различных марок

Марка	Код
WORLD VISION	821, 928, 951, 952
XSAT (НТВ+)	801, 802, 807, 906, 972, 984, 998
YUXING	904
ZYXEL	874
БИЛАЙН	883, 884, 901, 923
ВОЛГАТЕЛЕКОМ	842, 843, 844, 845, 846, 847, 849, 850, 858, 867
ДОМ.RU	820, 905
ДОМОЛИНК	874, 904
МТС	855, 964, 974, 979, 980, 989, 993
НЕИЗВЕСТНАЯ МАРКА	834, 835, 842, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 903, 904, 937, 938, 939, 940, 944, 945, 969, 971, 978, 996
РОСТЕЛЕКОМ	874, 904, 923, 963
СИГНАЛ	968
ТЕЛЕКАРТА	867, 909, 973
ТЕЛЕЦИФРА	968

Функции кнопок пульта IRC 21 F к TV устройствам

Кнопки пульта IRC 21 F	Код 101		Код 102		Код 103		Код 104		Код 105	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			☐+				REPLAY; ☐		+; ▲	
AUDIO; NICAM			☐+		▲ N		SURROUND			
VIDEO; SYS	☐; VIDEO		☐+		● N		VIDEO 1	VIDEO 2	SELECT	
☐; ZOOM							SWAP; ☐			
▼; TV	TV		TV				TV	TV SYS; ☐	-; ▼	TV
☐; ↗	☐; A/B						P IN P; ☐	PRESET; ↗	☐/☐	↗
☐; LOCK	NORM; RESET		↔; ◀		⏮; ○ N		FREEZE; ☐	↔; ◀	☐/☐	↔; ◀
▲; FAV			√				↑	◇	↑	☐
○	○		○		○		○		○	
AV			☐		TV/VIDEO		AV	☐	☐/☐	☐
✳	✳		✳		MUTE; ✳		✳		✳	
MENU			MENU				☐		MENU	
EXIT							OFF; ☐		←	
▲	☐+		+		☐+		☐+		▲	
◀	○-		☐-		○-		SEARCH -; ☐-		◀	
OK			SELECT				A/B		OK	ENTER
▶	☐+		☐+		○+		SEARCH+; ☐+		▶	
▼	☐-				☐-		☐-		▼	
✳; SETUP			PIC MODE				COL SYS		☐	
♪; TITLE			☐				LOUDNESS; √		♪	
☐	TEXT		☐/☐				☐/☐	☐	☐	
GUIDE							PROGR/INDEX	AVTO PROGR	☐	
☐	TIME; TEXT CLR		SLEEP; TIMER		TIME		☐		TIMER; SLEEP	ON TIMER
☐	MIX		SUBTITLE				SUBTITLE; ☐		☐	
RED; ●	-		RED	○-	☐-		RED	VIDEO 3	RED; ◀	
GREEN; ►			GREEN	○+	☐+		GREEN	DEMO	GREEN; ▲	
YELLOW; ◀	L ⏮; TP OFF		YELLOW	☐-	☐-		YELLOW	SPLIT	YELLOW; ▶	
BLUE; ►	R ⏮; TP ON		BLUE	☐+	☐+		BLUE	STROBE	BLUE; ▼	
☐	☐/☐		☐		DISPLAY		☐; ☐	POSITION; ☐	☐	
☐					P/C		P/C		C	
VOL -	↘		↘		VOL -; ↘		VOLUME-		↘	
VOL +	↗		↗		VOL +; ↗		VOLUME+		↗	
CH V; ◀	PROGR -; HOLD		PROGR -				PROGR/CH-	PROGR -	PROGR -	
CH A; ▶	PROGR +; REVEAL		PROGR +				PROGR/CH+	PROGR +	PROGR +	
└; SAT	10		1-		-/-		-/-	1; ☐	-/-	SAT
CLEAR; X	20		2-		11		CLEAR; C...	2; ☐	☐; ☐	
◀; ●			☐		12		☐/☐		☐	
▶; i			☐		13		☐		WHITE; ☐	
▶; ?			A/B; ☐		14		☐		☐; ☐	
■; ✳			☐		15		☐		☐; ☐	
; ⏮			☐		16/AV		☐		☐	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 10		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 21 F к TV устройствам

Кнопки пульта IRC 21 F	Код 106		Код 107		Код 108		Код 109		Код 110	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	HD/DVD	ANT	☐		☐+		TAPE SPEED		TAPE SPEED	
AUDIO; NICAM	AUDIO; ☐	SURROUND; ☐; ♪	☐	♫	☐+		1		G-CODE; SHOW V.	
VIDEO; SYS	MEM. STICK; ☐	WEGA THEATRE	PIC MODE		☐+		SHOW VIEW		PIC MODE	
☐; ZOOM	☐	WIDE/V-ZOOM	☐		☐+		X2		☐	
▼; TV	☐; TV	TV	☐		TV		☐		☐	
☐; ↗	☐/☐	PRESET	☐		☐		1/5		GAME	
☐; LOCK	☐/☐	⏮; RESET	↔; ◀		↔; ◀		COUNTER RESET		COUNTER RESET	
▲; FAV	FAVORITE; ♡	↑	◇		◇		▲; EJECT		▲; EJECT	
○	○; POWER		○		○		POWER		○; U/○	
AV	☐; VIDEO	☐; ☐	☐	☐	☐-		☐/☐; INPUT SEL.		☐; ☐/☐	
✳	✳		✳		✳		✳; MUTING		MUTE; ✳	
MENU	MENU; WEGA GATE	SELECT	MENU		☐		MENU	TIMER REC ON/OFF	MENU	
EXIT	RETURN		WAKE UP; INDEX		C		←	TIMER REC CLEAR		
▲	▲; +		▲		☐+		+; ▲	TRACKING ▲	▲	
◀	◀		◀		☐-		◀	SEARCH ☐	◀	
OK	OK; ENTER; RETUR.	ENTER	OK	ENTER	OK		OK; ENTER	SEARCH ☐	ENTER; OK	
▶	▶		▶		☐+		▶	SEARCH ☐	▶	
▼	▼; -		▼		☐-		-; ▼	TRACKING ▼	▼	
✳; SETUP	PIC MODE; ✳	✳	SELECT	☐	PIC MODE		PICTURE MODE		✳	
♪; TITLE	SOUND MODE; ♪	♪	☐	↓	A/B		TRACK. AUTO/MAN.		A/B	
☐	☐; TEXT	☐	☐/☐		☐/☐		☐		☐	
GUIDE		CH GUIDE	A/B; ☐		☐		QUICK TIMER		TIMER REC ON/OFF	
☐	SLEEP; TXT CLR; ☐	☐	MENU; TIMER		○	WAKE UP	SLEEP	ON TIMER	○; SLEEP	TIMER REC
☐	DRC-MF; DRC MODE	☐/☐	☐		☐		TIMER ON SCREEN	☐	ON TIMER	
RED; ●	RED; ♪	☐	RED; ◀	○	RED	☐	RED	● REC	RED	● REC
GREEN; ►	GREEN; ✳	☐	GREEN; ▲	☐	GREEN	☐	GREEN		GREEN; ✳	
YELLOW; ◀	YELLOW; ☐	☐; FREEZE	YELLOW; ▶	☐/☐	YELLOW	☐	YELLOW		YELLOW	
BLUE; ►	BLUE; ☐	☐	BLUE; ▼	☐/☐	BLUE	√	BLUE		BLUE; ☐	
☐	☐; ☐		☐; ☐		☐; ☐		☐; ☐; DISPLAY		☐; ☐/☐	
☐	☐; JUMP; -/-		C		P/C		REPLAY		☐	
VOL -	↘		↘		↘		VOL -		VOL -; ↘	
VOL +	↗		↗		↗		VOL +		VOL +; ↗	
CH V; ◀	PROGR -; ☐		PROGR -; ☐	☐-	PROGR -		PROGR -	INDEX SEARCH ⏮	PROGR -; ☐	INDEX ⏮
CH A; ▶	PROGR +; ☐		PROGR +; ☐	☐+	PROGR +		PROGR +	INDEX SEARCH ⏮	PROGR +; ☐	INDEX ⏮
└; SAT	-/-		-/-		-/-		-/-		-/-	
CLEAR; X	☐	TIME; TXT CLR	C O O	☐; ☐	☐/☐		C		C	
◀; ●	PIP PROGR -		☐/☐		☐		◀; REW		◀; REW	
▶; i	WAKE UP; ☐; ☐	PROGR INDEX	☐		☐		▶; PLAY		▶	
▶; ?	PIP PROGR +		☐		☐		▶; FF		▶; FF	
■; ✳	☐; HOLD	RESET	☐		☐		STOP; ■		■	
; ⏮	A/B; ENLARGE; ☐	CENTER SP	☐		☐		; PAUSE		; PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 21 F к TV устройствам

Кнопки пульта IRC 21 F	Код 111		Код 112		Код 113		Код 114		Код 115	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	TAPE SPEED		⊕; CONTRAST +		ANALOG		HD/DVD			
AUDIO; NICAM			S/VIDEO		A/B; AUDIO				SURROUND	
VIDEO; SYS	COUNTER / REMAIN		VIDEO		TOOLS; OPTIONS					
☐; ZOOM			ASPECT							
▼; TV			⊖; CONTRAST -		DIGITAL					
☐; ↔	AVTO / MANUAL		☐		SYNC MENU					
☐; LOCK	COUNTER RESET				☐; PC		RESET			
▲; FAV	EJECT				♥				FAVORITE	
⊖	POWER		POWER STBY		I/O		I/O	VIDEO I/O	I/O	
AV	INPUT SELECT		POWER ON		☐; ☐		☐; ☐		☐; ☐	
✳	MUTING		MUTING		✳		✳		✳	
MENU	MENU		MENU		MENU; HOME		MENU		MENU	
EXIT	RETURN				RETURN; ↵		DRC-MF			
▲	▲+		↑		↑		↑		+	
◀	▼ SLOW		←		←		←			
OK	ENTER		ENTER		ENTER; OK		OK		ENTER	
▶	▲ NORMAL		→		→		→			
▼	▼-		↓		↓		↓			
✳; SETUP			PICTURE		✳		✳		PIC MODE	
♪; TITLE			RGB/YUV		♪; SOUND FIELD	THEATRE	♪		SOUND MODE	
☐	MARK		OPTION		☐		☐			
GUIDE			ON ID MODE		☐; GUIDE		PROG INDEX			
⊖	SLEEP		OFF ID MODE		⊖		⊖			
☐	TIMER ON SCREEN		SET ID MODE		☐		☐			
RED; ●	ERASE	● REC	INPUT 1		RED	● REC	RED; ✳		RED; +	
GREEN; ▨	INDEX		INPUT 2		GREEN		GREEN; ♪		GREEN; MENU	
YELLOW; ◀	BACK SPACE		OPTION 1		YELLOW		YELLOW; ☐		YELLOW; -	
BLUE; ▨	SLOW		OPTION 2		BLUE		BLUE; ☐		BLUE; ENTER	
☐	DISPLAY		DISPLAY		☐; ☐		☐; ☐		☐; ☐	
☐	JUMP				☐		JUMP		JUMP	
VOL -	VOL -		↔; VOL -		↔		↔		↔	
VOL +	VOL +		↔+; VOL +		↔+		↔+		↔+	
CH V; ◀	CH -		↓		PROGR -; ☐	◀	PROG -		PROGR -	
CH A; ▶	CH +		↑		PROGR +; ☐	▶	PROG +		PROGR +	
✳; SAT			☐; BRIGHT		☐		-/-		-/-	
CLEAR; X	CLEAR		☐; CHROMA		☐		☐		☐	
◀; ●	◀				◀; ◀/◀					
▶; i	▶		H SHIFT		▶		☐		☐	
▶; ?	▶		V SHIFT		▶; ▶/▶		☐		☐	
■; X	■		H SIZE				☐		☐	
■; ⬇	■		V SIZE		■	■ REC STOP	A/B; ☐		A/B; ☐	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	■ REC PAUSE	1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 21 F к TV устройствам

Кнопки пульта IRC 21 F	Код 116		Код 117		Код 118	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD					THEATRE	
AUDIO; NICAM	SURROUND				AUDIO	MEDIA
VIDEO; SYS					DIGITAL; ANALOG	3D
☐; ZOOM					☐	
▼; TV	☐				☐	TV
☐; ↔	☐				☐	TRACK ID; REL.S-
☐; LOCK					TV PAUSE	
▲; FAV	FAVORITE				♥	
⊖			⊖		I/O; ⊖	
AV	☐; ☐		MODE		☐; ☐	
✳			✳		☐	
MENU	MENU		MENU		HOME; MENU	SYNC MENU
EXIT					EXIT	
▲	▲; PIP Progr +		▲		▲	
◀	◀		◀		◀	
OK	ENTER		ENTER		OK	
▶	▶		▶		▶	
▼	▼; PIP Progr -		▼		▼	
✳; SETUP	PIC MODE				OPTIONS; TOOLS	SCENE
♪; TITLE	SOUND MODE				TV; RADIO	TITLE LIST
☐	☐				☐	DISCOVER
GUIDE					GUIDE; ☐	NETFLIX
⊖	⊖				SEN; APPS	HELP
☐	☐				☐	ACTION MENU
RED; ●	RED; ☐		REPEAT		RED	●; REC
GREEN; ▨	GREEN; ☐				GREEN	
YELLOW; ◀	YELLOW; ☐		◀; PREV		YELLOW	FOOTBALL
BLUE; ▨	BLUE; ☐		▶; NEXT		BLUE	
☐	☐; ☐				☐; ☐	SOCIAL VIEW
☐	JUMP		☐		RETURN; BACK; ↵	☐
VOL -	↔		VOL -		↔	
VOL +	↔+		VOL +		↔+	
CH V; ◀	PROGR -		CH -	◀; PREV	PROGR -; ☐	◀
CH A; ▶	PROGR +		CH +	▶; NEXT	PROGR +; ☐	▶
✳; SAT	-/-		-/-		?; i-MANUAL	
CLEAR; X	☐				☐	
◀; ●	◀		◀; FR		◀; ◀/◀	
▶; i	☐		▶		▶	
▶; ?	☐		▶; FF		▶; ▶/▶	
■; X	☐		STOP		■	
■; ⬇	A/B; ☐		■		■	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 21 F к VCR устройствам

Кнопки пульта IRC 21 F	Код 201		Код 202		Код 203		Код 204		Код 205	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	SLOW TRACK +						VCR		DATA CODE	
AUDIO; NICAM									AUDIO MONITOR	INSERT AUDIO
VIDEO; SYS	SYNC EDIT						VIDEO 1		VIDEO+	INSERT VIDEO
☐; ZOOM									CLOCK/COUNTER	
▼; TV	SLOW TRACK -						TV/VIDEO		TV/VTR	☐
☐; ↗	COUNTER MEMO								SEARCH SELECT	FUNC MEMO
☐; LOCK	COUNTER RESET				COUNTER RESET				COUNTER RESET	
▲; FAV	EJECT		EJECT		EJECT		EJECT		EJECT	
○	○		○		○		POWER		POWER	
AV							VIDEO 2		VCR	INPUT SELECT
✳									MUTE	
MENU	MENU		MENU		MENU		MENU		MENU	○ (TV)
EXIT							D.SKIP			
▲	SPEED +								MENU ▲	SHUT. EDIT ▶
◀	SEARCH ◀◀								MENU ◀	FRAME ◀
OK							ENTER		EXECUTE	
▶	SEARCH ▶▶								MENU ▶	FRAME ▶
▼	SPEED -								MENU ▼	SHUT. EDIT ◀
✳; SETUP									REC MODE	1
♪; TITLE									CHOIX SYST	X2
☐			AZZER.						TIMER ON SCREEN	I
GUIDE			SVELGIA				PROG		TIMER CHECK	X1/5
☐					QUICK TIMER		TIMER		TIMER	GO-TO ZERO
☐									TIMER CLEAR	X1/10
RED; ●		● REC	X 1/5	● REC	TIMER REC ON/OFF	● REC		● REC	SLOW -	● REC
GREEN; ▶	▶		X 1/10		TIMER REC CLEAR				SLOW +	INDEX
YELLOW; ◀			X2						HI-SPEED REW.;<<<	INDEX MARK
BLUE; ▶	SLOW		▶		▶		▶		▶	INDEX ERASE
☐	INDEX				TIMER ON SCREEN				DATA SCREEN	
☐	P/C		P/C		P/C				JOG SHUT	
VOL -	VOL -		VOL -		-		VOL -		VOL -	SEARCH <<
VOL +	VOL +		VOL +		+		VOL +		VOL +	SEARCH >>
CH V; ◀◀	PROGR -		PROGR -		PROGR -		P -		PROGR -	PROGR - (TV)
CH A; ▶▶	PROGR +		PROGR +		PROGR +		P +		PROGR +	PROGR + (TV)
±; SAT	-/-		-/-		-/-		-/-		-/-	
CLEAR; X									REPLAY	
◀◀; ○	◀◀(REW)		◀◀(REW)		◀◀(REW)		◀◀(REW)		◀◀(REW)	1/2 ☐ ☐
▶; i	▶(PLAY)		▶(PLAY)		▶(PLAY)		▶(PLAY)		▶(PLAY)	
▶▶; ?	▶▶(F.FWD)		▶▶(F.FWD)		▶▶(F.FWD)		▶▶(F.FWD)		▶▶(F.FWD)	☐ ☐
■; ✳	■(STOP)		■(STOP)		■(STOP)		■(STOP)		■(STOP)	
; ⏸	(PAUSE)		(PAUSE)		(PAUSE)		(PAUSE)		(PAUSE)	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 21 F к VCR устройствам

Кнопки пульта IRC 21 F	Код 206		Код 207		Код 208		Код 209		Код 210	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	FRAME ▶		VCR		FRAME ▶		AUDIO DUB	PROGR + (TV)	TRACKING ▲	
AUDIO; NICAM	AUDIO MONITOR		AUDIO MONITOR	INSERT AUDIO	AUDIO MONITOR		AUDIO MONITOR		SHOWVIEW ON	
VIDEO; SYS	PRINT		VIDEO+	INSERT VIDEO			INSERT VIDEO		VIDEO+;SHOW. OFF	
☐; ZOOM			SEARCH SELECT	1			JOG SHUT		WIDE	
▼; TV	FRAME ◀		☐		FRAME ◀		TV/VIDEO	PROGR - (TV)	TRACKING ▼	
☐; ↗	INDEX		DATA CODE	CHOIX SYST	PRINT		FUNC MEMO		SEARCH SELECT	K.PROG
☐; LOCK			COUNTER RESET	HI-SPEED REW.;<<<			COUNTER RESET		AUTO TRACKING	
▲; FAV	EJECT		EJECT	X2	EJECT		EJECT		EJECT	
○	POWER		POWER	○ (TV)	POWER		ON/STANDBY	○ (TV)	ON/STANDBY	
AV	VCR		INPUT SELECT	TV/VTR	VCR		INPUT SELECT		TV/VIDEO	TV/VIDEO
✳			MUTE						5 ENVOI	
MENU	MENU		MENU		MENU		MENU	TAPE SPEED	MENU	
EXIT			JOG SHUT				EXECUTE		KEY/S.D.	
▲	MENU ▲		MENU ▲		MENU ▲		CURSOR ▲	FRAME ▶	CURSOR ▲	
◀	MENU ◀		MENU ◀	SHUT. EDIT ◀	MENU ◀		CURSOR ◀	SHUT. EDIT ◀	CURSOR ◀	
OK	EXECUTE		EXECUTE		EXECUTE		ENTER		ENTER	
▶	MENU ▶		MENU ▶	SHUT. EDIT ▶	MENU ▶		CURSOR ▶	SHUT. EDIT ▶	CURSOR ▶	
▼	MENU ▼		MENU ▼		MENU ▼		CURSOR ▼	FRAME ◀	CURSOR ▼	
✳; SETUP	REC MODE		REC MODE		REC MODE		CHOIX SYST		G-CODE; SHOWV.	
♪; TITLE			FUNC MEMO		INDEX		AUTO TRACKING		DATA CODE	
☐	TIMER ON SCREEN		INDEX	INDEX ERASE	TIMER ON SCREEN		INDEX	I	INDEX	TIMER SET
GUIDE	TIMER CHECK		INDEX MARK	I	TIMER CHECK		INDEX MARK	EFFECT	TAPE SPEED	TIMER CHECK
☐	TIMER		TIMER	X1/5	TIMER		TIMER ON SCREEN	TIMER REC ON/OFF	TIMER ON SCREEN	CLOCK SET
☐	TIMER CLEAR		CLOCK/COUNTER	X1/10	TIMER CLEAR		CLOCK/COUNTER	QUICK TIMER	CLOCK/COUNTER	TIMER CLEAR
RED; ●	SLOW -	● REC	TIMER CHECK	● REC		● REC	INDEX ERASE	● REC	SLOW -	● REC
GREEN; ▶	SLOW +		TIMER CLEAR				FRAME; ▶▶		SLOW +	ONCE
YELLOW; ◀			TIMER ON SCREEN	SLOW -			HI-SPEED REW.;<<<	SLOW -	PRINT	DAILY
BLUE; ▶	▶		▶	SLOW +	▶		▶; SLOW; 1/5	SLOW +	▶; SLOW; 1/5	WEEKLY
☐	DATA SCREEN		DATA SCREEN		DATA SCREEN		DISPLAY		DISPLAY	SCORE
☐	JOG SHUT		REPLAY		JOG SHUT		REPLAY		REPLAY	
VOL -	VOL -		VOL -	FRAME ◀	VOL -	SLOW -	VOL -	TRACKING ▼	VOL -	b
VOL +	VOL +		VOL +	FRAME ▶	VOL +	SLOW +	VOL +	TRACKING ▲	VOL +	#
CH V; ◀◀	PROGR -	◀◀	PROGR -	PROGR - (TV)	PROGR -	◀◀	PROGR -	AMS ◀◀; INDEX ◀◀	PROGR -	FRAME ◀
CH A; ▶▶	PROGR +	▶▶	PROGR +	PROGR + (TV)	PROGR +	▶▶	PROGR +	AMS ▶▶; INDEX ▶▶	PROGR +	FRAME ▶
±; SAT	-/-		-/-	1/2 ☐ ☐	-/-		-/-	X2	-/-	
CLEAR; X			GO-TO ZERO	☐ ☐			1		SKIP	
◀◀; ○	◀◀(REW)		◀◀(REW)	SEARCH <<	◀◀(REW)		◀◀(REW)	SEARCH <<	◀◀(REW)	
▶; i	▶(PLAY)		▶(PLAY)		▶(PLAY)		▶(PLAY)	SYNCHRO PLAY	▶(PLAY)	
▶▶; ?	▶▶(F.FWD)		▶▶(F.FWD)	SEARCH >>	▶▶(F.FWD)		▶▶(F.FWD)	SEARCH >>	▶▶(F.FWD)	
■; ✳	■(STOP)		■(STOP)		■(STOP)		■(STOP)		■(STOP)	
; ⏸	(PAUSE)		(PAUSE)		(PAUSE)		(PAUSE)		(PAUSE)	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 21 F к VCR устройствам

Кнопки пульта IRC 21 F	Код 211		Код 212		Код 213	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	▶					
AUDIO; NICAM			AUDIO MONITOR			
VIDEO; SYS			COUNTER/REMAIN			
☐; ZOOM			WIDE; ☐			
▼; TV	◀					
☐; ↗			SMART SEARCH			
☐; LOCK			COUNTER RESET			
▲; FAV						
⊖	POWER		ON/STANDBY	ON/STANDBY	⊖	
AV			TV/VIDEO	INPUT SELECT		
⌘			EJECT			
MENU			MENU			
EXIT			COMMERCIAL PASS			
▲			▲			
◀			◀			
OK			OK	ENTER		
▶			▶			
▼			▼			
⌘; SETUP			☐; SYNCHRO PLAY			
♪; TITLE			SET			
☐	1/5		☐			
GUIDE	1/10		SP/LP; TAPE SPEED			
⊖	X2		TIMER	QUICK TIMER		
☐			SHOW VIEW			
RED; ●	◀X1	● REC	INDEX SEARCH-;◀◀	● REC		
GREEN; ▶	X1▶		INDEX SEARCH+;▶▶			
YELLOW; ◀	◀		x2			
BLUE; ▶	▶		SLOW; ▶			
☐			DISPLAY			
☐	P/C		REPLAY			
VOL -			VOL -			
VOL +			VOL +			
CH V; ◀◀	P -		PROG -	CH -		
CH A; ▶▶	P +		PROG +	CH +		
±; SAT	-/-		-/-			
CLEAR; X			CLEAR			
◀◀; ●	◀◀(REW)		◀◀; ◀	◀◀		
▶; i	▶(PLAY)		▶; OK	▶		
▶▶; ?	▶▶(F.FWD)		▶▶; ▶	▶▶		
■; X	■(STOP)		STOP; ▼	■		
; ⬇	(PAUSE)		; ▲			
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0			

Функции кнопок пульта IRC 21 F к AUX устройствам

Кнопки пульта IRC 21 F	Код 301		Код 302		Код 303		Код 304		Код 305	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			STEREO/MONO		STEREO/MONO		PROG +		ONE/ALL DISCS	
AUDIO; NICAM			AUDIO		AUDIO		CHANGE AUDIO		⊖; ☐; AUDIO	
VIDEO; SYS			PLAY MODE		PLAY MODE		-		SHUFFLE	
☐; ZOOM			DIMMER		DIMMER		-		ZOOM	☐
▼; TV			BAND		BAND		PROG -		DISK SKIP	
☐; ↗			MEMORY		MEMORY		MODE SEARCH		SEARCH MODE	
☐; LOCK	RESET		ANGLE		ANGLE		CHANGE ANGLE		SEARCH MODE	
▲; FAV			▲		▲		▲; CLOSE/OPEN		☐; ANGLE	
⊖	OFF		⊖	TV I/O	⊖	TV I/O	I/O	POWER (TV)	▲; CLOSE/OPEN	
AV	INPUT		TV/VIDEO		TV/VIDEO		TV/VIDEO		I/O	I/O (TV)
⌘	MUTING; PIC		MUTING		MUTING		MUTING		TV/DVD	☐; TV/VIDEO
MENU	MENU		DVD MENU	AMP MENU	DVD MENU	AMP MENU	MENU		SUR	
EXIT			RETURN; ↶		RETURN; ↶		↶; RETURN		MENU; DVD MENU	
▲	▲		↑		↑		↑; RETURN		↶; RETURN	
◀	◀		←		←		←		↑	
OK	ENTER		ENTER	ENTER	ENTER	ENTER	ENTER; OK		←	
▶	▶		→		→		▶		ENTER	
▼	▼		↓		↓		▼		→	
⌘; SETUP	FUNCTION 1		DVD SETUP		DVD SETUP		DVD MENU		↓	
♪; TITLE	FUNCTION 2		DVD TOP MENU		TITLE		TITLE		PICTURE MODE	
☐	APA		FUNCTION		FUNCTION		CHANGE SUBTITLE		TOP MENU; TITLE	
GUIDE			SOUND FIELD		SOUND FIELD		-		PICTURE NAVI	
⊖			TIME		TIME		ON/OFF SUB-TITLE		PROGRAM	
☐			SUBTITLE		SUBTITLE		-		TIME/TEXT	
RED; ●			REPEAT		REPEAT		-		☐; SUBTITLE	
GREEN; ▶			NAME		NAME		-		←; ◀	
YELLOW; ◀							◀; x2		→; ▶	
BLUE; ▶							▶; x2		REPLAY; INST. REP.	
☐			DISPLAY		DISPLAY		DISPLAY		SLOW PLAY	
☐			DVD DISPLAY		DVD DISPLAY		☐		DISPLAY	
VOL -	VOLUME -		VOL -		VOL -		VOL -		REPEAT	A-B
VOL +	VOLUME +		VOL +		VOL +		VOL +		◀; VOL -	
CH V; ◀◀	-		◀◀PREV; PRESET -		◀◀PREV; PRESET -		◀◀; PREV	CH - (TV)	▶; VOL +	
CH A; ▶▶	+		▶▶NEXT; PRESET +		▶▶NEXT; PRESET +		▶▶; NEXT	CH + (TV)	◀; VOL -	
±; SAT			±; >10		±; >10		-		▶; VOL +	
CLEAR; X			CLEAR		CLEAR		CLEAR		◀; VOL -	
◀◀; ●			◀◀ SLOW ◀; TUN. -		◀◀ SLOW ◀; TUN. -		◀◀		▶; VOL +	
▶; i			▶; PLAY/SELECT		▶; PLAY/SELECT		▶; PLAY		◀; ◀	
▶▶; ?			▶▶ SLOW ▶; TUN. +		▶▶ SLOW ▶; TUN. +		▶▶		▶; PLAY	FAST PLAY
■; X			■; STOP		■; STOP		■; STOP		▶▶; ▶	
; ⬇			; PAUSE		; PAUSE		; PAUSE		■; STOP	
1, 2, ... 9, 0			1, 2, ... 9, 10/0		1, 2, ... 9, 0		1, 2, ... 9, 0		; PAUSE	

Функции кнопок пульта IRC 21 F к AUX устройствам

Кнопки пульта IRC 21 F	Код 306		Код 307		Код 308		Код 309		Код 310	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	SHUFFLE		VOCAL; ОТЗВУК		ЯЗЫК		DVD		STEREO/MONO	
AUDIO; NICAM	AUDIO		L/R; ЗВУК		АУДИОДОРОЖКА		AUDIO	DOSG; BASS	AUDIO	
VIDEO; SYS	INPUT		☉		СИСТЕМА		NIGHT MODE		P.MODE	
☐; ZOOM	WIDE MODE		ZOOM; ПОМЯТНИК		ПРОЯВЛЕНИЕ		DIMMER		DIMMER	
▼; TV	TV/DVD		RAN; СЛУЧАЙНО		СТОРОНА		TUNER/BAND; BAND	SONY TV DIRECT	BAND	
☐; ↗	MEMORY PICTURE				КАРАОКЕ		MEMORY	KARAOKE	MEMORY	
☐; LOCK	MARK BOOK		ANGLE; УГОЛ		ФОКУС		ANGLE	A. FORMAT MODE	ANGLE	
▲; FAV	▲; CLOSE/OPEN		▲		EJECT		▲; OPEN/CLOSE		SOUND FIELD	
○	I/O				ПИТАНИЕ		I/O		I/O	
AV	ANGLE	TV/VIDEO			VGA		AUTO FORMAT DIR.	TV/VIDEO		
✳			MUTE; БЕЗ ЗВУКА		ЗАГЛУШЕНИЕ		MUTING		MUTING	
MENU	DVD MENU				МЕНЮ		MENU	A. MENU; KARAOKE	DVD MENU	AMP MENU
EXIT	↶; RETURN		RETURN; ОБРАТНО		ВОЗВРАЩЕНИЕ		↶; RETURN		RETURN; ↶	
▲	▲		▲		▲		▲; ▲	MIC VOL +	↑	CENTER +
◀	◀		◀		◀		◀; ◀	MIC ECHO -	←	REAR -
OK	OK; ENTER		ENTER; ВХОД		ПУСК		ENTER	ENTER	ENTER	ENTER
▶	▶		▶		▶		▶; ▶	MIC ECHO +	→	REAR +
▼	▼		▼		▼		▼; ▼	MIC VOL -	↓	CENTER -
✳; SETUP	SET UP		SETUP; УСТАНОВ.		ТИТР		DVD SETUP		DVD SETUP	
♪; TITLE	TITLE		TITLE; НАДПИСЬ		СТЕРЕО		TUNER MENU	FM MODE; ST./MON.	TITLE	
☐	DVE		PBC		PBC		FUNCTION		FUNCTION	
GUIDE	PROGRAM		PROGRAM; ПРОГ-А		ПРОГРАММИРОВ.		PLAY MODE; PROG.		NAME	
⏻	TIME/TEXT		TIME; ВРЕМЯ		ВРЕМЯ		SLEEP	NAME	SLEEP	TIME
☐	SUBTITLE		SUBTITLE; СЛОВА		СТРОКА		SUBTITLE		SUBTITLE	
RED; ●	◀ STEP	⊙	REPEAT; ПОВТОР		ПОВТОРЕНИЕ		REPEAT	SOUND FIELD -	REPEAT	
GREEN; ▮	▮ STEP	⊙	STEP; 1 ШАГ		СТЕП		DSGX; BASS LEVEL	SOUND FIELD +	TEST TONE	
YELLOW; ◀	SLOW ◀	⊙	A-B		A-B		DVD TOP MENU	KEYCON #	SLOW ◀	
BLUE; ▮	SLOW ▮	⊙	GOTO; ПЕРЕЙТИ К		ЗАДЕРЖКА		DVD MENU	KEYCON #	SLOW ▮	
☐	DISPLAY		OSD		ПРОСМОТР		DISPLAY		DISPLAY	
↶	JOG		RESUME; ОДОЛ-Е		НАПРАВКА		DVD DISPLAY	REPEAT/FM MODE	DVD DISPLAY	
VOL -	AV VOL -	VOL - (TV)	VOL -; ГРОМК-ТЬ -		ГРОМКОСТЬ -		VOLUME -	TV VOL -	VOL -	WOOFER -
VOL +	AV VOL +	VOL + (TV)	VOL +; ГРОМК-ТЬ +		ГРОМКОСТЬ +		VOLUME +	TV VOL +	VOL +	WOOFER +
CH V; ◀	◀; PREV	PROG - (TV)	◀		ПЕРЕХОД НАЗАД		◀; PRESET -; PREV	TV CH -	◀; PREV; PRESET -	
CH A; ▶	▶; NEXT	PROG + (TV)	▶		ПЕРЕХОД ВПЕРЕД		▶; PRESET +; NEXT	TV CH +	▶; NEXT; PRESET +	
±; SAT	±; CLEAR		10+		+10		±; >10		>10	
CLEAR; X	REPEAT	A ⊕ B	CLEAR; ОЧИСТКА		РУБРИКА		CLEAR		CLEAR	
◀; ⊙	◀ SEARCH	◀ SCAN	◀		НАЗАД		◀; SLOW ◀; TUN-		◀; TUNING -	
▶; i	▶ PLAY		▶; II; PLAY; ПОКАЗ.		PLAY		▶; PLAY/SELECT		▶; PLAY/SELECT	
▶; ?	▶ SEARCH	▶ SCAN	▶		ВПЕРЕД		▶; SLOW ▮; TUN+		▶; TUNING +	
■; X	■; STOP		■; STOP; СТОП		СТОП		■; STOP		■; STOP	
▮; ⊕	▮; PAUSE		▮; PAUSE; ПАУЗА		ПАУЗА		▮; PAUSE		▮; PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 10/0		1, 2, ... 9, 10		1, 2, ... 9, 10/0		1, 2, ... 9, 10/0	

Функции кнопок пульта IRC 21 F к AUX устройствам

Кнопки пульта IRC 21 F	Код 311		Код 312		Код 313		Код 314		Код 315	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	PDVD		LANGUAGE		LANGUAGE		L/R		L/R	
AUDIO; NICAM	AUDIO	LANGUAGE	AUDIO	L/R	L/R		LANGUAGE		AUDIO	
VIDEO; SYS	N/P		P/N		N/P		N/P		N/P	
☐; ZOOM	ZOOM		ZOOM		ZOOM		ZOOM		ZOOM	
▼; TV			2CH/5.1CH		KARAOKE		3D			
☐; ↗	VIEW		PS/3D		P-SCAN/VGA		P-SCAN			
☐; LOCK			ANGLE		3D		ANGLE		ANGLE	
▲; FAV	▲; OPEN/CLOSE		▲; OPEN/CLOSE		▲		OPEN/CLOSE			
○	○; POWER		○; POWER		POWER		○			
AV	ANGLE		AV/MODE		ANGLE					
✳	MUTE		MUTE				MUTE		MUTE	
MENU	MENU		MENU		MENU		PBC		FUN	
EXIT	RESUME		RESUM		RETURN		RETURN		RETURN	
▲	▲		↑		▲		▲		▲	
◀	◀		←		◀		◀		◀	
OK	ENTER		ENTER		ENTER		ENTER		ENTER	
▶	▶		→		▶		▶		▶	
▼	▼		↓		▼		▼		▼	
✳; SETUP	SETUP		SETUP		SETUP		SETUP		SETUP	
♪; TITLE	TITLE	KARAOKE	TITLE	EQ	TITLE		TITLE		TITLE	
☐	PBC		PBC		PBC		PROG		PBC	
GUIDE	PROG		PROGRAM		PROG		KARAOKE			
⏻	TIME		TIME		TIME		TIME			
☐	SUBTITLE		SUBTITLE		SUBTITLE		SUBTITLE		SUB	
RED; ●	REPEAT		REPEAT		REPEAT		REPEAT		REPEAT	
GREEN; ▮	STEP		STEP		A-B		STEP		A-B	
YELLOW; ◀	A-B		A-B							
BLUE; ▮			SLOW		SLOW		SLOW		SLOW	
☐	DISPLAY		OSD				OSD		OSD	
↶	RETURN		SELECT						GOTO	
VOL -	VOLUME -	ECHO -	-		VOL -		VOL -		VOL -	
VOL +	VOLUME +	ECHO +	+		VOL +		VOL +		VOL +	
CH V; ◀	◀		◀		◀; PREV		PREV		PRE	
CH A; ▶	▶		▶		▶; NEXT		NEXT		NEXT	
±; SAT	0/10		10+		10+		10+		10+	
CLEAR; X	CLEAR/EQ		CLEAR		CLEAR		CLEAR			
◀; ⊙	◀		◀		◀; F.R		REV		FR	
▶; i	▶		▶		▶; II; PLAY/PAUSE		PLAY/PAUSE		PLAY/PAUSE	
▶; ?	▶		▶		▶; F.F		FWD		FF	
■; X	■		STOP		■; STOP		STOP		STOP	
▮; ⊕	▮		▮		▮; II; PLAY/PAUSE		PLAY/PAUSE		PLAY/PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0/10		1, 2, ... 9, 10		1, 2, ... 9, 10/0		1, 2, ... 9, 10/0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 21 F к AUX устройствам

Кнопки пульта IRC 21 F	Код 316		Код 317		Код 318		Код 319		Код 320	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	КЛАВИША +				ЗВУК					
AUDIO; NICAM	ЗВУК		AUDIO		L/R		AUDIO		AUDIO	
VIDEO; SYS	ВИДЕО		P/N		P/N		TV SYSTEM		N/P	
☐; ZOOM	ПОМЯТНИК		ZOOM		KARAOKE		ZOOM		ZOOM	
▼; TV	КЛАВИША -		TV/VGA		СИСТ		TV DVD			
☐; ↗	N/P				P-SCAN		PIC			
☐; LOCK	ОСМОТР				3D		ANGLE		ANGLE	
▲; FAV	▲; ВКЛ/ВЫКЛ.				В/ВЫ					
○	○; ИСТОЧНИК		POWER		ПИТАНИЕ				○; POWER	
AV	УГОЛ		ANGLE		УГОЛ					
✳	БЕЗ ЗВУКА		MUTE		ВЫКЛ. ЗВ		MUTE		MUTE	
MENU	МЕНЮ		MENU		МЕНЮ				ROOT MENU	
EXIT	ПЕРЕЙТИ К						RETURN			
▲	▲		▲		▲		▲		↑	
◀	◀		◀		◀		◀		←	
OK	ВХОД		ENTER		ПОДВ		ENTER		ENTER	
▶	▶		▶		▶		▶		→	
▼	▼		▼		▼		▼		↓	
✳; SETUP	УСТАНОВКА	ОДОЛЖЕНИЕ	SETUP		ЗАГОЛОВОК		SETUP		SETUP	
♪; TITLE	НАДПИСЬ	РАДИО	TITLE-PBC		КАРТ		TITLE PBC		TITLE PBC	
☐	PBC		PROGRAM		PBC		PBC			
GUIDE	ПРОГРАММА		3D		ПРОГ				PROG	
☐	СЛОВА		TIME		ВРЕМ				TIME	
☐	EQ/ОЧИСТКА		SUBTITLE		ТИТР		SUB		SUBTITLE	
RED; ●	ПОВТОР		REPEAT		ПОВТ		REPEAT		REPEAT	
GREEN; ▯	1 ШАГ		REP A/B		A-B		A-B		A-B	
YELLOW; ◀	A-B				ВЫЧ					
BLUE; ▯	МЕДЛЕННО		SLOW		ЗАМЕД		SLOW		SLOW	
☐	OSD		OSD		OSD		OSD		OSD	
↺	ОБРАТНО				ВОЗВРАТ		GOTO		DISPLAY	
VOL -	ГРОМКОСТЬ -		VOL -		ГРОМ -		VOL -		VOL -	
VOL +	ГРОМКОСТЬ +		VOL +		ГРОМ +		VOL +		VOL +	
CH V; ◀	◀		◀		◀		CH -		◀; PREV	
CH A; ▶	▶		▶		▶		CH +		▶; NEXT	
±; SAT	10+		10+		+10		10+; +/-		+10	
CLEAR; X	УТОЧНИТЬ				УМЕШ					
◀; ●	◀		◀		◀		◀		◀; REV	
▶; i	▶; ПОКАЗАТЬ		▶		▶		▶		▶; PLAY/PAUSE	
▶; ?	▶		▶		▶		▶		▶; FWD	
■; ✳	■; СТОП		■		■		■		STOP ■	
■; ⏸	■; ПАУЗА		■		▶		▶		PLAY/PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 10		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 21 F к AUX устройствам

Кнопки пульта IRC 21 F	Код 321		Код 322		Код 323		Код 324		Код 325	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	LANGUAGE		ALBUM +		DVD	ALBUM +	ECHO +			
AUDIO; NICAM	R/L		AUDIO		AUDIO	ECHO	R/L		AUDIO	
VIDEO; SYS	N/P		PICTURE NAVI		SYSTEM MENU	SA-CD/CD	MARK		BAND; P/N	
☐; ZOOM	ZOOM		KARAOKE PON		DIMMER		ZOOM		ZOOM	
▼; TV	VFD		ALBUM -		TH.SYNC;SONY DIR.	ALBUM -	ECHO -			
☐; ↗	P-SCAN		KARAOKE MODE		PICTURE NAVI	SEARCH	PS/IS		ANGLE	
☐; LOCK	ANGLE		ANGLE		ANGLE; MEM. SEL.	MULTI/2CH	LANGUAGE		LOC RDM	
▲; FAV	▲; OPEN/CLOSE		SOUND FIELD		▲	PROGRESSIVE	▲; OPEN/CLOSE		LOUD	
○	POWER		TV I/O	TV I/O	I/O	TV I/O	○; POWER		PWR	
AV			REPEAT/FM MODE	TV/VIDEO (TV)	SOUND MODE	TV/VIDEO	ANGLE		SOURCE	
✳	MUTE				MUTING; ⏸	TV ⏸	MUTE		MUTE	
MENU	МЕНЮ		MENU		DVD TOP MENU	AMP MENU	MENU/VIEW		MENU	
EXIT	STOP/RETURN		↺; RETURN		↺; RETURN	DISK SKIP	TITLE/RETURN			
▲	▲		↑		↑; PRESET +	KEYCON #	▲		▲	SEEK +; ↑
◀	◀		←		←; TUNING -	MIC VOL -	◀		◀	VOL -; ←
OK	ENTER		ENTER		ENTER; OK	ENTER	ENTER		ENTER	SEL
▶	▶		→		→; TUNING +	MIC VOL +	▶		▶	VOL +; →
▼	▼		↓		↓; PRESET -	KEYCON b	▼		▼	SEEK -; ↓
✳; SETUP	SET		TOP MENU		DVD SET UP	TUN.MENU;PROGR.	SETUP		SETUP	
♪; TITLE	TITLE		THEATRE SYNC		DVD MENU	TUNER/BAND	TITLE/RETURN		TITLE	
☐	PBC		TIME/TEXT		FUNCTION	NIGHT MODE	PBC		PBC	
GUIDE	PROG		TIMER MENU		DISPLAY;TIME/TEXT	DIRECT	PROG		ST PROG	
☐	TIME		SLEEP		SLEEP	MARKER	TIME		DSP	
☐	SUBTITLE		SUBTITLE		SUBTITLE; D.TUN.	THEATRE	SUBTITLE		SUB-T	
RED; ●	REPEAT		◀; ▶ STEP		◀; ▶; REP.; ▶ STEP	RED	REPEAT		AMS; RPT	
GREEN; ▯	STEP		◀; ▶ STEP		◀; ▶; ADV.; ▶ STEP	GREEN	STEP		EQ	
YELLOW; ◀	A-B		FUNCTION -	KEY CONTROL b	SOUND FIEL.;MODE	YELLOW	A-B			
BLUE; ▯	SLOW		FUNCTION +	KEY CONTROL #	REPEAT/FM MODE	BLUE	SLOW		SLOW	
☐	OSD		DISPLAY		☐; DISPLAY	OPTICAL	OSD		OSD	
↺	RESUME		☐; DISPLAY		ONE-TOUCH PLAY	REPEAT	RAN		↺	
VOL -	VOL -		VOLUME -	TV VOL -	VOLUME -; ↺	TV VOL -	VOL -		VOL -; ←	
VOL +	VOL +		VOLUME +	TV VOL +	VOLUME +; ↻	TV VOL +	VOL +		VOL +; →	
CH V; ◀	◀; PREV		◀; PRESET -	TV CH -	◀; PRESET -	TV CH -	◀; PREV		◀	
CH A; ▶	▶; NEXT		▶; PRESET +	TV CH +	▶; PRESET +	TV CH +	▶; NEXT		▶	
±; SAT	10+		DISC SKIP		>10	SOUND EFFECT	10+		10+	
CLEAR; X	CLEAR		CLEAR		CLEAR	SPEAKER LEVEL	CLEAR		GOTO	
◀; ●	◀; REV		◀; TUN.-; ◀ SLOW		◀; SLOW ◀; TUN.-	KARAOKE; K. PON	◀; REV		◀	
▶; i	PLAY		▶		▶	PLAY MODE	▶; PLAY/PAUSE		▶	
▶; ?	▶; FWD		▶; TUN.+; ▶ SLOW		▶; SLOW ▶; TUN.+	FM MODE	▶; FWD		▶	
■; ✳	STOP/RETURN		■		■		■; STOP		■/?	
■; ⏸	PAUSE		■		■	DSGX; DYN. BASS	▶; PLAY/PAUSE		▶	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 21 F к AUX устройствам

Кнопки пульта IRC 21 F	Код 326		Код 327		Код 328		Код 329		Код 330	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	СМЕШАННЫЙ +				DISC 1		YES	NAME WRITE	DVD	DUB ; HDD/DVD
AUDIO ; NICAM	ЗВУК		AUDIO		DISC 2		FADER		AUDIO	
VIDEO ; SYS	КАРАОКЕ		N/P		DISC 3		PLAY MODE		SYSTEM MENU	
☐ ; ZOOM	УВЕЛИЧ		ZOOM		DISC 4		NAME IN ; EDIT/SEL.		ZOOM	
▼ ; TV	СМЕШАННЫЙ -				DISC 5		CHAR NAME IN	CHAR WRITE	TV/DVD	
☐ ; ↗	ПОМЯТНИК				M.SCAN		M.SCAN	NUM WRITE	HDD	
☐ ; LOCK	СТАНДАРТ		ANGLE		CHECK		A.SPACE		TV PAUSE	ANGLE
▲ ; FAV	▲ ; ВХОД/ВЫХОД				DISC SKIP		▲ ; EJECT		▲	
○	○ ; ИСТО		POWER		STANDBY CD-SYNC		POWER ; I/O		I/O	I/O (TV)
AV	УГОЛ		DISC/USB/CARD		START CD-SYNC		INPUT		INPUT SELECT	☐ (TV)
✳			MUTE							
MENU	МЕНЮ	МОДЕЛЬ	TFT MENU				MENU/NO	11	MENU	
EXIT	☐ ; ТИШЕ		RETURN					12	☐ ; RETURN	
▲	▲		▲					13	↑	
◀	◀				- LINE OUT LEVEL		LEVEL -	14	←	
OK	OK		ENTER					15	ENTER	
▶	▶				+ LINE OUT LEVEL		LEVEL +	16	→	
▼	▼							17	↓	
✳ ; SETUP	ЗАГЛАВИЕ		DVD SETUP		FADER		REC MODE	18	TOP MENU	
♪ ; TITLE	ТИТР		TITLE/PBC				MUSIC SYNC	19	TITLE LIST	
☐	LANGUAGE		FUNCTION		PROG. PLAY MODE		PROG. PLAY MODE	20	TIME/TEXT	
GUIDE	ПРОГРАММА		PROG		CONT. PLAY MODE		CONT. PLAY MODE	21	OPTIONS	
☐	TIME				TIME		T.REC	22	TIMER	TIMER LIST
☐	ОСНОВАНИЕ		SUBTITLE		SHUFF. PLAY MODE		SHUFF. PLAY MODE	23	SUBTITLE	
RED ; ●	ПОВТОР		REPEAT		REPEAT		REPEAT	●	REC MODE	● ; REC
GREEN ; ►	ШАГ		STEP		A<>B		A+B	24	→ ● ; SYNCRO	■ ; REC STOP
YELLOW ; ◀	A-B		A-B				D	25	←	PROG - (TV)
BLUE ; ►	МЕД		SLOW				E		→	PROG + (TV)
☐	ТЕЛЕЭКРАН		OSD		OFF ; DISPLAY		DISPLAY	ON/OFF GROUP	DISPLAY	
☐	ВОЗВРАТ		GOTO				SCROLL	SKIP GROUP	PLAY MODE	
VOL -	ВОЛЮМ -	OK VOL -	VOL -						↖ (TV)	
VOL +	ВОЛЮМ +	OK VOL +	VOL +						↗ (TV)	
CH V ; ◀	◀ ; ВЕРХНИЙ		◀ ; PREV ; CH -		◀ AMS		◀		PROG -	◀
CH A ; ▶	▶ ; СЛЕДУЮЩИЙ		▶ ; NEXT ; CH +		▶ AMS		▶		PROG +	▶
± ; SAT	10+		-/±		>10		>25 ; >10		CHAPTER MARK	
CLEAR ; X	ОЧИСТКА				CLEAR		CLEAR		CLEAR	MARK ERASE
◀ ; ●	◀ ; НАЗАД		◀ ; REV		◀		◀		◀ ; ◀/▶	
▶ ; i	▶ ; ТРАНСМИ		▶ ; PLAY/PAUSE		▶		▶		▶	
▶ ; ?	▶ ; ВПЕРЕД		▶ ; FWD		▶		▶		▶ ; ▶/▶	
■ ; X	■ ; ОСТАНОВКА		■ ; STOP		■ ; STOP CD-SYNC		■		■	
■ ; ⏸	■ ; ЗАСТОЙ		■ ; PLAY/PAUSE		■		■		■	
1, 2, ... 9, 0	1, 2, ... 9, 10		1, 2, ... 9, 0		1, 2, ... 9, 10		1, 2, ... 9, 10		1, 2, ... 9, 0	

Функции кнопок пульта IRC 21 F к AUX устройствам

Кнопки пульта IRC 21 F	Код 331		Код 332		Код 333		Код 334		Код 335	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	CD				BASS/TREBLE +					
AUDIO ; NICAM	AUDIO				MONO/STEREO				AUDIO	
VIDEO ; SYS	PLAY MODE	MD (VIDEO)			FILE					
☐ ; ZOOM	A/B ; TAPE				S.SUR					
▼ ; TV	TUNER/BAND				BASS/TREBLE -				I/O TV	
☐ ; ↗	TUNER MEMORY	PLAY MODE/TUN.			BASS/TREBLE					
☐ ; LOCK	ANGLE				PRESET ; EQ.PR.					
▲ ; FAV	SOUND FIELD								▲	
○	I/O		SYSTEM POWER		SYSTEM POWER		SYSTEM POWER		I/O	
AV	USB								☐ TV	
✳	ECHO								☐	
MENU	DVD MENU	AMP MENU	FUNCTION		FUNCTION		FUNCTION		TOP MENU	
EXIT	☐ ; RETURN								RETURN	
▲	▲								↑	
◀	◀								←	
OK	ENTER				EDIT				+	
▶	▶								→	
▼	▼								↓	
✳ ; SETUP	DVD SETUP	GAME			CHECK				OPTIONS	
♪ ; TITLE	DVD TOP MENU	FM MODE	TUNER BAND		TUNER BAND		TUNER BAND		POP UP/MENU	
☐	FUNCTION	EFFECT ON/OFF							HOME	
GUIDE	SET CLOCK/TIMER	P FILE							SEN	
☐	SLEEP	PRESET EQ	SLEEP		SLEEP		SLEEP		SUBTITLE	
☐	SUBTITLE	SURROUND							RED	
RED ; ●	REPEAT	REPEAT/FM MODE			REPEAT			● ; REC (B TAPE)	GREEN	
GREEN ; ►	SEL. CLOCK/TIMER	EQ			DIRECT ; EFFECT				YELLOW	
YELLOW ; ◀	◀ ; SLOW -	KARAOKЕ			PRESET -		◀ (A TAPE)	◀ (B TAPE)	BLUE	
BLUE ; ►	▶ ; SLOW +	I-BASS			PRESET +				DISPLAY	
☐	DISPLAY				DISPLAY				NET SERVICE	
☐	DVD DISPLAY				DISPLAY CLOCK				↖	
VOL -	VOL - ; VOLUME -	b	VOL -		VOL -		VOL -		↗	
VOL +	VOL + ; VOLUME +	#	VOL +		VOL +		VOL +		↗	
CH V ; ◀	◀ ; PRESET /PREV	ALBUM - ; ☐ -	PRESET -		◀		PRESET -		◀	
CH A ; ▶	▶ ; PRESET /NEXT	ALBUM + ; ☐ +	PRESET +		▶		PRESET +		▶	
± ; SAT	D.SKIP ; DISC SKIP	D. SKIP			▶				▶	
CLEAR ; X	CLEAR	CLEAR			CLEAR				■	
◀ ; ●	◀ ; TUNING -				◀		◀ (A TAPE)	◀ (B TAPE)	■	
▶ ; i	▶ ; ▶ ; SELECT		▶ MD		▶ CD		▶ (A TAPE)	▶ (B TAPE)	▶	
▶ ; ?	▶ ; TUNING +				▶		▶ (A TAPE)	▶ (B TAPE)	▶	
■ ; X	■		■		■		■ (A TAPE)	■ (B TAPE)	■	
■ ; ⏸	■		■		■		■ (A TAPE)	■ (B TAPE)	■	
1, 2, ... 9, 0	1, 2, ... 9, 10/0		1, 2, ... 9, 0		1, 2, ... 9, 10		1, 2, ... 9, 10		1, 2, ... 9, 0	

Функции кнопок пульта IRC 21 F к AUX устройствам

Кнопки пульта IRC 21 F	Код 336	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM	CLEAR AUDIO+	
VIDEO ; SYS		
☐ ; ZOOM		
▼ ; TV		
☐ ; ↗	NIGHT	
☐ ; LOCK	SOUND FIELD	
▲ ; FAV	⚡ ; PAIRING	
○	I/O	
AV	INPUT	
✳	⊞	
MENU	MENU	
EXIT	BACK	
▲	↑	
◀		
OK	ENTER	
▶		
▼	↓	
✳ ; SETUP	DIMMER	
♪ ; TITLE	VOICE	
☐		
GUIDE		
⊞		
☐		
RED ; ●		
GREEN ; ▢		
YELLOW ; ◀		
BLUE ; ▢		
☐		
☐		
VOL -	↙	
VOL +	↘	
CH V ; ◀◀	SW ↙	
CH A ; ▶▶	SW ↘	
± ; SAT		
CLEAR ; X		
◀◀ ; ●		
▶▶ ; i		
▶▶ ; ?		
■ ; ✕		
▢ ; ⚡		
1, 2, ... 9, 0		

Функции кнопок пульта IRC 21 F к TV устройствам

Кнопки пульта IRC 21 F	Коды 501-728	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM		
VIDEO ; SYS		
☐ ; ZOOM		
▼ ; TV		
☐ ; ↗		
☐ ; LOCK		
▲ ; FAV		
○	POWER ; ⏻	
AV	TV/VIDEO ; TV/AV	
✳	MUTE ; ⊞	
MENU		
EXIT		
▲		
◀		
OK		
▶		
▼		
✳ ; SETUP		
♪ ; TITLE		
☐		
GUIDE		
⊞		
☐		
RED ; ●		
GREEN ; ▢		
YELLOW ; ◀		
BLUE ; ▢		
☐		
☐		
VOL -	VOLUME ▼ ; ↙-	
VOL +	VOLUME ▲ ; ↘+	
CH V ; ◀◀	CHANNEL ▼ ; P-	
CH A ; ▶▶	CHANNEL ▲ ; P+	
± ; SAT		
CLEAR ; X		
◀◀ ; ●		
▶▶ ; i		
▶▶ ; ?		
■ ; ✕		
▢ ; ⚡		
1, 2, ... 9, 0	1, 2, ... 9, 0	

Для просмотра функций кнопок баз кодов 8 и 9 (SAT, STB, DVB устройства) перейдите по следующей ссылке <http://www.pult-irc.ru/files/manual/SatCodesForIrcF.pdf>