

# Приложение IRC 228 F (версия 18.11.07 12:42)

Модели оригинальных пультов и соответствующие им коды пульта IRC приведены в разделе "Коды пульта IRC 228 F".

Функции всех кнопок для каждого кода пульта IRC можно узнать из таблиц данного приложения.

Пульт IRC может иметь дополнительные функции (если указаны в столбце "Доп. функция"). Доступ к ним осуществляется при помощи кнопки SHIFT (см. в инструкции рис.1, п.16). Для доступа к дополнительным функциям нажмите кнопку SHIFT и, **удерживая её нажатой**, нажмите ту кнопку, дополнительная функция которой Вам необходима.

## После первой установки батареек

Кнопка устройства пульта IRC	Код пульта IRC	Кнопка устройства пульта IRC	Код пульта IRC
TV	101	SHIFT + TV*	105
VCR	102	SHIFT + VCR*	106
AUX	103	SHIFT + AUX*	107
SAT	104	SHIFT + SAT*	108

\* Нажмите кнопку SHIFT и, удерживая её нажатой, нажмите и отпустите одну из кнопок пульта: TV, VCR, AUX или SAT.

## Доступные коды пульта IRC 228 F

Номер базы кодов (диапазон кодов)	Устройство базы кодов	Доступные коды пульта IRC
1 (101-199)	TV	101 - 114
2 (201-299)	-	Нет
3 (301-399)	AUX	301 - 304
4 (401-499)	-	Нет
5 (501-599)	TV	501 - 599
6 (601-699)	TV	601 - 699
7 (701-799)	TV	701 - 799
8 (801-899)	SAT	801 - 899
9 (901-999)	SAT	901 - 999

## Коды пульта IRC 228 F

### Коды к устройствам марки FUSION

Модель*	Устр-во	Код
28K62	TV	111
FD-U 150	AUX, CD, DVD	301
FLTV-28T22	TV	113
FLTV-32B100	TV	112
JJ-1106A	AUX, CD, DVD	304
JX-3010A	AUX, CD, DVD	303
KY-828	AUX, CD, DVD	302
RC10B	TV	107
RC10DB	TV/AUX	108
RC200	TV	105
RC21B	TV	106
RC25B	TV/AUX	109
RC6B	TV	106
TV-01	TV/AUX	103
TV-02	TV	110
TV-03	TV	114
Y46-3	TV	102
Y-72C	TV/AUX	104
Y72C2	TV/AUX	101

\* По каталогу «IRC»

**Коды к TV устройствам различных марок**

Марка	Код
AEG	544
AIWA	502, 503, 523, 528, 579, 634, 678, 706, 710, 712, 716
AKAI	501, 503, 512, 516, 520, 522, 524, 525, 537, 538, 540, 545, 546, 547, 550, 571, 572, 582, 583, 584, 585, 596, 598, 608, 613, 626, 652, 673, 691, 704, 708, 711, 722, 731, 769
AKIRA	511, 514, 516, 524, 525, 537, 538, 541, 545, 547, 556, 577, 586, 594, 597, 598, 601, 623, 626, 629, 631, 649, 666, 680, 689, 690, 693, 717, 739, 796, 797, 798, 799
AMCOL	501, 525, 545, 747
ANITECH	501, 525, 616, 726
ATLANTA	501, 751
AVEST	537, 538, 539, 766
BANG & OLUFSEN	728, 737
BBK	522, 551, 594, 597, 684, 701, 788, 792, 793
BEKO	525, 530, 535, 559, 723, 742
BIGSTON	501, 503
BLAUPUNKT	512
BORK	525, 547, 646, 766
BRAND	711
BROKSONIC	501
CAMERON	538, 550, 567, 675, 697, 702, 792, 794
CASIO	529, 705, 706
CASKA	761
CHANGHONG	516, 642
CLATRONIC	501, 545, 559, 571, 742
CONTEC	501, 603, 604, 613
CORTLAND	644
CROWN	501, 503, 511, 524, 525, 530, 571
DAEWOO	501, 508, 518, 520, 525, 526, 536, 538, 539, 546, 565, 571, 576, 598, 613, 685, 687, 692
DARTLAND	501
DAYTRON	501
DEXP	516, 702
DIGITAL	547
DISTAR	562, 616
DNS	596, 702, 708
DUAL	746
ELEKTA	501, 503, 520, 525, 527, 615
ELEKTRONIKA	583
ELENBERG	538, 545, 550, 565, 567, 579, 581, 644, 655, 676, 683, 717, 785
EPLUTUS	537, 644, 677, 682, 697, 724
ERC	537, 631, 764
ERISSON	511, 514, 516, 525, 526, 537, 538, 541, 550, 556, 561, 568, 586, 596, 599, 623, 626, 629, 631, 711, 712, 714, 739, 747, 779, 786, 795
EVGO	538, 540, 630
FINLUX	501, 511, 583, 589, 608, 732, 758, 774
FUJITSU	544, 573
FUNAI	501, 502, 503, 504, 505, 525, 537, 538, 581, 603, 764
FUSION	596, 642, 699, 705, 706
GBS	501, 520, 525, 571, 583
GENERAL	537, 556
GOLD STAR - LG	501, 512, 518, 525, 527, 559, 570, 583, 584, 589, 609, 613, 642, 706, 712, 742, 750, 765
GRUNDIG	501, 512, 525, 606, 662, 718, 719, 733
HAIER	518, 526, 561, 574, 657, 667, 669, 707, 778
HAPPY	501
HARPER	706
HCM	501, 503, 525
HELIX	701, 702, 708
HIL	503
HITACHI	501, 515, 518, 522, 525, 537, 544, 548, 554, 578, 584, 587, 588, 604, 613, 640, 729, 749, 775, 783
HORIZONT	525, 540, 545, 550, 559, 583, 664, 672, 771
HPC	546
HYUNDAI	516, 518, 522, 525, 526, 537, 538, 540, 541, 546, 547, 550, 556, 580, 596, 597, 599, 626, 642, 648, 650, 655, 705, 711, 714, 717, 760
INNO-HIT	501, 525, 571
IRBIS	596, 714
IVA (MBA)	537, 561, 637
IZUMI	516, 537, 596, 663, 691, 695, 703, 705, 711, 792
JINLIPI	537, 637, 766
JVC	513, 515, 593, 604, 727
KAMACROWN	571
KANSAI	501, 525
KENSTAR	516
KITT	503, 613, 616, 726
KNEISSEL	753
KONKA	537, 538, 560, 561, 581, 616, 626, 717
KRONMARK	596
LOEWE	542, 709, 744
METZ	745
MITSUBISHI	501, 520, 522, 525, 604, 611, 722, 728, 744
MIYOTA	537, 644, 656
MTC	501, 583
MULTITECH	501, 525
MYSTERY	516, 537, 597, 642, 650, 653, 701, 702, 708, 773, 780, 789
NASH	537
NEC	501, 517, 520, 526, 552, 604, 625, 722
NESCO	501, 525
NOKIA	519, 584, 610, 614, 616, 740, 746, 767
NOVA	501, 616, 638
NOVEX	516, 546, 599
NTT	759
OMEGA	501, 571
ONIDA	513
ONIKS	516, 525, 537, 545, 546, 547, 680
ONWA	524, 525
OPERA	644, 666, 682
ORBITA	635
ORION	501, 503, 506, 507, 509, 516, 525, 528, 537, 591, 603, 617, 619, 627, 641, 643, 664, 715, 720, 722, 729, 746
ORSON	526, 537
PANASONIC	512, 531, 532, 752
PHANTOM	644
PHILIPS	501, 511, 524, 525, 540, 549, 628, 639, 707, 748
PHOENIX	613
PHOENIX GOLD	708

**Коды к TV устройствам различных марок**

Марка	Код
PIONEER	548, 555, 566, 575, 647, 666
PIXELVIEW	525
PLANTRON	735
POLAR	525, 526, 537, 538, 540, 543, 546, 547, 581, 596, 599, 663, 664, 683, 703, 711, 717
POLAROID	525
PREMIERA	773
PRESTIGIO	564, 656
PRIMA	522, 547
PROLOGY	653, 655, 777, 784
RADUGA	525, 545, 569, 583, 743
RAINFORD	525, 537, 544, 545
RECOR	511, 525
REKORD	520, 525, 526, 537, 538, 539, 545, 547, 725, 736, 743, 747
RFT	535, 618, 728
ROADSTAR	501, 508, 525, 571
ROLSEN	503, 516, 525, 537, 538, 540, 543, 546, 564, 576, 592, 594, 596, 649, 656, 669, 684, 714, 768, 770
ROVERSCAN	662, 770
ROYAL	501, 503, 525, 616
RUBIN	504, 516, 525, 537, 546, 583, 619, 665, 714, 776
SABA	509, 510, 521, 602, 756
SALORA	584
SAMSUNG	501, 525, 526, 529, 563, 580, 595, 596, 608, 612, 613, 622, 641, 645, 688, 723, 741
SANSUI	524, 525, 538, 556, 695
SANYO	501, 519, 522, 525, 530, 540, 550, 558, 604, 608, 610, 618, 621, 696, 722, 730, 734, 738
SATURN	702, 708
SCARLETT	541, 545
SCHNEIDER	525, 540, 571, 771
SELECO	736, 763
SETRO	520
SHARP	526, 544, 548, 604, 707, 721
SHERION	616
SHIVAKI	501, 503, 508, 516, 518, 520, 525, 526, 527, 536, 538, 539, 540, 545, 546, 547, 550, 556, 580, 583, 585, 596, 599, 609, 619, 630, 632, 635, 636, 643, 644, 664, 681, 694, 708, 743, 791
SIEMENS	512, 525, 660, 726, 734
SIESTA	501, 537, 637
SILELIS	613
SILVER	633
SITRONICS	503, 516, 525, 537, 538, 540, 543, 545, 594, 626, 629, 661, 671, 672, 674, 679, 680, 686, 766
SOKOL	516, 525, 547, 635
SONY	533, 604, 659, 722
SPEKTR	525, 538, 668
START	525, 537, 545, 546, 547
STASSFURT	535, 618
STINOL	525
SUPER	537, 561, 644, 653, 654, 655, 666, 677, 682, 724, 754, 772, 780
SUPER GENERAL	537
SUPRA	501, 508, 516, 518, 520, 525, 527, 529, 536, 537, 541, 563, 579, 580, 596, 597, 612, 642, 643, 687, 690, 705, 706, 712, 713, 790
SUZUKI	516, 556
SVEN	574
TCL	538, 540, 642
TEAC	525
TECHNICS	537, 538
TECHNO	501, 525, 538, 544, 546, 556, 568, 579, 596, 599, 644, 664, 703, 791
TECKTON	522, 582, 601, 669, 670
TELEFUNKEN	510, 521, 561, 590, 602, 605, 642, 708, 712, 714, 756, 757
TELEVISION	501, 525, 616
THOMSON	509, 510, 521, 550, 579, 602, 624, 642, 702, 756
TOSHIBA	516, 553, 604, 651, 744
TRONY	516, 525, 537, 538, 550, 657
TVT	511, 525, 530, 535, 538, 583, 586, 620, 630, 723, 742
UNITED	525
VARTA	642
VESTEL	525, 544, 556, 583, 619
VIEWSONIC	557, 698
VITA	547
VITEK	537, 650
VITYAS	525
VOLNA (ВОЛНА)	635
VR	516, 537, 565, 702, 714, 786
WALTHAM	503, 509, 511, 583, 584, 607, 613, 729, 762
XORO	522, 526, 545, 781, 782, 787
НЕИЗВЕСТНАЯ МАРКА	525, 546, 574, 596, 648, 656, 666, 711, 755

**Коды к SAT устройствам различных марок**

Марка	Код
AIR TONE	968
ALFA GOLD	828
AMINO (СТРИМ)	829, 902
ARION	835
ASTON	811
BBK	931
BIG SAT	839, 840, 903, 936
BIG STAR	965
CADENA	958, 962
CONTINENT	886, 975
COSHIP	855
DAEWOO	872
D-COLOR	946
DELTA SYSTEMS	985
DIVISAT	957, 958
D-LINK	923
DNS	968
DR.HD	983
DRE (GENERAL SATELLITE)	804, 868, 888, 907, 933, 954
DREAM	819
DUNE	927, 934
ECHOSPACE	862
EHOSTAR	808, 809, 822
ELTEX	987
EUROSKY	840, 880
EUROSTAR	863
EUSTON	825
EVO	965
GALAXY INNOVATIONS	878, 881, 908, 911, 912, 917, 924
GLOBALTEQ	833
GLOBO	909, 915, 925, 935, 945, 956, 973, 999
GOLD STAR - LG	871
GOLDEN INTERSTAR	821, 841, 879, 918
GOLDEN MEDIA	847, 912
GOLDMASTER	911
HITACHI	824, 832
HIVION	929
HOME	968
HOMECAST (ВОЛЯ)	820, 831, 836
HUMAX	803, 804, 823, 848, 860, 861, 905, 949
HYUNDAI	968
ID DIGITAL	804
INTEK	984
KAON	820
KOSMOS	855, 856
LANS	970
LOCUS	946
LUMAX	852, 873, 907, 913, 965, 994
MAG	988
MEDIA COM	825
MOTOROLA	883, 884, 901
MYSTERY	910, 997
NDS	814
NEXT	864
NOKIA	813
NOT	941
ONLIME	905
OPENBOX	827, 835, 869, 870, 911, 990, 991
OPENTECH	972
OPENTEL	865
ORBITA	946, 995
ORIEL	887, 926, 941, 948, 955, 986
PACE	801, 932, 953
PATIX DIGITAL	992
PAUXIS	842, 859
PHILIPS	857, 899
PIONEER	851
POLAR	858
REFLECT	959
RIKOR	916, 947
ROLSEN	930, 941, 942, 961
SAGEMCOM	906
SAMSUNG	803, 810, 812, 854
SEG	818
SEZAM	882
SKY VISION	952, 966, 977, 982
SKYMASTER	830
SKYWAY	911
SKYWORTH	989
STAR	833
STAR TRACK	826, 835, 943
STARNET	885
STRONG	805, 806, 815, 816, 817, 828, 830, 914
SUNNIWELL	875
SUPERBOX	903
SUPERMAX	821, 866, 880, 924
SUPRA	950, 960, 962
TECHNOSAT	852, 853
TEL-ANT	960
TELEFUNKEN	961, 968
TESLER	926
TOP BOX	965
TOPFIELD	837, 838, 877, 891
TOSHIBA	876
TV STAR	967
TVJET	946, 976
VESTEL	820, 824
VU+	919, 920, 921, 922

**Коды к SAT устройствам различных марок**

Марка	Код
WORLD VISION	821, 928, 951, 952
XSAT (НТВ+)	801, 802, 807, 906, 972, 984, 998
YUXING	904
ZYXEL	874
БИЛАЙН	883, 884, 901, 923
ВОЛГАТЕЛЕКОМ	842, 843, 844, 845, 846, 847, 849, 850, 858, 867
ДОМ.RU	820, 905
ДОМОЛИНК	874, 904
МТС	855, 964, 974, 979, 980, 989, 993
НЕИЗВЕСТНАЯ МАРКА	834, 835, 842, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 903, 904, 937, 938, 939, 940, 944, 945, 969, 971, 978, 996
РОСТЕЛЕКОМ	874, 904, 923, 963
СИГНАЛ	968
ТЕЛЕКАРТА	867, 909, 973
ТЕЛЕЦИФРА	968

Функции кнопок пульта IRC 228 F к TV устройствам

Кнопки пульта IRC 228 F	Код 101		Код 102		Код 103		Код 104		Код 105	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD					FAV +		PVR LIST		SmartTV	
AUDIO; NICAM	NICAM/A2	NR.; AUDIO	NICAM/A2		ROOT; AUDIO	NICAM	NICAM/A2		YouTube	
VIDEO; SYS	USB/CR		SYSTEM		REPEAT		MEDIA		OPTION	
☐; ZOOM	ASPECT	ZOOM	ASPECT		ASPECT; ZOOM; SIZ		ASPECT		SIZE; SCALE; ZOOM	
▼; TV					FAV -		DTV/RADIO		TV	
☐; ↔	AUTO				AUTO		AUTO; GOTO		ECO	
☐; LOCK					FREEZE		FREEZE		SUB.; FREEZE	
▲; FAV	MENU; FAV	▲; EJECT			FAV		FAV		USB	
○	○		○; POWER		○; POWER		○		○	
AV	SOURCE		SOURCE		INPUT		SOURCE		SOURCE	
⌘	⌘		⌘; MUTE		⌘; MUTE		⌘		⌘; MUTE	
MENU	MENU		MENU		MENU		MENU		MENU	
EXIT	EXIT		EXIT		EXIT		EXIT		EXIT	
▲	▲		▲		▲		▲		▲; ⏪	
◀	◀		◀		◀		◀		◀; ⏪; ZOOM -	
OK	ENTER		ENTER		ENTER; OK		ENTER; OK		OK; ⏪	
▶	▶		▶		▶		▶		▶; ⏩; ZOOM +	
▼	▼		▼		▼		▼		▼; ⏩	
⌘; SETUP	PMODE	DVD SETUP	PMODE		P.MODE; - P		PMODE		PICTURE; P.EFFECT	
♪; TITLE	SMODE	TITLE	SMODE		S.MODE; - S	TV/RADIO	SMODE		SOUND; S.EFFECT	
☐	TEXT		TEXT		TEXT		TEXT		TXT; TEXT	
GUIDE					EPG		EPG		GUIDE; EPG	
⏻	SLEEP		SLEEP		SLEEP; ZZZ		SLEEP	TIME SHIFT	SLEEP	
☐	SUBTITLE				SUBTITLE		S.TITLE; SUBTITLE		SUBTITLE	
RED; ●	RED; PROGRAM		RED		RED	●	RED	REC	RED; MTS; F1	
GREEN; ⏪	GREEN; INTRO		GREEN		GREEN		GREEN		GREEN; F2	
YELLOW; ◀	YELLOW; ANGLE		YELLOW		YELLOW		YELLOW		YELLOW; ⏩; F3	
BLUE; ⏪	BLUE; AB		CYAN		BLUE		BLUE		BLUE; DEMO; CD; F4	
☐	DISPLAY		DISPLAY		DISP; DISPLAY		DISPLAY		INFO; DISPLAY	
☐	☐		☐		☐; ☐		☐		RETURN	
VOL -	VOL ▼		VOL ▼		V.; VOL-		VOL ▼; VOL -		VOL -; V.; VOL ▼	
VOL +	VOL ▲		VOL ▲		V+; VOL+		VOL ▲; VOL +		VOL +; V+; VOL ▲	
CH V; ⏪	CH ▼	HOLD; ⏪	CH ▼		P-; CH-; CH ▼	⏪; INDEX	CH ▼; CH -	⏪; TIME SHIFT	CH -; P-; CH ▼	⏪
CH ▲; ⏩	CH ▲	S.PAGE; ⏩	CH ▲		P+; CH+; CH ▲	⏩; SIZE	CH ▲; CH +	⏩	CH +; P+; CH ▲	⏩
⏪; SAT	-/-		-/-		GOTO		-/-; --		LIST	
CLEAR; X	GOTO				A-B		CH.LIST			
◀; ●	REVEAL; ⏪	S.PAGE	SBPAGE		◀; REVEAL	SUBPAGE	◀; FAV	S.PAGE; CH.LIST	◀	SUB.; FREEZE
▶; i	TEXT; ⏩	INDEX	INDEX		▶; TEXT	INDEX	▶	INDEX; EPG	▶	INDEX; TV
▶; ?	SIZE; ⏩	REVEAL	REVEAL		▶; SUBPAGE	REVEAL	▶	REVEAL; PVR LIST	▶	REV.
■; ⌘	■	HOLD	HOLD		■; HOLD	HOLD	■	HOLD; DTV/RADIO	HOLD	
■; ⏩	TEXT; ⏩	SIZE	SIZE		■; TEXT	SIZE	■	SIZE; REC	■	SIZE
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 228 F к TV устройствам

Кнопки пульта IRC 228 F	Код 106		Код 107		Код 108		Код 109		Код 110	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD					FAV +					
AUDIO; NICAM	NICAM		NICAM/A2		NICAM/A2; LANG.		NICAM/A2		NICAM	
VIDEO; SYS										
☐; ZOOM	ASPECT				ASPECT; ZOOM		ASPECT		ASPECT	
▼; TV	FAV -						TV/RADIO			
☐; ↔	AUTO				REPEAT		CH.LIST		CH.LIST	
☐; LOCK	ROOT				A-B		REC. LIST			
▲; FAV	FAV				▲		FAV		FAV	
○	○		○		○		○		○; POWER	
AV	INPUT		INPUT; TV/AV		INPUT		INPUT		INPUT	
⌘	⌘; MUTE		⌘; MUTE		⌘; MUTE		⌘		⌘; MUTE	
MENU	MENU		MENU		MENU; OSD MENU	MENU	MENU		MENU	
EXIT	EXIT		EXIT		EXIT		EXIT		EXIT	
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀		◀		◀	
OK	OK		OK		OK		OK		OK	
▶	▶		▶		▶		▶		▶	
▼	▼		▼		▼		▼		▼	
⌘; SETUP	PICTURE		PICTURE		PICTURE	SETUP	PICTURE		P.MODE	
♪; TITLE	SOUND		SOUND		SOUND	TITLE	SOUND		S.MODE	
☐	TV/TXT		TV/TXT		TV/TXT; SLOW		TV/TXT		TEXT	
GUIDE	REPEAT						EPG		EPG	
⏻	SLEEP		SLEEP		SLEEP		SLEEP		SLEEP	
☐	A-B				SUBTITLE		SUBTITLE		SUBTITLE	
RED; ●	RED		RED		RED; ⏪		RED	●; REC	RED	●; REC.
GREEN; ⏪	GREEN		GREEN		GREEN; ⏩		GREEN		GREEN	
YELLOW; ◀	YELLOW		YELLOW		YELLOW; ⏪		YELLOW		YELLOW	
BLUE; ⏪	BLUE		BLUE		BLUE; ⏩	SLOW	BLUE		BLUE	
☐	DISPLAY		DISPLAY		DISPLAY		DISPLAY		DISPLAY	
☐	☐		☐		☐		☐		☐	
VOL -	VOL -		VOL -		VOL -		VOL -		VOL -	
VOL +	VOL +		VOL +		VOL +		VOL +		VOL +	
CH V; ⏪	CH -	⏪	CH -		CH -	⏪	CH ▼		CH -	⏪
CH ▲; ⏩	CH +	⏩	CH +		CH +	⏩	CH ▲		CH +	⏩
⏪; SAT	GOTO		-/-		-/-		-		-	
CLEAR; X			CANCEL				CANCEL		CANCEL	
◀; ●	◀	SUBPAGE	SUBPAGE		◀	SUBPAGE; PROG.	◀	SUBPAGE	◀	SUBPAGE
▶; i	▶; ⏩; TV/TXT	INDEX	INDEX		▶; ⏩	INDEX; INTRO	▶	INDEX	▶	INDEX
▶; ?	▶	REVEAL	REVEAL		▶	REVEAL; TITLE	▶	REVEAL	▶	REVEAL
■; ⌘	■; HOLD	HOLD	HOLD		■	HOLD; GOTO	■	HOLD	■	HOLD
■; ⏩	▶; ⏩; TV/TXT	SIZE	SIZE		▶; ⏩	SIZE; ANGLE	■	SIZE	■	SIZE
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 228 F к TV устройствам

Кнопки пульта IRC 228 F	Код 111		Код 112		Код 113		Код 114	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	FAV +; REVEAL		FAV+		▶▶; EPG		▶▶; SUBPAGE	
AUDIO; NICAM	NICAM				NICAM		AUDIO	
VIDEO; SYS	REPEAT; MIX		USB					
☐; ZOOM	SIZE; ZOOM		ASPECT		ASPECT			
▼; TV	FAV -; SUBPAGE		FAV-		◀◀; REVEAL		◀◀; REVEAL	
☐; ↻	CH. LIST; INDEX		AUTO				TV/RADIO	
☐; LOCK	FREEZE		FREEZE				FREEZE	
▲; FAV	FAV. LIST; HOLD		FAV		FAV		MIX; FAV.LIST	
○	○; POWER		○		○; POWER		○; STANDBY	
AV	☐; INPUT		SOURCE		INPUT		☐; SOURCE	
⌘	⌘		⌘		⌘; MUTE		⌘; MUTE	
MENU	MENU		MENU		MENU		☐; MENU	
EXIT	EXIT		EXIT		EXIT		EXIT	
▲	▲		▲		▲		▲	
◀	◀		◀		◀		◀	
OK	ENTER		OK; ENTER		OK		ENTER	
▶	▶		▶		▶		▶	
▼	▼		▼		▼		▼	
⌘; SETUP	P.MODE		P.MODE		P.MODE		P.MODE	
♪; TITLE	S.MODE		S.MODE		S.MODE		S.MODE	
☐	TTX		LIST		TEXT		TXT	
GUIDE	MIX				EPG		EPG	
⏻	SLEEP		SLEEP		SLEEP		TIME SHIFT	
☐	SUBTITLE				SUBTITLE		SIZE; SUBTITLE	
RED; ●	RED; ◀◀		RED		RED	●; REC	RED	●; RECORD
GREEN; ▶▶	GREEN; ▶▶		GREEN		GREEN		GREEN	
YELLOW; ◀◀	YELLOW; ◀◀		YELLOW		YELLOW		YELLOW	
BLUE; ▶▶	BLUE; ▶▶		BLUE		BLUE		BLUE	
☐	INFO		DISPLAY		DISPLAY		☐; DISPLAY	
☐	☐		☐		☐		☐; RECALL	
VOL -	VOL -		VOL -		VOL -		VOL -	
VOL +	VOL +		VOL +		VOL +		VOL +	
CH V; ◀◀	PROG V	◀◀	CH V	◀◀	CH -	◀◀; REVEAL	CH V	◀◀; REVEAL
CH A; ▶▶	PROG A	▶▶	CH A	▶▶	CH +	▶▶; EPG	CH A	▶▶; SUBPAGE
±; SAT	-/-		A-B		CH.LIST			
CLEAR; X	GOTO; SUBTITLE	A-B; CANCEL	REPEAT		CANCEL		CANCEL; AUDIO	
◀◀; ●	◀◀	SUBPAGE	◀◀		◀◀; CANCEL	SUBPAGE	◀◀; INDEX	SUBPAGE
▶▶; i	▶▶; TTX	INDEX	▶▶		▶▶; TIMESHIFT	INDEX	▶▶; TIME SHIFT	INDEX
▶▶; ?	▶▶	REVEAL	▶▶		▶▶	REVEAL	▶▶; HOLD	REVEAL
■; X	■; NICAM	HOLD	■		■; SIZE	HOLD	■; EPG	HOLD
■; ⬇	■; TTX	SIZE	■		■; TIMESHIFT	SIZE	■; TIME SHIFT	SIZE
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 228 F к AUX устройствам

Кнопки пульта IRC 228 F	Код 301		Код 302		Код 303		Код 304	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	DVD/MEDIA		DVD/USB		DVD/USB		DVD/USB/CARD	
AUDIO; NICAM	DISPLAY; ▶▶; LANG.		LANGUAGE		LANGUAGE		AUDIO	
VIDEO; SYS			V-MODE		V-MODE			
☐; ZOOM	☐; ZOOM		ZOOM		ZOOM		ZOOM	
▼; TV					N/P			
☐; ↻			SEARCH		L/R			
☐; LOCK					DEFAULT		ANGLE	
▲; FAV	▲; OPEN/CLOSE		▲		▲; OPEN/CLOSE			
○	○; STANDBY		○		STANDBY		○; STANDBY	
AV	☐; ANGLE		ANGLE		ANGLE		MODE	
⌘	⌘; MUTE		⌘; MUTE		MUTE		⌘; MUTE	
MENU	☐; MENU/PBC		MENU		MENU		MENU/PBC	
EXIT			RESUME		RESUME; DVD/USB			
▲	▲		▲		▲		▲; CH+	
◀	◀		◀		◀		◀	
OK	OK		ENTER		ENTER		OK	
▶	▶		▶		▶		▶	
▼	▼		▼		▼		▼; CH -	
⌘; SETUP	⌘; SETUP		SETUP	N/P	SETUP		SETUP	
♪; TITLE	■; TITLE		TITLE	L/R	TITLE		TITLE	
☐	PROG.		PROG		PBC		PROGRAM	
GUIDE			RAN		PROG			
⏻	Q; TIME		KARAOKE; REMAIN		TIME			
☐	■; SUBTITL.; COPY		SUBT/COPY		SUBTITLE/COPY		SUB/CD-RIP	
RED; ●	○; REPEAT		REPEAT		REPEAT			
GREEN; ▶▶	A-B; L/R		A-B		STEP			
YELLOW; ◀◀					A-B			
BLUE; ▶▶	▶▶; SLOW		SLOW		SLOW			
☐	DISPLAY; ▶▶; LANG.		OSD		DISPLAY		DISPLAY	
☐			RETURN		RETURN		REPEAT	
VOL -	↖		VOLUME -		VOL -		VOLUME -	
VOL +	↗		VOLUME +		VOL +		VOLUME +	
CH V; ◀◀	◀◀; PREV		◀◀; PREV		◀◀; PREV		CH -	◀◀; PREV
CH A; ▶▶	▶▶; NEXT		▶▶; NEXT		▶▶; NEXT		CH+	▶▶; NEXT
±; SAT			10+		10+		GOTO	
CLEAR; X			CLEAR		CLEAR			
◀◀; ●	◀◀; REV		◀◀; REV		◀◀; REV		◀◀; REV	
▶▶; i	▶▶; PLAY/PAUSE		▶▶; PLAY/PAUSE		▶▶; PLAY/PAUSE		▶▶; PLAY/PAUSE	
▶▶; ?	▶▶; FWD		▶▶; FWD		▶▶; FWD		▶▶; FWD	
■; X	■; STOP		■; STOP		■; STOP		STOP	
■; ⬇	▶▶; PLAY/PAUSE		▶▶; PLAY/PAUSE		▶▶; PLAY/PAUSE		▶▶; PLAY/PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0/10		1, 2, ... 9, 0		1, 2, ... 9, 0	

## Функции кнопок пульта IRC 228 F к TV устройствам

Кнопки пульта IRC 228 F	Коды 501-799	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM		
VIDEO ; SYS		
☐ ; ZOOM		
▼ ; TV		
⏪ ; ↻		
☒ ; LOCK		
▲ ; FAV		
⏻	POWER ; ⏻	
AV	TV/VIDEO ; TV/AV	
⌘	MUTE ; ⌘	
MENU		
EXIT		
▲		
◀		
OK		
▶		
▼		
⌘ ; SETUP		
🎵 ; TITLE		
☐		
GUIDE		
⏻		
☐		
RED ; ●		
GREEN ; ▬		
YELLOW ; ◀		
BLUE ; ▶		
☐		
☐		
VOL -	VOLUME ▼ ; ▬-	
VOL +	VOLUME ▲ ; ▬+	
CH V ; ◀◀	CHANNEL ▼ ; P -	
CH ▲ ; ▶▶	CHANNEL ▲ ; P +	
⊕ ; SAT		
CLEAR ; X		
◀◀ ; ●		
▶▶ ; i		
▶▶ ; ?		
■ ; X		
⏻ ; ⏻		
1, 2, ... 9, 0	1, 2, ... 9, 0	

Для просмотра функций кнопок баз кодов 8 и 9 (SAT, STB, DVB устройства) перейдите по следующей ссылке <http://www.pult-irc.ru/files/manual/SatCodesForIrcF.pdf>