

# Приложение IRC 269 F (версия 17.11.24 14:42)

Модели оригинальных пультов и соответствующие им коды пульта IRC приведены в разделе "Коды пульта IRC 269 F".

Функции всех кнопок для каждого кода пульта IRC можно узнать из таблиц данного приложения.

Пульт IRC может иметь дополнительные функции (если указаны в столбце "Доп. функция"). Доступ к ним осуществляется при помощи кнопки SHIFT (см. в инструкции рис.1, п.16). Для доступа к дополнительным функциям нажмите кнопку SHIFT и, **удерживая её нажатой**, нажмите ту кнопку, дополнительная функция которой Вам необходима.

## После первой установки батареек

Кнопка устройства пульта IRC	Код пульта IRC	Кнопка устройства пульта IRC	Код пульта IRC
TV	401	SHIFT + TV*	405
VCR	402	SHIFT + VCR*	406
AUX	403	SHIFT + AUX*	407
SAT	404	SHIFT + SAT*	408

\* Нажмите кнопку SHIFT и, удерживая её нажатой, нажмите и отпустите одну из кнопок пульта: TV, VCR, AUX или SAT.

## Доступные коды пульта IRC 269 F

Номер базы кодов (диапазон кодов)	Устройство базы кодов	Доступные коды пульта IRC
1 (101-199)	-	Нет
2 (201-299)	-	Нет
3 (301-399)	-	Нет
4 (401-499)	SAT	401 - 411
5 (501-599)	TV	501 - 599
6 (601-699)	TV	601 - 699
7 (701-799)	TV	701 - 799
8 (801-899)	SAT	801 - 899
9 (901-999)	SAT	901 - 999

## Коды пульта IRC 269 F

### Коды к устройствам марки GALAXY INNOVATIONS

Модель*	Устр-во	Код
HOF54B1-3	SAT, STB, DVB	403
HOF-55C	SAT, STB, DVB	410
HOF-55D	SAT, STB, DVB	405
HST-317	SAT, STB, DVB	406
JH-656B	SAT, STB, DVB	401
KOR-S45K-1	SAT, STB, DVB	404
S2121	SAT, STB, DVB	407
SAT-01	SAT, STB, DVB	402
SAT-02	SAT, STB, DVB	404
SAT-03	SAT, STB, DVB	408
SAT-04	SAT, STB, DVB	409
UNI	SAT, STB, DVB	411

\* По каталогу «IRC»

**Коды к TV устройствам различных марок**

Марка	Код
AEG	544
AIWA	502, 503, 523, 528, 579, 634, 678, 710, 712, 716
AKAI	501, 503, 512, 516, 520, 522, 524, 525, 537, 538, 540, 545, 546, 547, 550, 571, 572, 582, 583, 584, 585, 598, 608, 613, 626, 652, 673, 691, 704, 722, 731, 769
AKIRA	511, 514, 516, 524, 525, 537, 538, 541, 545, 547, 556, 577, 586, 594, 597, 598, 601, 623, 626, 629, 631, 649, 666, 680, 689, 690, 693, 717, 739, 796, 797, 798, 799
AMCOL	501, 525, 545, 747
ANITECH	501, 525, 726
ATLANTA	501, 751
AVEST	537, 538, 539, 766
BANG & OLUFSEN	728, 737
BBK	522, 551, 594, 597, 684, 701, 788, 792, 793
BEKO	525, 530, 535, 559, 723, 742
BIGSTON	501, 503
BLAUPUNKT	512
BORK	525, 547, 646, 766
BRAND	711
BROKSONIC	501
CAMERON	550, 567, 675, 697, 702, 792, 794
CASIO	529, 705, 706
CASKA	761
CHANGHONG	516, 642
CLATRONIC	501
CONTEC	501, 603, 604, 613
CORTLAND	644
CROWN	501, 503, 511, 524, 525, 530, 571
DAEWOO	501, 508, 518, 520, 525, 526, 536, 538, 539, 546, 565, 571, 576, 598, 613, 685, 687, 692
DARTLAND	501
DAYTRON	501
DIGITAL	547
DISTAR	562, 616
DNS	596, 702, 708
DUAL	746
ELEKTA	501, 503, 520, 525, 527, 615
ELEKTRONIKA	583
ELENBERG	538, 545, 550, 565, 567, 579, 581, 644, 655, 676, 683, 717, 785
EPLUTUS	537, 644, 677, 682, 697, 724
ERC	537, 631, 764
ERISSON	511, 514, 516, 525, 526, 537, 538, 541, 550, 556, 561, 568, 586, 596, 599, 623, 626, 629, 631, 711, 712, 714, 739, 747, 779, 786, 795
EVGO	538, 540, 630
FINLUX	501, 511, 583, 589, 608, 732, 758, 774
FUJITSU	544, 573
FUNAI	501, 502, 503, 504, 505, 525, 537, 538, 581, 603, 764
FUSION	596, 642, 705, 706
GBS	501, 520, 525, 571, 583
GENERAL	537, 556
GOLD STAR - LG	501, 512, 518, 525, 527, 559, 570, 583, 584, 589, 609, 613, 642, 706, 742, 750, 765
GRUNDIG	501, 512, 525, 606, 662, 718, 719, 733
HAIER	518, 526, 561, 574, 657, 667, 669, 707, 778
HAPPY	501
HCM	501, 525
HELIX	701, 702
HIL	503
HITACHI	501, 515, 518, 522, 525, 537, 544, 548, 554, 578, 584, 587, 588, 604, 613, 640, 729, 749, 775, 783
HORIZONT	525, 540, 545, 550, 559, 583, 672, 771
HPC	546
HYUNDAI	516, 522, 525, 526, 537, 540, 541, 546, 547, 550, 556, 580, 596, 597, 599, 626, 642, 650, 655, 705, 711, 714, 717, 760
INNO-HIT	501, 525, 571
IRBIS	596, 714
IVA (ИВА)	537, 561, 637
IZUMI	516, 537, 596, 663, 691, 695, 705, 711, 792
JINLIPI	537, 637, 766
JVC	513, 515, 593, 604, 727
KAMACROWN	571
KANSAI	501, 525
KENSTAR	516
KITT	613, 726
KNEISSEL	753
KONKA	560, 581, 616, 717
LOEWE	542, 709, 744
METZ	745
MITSUBISHI	501, 520, 522, 525, 604, 611, 722, 728, 744
MIYOTA	537, 644, 656
MTC	501, 583
MULTITECH	501
MYSTERY	516, 537, 597, 642, 650, 653, 701, 702, 773, 780, 789
NASH	537
NEC	501, 517, 520, 526, 552, 604, 625, 722
NESCO	501, 525
NOKIA	519, 584, 610, 614, 616, 740, 746, 767
NOVA	501, 616, 638
NOVEX	516, 546, 599
NTT	759
OMEGA	501, 571
ONIDA	513
ONIKS	516, 525, 537, 545, 546, 547
ONWA	524, 525
ORBITA	635
ORION	501, 503, 506, 507, 509, 516, 525, 528, 537, 591, 603, 617, 619, 627, 641, 643, 664, 715, 720, 722, 729, 746
ORSON	526, 537
PANASONIC	512, 531, 532, 752
PHILIPS	501, 511, 524, 525, 540, 549, 628, 639, 707, 748
PHOENIX	613
PHOENIX GOLD	708
PIONEER	555, 566, 575, 647, 666
PIXELVIEW	525
PLANTRON	735
POLAR	525, 526, 537, 538, 540, 543, 547, 581, 596, 599, 663, 664, 683, 703, 711, 717
POLAROID	525
POWER VISION	501

**Коды к TV устройствам различных марок**

Марка	Код
PREMIERA	773
PRESTIGIO	564, 656
PRIMA	522, 547
PROLOGY	653, 655, 777, 784
RADUGA	525, 545, 569, 583, 743
RAINFORD	525, 537, 544, 545
RECOR	511, 525
REKORD	520, 525, 526, 537, 538, 539, 545, 547, 725, 736, 743, 747
RFT	535, 728
ROADSTAR	501, 508, 525, 571
ROLSEN	503, 516, 525, 537, 538, 540, 543, 546, 564, 576, 592, 594, 596, 649, 656, 669, 684, 714, 768, 770
ROVERSCAN	662, 770
RUBIN	504, 516, 525, 537, 546, 583, 619, 665, 714, 776
SABA	510, 521, 602, 756
SALORA	584
SAMSUNG	501, 525, 526, 529, 563, 580, 595, 608, 612, 613, 622, 641, 645, 688, 723, 741
SANSUI	524, 525, 538, 556, 695
SANYO	501, 519, 522, 525, 530, 540, 550, 558, 604, 608, 610, 618, 621, 696, 722, 730, 734, 738
SATELLITE	616
SCARLETT	541, 545
SCHNEIDER	525, 540, 571, 771
SELECO	736, 763
SETRO	520
SHARP	526, 544, 548, 604, 707, 721
SHERION	616
SHIVAKI	501, 503, 508, 516, 518, 520, 525, 526, 527, 536, 538, 539, 540, 545, 546, 547, 550, 556, 580, 583, 585, 596, 599, 609, 619, 630, 632, 635, 636, 643, 644, 664, 681, 694, 743, 791
SIEMENS	512, 525, 660, 726, 734
SIESTA	501, 537, 637
SILELIS	613
SILVER	633
SITRONICS	503, 516, 525, 537, 538, 540, 543, 545, 594, 626, 629, 661, 671, 672, 674, 679, 680, 686, 766
SOKOL	516, 525, 547, 635
SONY	533, 604, 659, 722
SPEKTR	525, 538, 668
START	525, 537, 545, 546, 547
STASSFURT	535, 618
STINOL	525
SUPER	537, 561, 644, 653, 654, 655, 666, 677, 682, 724, 754, 772, 780
SUPRA	501, 508, 516, 518, 520, 525, 527, 529, 536, 537, 541, 563, 579, 580, 596, 597, 612, 643, 687, 690, 705, 706, 712, 713, 790
SUZUKI	516, 556
SVEN	781
TCL	538, 540
TECHNO	501, 525, 538, 544, 546, 556, 568, 579, 596, 599, 644, 664, 703, 791
TECKTON	522, 582, 601, 669, 670
TELEFUNKEN	510, 521, 590, 602, 605, 708, 756, 757
TELEVISION	501, 525, 616
THOMSON	509, 510, 521, 550, 579, 602, 624, 642, 702, 756
TOSHIBA	516, 553, 604, 651, 699, 744
TRONY	516, 525, 537, 538, 550
TVT	511, 525, 530, 535, 538, 583, 586, 620, 723, 742
UNITED	525
VARTA	642
VESTEL	525, 544, 556, 583, 619
VIEWSONIC	557, 698
VITA	547
VITEK	537, 650
VITYAS	525
VOLNA (ВОЛНА)	635
VR	516, 537, 702, 714, 786
WALTHAM	503, 509, 511, 583, 584, 607, 613, 729, 762
XORO	522, 526, 545, 782, 787
НЕИЗВЕСТНАЯ МАРКА	546, 574, 596, 648, 656, 666, 711, 755

Коды к SAT устройствам различных марок

Марка	Код
AIR TONE	968
ALFA GOLD	828
AMINO (СТРИМ)	829, 902
ARION	835
ASTON	811
BBK	931
BIG SAT	839, 840, 903, 936
BIG STAR	965
CADENA	958, 962
CONTINENT	886, 975
COSHIP	855
DAEWOO	872
D-COLOR	946
DELTA SYSTEMS	985
DIVISAT	957, 958
D-LINK	923
DNS	968
DR.HD	983
DRE (GENERAL SATELLITE)	804, 868, 888, 907, 933, 954
DREAM	819
DUNE	927, 934
ECHOSPACE	862
ECHOSTAR	808, 809, 822
ELTEX	987
EUROSKY	840, 880
EUROSTAR	863
EUSTON	825
EVO	965
GALAXY INNOVATIONS	878, 881, 908, 911, 912, 917, 924
GLOBALTEQ	833
GLOBO	909, 915, 925, 935, 945, 956, 973, 999
GOLD STAR - LG	871
GOLDEN INTERSTAR	821, 841, 879, 918
GOLDEN MEDIA	847, 912
GOLDMASTER	911
HITACHI	824, 832
HIVION	929
HOME	968
HOMECAST (ВОЛЯ)	820, 831, 836
HUMAX	803, 804, 823, 848, 860, 861, 905, 949
HYUNDAI	968
ID DIGITAL	804
INTEK	984
KAON	820
KOSMOS	855, 856
LANS	970
LOCUS	946
LUMAX	852, 873, 907, 913, 965, 994
MAG	988
MEDIA COM	825
MOTOROLA	883, 884, 901
MYSTERY	910, 997
NDS	814
NEXT	864
NOKIA	813
NOT	941
ONLIME	905
OPENBOX	827, 835, 869, 870, 911, 990, 991
OPENTECH	972
OPENTEL	865
ORBITA	946, 995
ORIEL	887, 926, 941, 948, 955, 986
PACE	801, 932, 953
PATIX DIGITAL	992
PAUXIS	842, 859
PHILIPS	857, 899
PIONEER	851
POLAR	858
REFLECT	959
RIKOR	916, 947
ROLSEN	930, 941, 942, 961
SAGEMCOM	906
SAMSUNG	803, 810, 812, 854
SEG	818
SEZAM	882
SKY VISION	952, 966, 977, 982
SKYMASTER	830
SKYWAY	911
SKYWORTH	989
STAR	833
STAR TRACK	826, 835, 943
STARNET	885
STRONG	805, 806, 815, 816, 817, 828, 830, 914
SUNNIWELL	875
SUPERBOX	903
SUPERMAX	821, 866, 880, 924
SUPRA	950, 960, 962
TECHNOSAT	852, 853
TEL-ANT	960
TELEFUNKEN	961, 968
TESLER	926
TOP BOX	965
TOPFIELD	837, 838, 877, 891
TOSHIBA	876
TV STAR	967
TVJET	946, 976
VESTEL	820, 824
VU+	919, 920, 921, 922

**Коды к SAT устройствам различных марок**

Марка	Код
WORLD VISION	821, 928, 951, 952
XSAT (НТВ+)	801, 802, 807, 906, 972, 984, 998
YUXING	904
ZYXEL	874
БИЛАЙН	883, 884, 901, 923
ВОЛГАТЕЛЕКОМ	842, 843, 844, 845, 846, 847, 849, 850, 858, 867
ДОМ.RU	820, 905
ДОМОЛИНК	874, 904
МТС	855, 964, 974, 979, 980, 989, 993
НЕИЗВЕСТНАЯ МАРКА	834, 835, 842, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 903, 904, 937, 938, 939, 940, 944, 945, 969, 971, 978, 996
РОСТЕЛЕКОМ	874, 904, 923, 963
СИГНАЛ	968
ТЕЛЕКАРТА	867, 909, 973
ТЕЛЕЦИФРА	968

Функции кнопок пульта IRC 269 F к SAT устройствам

Кнопки пульта IRC 269 F	Код 401		Код 402		Код 403		Код 404		Код 405	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			P+		-		▲; PAGE UP		▶▶; NEXT	
AUDIO; NICAM			Ⓜ?		AUDIO		Ⓜ?		AUDIO	
VIDEO; SYS	FILTER				V.FORMAT		☐; PIP S.LIST		V.FORMAT	
☐; ZOOM	F1; ZOOM		↑	Ⓜ	☐Ⓜ; ZOOM		V.FORMAT	☐; PIP SWAP	Ⓜ; ZOOM	
▼; TV			P-		-		▼; PAGE DOWN		◀◀; PREV	
☐; ↻	Ⓜ		Ⓜ		Ⓜ; USB		☐; PIP		Ⓜ; USB	
☐; LOCK	F4				Ⓜ; FIND		✓		☐▶▶; PLAY MODE	
▲; FAV	F3; ♥		FAV		FAV		FAV	▲; PLAY LIST	FAV	
○	○		○		○; POWER		○		○	
AV	TV/SAT				TV/SAT		TV/SAT		TV/SAT	
Ⓜ	Ⓜ		Ⓜ		Ⓜ; MUTE		Ⓜ		Ⓜ; MUTE	
MENU	MENU		MENU		MENU		☐; MENU		MENU	F1
EXIT	EXIT		EXIT		EXIT		☐; EXIT		EXIT	
▲	CH ▲		▲		▲		▲		▲	
◀	VOL ◀		◀		◀		◀		◀	
OK	OK		OK		OK		OK		OK	
▶	VOL ▶		▶		▶		▶		▶	
▼	CH ▼		▼		▼		▼		▼	
Ⓜ; SETUP					☐▶▶; PLAY MODE		RESOLUTION		▲; PORTAL	F2
♪; TITLE	☐/Ⓜ		☐/Ⓜ		TV/RADIO		TV/RAD; TV/RADIO		TV/RADIO	F3
☐	☐		☐		TXT		☐; TELETEXT		TXT	
GUIDE	EPG		EPG		EPG		☐; EPG		EPG	
○			○		○	Tms	SLEEP		○; SLEEP	TIME SHIFT
☐	☐		WHITE; ☐		☐; FOLDER		☐; SUBTITLE		☐; FOLDER	
RED; ●	RED; SCAN		RED; Ⓜ?		RED; AUDIO	●; REC	RED; Ⓜ	●	RED; AUDIO	●; RECORD
GREEN; ▶▶	GREEN; EDIT CH		GREEN; ☐		GREEN; OPTION		GREEN; Ⓜ		GREEN; OPTION	
YELLOW; ◀◀	YELLOW; TV/SAT		YELLOW; ☐		YELLOW; TXT	◀◀	YELLOW; Ⓜ?		YELLOW; TXT	◀◀
BLUE; ▶▶	BLUE; AV		BLUE; ☐		BLUE	▶▶	BLUE; Ⓜ		BLUE; ☐	▶▶
☐	INFO		INFO		INFO		○; INFO		INFO	
☐	BACK		☐		☐; RECALL		☐; RECALL		☐; RECALL	
VOL -	VOL ◀		◀		VOL -		VOL -		V -	
VOL +	VOL ▶		▶		VOL +		VOL +		V +	
CH V; ◀◀	CH ▼		▼		PAGE -	◀◀; PREV	CH ▼	◀◀	P ▼	◀◀; PREV
CH A; ▶▶	CH ▲		▲		PAGE +	▶▶; NEXT	CH ▲	▶▶	P ▲	▶▶; NEXT
±; SAT	F2; SAT		UHF		SAT		SAT		SAT	
CLEAR; X					F1		UHF		Q; FIND	
◀◀; ○					◀◀; PAGE -		◀◀		◀◀; PAGE -	
▶▶; i					▶▶; PLAY		▶▶; Ⓜ		▶▶; PLAY	
▶▶; ?					▶▶; PAGE +		▶▶		▶▶; PAGE +	
■; Ⓜ					■; STOP		■		■; STOP	
■; Ⓜ					■; PAUSE		■		■; PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0/Ⓜ		1, 2, ... 9,		1, 2, ... 9, 0		1, 2, ... 9, 0/Ⓜ/ZOOM	

Функции кнопок пульта IRC 269 F к SAT устройствам

Кнопки пульта IRC 269 F	Код 406		Код 407		Код 408		Код 409		Код 410	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	▶▶		MOTOR				▶▶		F1	
AUDIO; NICAM	☐		AV+		AUDIO		AUDIO		AUDIO	
VIDEO; SYS	HD		HD		STATUS				Q; FIND	
☐; ZOOM	OPT+		ORT+		16:9/4:3				V.FORMAT	
▼; TV	◀◀		UHF		TV/STB		◀◀		TV/SAT	
☐; ↻	SAVE		SAVE						☐; FOLDER	
☐; LOCK	PAUSE		PAUSE		FIND				☐▶▶; PLAY M.	
▲; FAV	FAV		FAV		FAV		FAV		FAV	
○	○		○; STANDBY		○		○		○; POWER	
AV	TV/SAT	AV+	TV/SAT		USB				Ⓜ; USB	
Ⓜ	Ⓜ		Ⓜ		Ⓜ				Ⓜ; MUTE	
MENU	MENU		MENU		MENU		MENU		MENU	
EXIT	EXIT		◀◀; EXIT		EXIT		EXIT		EXIT	
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀		◀		◀	
OK	OK		OK		OK		OK		OK	
▶	▶		▶		▶		▶		▶	
▼	▼		▼		▼		▼		▼	
Ⓜ; SETUP	SCREEN		FINE TUNE		OPTION				OPTION	
♪; TITLE	TV/RADIO		TV/RADIO		TV/RADIO		TV/RADIO		TV/RADIO	
☐	☐		☐; PVR LIST		TXT		TEXT		TTX	
GUIDE	EPG		☐; EPG		EPG		EPG		EPG	
○	○		SLEEP		SLEEP				○	Tms
☐	☐		COLOR		SUBT		SUBTITLE		SUBTITLE	
RED; ●	RED	●	RED; ◀◀	●; REC	RED; ●; REC	●; REC	RED	REC	RED; AUDIO	●; REC
GREEN; ▶▶	GREEN		GREEN; ▶▶		GREEN; ■; STOP		GREEN		GREEN; OPTION	
YELLOW; ◀◀	YELLOW		YELLOW; ■		YELLOW; ■; ■	◀◀	YELLOW		YELLOW	◀◀
BLUE; ▶▶	BLUE	▶▶	BLUE; ■■		BLUE; ▶▶; PLAY	▶▶	BLUE		BLUE	▶▶
☐	i		i; INFO		INFO		i		INFO	
☐	☐		☐		☐		RECALL		☐; RECALL	
VOL -	VOL -		◀		◀		VOL -		VOL -	
VOL +	VOL +		▶		▶		VOL +		VOL +	
CH V; ◀◀	CH ▼	◀◀	▼		P-		PAGE -	◀◀	PAGE -	◀◀; PREV
CH A; ▶▶	CH ▲	▶▶	▲		P+		PAGE +	▶▶	PAGE +	▶▶; NEXT
±; SAT	SAT		SAT		TV/STB		SAT		SAT	
CLEAR; X			X+				L/M		WHITE	
◀◀; ○	◀◀		◀◀		◀◀		◀◀		◀◀; PAGE-	
▶▶; i	▶▶		▶▶		▶▶; PLAY		▶▶		▶▶; PLAY	
▶▶; ?	▶▶		▶▶		▶▶		▶▶		▶▶; PAGE+	
■; Ⓜ	■		■		■; STOP		■		■; STOP	
■; Ⓜ	■		■		■; PAUSE		■		■; PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0/Ⓜ		1, 2, ... 9, 0		1, 2, ... 9, 0/Ⓜ	

## Функции кнопок пульта IRC 269 F к SAT устройствам

Кнопки пульта IRC 269 F	Код 411	
	Функция	Доп. функция
▲ ; DVD	KODI	
AUDIO ; NICAM	AUDIO	
VIDEO ; SYS	DLNA	
☐ ; ZOOM	WEB	
▼ ; TV	IPTV	
☐ ; ↻	↻	
☒ ; LOCK		
▲ ; FAV	FAV	
○	○	
AV		
✳	MUTE	
MENU	MENU	
EXIT	EXIT	
▲	▲	
◀	◀	
OK	OK	
▶	▶	
▼	▼	
✳ ; SETUP	HOME	
♪ ; TITLE	TV/R	
☐	REC.LIST	
GUIDE	EPG	
⏻	TIME SHIFT	
☐	SUBT	
RED ; ●	RED ; TTX	REC
GREEN ; ▯	GREEN ; SUBT	
YELLOW ; ◀	YELLOW ; REC	
BLUE ; ▯	BLUE ; TIME SHIFT	
☐	INFO	
☐	RECALL	
VOL -	VOL -	
VOL +	VOL +	
CH V ; ◀◀	PAGE -	◀◀
CH A ; ▶▶	PAGE +	▶▶
± ; SAT	SAT	
CLEAR ; X	DEL	
◀◀ ; ●	◀◀	
▶▶ ; i	▶▶	
▶▶ ; ?	▶▶	
■ ; ✕	■	
■ ; ⏻	▶▶	
1, 2, ... 9, 0	1, 2, ... 9, 0	

## Функции кнопок пульта IRC 269 F к TV устройствам

Кнопки пульта IRC 269 F	Коды 501-799	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM		
VIDEO ; SYS		
☐ ; ZOOM		
▼ ; TV		
☐ ; ↻		
☒ ; LOCK		
▲ ; FAV		
○	POWER ; ○	
AV	TV/VIDEO ; TV/AV	
✳	MUTE ; ✳	
MENU		
EXIT		
▲		
◀		
OK		
▶		
▼		
✳ ; SETUP		
♪ ; TITLE		
☐		
GUIDE		
⏻		
☐		
RED ; ●		
GREEN ; ▯		
YELLOW ; ◀		
BLUE ; ▯		
☐		
☐		
VOL -	VOLUME ▼ ; ◀-	
VOL +	VOLUME ▲ ; ▶+	
CH V ; ◀◀	CHANNEL ▼ ; P -	
CH A ; ▶▶	CHANNEL ▲ ; P +	
± ; SAT		
CLEAR ; X		
◀◀ ; ●		
▶▶ ; i		
▶▶ ; ?		
■ ; ✕		
■ ; ⏻		
1, 2, ... 9, 0	1, 2, ... 9, 0	

Для просмотра функций кнопок баз кодов 8 и 9 (SAT, STB, DVB устройства) перейдите по следующей ссылке <http://www.pult-irc.ru/files/manual/SatCodesForIrcF.pdf>