

Приложение IRC 28 F (версия 18.06.04 02:36)

Модели оригинальных пультов и соответствующие им коды пульта IRC приведены в разделе "Коды пульта IRC 28 F".

Функции всех кнопок для каждого кода пульта IRC можно узнать из таблиц данного приложения.

Пульт IRC может иметь дополнительные функции (если указаны в столбце "Доп. функция"). Доступ к ним осуществляется при помощи кнопки SHIFT (см. в инструкции рис.1, п.16). Для доступа к дополнительным функциям нажмите кнопку SHIFT и, удерживая её нажатой, нажмите ту кнопку, дополнительная функция которой Вам необходима.

После первой установки батареек

Кнопка устройства пульта IRC	Код пульта IRC	Кнопка устройства пульта IRC	Код пульта IRC
TV	101	SHIFT + TV*	301
VCR	102	SHIFT + VCR*	302
AUX	103	SHIFT + AUX*	303
SAT	104	SHIFT + SAT*	304

* Нажмите кнопку SHIFT и, удерживая её нажатой, нажмите и отпустите одну из кнопок пульта: TV, VCR, AUX или SAT.

Доступные коды пульта IRC 28 F

Номер базы кодов (диапазон кодов)	Устройство базы кодов	Доступные коды пульта IRC
1 (101-199)	TV	101 - 160
2 (201-299)	VCR	201 - 205
3 (301-399)	AUX	301 - 318
4 (401-499)	SAT	401 - 404
5 (501-599)	TV	501 - 599
6 (601-699)	TV	601 - 699
7 (701-799)	TV	701 - 740
8 (801-899)	SAT	801 - 899
9 (901-999)	SAT	901 - 999

Коды пульта IRC 28 F

Коды к устройствам марки SUPRA

Модель*	Устр-во	Код
0070-37	VCR	203
0762061030	VCR	202
105-057H	TV	101
105-188H	TV/VCR	107
105-188Q	TV/VCR	107
105-195N	TV	104
105-198C	TV	104
105-198K	TV	104
105-198N	TV	104
105-198W	TV	114
105-209A	TV	104
105-209F	TV	101
1CE3	TV	119
210-Y8810	TV	144
3F14-00034-843	TV	101
3F14-00034-981	TV	106
97P1809300C	TV/VCR	201
991RT080	TV	116
AUX-01	AUX, CD, DVD	316
AUX-02	AUX, CD, DVD	318
CGE-868	AUX, CD, DVD	313
DVB-01	SAT, STB, DVB	404
DVB-T2A	SAT, STB, DVB	403
DVD-01	AUX, CD, DVD	308
DVS-111	AUX, CD, DVD	305
DVS-200X	AUX, CD, DVD	317
DVS-217XK	AUX, CD, DVD	310
E05-SMT-TECH	TV	160
ER-22601A	TV	154
ER-22654	TV	147
GHB-138	AUX, CD, DVD	312
HOF10K745GPD6	TV/AUX	136
HOF14G432GPD1	TV	146
HOF15I373GPD10	TV	146
HOF-55D	TV/AUX	124
J1274W	TV	158
JH-11370	TV/AUX	137
JJ-301	AUX, CD, DVD	309
JX-2002B	AUX, CD, DVD	303
JX-2008A	AUX, CD, DVD	307
JX-3002B	AUX, CD, DVD	315
JX-3010	AUX, CD, DVD	309
JX-3010A	AUX, CD, DVD	309
KM-1118-1	AUX, CD, DVD	304
KM-318	AUX, CD, DVD	302

Модель	Устр-во	Код
KM-968B	AUX, CD, DVD	306
KT6957	TV/AUX	127
PP5170	TV	102
QH1379	AUX, CD, DVD	301
R-10W	TV	101
R-10W-1	TV	101
R-18A	TV	102
R28A	TV	112
R-29C13	TV/VCR	110
R-33C	TV	109
RC 9751M	TV	101
RC02-CH	TV	130
RC03-51	TV	119
RC03-P5+	TV	119
RC10B	TV	123
RC10W	TV	123
RC-11	TV	145
RC11B	TV	123
RC13A	TV/AUX	133
RC13B	TV/AUX	133
RC14B	TV/AUX	133
RC15B	TV/AUX	131
RC18B	TV/AUX	131
RC1B	TV/AUX	128
RC2000E02	TV	152
RC20B	TV/AUX	131
RC21B	TV/AUX	131
RC21B-1	TV	140
RC3B	TV	139
RC4DB	TV/AUX	121
RC5DB	TV/AUX	132
RC6W	TV/AUX	131
RC7B	TV/AUX	131
RC7DB	TV/AUX	132
RC8B	TV/AUX	131
RC-97027A	VCR	205
RC-9820	TV	113
RCF3B	TV/AUX	131
RC-I18-0B	TV	149
RCI2	TV/AUX	135
RCK-144	TV	103
RE2700A	TV	111
RE2800	TV	108
RL-008	AUX, CD, DVD	314
RM-101	TV	103

Модель	Устр-во	Код
RM-105	TV	105
RM-107	TV	106
RM-109	TV	101
RS41-DCG	SAT	159
SDT-100	SAT, STB, DVB	401
SDT-92E	SAT, STB, DVB	402
SHT-204XKII	AUX, CD, DVD	311
ST-20J17	TV	101
ST21K22	TV	115
ST29J40	TV	101
STV-LC1522W	TV	118
STV-LC1995WL	TV	157
STV-LC19T800WL	TV	156
STV-LC19T860WL	TV/AUX	129
STV-LC24T740	TV	155
STV-LC32LT0011W	TV	156
STV-LC32T840WL	TV	151
STV-LC50S660FL	TV	148
SV-91	VCR	204
TV-01	TV	123
TV-02	TV	118
TV-03	TV	130
TV-04	TV	141
TV-05	TV	142
TVD34-M2	TV/AUX	122
TV-DVD-01	TV/AUX	120
TV-DVD-02	TV/AUX	121
TV-DVD-03	TV/AUX	124
TV-DVD-04	TV/AUX	125
TV-DVD-05	TV/AUX	126
TV-DVD-06	TV/AUX	117
TV-DVD-07	TV/AUX	134
VS-068A	TV	101
WF-018R	TV	138
Y-52	TV	150
Y-72C	TV/AUX	129
Y-72C2	TV	153
Y72C3	TV	143
Y72C5	TV	143
YS52D-A	TV/AUX	129

* По каталогу «IRC»

Коды к TV устройствам различных марок

Марка	Код
AEG	544
AIWA	502, 503, 523, 528, 579, 634, 678, 710, 712, 716
AKAI	501, 503, 512, 516, 520, 522, 524, 525, 537, 538, 540, 545, 546, 547, 550, 571, 572, 582, 583, 584, 585, 598, 608, 613, 626, 652, 673, 691, 704, 722, 731
AKIRA	511, 514, 516, 524, 525, 537, 538, 541, 545, 547, 556, 577, 586, 594, 597, 598, 601, 623, 626, 629, 631, 649, 666, 680, 689, 690, 693, 717, 739
AMCOL	501, 525, 545
ANITECH	501, 525, 726
ATLANTA	501
AVEST	537, 538, 539
BANG & OLUFSEN	728, 737
BBK	522, 551, 594, 597, 684, 701
BEKO	525, 530, 535, 559, 723
BIGSTON	501, 503
BLAUPUNKT	512
BORK	525, 547, 646
BRAND	711
BROKSONIC	501
CAMERON	550, 567, 675, 697, 702
CASIO	529, 705, 706
CHANGHONG	516, 642
CLATRONIC	501
CONTEC	501, 603, 604, 613
CORTLAND	644
CROWN	501, 503, 511, 524, 525, 530, 571
DAEWOO	501, 508, 518, 520, 525, 526, 536, 538, 539, 546, 565, 571, 576, 598, 613, 685, 687, 692
DARTLAND	501
DAYTRON	501
DIGITAL	547
DISTAR	562, 616
DNS	596, 702, 708
ELEKTA	501, 503, 520, 525, 527, 615
ELEKTRONIKA	583
ELENBERG	538, 545, 550, 565, 567, 579, 581, 644, 655, 676, 683, 717
EPLUTUS	537, 644, 677, 682, 697, 724
ERC	537, 631
ERISSON	511, 514, 516, 525, 526, 537, 538, 541, 550, 556, 561, 568, 586, 596, 599, 623, 626, 629, 631, 711, 712, 714, 739
EVGO	538, 540, 630
FINLUX	501, 511, 583, 589, 608, 732
FUJITSU	544, 573
FUNAI	501, 502, 503, 504, 505, 525, 537, 538, 581, 603
FUSION	596, 642, 705, 706
GBS	501, 520, 525, 571, 583
GENERAL	537, 556
GOLD STAR - LG	501, 512, 518, 525, 527, 559, 570, 583, 584, 589, 609, 613, 642, 706
GRUNDIG	501, 512, 525, 606, 662, 718, 719, 733
HAIER	518, 526, 561, 574, 657, 667, 669, 707
HAPPY	501
HCM	501, 525
HELIX	701, 702
HIL	503
HITACHI	501, 515, 518, 522, 525, 537, 544, 548, 554, 578, 584, 587, 588, 604, 613, 640, 729
HORIZONT	525, 540, 545, 550, 559, 583, 672
HPC	546
HYUNDAI	516, 522, 525, 526, 537, 540, 541, 546, 547, 550, 556, 580, 596, 597, 599, 626, 642, 650, 655, 705, 711, 714, 717
INNO-HIT	501, 525, 571
IRBIS	596, 714
IVA (IIBA)	537, 561, 637
IZUMI	516, 537, 596, 663, 691, 695, 705, 711
JINLIPI	537, 637
JVC	513, 515, 593, 604, 727
KAMACROWN	571
KANSAI	501, 525
KENSTAR	516
KITT	613, 726
KONKA	560, 581, 616, 717
LOEWE	542, 709
MITSUBISHI	501, 520, 522, 525, 604, 611, 722, 728
MIYOTA	537, 644, 656
MTC	501, 583
MULTITECH	501
MYSTERY	516, 537, 597, 642, 650, 653, 701, 702
NASH	537
NEC	501, 517, 520, 526, 552, 604, 625, 722
NESCO	501, 525
NOKIA	519, 584, 610, 614, 616, 740
NOVA	501, 616, 638
NOVEX	516, 546, 599
OMEGA	501, 571
ONIDA	513
ONIKS	516, 525, 537, 545, 546, 547
ONWA	524, 525
ORBITA	635
ORION	501, 503, 506, 507, 509, 516, 525, 528, 537, 591, 603, 617, 619, 627, 641, 643, 664, 715, 720, 722, 729
ORSON	526, 537
PANASONIC	512, 531, 532
PHILIPS	501, 511, 524, 525, 540, 549, 628, 639, 707
PHOENIX	613
PHOENIX GOLD	708
PIONEER	555, 566, 575, 647, 666
PIXELVIEW	525
PLANTRON	735
POLAR	525, 526, 537, 538, 540, 543, 547, 581, 596, 599, 663, 664, 683, 703, 711, 717
POLAROID	525
POWER VISION	501
PRESTIGIO	564, 656
PRIMA	522, 547
PROLOGY	653, 655
RADUGA	525, 545, 569, 583
RAINFORD	525, 537, 544, 545

Коды к TV устройствам различных марок

Марка	Код
RECOR	511, 525
REKORD	520, 525, 526, 537, 538, 539, 545, 547, 725, 736
RFT	535, 728
ROADSTAR	501, 508, 525, 571
ROLSEN	503, 516, 525, 537, 538, 540, 543, 546, 564, 576, 592, 594, 596, 649, 656, 669, 684, 714
ROVERSCAN	662
RUBIN	504, 516, 525, 537, 546, 583, 619, 665, 714
SABA	510, 521, 602
SALORA	584
SAMSUNG	501, 525, 526, 529, 563, 580, 595, 608, 612, 613, 622, 641, 645, 688, 723
SANSUI	524, 525, 538, 556, 695
SANYO	501, 519, 522, 525, 530, 540, 550, 558, 604, 608, 610, 618, 621, 696, 722, 730, 734, 738
SATELLITE	616
SCARLETT	541, 545
SCHNEIDER	525, 540, 571
SELECO	736
SETRO	520
SHARP	526, 544, 548, 604, 707, 721
SHERION	616
SHIVAKI	501, 503, 508, 516, 518, 520, 525, 526, 527, 536, 538, 539, 540, 545, 546, 547, 550, 556, 580, 583, 585, 596, 599, 609, 619, 630, 632, 635, 636, 643, 644, 664, 681, 694
SIEMENS	512, 525, 660, 726, 734
SIESTA	501, 537, 637
SILELIS	613
SILVER	633
SITRONICS	503, 516, 525, 537, 538, 540, 543, 545, 594, 626, 629, 661, 671, 672, 674, 679, 680, 686
SOKOL	516, 525, 547, 635
SONY	533, 604, 659, 722
SPEKTR	525, 538, 668
START	525, 537, 545, 546, 547
STASSFURT	535, 618
STINOL	525
SUPER	537, 561, 644, 653, 654, 655, 666, 677, 682, 724
SUPRA	501, 508, 516, 518, 520, 525, 527, 529, 536, 537, 541, 563, 579, 580, 596, 597, 612, 643, 687, 690, 705, 706, 712, 713
SUZUKI	516, 556
TCL	538, 540
TECHNO	501, 525, 538, 544, 546, 556, 568, 579, 596, 599, 644, 664, 703
TECKTON	522, 582, 601, 669, 670
TELEFUNKEN	510, 521, 590, 602, 605, 708
TELEVISION	501, 525, 616
THOMSON	509, 510, 521, 550, 579, 602, 624, 642, 702
TOSHIBA	516, 553, 604, 651, 699
TRONY	516, 525, 537, 538, 550
TVT	511, 525, 530, 535, 538, 583, 586, 620, 723
UNITED	525
VARTA	642
VESTEL	525, 544, 556, 583, 619
VIEWSONIC	557, 698
VITA	547
VITEK	537, 650
VITYAS	525
VOLNA (ВОЛНА)	635
VR	516, 537, 702, 714
WALTHAM	503, 509, 511, 583, 584, 607, 613, 729
XORO	522, 526, 545
НЕИЗВЕСТНАЯ МАРКА	546, 574, 596, 648, 656, 666, 711

Коды к SAT устройствам различных марок

Марка	Код
AIR TONE	968
ALFA GOLD	828
AMINO (СТРИМ)	829, 902
ARION	835
ASTON	811
BBK	931
BIG SAT	839, 840, 903, 936
BIG STAR	965
CADENA	958, 962
CONTINENT	886, 975
COSHIP	855
DAEWOO	872
D-COLOR	946
DELTA SYSTEMS	985
DIVISAT	957, 958
D-LINK	923
DNS	968
DR.HD	983
DRE (GENERAL SATELLITE)	804, 868, 888, 907, 933, 954
DREAM	819
DUNE	927, 934
ECHOSPACE	862
EHOSTAR	808, 809, 822
ELTEX	987
EUROSKY	840, 880
EUROSTAR	863
EUSTON	825
EVO	965
GALAXY INNOVATIONS	878, 881, 908, 911, 912, 917, 924
GLOBALTEQ	833
GLOBO	909, 915, 925, 935, 945, 956, 973, 999
GOLD STAR - LG	871
GOLDEN INTERSTAR	821, 841, 879, 918
GOLDEN MEDIA	847, 912
GOLDMASTER	911
HITACHI	824, 832
HIVION	929
HOME	968
HOMECAST (ВОЛЯ)	820, 831, 836
HUMAX	803, 804, 823, 848, 860, 861, 905, 949
HYUNDAI	968
ID DIGITAL	804
INTEK	984
KAON	820
KOSMOS	855, 856
LANS	970
LOCUS	946
LUMAX	852, 873, 907, 913, 965, 994
MAG	988
MEDIA COM	825
MOTOROLA	883, 884, 901
MYSTERY	910, 997
NDS	814
NEXT	864
NOKIA	813
NOT	941
ONLIME	905
OPENBOX	827, 835, 869, 870, 911, 990, 991
OPENTECH	972
OPENTEL	865
ORBITA	946, 995
ORIEL	887, 926, 941, 948, 955, 986
PACE	801, 932, 953
PATIX DIGITAL	992
PAUXIS	842, 859
PHILIPS	857, 899
PIONEER	851
POLAR	858
REFLECT	959
RIKOR	916, 947
ROLSEN	930, 941, 942, 961
SAGEMCOM	906
SAMSUNG	803, 810, 812, 854
SEG	818
SEZAM	882
SKY VISION	952, 966, 977, 982
SKYMASTER	830
SKYWAY	911
SKYWORTH	989
STAR	833
STAR TRACK	826, 835, 943
STARNET	885
STRONG	805, 806, 815, 816, 817, 828, 830, 914
SUNNIWELL	875
SUPERBOX	903
SUPERMAX	821, 866, 880, 924
SUPRA	950, 960, 962
TECHNOSAT	852, 853
TEL-ANT	960
TELEFUNKEN	961, 968
TESLER	926
TOP BOX	965
TOPFIELD	837, 838, 877, 891
TOSHIBA	876
TV STAR	967
TVJET	946, 976
VESTEL	820, 824
VU+	919, 920, 921, 922

Коды к SAT устройствам различных марок

Марка	Код
WORLD VISION	821, 928, 951, 952
XSAT (НТВ+)	801, 802, 807, 906, 972, 984, 998
YUXING	904
ZYXEL	874
БИЛАЙН	883, 884, 901, 923
ВОЛГАТЕЛЕКОМ	842, 843, 844, 845, 846, 847, 849, 850, 858, 867
ДОМ.RU	820, 905
ДОМОЛИНК	874, 904
МТС	855, 964, 974, 979, 980, 989, 993
НЕИЗВЕСТНАЯ МАРКА	834, 835, 842, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 903, 904, 937, 938, 939, 940, 944, 945, 969, 971, 978, 996
РОСТЕЛЕКОМ	874, 904, 923, 963
СИГНАЛ	968
ТЕЛЕКАРТА	867, 909, 973
ТЕЛЕЦИФРА	968

Функции кнопок пульта IRC 28 F к TV устройствам

Кнопки пульта IRC 28 F	Код 101		Код 102		Код 103		Код 104		Код 105	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	DBB	HUE +	⊕ ⊗ ⊕ ▲		COLOUR + ; ⊕ +		SEL.; PIP INP.; BLUE		Q.VIEW ; + ; ↑	
AUDIO ; NICAM	I-II ; Q ; M ; STEREO						SSM ; DASP ; SSM*	I / II ; MTS ; III*	S-SEL	
VIDEO ; SYS	PAL/SECAM ; NIC.		SYSTEM		MODE ; P/S		APC ; PSM	EYE/*	P-SEL	
⊞ ; ZOOM	⊞				SIZE		WIN.SIZE	SPLIT ZOOM	SIZE	
▼ ; TV	TV ; □	HUE -	⊕ ⊗ ⊕ ▼		COLOUR - ; ⊕ -		TV/CATV ; TV		↓	
⊞ ; ↻	▶▶ ; AST;SEAR.; Q.V.		PRESET		PIP		ON/OFF; PIP; PIP/DW	CH.SEAR.; INDEX; ⊞	PIP ON/OFF; IDIOMA	
⊞ ; LOCK	↔◀◀ ; P.P. ; OK				STILL		PP ; PSM ; NORMAL	STILL ; HOLD ; ⊞	RESET ; NORM/CL.	
▲ ; FAV	MEMO				FC		FCR ; FAVOURITE	WIN.POSITION		
⊞	⊞ ; OFF; STAND BY		⊞		POWER ; ⊞		POWER		POWER	
AV	AV ; ◀▶ ; VIDEO	⊞ ; CLEAR	⊞ AV		TV/VIDEO ; TV/AV		TV/AV ; INPUT SEL.		TV/VIDEO	
⊞	⊞ ; MUTE ; ⊞		⊞ ; MUTE		MUTE ; ⊞		MUTE		MUTE	
MENU	MENU		MENU		FUNCT ; MENU		MENU ; SET-UP	PIP MENU	AUTO/MAN SYS. ; +	
EXIT	Arret						AVL			
▲	⊕ + ; ▲	⊗ +	AUTO/S ▲		FUN+ ; + ; ▲ ; ZOOM		▲ ; ZOOM IN ; ZOOM +		MODE ▲	
◀	FINE - ; FT ; TUNE ◀	⊗ -	FT ▼		⊗ - ; ⊗ -		◀			
OK	MENU ; F ; PIC ; SEL		SELECT		PIC SEL ; FUNCT		OK ; ENTER			
▶	FINE+ ; FT+ ; TUNE ▶	⊕ +	FT ▲		⊕ + ; ⊕ +		▶			
▼	⊕ - ; ▼	⊗ -	AUTO/S ▼		FUN- ; - ; ▼ ; ▶▶		▼ ; ZOOM OUT ; Z-M -		MODE ▼	
⊞ ; SETUP	SMART CONT. PICT		Q.VIEW		PIC ; SET ON TIME		PICTURE	PICTURE TURBO	PIC. MODE ; P-MODE	
♪ ; TITLE	SMART CO. SOUND		AFT/BAND		X ON TIME		SOUND	PSEUDO; P.STEREO		
⊞	⊞ ; TTR ; TTX	⊞ ⊞ ; MIX ; TMM	ON TIMER		MIN ; MINUTE		TEXT ; ⊞ ; TEXT/*	MIX ; ⊞	S-MODE ; CLOCK	
GUIDE	SYS ; 13- 24		TIMER ENABLE		HR ; HR CLOCK		EXCH.; SWAP; YELL.		HR	
⊞	TIMER ; SLEEP ; ⊞		SLEEP		SLEEP; OFF TIME.; ⊞		SLEEP	MODE ; ⊞ ; SLEEP	SLEEP ; AC	
⊞	⊞ ; SPAT. ; ⊞		HR				LIST	CAPTION	TIMER	
RED ; ●	RED ; ♯ ; Pon	♯ -	2-		1- ; 10-		RED ; PR -	AUTO PROG.	MINUTE ; MIN	
GREEN ; ▶▶	GREEN ; ♯ ; Pst	♯ +	3-		2-		GREEN ; PR +	MEMORY / ERASE	TIME ON ; MENU 2	
YELLOW ; ◀◀	YELLOW ; ⊞ ; Psz	◀	4-		3- ; SCAN		YELLOW ; SWAP	ARC ; *	TIME OFF ; MENU 1	
BLUE ; ▶▶	BLUE ; ⊞ ; ◀	▶	MINUTE		4- ; MSG		BLUE ; INPUT	MULTIMEDIA ; *	MANUAL SYS. ; X	
⊞	DISPLAY; STAT.; ⊞		CH CALL		RECALL ; DISPLAY		Q.VIEW ; REVIEW		RECALL	
⊞	P◀P ; Q.VIEW ; ⊞				⊞ ; Q.VIEW ; ⊞		RECALL		ROTATE	
VOL -	VOL - ; ◀ ; -	◀▶◀ ; ◀▶	◀		VOLUME ▼ ; ◀-		VOL ◀	FINE -	VOLUME ▼	
VOL +	VOL + ; ▶ ; +	▶▶▶ ; ▶▶	▶		VOLUME ▲ ; ▶+		VOL ▶	FINE +	VOLUME ▲	
CH V ; ◀◀	P- ; CH - ; PROG -	◀ -	PR ▼		CHANNEL ▼ ; P -		PR ▼	CH - / * ; RED; EYE/*	CHANNEL ▼	
CH A ; ▶▶	P+ ; CH + ; PROG +	▶ +	PR ▲		CHANNEL ▲ ; P +		PR ▲	CH + ; CH +/* ; GREEN	CHANNEL ▲	
⊞ ; SAT	-/- ; PAGE + ; ⊞		1-		⊞		-/- ; -		1* ; -/-	
CLEAR ; X	PIC; TPD; PAGE - ⊞ ; ⊞ ; SYS ; PIP ; ⊞		SKIP		RESET ; CANCEL ; X		POSIT.; UPDATE; ⊞	POSIT.; UPDATE; ⊞	2* ; STORE ; =	
◀◀ ; ⊞	⊞ ; TSC; SUB. PAGE						TIME ; ⊞			
▶▶ ; i	⊞ ; X ; T INDEX ; ⊞						9/4 PIP ; ⊞ ; INDEX			
▶▶ ; ?	⊞ ; ⊞ ; REV						REVEAL ; ⊞			
⊞ ; X	⊞ ; TPH; STORE						HOLD ; STILL ; ⊞	HOLD ; ⊞		
⊞ ; ⊞	⊞ ; TST						SIZE ; ⊞	SIZE ; ⊞	STILL/STROBO	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 28 F к TV устройствам

Кнопки пульта IRC 28 F	Код 106		Код 107		Код 108		Код 109		Код 110	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD							CH ▲		INDEX ▶▶	
AUDIO ; NICAM			BAND			SURROUND				
VIDEO ; SYS			V.SYSTEM			SYSTEM ; L/F/T				
⊞ ; ZOOM						16:9				
▼ ; TV			TV ON/OFF		TV/VIDEO		CH ▼		INDEX ◀◀	
⊞ ; ↻			MEMORY			PinP	STORE		SEARCH	
⊞ ; LOCK			RESET	P.P	PRESET		STILL		COUNTER RESET	
▲ ; FAV			EJECT			SWAP				
⊞	POWER		POWER		POWER	OFF ; ⊞			TV POWER	POWER
AV	TV/VIDEO		TV/AV		TV/VIDEO	⊞ ; TV/VIDEO ; ⊞ ; ⊞	TV/VIDEO		TV/AV	
⊞	⊞		MUTE		MUTE	⊞ ; MUTE			⊞	
MENU			MENU		MENU	MENU ; ⊞			MENU	
EXIT			ADD/DEL		SKIP	MENU OFF				
▲	MODE ▲		+		PRO ▲	Ω ▲			▲	
◀	FINE ▼		TRK -		VOL ▼				◀	
OK			A.TRK							
▶	FINE ▲		TRK +		VOL ▲		E; ENTER; OK; ⊞ ; ⊞		▶	
▼	MODE ▼		-		PRO ▼		Ω ▼		▼	
⊞ ; SETUP	P-MODE		SETUP		PICTURE		⊞ ; TV/TEXT			
♪ ; TITLE			VISS				⊞ ; ⊞			
⊞			PICTURE		STATUS		⊞ ; TEXT ; ?		ATK	
GUIDE							2 PIC			
⊞	SLEEP		SLEEP		SLEEP	SLEEP ; ⊞ ; ⊞			SLEEP	
⊞					CLOCK		NORMAL ; ⊞ ; ⊞			
RED ; ●	BRIGHT ▼		● REC				RED ; DEL ; DELETE			REC/OTR
GREEN ; ▶▶	BRIGHT ▲						GREEN ; MOVE			
YELLOW ; ◀◀	COLOR ▼						YELLOW ; TIME ; ⊞			
BLUE ; ▶▶	COLOR ▲						BLUE ; MODE		▶▶ ; SLOW	
⊞	STD		DISPLAY		DISPLAY		POSITION		OSD	
⊞	RECALL						RECALL ; ⊞			
VOL -	VOL ▼		VOL -		VOL ▼		VOL ◀ ; ◀ ; ⊞		VOL/V-LOCK ▼	
VOL +	VOL ▲		VOL +		VOL ▲		VOL ▶ ; ▶ ; ⊞		VOL/V-LOCK ▲	
CH V ; ◀◀	CH ▼		PR -		PRO ▼		PR ▼ ; ▼ ; ⊞		CH/TRK ▼	INDEX ◀◀
CH A ; ▶▶	CH ▲		PR +		PRO ▲		PR ▲ ; ▲ ; ⊞		CH/TRK ▲	INDEX ▶▶
⊞ ; SAT	1*		-/-		-/-		-/-		SPEED	
CLEAR ; X	2*		CLR/MON		-		SKIP ; ⊞ ; ♯ ; WOOF.	SKIP	COUNTER ⊞ STOP	
◀◀ ; ⊞			◀◀ (REW)				TIME ; ⊞		◀◀ ; REW	
▶▶ ; i			▶▶ (PLAY)				⊞		▶▶ ; PLAY	
▶▶ ; ?			▶▶ (F.FWD)				⊞		▶▶ ; F.FWD	
⊞ ; X			■ (STOP)				SURROUND ; ⊞		■ ; STOP	
⊞ ; ⊞			■ (PAUSE)				⊞		■ ; PAUSE/STILL	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 28 F к TV устройствам

Кнопки пульта IRC 28 F	Код 111		Код 112		Код 113		Код 114		Код 115	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD					FINE TUNING +		Ω		SYS.; Ⓞ	
AUDIO; NICAM			LANGUAGE				A/B; I-II; DUAL			
VIDEO; SYS					PREVIOUS; SYST.		A#B; Ⓞ; I-II			
Ⓞ; ZOOM	ADD/ERASE				10X		16:9; Ⓞ	Ⓞ		
▼; TV					FINE TUNING -		□			
Ⓞ; ↗	STORE		AUTO SEARCH				PIP	S; Ⓞ; >>		
Ⓞ; LOCK	RESET		NORMAL/OK		PIC RESET; NORM.		→←; NORM; PP	M; MEMO	P.P.	LOCK; LING.
▲; FAV							L/F			
Ⓞ	POWER		Ⓞ		POWER		Ⓞ; ST-BY		Ⓞ	
AV	TV/VIDEO		Ⓞ; TV/VIDEO		TV/AV		AV		A.V.; AV/TV	
⌘	MUTE		⌘		MUTE		⌘; MUTE		⌘	
MENU	MENU		MENU; 100		MENU		MENU		MENU; PRESET	
EXIT	SKIP		E; Ⓞ; TV/CATV		SKIP		Ⓞ		OFF	
▲	Ⓞ		▲		MENU +		Ⓞ +			
◀					VOL -; -		Ⓞ -	Ⓞ -		
OK			SET/RESET				OK			
▶					VOL +; +		Ⓞ +	Ⓞ +		
▼	Ⓞ		▼		MENU -		Ⓞ -			
⌘; SETUP	PICTURE		PICTURE		PIC SEL; FUNCTION		SWAP; Ⓞ; Ⓞ		P.MODE	PICTURE
♪; TITLE					BAND		Ⓞ; SPATIAL; MENU	Ⓞ; Ⓞ	S.MODE	SOUND
Ⓞ	TEXT; Ⓞ		Ⓞ; RECALL				TEXT; Ⓞ	Ⓞ; APP	ON/MIX	
GUIDE	STD; FUZZY						PK		CLOCK; S.MODE	
Ⓞ	SLEEP		SLEEP		SLEEP		Ⓞ	Ⓞ; Ⓞ; SLEEP	Ⓞ	
Ⓞ	MIX; Ⓞ						STILL; Ⓞ; Ⓞ		Q.VIEW	
RED; ●	RED; PICTURE		TIMER				RED		RED	
GREEN; ▮	GREEN; PRESET		HOUR				GREEN		GREEN	
YELLOW; ◀	YELLOW		MINUTE				YELLOW		YELLOW	
BLUE; ▮	BLUE; CLOCK						BLUE		BLUE	
Ⓞ	STATUS; RECALL		QUICK VIEW		STATUS; DISPLAY		DISPLAY; Ⓞ; OSD	i TOP	Ⓞ	
Ⓞ			2-; P/C		PREVIOUS; SYST.		P/F; P/C	Ⓞ		
VOL -	VOL ▼; VOL ◀		↙		VOL -; -		↙; ◀	P/MHz ◀	VOL -	
VOL +	VOL ▲; VOL ▶		↘		VOL +; +		↘; ▶	P/MHz ▶	VOL +	
CH V; ◀	PR ▼		PR ▼		PROG -; MENU -		CH -; PR -; ▼; LIST	PAG -	PROG -	
CH A; ▶	PR ▲		PR ▲		PROG +; MENU +		CH +; PR +; ▲	PAG +	PROG +	
Ⓞ; SAT	--; -/-		1-; -/-				-/-		-/-	
CLEAR; X	CANCEL; Ⓞ		3-				X			
◀; Ⓞ	SUB CODE; Ⓞ		4-				Ⓞ		SUB.PAGE	
▶; i	INDEX; Ⓞ		E; Ⓞ; TV/CATV				Ⓞ; X		INDEX	
▶; ?	REVEAL; Ⓞ						Ⓞ		REVEAL; PICTURE	
Ⓞ; X	HOLD; Ⓞ						Ⓞ		STOP; SOUND	
Ⓞ; Ⓞ	SIZE; Ⓞ						Ⓞ; NICCAM		SIZE; P.MODE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 28 F к TV устройствам

Кнопки пульта IRC 28 F	Код 116		Код 117		Код 118		Код 119		Код 120	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	FINE +		LANGUAGE; LUCID.		PGUP; PGDW		AUDIO; CALENDAR		PGUP; SLOW	
AUDIO; NICAM			NICAM		NICAM		SYS.; MODE; GAME		NICAM	AUDIO
VIDEO; SYS			ASPECT	ZOOM; CANCEL	ASPECT		ZOOM; PIC; Ⓞ; MAR.		ANGLE	
Ⓞ; ZOOM	ADD				PGDW; PGUP			ASPECT	ZOOM	
▼; TV	FINE -		Ⓞ		AUTO		P.P; AUTO; P.MODE		PGDW; STEP	
Ⓞ; ↗	AUTO PROGRAM		P-SCAN				GAME; AUDIO; LOCK		D.SUB	
Ⓞ; LOCK	NORMAL		ANGLE					D.DISP		
▲; FAV	NEXT		▲		Ⓞ; STANDBY		Ⓞ; POWER	▲; EJECT; AUTO		
Ⓞ	Ⓞ		POWER		INPUT		Ⓞ; STANDBY	Ⓞ; STANDBY		
AV	TV/VIDEO		SOURCE		⌘; MUTE		VIDEO; TV/AV; AV	INPUT		
⌘			⌘		MENU; M		⌘; MUTE	MUTE		
MENU			MENU	DVD MENU	MENU		MENU; M	LCD MENU	D.MENU	
EXIT			GOTO		EXIT			DVD SETUP; EXIT		
▲	P+		▲		▲		CH +; P+; ▲	▲		
◀	V-		◀		◀		VOL -; ◀; V; ◀	◀		
OK			OK		ENTER		MENU; M	ENTER		
▶	V+		▶		▶		VOL +; ▶; V+; ▶	▶		
▼	P-		▼		▼		CH -; P-; ▼	▼		
⌘; SETUP	PICTURE		P.MODE	SETUP; INDEX	P.MODE		Ⓞ; L/R; GAME; PICT.	P.MODE	DVD SETUP; EXIT	
♪; TITLE	B/B		S.MODE	TITLE; REVEAL	S.MODE		Ⓞ; U/D; SOUND; S.M	S.MODE	TITLE	
Ⓞ	OSD		TXT		TEXT		GAME	TEXT		
GUIDE	CH CLOCK		ENTER		SLEEP		LANG; SCAN; OPTIO.	D.MENU		
Ⓞ	Ⓞ		SLEEP		SLEEP		SLEEP; Ⓞ	SLEEP		
Ⓞ	TIMER		SUBTITLE; SUBP.					TITLE	D.SUB	
RED; ●			RED; P-SCAN	REPEAT	RED			RED; PROGRAM		
GREEN; ▮			GREEN; GOTO	A-B	GREEN			GREEN; INTRO	STEP	
YELLOW; ◀			YELLOW; ANGLE		YELLOW			YELLOW; REPEAT		
BLUE; ▮			BLUE; MEDIA		CYAN			BLUE; A-B	SLOW	
Ⓞ	Ⓞ		DISPLAY		DISPLAY		CALL; DISPLAY; OSD	DISPLAY	D.DISP	
Ⓞ	Q/V		Ⓞ		Ⓞ		Ⓞ; RECALL; QV	Ⓞ		
VOL -	V-		◀; VOL -		VOL -		VOL -; ◀; V; ◀	VOL -		
VOL +	V+		▶; VOL +		VOL +		VOL +; ▶; V+; ▶	VOL +		
CH V; ◀	P-		▼; CH -	◀	CH -		CH -; P-; ▼	CH -	◀	
CH A; ▶	P+		▲; CH +	▶	CH +		CH +; P+; ▲	CH +	▶	
Ⓞ; SAT			-/-		-/-		-/-			
CLEAR; X	ERASE		CANCEL					GOTO		
◀; Ⓞ			◀	SUBPAGE	SUBPAGE			◀	SUBPAGE; ZOOM	
▶; i			▶	INDEX	INDEX			▶	INDEX	
▶; ?			▶	REVEAL	REVEAL			▶	REVEAL; AUDIO	
Ⓞ; X			Ⓞ	HOLD	HOLD			Ⓞ	HOLD	
Ⓞ; Ⓞ			Ⓞ	SIZE	SIZE			Ⓞ	SIZE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 28 F к TV устройствам

Кнопки пульта IRC 28 F	Код 121		Код 122		Код 123		Код 124		Код 125	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	NICAM/A2; LANG.		HDMI; USB; DVD		NICAM/A2		DVD; USB/SD; PC		▶▶	
AUDIO; NICAM			Ⓜ/II; AUDIO; SUBP.				Ⓜ/II; AUDIO	S.MODE	NICAM/A2	
VIDEO; SYS							P.MODE		SCREEN	
Ⓜ; ZOOM	ASPECT; ZOOM		Ⓜ; ZOOM; ASPECT				Ⓜ; Ⓜ		◀◀	
▼; TV							USB		◀◀	
Ⓜ; Ⓜ	REPEAT		PIP	SCAN			Ⓜ; Ⓜ; PIP	EXIT; SCAN	LIST	
Ⓜ; LOCK	A-B		Ⓜ; REPEAT							
▲; FAV	▲		E/W; ▲; RADIO	♥; TITLE			E/W; ▲; RADIO	♥; TITLE	FAV	
Ⓜ	Ⓜ		Ⓜ; POWER		Ⓜ		Ⓜ; POWER		Ⓜ; POWER	
AV	INPUT		INPUT; Ⓜ		INPUT; TV/AV		Ⓜ; SOURCE		INPUT	
Ⓜ	Ⓜ; MUTE		Ⓜ; MUTE		Ⓜ; MUTE		Ⓜ; MUTE		MUTE	
MENU	MENU; OSD MENU	MENU	MENU		MENU		MENU		MENU	
EXIT	EXIT		EXIT; SCAN		EXIT		EXIT; SCAN		EXIT	
▲	▲		▲		▲		▲	-	▲	
◀	◀		◀		◀		◀	-	◀	
OK	OK		OK		OK		ENTER	-	OK	
▶	▶		▶		▶		▶	-	▶	
▼	▼		▼		▼		▼	-	▼	
Ⓜ; SETUP	PICTURE	SETUP	Ⓜ; P.MODE	SETUP	PICTURE		TOOLS; HDMI	SETUP	PICTURE	
♪; TITLE	SOUND	TITLE	♪; S.MODE	TITLE	SOUND		LIST; REPEAT	TITLE	SOUND	
Ⓜ	TV/TXT; SLOW		Ⓜ; TEXT; ▶▶		TV/TXT		Ⓜ	-	TV/TXT	
GUIDE			EPG; SETUP		SLEEP		EPG; SETUP; Ⓜ	-	EPG	
Ⓜ	SLEEP		SLEEP; MENU		SLEEP		SLEEP; MENU	-	SLEEP	
Ⓜ	SUBTITLE		Ⓜ; SUBTITLE				Ⓜ; SUBTITLE	-	SUBTITLE	
RED; ●	RED; ◀◀		RED; ◀◀		RED		RED; ◀◀	-	RED	RECORD
GREEN; ▶▶	GREEN; ▶▶		GREEN; ▶▶		GREEN		GREEN; ▶▶	-	GREEN	
YELLOW; ◀◀	YELLOW; ▶▶		YELLOW; ▶▶		YELLOW		YELLOW; ▶▶	-	YELLOW	
BLUE; ▶▶	BLUE; ▶▶	SLOW	BLUE; ▶▶		BLUE		BLUE; ▶▶		BLUE; SCREEN	
Ⓜ	DISPLAY		DISP; Ⓜ		DISPLAY		Ⓜ; INFO		DISPLAY	
Ⓜ			Ⓜ; RECALL		Ⓜ		Ⓜ; RECALL	REPEAT	Ⓜ	
VOL -	VOL -		VOL -		VOL -		VOL -; ◀-		VOL -	
VOL +	VOL +		VOL +		VOL +		VOL +; ▶+		VOL +	
CH V; ◀◀	CH -	◀◀	CH -	◀◀	CH -		CH -; P v	◀◀	CH -	◀◀
CH A; ▶▶	CH +	▶▶	CH +	▶▶	CH +		CH +; P ^	▶▶	CH +	▶▶
±; SAT	-/-		-/-		-/-		-/-		CH/LIST	
CLEAR; X			Ⓜ; PIP		CANCEL		Ⓜ	Ⓜ	CANCEL	
◀◀; ●	◀◀	SUBPAGE; PROG.	◀◀	Ⓜ; SUBTITLE	SUBPAGE		◀◀	Ⓜ; SUBTITLE	◀◀	SUBPAGE
▶▶; i	▶▶	INDEX; INTRO	▶▶	Ⓜ; INDEX	INDEX		▶▶	Ⓜ	▶▶	INDEX
▶▶; ?	▶▶	REVEAL; TITLE	▶▶	Ⓜ; REVEAL	REVEAL		▶▶	Ⓜ; SOURCE	▶▶	REVEAL; REP
■; X	■	HOLD; GOTO	■; STILL; Ⓜ	Ⓜ; HOLD	HOLD		■; STILL	Ⓜ	STOP	HOLD
■; Ⓜ	▶▶	SIZE; ANGLE	▶▶	Ⓜ; ZOOM; ASPECT	SIZE		Ⓜ; ▶▶	Ⓜ; Ⓜ	■	SIZE
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 28 F к TV устройствам

Кнопки пульта IRC 28 F	Код 126		Код 127		Код 128		Код 129		Код 130	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	DVD/TV		DVD/DVB SETUP		A-B; FAV +		PVR LIST			
AUDIO; NICAM	AUDIO		AUDIO	NICAM	NICAM/A2		NICAM/A2		HEAR	
VIDEO; SYS	MODE		PVR INFO				MEDIA			
Ⓜ; ZOOM	ZOOM		ASPECT		ZOOM; ASPECT		ASPECT		ZOOM	
▼; TV			INFO		ROOT; FAV -		DTV/RADIO			
Ⓜ; Ⓜ	SEARCH		PIP				AUTO; GOTO		SCAN	
Ⓜ; LOCK	ANGLE		ANGLE				FREEZE		LOCK	
▲; FAV			▲	FAV	REPEAT; FAV		FAV		FAV	
Ⓜ	DVD/TV		Ⓜ; POWER		Ⓜ		Ⓜ		Ⓜ; POWER	
AV	SOURCE		SOURCE	DVD SOURCE	INPUT		SOURCE		TV/AV	
Ⓜ	MUTE		MUTE		Ⓜ; MUTE		Ⓜ		Ⓜ; MUTE	
MENU	MENU/PBC		TV MENU	DVD MENU	MENU		MENU		MENU	
EXIT			EXIT		EXIT		EXIT			
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀		◀		◀	
OK	ENTER		ENTER		OK		ENTER; OK		MENU	
▶	▶		▶		▶		▶		▶	
▼	▼		▼		▼		▼		▼	
Ⓜ; SETUP	SETUP		PIC	DVD/DVB SETUP	PICTURE		P.MODE		P.MODE; PICTURE	
♪; TITLE	TITLE		SOUND	TITLE	SOUND		S.MODE		S.MODE; SOUND	
Ⓜ	PROGRAM		TEXT	PBC	TV/TXT		TEXT		CAL; CALENDAR	
GUIDE			EPG				EPG		BIO	
Ⓜ			SLEEP		SLEEP		SLEEP	TIME SHIFT	SLEEP	
Ⓜ	SUBTITLE		SUBTITLE	REC LIST	SUBTITLE		S.TITLE; SUBTITLE		DEMO	
RED; ●	REPEAT		RED; ◀◀	●; REC	RED		RED	REC		
GREEN; ▶▶			GREEN; ▶▶		GREEN	STEP; HOLD	GREEN			
YELLOW; ◀◀			YELLOW; ▶▶		YELLOW		YELLOW			
BLUE; ▶▶	SLOW		BLUE; ▶▶		BLUE	SLOW; TV/TXT	BLUE			
Ⓜ	DISPLAY		DISPLAY	DVD DISPLAY	DISPLAY		DISPLAY		DISP; DSP	
Ⓜ			RECALL/GOTO	RETURN	Ⓜ		Ⓜ		RECALL; Ⓜ; QV	
VOL -	VOL -		VOL -		VOL -		VOL -; VOL -		VOL -; ◀-	
VOL +	VOL +		VOL +		VOL +		VOL +; VOL +		VOL +; ▶+	
CH V; ◀◀	▼	◀◀	CH -	◀◀	CH -	◀◀; SIZE	CH -; CH -	◀◀; TIME SHIFT	CH -; P v; P -	
CH A; ▶▶	▲	▶▶	CH +	▶▶	CH +	▶▶; REVEAL	CH +; CH +	▶▶	CH +; P ^; P +	
±; SAT	10+		REPEAT		-/-		-/-; -/-		-/-; -/-	
CLEAR; X					GOTO		CH.LIST			
◀◀; ●	◀◀		◀◀	Ⓜ; PBC	◀◀; SUBPAGE	SUBPAGE	◀◀; FAV	S.PAGE; CH.LIST		
▶▶; i	▶▶		▶▶	Ⓜ; RETURN	▶	INDEX	▶▶	INDEX; EPG		
▶▶; ?	▶▶		▶▶	Ⓜ; REPEAT	▶▶; INDEX	REVEAL	▶▶	REVEAL; PVR LIST		
■; X	■		■	Ⓜ; ANGLE	■	STEP; HOLD	■	HOLD; DTV/RADIO		
■; Ⓜ	▶▶		▶▶	Ⓜ; TITLE	■	SIZE	▶▶	SIZE; REC		
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 28 F к TV устройствам

Кнопки пульта IRC 28 F	Код 131		Код 132		Код 133		Код 134		Код 135	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	FAV +		FAV+		▶▶		FAV +		FAV+	
AUDIO; NICAM	NICAM		LANGUAGE		NICAM/A2		ROOT; AUDIO	NICAM	AUDIO; NICAM/A2	
VIDEO; SYS			ROOT				REPEAT		REPEAT	
☐; ZOOM	ASPECT		ZOOM; ASPECT		ASPECT		ASPECT; ZOOM; SIZ		ZOOM; ASPECT	q
▼; TV	FAV -		FAV-		◀◀		FAV -		FAV-	
☐; ↗	AUTO		AUTO		LIST		AUTO		≡	
☐; LOCK	ROOT		ANGLE; SIZE		REPEAT		FREEZE		A-B	
▲; FAV	FAV		▲	FAV	FAV		FAV		FAV	
○	○		○		○		○; POWER		○	
AV	INPUT		INPUT		INPUT		INPUT		INPUT	
⌘	⌘; MUTE		⌘; MUTE		MUTE		⌘; MUTE		⌘; MUTE	
MENU	MENU		MENU	D.MENU; FAV	MENU		MENU		MENU	
EXIT	EXIT		EXIT		EXIT		EXIT		↵; EXIT	
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀		◀		◀	
OK	OK		OK		OK		ENTER; OK		OK	
▶	▶		▶		▶		▶		▶	
▼	▼		▼		▼		▼		▼	
⌘; SETUP	PICTURE		PICTURE	SETUP	PICTURE		P.MODE; - P-		PICTURE	
♪; TITLE	SOUND		SOUND	TITLE	SOUND		S.MODE; - S-	TV/RADIO	SOUND	
☐	TV/TXT		TITLE; TV/TXT		TV/TXT		TEXT		TV/TXT	
GUIDE	REPEAT		PROG.; SUBPAGE		EPG		EPG		↑	
⏻	SLEEP		SLEEP		SLEEP		SLEEP; ZZZ		SLEEP	
☐	A-B		SUBTITLE		SUBTITLE		SUBTITLE		SUBTITLE	
RED; ●	RED		RED; ◀◀	REPEAT	RED	REC	RED	●	RED; ●/○	
GREEN; ▶▶	GREEN		GREEN; ▶▶	A-B	GREEN		GREEN		GREEN; 123/ABC	
YELLOW; ◀◀	YELLOW		YELLOW; ◀◀		YELLOW		YELLOW		YELLOW; NOTIFIC.	
BLUE; ▶▶	BLUE		BLUE; ▶▶	SLOW	BLUE		BLUE		BLUE	
☐	DISPLAY		DISPLAY		INFO		DISP; DISPLAY		DISPLAY	
☐			☐		☐		☐; ☐		☐	GOTO; HOLD
VOL -	VOL -		VOL -		VOL -; ◀		V-; VOL-		VOL -	
VOL +	VOL +		VOL +		VOL +; ▶		V+; VOL+		VOL +	
CH V; ◀◀	CH -	◀◀	CH -	◀◀	CH -; ▼	◀◀	P-; CH-; CH ▼	◀◀; INDEX	CH/PG -	◀◀; SIZE
CH A; ▶▶	CH +	▶▶	CH +	▶▶	CH +; ▲	▶▶	P+; CH+; CH ▲	▶▶; SIZE	CH/PG +	▶▶; REVEAL
±; SAT	GOTO		GOTO; NICAM		CHANNEL LIST		GOTO		-/-	
CLEAR; X					CANCEL		A-B		DEL; X	
◀◀; ○	◀◀	SUBPAGE	◀◀	SUBPAGE	◀◀	SUBPAGE	◀◀; REVEAL	SUBPAGE	◀◀; SUBPAGE	SUBPAGE
▶▶; i	▶▶/	TV/TXT	▶▶/	INDEX	▶▶	INDEX	▶▶; TEXT	INDEX	▶▶; FAV	INDEX
▶▶; ?	▶▶	REVEAL	▶▶	REVEAL	▶▶	REVEAL	▶▶; SUBPAGE	REVEAL	▶▶; INDEX	REVEAL
■; X	■; HOLD	HOLD	■; HOLD	HOLD	STOP	HOLD	■; HOLD	HOLD	■; FAV+	HOLD
; ⏻	▶▶/	TV/TXT	▶▶/	SIZE		SIZE	▶▶; TEXT	SIZE	▶▶; FAV	SIZE
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 28 F к TV устройствам

Кнопки пульта IRC 28 F	Код 136		Код 137		Код 138		Код 139		Код 140	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	DTV/PIR		▶▶; SUBTITLE		▶▶		▶▶		FAV +	
AUDIO; NICAM	NICAM		; NICAM		AUDIO		LANG.; NICAM/A2		NICAM	
VIDEO; SYS									INDEX	
☐; ZOOM	ZOOM		ZOOM		ASPECT	ZOOM	ZOOM		ASPECT	
▼; TV	TV/RADIO		◀◀; SIZE		◀◀		◀◀		FAV -	
☐; ↗	USB	AUTO							AUTO	
☐; LOCK	☐; FREEZE	FREEZE; HOLD					REPEAT; INDEX		ROOT	
▲; FAV	FAV						FAV		FAV	
○	○		○; POWER		○		○		○	
AV	SOURCE		SOURCE		SOURCE		INPUT		INPUT	
⌘	⌘		⌘		⌘		⌘; MUTE		⌘; MUTE	
MENU	MENU		MENU		MENU	AMP MENU	MENU		MENU	
EXIT	EXIT; CANCEL				A-B; EXIT		EXIT		EXIT	
▲	▲		▲		▲; PR +	▲	▲		▲	
◀	◀		◀		◀; VOL -	◀	◀		◀	
OK	OK		OK		ENTER		OK		OK	
▶	▶		▶		▶; VOL +	▶	▶		▶	
▼	▼		▼		▼; PR -	▼	▼		▼	
⌘; SETUP	P.P		P.M.		P.MODE		PICTURE		PICTURE	
♪; TITLE	S.M		S.M.		S.MODE	TITLE	SOUND		SOUND	
☐	☐; TEXT	☐; MIX	TEXT		TXT		A-B; TV/TXT		TV/TXT	
GUIDE	EPG		MIX		LUCIDITY		ROOT		GOTO	
⏻	SLEEP				SLEEP		SLEEP		SLEEP	
☐	☐; SUBTITLE		SUBTITLE		☐; REVEAL		SUBT.; SUBPAGE			
RED; ●	RED		RED; 3D		RED		RED		RED	-
GREEN; ▶▶	GREEN		GREEN; P.M.		GREEN		GREEN		GREEN	-
YELLOW; ◀◀	YELLOW		YELLOW; S.M.		YELLOW		YELLOW		YELLOW	-
BLUE; ▶▶	BLUE		BLUE; ZOOM		BLUE		BLUE	SLOW; HOLD	BLUE	-
☐	INFO		INFO.		DISPLAY		DISPLAY		DISPLAY	
☐	RETURN		RETURN		☐		☐		☐	
VOL -	V -		VOL -		◀; VOL -		VOL -		VOL -	
VOL +	V +		VOL +		▶; VOL +		VOL +		VOL +	
CH V; ◀◀	P v	◀◀	PR v	◀◀; SIZE	▼; PR -	◀◀	CH -	◀◀	CH v	REVEAL; ◀◀
CH A; ▶▶	P A	▶▶	PR A	▶▶; SUBTITLE	▲; PR +	▶▶	CH +	▶▶	CH A	▶▶
±; SAT	CH.LIST				-/-		CH.LIST		REPEAT	
CLEAR; X	EXIT; ☐; CANCEL						GOTO; SIZE		A-B	
◀◀; ○	◀◀	☐; SUB-PAGE	◀◀; REVEAL		◀◀; STILL	SUBPAGE	◀◀	SUBPAGE	SUBPAGE; ◀◀	SUBPAGE
▶▶; i	▶▶/	☐; INDEX	▶▶/ ; INDEX	INDEX	▶▶/ ; SIZE	INDEX	▶▶/	INDEX	TV/TXT; ▶▶	INDEX
▶▶; ?	▶▶	☐; REVEAL	▶▶; MIX	REVEAL	▶▶	REVEAL	▶▶	REVEAL	SIZE; ▶▶	REVEAL
■; X	■; HOLD	FREEZE; HOLD	■; HOLD	HOLD	■; INDEX	HOLD	■; HOLD	HOLD	HOLD; ■	HOLD
; ⏻	▶▶/	☐; SIZE	▶▶/ ; INDEX	SIZE	▶▶/ ; SIZE	SIZE	▶▶/	SIZE	TV/TXT	SIZE
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 28 F к TV устройствам

Кнопки пульта IRC 28 F	Код 141		Код 142		Код 143		Код 144		Код 145	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD					DTV		HDMI			
AUDIO ; NICAM					AUDIO		III ; AUDIO LANG			
VIDEO ; SYS							YPbPr			
▣ ; ZOOM	SIZE		P.ADJ		ASPECT		ASPECT			
▼ ; TV					TV/RADIO		TV			
▣ ; ↻			SEARCH		NICAM/A2 ; MEDIA		USB			
▣ ; LOCK					FREEZE		FREEZE			
▲ ; FAV					FAV		FAV			
○	○		POWER		○		○ ; POWER		○	
AV	SOURCE		MODE		SOURCE		INPUT			
⌘ ; MUTE	⌘ ; MUTE		MUTE		⌘		⌘ ; MUTE		⌘	
MENU	MENU		MENU		MENU		MENU			
EXIT	EXIT				EXIT		EXIT			
▲	▲		▲		▲		▲		CH +	
◀	◀		◀		◀		◀		VOL -	
OK	OK		OK		ENTER		OK		OK	
▶	▶		▶		▶		▶		VOL +	
▼	▼		▼		▼		▼		CH -	
⌘ ; SETUP	P.STD ; -[P]		PICT		P.MODE		PICTURE			
♪ ; TITLE	S.STD ; -[S]				S.MODE		SOUND			
▣			S.SHOW		TEXT		TEXT	MIX		
GUIDE	GAME				EPG		TIME			
⏻	SLEEP		SLEEP		SLEEP		SLEEP			
▣					SUBTITLE		SUBTITLE			
RED ; ●					RED	● ; AUTO	RED			
GREEN ; ▣					GREEN		GREEN			
YELLOW ; ◀					YELLOW		YELLOW			
BLUE ; ▶					BLUE		BLUE			
▣	INFO		CALL		DISPLAY		INFO			
⏪					⏪		RECALL			
VOL -	VOL -		VOL -		VOL ▼		VOL ▼		VOL -	
VOL +	VOL +		VOL +		VOL ▲		VOL ▲		VOL +	
CH V ; ◀	PROGRAM -		▼		CH ▼	◀	PROG ▼		CH -	
CH A ; ▶	PROGRAM +		▲		CH ▲	S.PAGE ; ▶	PROG ▲		CH +	
± ; SAT	-/-		-/-		-/- ; LIST		CH.LIST			
CLEAR ; X					T.SHIFT		CANCEL			
◀ ; ●					REVEAL ; ◀	S.PAGE	SUBCODE			
▶ ; i					HOLD ; ▶	INDEX	INDEX			
▶ ; ?					SIZE ; ▶	REVEAL	REVEAL			
■ ; X					INDEX ; ■	HOLD	HOLD			
■ ; ⏪					HOLD ; ■	SIZE	SIZE			
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0			

Функции кнопок пульта IRC 28 F к TV устройствам

Кнопки пульта IRC 28 F	Код 146		Код 147		Код 148		Код 149		Код 150	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	You Tube		DMP		AUDIO	NICAM	≡ ; DTV MENU		AUDIO	
AUDIO ; NICAM	NICAM ; III		LANG ; III				AUDIO SWAP		AUDIO	
VIDEO ; SYS	3D		ANYVIEW CAST ON				Act. WIN		LIST ; PVR	
▣ ; ZOOM	ZOOM		SIZE		ZOOM		ZOOM		ASPECT	
▼ ; TV	TV/RADIO		CH LIST				TV/RADIO		TV/RADIO	
▣ ; ↻	CHN LIST		PRE CH		MIX		PIP		NICAM/A2	
▣ ; LOCK	FREEZE ; HOLD		ANYVIEW CAST				POP	Child LOCK	FREEZE	
▲ ; FAV	FAV ; SIZE		FAV		FAV		FAV. ; D.Fav.		FAV	
○	○ ; POWER		○		○		○		○ ; POWER	
AV	SOURCE		⏪ ; SOURCE		SOURCE		⏪		INPUT	
⌘ ; MUTE	⌘		⌘ ; MUTE		⌘		⌘ ; MUTE		MUTE	
MENU	MENU	HOME ; ⏪	≡ ; MENU		MENU		≡ ; MENU	≡ ; DTV MENU	MENU	
EXIT	EXIT		EXIT				⏪ ; EXIT		EXIT	
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀		◀		◀	
OK	OK ; ENTER		OK		OK		OK		ENTER	
▶	▶		▶		▶		▶		▶	
▼	▼		▼		▼		▼		▼	
⌘ ; SETUP	P.M. ; PICTURE		P.MODE		HOME		▣ ; P.MODE		P.MODE	
♪ ; TITLE	S.M. ; SOUND		S.MODE		RADIO		♪ ; S.MODE		S.MODE	
▣	TEXT	PVR LIST	TEXT		TEXT		▣ ; TELETXT/MIX		TTX	
GUIDE	EPG		EPG		EPG		EPG		EPG	
⏻	SLEEP	AD ; SUB-PAGE	HISMART		T.SHIFT		GREEN ; SLEEP		SLEEP	
▣	SUBTITLE		SUBT.		SUBTITLE		SUBTIT ; SUB-PAGE		SUBTITLE	
RED ; ●	RED	● ; REC	RED	PVR	RED ; RADIO	REC	RED ; STEREO		RED	REC ; AUTO
GREEN ; ▣	GREEN		GREEN		GREEN ; AUDIO		GREEN ; SLEEP		GREEN	
YELLOW ; ◀	YELLOW		YELLOW		YELLOW ; INFO		YELLOW ; FREEZE		YELLOW	
BLUE ; ▶	BLUE		BLUE		BLUE ; ZOOM		BLUE ; A ; Child		BLUE	
▣	INFO		INFO		INFO		i ; INFO		DISPLAY	
⏪	RETURN	RETURN ; BACK	⏪ ; RETURN		BACK		≡		RECALL	
VOL -	VOL -		VOL ▼		VOL -		VOLUME -		VOL -	
VOL +	VOL +		VOL ▲		VOL +		VOLUME +		VOL +	
CH V ; ◀	PR - ; PR V	◀ ; SIZE	CH ▼	◀	PR -	◀ ; REC	CHANNEL -		CH -	◀
CH A ; ▶	PR + ; PR A	▶ ; SUB-PAGE	CH ▲	▶	PR +	▶ ; NICAM	CHANNEL +		CH +	▶ ; S.PAGE
± ; SAT	QUICK ; HOLD						SORT ; SWAP		-/-	
CLEAR ; X	RETURN ; BACK	CANCEL			CANCEL		▣ ; UPDATE		T.SHIFT	
◀ ; ●	◀ ; REVEAL	SUB-PAGE	◀	SUB PAGE	◀ ; EPG	SUB-PAGE	SUBTIT ; SUB-PAGE		◀ ; REVEAL	S.PAGE
▶ ; i	▶ ; INDEX	INDEX	▶	INDEX	▶ ; T.SHIFT	INDEX	▣ ; INDEX		▶ ; HOLD	INDEX
▶ ; ?	▶ ; MIX	REVEAL	▶		▶ ; FAV	REVEAL	▣ ; REVEAL		▶ ; SIZE	REVEAL
■ ; X	■ ; CANCEL	HOLD	■		■	HOLD	▣ ; HOLD		■ ; INDEX	HOLD
■ ; ⏪	■ ; INDEX	SIZE	■	SIZE	■ ; T.SHIFT	SIZE	▣ ; SIZE		■ ; HOLD	SIZE
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 28 F к TV устройствам

Кнопки пульта IRC 28 F	Код 151		Код 152		Код 153		Код 154		Код 155	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	▶▶		SmartTV				TV/DTV		PVR ; HOLD	
AUDIO ; NICAM	AUDIO		YouTube		NICAM/A2		LANG.		AUDIO	
VIDEO ; SYS	REC.LIST		OPTION		SYSTEM		MEDIA			
☐ ; ZOOM	ZOOM		SIZE ; SCALE ; ZOOM		ASPECT		ZOOM		ASPECT	
▼ ; TV	◀◀		TV				TV/RADIO		TV/RADIO	
☐ ; ↻	☐		ECO		AUTO		III		NICAM	
☐ ; LOCK			SUB. ; FREEZE		FREEZE		STILL		FREEZE	
▲ ; FAV	FAV		USB				FAV		FAV	
○	○ ; POWER		○		○		○		○ ; POWER	
AV	SOURCE		SOURCE		SOURCE		SOURCE		SOURCE	
⌘	⌘		MUTE		⌘		MUTE		⌘ ; MUTE	
MENU	MENU		MENU		MENU		MENU		MENU	
EXIT	EXIT		EXIT		EXIT		EXIT		EXIT	
▲	▲		▲ ; ◀◀		▲		▲		▲	
◀	◀		◀ ; ◀◀ ; ZOOM -		◀		◀		◀	
OK	ENTER		OK ; ▶▶		ENTER		OK		OK ; CH.LIST	
▶	▶		▶ ; ▶▶ ; ZOOM +		▶		▶		▶	
▼	▼		▼ ; ▶▶		▼		▼		▼	
⌘ ; SETUP	LIST		PICTURE ; P.EFFECT		P.MODE		PICTURE		P.MODE	
♪ ; TITLE			SOUND ; S.EFFECT		S.MODE		SOUND		S.MODE	
☐	☐		TXT ; TEXT		TEXT		TEXT		TEXT	
GUIDE	EPG		GUIDE ; EPG		EPG		EPG		EPG	
☐			SLEEP		SLEEP		SLEEP	T.SHIFT	SLEEP	TIME SHIFT
☐	SUBTITLE		SUBTITLE		NR.		SUBTITLE		SUBTITLE	
RED ; ●	RED	● ; ☐	RED ; MTS ; F1		RED		RED	●	RED	●
GREEN ; ▶▶	GREEN ; USB		GREEN ; F2		GREEN		GREEN		GREEN	
YELLOW ; ◀◀	YELLOW ;		YELLOW ; ● ; F3		YELLOW		YELLOW		YELLOW	
BLUE ; ▶▶	BLUE ; SAT.LIST		BLUE ; DEMO ; CD ; F4		BLUE		BLUE		BLUE	
☐	INFO		INFO ; DISPLAY		DISPLAY		INFO		DISPLAY	
☐	☐		RETURN		☐		RECALL		☐	
VOL -	VOL -		VOL - ; V - ; VOL ▼		VOL ▼		VOL V	FAV-	VOL -	
VOL +	VOL +		VOL + ; V + ; VOL ▲		VOL ▲		VOL A	FAV+	VOL +	
CH V ; ◀◀	CH -	◀◀ ; ☐	CH - ; P - ; CH ▼	◀◀	CH ▼		CH V	◀◀ ; REVEAL	CH -	◀◀ ; INDEX
CH A ; ▶▶	CH +	▶▶ ; ☐	CH + ; P + ; CH ▲	▶▶	CH ▲		CH A	▶▶ ; SUBPAGE	CH +	▶▶ ; SUBPAGE
⊖ ; SAT	SAT.LIST		LIST		-/-		PVR LIST		-/-	
CLEAR ; X	☐									
◀◀ ; ●	◀◀ ; ☐	☐	◀◀	SUB. ; FREEZE	S.PAGE		◀◀ ; HOLD	SUBPAGE	◀◀ ; NICAM	◀◀ ; SUBPAGE
▶▶ ; i	▶▶ ; ☐	☐	▶▶	INDEX ; TV	INDEX		▶▶ ; T.SHIFT	INDEX	▶▶ ; TIME SHIFT	▶▶ ; INDEX
▶▶ ; ?	▶▶ ; ☐	☐	▶▶	REV.	REVEAL		▶▶ ; INDEX	REVEAL	▶▶ ; FREEZE	▶▶ ; REVEAL
■ ; X	■ ; ☐	☐	HOLD		HOLD		■ ; SIZE	HOLD	■ ; AUTO	■ ; PVR ; HOLD
■ ; ⬇	■ ; ☐	☐	■	SIZE	SIZE		■	SIZE	■ ; TIME SHIFT	■ ; SIZE
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 28 F к TV устройствам

Кнопки пульта IRC 28 F	Код 156		Код 157		Код 158		Код 159		Код 160	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	DVB		HDMI		FAV + ; REVEAL		▶▶		▶▶	
AUDIO ; NICAM	☐ III ; AUDIO		NICAM		NICAM		CANCEL ; AUDIO		CANCEL ; AUDIO	
VIDEO ; SYS	TOOLS		YPbPr		REPEAT ; MIX					
☐ ; ZOOM	☐ ; ☐		ZOOM		SIZE ; ZOOM		☐ ; ZOOM		☐ ; ZOOM	
▼ ; TV	DMP ; USB		TV		FAV - ; SUBPAGE		◀◀		◀◀	
☐ ; ↻	☐		PC		CH. LIST ; INDEX					
☐ ; LOCK	☐		FREEZE		FREEZE		FREEZE		FREEZE	
▲ ; FAV	▲	♥			FAV. LIST ; HOLD		MIX ; FAV		MIX ; FAV	
○	○ ; POWER		○ ; POWER		○ ; POWER		○ ; POWER		○ ; POWER	
AV	☐ ; SOURCE	SD	INPUT		☐ ; INPUT		☐ ; SOURCE		☐ ; SOURCE	
⌘	⌘		⌘		⌘		⌘ ; MUTE		⌘ ; MUTE	
MENU	MENU	DMENU	MENU		MENU		☐ ; MENU		☐ ; MENU	
EXIT	EXIT		EXIT		EXIT		→☐ ; EXIT		→☐ ; EXIT	
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀		◀		◀	
OK	ENTER		OK		ENTER		ENTER		ENTER	
▶	▶		▶		▶		▶		▶	
▼	▼		▼		▼		▼		▼	
⌘ ; SETUP	SETUP	PROG	PICTURE		P.MODE		P.MODE		⌘ ; HOME	
♪ ; TITLE	TITLE	RADIO	SOUND		S.MODE		S.MODE		⌘ ; MOUSE	
☐	☐		TV/TEXT		TTX		TXT	MIX ; FAV	TXT	MIX ; FAV
GUIDE	EPG		MIX		MIX		EPG		EPG	
☐	SLEEP		SLEEP		SLEEP		T.SHIFT		T.SHIFT	
☐	☐ ; SUBTITLE	LIST			SUBTITLE		SIZE ; SUBT		SIZE ; SUBT	
RED ; ●	RED ;	●	RED ; R		RED ; ◀◀		RED	● ; REC	RED	● ; REC
GREEN ; ▶▶	GREEN ; ▶▶		GREEN ; G		GREEN ; ▶▶		GREEN		GREEN	
YELLOW ; ◀◀	YELLOW ; ◀◀		YELLOW ; Y		YELLOW ; ◀◀		YELLOW		YELLOW	
BLUE ; ▶▶	BLUE ; ▶▶		BLUE ; B		BLUE ; ▶▶		BLUE		BLUE	
☐	INFO ; ☐	INDEX	INFO		INFO		☐ ; DISPLAY		☐ ; DISPLAY	
☐	☐	REPEAT	RECALL		☐		☐ ; RETURN		☐ ; RETURN	
VOL -	VOL -		VOL ▼		VOL -		VOL -		VOL -	
VOL +	VOL +		VOL ▲		VOL +		VOL +		VOL +	
CH V ; ◀◀	CH - ; CH V	◀◀	PROG ▼		PROG V	◀◀	CH -	◀◀ ; REVEAL	CH -	◀◀ ; REVEAL
CH A ; ▶▶	CH + ; CH A	▶▶	PROG ▲		PROG A	▶▶	CH +	▶▶ ; SUB.PG	CH +	▶▶ ; SUB.PG
⊖ ; SAT	GOTO				-/-					
CLEAR ; X	☐		CANCEL		GOTO ; SUBTITLE	A-B ; CANCEL	CANCEL ; AUDIO		CANCEL ; AUDIO	
◀◀ ; ●	◀◀ ; ☐	☐	SUBCODE		◀◀	SUBPAGE	◀◀ ; INDEX	SUB.PG	◀◀ ; INDEX	SUB.PG
▶▶ ; i	▶▶ ; ☐	☐	INDEX		▶▶ ; TTX		▶▶ ; T.SHIFT	INDEX	▶▶ ; T.SHIFT	INDEX
▶▶ ; ?	▶▶ ; ☐	☐	REVEAL		▶▶	REVEAL	▶▶ ; HOLD	REVEAL	▶▶ ; HOLD	REVEAL
■ ; X	■ ; ☐ ; STILL	☐	HOLD		■ ; NICAM		■ ; HOLD	HOLD	■ ; EPG	HOLD
■ ; ⬇	■ ; ☐	☐	SIZE		■ ; TTX		■ ; T.SHIFT	SIZE ; SUBT	■ ; T.SHIFT	SIZE ; SUBT
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 28 F к VCR устройствам

Кнопки пульта IRC 28 F	Код 201		Код 202		Код 203		Код 204		Код 205	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	SEARCH ▲				FINE TRACK. ▲				I-HQ/PB	
AUDIO; NICAM	AUTO SEARCH				AUDIO; OUTPUT		AUDIO		I-HQ	
VIDEO; SYS	TV/LINE				SYSTEM		MIC-DUB		AUTO TRACKING	
☐; ZOOM	INDEX SEARCH				INDEX				SHOW VIEW	
▼; TV	SEARCH ▼				FINE TRACK. ▼				TV/VCR	
☐; ↗	CH. PRESET				MEMORY	PRESET			VPT	
☐; LOCK	COUNT RESET		AUTO TRACKING		SHIFT	MARK			COUNTER RESET	
▲; FAV	COUNT 0 STOP				EJECT		▲; EJECT		EJECT; ▲	
⊖	POWER		POWER		⊖; POWER		ON/STANDBY		POWER	
AV	TV/VCR				TV/VCR	INPUT	TV/VCR		AV	
⌘	EJECT									
MENU	MENU				MENU; PROG.	PROG.	MENU		MENU	
EXIT					ERASE	ERASE			(-)	
▲	SHARPNESS +				▲	▲			MULTI SPEED +	
◀	INDEX -				◀	◀; SOFTEN			PICT. -; STEADY ▶	⊖
OK	ENTER; CH. MEM.				ENTER	OK	ENTER		OK	
▶	INDEX +				▶	▶; SHARPEN			PICT. +; STEADY ◀	⊕
▼	SHARPNESS -				▼	▼			MULTI SPEED -	
*; SETUP	OTR; OK				PICTURE; IPC		LESSON		JOG SHUT	
♪; TITLE	VPS; ENCORE				A.DUB		KARAOKE		VERT.	
☐	PGM SET				BAND		A.TRK; ATR		TV TEXT	
GUIDE	AFT RETRACKING				AFT		MARK		PROG	
⊖	CLOCK SET	T. REC			ShowView; TIMER	CLOCK COUNTER			TIMER	
☐	CLOCK/COUNTER				Q-PRO		INDEX		PROG LIST	
RED; ●		● REC		● REC	SEARCH	● REC; REC/OTR	ERASE	REC/OTR; LINE REC	RED	● REC
GREEN; ►					D.TRK; A.TRK		ERASE		GREEN	
YELLOW; ◀					SLOW ▼				YELLOW	
BLUE; ►	►; SLOW				SLOW ▲	►; SLOW	SLOW		BLUE	SLOW; STILL
☐	DISPLAY ON/OFF				DISPLAY		DISPLAY		DISPLAY	
↻	P/C		REPEAT		↻; REPEAT		NEXT		REPEAT	
VOL -	-; MFT -				VOL ▼	SHUTTLE <<	TRACKING ▼		◀; TRACKING ◀	
VOL +	+; MFT +				VOL ▲	SHUTTLE >>	TRACKING ▲		▶; TRACKING ▶	
CH V; ◀	CH/TRACKING ▼		TRACKING ▼		CH ▼; TRK ▼	-	SELECT ▼		CH ▼	◀
CH A; ▶	CH/TRACKING ▲		TRACKING ▲		CH ▲; TRK ▲	+	SELECT ▲		CH ▲	▶
±; SAT	SPEED; R.TRK				SPEED; SP/LP				SP/LP	
CLEAR; X	PGM CLEAR				CLEAR; RESET				CANCEL (S/W)	
◀; ●	◀; REW		◀; REW		◀; REW; ◀		◀; REW		◀; REW	
▶; i	▶; PLAY		▶; PLAY		▶; PLAY/x2; ▲		▶; PLAY		▶; PLAY	
▶; ?	▶; FF		▶; F.FWD		▶; F.FWD; ▶		▶; FF		▶; F.FWD	NEXT
■; X	■; STOP		■; STOP		■; STOP; ■/▲; ▼		■/▲; STOP/EJECT		■; STOP	
■; ⬇	■; P/S; STILL/F.ADV		PAUSE/STILL		■; PAUSE; P/S; ►		■; PAUSE/STILL		■; PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0				1, 2, ... 9, 0				1, 2, ... 9, 0	

Функции кнопок пульта IRC 28 F к AUX устройствам

Кнопки пульта IRC 28 F	Код 301		Код 302		Код 303		Код 304		Код 305	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	KEY +		PDVD				S.EFFECT; L/R/ST		PDVD	
AUDIO; NICAM	AUDIO		AUDIO	L/R	LANGUAGE	L/R	AUDIO; MEMORY		LANGUAGE	
VIDEO; SYS	3D		N/P		N/P		V-MODE		N/P	
☐; ZOOM	ZOOM		ZOOM		ZOOM		ZOOM		ZOOM	
▼; TV	KEY -				TV MODE		L/R/ST; USB			
☐; ↗	SEARCH								L/R	
☐; LOCK	PSCAN/NORMAL						ANGLE		ANGLE	
▲; FAV	▲; OPEN/CLOSE		▲		▲; OPEN/CLOSE		▲; OPEN/CLOSE		▲; OPEN/CLOSE	
⊖	POWER		POWER		⊖; POWER		⊖; STANDBY		⊖; POWER	
AV	ANGLE		ANGLE		ANGLE		SOURCE SEL.; DEF.		SOURCE	
⌘	MUTE		MUTE		MUTE		⌘		⌘; MUTE	
MENU	MENU		MENU		MENU		MENU; MO/ST; RIPP.		MENU/PBC	
EXIT	RETURN		RETURN		RESUME; EQ				RESUME	
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀; KEY -		◀		◀	
OK	ENTER		ENTER		ENTER		ENTER		ENTER	
▶	▶		▶		▶; KEY +		▶		▶	
▼	▼		▼		▼		▼		▼	
*; SETUP	SETUP		SETUP		SETUP		SETUP		SETUP	
♪; TITLE	TITLE		TITLE		TITLE	OSD; SURROUND	TITLE; AM/FM		TITLE	
☐	PBC		PBC		PBC		PBC; A-M.; TFT ON.		PROG	
GUIDE	PROGRAM		PROG		PROGRAM		PROG		RAN	
⊖	TIME		TIME		TIME				TIME	
☐	SUBTITLE		SUBTITLE		SUBTITLE		SUBTITLE; AUTO		SUBTITLE	
RED; ●	REPEAT		REPEAT		REPEAT		REPEAT		REPEAT	
GREEN; ►	A-B RPT; A-B REPE.		STEP		STEP; OSD		STEP		STEP	
YELLOW; ◀			A-B		A-B		A-B		A-B	
BLUE; ►	SLOW		SLOW		SLOW		SLOW; CH-LEVEL		SLOW	
☐	OSD		DISPLAY		DISPLAY		OSD		OSD	
↻	RESUME		RESUME		RETURN; TV MODE		RETURN; RETURN		RETURN	
VOL -	VOL -	ECHO -	VOL -	KEY -	VOL -		VOL -		VOL -	
VOL +	VOL +	ECHO +	VOL +	KEY +	VOL +		VOL +		VOL +	
CH V; ◀	◀; PREV		◀; PREV		◀		◀; RADIO -		◀; PREV	
CH A; ▶	▶; NEXT		▶; NEXT		▶		▶; RADIO +		▶; NEXT	
±; SAT	10+		10+		10+		10+		10+	
CLEAR; X	CANCEL				CLEAR		GOTO		CLEAR	
◀; ●	◀; REV		◀; REV		◀		◀; SEARCH -		◀; REV	
▶; i	▶; PLAY		▶; PLAY/PAUSE		▶		▶		▶; PLAY	
▶; ?	▶; FWD		▶; FWD		▶		▶; SEARCH +		▶; FWD	
■; X	■; STOP		■; STOP		■		■; STOP		■; STOP	
■; ⬇	■; PAUSE/STEP		■; PAUSE/PAUSE		■		■		■; PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0/10		1, 2, ... 9, 0	

Функции кнопок пульта IRC 28 F к AUX устройствам

Кнопки пульта IRC 28 F	Код 306		Код 307		Код 308		Код 309		Код 310	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	STEP ▲						DVD/USB		DIRECT PLAY	
AUDIO ; NICAM	AUDIO		LANGUAGE	L/R	AUDIO		LANGUAGE		AUDIO	
VIDEO ; SYS	V-MODE		VIDEO	N/P	VIDEO		V-MODE		VIDEO SW	
☐ ; ZOOM	ZOOM		ZOOM		ZOOM		ZOOM		ZOOM	
▼ ; TV	STEP ▼ ; RETURN						N/P			
☐ ; ↗	USB ; N/P				P/N		L/R		COPY	
☐ ; LOCK	RESET		ANGLE		DEFAULT		DEFAULT		ANGLE	
▲ ; FAV	L/R/ST		▲		▲ ; OPEN/CLOSE		▲ ; OPEN/CLOSE		▲ ; OPEN/CLOSE	
○	○ ; STANDBY		POWER ; STANDBY		○ ; POWER		STANDBY		○ ; POWER	
AV	ANGLE		SOURCE		ANGLE		ANGLE		SOURCE	
⌘	⌘ ; MUTE		MUTE		MUTE		MUTE		⌘ ; MUTE	
MENU	MENU		MENU/PBC		PBC		MENU		MENU	
EXIT					⌂		RESUME ; DVD/USB			
▲	▲		↑		▲		▲		▲	
◀	◀		←		◀		◀		◀	
OK	ENTER		ENTER		ENTER		ENTER		ENTER	
▶	▶		→		▶		▶		▶	
▼	▼		↓		▼		▼		▼	
⌘ ; SETUP	SETUP		SETUP		SETUP		SETUP		SETUP	
♪ ; TITLE	TITLE		TITLE		TITLE		TITLE		TITLE	
☐	PBC		PROG		DIRECT		PBC		PBC	
GUIDE	PROG		KARAOKE		VOCAL		PROG		PROG	
⌂							TIME			
☐	SUBTITLE		SUBTITLE		SUB-T		SUBTITLE/COPY		SUBTITLE	
RED ; ●	REPEAT		REPEAT		REPEAT		REPEAT		REPEAT	
GREEN ; ▮	A-B		A-B		STEP		STEP		STEP	
YELLOW ; ◀					A-B		A-B		A-B	
BLUE ; ▮	SLOW		SLOW		SLOW		SLOW		SLOW	
☐	OSD		OSD ; DISPLAY		OSD		DISPLAY		DISPLAY	
↺	RETURN		GOTO		RESUME		RETURN		GOTO	
VOL -	VOL -		VOL -		VOL -		VOL -		VOL -	
VOL +	VOL +		VOL +		VOL +		VOL +		VOL +	
CH V ; ◀			◀		◀		◀ ; PREV		◀ ; PREV	
CH A ; ▶	▶		▶		▶		▶ ; NEXT		▶ ; NEXT	
± ; SAT	10+		10+		+10		10+		10+	
CLEAR ; X	GOTO				GOTO		CLEAR			
◀ ; ●	◀		◀		◀		◀ ; REV		◀ ; REV	
▶ ; i	▶		▶ ; PLAY		▶ ; II		▶ ; PLAY/PAUSE		▶ ; PLAY	
▶ ; ?	▶		▶		▶		▶ ; FWD		▶ ; FWD	
■ ; X	■		STOP		■ / ⌂		■ ; STOP		■ ; STOP	
■ ; ⬇	■		■ ; PAUSE		■ ; II		■ ; PLAY/PAUSE		■ ; PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 10		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 28 F к AUX устройствам

Кнопки пульта IRC 28 F	Код 311		Код 312		Код 313		Код 314		Код 315	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	DVD/USB		KARAOKE		DVD/MEDIA		KARAOKE			
AUDIO ; NICAM	AUDIO		LANGUAGE	R/L	DISPLAY ; ▶ ; LANG.		LANGUAGE		AUDIO	
VIDEO ; SYS	DIRECT PLAY		VIDEO	N/P			V-MODE		MODE	
☐ ; ZOOM	ZOOM/MEMO		ZOOM		☐ ; ZOOM		ZOOM		ZOOM	
▼ ; TV									LCD MODE	
☐ ; ↗	SEARCH		ANGLE				L/R			
☐ ; LOCK	ANGLE		RESET				ANGLE		ANGLE	
▲ ; FAV	▲ ; OPEN/CLOSE		▲		▲ ; OPEN/CLOSE		▲ ; OPEN/CLOSE			
○	POWER ; ○		STANDBY		○ ; STANDBY		○ ; POWER		○	
AV	SOURCE		SOURCE		☐ ; ANGLE		SOURCE			
⌘	⌘ ; MUTE		MUTE		⌘ ; MUTE		MUTE			
MENU	MENU/PBC		MENU		☐ ; MENU/PBC		MENU		MENU	
EXIT							RETURN			
▲	▲	TUNER +	▲		▲		▲ ; MIC VOL +		▲	
◀	◀		◀		◀		◀ ; ECHO -		◀	
OK	ENTER		ENTER		OK		ENTER		ENTER	
▶	▶		▶		▶		▶ ; ECHO +		▶	
▼	▼	TUNER -	▼		▼		▼ ; MIC VOL -		▼	
⌘ ; SETUP	SETUP		SETUP		⌘ ; SETUP		SETUP		DISPLAY/SETUP	
♪ ; TITLE	TITLE		TITLE		■ ; TITLE		TITLE		TITLE	
☐	COPY		PBC		PROG.		PBC			
GUIDE	PROLOGIC II		PROG				PROG			
⌂			TIME		Q ; TIME		TIME			
☐	SUBTITLE		SUB/COPY		⌘ ; SUBTITL. ; COPY		SUB/COPY		SUB	
RED ; ●	REPEAT		REPEAT		○ ; REPEAT		REPEAT		REPEAT A-B	
GREEN ; ▮	STEP		STEP		A-B ; L/R		STEP		REPEAT 1/III	
YELLOW ; ◀	A-B		A-B				A-B			
BLUE ; ▮			SLOW		▶ ; SLOW		SLOW			
☐	DISPLAY		OSD		DISPLAY ; ▶ ; LANG.		OSD		DISPLAY/SETUP	
↺							RAN		☐	
VOL -	VOL -		VOL -		↘		VOL -			
VOL +	VOL +		VOL +		↗		VOL +			
CH V ; ◀	◀ ; PREV		◀		◀ ; PREV		◀ ; PREV		◀	
CH A ; ▶	▶ ; NEXT		▶		▶ ; NEXT		▶ ; NEXT		▶	
± ; SAT	10+		10+		10+		10+			
CLEAR ; X										
◀ ; ●	◀ ; REV		◀		◀ ; REV		◀ ; REV		◀	
▶ ; i	▶ ; PLAY		▶ ; PLAY		▶ ; II ; PLAY/PAUSE		▶ ; PLAY/PAUSE		▶	
▶ ; ?	▶ ; FWD		▶		▶ ; FWD		▶ ; FWD		▶	
■ ; X	■ ; STOP		STOP		■ ; STOP		■ ; STOP		■	
■ ; ⬇	■ ; PAUSE		■ ; PAUSE		▶ ; II ; PLAY/PAUSE		▶ ; PLAY/PAUSE		■	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 28 F к AUX устройствам

Кнопки пульта IRC 28 F	Код 316		Код 317		Код 318	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD			DVD/USB			
AUDIO ; NICAM	AUDIO		AUDIO		EQ ; DSP ; TA/TP	
VIDEO ; SYS			VIDEO		AMS ; MP3/AMS	
☐ ; ZOOM			ZOOM			
▼ ; TV			N/P			
☐ ; ↗			WIDE		SCAN ; SCN ;	
☐ ; LOCK			ANGLE		LOC ; LOCAL ; PTY	
▲ ; FAV			▲ ; OPEN/CLOSE		BAND ; LOUD ;	
○	○		○ ; POWER		POWER ; PWR	
AV	MODE				MOD ; MODE	
⌘	MUTE		⌘ ; MUTE		MUTE	
MENU	SEL		MENU			
EXIT	■/7					
▲	↑		▲		▶▶ ; TUN ▲ ; ▶▶	
◀	←		◀			
OK	OK		ENTER		SEL ; LOU/ENT	
▶	→		▶			
▼	↓		▼		◀◀ ; TUN ▼ ; ◀◀	
⌘ ; SETUP	RATIO		SETUP			
♪ ; TITLE	BND TYPE		TITLE		ST ; MO	
☐			PROG		▶▶ ; M1;1; PAUSE	
GUIDE					INT ; M2 ; CD SCAN	
⊖	CLK OSD				RPT ; M3 ; REPEAT	
☐	SUB-T		SUBTITLE		RDM ; M4 ; SHUFFLE	
RED ; ●			REPEAT		DIS/REC	
GREEN ; ▶▶			STEP			
YELLOW ; ◀◀			A-B			
BLUE ; ▶▶			SLOW			
☐	CLK OSD		OSD		DISP	
☐	APS RPT		GOTO			
VOL -	-		VOLUME -		VOL - ; -	
VOL +	+		VOLUME +		VOL + ; +	
CH V ; ◀◀	◀◀		◀◀		☐ - ; M5 ; DN	
CH A ; ▶▶	▶▶		▶▶		☐ + ; M6 ; UP	
⊖ ; SAT	GOTO		10+			
CLEAR ; X						
◀◀ ; ●	◀◀		◀◀		◀◀ ; TUN ▼ ; ◀◀	
▶▶ ; i	▶▶		▶▶		▶▶ ; PAUSE	
▶▶ ; ?	▶▶		▶▶		▶▶ ; TUN ▲ ; ▶▶	
■ ; 5	■/7		■			
■ ; ⬇	■		■		■ ; PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 28 F к SAT устройствам

Кнопки пульта IRC 28 F	Код 401		Код 402		Код 403		Код 404	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	PAGE +		▶▶		▶▶		▶▶ ; TV/RADIO	
AUDIO ; NICAM	LANG		L/R		L/R		AUDIO	
VIDEO ; SYS	V-FORMAT						V-FORMAT	
☐ ; ZOOM	ASPECT						ASPECT	
▼ ; TV	PAGE -		◀◀		◀◀		◀◀ ; REC	
☐ ; ↗			TTX					
☐ ; LOCK								
▲ ; FAV	FAV		FAV		FAV		FAV	
○	○ ; POWER		○ ; STANDBY		○ ; STANDBY		○ ; POWER	
AV			USB		USB		USB	
⌘	⌘ ; MUTE		⌘ ; MUTE		⌘ ; MUTE		⌘ ; MUTE	
MENU	MENU		MENU		MENU		MENU	
EXIT	EXIT		EXIT		EXIT		EXIT	
▲	▲		▲		▲ ; CH +		▲ ; CH+	
◀	◀		◀		◀ ; VOL -		◀ ; VOL-	
OK	OK		OK		OK		OK	
▶	▶		▶		▶ ; VOL +		▶ ; VOL+	
▼	▼		▼		▼ ; CH -		▼ ; CH-	
⌘ ; SETUP	PVR		LIST					
♪ ; TITLE	TV/RADIO		TV/RADIO		TV/RADIO		TV/RADIO	
☐	TTX		TEXT ; MEDIA	TTX	TEXT		TEXT	
GUIDE	EPG		EPG		EPG		EPG	
⊖	TIMER	TIMESHIFT					TIMER	
☐	SUBTITLE		SUB-T ; SUBT		SUBT		SUBTITLE	
RED ; ●	RED	●	RED	● ; REC	RED		RED ; USB	REC
GREEN ; ▶▶	GREEN		GREEN		GREEN		GREEN ; V-FORMAT	
YELLOW ; ◀◀	YELLOW		YELLOW		YELLOW		YELLOW ; ASPECT	
BLUE ; ▶▶	BLUE		BLUE		BLUE	●	BLUE ; TIMER	
☐	INFO		INFO		INFO		INFO	
☐	RECALL		☐		☐ ; RECALL		☐ ; RECALL	
VOL -	VOL -		VOL -		◀ ; VOL -		VOL-	
VOL +	VOL +		VOL +		▶ ; VOL +		VOL+	
CH V ; ◀◀	CH -	◀◀	PAGE - ; P -	◀◀	▼ ; CH -	◀◀	CH-	◀◀
CH A ; ▶▶	CH +	▶▶	PAGE + ; P +	▶▶	▲ ; CH +	▶▶	CH+	▶▶
⊖ ; SAT	LIST		GOTO		GOTO		GOTO	
CLEAR ; X								
◀◀ ; ●	◀◀		◀◀		◀◀		◀◀ ; FAV	
▶▶ ; i	▶▶		▶▶ ; ■		▶▶		▶▶ ; PLAY/PAUSE	
▶▶ ; ?	▶▶		▶▶		▶▶		▶▶ ; EPG	
■ ; 5	■		■		■		■ ; STOP	
■ ; ⬇	■		▶▶ ; ■		■		▶▶ ; PLAY/PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 28 F к TV устройствам

Кнопки пульта IRC 28 F	Коды 501-740	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM		
VIDEO ; SYS		
☐ ; ZOOM		
▼ ; TV		
⏪ ; ↻		
☒ ; LOCK		
▲ ; FAV		
⏻	POWER ; ⏻	
AV	TV/VIDEO ; TV/AV	
⌘	MUTE ; ⌘	
MENU		
EXIT		
▲		
◀		
OK		
▶		
▼		
⌘ ; SETUP		
🎵 ; TITLE		
☐		
GUIDE		
⏻		
☐		
RED ; ●		
GREEN ; ▢		
YELLOW ; ◀		
BLUE ; ▶		
☐		
☐		
VOL -	VOLUME ▼ ; ▽-	
VOL +	VOLUME ▲ ; ▽+	
CH V ; ⏪	CHANNEL ▼ ; P -	
CH A ; ⏩	CHANNEL ▲ ; P +	
⊕ ; SAT		
CLEAR ; X		
⏪ ; ●		
▶ ; i		
▶ ; ?		
■ ; X		
⏮ ; ⏭		
1, 2, ... 9, 0	1, 2, ... 9, 0	

Для просмотра функций кнопок баз кодов 8 и 9 (SAT, STB, DVB устройства) перейдите по следующей ссылке <http://www.pult-irc.ru/files/manual/SatCodesForIrcF.pdf>