

# Приложение IRC 78 F (версия 17.11.10 17:23)

Модели оригинальных пультов и соответствующие им коды пульта IRC приведены в разделе "Коды пульта IRC 78 F".

Функции всех кнопок для каждого кода пульта IRC можно узнать из таблиц данного приложения.

Пульт IRC может иметь дополнительные функции (если указаны в столбце "Доп. функция"). Доступ к ним осуществляется при помощи кнопки SHIFT (см. в инструкции рис.1, п.16). Для доступа к дополнительным функциям нажмите кнопку SHIFT и, удерживая её нажатой, нажмите ту кнопку, дополнительная функция которой Вам необходима.

## После первой установки батареек

Кнопка устройства пульта IRC	Код пульта IRC	Кнопка устройства пульта IRC	Код пульта IRC
TV	101	SHIFT + TV*	105
VCR	102	SHIFT + VCR*	106
AUX	103	SHIFT + AUX*	107
SAT	104	SHIFT + SAT*	108

\* Нажмите кнопку SHIFT и, удерживая её нажатой, нажмите и отпустите одну из кнопок пульта: TV, VCR, AUX или SAT.

## Доступные коды пульта IRC 78 F

Номер базы кодов (диапазон кодов)	Устройство базы кодов	Доступные коды пульта IRC
1 (101-199)	TV	101 - 122
2 (201-299)	-	Нет
3 (301-399)	AUX	301 - 362
4 (401-499)	SAT	401
5 (501-599)	TV	501 - 599
6 (601-699)	TV	601 - 699
7 (701-799)	TV	701 - 749
8 (801-899)	SAT	801 - 899
9 (901-999)	SAT	901 - 999

## Коды пульта IRC 78 F

### Коды к устройствам марки ВВК

Модель*	Устр-во	Код
AB008	AUX, CD, DVD	321
ABS530T	AUX, CD, DVD	346
ABS535T	AUX, CD, DVD	346
ABS543DU	AUX, CD, DVD	358
AUX-01	AUX, CD, DVD	315
AUX-02	AUX, CD, DVD	316
AUX-03	AUX, CD, DVD	336
AUX-04	AUX, CD, DVD	355
AV100	AUX, CD, DVD	345
AV210T	AUX, CD, DVD	362
AV215T	AUX, CD, DVD	344
AV220	AUX, CD, DVD	306
AV230	AUX, CD, DVD	343
AV250T	AUX, CD, DVD	344
AV310T	AUX, CD, DVD	342
AV330E	AUX, CD, DVD	314
BBK-1	AUX, CD, DVD	302
BBK9907S	AUX, CD, DVD	312
BBK9915S	AUX, CD, DVD	323
DK1004S	AUX, CD, DVD	341
DK1005S	AUX, CD, DVD	317
DL3103DC	AUX, CD, DVD	313
DL333S	AUX, CD, DVD	313
DL373D	AUX, CD, DVD	313
DL373S	AUX, CD, DVD	313
DVD-01	AUX, CD, DVD	340
DVD-02	AUX, CD, DVD	340
DVD20000714	AUX, CD, DVD	301
DW9915S	AUX, CD, DVD	323
DW9916S	AUX, CD, DVD	323
DW9938S	AUX, CD, DVD	323
DW9952K	AUX, CD, DVD	356
EN-21602C	TV	110
EN-21662B	TV/AUX	113
EN-31603B	TV	114
FD2145	AUX, CD, DVD	319
FD2145B	AUX, CD, DVD	319
FH07H	TV/AUX	107
HD-353	AUX, CD, DVD	304
HOF07J552GPD8	TV	120
LT115	TV/AUX	328
LT117	TV	102
LT118-03	TV	117
LT120	TV/AUX	328
LT121	TV/AUX	328

Модель	Устр-во	Код
LT1703S	TV	101
LT2002S	TV	102
LT2003S	TV	101
LT-2007S	TV/AUX	104
LT2008S	TV	101
MA-1000S	AUX, CD, DVD	339
MA-800S	AUX, CD, DVD	303
P4084-1	TV	105
RC-0133	AUX, CD, DVD	301
RC017-22R	AUX, CD, DVD	309
RC017-31R	AUX, CD, DVD	352
RC017-40R	AUX, CD, DVD	338
RC019-01R	AUX, CD, DVD	305
RC019-02R	AUX, CD, DVD	305
RC019-12R	AUX, CD, DVD	305
RC019-19R	AUX, CD, DVD	337
RC019-24R	AUX, CD, DVD	305
RC-02	AUX, CD, DVD	334
RC022-01R	AUX, CD, DVD	349
RC026-012R	AUX, CD, DVD	324
RC026-014R	AUX, CD, DVD	324
RC026-01R	AUX, CD, DVD	324
RC026-02R	AUX, CD, DVD	324
RC026-03R	AUX, CD, DVD	324
RC026-04R	AUX, CD, DVD	324
RC026-05R	AUX, CD, DVD	324
RC026-06R	AUX, CD, DVD	324
RC026-07R	AUX, CD, DVD	324
RC026-09R	AUX, CD, DVD	324
RC026-10R	AUX, CD, DVD	324
RC026-11R	AUX, CD, DVD	324
RC026-13R	AUX, CD, DVD	324
RC026-15R	AUX, CD, DVD	324
RC026-16R	AUX, CD, DVD	324
RC026-17R	AUX, CD, DVD	324
RC026-18R	AUX, CD, DVD	324
RC-04	AUX, CD, DVD	302
RC-05	AUX, CD, DVD	303
RC050	AUX, CD, DVD	351
RC-06	AUX, CD, DVD	335
RC073-01R	AUX, CD, DVD	327
RC073-02R	AUX, CD, DVD	326
RC102	AUX, CD, DVD	353
RC1023	AUX, CD, DVD	357
RC1026	AUX, CD, DVD	357

Модель	Устр-во	Код
RC1027	AUX, CD, DVD	357
RC-1050	AUX, CD, DVD	330
RC-1070	AUX, CD, DVD	330
RC118	AUX, CD, DVD	324
RC-119	AUX, CD, DVD	323
RC-15	AUX, CD, DVD	302
RC1507	TV/AUX	106
RC1524	TV/AUX	328
RC1529	TV	112
RC-16	AUX, CD, DVD	311
RC1968	TV/AUX	119
RC-21	AUX, CD, DVD	308
RC-2102	TV	108
RC2252	TV/AUX	118
RC2267	TV	122
RC-228-S	AUX, CD, DVD	331
RC-24	AUX, CD, DVD	302
RC-25	AUX, CD, DVD	302
RC-2603	TV	109
RC-2800	AUX, CD, DVD	310
RC3050	AUX, CD, DVD	354
RC-32	AUX, CD, DVD	302
RC-33	AUX, CD, DVD	302
RC-34	AUX, CD, DVD	307
RC-35	AUX, CD, DVD	302
RC-37	AUX, CD, DVD	308
RC-38	AUX, CD, DVD	318
RC-44	AUX, CD, DVD	302
RC-47	AUX, CD, DVD	308
RC-48	AUX, CD, DVD	302
RC-49	AUX, CD, DVD	322
RC-51	AUX, CD, DVD	302
RC-52	AUX, CD, DVD	348
RC-53	AUX, CD, DVD	302
RC-54	AUX, CD, DVD	302
RC-57	AUX, CD, DVD	350
RC-58	AUX, CD, DVD	333
RC-59	AUX, CD, DVD	332
RC60021	TV	105
RC-78	AUX, CD, DVD	325
RC-970	AUX, CD, DVD	361
RC-DVP032	AUX, CD, DVD	359
RC-DVP100	AUX, CD, DVD	324
RC-DVP101	AUX, CD, DVD	324
RC-LED100	TV	115

Модель	Устр-во	Код
RC-LEM100	TV	115
RC-LEM101	TV	116
RC-LEM3279	TV	116
RC-LEX500	TV	121
RC-PL747	AUX, CD, DVD	360
RC-SMP712	SAT, STB, DVB	401
RC-SMP712A	SAT, STB, DVB	401
RC-STB103	SAT, STB, DVB	401
RC-Y35-OK	TV	109
TV-01	TV	111
TV-DVD-01	TV/AUX	107
URC	AUX, CD, DVD	347
URC-100	AUX, CD, DVD	320
URC-101	AUX, CD, DVD	302
URC-101A	AUX, CD, DVD	348
WD-006	TV	103
YT-514	AUX, CD, DVD	329

\* По каталогу «IRC»

**Коды к TV устройствам различных марок**

Марка	Код
AEG	544
AIWA	502, 503, 523, 528, 579, 634, 678, 710, 712, 716
AKAI	501, 503, 512, 516, 520, 522, 524, 525, 537, 538, 540, 545, 546, 547, 550, 571, 572, 582, 583, 584, 585, 598, 608, 613, 626, 652, 673, 691, 704, 722, 731
AKIRA	511, 514, 516, 524, 525, 537, 538, 541, 545, 547, 556, 577, 586, 594, 597, 598, 601, 623, 626, 629, 631, 649, 666, 680, 689, 690, 693, 717, 739
AMCOL	501, 525, 545, 747
ANITECH	501, 525, 726
ATLANTA	501
AVEST	537, 538, 539
BANG & OLUFSEN	728, 737
BBK	522, 551, 594, 597, 684, 701
BEKO	525, 530, 535, 559, 723, 742
BIGSTON	501, 503
BLAUPUNKT	512
BORK	525, 547, 646
BRAND	711
BROKSONIC	501
CAMERON	550, 567, 675, 697, 702
CASIO	529, 705, 706
CHANGHONG	516, 642
CLATRONIC	501
CONTEC	501, 603, 604, 613
CORTLAND	644
CROWN	501, 503, 511, 524, 525, 530, 571
DAEWOO	501, 508, 518, 520, 525, 526, 536, 538, 539, 546, 565, 571, 576, 598, 613, 685, 687, 692
DARTLAND	501
DAYTRON	501
DIGITAL	547
DISTAR	562, 616
DNS	596, 702, 708
DUAL	746
ELEKTA	501, 503, 520, 525, 527, 615
ELEKTRONIKA	583
ELENBERG	538, 545, 550, 565, 567, 579, 581, 644, 655, 676, 683, 717
EPLUTUS	537, 644, 677, 682, 697, 724
ERC	537, 631
ERISSON	511, 514, 516, 525, 526, 537, 538, 541, 550, 556, 561, 568, 586, 596, 599, 623, 626, 629, 631, 711, 712, 714, 739, 747
EVGO	538, 540, 630
FINLUX	501, 511, 583, 589, 608, 732
FUJITSU	544, 573
FUNAI	501, 502, 503, 504, 505, 525, 537, 538, 581, 603
FUSION	596, 642, 705, 706
GBS	501, 520, 525, 571, 583
GENERAL	537, 556
GOLD STAR - LG	501, 512, 518, 525, 527, 559, 570, 583, 584, 589, 609, 613, 642, 706, 742
GRUNDIG	501, 512, 525, 606, 662, 718, 719, 733
HAIER	518, 526, 561, 574, 657, 667, 669, 707
HAPPY	501
HCM	501, 525
HELIX	701, 702
HIL	503
HITACHI	501, 515, 518, 522, 525, 537, 544, 548, 554, 578, 584, 587, 588, 604, 613, 640, 729, 749
HORIZONT	525, 540, 545, 550, 559, 583, 672
HPC	546
HYUNDAI	516, 522, 525, 526, 537, 540, 541, 546, 547, 550, 556, 580, 596, 597, 599, 626, 642, 650, 655, 705, 711, 714, 717
INNO-HIT	501, 525, 571
IRBIS	596, 714
IVA (MBA)	537, 561, 637
IZUMI	516, 537, 596, 663, 691, 695, 705, 711
JINLIPI	537, 637
JVC	513, 515, 593, 604, 727
KAMACROWN	571
KANSAI	501, 525
KENSTAR	516
KITT	613, 726
KONKA	560, 581, 616, 717
LOEWE	542, 709, 744
METZ	745
MITSUBISHI	501, 520, 522, 525, 604, 611, 722, 728, 744
MIYOTA	537, 644, 656
MTC	501, 583
MULTITECH	501
MYSTERY	516, 537, 597, 642, 650, 653, 701, 702
NASH	537
NEC	501, 517, 520, 526, 552, 604, 625, 722
NESCO	501, 525
NOKIA	519, 584, 610, 614, 616, 740, 746
NOVA	501, 616, 638
NOVEX	516, 546, 599
OMEGA	501, 571
ONIDA	513
ONIKS	516, 525, 537, 545, 546, 547
ONWA	524, 525
ORBITA	635
ORION	501, 503, 506, 507, 509, 516, 525, 528, 537, 591, 603, 617, 619, 627, 641, 643, 664, 715, 720, 722, 729, 746
ORSON	526, 537
PANASONIC	512, 531, 532
PHILIPS	501, 511, 524, 525, 540, 549, 628, 639, 707, 748
PHOENIX	613
PHOENIX GOLD	708
PIONEER	555, 566, 575, 647, 666
PIXELVIEW	525
PLANTRON	735
POLAR	525, 526, 537, 538, 540, 543, 547, 581, 596, 599, 663, 664, 683, 703, 711, 717
POLAROID	525
POWER VISION	501
PRESTIGIO	564, 656
PRIMA	522, 547
PROLOGY	653, 655

**Коды к TV устройствам различных марок**

Марка	Код
RADUGA	525, 545, 569, 583, 743
RAINFORD	525, 537, 544, 545
RECOR	511, 525
REKORD	520, 525, 526, 537, 538, 539, 545, 547, 725, 736, 743, 747
RFT	535, 728
ROADSTAR	501, 508, 525, 571
ROLSEN	503, 516, 525, 537, 538, 540, 543, 546, 564, 576, 592, 594, 596, 649, 656, 669, 684, 714
ROVERSCAN	662
RUBIN	504, 516, 525, 537, 546, 583, 619, 665, 714
SABA	510, 521, 602
SALORA	584
SAMSUNG	501, 525, 526, 529, 563, 580, 595, 608, 612, 613, 622, 641, 645, 688, 723, 741
SANSUI	524, 525, 538, 556, 695
SANYO	501, 519, 522, 525, 530, 540, 550, 558, 604, 608, 610, 618, 621, 696, 722, 730, 734, 738
SATELLITE	616
SCARLETT	541, 545
SCHNEIDER	525, 540, 571
SELECO	736
SETRO	520
SHARP	526, 544, 548, 604, 707, 721
SHERION	616
SHIVAKI	501, 503, 508, 516, 518, 520, 525, 526, 527, 536, 538, 539, 540, 545, 546, 547, 550, 556, 580, 583, 585, 596, 599, 609, 619, 630, 632, 635, 636, 643, 644, 664, 681, 694, 743
SIEMENS	512, 525, 660, 726, 734
SIESTA	501, 537, 637
SILELIS	613
SILVER	633
SITRONICS	503, 516, 525, 537, 538, 540, 543, 545, 594, 626, 629, 661, 671, 672, 674, 679, 680, 686
SOKOL	516, 525, 547, 635
SONY	533, 604, 659, 722
SPEKTR	525, 538, 668
START	525, 537, 545, 546, 547
STASSFURT	535, 618
STINOL	525
SUPER	537, 561, 644, 653, 654, 655, 666, 677, 682, 724
SUPRA	501, 508, 516, 518, 520, 525, 527, 529, 536, 537, 541, 563, 579, 580, 596, 597, 612, 643, 687, 690, 705, 706, 712, 713
SUZUKI	516, 556
TCL	538, 540
TECHNO	501, 525, 538, 544, 546, 556, 568, 579, 596, 599, 644, 664, 703
TECKTON	522, 582, 601, 669, 670
TELEFUNKEN	510, 521, 590, 602, 605, 708
TELEVISION	501, 525, 616
THOMSON	509, 510, 521, 550, 579, 602, 624, 642, 702
TOSHIBA	516, 553, 604, 651, 699, 744
TRONY	516, 525, 537, 538, 550
TVI	511, 525, 530, 535, 538, 583, 586, 620, 723, 742
UNITED	525
VARTA	642
VESTEL	525, 544, 556, 583, 619
VIEWSONIC	557, 698
VITA	547
VITEK	537, 650
VITYAS	525
VOLNA (ВОЛНА)	635
VR	516, 537, 702, 714
WALTHAM	503, 509, 511, 583, 584, 607, 613, 729
XORO	522, 526, 545
НЕИЗВЕСТНАЯ МАРКА	546, 574, 596, 648, 656, 666, 711

Коды к SAT устройствам различных марок

Марка	Код
AIR TONE	968
ALFA GOLD	828
AMINO (СТРИМ)	829, 902
ARION	835
ASTON	811
BBK	931
BIG SAT	839, 840, 903, 936
BIG STAR	965
CADENA	958, 962
CONTINENT	886, 975
COSHIP	855
DAEWOO	872
D-COLOR	946
DELTA SYSTEMS	985
DIVISAT	957, 958
D-LINK	923
DNS	968
DR.HD	983
DRE (GENERAL SATELLITE)	804, 868, 888, 907, 933, 954
DREAM	819
DUNE	927, 934
ECHOSPACE	862
ECHOSTAR	808, 809, 822
ELTEX	987
EUROSKY	840, 880
EUROSTAR	863
EUSTON	825
EVO	965
GALAXY INNOVATIONS	878, 881, 908, 911, 912, 917, 924
GLOBALTEQ	833
GLOBO	909, 915, 925, 935, 945, 956, 973, 999
GOLD STAR - LG	871
GOLDEN INTERSTAR	821, 841, 879, 918
GOLDEN MEDIA	847, 912
GOLDMASTER	911
HITACHI	824, 832
HIVION	929
HOME	968
HOMECAST (ВОЛЯ)	820, 831, 836
HUMAX	803, 804, 823, 848, 860, 861, 905, 949
HYUNDAI	968
ID DIGITAL	804
INTEK	984
KAON	820
KOSMOS	855, 856
LANS	970
LOCUS	946
LUMAX	852, 873, 907, 913, 965, 994
MAG	988
MEDIA COM	825
MOTOROLA	883, 884, 901
MYSTERY	910, 997
NDS	814
NEXT	864
NOKIA	813
NOT	941
ONLIME	905
OPENBOX	827, 835, 869, 870, 911, 990, 991
OPENTECH	972
OPENTEL	865
ORBITA	946, 995
ORIEL	887, 926, 941, 948, 955, 986
PACE	801, 932, 953
PATIX DIGITAL	992
PAUXIS	842, 859
PHILIPS	857, 899
PIONEER	851
POLAR	858
REFLECT	959
RIKOR	916, 947
ROLSEN	930, 941, 942, 961
SAGEMCOM	906
SAMSUNG	803, 810, 812, 854
SEG	818
SEZAM	882
SKY VISION	952, 966, 977, 982
SKYMASTER	830
SKYWAY	911
SKYWORTH	989
STAR	833
STAR TRACK	826, 835, 943
STARNET	885
STRONG	805, 806, 815, 816, 817, 828, 830, 914
SUNNIWELL	875
SUPERBOX	903
SUPERMAX	821, 866, 880, 924
SUPRA	950, 960, 962
TECHNOSAT	852, 853
TEL-ANT	960
TELEFUNKEN	961, 968
TESLER	926
TOP BOX	965
TOPFIELD	837, 838, 877, 891
TOSHIBA	876
TV STAR	967
TVJET	946, 976
VESTEL	820, 824
VU+	919, 920, 921, 922

**Коды к SAT устройствам различных марок**

<b>Марка</b>	<b>Код</b>
WORLD VISION	821, 928, 951, 952
XSAT (НТВ+)	801, 802, 807, 906, 972, 984, 998
YUXING	904
ZYXEL	874
БИЛАЙН	883, 884, 901, 923
ВОЛГАТЕЛЕКОМ	842, 843, 844, 845, 846, 847, 849, 850, 858, 867
ДОМ.RU	820, 905
ДОМОЛИНК	874, 904
МТС	855, 964, 974, 979, 980, 989, 993
НЕИЗВЕСТНАЯ МАРКА	834, 835, 842, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 903, 904, 937, 938, 939, 940, 944, 945, 969, 971, 978, 996
РОСТЕЛЕКОМ	874, 904, 923, 963
СИГНАЛ	968
ТЕЛЕКАРТА	867, 909, 973
ТЕЛЕЦИФРА	968

Функции кнопок пульта IRC 78 F к TV устройствам

Кнопки пульта IRC 78 F	Код 101		Код 102		Код 103		Код 104		Код 105	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	SCART		SCART				CARD/DISC			
AUDIO; NICAM	SOUND-SYS	NICAM	SOUND-SYS	NICAM	I/II		NICAM	LANGUAGE	S.MODE	
VIDEO; SYS	PICTURE-SYS	S-VIDEO	PICTURE-SYS	S-VIDEO			SYSTEM		I-I; NICAM	
☐; ZOOM	VGA				ZOOM		ZOOM		P.SIZE	
▼; TV	TV		TV		TV				TV	
☐; ↗	NICAM		NICAM						SCALE; PIP	
☐; LOCK	S-VIDEO		S-VIDEO						FREEZE	
▲; FAV							▲; EJECT		FAV.CH; FAV	
○	○; STANDBY		○; STANDBY		○; POWER		○; STANDBY		○; POWER	
AV	AV		AV		SOURCE		SOURCE		SOURCE	
⌘	⌘; MUTE		⌘; MUTE		MUTE		MUTE		⌘; MUTE	
MENU	MENU				MENU; ☐		TV MENU	DVD MENU	MENU	
EXIT							RETURN		EXIT	
▲	▲		▲		CH +		▲		▲	
◀	◀		◀		VOL -		◀		◀	
OK	MENU		SETUP		OK		OK		OK	
▶	▶		▶		VOL +		▶		▶	
▼	▼		▼		CH -		▼		▼	
⌘; SETUP	PICTURE		PICTURE	SETUP	PICTURE; REVEAL		PICTURE	SETUP	PIC MODE; P.MODE	
♪; TITLE	SOUND		SOUND		SOUND; CANCEL		SOUND	TITLE	SOUND MODE	
☐	TEXT		YPbPr; OSD-LANG		TEXT		TEXT	MIX	☐; TEXT	
GUIDE									MIX	
⏻	SLEEP		SLEEP		SLEEP; HOLD				SLEEP	
☐	MIX				MIXED		SUBTITLE		SUBTITLE	
RED; ●	RED				RED; TV		RED; TITLE	REPEAT	RED	
GREEN; ▮	GREEN				GREEN; TIME		GREEN; LANGUAGE	II/III	GREEN	
YELLOW; ◀	YELLOW				YELLOW; I/II		YELLOW; SUBTITLE	A-B	YELLOW	
BLUE; ▮	CYAN				BLUE; ZOOM		CYAN; ANGLE		BLUE	
☐	DISPLAY		DISPLAY		DISPLAY		OSD		DISPLAY; INFO	
☐					RECALL				JUMP	
VOL -	VOL -		VOL -		VOL -		VOL -		VOLUME -; VOL -	
VOL +	VOL +		VOL +		VOL +		VOL +		VOLUME +; VOL +	
CH V; ◀	CH -		CH -		CH -		CH -	HOLD; ◀	CHANNEL -; CH. ▼	
CH A; ▶	CH +		CH +		CH +		CH +	INDEX; ▶	CHANNEL +; CH. ▲	
⊖; SAT	-/-		-/-						ENT; -/-	
CLEAR; X	CANCEL				CANCEL		CANCEL; GOTO		SWAP	
◀; ●	SUBPAGE				SUB.CODE		TEXT; ◀			
▶; i	INDEX				INDEX		▶	INDEX	☐; INDEX	
▶; ?	REVEAL				REVEAL		MIX; ▶	REVEAL; REPEAT	☐; REVEAL	
■; X	HOLD				HOLD		■	HOLD	☐; HOLD	
■; ⬇	SIZE				SIZE		II/III	SIZE; A-B	☐; SIZE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 78 F к TV устройствам

Кнопки пульта IRC 78 F	Код 106		Код 107		Код 108		Код 109		Код 110	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	CARD/DISK		DMP							
AUDIO; NICAM	LANGUAGE	CAP.; NICAM	I/II				STEREO		I/II	
VIDEO; SYS	SYSTEM		P.M.SYNC							
☐; ZOOM	ZOOM		ZOOM		ADJUST		q; ZOOM		ASPECT	ZOOM
▼; TV	BAND	SAVE	TV						TV	
☐; ↗	MAN/AUTO		PIP; SIZE				AUTO			
☐; LOCK	B.L. ON/OFF		STILL				STILL		STILL	
▲; FAV	▲; EJECT		PAGE/VOLUME							
○	STANDBY		○		○; POWER		○; POWER		POWER	
AV	SOURCE		SOURCE		☐; SOURCE		☐; SOURCE		SOURCE	
⌘	MUTE		MUTE		⌘; MUTE		⌘; MUTE		MUTE	
MENU	MENU	DVD MENU	MENU; ☐		☐; MENU		☐; MENU		MENU	
EXIT			EXIT							
▲	▲		CH ▲	UP/FWD	CH ▲		CH ▲		CH +	
◀	◀		VOL ▼	LEFT/PREV	VOL ◀		VOL ◀		VOL -	
OK	OK		OK	ENTER	ENTER		OK		MENU	
▶	▶		VOL ▲	RIGHT/NEXT	VOL ▶		VOL ▶		VOL +	
▼	▼		CH ▼	DOWN/REW	CH ▼		CH ▼		CH -	
⌘; SETUP	PICTURE	INDEX; SETUP	PICTURE		P.MODE		P.MODE		P.MODE	
♪; TITLE	SOUND	TITLE	SOUND		S.MODE		S.MODE		S.MODE	
☐	TEXT	MIX	TEXT	MIX	BLACKLIGHT		☐; TELETEXT		TEXT	
GUIDE	☐; DEL	BBE	DMP ZOOM		TRANSPARENCY					
⏻	TIME		SLEEP; HOLD		☐; SLEEP		☐; SLEEP		SLEEP	
☐	SUBTITLE		DMP DISPLAY				☐; MIX		MIX	
RED; ●	RED; GOTO	◀; TUNING -	RED				RED; STEREO		RED; AV	
GREEN; ▮	GREEN; A-B	▶; TUNING +	GREEN				GREEN; ☐; SLEEP		GREEN; PC	
YELLOW; ◀	YELLOW; REPEAT	◀; PRESET -	YELLOW				YELLOW; ☐; STILL		YELLOW; YPBPR	
BLUE; ▮	CYAN; OSD	▶; PRESET +	BLUE				BLUE; AUTO		BLUE; HDMI	
☐	OSD		DISPLAY		☐		☐		DISPLAY	
☐			RECALL		☐		☐		RECALL	
VOL -	VOL -		VOL ▼		VOL ◀		VOL ◀		VOL -	
VOL +	VOL +		VOL ▲		VOL ▶		VOL ▶		VOL +	
CH V; ◀	CH -	REVEAL; ◀	CH ▼	CH ▼	CH ▼		CH ▼		CH -	
CH A; ▶	CH +	▶	CH ▲	CH ▲	CH ▲		CH ▲		CH +	
⊖; SAT	-/-									
CLEAR; X	CANCEL		CANCEL						CANCEL	
◀; ●	CANCEL; ◀		SOURCE; SUB.CODE	REW			○; CLOCK		SUB.CODE	
▶; i	TEXT; ▶	INDEX	MOVE; INDEX	▶/■; PLAY/PAUSE			☐; INDEX		INDEX	
▶; ?	SIZE; ▶	REVEAL	SWAP; REVEAL	FWD			☐; REVEAL		REVEAL	
■; X	HOLD; ■	HOLD	SLEEP; HOLD				☐; HOLD		HOLD	
■; ⬇	MIX; II/III	SIZE	PIP; SIZE				☐; SIZE			
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 78 F к TV устройствам

Кнопки пульта IRC 78 F	Код 111		Код 112		Код 113		Код 114		Код 115	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			SCART				MEDIA	CH ▲; CANCEL		
AUDIO; NICAM	NICAM/A2		NICAM		I/II		I/II		AUDIO	NICAM/A2
VIDEO; SYS	SYSTEM		HDMI		DMP		DMP			
☐; ZOOM	ASPECT		ASPECT		ZOOM	DMP ZOOM	ZOOM	DMP ZOOM	ASPECT	ZOOM
▼; TV			TV		TV		TV	CH ▼	TV/USB	
☐; ↻			AUTO		PIP; SIZE		PIP; SIZE			
☐; LOCK			SOURCE		STILL		STILL		FREEZE	
▲; FAV			YPbPr						FAV; DVD SETUP	
○	○; POWER		○; POWER		POWER		○		○; POWER	
AV	SOURCE		AV		SOURCE		SOURCE		SOURCE	
⌘	⌘; MUTE		MUTE		MUTE		⌘		⌘	
MENU	MENU		MENU		MENU; ⌘		MENU; ⌘		MENU	DVD MENU
EXIT	EXIT		EXIT		EXIT		EXIT		EXIT	
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀		◀		◀	
OK	ENTER		ENTER		OK		OK		ENTER	
▶	▶		▶		▶		▶		▶	
▼	▼		▼		▼		▼		▼	
⌘; SETUP	P.MODE		PIC		PICTURE		PICTURE	SETUP	P.MODE	DVD SETUP
♪; TITLE	S.MODE		SOUND		SOUND		SOUND		S.MODE	
☐	TEXT		TEXT		TEXT		TEXT		TEXT; DVD MENU	
GUIDE			PC		MIX				EPG; Q-PLAY	
⏻	SLEEP		SLEEP		SLEEP; HOLD		SLEEP; HOLD		SLEEP	T.SHIFT
☐			LIST				INFO		SUBTITLE	
RED; ●	RED		RED		RED		RED		RED; BROWSE	●; REC
GREEN; ▮	GREEN		GREEN		GREEN		GREEN		GREEN; A-B	
YELLOW; ◀	YELLOW		YELLOW		YELLOW		YELLOW		YELLOW; REPEAT	
BLUE; ▮	CYAN		BLUE		BLUE		BLUE		BLUE; ZOOM	
☐	DISPLAY		DISPLAY		DISPLAY		DISPLAY		DISPLAY	
☐	RECALL		RECALL		RECALL	☐	RECALL		☐	
VOL -	VOL ▼		VOL -		VOL -		VOL ▼		VOL ▼	
VOL +	VOL ▲		VOL +		VOL +		VOL ▲		VOL ▲	
CH V; ◀	CH ▼		CH -		CH -	CH ▼; MIX	CH ▼	◀	CH ▼	◀
CH A; ▶	CH ▲		CH +		CH +	CH ▲; CANCEL	CH ▲	▶	CH ▲	▶; S.PAGE
±; SAT	-/						CH ▼			
CLEAR; X					CANCEL		CH ▲; CANCEL		CH.LIST	
◀; ●	SBPAGE		SUBPAGE		◀	SOURCE; SUB.COD	◀	SOURC.; SUB.CODE	◀; REVEAL	S.PAGE
▶; i	INDEX		INDEX		▶	MOVE; INDEX	▶/	POSITION; INDEX	▶	INDEX; ●
▶; ?	REVEAL		REVEAL		▶	SWAP; REVEAL	▶	SWAP; REVEAL	▶; SIZE	REVEAL
■; X	HOLD		HOLD		■	HOLD	■	HOLD	■	HOLD
; ⬇	SIZE		SIZE			SIZE	▶/	SIZE		SIZE
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 78 F к TV устройствам

Кнопки пульта IRC 78 F	Код 116		Код 117		Код 118		Код 119		Код 120	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD					PAGE+		PAGE+		≡; DTV MENU	
AUDIO; NICAM	AUDIO	NICAM/A2	SOUND-SYS		AUDIO; CANCEL		AUDIO; CANCEL		AUDIO SWAP	
VIDEO; SYS			COLOR-SYS		CHANNEL		CHANNEL		Act. WIN	
☐; ZOOM	ASPECT		RATIO		ZOOM		ZOOM		ZOOM	
▼; TV	TV/SUB		TV		PAGE-		PAGE-		TV/RADIO	
☐; ↻			AUTO SEARCH		AQT; TUNE		AQT; TUNE		PIP	
☐; LOCK	FREEZE				LIST		LIST		POP	Child LOCK
▲; FAV	FAV				▲; EJECT	FAV; REVEAL	FAV; REVEAL		FAV.; D.Fav.	
○	○; POWER		○		○; POWER		○; POWER		○	
AV	SOURCE		AV		SOURCE		SOURCE		☐	
⌘	⌘		MUTE		⌘		⌘		⌘; MUTE	
MENU	MENU				MENU; TEXT				≡; MENU	≡; DTV MENU
EXIT	EXIT				EXIT		EXIT		5; EXIT	
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀		◀		◀	
OK	ENTER		OK		OK		OK		OK	
▶	▶		▶		▶		▶		▶	
▼	▼		▼		▼		▼		▼	
⌘; SETUP	P.MODE		PICTURE	SETUP	TV SETUP	DVD SETUP	TV SETUP		☐; P.MODE	
♪; TITLE	S.MODE		OSD-LANG		TV; #; SIZE		TV; #; SIZE		♪; S.MODE	
☐	TEXT		SETUP		TEXT	MIX	TEXT	MIX	☐; TELETXT/MIX	
GUIDE					♯; GUIDE		♯; GUIDE		EPG	
⏻	SLEEP		SLEEP		●	TIME SHIFT	●	TIME SHIFT	GREEN; SLEEP	
☐	SUBTITLE				SUBT; MIX		▲; EJECT		SUBTIT.; SUB-PAGE	
RED; ●	RED				RED; BROWSE	REC	RED; BROWSE	REC	RED; STEREO	
GREEN; ▮	GREEN				GREEN; A-B		GREEN; A-B		GREEN; SLEEP	
YELLOW; ◀	YELLOW				YELLOW; REPEAT		YELLOW; REPEAT		YELLOW; FREEZE	
BLUE; ▮	BLUE				BLUE; ZOOM		BLUE; ZOOM		BLUE; A.; Child	
☐	DISPLAY		DISP		INFO; HOLD		INFO		i; INFO	
☐			←		↻		↻		≡	
VOL -	VOL ▼		VOL -		◀		◀		VOLUME -	
VOL +	VOL ▲		VOL +		▶		▶		VOLUME +	
CH V; ◀	CH ▼	◀	CH -		CH -	◀	CH -	◀	CHANNEL -	
CH A; ▶	CH ▲	▶	CH +		CH +	▶	CH +	▶	CHANNEL +	
±; SAT	CH.LIST		±						SORT; SWAP	
CLEAR; X					CANCEL		CANCEL		☐; UPDATE	
◀; ●	◀; REVEAL	S.PAGE			◀	SUBPAGE	◀	SUBPAGE	SUBTIT.; SUB-PAGE	
▶; i	▶	INDEX			▶	INDEX	▶	INDEX	☐; INDEX	
▶; ?	▶	REVEAL			▶	REVEAL	▶	REVEAL	☐; REVEAL	
■; X	■	HOLD			■	HOLD	■	HOLD	☐; HOLD	
; ⬇		SIZE				SIZE		SIZE	☐; SIZE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 78 F к TV устройствам

Кнопки пульта IRC 78 F	Код 121		Код 122	
	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	MEDIA		FAV+	
AUDIO ; NICAM	AUDIO		LANG ; AUDIO	
VIDEO ; SYS			TV/RADIO	
☐ ; ZOOM	ASPECT		ASPECT	
▼ ; TV	APPS		FAV-	
☐ ; ↗	HOME		PC AUTO	
☐ ; LOCK	MOUSE		ZOOM ; HOLD	
▲ ; FAV	FAV		FAV	
○	POWER		POWER	
AV	SOURCE		INPUT	
⌘	MUTE		MUTE	
MENU	MENU	HOME	MENU	
EXIT	EXIT ; ↵		EXIT	
▲	▲		▲	PG.UP ; INDEX
◀	◀		◀	
OK	ENTER		OK	
▶	▶		▶	
▼	▼		▼	PG.DOWN
* ; SETUP	P.MODE		P.MODE	
♪ ; TITLE	S.MODE		S.MODE	
☐	TEXT		HOME ; TEXT	
GUIDE	EPG		EPG	
⏻	SLEEP		SLEEP	
☐	SUBTITLE		SUBTITLE	
RED ; ●	RED	● ; REC	RED	
GREEN ; ▨	GREEN		GREEN ; SUBTITLE	
YELLOW ; ◀	YELLOW		YELLOW ; REPEAT	
BLUE ; ▨	BLUE		BLUE ; ROTATE	
☐	DISPLAY		INFO	
☐				
VOL -	VOL V		▼	
VOL +	VOL A		▲	
CH V ; ◀	CH V	◀	CH -	◀
CH A ; ▶	CH A	▶ ; S.PAGE	CH +	▶
⌘ ; SAT	CH.LIST		-/-	
CLEAR ; X				
◀ ; ○	◀ ; REVEAL	S.PAGE	◀ ; REVEAL	SUBPAGE
▶ ; i	▶ ; HOLD	INDEX	▶ ; HOLD	INDEX
▶ ; ?	▶ ; SIZE	REVEAL	▶ ; SUBPAGE	REVEAL
■ ; X	■	HOLD	■	HOLD
■ ; ⏻	■ ; HOLD	SIZE	■ ; SIZE	SIZE
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 78 F к AUX устройствам

Кнопки пульта IRC 78 F	Код 301		Код 302		Код 303		Код 304		Код 305	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	KEY#		KEY#;VOCAL;LOGO				DVD/5.1		KEY # ; PANEL	
AUDIO ; NICAM	AUDIO	L/R	AUDIO		2/5CH		5.1EXT		AUDIO	
VIDEO ; SYS	P/N		P/N				CD		P/N	
☐ ; ZOOM	ZOOM		ZOOM				STE./3STE.		ZOOM	
▼ ; TV	KEY b		KEY b ; MIC ; Q-PLAY				TV		KEY b ; BROWSER	
☐ ; ↗	MANUAL/AUTO								PSM ; Q-PLAY	
☐ ; LOCK	ANGLE				DEFAULT		RESET		Q-PLAY ; IS	
▲ ; FAV	EJECT		▲ ; EJECT						▲ ; EJECT ; MODE	
○			STAND BY		STANDBY		STANDBY		○ ; STANDBY	
AV			ANGLE				AUX		ANGLE	
⌘	MUTE		MUTE		MUTE		MUTE		MUTE	
MENU	MENU		MENU						MENU	
EXIT	RETURN								RETURN	
▲	▲		▲		SW +		SW +		▲	
◀	◀		◀		SURR -		L		◀	
OK	SELECT		SELECT				BALANCE		OK ; SELECT	
▶	▶		▶		SURR +		R		▶	
▼	▼		▼		SW -		SW -		▼	
* ; SETUP	SETUP		SETUP						SETUP	
♪ ; TITLE	TITLE		TITLE				Q-SOUND		TITLE	
☐	PROG		MODE;DIG.;Q-PLAY						PANEL ; VOCAL	
GUIDE	DIGEST ; PSM		PROG ; MODE ; IS/PS						BROWSER ; MIC	
☐			PSM ; PANEL ; INFO							
☐	SUBTITLE		SUBTITLE						SUBTITLE	
RED ; ●	REPEAT	REALSONIC	A-B		BASS -		BASS -		REPEAT	
GREEN ; ▨	▨/▨ ; PAUSE/STEP	SING	REPEAT		BASS +		BASS +		A-B	
YELLOW ; ◀	A-B	READ	GOTO		TREBLE -		TRE -		IS/PS ; PS	
BLUE ; ▨	SLOW	REMAIN	SLOW		TREBLE +		TRE +		SLOW	
☐	OSD		OSD						OSD	
☐	ENTER		RETURN						GOTO	
VOL -	VOL-		VOL-		VOLUME ▼		MASTER VOL -		VOL -	
VOL +	VOL+		VOL+		VOLUME ▲		MASTER VOL +		VOL +	
CH V ; ◀	SKIP ◀		SKIP ◀		CENTER -		CENTER -		SKIP ◀	
CH A ; ▶	SKIP ▶		SKIP ▶		CENTER +		CENTER +		SKIP ▶	
⌘ ; SAT	GOTO		+10						+10	
CLEAR ; X	CLEAR ; +10		CLEAR;RES.;PANEL						CLEAR	
◀ ; ○	◀ ; REV		◀ ; REV				SURR -		◀ ; REV	
▶ ; i	▶ ; PLAY		▶ ; PLAY						▶ ; PLAY	
▶ ; ?	▶ ; FWD		▶ ; FWD				SURR +		▶ ; FWD	
■ ; X	■ ; STOP		■ ; STOP						■ ; STOP	
■ ; ⏻	■/▨ ; PAUSE/STEP		■/▨ ; PAUSE/STEP						■ ; PAUSE/STEP	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0						1, 2, ... 9, 0	



Функции кнопок пульта IRC 78 F к AUX устройствам

Кнопки пульта IRC 78 F	Код 306		Код 307		Код 308		Код 309		Код 310	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	DVD DIGITAL SIG.		VOCAL		VOL +		KEY #		DVD/5.1	
AUDIO ; NICAM	DOLBY DIGITAL		AUDIO		AUDIO	PANEL ; L/R	AUDIO		STEREO	
VIDEO ; SYS			P / N		PS ; BAND ; PS/IS	P/N	P/N		AUX	
☐ ; ZOOM	KARAOKE		ZOOM		ZOOM		ZOOM			
▼ ; TV	DVD ANALOG SIG.		BAND		VOL -		KEY b		TV	
☐ ; ↗	AUTO		PS ; MAN / AUTO	IS ; SAVE	IS ; MAN/A ; Q-PLAY	LOGO ; SAVE	SF			
☐ ; LOCK			MIC		MIC ; SF		ANGLE		RESET	
▲ ; FAV			▲ ; EJECT		▲ ; EJECT		EQ			
○	○ ; STANDBY		○ ; STANDBY	STANDBY	○ ; STANDBY		○ ; STANDBY		STANDBY	
AV			ANGLE		ANGLE		MODE		CD	
⌘	MUTE		MUTE	MUTE (DVD)	MUTE		MUTE		MUTE	
MENU	TEST		MENU		MENU		MENU			
EXIT			RETURN		RETURN		RETURN			
▲	▲	▲	▲	SW +	▲	BASS +	▲		SW +	
◀	◀	◀	◀	SURR -	◀	TREBLE -	◀		L	
OK	OSD	KARAOKE	SELECT		SELECT		SELECT		BALANCE	
▶	▶	▶	▶	SURR +	▶	TREBLE +	▶		R	
▼	▼	▼	▼	SW -	▼	BASS -	▼		SW -	
* ; SETUP	DTS		SETUP		SETUP		SETUP			
♪ ; TITLE	HI-FI / PCM		TITLE		TITLE	SPEAKERS	TITLE		Q-SOUND	
☐	D-TV DIGITAL SIG.		FUNCTION		FUNCTION		PSM			
GUIDE	D-TV ANALOG SIG.		PSM		PSM ; INFO		PROG			
☐	SLEEP		SLEEP		SLEEP					
☐			SUBTITLE		SUBTITLE		SUBTITLE			
RED ; ●	AUX DIGITAL SIG.		REPEAT		REPEAT		REPEAT		BASS -	
GREEN ; ▬	AUX ANALOG SIG.		A-B		A-B		A-B		BASS +	
YELLOW ; ◀	DVB DIGITAL SIG.				VOCAL ; EQ				TRE -	
BLUE ; ▬	DVB ANALOG SIG.		SLOW		SLOW		SLOW		TRE +	
☐	OSD		OSD		OSD		OSD			
☐			GOTO		GOTO		GOTO			
VOL -	MASTER VOLUME -		VOL ▼		MAIN VOL -	VOL -	VOL -		MASTER VOL -	
VOL +	MASTER VOLUME +		VOL ▲		MAIN VOL +	VOL +	VOL +		MASTER VOL +	
CH V ; ◀	◀ ; DSP		◀ ; PRESET -	CENTER -	◀ ; PRESET -		◀ ; PREV		CENTER -	
CH A ; ▶	▶ ; DSP		▶ ; PRESET +	CENTER +	▶ ; PRESET +		▶ ; NEXT		CENTER +	
± ; SAT	11		10 +		10+ ; +10		10 +			
CLEAR ; X	12									
◀ ; ●	◀		◀ ; TUNING -		◀ ; TUNING -		◀ ; REV		SR -	
▶ ; i	▶		▶ ; PLAY		▶ ; PLAY		▶ ; PLAY			
▶ ; ?	▶		▶ ; TUNING +		▶ ; TUNING +		▶ ; FWD		SR +	
■ ; X	▼		■ ; STOP		■ ; STOP		■ ; STOP			
■ ; ⬇	KARAOKE		■ ; PAUSE		■ ; PAUSE		■ ; PAUSE			
1, 2, ... 9, 0	1, 2, ... 9, 10		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0			

Функции кнопок пульта IRC 78 F к AUX устройствам

Кнопки пульта IRC 78 F	Код 311		Код 312		Код 313		Код 314		Код 315	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	KEY #		DVD		PSM ; DVD/READER		DVD		SURR +	
AUDIO ; NICAM	AUDIO	L/R	AUDIO		AUDIO		LANGUAGE		2.1CH/5.1CH	
VIDEO ; SYS	P/N		VCR	P/N	P/N		CD/VCD			
☐ ; ZOOM	ZOOM		ZOOM		ZOOM		ECHO			
▼ ; TV	KEY b		CONTINUE				CH MODE		SURR -	
☐ ; ↗	ANGLE		PIP	TS-SAVE	SF ; PSM		AUTO	MEMORY		
☐ ; LOCK	DEFAULT		ANGLE		EQ ; Q-PLAY		DELAY			
▲ ; FAV	EJECT		OPEN/CLOSE				USB			
○	○ ; STANDBY (DVD)	○ ; STANDBY	STANDBY/ON		○ ; STANDBY ; DISP.		POWER	PRE AMP POWER	STANDBY	
AV	MODE		TV/AV		ANGLE		AUX		AUX/CD/5.1CH	
⌘	MUTE	MUTE (DVD)	MUTE		MUTE		MUTE		MUTE	
MENU	MENU		MENU		MENU		TEST		MODE	
EXIT	RETURN		RETURN		RETURN		FEEDBACK			
▲	▲	CENTER +	▲		▲		▲		SUB +	
◀	◀	SW -	◀		◀		◀		BASS -	
OK	SELECT		ENTER		SELECT		OK MODE		SELECTOR	
▶	▶	SW +	▶		▶		▶		BASS +	
▼	▼	CENTER -	▼		▼		▼		SUB -	
* ; SETUP	SETUP		SETUP		SETUP		6.1CH			
♪ ; TITLE	TITLE		TITLE		TITLE		☐			
☐	PSM		PROGRAM		PIC ; FUNC		DTS			
GUIDE	PROG		DIGEST		BROWSER		DSP			
☐			TIME-SHIFT				SLEEP			
☐	SUBTITLE		SUBTITLE		SUBTITLE		CALL			
RED ; ●	REPEAT		REPEAT	REC	REPEAT		MAN		BALANCE L ; SEL.	
GREEN ; ▬	■ / ▬ ; PAUSE/STEP		A-B		A-B		WOMAN		BALANCE R ; MODE	
YELLOW ; ◀	A-B		REPLAY				BASS		TREBLE -	
BLUE ; ▬	SLOW		SLOW		SLOW		TREBLE		TREBLE +	
☐	OSD		DISPLAY		OSD		DISPLAY			
☐	GOTO		RECALL	GOTO	GOTO		RECALL			
VOL -	VOL ▼	SURR -	VOL -		VOL -	b KEY	VOL -		MASTER VOLUME -	
VOL +	VOL ▲	SURR +	VOL +		VOL +	# KEY	VOL +		MASTER VOLUME +	
CH V ; ◀	◀ ; SKIP		CH -	◀ ; PREV	◀ ; SKIP		-		CEN -	
CH A ; ▶	▶ ; SKIP		CH +	▶ ; NEXT	▶ ; SKIP		+		CEN +	
± ; SAT	10 +		-/-	10+	+10					
CLEAR ; X	CLEAR		CLEAR							
◀ ; ●	◀ ; REV		◀ ; REV		◀ ; REV		◀ ; REV			
▶ ; i	▶ ; PLAY		▶ ; PLAY		▶ ; PLAY		▶ ; PLAY			
▶ ; ?	▶ ; FWD		▶ ; FWD		▶ ; FWD		▶ ; FWD			
■ ; X	■ ; STOP		■ ; STOP		■ ; STOP		■ ; STOP			
■ ; ⬇	■ / ▬ ; PAUSE/STEP		■ ; PAUSE		■ ; PAUSE		■ ; PAUSE			
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0			

Функции кнопок пульта IRC 78 F к AUX устройствам

Кнопки пульта IRC 78 F	Код 316		Код 317		Код 318		Код 319		Код 320	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			MIC		MIC		OPT DIGITAL IN		MIC	
AUDIO; NICAM			AUDIO	2/5.1CH	AUDIO		COA DIGITAL IN		AUDIO	
VIDEO; SYS			BAND; PANEL	P/N	P/N		VCR		P/N	
☐; ZOOM			ZOOM		ZOOM		PC		ZOOM	
▼; TV			VOCAL		VOCAL		TUNER		VOCAL	
☐; ↗			MAN/AUTO; IS/PS		PS; MAN/AUTO		MEM		IS/PS	
☐; LOCK			CAPTURE		IS; SAVE				Q-PLAY	
▲; FAV			EJECT; ▲	MUTE (DVD)	▲; EJECT				▲; EJECT	
○			○; STANDBY (DVD)	○; STANDBY	STANDBY; ○		STANDBY		○; STANDBY	
AV			ANGLE		ANGLE		AUX		ANGLE	
✳			MUTE		MUTE		MUTE		✳; MUTE	
MENU			MENU		MENU		TEST		MENU	
EXIT			RETURN		RETURN				RETURN	
▲			▲	CENTER +	▲				▲	
◀			◀	SW -	◀		SCAN -		◀	
OK			SELECT		SELECT		SCAN +		SELECT	
▶			▶	SW +	▶				▶	
▼			▼	CENTER -	▼				▼	
✳; SETUP			SETUP		SETUP				SETUP	
♪; TITLE			TITLE		TITLE		LISTEN MODE		TITLE	
☐			FUNCTION		FUNCTION		DSP		INFO	
GUIDE			SAVE; BROWSER		PSM				PANEL/PIC	
☐			SLEEP		SLEEP					
☐			SUBTITLE		SUBTITLE				SUBTITLE	
RED; ●	50 Hz		REPEAT		REPEAT		REAR -		REPEAT	
GREEN; ▮	80 Hz		A-B		A-B		REAR +		▮/▮; PAUSE/STEP	
YELLOW; ◀	110 Hz		Q-PLAY		BAND		WOOFER -		A-B	
BLUE; ▮	140 Hz		SLOW		SLOW		WOOFER +		SLOW	
☐			OSD		OSD				OSD	
☐			GOTO		GOTO				GOTO	
VOL -	VOLUME ▼		VOL ▼	SURR -	VOL ▼		VOLUME ▼		VOL -	
VOL +	VOLUME ▲		VOL ▲	SURR +	VOL ▲		VOLUME ▲		VOL +	
CH V; ◀			◀; PRESET -		◀; PRESET -		CEN -		◀; PREV	
CH ▲; ▶			▶; PRESET +		▶; PRESET +		CEN +		▶; NEXT	
±; SAT			10		10+		10+		+10	
CLEAR; X										
◀; ●			◀; TUNING -		◀; TUNING -				◀; REW	
▶; i			▶; PLAY		▶; PLAY				▶; PLAY	
▶; ?			▶; TUNING +		▶; TUNING +				▶; FWD	
■; ✳			■; STOP		■; STOP				■; STOP	
▮; ⏸			▮; PAUSE		▮; PAUSE				▮/▮; PAUSE/STEP	
1, 2, ... 9, 0			1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 10		1, 2, ... 9, 0	

Функции кнопок пульта IRC 78 F к AUX устройствам

Кнопки пульта IRC 78 F	Код 321		Код 322		Код 323		Код 324		Код 325	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	#b ▲		MIC		DVD; TIME		ZOOM +; +		+	
AUDIO; NICAM	↔		AUDIO	2/5.1CH	AUDIO		LANG; BOOST		AUDIO	
VIDEO; SYS	NTSC/PAL		P/N		PAL/NTSC		CAPT.; SOUR; USB		P/N	
☐; ZOOM	FAST		ZOOM		ZOOM		●		ZOOM	
▼; TV	#b ▼		VOCAL		VHS; CARD		-		-	
☐; ↗			PS; MAN/AUTO		IS/PS		Q-PLAY; HDMI; ECHO		IS; MAN/AUTO	SAVE
☐; LOCK	FREEZE		IS; SAVE		DISC OPER; SP/LP		ANGLE; Q-PLAY; EQ		PS; BAND	
▲; FAV	OPEN/CLOSE		▲; EJECT		▲; OPEN/CLOSE		▲; ☐; ☐		▲; EJECT	
○	○; POWER		○; STANDBY (DVD)	STANDBY	○; STANDBY/ON		○		STANDBY; ○	
AV	MODE		ANGLE		SOURCE		KAR-E; ☐; SOURCE		ANGLE	
✳	MUTE		MUTE (DVD)	MUTE	MUTE		▮		MUTE	
MENU	DISC CHANGE 1		MENU		MENU		MENU; RETURN; ◀		MENU	
EXIT	RETURN		RETURN		RETURN		RETURN; ◀			
▲	▶▶		▲		↶; RETURN		▲; CH ▲		▲	
◀	◀◀		◀		◀		◀		◀	
OK	▶		SELECT		SELECT		OK		SELECT	
▶	▶▶		▶		▶		▶		▶	
▼	◀◀		▼		▼		▼; CH ▼		▼	
✳; SETUP	DISC CHANGE 2		SETUP		SETUP		SETUP		SETUP	PSM
♪; TITLE	DISC CHANGE 3		TITLE		TITLE				TITLE	SPEAKERS
☐			FUNCTION		EDIT				FUNCTION	PANEL
GUIDE			PSM		NAVIGATION		BROWSE; STAR		BROWSER	LOGO
☐	TIME SEARCH		SLEEP		TIMER		MEM; SLEEP		SLEEP	
☐			SUBTITLE		SUBTITLE		SUBT; BASS/TR		SUBTITLE	
RED; ●	REPEAT		REPEAT	SW -	REPEAT; A. TRACK.	●; RECORD	REPEAT; ST/MO		REPEAT	MIC
GREEN; ▮	STEP		A-B	SW +			A→B; FM/AM		▮/▮; PAUSE/STEP	VOCAL
YELLOW; ◀	A-B		BAND	SURR -					A-B	BASS
BLUE; ▮	SLOW		SLOW	SURR +	ANGLE; SLOW				SLOW	TREBLE
☐	VIEW		OSD				DISP; CHAN		OSD	
☐	RESUME		GOTO		GOTO; REC END				GOTO	
VOL -	MPX/SOUND ▼	ECHO ▼	VOL ▼		VOL -		VOLUME -		MAIN VOL ▼	
VOL +	MPX/SOUND ▲	ECHO ▲	VOL ▲		VOL +		VOLUME +		MAIN VOL ▲	
CH V; ◀	◀◀		◀; PRESET -	CENTER -	CH -; TRACKING -	◀; INDEX -	▼; CH ▼	◀◀	◀; PRESET -	
CH ▲; ▶	▶▶		▶; PRESET +	CENTER +	CH +; TRACKING +	▶; INDEX +	▲; CH ▲	▶▶	▶; PRESET +	
±; SAT	+10		+10						+10	
CLEAR; X					ADD/CLEAR; CLR		X; CANCEL			
◀; ●	◀◀		◀; TUNING -		◀; REW				◀; TUNING -	
▶; i	▶		▶; PLAY		▶; PLAY				▶; PLAY	Q-PLAY
▶; ?	▶▶		▶; TUNING +		▶; FWD				▶; TUNING +	
■; ✳	■; STOP		■; STOP		■; STOP				■; STOP	
▮; ⏸	PAUSE		▮; PAUSE		▮/▮; PAUSE/STEP				▮/▮; PAUSE/STEP	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 78 F к AUX устройствам

Кнопки пульта IRC 78 F	Код 326		Код 327		Код 328		Код 329		Код 330	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	DVD/USB		DVD		DVD/USB/CARD				+	VOCAL
AUDIO ; NICAM	LANG		AUDIO	LANG	AUDIO ; NICAM ; RATIO				AUDIO	BASS BOOST
VIDEO ; SYS	MODE		HDMI						P/N	PS ; BAND
☐ ; ZOOM									ZOOM	
▼ ; TV									-	MIC
☐ ; ↗	MEM		MEM		Q-PLAY ; ● ; KAR-KE				IS ; MAN/AUTO	TONE
☐ ; LOCK	ANGLE		ANGLE		ANGLE ; Q-PLAY				CARD ; SAVE	
▲ ; FAV	▲		▲		▲	FAV			▲ ; EJECT	
○	○		○		○		STANDBY		○ ; STANDBY	
AV	INPUT		USB		SOURCE				ANGLE	
✳	MUTE	✳	✳		✳		MUTE		MUTE	
MENU	MENU/RETURN		MENU		MENU ; EPG ; ⏏				MENU	
EXIT	RETURN		KARAOKE		⏏					
▲	▲	SW +	▲	BASS +	CH ▲		CEN.VOL +		▲	
◀	◀	SURR -	◀	TREBLE -	◀		L		◀	FUNCTION ⏏
OK	OK		OK		OK		BALANCE		SELECT	
▶	▶	SURR +	▶	TREBLE +	▶		R		▶	FUNCTION ⏏
▼	▼	SW -	▼	BASS -	CH ▼		CEN.VOL -		▼	
✳ ; SETUP	SETUP		SETUP		SETUP				SETUP	LOGO
♪ ; TITLE	♪ ; KARAOKE		RADIO	ECHO	LANG				TITLE	SPEAKERS
☐			BOOST						PANEL	
GUIDE	BROWSE/S-SONG		BROWSE		EPG				BROWSER	
☐			SLEEP						SLEEP	
☐	SUBT		SUBT	ST/ 5.1	SUBT				SUBTITLE	
RED ; ●	REPEAT	BASS -	REPEAT		REPEAT		SL.VOL -		REPEAT	
GREEN ; ▮	A→B	BASS +	A-B		A→B		SL.VOL +		▮/▮ ; PAUSE/STEP	
YELLOW ; ◀	VOCAL -	TREBLE -	EQ		ZOOM -		SR.VOL -		A-B	
BLUE ; ▮	VOCAL +	TREBLE +	SLOW		ZOOM +		SR.VOL +		SLOW	
☐	DISP		DISP		DISP				OSD	
☐	GO TO		GOTO		⏏ ; GOTO ; ●				GOTO	
VOL -	VOLUME -	SPEAKER VOL -	VOLUME -		VOLUME -		VOL -		MAIN VOL ▼	
VOL +	VOLUME +	SPEAKER VOL +	VOLUME +		VOLUME +		VOL +		MAIN VOL ▲	
CH V ; ◀	◀	CENTRE -	◀CH	◀	CH ▼	◀	SW.VOL -		◀ ; PRESET -	
CH A ; ▶	▶	CENTRE +	CH▶	▶	CH ▲	▶	SW.VOL +		▶ ; PRESET +	
⊕ ; SAT	+10		+10		-/+ ; BROWSE				+10	
CLEAR ; X	X ; CANCEL		X ; CANCEL		X ; CANCEL ; FAV					
◀ ; ●	◀	◀◀◀	◀	◀	◀ ; INFO				◀ ; TUNING -	
▶ ; i	▶	Q-PLAY	▶	▶	▶ ; Q-PLAY	▶ ;			▶ ; PLAY	Q-PLAY
▶ ; ?	▶	▶▶▶	▶	▶	▶ ; AUDIO				▶ ; TUNING +	
■ ; X	■		■		■				■ ; STOP	
▮ ; ⏏	▶		▶		▶ ;				▮/▮ ; PAUSE/STEP	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0				1, 2, ... 9, 0	

Функции кнопок пульта IRC 78 F к AUX устройствам

Кнопки пульта IRC 78 F	Код 331		Код 332		Код 333		Код 334		Код 335	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	#		PS ; BAND				KEY #		SING	
AUDIO ; NICAM	ЯЗЫК	ЗВУКОВОЙ КАНАЛ	AUDIO	VOCAL			AUDIO		AUDIO	
VIDEO ; SYS	СИСТЕМА	АПОЖН	P/N				P/N		P/N	
☐ ; ZOOM	УВЕЛИЧЕНИЕ		ZOOM/S-SONGS				ZOOM		ZOOM	
▼ ; TV	b	ПАМЯТЬ	SWITCH				KEY b		READ	
☐ ; ↗	т		F2 ; MEMORY	SAVE			L/R		MANUAL/AUTO	
☐ ; LOCK	ПРОГРЕССИВНОЕ		IS ; MAN/AUTO		DEFAULT				REALSONIC	
▲ ; FAV	▲ ; ЗАКРЫТИЕ		▲ ; EJECT				▲ ; EJECT		▲ ; EJECT	
○	○ ; ПИТАНИЕ		○ ; STANDBY		STANDBY				STANDBY	
AV	УГОЛ		ANGLE/F-SONGS		INPUT		ANGLE		ANGLE	
✳	ТИХИИ		MUTE		MUTE		MUTE		MUTE	
MENU	МЕНЮ		MENU		MODE		MENU		MENU	
EXIT					RESUME		RESUME		RETURN	
▲	▲		▲	BASS +	SW +		▲		▲	
◀	◀		◀	TREBLE -	SURR -		◀		◀	
OK	УТВЕРДИТЬ		SELECT		SELECT		SELECT		SELECT	
▶	▶		▶	TREBLE +	SURR +		▶		▶	
▼	▼		▼	BASS -	SW -		▼		▼	
✳ ; SETUP	УСТАНОВКА		SETUP		SETUP		SETUP		SETUP	
♪ ; TITLE	ТИТРЫ	МУЗЫКАЛЬНЫЙ	TITLE/RETURN		TITLE		TITLE		TITLE	
☐	ПРОГРАММИРОВ.		FUNCTION						PROG	
GUIDE	BROWSING		PROGRAM				DIGEST		DIGEST	
☐	ВЫБОР ВРЕМЕНИ		SLEEP						REMAIN	
☐	СУБТИТР		SUBTITLE				SUBTITLE		SUBTITLE	
RED ; ●	ПОВТОРЕНИЕ		REPEAT		BASS -		REPEAT		REPEAT	
GREEN ; ▮	A-B		A-B/AGAIN		BASS +		▮/▮ ; PAUSE/STEP		▮/▮ ; PAUSE/STEP	
YELLOW ; ◀	BOOKMARK		SF		TREBLE -		A-B		A-B	
BLUE ; ▮	ЗАМЕДЛЕНИЕ		EQ		TREBLE +		SLOW		SLOW	
☐	ПОКАЗ. ЭКРАНА		OSD				OSD		OSD	
☐	ЗАГОЛОВК		F1 ; GOTO				RETURN		ENTER	
VOL -	ЗВУК -		VOL -		VOLUME ▼		VOL -		VOL -	
VOL +	ЗВУК +		VOL +		VOLUME ▲		VOL +		VOL +	
CH V ; ◀	◀		◀ ; PRESET -		CENTER -		SKIP ◀		SKIP ◀	
CH A ; ▶	▶		▶ ; PRESET +		CENTER +		SKIP ▶		SKIP ▶	
⊕ ; SAT	+10		CH/APPLAUSE				+10		GOTO	
CLEAR ; X	КАДАРИЕТЕ		CLEAR				GOTO		CLEAR	
◀ ; ●	◀		◀ ; WORD TUNING -				◀ ; REV		◀ ; REV	
▶ ; i	▶ ; ПРОИГР.		▶ ; PLAY	F3 ; Q-PLAY			▶ ; PLAY		▶ ; PLAY	
▶ ; ?	▶		▶ ; WORD TUNING				▶ ; FWD		▶ ; FWD	
■ ; X	■ ; ОСТАНОВ		■ ; STOP				■ ; STOP		■ ; STOP	
▮ ; ⏏	▶ ; ПРОИГР.		▮ ; PAUSE				▮/▮ ; PAUSE/STEP		▮/▮ ; PAUSE/STEP	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 78 F к AUX устройствам

Кнопки пульта IRC 78 F	Код 336		Код 337		Код 338		Код 339		Код 340	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	DVD/5.1				SF		TUN +			
AUDIO; NICAM	STEREO/MONO		AUDIO		AUDIO		TONE		AUDIO/DIR	
VIDEO; SYS	VCR		P/N		P/N				VIDEO	
☐; ZOOM			ZOOM		ZOOM					
▼; TV	TUNER		CH		EQ		TUN -			
☐; ↗	AUTO	MEMORY	IS/PS		IS/PS		MEM			
☐; LOCK					CAPTURE					
▲; FAV			▲; EJECT		▲; EJECT					
⊖; STANDBY	STANDBY		⊖; STANDBY	STANDBY	⊖; STANDBY		⊖; POWER			
AV	AUX		ANGLE		ANGLE		INPUT			
⌘	MUTE		MUTE		MUTE		MUTE		MUTE	
MENU	TEST		MENU		MENU		MODE			
EXIT			RETURN						RESUME	
▲	SCAN ▲		▲		▲					
◀; L			◀		◀					
OK			SELECT		SELECT					
▶; R			▶		▶					
▼	SCAN ▼		▼		▼					
⌘; SETUP	CEN.MODE		SETUP		SETUP				P/N	
♪; TITLE	SOUND MODE	AM/FM	TITLE		TITLE		BAND		EQ	
☐	DSP		PANEL		PSM		DECODER		PBC	
GUIDE	BYPASS		BROWSER		BROWSER		CH VOL		PROG	
☐			SUBTITLE		SUBTITLE				ESP	
RED; ●	SL -		REPEAT		REPEAT				REP	
GREEN; ▬	SL +		▬; PAUSE/STEP		▬; PAUSE/STEP		STEP/TEST		A-B	
YELLOW; ◀	SR -		A-B		A-B					
BLUE; ▬	SR +		SLOW						SLOW	
☐			OSD		OSD					
☐			GOTO		GOTO				RETURN	
VOL -	VOLUME ▼	SW -	VOL -	VOL -	VOL -		VOLUME -		VOL -	
VOL +	VOLUME ▲	SW +	VOL +	VOL +	VOL +		VOLUME +		VOL +	
CH V; ◀	CH ▼	C -	SKIP ◀		SKIP ◀				◀; PREV	
CH A; ▶	CH ▲	C +	SKIP ▶		SKIP ▶				▶; NEXT	
±; SAT	+10		+10		+10				10+	
CLEAR; X					PANEL				GOTO	
◀; ●	SUR. DELAY -		◀; REV		◀; REV				◀; FB	
▶; i			▶; PLAY	Q-PLAY	▶; PLAY	Q-PLAY			▶; PLAY/PAUSE	
▶; ?	SUR. DELAY +		▶; FWD		▶; FWD				▶; FF	
▬; X			▬; STOP		▬; STOP				▬; STOP	
▬; ●			▬; PAUSE/STEP		▬; PAUSE/STEP				▬; PLAY/PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 10	

Функции кнопок пульта IRC 78 F к AUX устройствам

Кнопки пульта IRC 78 F	Код 341		Код 342		Код 343		Код 344		Код 345	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	SURR +		DVD		ECHO + (KARAOKE)	DELAY + (KARAOK.)	EQ			
AUDIO; NICAM	AUDIO	2/5.1 CH	STEREO		HI-FI		HI-FI		BASS ENHANCER	
VIDEO; SYS	P/N		OPTICAL		ON/OFF VOICE IND.		CYBER LOGIC		STANDARD	
☐; ZOOM	ZOOM		TEST		BASS ENHANCER		BASS ENHANCER			
▼; TV	SURR -		TUNER		ECHO - (KARAOKE)	DELAY - (KARAOK.)	AUTO EQ			
☐; ↗	IS/PS		MEM		MEMORY		SAVE	MEMORY (TUNER)	SEARCH	MEMORY
☐; LOCK			DEFAULT		DEFAULT	CHILD LOCK	DEFAULT	CHILD LOCK	DEFAULT	CHILD LOCK
▲; FAV	▲; EJECT		SPK.		CH TEST		SPEAKERS		MIC	
⊖; STANDBY	⊖; STANDBY	STANDBY	⊖; STANDBY		⊖; STANDBY		⊖; STANDBY		STANDBY	
AV	ANGLE		CD		INPUT		INPUT		INPUT	
⌘	MUTE	MUTE	MUTE		MUTE		MUTE		MUTE	
MENU	MENU		MODE		MOVIE OTP		MOVIE OTP			
EXIT	RETURN									
▲	▲		▲	BASS +	▲		▲		▲	
◀	◀		◀	TREBLE -	◀		◀		◀	
OK	SELECT		OK		MULTI-BAND EQ		MULTI-BAND EQ		EQ	
▶	▶		▶	TREBLE +	▶		▶		▶	
▼	▼		▼	BASS -	▼		▼		▼	
⌘; SETUP	SETUP		DTS		MUSIC OTP		MUSIC OTP	1 (TUNER)	CYBER LOGIC	
♪; TITLE	TITLE		5.1 CH		K.R.OK OTP		K.R.OK OTP	2 (TUNER)	HI-FI	
☐	PANEL		BAND		STANDARD		STANDARD	3 (TUNER)		
GUIDE	BROWSER		▬; PL II		VOICE NAVI		SURR	4 (TUNER)		
☐			DELAY				DELAY (KARAOKE)	5 (TUNER)		
☐	SUBTITLE		▬; DIGITAL		CYBER LOGIC		ECHO (KARAOKE)	6 (TUNER)		
RED; ●	REPEAT	MIC	EQ MODE	BASS - (KARAOKE)	SL	BASS - (KARAOKE)	MODE (TUNER)	7 (TUNER)	SL	
GREEN; ▬	A-B	VOCAL	STEP	BASS + (KARAOKE)	SW	BASS + (KARAOKE)	STEP (TUNER)	8 (TUNER)	SW	
YELLOW; ◀		BASS	COAX. 1	TREBLE - (KARA.)	SR	TREBLE - (KARA.)	BAND (TUNER)	9 (TUNER)	SR	
BLUE; ▬	SLOW	TREBLE	COAX. 2	TREBLE + (KARA.)	SURR	TREBLE + (KARA.)	WF (KARAOKE)	0 (TUNER)		
☐	OSD		DSP		DISPLAY		DISPLAY		DISPLAY	
☐	GOTO		SW		CALL		CALL		CALL	
VOL -	VOL ▼	SW -	VOL ▼	MIC VOL ▼ (KARA.)	VOL -	MIC VOL ▼ (KARA.)	MASTER VOL ▼		MASTER VOL ▼	
VOL +	VOL ▲	SW +	VOL ▲	MIC VOL ▲ (KARA.)	VOL +	MIC VOL ▲ (KARA.)	MASTER VOL ▲		MASTER VOL ▲	
CH V; ◀	SKIP ◀	CENTER -	◀		MASTER VOL ▼	MIC1 VOL ▼ (KAR.)	◀; PRESET (TUNER)			
CH A; ▶	SKIP ▶	CENTER +	▶		MASTER VOL ▲	MIC1 VOL ▲ (KAR.)	▶; PRESET (TUNER)			
±; SAT	+10		SL		EQ					
CLEAR; X			SR		AUTO EQ		CLEAR (TUNER)			
◀; ●	◀; REW		L		LEFT	MIC2 VOL ▼ (KAR.)	TUNING ◀ (TUNER)		LEFT	
▶; i	▶; PLAY	Q-PLAY	C		CENTER		VOLUME (KARA.)		CENTER	
▶; ?	▶; FWD		R		RIGHT	MIC2 VOL ▲ (KAR.)	TUNING ▶ (TUNER)		RIGHT	
▬; X	▬; STOP		ECHO - (KARAOKE)		VOICE MODIFY (K.)		VOICE MOD. (KAR.)			
▬; ●	▬; PAUSE		ECHO + (KARAOKE)		WF (KARAOKE)		TONE (KARAOKE)			
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 8		1, 2, ... 8		1, 2, 3, 4	

Функции кнопок пульта IRC 78 F к AUX устройствам

Кнопки пульта IRC 78 F	Код 346		Код 347		Код 348		Код 349		Код 350	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	VOCAL		VOCAL#		MIC/b		MIC/b		VOCAL	
AUDIO ; NICAM	AUDIO	(( )) ; TONE	AUDIO		AUDIO		AUDIO		AUDIO	
VIDEO ; SYS	P/N		P/N		P/N		P/N		P/N	
ZOOM	ZOOM		ZOOM		ZOOM		ZOOM		ZOOM	
TV	MIC		MIC/b		VOCAL#		VOCAL#		MIC	
INFO ; MEMORY	INFO ; MEMORY		PS/IS-PS		PS/IS-PS ; MAN/AUT.	IS/Q-PLAY ; SAVE	PS/IS-PS		IS-PS	
LOCK	CAP ; ST/MO ; f		ANGLE		ANGLE ; BAND	ANGLE	ANGLE		ANGLE	
FAV	EJECT		EJECT		EJECT		EJECT		EJECT	
STANDBY	STANDBY		STANDBY		STANDBY		STANDBY		STANDBY	
AV	ANGLE		FUNCT./CARD-DISC		FUNCTION/C.-DISC		FUNCT./CARD-DISC		CARD-DISC	
MUTE	MUTE		MUTE		MUTE		MUTE		MUTE	
MENU	MENU		MENU		MENU		MENU		MENU	
EXIT			RETURN		RETURN		RETURN		RETURN	
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀		◀		◀	
OK	SELECT		SELECT		SELECT		SELECT		SELECT	
▶	▶		▶		▶		▶		▶	
▼	▼		▼		▼		▼		▼	
SETUP	SETUP		SETUP		SETUP	PSM	SETUP	PSM	SETUP	
TITLE	TITLE	SPEAKER	TITLE		TITLE		TITLE		TITLE	
FUNCTION			PANEL/PIC		PANEL/PIC		PANEL/PIC		PANEL	
GUIDE	IS/PS ; BAND		IS/Q-PLAY		BROWSER		BROWSER		BROWSER	
SLEEP	SLEEP				SLEEP				CAPTURE	
SUBTITLE	SUBTITLE		SUBTITLE		SUBTITLE		SUBTITLE		SUBTITLE	
REPEAT	REPEAT		REPEAT		REPEAT		REPEAT		REPEAT	
GREEN ; PAUSE/STEP	PAUSE/STEP		PAUSE/STEP		PAUSE/STEP		PAUSE/STEP		PAUSE/STEP	
YELLOW ; A-B	A-B		A-B		A-B		A-B		A-B	
BLUE ; KEYBOARD ; PANEL	KEYBOARD ; PANEL		SLOW		SLOW		SLOW		SLOW	
OSD	OSD		OSD		OSD		OSD		OSD	
GOTO	GOTO		GOTO		GOTO		GOTO		GOTO	
VOL -	VOL -		VOL -		VOL - ; VOL ▼		VOL -		VOL ▼	
VOL +	VOL +		VOL +		VOL + ; VOL ▲		VOL +		VOL ▲	
CH V ; PRESET -	PRESET -		PREV		PREV ; PRES. -		PREV		SKIP	
CH A ; PRESET +	PRESET +		NEXT		NEXT ; PRES. +		NEXT		SKIP	
SAT	+10		+10		+10		+10		+10	
CLEAR ; X					CAPTURE					
REW ; REV	REV		REV		REW ; TUNING -		REV		REW	
PLAY	PLAY		PLAY	IS/Q-PLAY	PLAY	Q-PLAY	PLAY	IS/Q-PLAY	PLAY	Q-PLAY
FWD ; ?	TUNING +		FWD		FWD ; TUNING+		FWD		FWD	
STOP	STOP		STOP		STOP		STOP		STOP	
PAUSE	PAUSE/STEP		PAUSE/STEP		PAUSE/STEP		PAUSE/STEP		PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 78 F к AUX устройствам

Кнопки пульта IRC 78 F	Код 351		Код 352		Код 353		Код 354		Код 355	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD			KEY #		FILEMODE		STEP		CD INPUT	
AUDIO ; NICAM	AUDIO		AUDIO		AUDIO		AUDIO		7.1 INPUT	
VIDEO ; SYS	TV-SYSTEM		PAL/NTSC				SECONDARY AUDIO			
ZOOM	ZOOM		ZOOM		ZOOM		ZOOM			
TV			KEY b		TV MODE		SEARCH			
LOCK			SF				PIP			
FAV			EQ						RESET	
STANDBY			EJECT				OPEN/CLOSE			
AV			STANDBY				STANDBY		STANDBY	
ANGLE			ANGLE				ANGLE		AUX INPUT	
MUTE			MUTE		MUTE		MUTE		MUTE	
MENU	SELECT		MENU		HOME		MENU			
EXIT	RETURN		RETURN		EXIT ; RETURN		RETURN			
▲	▲		▲		▲		▲		+	
◀	◀		◀		◀		◀		L	
OK	OK		SELECT		OK		ENTER		TOUR	
▶	▶		▶		▶		▶		R	
▼	▼		▼		▼		▼		-	
SETUP	SETUP		SETUP		SETUP		STOP/SETUP			
TITLE	TITLE		TITLE		TITLE		POP MENU/TITLE		LISTEN MODE	
OPTION	OPTION		PSM							
GUIDE	GUIDE				GOTO					
SUBTITLE	SUBTITLE		SUBTITLE		SUBTITLE		SUBTITLE			
REPEAT	REPEAT		REPEAT		REPEAT		RED ; A		SURROUND VOL-	
GREEN ; A-B			A-B				GREEN ; B		SURROUND VOL+	
YELLOW ; A-B							YELLOW ; C		BACK SURR.VOL-	
BLUE ; SLOW	SLOW		SLOW		SLOW		BLUE ; D		BACK SURR.VOL+	
OSD	OSD		OSD		DISPLAY		INFO			
GOTO	ENTER		GOTO		EXIT ; RETURN		REPEAT			
VOL -	VOL -		VOL -		VOL -		VOL -		MASTER VOL -	
VOL +	VOL +		VOL +		VOL +		VOL +		MASTER VOL +	
CH V ; SKIP	SKIP		SKIP		SKIP		PREV		CENTER VOL -	
CH A ; SKIP	SKIP		SKIP		SKIP		NEXT		CENTER VOL +	
SAT	GOTO		+10		* ; SWITCH		A-B			
CLEAR ; X			CLEAR		# ; DELETE		CANCEL			
REW ; REV	REV		SEARCH		REW		REV		WOOFER VOL -	
PLAY	PLAY		PLAY		PLAY		PLAY			
FWD ; ?	SEARCH		SEARCH		FWD		FWD		WOOFER VOL +	
STOP	STOP		STOP		STOP		STOP/SETUP			
PAUSE	PAUSE		PAUSE		PAUSE		PAUSE			
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0			

Функции кнопок пульта IRC 78 F к AUX устройствам

Кнопки пульта IRC 78 F	Код 356		Код 357		Код 358		Код 359		Код 360	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	DVD	DV	USB DVD		USB/DVD		DVD/USB		▶▶	
AUDIO; NICAM	AUDIO		AUDIO		AUDIO; MEM		LANGUAGE		AUDIO	
VIDEO; SYS	P/N	IS/PS	HDMI						PICTURE	
☐; ZOOM	ZOOM		Q-PLAY; ZOOM		ZOOM		ZOOM		ZOOM	
▼; TV	HDD	FILE					KARAOKE		◀◀	
☐; ↻	PIP						L/R		N/P	
☐; LOCK	ANGLE		MARK		ANGLE		ANGLE		☒	
▲; FAV	▲; OPEN/CLOSE		▲				OPEN/CLOSE		ANGLE	
○	○; STANDBY/ON		○		○		○; STANDBY		○	
AV	SOURCE				SOURCE				DVD/TV/AV	
⌘	MUTE		⌘		⌘		⌘		⌘	
MENU	MENU		MENU		MENU/RIP; MO/ST		MENU/PBC		MENU	
EXIT	RETURN		RETURN							
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀		◀		◀; CH -	
OK	SELECT		OK		OK		OK		OK	
▶	▶		▶		▶		▶		▶; CH +	
▼	▼		▼		▼		▼		▼	
⌘; SETUP	SETUP	DUBBING	SETUP		SETUP		SETUP		SETUP	
♪; TITLE	TITLE		KARAOKE/TV/RADI		TITLE/COPY		TITLE		TITLE	
☐	EDIT		REPEAT/LTX		Q-PLAY		Q-PLAY			
GUIDE	TS-SAVE		GOTO/EPG; GOTO		PROG		PROG		PROG	
⏸	TIMER		Q-PLAY; ZOOM							
☐	SUBTITLE		SUBT		SUBT/AUTO		SUBTITLE		SUBTITLE	
RED; ●	1/ALL REPEAT	●; RECORD	RED; A	A→B/REC; A→B	REPEAT		REPEAT		REPEAT	REC
GREEN; ▶▶	A-B REPEAT		GREEN; B		STEP		A→B			
YELLOW; ◀◀	TIME-SHIFT		YELLOW; C		A→B					
BLUE; ▶▶	LIVE	SORT; SLOW	BLUE; D		SLOW				SLOW	
☐	INFO		DISP/INFO; DISP		OSD		DISPLAY		DISP	
☐	DISC OPERATION		CLEAR; ☐		GOTO		GOTO			
VOL -	VOL -		VOLUME -		VOLUME -		VOLUME -		VOLUME -	
VOL +	VOL +		VOLUME +		VOLUME +		VOLUME +		VOLUME +	
CH V; ◀◀	CHANNEL ▼	◀◀; PREV	◀◀; REV/PREV		◀◀		◀◀		◀; CH -	◀◀
CH A; ▶▶	CHANNEL ▲	▶▶; NEXT	▶▶; FWD/NEXT		▶▶		▶▶		▶; CH +	▶▶
±; SAT	GOTO		A→B/REC; A→B		10+		10+		-/-; GOTO	
CLEAR; X	ADD CLEAR		CLEAR; ☐						10+	
◀◀; ●	◀◀; REW		◀◀; REV/PREV		◀◀		◀◀		◀◀	
▶; i	▶; PLAY		▶;		▶;		▶;		▶;	
▶▶; ?	▶▶; FWD		▶▶; FWD/NEXT		▶▶		▶▶		▶▶	
■; X	■; STOP		■		■		■		■	
; ⏸	/  ; PAUSE/STEP		▶;		▶;		▶;		▶;	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0/10		1, 2, ... 9, 0/10		1, 2, ... 9, 0	

Функции кнопок пульта IRC 78 F к AUX устройствам

Кнопки пульта IRC 78 F	Код 361		Код 362	
	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			FM (TUNER)	
AUDIO; NICAM			HI-FI	
VIDEO; SYS			STANDARD	
☐; ZOOM			CYBER LOGIC	
▼; TV			AM (TUNER)	
☐; ↻			SAVE	SEARCH
☐; LOCK	DEFAULT		DEFAULT	CHILD LOCK
▲; FAV			BASS ENHANCER	
○	STANDBY		○; STANDBY	
AV	INPUT		INPUT	
⌘	MUTE		MUTE	
MENU	MODE		MODE (TUNER)	MEMORY (TUNER)
EXIT			SW	
▲	BASS +		▲	
◀	TREBLE -		◀	
OK	TREBLE +		MULTI-BAND EQ	
▶	BASS -		▶	
▼			▼	
⌘; SETUP			SL	1 (TUNER)
♪; TITLE			SR	2 (TUNER)
☐			POP	3 (TUNER)
GUIDE			ROCK	4 (TUNER)
☐			DISCO	5 (TUNER)
☐			JAZZ	6 (TUNER)
RED; ●	SURR -		EQ	7 (TUNER)
GREEN; ▶▶	SURR +		AUTO EQ	8 (TUNER)
YELLOW; ◀◀	CENTER -		TUNING ▼ (TUNER)	9 (TUNER)
BLUE; ▶▶	CENTER +		TUNING ▲ (TUNER)	0 (TUNER)
☐			DISPLAY	
☐			CALL	
VOL -	VOLUME ▼		MASTER VOL ▼	
VOL +	VOLUME ▲		MASTER VOL ▲	
CH V; ◀◀	SW -		PRESET ▼ (TUNER)	
CH A; ▶▶	SW +		PRESET ▲ (TUNER)	
±; SAT				
CLEAR; X			CLEAR (TUNER)	
◀◀; ●			LEFT	
▶; i			CENTER	
▶▶; ?			RIGHT	
■; X				
; ⏸				
1, 2, ... 9, 0			1, 2, ... 8	

### Функции кнопок пульта IRC 78 F к SAT устройствам

Кнопки пульта IRC 78 F	Код 401	
	Функция	Доп. функция
▲ ; DVD	▶▶	
AUDIO ; NICAM	AUDIO	
VIDEO ; SYS		
⏏ ; ZOOM		
▼ ; TV	◀◀	
⏏ ; ↻		
🔒 ; LOCK		
▲ ; FAV	FAV ; ★	
⊖	⊖	
AV	USB	
⌘	MUTE ; MUTE	
MENU	MENU	
EXIT	EXIT	
▲	▲	
◀	◀ ; VOL -	
OK	OK	
▶	▶ ; VOL +	
▼	▼	
⌘ ; SETUP	MEDIA	
🎵 ; TITLE	TV/RADIO	
⏏	TTX	
GUIDE	EPG	
⏏	TIMER	
⏏	SUBTITLE	
RED ; ●	RED ; TIMER	RECORD
GREEN ; ▶▶	GREEN	
YELLOW ; ◀◀	YELLOW	
BLUE ; ▶▶	BLUE ; TMS	
⏏	INFO	
⏏	RES ; RECALL	
VOL -	◀ ; VOL -	
VOL +	▶ ; VOL +	
CH V ; ◀◀	CH -	◀◀
CH A ; ▶▶	CH +	▶▶
± ; SAT	BACK ; GOTO	
CLEAR ; X		
◀◀ ; ●	◀◀	
▶▶ ; i	▶▶	
▶▶ ; ?	▶▶	
■ ; X	■	
■ ; ⏏	▶▶	
1, 2, ... 9, 0	1, 2, ... 9, 0	

### Функции кнопок пульта IRC 78 F к TV устройствам

Кнопки пульта IRC 78 F	Коды 501-749	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM		
VIDEO ; SYS		
⏏ ; ZOOM		
▼ ; TV		
⏏ ; ↻		
🔒 ; LOCK		
▲ ; FAV		
⊖	POWER ; ⊖	
AV	TV/VIDEO ; TV/AV	
⌘	MUTE ; ⌘	
MENU		
EXIT		
▲		
◀		
OK		
▶		
▼		
⌘ ; SETUP		
🎵 ; TITLE		
⏏		
GUIDE		
⏏		
⏏		
RED ; ●		
GREEN ; ▶▶		
YELLOW ; ◀◀		
BLUE ; ▶▶		
⏏		
⏏		
VOL -	VOLUME ▼ ; ◀-	
VOL +	VOLUME ▲ ; ▶+	
CH V ; ◀◀	CHANNEL ▼ ; P -	
CH A ; ▶▶	CHANNEL ▲ ; P +	
± ; SAT		
CLEAR ; X		
◀◀ ; ●		
▶▶ ; i		
▶▶ ; ?		
■ ; X		
■ ; ⏏		
1, 2, ... 9, 0	1, 2, ... 9, 0	

Для просмотра функций кнопок баз кодов 8 и 9 (SAT, STB, DVB устройства) перейдите по следующей ссылке <http://www.pult-irc.ru/files/manual/SatCodesForIrcF.pdf>