

Приложение IRC SAT F (версия 18.05.10 09:22)

Модели оригинальных пультов и соответствующие им коды пульта IRC приведены в разделе "Коды пульта IRC SAT F".

Функции всех кнопок для каждого кода пульта IRC можно узнать из таблиц данного приложения.

Пульт IRC может иметь дополнительные функции (если указаны в столбце "Доп. функция"). Доступ к ним осуществляется при помощи кнопки SHIFT (см. в инструкции рис.1, п.16). Для доступа к дополнительным функциям нажмите кнопку SHIFT и, удерживая её нажатой, нажмите ту кнопку, дополнительная функция которой Вам необходима.

После первой установки батареек

Кнопка устройства пульта IRC	Код пульта IRC
TV	101
VCR	102
AUX	103
SAT	104

Кнопка устройства пульта IRC	Код пульта IRC
SHIFT + TV*	105
SHIFT + VCR*	106
SHIFT + AUX*	107
SHIFT + SAT*	108

* Нажмите кнопку SHIFT и, удерживая её нажатой, нажмите и отпустите одну из кнопок пульта: TV, VCR, AUX или SAT.

Доступные коды пульта IRC SAT F

Номер базы кодов (диапазон кодов)	Устройство базы кодов	Доступные коды пульта IRC
1 (101-199)	SAT	101 - 199
2 (201-299)	SAT	201 - 299
3 (301-399)	SAT	301 - 352
4 (401-499)	-	Нет
5 (501-599)	TV	501 - 599
6 (601-699)	TV	601 - 699
7 (701-799)	TV	701 - 798
8 (801-899)	-	Нет
9 (901-999)	-	Нет

Коды пульта IRC SAT F

Коды к SAT устройствам различных марок

Марка*	Модель	Код
AIRTIES	RC1994940	308
AIRTONE	DB-2206	268
ALFA GOLD	DIGITAL	128
AMINO (СТРИМ)	BW0981	129
AMINO (СТРИМ)	RC-110	129
AMINO (СТРИМ)	RC2424602	319
AMINO (СТРИМ)	RC50D	202
ARION	RC37	135
ARION	SAT-01	135
ARRIS	VIP-1103	352
ARRIS	VIP-2262	183
ASTON	SAT-01	111
BAIKAL	HD970	335
BBK	RC-SMP712	231
BBK	RC-SMP712A	231
BBK	RC-STB103	231
BIG STAR	BS-HDTR870B	265
BIGSAT	DSR7000	139
BIGSAT	HOF06C415D5	236
BIGSAT	HOF-44C	140
BIGSAT	SAT-01	203
CADENA	CDT-1652S	331
CADENA	HT-1658	262
CADENA	SHTA-1511S2	258
CADENA	ST-203AA	302
CONTINENT	SAT-01	186
CONTINENT	SAT-02	275
COSHIP	N5266C	155
DAEWOO	R-53 (SAT)	172
D-COLOR	ADS-361	246
D-COLOR	DC1302HD	329
D-COLOR	DC802HD	334
D-COLOR	DC921HD	261
DELTA SYSTEMS	DS-530HD	285
DENN	DDT103	343
DEXP	AL-1012	306
DEXP	HD 1810P	351
DIGIFORS	HD 20	312
DIGIFORS	HD 50	339
DIGIFORS	HD 70	246
DIGIFORS	HD 71	325
DIVISAT	SAT-01	257
DIVISAT	XYX-828	258
D-LINK	DIB-120	223
DNS	DB-2205	268

Марка	Модель	Код
DNS	DVB-01	250
DR.HD	F15	283
DR.HD	GRAND	283
DRE	DRE-400	104
DRE	RC-37	104
DRE	RC56A	188
DREAM	SAT-01	303
DREAM	URC-39730	119
DUNE	BD PRIME 3.0	346
DUNE	HD BASE 3D	234
DUNE	HD CONNECT	307
DUNE	HD MAX	234
DUNE	HD NEO 4K T2	307
DUNE	JJ-N26	227
DUNE	JX-1226A	234
ECHOSPACE	RC-633	162
ECHOSTAR	D-2500IP	122
ECHOSTAR	DSB1100	108
ECHOSTAR	DSB2110	108
ECHOSTAR	DSB707	109
ELECTRONICS	VV8903HD	339
ELTEX	NV-102	287
ELTEX	NV-501	287
EPLUTUS	DVB-01	304
EPLUTUS	DVB-02	261
EPLUTUS	DVB-03	342
EPLUTUS	KR-6188	304
EUROSKY	ES-3010	326
EUROSKY	ES-3011	281
EUROSKY	WS-238B	140
EUROSTAR	SAT-01	163
EUSTON	RC1260	125
EUSTON	SAT-01	320
EVO	EVO-3	265
GALAXY INNOVATIONS	HOF54B1-3	208
GALAXY INNOVATIONS	HOF-55C	341
GALAXY INNOVATIONS	HOF-55D	212
GALAXY INNOVATIONS	HST-317	217
GALAXY INNOVATIONS	JH-656B	178
GALAXY INNOVATIONS	KOR-S45K-1	211
GALAXY INNOVATIONS	S2121	224
GALAXY INNOVATIONS	SAT-01	181
GALAXY INNOVATIONS	SAT-02	211
GALAXY INNOVATIONS	SAT-03	301
GALAXY INNOVATIONS	SAT-04	340

Марка	Модель	Код
GALAXY INNOVATIONS	UNI	348
GENERAL SATELLITE	DVB-01	254
GENERAL SATELLITE	GS-8300	315
GENERAL SATELLITE	GS9300	168
GENERAL SATELLITE	HD GS B212	188
GENERAL SATELLITE	RC-37	104
GENERAL SATELLITE	RC411-T2-02	188
GENERAL SATELLITE	RC-50	168
GENERAL SATELLITE	RC56A	188
GENERAL SATELLITE	RC8300N	188
GENERAL SATELLITE	RS-101P	104
GENERAL SATELLITE	SAT-01	207
GENERAL SATELLITE	TE-8310	233
GLOBALTEQ	GCR-300CX	133
GLOBALTEQ	SW-0347	133
GLOBO	AS-06	295
GLOBO	E-RCU-016	209
GLOBO	HOF47A7	235
GLOBO	KM-1288-1	245
GLOBO	LKS-L5515	225
GLOBO	SAT-01	256
GLOBO	SAT-02	256
GLOBO	SAT-03	273
GLOBO	SAT-04	301
GLOBO	S-RCU-023	299
GLOBO	X10P	215
GOLD STAR - LG	MKJ40653802 (STB)	171
GOLDEN INTERSTAR	ADB066	121
GOLDEN INTERSTAR	DM-329	121
GOLDEN INTERSTAR	GI-S790	121
GOLDEN INTERSTAR	GI-T-S84CI	179
GOLDEN INTERSTAR	HOF09C483D9	218
GOLDEN INTERSTAR	KOR-4619C	121
GOLDEN INTERSTAR	R803	141
GOLDEN INTERSTAR	SAT-01	121
GOLDEN INTERSTAR	WJ-350	121
GOLDEN MEDIA	HOF11K548GPD10	212
GOLDEN MEDIA	TS-Y81	147
GOLDMASTER	ZLE-S36K-4	211
HD BOX	DVB-01	147
HITACHI	CLE-970 (SAT)	132
HITACHI	CLE-993 (STB)	124
HITACHI	CLE-999 (STB)	124
HIVION	HR-5101 A	229
HOME	BY-628	268

Марка	Модель	Код
HOMECAST (ВОЛЯ)	DVB-01	131
HOMECAST (ВОЛЯ)	HR-A407	136
HOMECAST (ВОЛЯ)	HR-A409	120
HOTCAKE	HD 3	321
HUMAX	DSL-3600	161
HUMAX	HD 7000I	205
HUMAX	HD 9000I	347
HUMAX	R-102	123
HUMAX	RC-536K	148
HUMAX	RC-635	123
HUMAX	RM-E08	205
HUMAX	RS-101P	104
HUMAX	RS-591K	104
HUMAX	RS-632L	104
HUMAX	RS-636E	160
HUMAX	URC-6022X	249
HUMAX	VA FOX	104
HUMAX	VDS3300	103
HYUNDAI	QF-6222	268
ID DIGITAL	RS-220P	104
INTEK	HD-S10VA0P	284
KAON	HD 5000	120
KAON	HR-A409	120
KAON	HSP-A409AA	120
KAON	K200	120
KAON	K230	120
KAON	KCF-SA700PCO	120
KAON	KOR-4602A	120
KAON	URC-6022X	249
KOSMOS	M-104	156
KOSMOS	RC057	155
LANS	XYX-188	270
LEADSTAR	168	304
LEADSTAR	168-1	304
LOCUS	ADS-361	246
LUMAX	B0302	294
LUMAX	DIGITAL-IRD	152
LUMAX	DV1103HD	349
LUMAX	DV2106HD	350
LUMAX	DVT 3200 CA HD	207
LUMAX	DVT2-4110HD	265
LUMAX	HC2-2883	173
LUMAX	WD-004	152
LUMAX	XLF-035C	213
MAG	MAG 245	288

* По каталогу «IRC»

Коды пульта IRC SAT F

Коды к SAT устройствам различных марок

Марка	Модель	Код
MAG	MAG 250	288
MDI	DBR-701	314
MDI	DBR-901	314
MEDIA COM	RC1405	125
MOTOROLA	MXV3	183
MOTOROLA	R1A	184
MOTOROLA	RC1534807	201
MOTOROLA	RC1534807B	201
MOTOROLA	URC18001	274
MOTOROLA	VIP-1003	352
MOTOROLA	VIP-1003G-1	274
MYSTERY	MMP-76DT2	297
MYSTERY	MMP-80DT	210
MYSTERY	MMP-85DT2	210
NDS	SAT-01	114
NEWWAVE	YE-5000	336
NEXT	SZ-228009	164
NEXTSTAR	YE-5000	336
NOKIA	9600S	113
NOT	DVB-01	241
ONLIME	A812	205
OPENBOX	S5	211
OPENBOX	S9	291
OPENBOX	SAT-01	127
OPENBOX	SAT-02	135
OPENBOX	SAT-03	169
OPENBOX	SAT-04	170
OPENBOX	SAT-05	135
OPENBOX	SAT-06	211
OPENBOX	SAT-07	211
OPENBOX	X-500	290
OPENTECH	OHS 1740V	272
OPENTEL	HOF-X-SM35N	165
OPENTEL	HTS-0304	165
ОРБИТА	HD-910	246
ОРБИТА	SAT-01	295
ORIEL	DVB-750	248
ORIEL	DVB-793	286
ORIEL	JJ-718A	255
ORIEL	KFD-1046-HLD	325
ORIEL	MA-43K	187
ORIEL	QF-X898	226
ORIEL	U6	325
ORIEL	WS-528-82-A	241
PACE	DD-8000	232

Марка	Модель	Код
PACE	JJ-828	253
PACE	PACE415	101
PATIX DIGITAL	DVB-01	292
PATIX DIGITAL	JXC-366	246
PATIX DIGITAL	JXD-366	267
PATIX DIGITAL	KR-568	312
PAUXIS	128	142
PAUXIS	128A	142
PAUXIS	GF-1341	159
PERFEO	PF-120-1	281
PERFEO	PF-120-2	260
PERFEO	PF-T2-1	312
PHILIPS	RC4401 (STB)	157
PHILIPS	RC4404 (STB)	157
PHILIPS	SAT-01	199
PIONEER	AXD1509 (STB)	151
PIONEER	AXD7389 (STB)	151
POLAR	XS-155	158
REFLECT	RC-9600S	259
REXANT	RX-510	277
RIKOR	WH 101221	216
RIKOR	WH 101221A	247
ROLSEN	6222-10	242
ROLSEN	DVB-01	230
ROLSEN	DVB-02	261
ROLSEN	RDB-532	330
ROLSEN	WS-528-82-A	241
SAGEMCOM	DSI87 HD	206
SAGEMCOM	DSI87-1 HD	206
SAMSUNG	DSR-9000	110
SAMSUNG	DSR-9400	112
SAMSUNG	DSR-9500	112
SAMSUNG	MF59-00242A	112
SAMSUNG	MF59-00242C	154
SAMSUNG	VDS3300	103
SEG	HST-202	118
SELENGA	HD860	314
SELENGA	HD930	323
SELENGA	T50	310
SELENGA	T60	322
SELENGA	T71D	246
SEZAM	HST-317	182
SKY VISION	T2108	277
SKY VISION	T2109	282
SKY VISION	T2202	252

Марка	Модель	Код
SKY VISION	T2501	266
SKY VISION	T2603	324
SKYMASTER	SAT-01	130
SKYON	DSR-1500	327
SKYPRIME	HD	338
SKYTECH	DVB-01	335
SKYWAY	KOR-S45K-1	211
SKYWAY	SAT-01	211
SKYWORTH	HSD11	289
STAR	RC0347	133
STAR TRACK	SAT-01	126
STAR TRACK	SAT-02	135
STAR TRACK	SAT-03	243
STARNET	SAT-01	185
STAR-X	C98	344
STRONG	9500D	130
STRONG	HD-713	115
STRONG	SO12070015	214
STRONG	SRT-4125	128
STRONG	SRT-4155	116
STRONG	SRT-4355	106
STRONG	SRT-4375	106
STRONG	SRT-4400	105
STRONG	SRT-4402	117
STRONG	SRT-4405	116
STRONG	SRT-4450	105
STRONG	SRT-4455	105
SUNNIWELL	SRC808RU	175
SUPERBOX	A521-47C-017	203
SUPERMAX	S39B91	166
SUPERMAX	SAT-01	180
SUPERMAX	SAT-02	224
SUPERMAX	WJ-340	121
SUPRA	DVB-01	332
SUPRA	DVB-T2A	262
SUPRA	SDT-100	250
SUPRA	SDT-92E	260
TECHNOSAT	CLASSIC 1010	153
TECHNOSAT	SAT-01	152
TECHNOSAT	WH-0086	152
TEL-ANT	XYX-528	260
TELEFUNKEN	TF-DVBT202	261
TELEFUNKEN	TF-DVBT204	268
TESLER	DSR-10	226
TESLER	DVB-01	304

Марка	Модель	Код
THEAERA	TH2000VA	305
TOP BOX	AM-02	265
TOPFIELD	AD9702	138
TOPFIELD	KOR-K4502A	137
TOPFIELD	LKS-TF55	177
TOPFIELD	SAT-01	137
TOPFIELD	SAT-02	191
TOPFIELD	TP009	137
TOSHIBA	CT-90272 (STB)	176
TV STAR	T2 505 HD	267
TVJET	KD-6641	276
TVJET	RE820HDT2	246
V[DUCK]	K45-2-1	309
VESTEL	RC-88	120
VESTEL	SF-118A (DVB)	124
VESTEL	ZY16214 (SAT)	124
VU+	RC2424516 (MODE 0001)	219
VU+	RC2424516 (MODE 0002)	220
VU+	RC2424516 (MODE 0003)	221
VU+	RC2424516 (MODE 0004)	222
WORLD VISION	00BF	316
WORLD VISION	838C	310
WORLD VISION	ET9000	313
WORLD VISION	ET9200	313
WORLD VISION	FORCE1	311
WORLD VISION	GHB-898	261
WORLD VISION	JJ-317B	251
WORLD VISION	S12	328
WORLD VISION	SAT-01	121
WORLD VISION	SAT-02	228
WORLD VISION	T213	337
WORLD VISION	T38	268
WORLD VISION	YL-858	317
WORLD VISION	YPCB0251	252
XSAT	NTV PLUS 200	107
XSAT	PACE415	101
XSAT	XSAT 300	101
XSAT (HTB+)	HD-S10VAOP	284
XSAT (HTB+)	NTV PLUS 200	107
XSAT (HTB+)	NTV PLUS 2000	102
XSAT (HTB+)	OHS 1740V	272
XSAT (HTB+)	SAT-01	298
XSAT (HTB+)	SRC-4709	206
XSAT (HTB+)	URC-39855R00-06	206
XSAT (HTB+)	XSAT 300	101

Марка	Модель	Код
YUXING	ASA-47B2	204
ZELENAYA.NET	IP-TV	345
ZYXEL	HOFO8H	174
БИЛАЙН	HOFO8H339GPD3	223
БИЛАЙН	MXV3	183
БИЛАЙН	R1A	184
БИЛАЙН	RC1534807	201
БИЛАЙН	RC1534807B	201
БИЛАЙН	RCU01	183
БИЛАЙН	TTI	318
ВОЛГАТЕЛЕКОМ	CDVBT1310	149
ВОЛГАТЕЛЕКОМ	CDVBT1350	150
ВОЛГАТЕЛЕКОМ	HD-4031 (MODE 13)	145
ВОЛГАТЕЛЕКОМ	HD-4031 (MODE 16)	144
ВОЛГАТЕЛЕКОМ	KFD-3218	167
ВОЛГАТЕЛЕКОМ	RC1300	142
ВОЛГАТЕЛЕКОМ	RC1300A	149
ВОЛГАТЕЛЕКОМ	RC5644	143
ВОЛГАТЕЛЕКОМ	SAT-01	146
ВОЛГАТЕЛЕКОМ	SAT-02	147
ВОЛГАТЕЛЕКОМ	TLS3001T	167
ВОЛГАТЕЛЕКОМ	WS-38A	158
ДОМ.RU	DMT HD 5000	333
ДОМ.RU	HD 5000	120
ДОМ.RU	HD 7000I	205
ДОМ.RU	KCF-SA700PCO	120
ДОМ.RU	URC178100-00R00	347
ДОМОЛИНК	ASA-47B1	204
ДОМОЛИНК	ASA-47B2	204
ДОМОЛИНК	HOFA7A2	174
МТС	EKT DCD2304	280
МТС	HSD11	289
МТС	N5266C	155
МТС	RC-110	129
МТС	RC50D	202
МТС	SML-482HD	264
МТС	SO12120043	264
МТС	SRC-4513	293
МТС	VIP-1003G	274
МТС	VIP-1003G-1	274
МТС	WS-28A	279
МТС	T4HU1505	293
НЕИЗВЕСТНАЯ МАРКА	050A2	271
НЕИЗВЕСТНАЯ МАРКА	ADS-368	278
НЕИЗВЕСТНАЯ МАРКА	ASA-47B2	204

Марка	Модель	Код
НЕИЗВЕСТНАЯ МАРКА	BH-2	239
НЕИЗВЕСТНАЯ МАРКА	BK3B-C1	134
НЕИЗВЕСТНАЯ МАРКА	BK6A-C2	134
НЕИЗВЕСТНАЯ МАРКА	DTTRC-3	192
НЕИЗВЕСТНАЯ МАРКА	DVB-01	269
НЕИЗВЕСТНАЯ МАРКА	HD-715	193
НЕИЗВЕСТНАЯ МАРКА	HOFO8B012D8	203
НЕИЗВЕСТНАЯ МАРКА	HOFO9A111GPD8	203
НЕИЗВЕСТНАЯ МАРКА	HOFO50D14	240
НЕИЗВЕСТНАЯ МАРКА	KFD-8858	237
НЕИЗВЕСТНАЯ МАРКА	KM-1288-1	245
НЕИЗВЕСТНАЯ МАРКА	KT1045-XHY	296
НЕИЗВЕСТНАЯ МАРКА	M5417	189
НЕИЗВЕСТНАЯ МАРКА	RB34A	190
НЕИЗВЕСТНАЯ МАРКА	RC1300	194
НЕИЗВЕСТНАЯ МАРКА	SAT-01	195
НЕИЗВЕСТНАЯ МАРКА	SAT-02	142
НЕИЗВЕСТНАЯ МАРКА	SAT-03	196
НЕИЗВЕСТНАЯ МАРКА	SAT-04	197
НЕИЗВЕСТНАЯ МАРКА	SAT-05	198
НЕИЗВЕСТНАЯ МАРКА	SAT-06	238
НЕИЗВЕСТНАЯ МАРКА	SAT-07	191
НЕИЗВЕСТНАЯ МАРКА	SAT-08	135
НЕИЗВЕСТНАЯ МАРКА	T-202	244
НЕИЗВЕСТНАЯ МАРКА	WH-0172	135
РОСТЕЛЕКОМ	ASA-47B2	204
РОСТЕЛЕКОМ	DN300	293
РОСТЕЛЕКОМ	HOFO8H	174
РОСТЕЛЕКОМ	HOFO8H339GPD3	223
РОСТЕЛЕКОМ	URC177500-00R00	263
РОСТЕЛЕКОМ	URC177501-00R00	263
СИГНАЛ	HD-105	268
СИГНАЛ	HD-200	268
СИГНАЛ	KFD-3218	167
СИГНАЛ	TLS3001T	167
ТЕЛЕКАРТА	JJ-1223AH	167
ТЕЛЕКАРТА	X8	273
ТЕЛЕКАРТА	X80	209
ТЕЛЕЦИФРА	TLD-200	268

Коды к TV устройствам различных марок

Марка	Код
AEG	544
AIWA	502, 503, 523, 528, 579, 634, 678, 710, 712, 716
AKAI	501, 503, 512, 516, 520, 522, 524, 525, 537, 538, 540, 545, 546, 547, 550, 571, 572, 582, 583, 584, 585, 598, 608, 613, 626, 652, 673, 691, 704, 722, 731, 769
AKIRA	511, 514, 516, 524, 525, 537, 538, 541, 545, 547, 556, 577, 586, 594, 597, 598, 601, 623, 626, 629, 631, 649, 666, 680, 689, 690, 693, 717, 739, 796, 797, 798
AMCOL	501, 525, 545, 747
ANITECH	501, 525, 726
ATLANTA	501, 751
AVEST	537, 538, 539, 766
BANG & OLUFSEN	728, 737
BBK	522, 551, 594, 597, 684, 701, 788, 792, 793
BEKO	525, 530, 535, 559, 723, 742
BIGSTON	501, 503
BLAUPUNKT	512
BORK	525, 547, 646, 766
BRAND	711
BROKSONIC	501
CAMERON	550, 567, 675, 697, 702, 792, 794
CASIO	529, 705, 706
CASKA	761
CHANGHONG	516, 642
CLATRONIC	501
CONTEC	501, 603, 604, 613
CORTLAND	644
CROWN	501, 503, 511, 524, 525, 530, 571
DAEWOO	501, 508, 518, 520, 525, 526, 536, 538, 539, 546, 565, 571, 576, 598, 613, 685, 687, 692
DARTLAND	501
DAYTRON	501
DIGITAL	547
DISTAR	562, 616
DNS	596, 702, 708
DUAL	746
ELEKTA	501, 503, 520, 525, 527, 615
ELEKTRONIKA	583
ELENBERG	538, 545, 550, 565, 567, 579, 581, 644, 655, 676, 683, 717, 785
EPLUTUS	537, 644, 677, 682, 697, 724
ERC	537, 631, 764
ERISSON	511, 514, 516, 525, 526, 537, 538, 541, 550, 556, 561, 568, 586, 596, 599, 623, 626, 629, 631, 711, 712, 714, 739, 747, 779, 786, 795
EVGO	538, 540, 630
FINLUX	501, 511, 583, 589, 608, 732, 758, 774
FUJITSU	544, 573
FUNAI	501, 502, 503, 504, 505, 525, 537, 538, 581, 603, 764
FUSION	596, 642, 705, 706
GBS	501, 520, 525, 571, 583
GENERAL	537, 556
GOLD STAR - LG	501, 512, 518, 525, 527, 559, 570, 583, 584, 589, 609, 613, 642, 706, 742, 750, 765
GRUNDIG	501, 512, 525, 606, 662, 718, 719, 733
HAIER	518, 526, 561, 574, 657, 667, 669, 707, 778
HAPPY	501
HCM	501, 525
HELIX	701, 702
HIL	503
HITACHI	501, 515, 518, 522, 525, 537, 544, 548, 554, 578, 584, 587, 588, 604, 613, 640, 729, 749, 775, 783
HORIZONT	525, 540, 545, 550, 559, 583, 672, 771
HPC	546
HYUNDAI	516, 522, 525, 526, 537, 540, 541, 546, 547, 550, 556, 580, 596, 597, 599, 626, 642, 650, 655, 705, 711, 714, 717, 760
INNO-HIT	501, 525, 571
IRBIS	596, 714
IVA (ИВА)	537, 561, 637
IZUMI	516, 537, 596, 663, 691, 695, 705, 711, 792
JINLIPI	537, 637, 766
JVC	513, 515, 593, 604, 727
KAMACROWN	571
KANSAI	501, 525
KENSTAR	516
KITT	613, 726
KNEISSEL	753
KONKA	560, 581, 616, 717
LOEWE	542, 709, 744
METZ	745
MITSUBISHI	501, 520, 522, 525, 604, 611, 722, 728, 744
MIYOTA	537, 644, 656
MTC	501, 583
MULTITECH	501
MYSTERY	516, 537, 597, 642, 650, 653, 701, 702, 773, 780, 789
NASH	537
NEC	501, 517, 520, 526, 552, 604, 625, 722
NESCO	501, 525
NOKIA	519, 584, 610, 614, 616, 740, 746, 767
NOVA	501, 616, 638
NOVEX	516, 546, 599
NTT	759
OMEGA	501, 571
ONIDA	513
ONIKS	516, 525, 537, 545, 546, 547
ONWA	524, 525
ORBITA	635
ORION	501, 503, 506, 507, 509, 516, 525, 528, 537, 591, 603, 617, 619, 627, 641, 643, 664, 715, 720, 722, 729, 746
ORSON	526, 537
PANASONIC	512, 531, 532, 752
PHILIPS	501, 511, 524, 525, 540, 549, 628, 639, 707, 748
PHOENIX	613
PHOENIX GOLD	708
PIONEER	555, 566, 575, 647, 666
PIXELVIEW	525
PLANTRON	735
POLAR	525, 526, 537, 538, 540, 543, 547, 581, 596, 599, 663, 664, 683, 703, 711, 717
POLAROID	525
POWER VISION	501

Коды к TV устройствам различных марок

Марка	Код
PREMIERA	773
PRESTIGIO	564, 656
PRIMA	522, 547
PROLOGY	653, 655, 777, 784
RADUGA	525, 545, 569, 583, 743
RAINFORD	525, 537, 544, 545
RECOR	511, 525
REKORD	520, 525, 526, 537, 538, 539, 545, 547, 725, 736, 743, 747
RFT	535, 728
ROADSTAR	501, 508, 525, 571
ROLSEN	503, 516, 525, 537, 538, 540, 543, 546, 564, 576, 592, 594, 596, 649, 656, 669, 684, 714, 768, 770
ROVERSCAN	662, 770
RUBIN	504, 516, 525, 537, 546, 583, 619, 665, 714, 776
SABA	510, 521, 602, 756
SALORA	584
SAMSUNG	501, 525, 526, 529, 563, 580, 595, 608, 612, 613, 622, 641, 645, 688, 723, 741
SANSUI	524, 525, 538, 556, 695
SANYO	501, 519, 522, 525, 530, 540, 550, 558, 604, 608, 610, 618, 621, 696, 722, 730, 734, 738
SATELLITE	616
SCARLETT	541, 545
SCHNEIDER	525, 540, 571, 771
SELECO	736, 763
SETRO	520
SHARP	526, 544, 548, 604, 707, 721
SHERION	616
SHIVAKI	501, 503, 508, 516, 518, 520, 525, 526, 527, 536, 538, 539, 540, 545, 546, 547, 550, 556, 580, 583, 585, 596, 599, 609, 619, 630, 632, 635, 636, 643, 644, 664, 681, 694, 743, 791
SIEMENS	512, 525, 660, 726, 734
SIESTA	501, 537, 637
SILELIS	613
SILVER	633
SITRONICS	503, 516, 525, 537, 538, 540, 543, 545, 594, 626, 629, 661, 671, 672, 674, 679, 680, 686, 766
SOKOL	516, 525, 547, 635
SONY	533, 604, 659, 722
SPEKTR	525, 538, 668
START	525, 537, 545, 546, 547
STASSFURT	535, 618
STINOL	525
SUPER	537, 561, 644, 653, 654, 655, 666, 677, 682, 724, 754, 772, 780
SUPRA	501, 508, 516, 518, 520, 525, 527, 529, 536, 537, 541, 563, 579, 580, 596, 597, 612, 643, 687, 690, 705, 706, 712, 713, 790
SUZUKI	516, 556
SVEN	781
TCL	538, 540
TECHNO	501, 525, 538, 544, 546, 556, 568, 579, 596, 599, 644, 664, 703, 791
TECKTON	522, 582, 601, 669, 670
TELEFUNKEN	510, 521, 590, 602, 605, 708, 756, 757
TELEVISION	501, 525, 616
THOMSON	509, 510, 521, 550, 579, 602, 624, 642, 702, 756
TOSHIBA	516, 553, 604, 651, 699, 744
TRONY	516, 525, 537, 538, 550
TVT	511, 525, 530, 535, 538, 583, 586, 620, 723, 742
UNITED	525
VARTA	642
VESTEL	525, 544, 556, 583, 619
VIEWSONIC	557, 698
VITA	547
VITEK	537, 650
VITYAS	525
VOLNA (ВОЛНА)	635
VR	516, 537, 702, 714, 786
WALTHAM	503, 509, 511, 583, 584, 607, 613, 729, 762
XORO	522, 526, 545, 782, 787
НЕИЗВЕСТНАЯ МАРКА	546, 574, 596, 648, 656, 666, 711, 755

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 101		Код 102		Код 103		Код 104		Код 105	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	▲				Pg Up; CTP ▲		▲			
AUDIO; NICAM	Audio		AUDIO		RADIO; АУДИО		SOUND TRACK		AUDIO	
VIDEO; SYS	Режим		VIDEO		UHF; МОДУЛЯТОР		GAMES; UHF		SIGNAL	
☐; ZOOM	Формат; Format						WIDE			
▼; TV	▼				Pg Dn; CTP ▼		▼			
☐; ↗			SAVE				ATTR			
☐; LOCK	☐; Audio									
▲; FAV	♥; Info								♥	
○	○		POWER		○		○		○	
AV	Режим; ☐				TV/SAT; ТВ/СП		TV/SAT; STB; SOUR.		SAT/TV	
⌘	⌘		MUTE		⌘		⌘		⌘	
MENU	Меню; Menu				MENU; МЕНЮ		MENЮ; MENU		MENЮ	
EXIT	Выход; Quit				EXIT; ВЫХОД		ВЫХОД; EXIT		ESC	
▲	▲				P +; ▲		▲		▲	
◀	◀				VOL -; ◀		◀		◀	
OK	OK				OK; ВВОД		ВВОД; OK		OK	
▶	▶				VOL +; ▶		▶		▶	
▼	▼				P -; ▼		▼		▼	
⌘; SETUP			DNR				STATUS		TV	
♪; TITLE	Радио; TV/Radio		ST/MO		⌘?		♫; TV/RADIO		RADIO	
☐	Список				☐		LIST			
GUIDE	Информ; Guide				TV GUIDE; ГИД		ГИД; EPG; GUIDE		☐	
☐							WHITE; ☐			
RED; ●	RED		DEV		☐		RED; ИФФ; i; PRO		RED; F1	
GREEN; ▣	GREEN		N/W				GREEN; ⌘?; ☐		GREEN; HELP	
YELLOW; ◀	YELLOW		C/Ku				YELLOW; ☐; OPT		YELLOW; INFO	
BLUE; ▣	BLUE		H/V				BL; ▣; UHF; FAV; Q		BLUE; F2	
☐	Информ; Guide		DECODER		i; ИФФ		?; HELP; INFO		INFO	
↺	Возврат; Ret		LAST		RECALL; ☐		☐; RCL; LAST			
VOL -	Громкость -; Vol -		VOL -		VOL -; ◀		Гр+; V-; VOL -		VOL ▼	
VOL +	Громкость +; Vol +		VOL +		VOL +; ▶		Гр+; V+; VOL +		VOL ▲	
CH V; ◀	▼		CH -		P -; ▼		K-; P-; CH -		CH ▼	
CH A; ▶	▲		CH +		P +; ▲		K+; P+; CH +		CH ▲	
⊕; SAT	⊕; Aux						CH LIST			
CLEAR; X										
⏪; ●										
▶; i							⏪; II/▶			
▶; ?									HELP	
▣; X							*; PAR. CONTROL			
⏸; ⏹	Стоп; Freeze						#			
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 106		Код 107		Код 108		Код 109		Код 110	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	P +		TUN ▲				P +		Pg +	
AUDIO; NICAM	LANG		ST/MO		⌘?		⌘?		AUDIO	
VIDEO; SYS			VIDEO		VIEW					
☐; ZOOM										
▼; TV	P -		TUN ▼				P -		Pg -	
☐; ↗			STORE				OK/STORE			
☐; LOCK										
▲; FAV	FAV		POWER		FAV		FAV		FAV	
○	POWER		POWER		○		○		POWER	
AV										
⌘	MUTE		MUTE		⌘		⌘		MUTE	
MENU	MENU				MENU		MENU		MENU	
EXIT	EXIT		ERASE		EXIT		EXIT		EXIT	
▲	▲				CH ▲		CH ▲		CH +; ▲	
◀	◀				VOL ◀		VOL ◀		VOL -; ◀	
OK	SLCT				OK/STORE		OK/STORE		OK	
▶	▶				VOL ▶		VOL ▶		VOL +; ▶	
▼	▼				CH ▼		CH ▼		CH -; ▼	
⌘; SETUP	FUNC		DECODER							
♪; TITLE	SOUND				TV/RAD		RED; TV/RAD		TV/RADIO	
☐							WHITE		TEXT	
GUIDE	EPG				EPG		EPG		EPG	
☐									TIMER	
RED; ●	DIGITAL TV		DEEMPH		RED		RED; TV/RAD		RED; i	
GREEN; ▣	DIGITAL RADIO		N/W		GREEN		GREEN; FAV		GREEN; TEXT	
YELLOW; ◀	ANALOG TV		C/KU		YELLOW		YELLOW; ⌘?		YELLOW; ALT	
BLUE; ▣	ANALOG RADIO		H/V		BLUE		BLUE		BLUE; AUDIO	
☐					i		i		i	
↺			DEV				RCL		LAST	
VOL -	◀				VOL ◀		VOL ◀		VOL -; ◀	
VOL +	▶				VOL ▶		VOL ▶		VOL +; ▶	
CH V; ◀	▼		CH ◀		CH ▼		CH ▼		CH -; ▼	
CH A; ▶	▲		CH ▶		CH ▲		CH ▲		CH +; ▲	
⊕; SAT	SAT				SAT					
CLEAR; X										
⏪; ●										
▶; i										
▶; ?										
▣; X										
⏸; ⏹	PAUSE									
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 111		Код 112		Код 113		Код 114		Код 115	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD			PG +		▲					
AUDIO ; NICAM	GREEN ; LANG		AUDIO						AUDIO	
VIDEO ; SYS										
☐ ; ZOOM	ZOOM									
▼ ; TV			PG -		▼				TV.MODE	
☐ ; ↗										
☐ ; LOCK										
▲ ; FAV	FAV		FAV						FAV	
⊖	STANDBY		⊖ ; POWER		⊖			FUNC ACCESS	⊖	
AV	TV/SAT									
⌘	MUTE		⌘ ; MUTE		⌘				⌘	
MENU	MENU ; OK		MENU ; ☐		MENU			MENU	MENU	
EXIT	ESC		→☐ ; EXIT		EXIT			EXIT	EXIT	
▲	▲		CH + ; ▲		▲			▲	CH ▲	
◀	◀		VOL - ; ◀		◀			◀	VOL ◀	
OK	MENU ; OK		OK ; ☐		OK			SELECT	OK	
▶	▶		VOL + ; ▶		▶			▶	VOL ▶	
▼	▼		CH - ; ▼		▼			▼	CH ▼	
⌘ ; SETUP					TV					
♪ ; TITLE	RADIO		TV/RADIO		♪				TV/RADIO	
☐			TEXT							
GUIDE	P.GUIDE		EPG		GUIDE			GUIDE	GUIDE	
⊖			TIMER							
☐										
RED ; ●	RED ; ADD ; EAST		RED ; i		RED ; i					
GREEN ; ▣	GREEN ; LANG		GREEN ; TEXT		GREEN ; EXIT					
YELLOW ; ◀	YELLOW ; DELETE		YELLOW ; ALT		YELLOW ; MENU					
BLUE ; ▣	BLUE ; WEST		BLUE ; AUDIO		BLUE ; GUIDE					
☐	i		i		i			INFO	INFO	
☐			LAST							
VOL -	VOL ▼		VOL -		↖			←	VOL ◀	
VOL +	VOL ▲		VOL +		↗			→	VOL ▶	
CH V ; ◀	CH ▼		CH ▼		▼			↓	CH ▼	
CH A ; ▶	CH ▲		CH ▲		▲			↑	CH ▲	
± ; SAT									SAT	
CLEAR ; X								CANCEL		
◀ ; ●										
▶ ; i										
▶ ; ?								HELP		
■ ; X										
■ ; ⬇	FREEZE ; HELP								PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0/TIMER		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 116		Код 117		Код 118		Код 119		Код 120	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	P +				P +				TV/RADIO	
AUDIO ; NICAM	LANG				⌘ ?		AUDIO		ALANG ; AUDIO	
VIDEO ; SYS							VIDEO		P.STD	
☐ ; ZOOM							LAME! ; ZOOM		P.SIZE	
▼ ; TV	P -		TV		P -		TV		TV/RADIO	
☐ ; ↗	TV				OK/STORE				A.L/R	
☐ ; LOCK										
▲ ; FAV	FAV ; AV		FAV		FAV					
⊖	⊖ ; POWER		⊖		⊖		⊖		⊖ ; STAND BY	
AV	FAV ; AV		TV/SAT						TV/STB	
⌘	⌘ ; MUTE		⌘		⌘		⌘		MUTE ; ⌘ ; ◀	
MENU	MENU		MENU		MENU		DREAM ; MENU		MENU	
EXIT	EXIT		EXIT		EXIT		HELP ; EXIT		EXIT	
▲	▲		▲		▲		▲		▲	
◀	◀		◀		VOL ◀		◀		◀ ; ◀	
OK	OK		OK		OK/STORE		OK		OK	
▶	▶		▶		VOL ▶		▶		▶ ; ▶	
▼	▼		▼		CH ▼		▼		▼	
⌘ ; SETUP	☐								OPT ; DISPLAY	
♪ ; TITLE	RADIO		RADIO		TV/RADIO		RADIO		MEDIA ; REC. LIST	
☐			☐		☐		TEXT		TEXT	
GUIDE	EPG		GUIDE		EPG				EPG ; GUIDE	
⊖	SUB				⊖				SLEEP	⊖
☐	FUNC				☐				SUB-T	SUB-T
RED ; ●	RED ; LANG		RED ; A		RED ; F1		RED		RED ; SUB-T ; ☐	●
GREEN ; ▣	GREEN ; SOUND		GREEN ; B		GREEN ; F2		GREEN		GREEN	
YELLOW ; ◀	YELLOW ; EPG		YELLOW ; C		YELLOW ; F3		YELLOW		YELLOW ; ☐	
BLUE ; ▣	BLUE ; PAUSE		BLUE ; D		BLUE ; F4		BLUE		BLUE ; INFO ; i	▶
☐			INFO				INFO		i	INFO ; i
☐					RCL				RECALL ; BACK	
VOL -	◀		↖		VOL ◀		VOLUME -		VOLUME - ; VOL -	
VOL +	▶		↗		VOL ▶		VOLUME +		VOLUME + ; VOL +	
CH V ; ◀	▼		PR -		CH ▼		◀		CHANNEL ▼ ; CH ▼	◀ ; ◀
CH A ; ▶	▲		PR +		CH ▲		▶		CHANNEL ▲ ; CH ▲	▶ ; ▶
± ; SAT	SAT				SAT				REPLAY	
CLEAR ; X									SKIP	
◀ ; ●							BOUQUET -		◀ ; ☐	
▶ ; i									▶	
▶ ; ?							BOUQUET +		▶ ; ☐	
■ ; X									■	
■ ; ⬇	PAUSE								■ ; PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 121		Код 122		Код 123		Код 124		Код 125	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	▲; +100; +10									
AUDIO; NICAM	AUDIO; AV		⊲?				LANG.		RED; AUDIO	
VIDEO; SYS	UHF								PAL/NTSC	
☐; ZOOM	F1; ZOOM									
▼; TV	▼; -100; -10									
⊲; ⊳	F3; ⊲; PIP		OK; STORE						UHF	
☐; LOCK	A-Z			UHF					AUDIO R/L; 🗣️	
▲; FAV	FAV; ♡		FAV		MOSAIC; ★; FAV.		FAV.		FAV	
⊙	⊙		⊙		⊙; POWER		⊙		⊙	
AV	TV/SAT(SET)						TV/RADIO		AUX IN; TV/AV	
⌘	⌘		⌘		⌘; MUTE		⌘		⌘	
MENU	MENU		MENU		MENU; 🎬; MOVIES		MENU		MENU	
EXIT	EXIT		EXIT		EXIT; 🗑️; AKADO				EXIT	
▲	CH ▲		CH ▲		▲		P+; ▲		▲	
◀	VOL ◀		VOL ◀		◀		◀		◀	
OK	OK		OK; STORE		OK; MENU		SELECT		OK	
▶	VOL ▶		VOL ▶		VOL ▶		▶		▶	
▼	CH ▼		CH ▼		▼		P-; ▼		▼	
⌘; SETUP	F4; 🔄		TV 📺		TV/RADIO		I-II		TV/RADIO; 🗣️/📺	
🎵; TITLE	🎵; 📺						LIST		TEXT; 🗣️	
☐	☐		GUIDE		EPG; 📺; TV GIUDE		GUIDE		GUIDE; EPG	
⊙	F2; SLEEP								TEXT; 🗣️	
☐	☐				?; HELP				RED; AUDIO	
RED; ●	RED; FTA/CA; GAME				RED	●; RECORD	RED; LIST		RED; AUDIO	
GREEN; ►	GREEN; SAT; 🗣️				GREEN		GREEN		GREEN; POSITION.	
YELLOW; ◀	YELL.; TV/SAT(SET)				YELLOW		YELLOW		YELLOW; TEXT; 🗣️	
BLUE; ►	BLUE; AUDIO; AV				BLUE		BLUE; FAV.		BLUE; AUD.R/L; 🗣️	
☐	INFO		INFO		+; INFO		INFO		INFO	
☐	BACK				⊙; BACK				RECALL; ☐	
VOL -	-; VOL ▼		VOL ◀		V -		◀		◀	
VOL +	+; VOL ▲		VOL ▶		V +		▶		▶	
CH V; ◀	CH ▼		CH ▼		CH -		P-; ▼		▼	
CH ▲; ▶	CH ▲		CH ▲		CH +		P+; ▲		▲	
⊲; SAT	SAT; 🗣️		SAT				--		SAT	
CLEAR; X										
◀; ●					◀; REW				◀	
▶; i					▶; PLAY				FREEZE; ▶	
▶; ?					▶; FWD		?		▶▶	
■; ✕					■; STOP					
; ⏸					; PAUSE				FREEZE; ▶	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 126		Код 127		Код 128		Код 129		Код 130	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	PAGE ▲				P +		▲; PG UP		PAGE ●; PAGE ▲; +	
AUDIO; NICAM	LANG		AUDIO		SOUND		▶; PG FWD		AUDIO; ◀	
VIDEO; SYS			PAL/NTSC				⊙; REFRESH			
☐; ZOOM	EXIT/ZOOM		ZOOM							
▼; TV	PAGE ▼				P -		◄; PG DOWN		PAGE ●; PAGE ▼; -	
⊲; ⊳	SOUND				TV		◄; PG BACK			
☐; LOCK										
▲; FAV	FAV		FAV		FAV; SGNL				FAV; ALT; ▶	
⊙	⊙; STANDBY		⊙; STANDBY		⊙		⊙		⊙	
AV	STB/TV		TV/SAT		SAT; TV/SAT				AV; 🗣️; TV	
⌘	⌘; MUTE		⌘		MUTE				⌘	
MENU	MENU		MENU		MENU		MENU		MENU	
EXIT	EXIT/ZOOM		◀; EXIT		EXIT				BACK; EXIT	
▲	▲		▲		▲		▲	▲; PG UP	CHANNEL ▲; ▲	
◀	◀		◀		◀		◀	◄; PG BACK	VOL -; ◀	
OK	OK		OK		OK		OK	▶; PG FWD	OK	←
▶	▶		▶		▶		▶	◄; PG DOWN	VOL +; ▶	
▼	▼		▼		▼		▼	▶; PG DOWN	CHANNEL ▼; ▼	
⌘; SETUP			OPTION		RADIO		🏠; HOME		TV/RAD	
🎵; TITLE	TV/RADIO		TV/R		RADIO				🗣️; EPG	
☐	TEXT		TEXT		EPG; TEXT		TEXT		TEXT	
GUIDE	GUIDE		EPG		FUNC; EPG				EPG	
⊙			SLEEP							
☐	SUBT		SUBT						SUB; ◀	
RED; ●	RED; LANG		RED; AUDIO		RED; LANG		RED	●; RECORD	RED	●
GREEN; ►	GREEN; SOUND		GREEN; SUBT		GREEN; SOUND		GREEN		GREEN	
YELLOW; ◀	YELLOW; PAUSE		YELLOW; TEXT		YELLOW; EPG; TEXT		YELLOW		YELLOW	
BLUE; ►	BLUE; RECALL		BLUE; SLEEP		BLUE; PAUSE		BLUE		BLUE	
☐	INFO; i		i; INFO		SUB; INFO		INFO		⊙	
☐	RECALL		✓; BACK		RCL		LAST CH			
VOL -	VOL -		VOL -		◀				VOL -; ◀	
VOL +	VOL +		VOL +		▶				VOL +; ▶	
CH V; ◀	CH ▼		CH/PG ▼		▼		CH -		CHANNEL ▼; ▼	
CH ▲; ▶	CH ▲		CH/PG ▲		▲		CH +		CHANNEL ▲; ▲	
⊲; SAT			SAT LIST		SAT; TV/SAT		--		SAT; 🗣️; BROWSE	
CLEAR; X										
◀; ●							◀; TV		◀	
▶; i							▶; TEXT			
▶; ?							▶; MIX		▶	
■; ✕							■; STOP			
; ⏸	PAUSE		PAUSE		PAUSE		; HOLD		PAUSE; ●; FREEZE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 131		Код 132		Код 133		Код 134		Код 135	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD					▲				PAGE ▲; PGUP	
AUDIO; NICAM	AUD				AUDIO		AUDIO		AUDIO	
VIDEO; SYS	LANG				SIG; SIGNAL		TEL		GROUP	
☐; ZOOM							ZOOM		EXIT; EXIT/ZOOM	
▼; TV					▼				PAGE ▼; PGDN	
☐; ↗							SCAN			
☐; LOCK							STILL			
▲; FAV	FAV				FAV		FAV			
○	POWER		○I		○		○		○; STANDBY	
AV	TV/STB								STB/TV; SAT/TV	
⌘	⌘				⌘		MUTE		⌘; MUTE	
MENU	MENU		MENU		MENU		MENU		MENU	
EXIT	EXIT				EXIT		EXIT		EXIT; EXIT/ZOOM	
▲	▲		▲		▲; CH ▲		▲		▲	
◀	◀		◀		◀; VOL ◀		◀		◀	
OK	OK		OK		OK		OK		OK; LIST	
▶	▶		▶		▶; VOL ▶		▶		▶	
▼	▼		▼		▼; CH ▼		▼		▼	
⌘; SETUP	FUNC						☐			
♪; TITLE	♪				TV/RADIO		T/R			
☐	TEXT				TTX; EPG		GAME		TEXT	
GUIDE	EPG				EPG		EPG		EPG	
○	○						TIMER			
☐	A-Z				SUB				SUBT	
RED; ●	RED				RED; SUB		RED		RED; UHF; AUDIO	
GREEN; ▨	GREEN				GREEN		GREEN		GREEN; AUDIO	
YELLOW; ◀	YELLOW				YELLOW		YELLOW		YELLOW; PAUSE	
BLUE; ▨	BLUE				BLUE		BLUE		BLUE; RECALL	
☐	i				INFO; i		INFO		INFO; i	
☐	RCL				LAST; ☐		RECALL		RECALL	
VOL -	VOL ◀		◀		◀; VOL ◀		◀		VOL ◀	
VOL +	VOL ▶		▶		▶; VOL ▶		▶		VOL ▶	
CH V; ◀	CH ◀		P -		▼; CH ▼		▶		CH ▼	
CH A; ▶	CH ▶		P +		▲; CH ▲		▲		CH ▲	
+-; SAT	-				S.L.; SAT		SAT		UHF; SAT	
CLEAR; X										
◀; ○										
▶; i										
▶; ?								HELP		
■; X										
; ⏸									PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 136		Код 137		Код 138		Код 139		Код 140	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	P +		M1						▶▶	
AUDIO; NICAM	☐?		☐?		☐		AUDIO		☐?	
VIDEO; SYS			M3; N/P		☐?/☐				P/N	
☐; ZOOM	☐	☐					ZOOM		☐	
▼; TV	P -		M2						◀◀	
☐; ↗	OK / STORE		UHF						UHF	
☐; LOCK										
▲; FAV	FAV		FAV		FAV		FAV		FAV	
○	○		○		○		○; POWER		○	
AV			♪				TV/SAT		TV/SAT	
⌘	⌘		⌘		⌘		MUTE		⌘	
MENU	MENU		MENU		MENU		MENU		MENU	
EXIT	EXIT		EXIT		EXIT		EXIT		EXIT	
▲	CH ▲		▲		▲; +		▲		▲	
◀	VOL ◀		◀		◀; -		◀		◀	
OK	OK / STORE		OK/LIST		OK/LIST		OK		OK	
▶	VOL ▶		▶		▶; +		▶		▶	
▼	CH ▼		▼		▼; -		▼		▼	
⌘; SETUP	☐									
♪; TITLE	☐/♪		☐/♪		☐/♪		TV/R		☐/♪	
☐	☐		☐		☐		TXT		☐	
GUIDE	EPG		EPG; GUIDE		GUIDE		EPG		EPG	
○	○		○				SLEEP		○	
☐	☐		☐				SUB.T		☐; WHITE	
RED; ●	RED; ☐/♪		RED; F1		RED; ☐?/☐		RED; TXT		RED; ☐?	
GREEN; ▨	GREEN; FAV		GREEN; F2		GREEN; FAV		GREEN; SUB.T		GREEN; ☐	
YELLOW; ◀	YELLOW		YELLOW; F3		BLUE; INFO		YELLOW; ZOOM		YELLOW; ☐	
BLUE; ▨	BLUE; +/-		BLUE; F4		YELLOW; UHF		BLUE; MP		BLUE; ☐	
☐	i		i		INFO		INFO		i	
☐	☐		☐		RECALL		RECALL		☐	
VOL -	VOL ◀		V -		◀; -		◀		◀	
VOL +	VOL ▶		V +		▶; +		▶		▶	
CH V; ◀	CH ▼		P -		▼; -		▼		▼	◀◀
CH A; ▶	CH ▲		P +		▲; +		▲		▲	▶▶
+-; SAT	All CH		SAT				SAT		SAT	
CLEAR; X										
◀; ○									F1	
▶; i									F2	
▶; ?	?								HELP	
■; X										
; ⏸							PAUSE			
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0/Q	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 141		Код 142		Код 143		Код 144		Код 145	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	PG UP		PGUP		▲ ; PAGE +		PGUP		PGUP	
AUDIO ; NICAM	MOTOR		AUDIO				AUDIO		AUDIO	
VIDEO ; SYS	COLOR		QUALITY				VOD		VOD	
☐ ; ZOOM	UHF		OK ; ☐		ZOOM					
▼ ; TV	PG DN		PGDN ; PG		▼ ; PAGE -		PGDW		PGDW	
☐ ; ↗	FINE TUNE	SAVE	MAIL							
☐ ; LOCK	PAUSE									
▲ ; FAV	FAV		FAV		FAV		FAV		FAV	
○	○		STANDBY ; POWER		○		○		○	
AV	TV/SAT		F2 ; TV/SAT ; TV							
⌘	⌘ ; MUTE		MUTE		⌘		⌘		⌘	
MENU	MENU		MENU		MENU		MENU		MENU	
EXIT	EXIT		EXIT		EXIT		EXIT		EXIT	
▲	CH ▲		▲		▲ ; CH +		▲		▲	
◀	VOL ◀ ; PG UP		◀		◀ ; VOL -		◀		◀	
OK	OK		OK ; ☐		OK		OK		OK	
▶	VOL ▶ ; PG DN		▶		▶ ; VOL +		▶		▶	
▼	CH ▼		▼		▼ ; CH -		▼		▼	
⌘ ; SETUP	HD				☐ ; MULTI-SCR					
♪ ; TITLE	TV/RADIO		F1 ; TV/RADIO		TV/RADIO		TV/RADIO		TV/RADIO	
☐	OPT +		TXT		TELETEXT		TTX		TTX	
GUIDE	EPG		EPG		EPG		EPG		EPG	
⏸	SLEEP						EVENT		EVENT	
☐	AD +		F3 ; PGUP		LIST		SUBTITLE		SUBTITLE	
RED ; ●	RED	●	RED ; TXT		RED		RED		RED	
GREEN ; ►	GREEN ; ☐		GREEN ; LIST ; PGDN		GREEN		GREEN		GREEN	
YELLOW ; ◀	YELLOW ; ☐		YELLOW ; EPG		YELLOW		YELLOW		YELLOW	
BLUE ; ►	BLUE		BLUE ; INFO		BLUE		BLUE		BLUE	
☐	INFO		INFO		INFO		INFO		INFO	
☐	RECALL		RECALL		BACK		RETURN		RETURN	
VOL -	VOL ◀ ; PG UP		◀		◀ ; VOL -		VOL -		VOL -	
VOL +	VOL ▶ ; PG DN		▶		▶ ; VOL +		VOL +		VOL +	
CH V ; ◀	CH ▼		▼		▼ ; CH -		CH -		CH -	
CH A ; ►	CH ▲		▲		▲ ; CH +		CH +		CH +	
± ; SAT	SAT		TV/RADIO ; SAT		TRACK					
CLEAR ; X	X +									
◀ ; ●	◀									
▶ ; i	▶				▶ ;					
▶ ; ?	▶									
■ ; X	■									
; ⏸			PAUSE		▶ ;					
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 146		Код 147		Код 148		Код 149		Код 150	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	PG +		▲ ; PAGE +				PGUP		▶▶	
AUDIO ; NICAM	AUDIO		AUDIO		☐		AUDIO		AUDIO	
VIDEO ; SYS					☐					
☐ ; ZOOM	ZOOM		ZOOM		☐		ZOOM		Q	
▼ ; TV	PG -		▼ ; PAGE -				PGDN		◀◀	
☐ ; ↗					☐		E-MAIL ; GROUP		☐	
☐ ; LOCK			PAUSE		☐				☐	
▲ ; FAV	FAV		FAV		↑		FAV		FAV	
○	○		○		○		STANDBY		POWER	
AV			TV/AV		QUELLE				STB/TV	
⌘	⌘		⌘		⌘		MUTE		⌘	
MENU	MENU		MENU		MENU		MENU		MENU	
EXIT	EXIT		EXIT		ZURUCK		EXIT		EXIT	
▲	▲		▲ ; PR +		▲		▲		▲	
◀	◀		◀ ; ↗		◀		◀		◀	
OK	OK		OK ; LIST		OK		OK		OK	
▶	▶		▶ ; ↗		▶		▶		▶	
▼	▼		▼ ; PR -		▼		▼		▼	
⌘ ; SETUP	MULTI-SCR		FUNC		☐		QUALITY			
♪ ; TITLE	TV/RADIO		TV/RADIO		TV/RADIO		TV/RADIO		☐ / ♪	
☐	TELETEXT		LIST ; FUN		☐		TXT		☐	
GUIDE	EPG		EPG		GUIDE		EPG		EPG	
☐			UHF ; SLEEP		☐					
☐	LIST		☐ ; TXT		☐				☐	
RED ; ●	RED ; EMAIL		RED ; AUDIO ; FIND	RECORD	RED ; PRO	●	RED ; TXT		RED	
GREEN ; ►	GREEN		GREEN ; V-FORMAT		GREEN ; ☐		GREEN ; MOSAIC		GREEN	
YELLOW ; ◀	YELLOW		YELLOW ; ☐	◀ SLOW	YELLOW ; OPT +		YELLOW ; EPG		YELLOW	
BLUE ; ►	BLUE		BLUE ; ⌘	▶ SLOW	BLUE	▶	BLUE ; INFO		BLUE	
☐	INFO		INFO		i		INFO		i	
☐	BACK		↔ PR		☐		RECALL		RECALL	
VOL -	VOL -		↘		V -		◀		◀	
VOL +	VOL +		↗		V +		▶		▶	
CH V ; ◀	CH -		PR -		P - ; SEITE -		▼		▼	◀◀
CH A ; ►	CH +		PR +		P + ; SEITE +		▲		▲	▶▶
± ; SAT			SAT		LISTE				F1	
CLEAR ; X			MF		LETZTER					
◀ ; ●			◀◀ FAST		◀◀				F2	
▶ ; i	▶ ;		PLAY ; ▶		▶				F3	
▶ ; ?			▶▶ FAST		▶▶				F4	
■ ; X			STOP ; ■		■ ; LIVE					
; ⏸	▶ ;		SHIFT		; TIME SHIFT		PAUSE			
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0/Q	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 151		Код 152		Код 153		Код 154		Код 155	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	P +		PAGE +; PAGE ▲		PG UP		PG +			
AUDIO; NICAM			AUDIO		AUDIO		AUDIO		AUDIO	
VIDEO; SYS			9 PIC		UHF					
☐; ZOOM			ZOOM							
▼; TV	P -		PAGE -; PAGE ▼		PG DN		PG -			
☐; ↗										
☐; LOCK										
▲; FAV			FAV		FAV		FAV		FAV	
○	○		○		○		○; POWER		○	
AV			TV/SAT; TEXT; F4						MAIL	
⌘			MUTE		⌘		⌘; MUTE		⌘	
MENU	MENU		MENU		MENU		MENU; ☐		MENU	
EXIT	EXIT		EXIT		EXIT		→☐; EXIT		EXIT	
▲	▲		▲; CH ▲		CH ▲		▲		▲; CH +	
◀	◀		<◀; VOL ◀		VOL ◀		◀		◀; VOL -	
OK	ENTER		OK; LIST		OK		OK; ☐		OK	
▶	▶		▶; VOL ▶		VOL ▶		▶		▶; VOL +	
▼	▼		▼; CH ▼		CH ▼		▼		▼; CH -	
⌘; SETUP			TV/RAD		TV					
♪; TITLE			TEXT		RADIO		TV/RADIO		☐/♪	
☐			EPG		EPG		TEXT			
GUIDE	EPG						EPG		EPG	
⏻							TIMER		REMINDER	
☐	E									
RED; ●	A		RED; AUDIO; F2		F1		RED; i		RED; P+	
GREEN; ▬	B		GREEN; LANG; F1		F2		GREEN; TEXT		GREEN; P-	
YELLOW; ◀	C		YELLOW; PAUSE; F3				YELLOW; ALT		YELLOW; VOL+	
BLUE; ▬	D		BLUE; 9 PIC; F5				BLUE; AUDIO		BLUE; VOL-	
☐			i		INFO		i		INFO	
↶	RETURN		RECALL		PREV		LAST		↶	
VOL -	←		<◀; VOL ◀		VOL ◀		VOL -		◀; VOL -	
VOL +	→		▶; VOL ▶		VOL ▶		VOL +		▶; VOL +	
CH V; ◀	↓		▼; CH ▼		CH ▼		CH ▼		▼; CH -	
CH ▲; ▶	↑		▲; CH ▲		CH ▲		CH ▲		▲; CH +	
±; SAT			SAT							
CLEAR; X										
◀; ●										
▶; i									▶	
▶; ?										
■; X										
; ⏻			PAUSE		PAUSE				▶	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 156		Код 157		Код 158		Код 159		Код 160	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			P+				▶▶		PAGE ▲	
AUDIO; NICAM					LANGUAGE		AUDIO			
VIDEO; SYS					TV FORMAT		QUALITY		V-FORMAT	
☐; ZOOM							WIDE		WIDE	
▼; TV			P-				◀◀		PAGE ▼	
☐; ↗										
☐; LOCK										
▲; FAV							FAV			
○	○		○		○; POWER		○		○	
AV							TV/SAT		SOURCE	
⌘	MUTE				⌘; MUTE		⌘		⌘	
MENU	MENU		MENU		MENU; ☐		MENU		MENU	
EXIT	TV/EXIT				→☐; EXIT		EXIT		EXIT	
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀		◀		◀	
OK	SELECT; ◀		OK		OK		OK		OK	
▶	▶		▶		▶		▶		▶	
▼	▼		▼		▼		▼		▼	
⌘; SETUP	TV CH						TV/RA		OPT+	
♪; TITLE	AUDIO CH				☐; TV/RADIO				TV/RADIO	
☐					☐; TEXT		TXT		TEXT	
GUIDE	PROGRAMS		GUIDE		GUIDE		EPG		EPG	
⏻					TIMER					
☐	SAP				SUBTITLE				LIST	
RED; ●			RED	●	RED		RED; TV/SAT		RED	
GREEN; ▬			GREEN		GREEN				GREEN	
YELLOW; ◀			YELLOW		YELLOW		YELLOW; EPG		YELLOW	
BLUE; ▬			BLUE		BLUE		BLUE; SAT		BLUE	
☐	INFO		☐		☐; INFO		INFO		i	
↶							RECALL		BACK	
VOL -	VOLUME -		◀		VOL -		◀		V -	
VOL +	VOLUME +		▶		VOL +		▶		V +	
CH V; ◀	CHANNEL -		▼		P -; CH -		▼	◀◀	P -	
CH ▲; ▶	CHANNEL +		▲		P +; CH +		▲	▶▶	P +	
±; SAT							SAT			
CLEAR; X										
◀; ●			◀◀							
▶; i			▶▶							
▶; ?			▶▶							
■; X			■							
; ⏻					; PAUSE		PAUSE			
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 161		Код 162		Код 163		Код 164		Код 165	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			PGUP		E				▲	
AUDIO; NICAM	AUDIO		AUDIO				SOUND		AUDIO	
VIDEO; SYS			AUX IN						NTSC/PAL	
▣; ZOOM										
▼; TV			PGDN		W				▼	
□; ↗	SEARCH				STORE					
▣; LOCK					P.STORE					
▲; FAV			TV/RADIO/FAV		FAV		FAV		FAV	
○	○		○		○		○		○	
AV			TV/SAT				TV/SAT			
✳	✳		✳		MUTE		✳		✳	
MENU	MENU		MENU		PRO		MENU		MENU	
EXIT	EXIT		EXIT		CANCEL; SOUND		EXIT		EXIT	
▲	▲		▲		SAT ▲		CH ▲		▲	
◀	◀		◀		MENU -		VOL ◀		◀	
OK	OK		OK		ENT		OK		OK	
▶	▶		▶		MENU +		VOL ▶		▶	
▼	▼		▼		SAT ▼		CH ▼		▼	
✳; SETUP					SET		TV			
♪; TITLE	TV/R		TV/RADIO/FAV		CANCEL; SOUND		RADIO		♪	
▣			TEXT				TEXT		TEXT	
GUIDE			GUIDE				EPG		GUIDE	
⏻			SLEEP							
⏻										
RED; ●			RED; AUDIO				RED; LANG		RED; F1	
GREEN; ▣			GREEN; RECALL				GREEN; SOUND		GREEN; F2	
YELLOW; ◀			YELLOW; PAUSE		TUNE -		YELLOW; TEXT		YELLOW; F3	
BLUE; ▣			BLUE; SLEEP		TUNE +		BLUE; PAUSE		BLUE; F4	
▣	INFO		INFO		BACK		INFO		i	
↺	↺		RECALL		VOL ▼		RECALL		LAST	
VOL -	◀		◀		VOL ▲		VOL -		VOL ◀	
VOL +	▶		▶		CH ▼		VOL +		VOL ▶	
CH V; ◀	▼		▼		CH ▲		P -		CH ▼	
CH ▲; ▶	▲		▲				P +		CH ▲	
±; SAT			SAT				SAT		SAT	
CLEAR; X										
◀; ●										
▶; i	▣/▶									
▶; ?										
▣; X										
▣; ●	▣/▶		PAUSE				PAUSE		PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 166		Код 167		Код 168		Код 169		Код 170	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			TV/STB		⓪		P ▲; ⓪		PG +	
AUDIO; NICAM			AUDIO		◀		◀?		AUDIO	
VIDEO; SYS	COLOR		VIDEO; SLEEP		HELP		UHF		SIGNAL	
▣; ZOOM			FORMAT	ZOOM	▣				ZOOM	
▼; TV			TV/STB; SAT; USB		TV CHAT		P ▼; ●		PG -	
□; ↗			USB		✉					
▣; LOCK			PAUSE		▣					
▲; FAV	FUN KEY		FAV		FAV		FAV	▲	FAV	
○	○		○; POWER		○		○		POWER	
AV	TV/SAT				SOURCE		TV/SAT		TV/SAT	
✳	✳		✳; MUTE		✳		✳		MUTE	
MENU	MENU		MENU		MENU		MENU		MENU	
EXIT	EXIT		◀; EXIT		EXIT		EXIT		EXIT	
▲	▲		▲; CH+		▲		CH ▲		▲; CH+	
◀	◀		◀; VOL-		◀		VOL ◀		◀; VOL-	
OK	OK		OK		OK		OK		OK	
▶	▶		▶; VOL+		▶		VOL ▶		▶; VOL+	
▼	▼		▼; CH-		▼		CH ▼		▼; CH-	
✳; SETUP	MODE		GAME; TV/STB		▣; REC LIST		▣		OPTION	
♪; TITLE	TV/RADIO		TV/RADIO		TV/RADIO		♪/♯		TV/R	
▣			TTX		GAME		▣		TEXT	
GUIDE	EPG		EPG		GUIDE		EPG		EPG	
⏻	SLEEP		SLEEP	TSHIFT	⏻	SAVE T/SHIFT	SLEEP	⏻	SLEEP	
⏻	⏻		SUB		⏻	SPLIT FILE	⏻		SUB	
RED; ●	RED		RED; TTX	●; REC	RED; INFO	●; REC	RED; ▣	●	RED; AUDIO	
GREEN; ▣	GREEN		GREEN; SUB		GREEN; ◀	F1	GREEN; ▣		GREEN; SUB	
YELLOW; ◀	YELLOW		YELLOW; ZOOM		YELLOW; ◀	F2	YELLOW; ◀?	◀	YELLOW; TEXT	
BLUE; ▣	BLUE		BLUE; MP		BLUE; FAV	SLOW	BLUE; ▣	▶	BLUE; SLEEP	
▣	i		INF; INFO		STATUS	INFO	INFO		INFO	
↺	RCL		RECALL		LAST		○		BACK	
VOL -	◀		VOL -		VOL ▼		VOL ◀		VOL -	
VOL +	▶		VOL +		VOL ▲		VOL ▶		VOL +	
CH V; ◀	▼		PAGE -; PAG -	◀; PREV	CH ▼		CH ▼		▼; CH-	
CH ▲; ▶	▲		PAGE +; PAG +	▶; NEXT	CH ▲		CH ▲		▲; CH+	
±; SAT	UHF		TV/STB; SAT; USB		*		SAT		SAT	
CLEAR; X					#					
◀; ●			◀; FB		◀		◀			
▶; i			▣/▶; PLAY/PAUSE		▶		▶; TIME ⏻			
▶; ?	HELP		▶; FF		▶		▶			
▣; X			▣; STOP		▣		▣			
▣; ●			▣/▶; PLAY/PAUSE		▣		▣		PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 171		Код 172		Код 173		Код 174		Код 175	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD							PAGE ▲		⏪; ВВЕРХ	
AUDIO; NICAM					AUDIO		L/R		⏩	
VIDEO; SYS					P/N		PURPLE		↻; ИГРЫ	
☐; ZOOM					BLUE; ☐	ZOOM	ORANGE		🔍; ПОИСК	
▼; TV							PAGE ▼		⏩; ВНИЗ	
☐; ↗									🔍; СИМВ	
☐; LOCK										
▲; FAV					FAV				▼; ЛЮБИМ	
○	POWER; ○		○		○; POWER		○		○; ВКЛ	
AV	INPUT; ☐								ВЫБР	
⌘	MUTE				MUTE		MUTE		⌘	
MENU	MENU		MENU		MENU		MENU		УСТ	
EXIT					EXIT		—		←; УДАЛ	
▲	▲		PR ▲		▲		▲		▲	
◀	◀				◀		◀		◀	
OK	OK; ○				OK		OK		OK	
▶	▶				▶		▶		▶	
▼	▼		PR ▼		▼		▼		▼	
⌘; SETUP					GAME		HOME		ТВ	
🎵; TITLE					TV/RAD		BACK		ПВМ	
☐							KEYB		КИНО	
GUIDE					EPG		HELP		☐; ГИД	
☐									VOD	
☐					DISPLAY				ТИТР	
RED; ●			RED		RED; DISPLAY		RED	●; REC	RED; F2	
GREEN; ►			GREEN		GREEN; PAUSE		GREEN		GREEN; F1	
YELLOW; ◀			YELLOW		YELLOW; ZOOM		YELLOW		YELLOW; F3	
BLUE; ►			BLUE		BLUE; ☐		BLUE		BLUE; F4	
☐					INFO				ИНФО	
☐					RECALL		⏪; CH RTN		☐; ВЫХОД	
VOL -	↔-				VOL -		VOLUME -		↔-	
VOL +	↔+				VOL +		VOLUME +		↔+	
CH V; ⏪	P ▼		PR ▼		CH -		CHANNEL -	⏪	⏪; ВВЕРХ	
CH A; ⏩	P ▲		PR ▲		CH +		CHANNEL +	⏩	⏩; ВНИЗ	
±; SAT					SAT		*		-/-	
CLEAR; X							#			
⏪; ○							⏪		⏪; НАЗАД	
▶; i							▶		▶; ИГР/ПАУЗА	
▶; ?							▶▶		▶▶; ВПЕРЕД	
■; X							■		■; СТОП	
■; ⏩							■		▶; ИГР/ПАУЗА	
■; ⏩					PAUSE		■		■	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 176		Код 177		Код 178		Код 179		Код 180	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD							AUDIO		AUDIO (?)	
AUDIO; NICAM			▶				P/N		P/N (?)	
VIDEO; SYS			V.FORMAT		FILTER		ZOOM			
☐; ZOOM					F1; ZOOM					
▼; TV			⏪							
☐; ↗			A/R		☐					
☐; LOCK			WHITE; ⏪; ☐		F4					
▲; FAV			FAV		F3; ♡		FAV		FAV (?)	
○	○		○		○		POWER		○	
AV	☐		AUX		TV/SAT		TV/SAT		TV/SAT (?)	
⌘	⌘		⌘		⌘		MUTE		MUTE (?)	
MENU	MENU		MENU		MENU		MENU		MENU (?)	
EXIT			EXIT		EXIT		EXIT		EXIT (?)	
▲	P ▲		P +		CH ▲		▲		▲	
◀	↔-		V -		VOL ◀		◀		◀	
OK			OK; LIST		OK		OK		OK	
▶	↔+		V +		VOL ▶		▶		▶	
▼	P ▼		P -		CH ▼		▼		▼	
⌘; SETUP			☐		☐/♯		POS		POS (?)	
🎵; TITLE			☐/☐		☐/♯		TV/RADIO		TV/RADIO (?)	
☐			☐		☐		TTX			
GUIDE			GUIDE		EPG		EPG		EPG (?)	
☐			☐				T/S			
☐			☐		☐		SUB.T			
RED; ●			RED; ☐	●	RED; SCAN		RED; TTX	REC	RED	
GREEN; ►	■/■		GREEN; ☐		GREEN; EDIT CH		GREEN; SUB.T		GREEN	
YELLOW; ◀	⏪		YELLOW; ☐		YELLOW; TV/SAT		YELLOW; ZOOM		YELLOW	
BLUE; ►	⏩		GREEN; ✓	▶	BLUE; AV		BLUE; MP		BLUE	
☐			i		INFO		INFO		INFO (?)	
☐			○		BACK		RECALL		RECALL (?)	
VOL -	↔-		V -		VOL ◀		VOL ◀		◀	
VOL +	↔+		V +		VOL ▶		VOL ▶		▶	
CH V; ⏪	P ▼	⏪	P -		CH ▼		CH & PAGE ◀		▼	
CH A; ⏩	P ▲	⏩	P +		CH ▲		CH & PAGE ▶		▲	
±; SAT			SAT; ☐		F2; SAT		SAT		SAT (?)	
CLEAR; X										
⏪; ○			⏪							
▶; i			▶							
▶; ?			▶▶							
■; X			■							
■; ⏩			■							
■; ⏩			■							
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		PAUSE		PAUSE (?)	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 181		Код 182		Код 183		Код 184		Код 185	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	P+		MUSIC						FAV ▲	
AUDIO ; NICAM	⏮		⏮					ALT AUDIO	AUDIO	
VIDEO ; SYS								VIDEOS	UHF	
☐ ; ZOOM	↕	Ⓜ	☐ ; ZOOM		ENTER ; ZOOM					
▼ ; TV	P-		PHOTO					REC TV	WHITE ; FAV ▼	
☐ ; ↕	☐		☐							
☐ ; LOCK			☐							
▲ ; FAV	FAV		FAV						FAV	
○	○		○		○ ; POWER		○		○	
AV			● ; ☐		TV/VIDEO		TV/VIDEO		SAT/TV	
✳	✳		✳		MUTE		MUTE		MUTE	
MENU	MENU		MENU		MENU		MENU		MENU	
EXIT	EXIT		EXIT		← ; BACK		EXIT		EXIT	
▲	▲		▲		▲		▲		PR ▲	
◀	◀		◀		◀		◀		VOL ▼	
OK	OK		OK		OK		OK		OK	
▶	▶		▶		▶		▶		VOL ▲	
▼	▼		▼		▼		▼		PR ▼	
✳ ; SETUP			☐		TV ; EXIT TO		OPTIONS			
♪ ; TITLE	☐ / ♪		TV/RAD		↺ ; REPLAY		↺		TV/RADIO	
☐			☐		RECORDED TV		TEXT		TEXT	
GUIDE	EPG		EPG		GUIDE		GUIDE		EPG	
☐	☐		☐		ON DEMAND		ENTER			
☐	WHITE ; ☐		☐		↵ ; FWD		↵			
RED ; ●	RED ; ⏮		RED	●	C ; RED	● ; RECORD	RED	●	RED ; TEXT	
GREEN ; ▶	GREEN ; ☐		GREEN	▶	B ; GREEN		GREEN		GREEN ; SAT/TV	
YELLOW ; ◀	YELLOW ; ☐		YELLOW		A ; YELLOW		YELLOW		YELLOW ; FAV ▲	
BLUE ; ▶	BLUE ; ☐		BLUE		↵ ; GO INTER. ; BLUE		BLUE		BLUE ; PAUSE	
☐	INFO		i		INFO		i		INFO	
☐	☐		☐	RCL	LAST		LAST		RECALL	
VOL -	◀		◀		VOL -		VOL -		VOL ▼	
VOL +	▶		▶		VOL +		VOL +		VOL ▲	
CH V ; ◀	▼		P/PG ▼		CH -		CH -		PR ▼	
CH A ; ▶	▲		P/PG ▲		CH +		CH +		PR ▲	
± ; SAT	UHF		SUB CH						SAT	
CLEAR ; X			WWW		DELETE		DELETE			
◀ ; ○			◀		◀ ; REW		◀			
▶ ; i			▶ ; ⏮		▶ ; PLAY		▶			
▶ ; ?			▶		▶ ; FF		▶			
■ ; X			■		■ ; STOP		■			
; ⏮					; PAUSE				PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0/Ⓜ		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 186		Код 187		Код 188		Код 189		Код 190	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD			▶▶		▶▶					
AUDIO ; NICAM	AUDIO		AUDIO		№ ID;Триколор ТВ		AUD		AUD	
VIDEO ; SYS			MEDIA		ФРАГМ.		UHF ; F		MULTI	
☐ ; ZOOM	ASPECT				16:9 ; ☐				ZOOM	
▼ ; TV			◀◀		◀◀					
☐ ; ↕					СОХР.					
☐ ; LOCK					СТОП КАДР					
▲ ; FAV	FAV		FAV		WWW		FAV		FAV	
○	○		○ ; STANDBY		○		○		POWER	
AV	MAIL		USB		ВХ.СИГН.					
✳	✳		✳ ; MUTE		☐		☐		✳	
MENU	MENU		MENU		МЕНЮ		MENU		MENU	
EXIT	EXIT		EXIT		ВЫХОД		EXIT		EXIT	
▲	▲		▲ ; CH +		▲ ; КАНАЛ ▲		CH +		▲	
◀	◀		◀ ; VOL -		◀ ; ГРОМК. ◀		◀		◀	
OK	OK		OK		OK		OK/LIST		OK	
▶	▶		▶ ; VOL +		▶ ; ГРОМК. ▶		▶		▶	
▼	▼		▼ ; CH -		▼ ; КАНАЛ ▼		CH -		▼	
✳ ; SETUP	☐ / ♪		MODE		СПИСОК ВОСПР.					
♪ ; TITLE	LANG		TV/RADIO		ТВ/РАДИО ; РАДИО		TV/RADIO		TV/R	
☐			TTX		ПОМОЩЬ	A			TEXT	
GUIDE	EPG		EPG		ТЕЛЕГИД	B	EPG		EPG	
☐	REMIN		TIMER		ВРЕМЯ ; ☐	C			TIME	
☐			SUBTITLE		ЗАК.ФИЛЬМ ; КИНО	D				
RED ; ●	RED		RED	RECORD	RED ; F1 ; i	REC ; ●	AUD ; RED ; B		RED	
GREEN ; ▶	GREEN		GREEN		GREEN ; F2 ; ⏮		POS ; GREEN ; C		GREEN	
YELLOW ; ◀	YELLOW		YELLOW		YELLOW ; F3 ; ☐		☐ ; YELLOW ; D		YELLOW	
BLUE ; ▶	BLUE		BLUE		BLUE ; F4 ; FAV	МЕДЛ.	☐ ; BLUE ; E		BLUE	
☐	INFO		INFO		ИНФО		INFO		INF	
☐	☐		BACK		☐		☐ ; A		RCL	
VOL -	VOL -		◀ ; VOL -		ГРОМК - ; ◀		◀		VOL ◀	
VOL +	VOL +		▶ ; VOL +		ГРОМК + ; ▶		▶		VOL ▶	
CH V ; ◀	PAGE -		▼ ; CH -	◀◀	КАНАЛ -	◀◀	CH -		CH&PAGE ◀	
CH A ; ▶	PAGE +		▲ ; CH +	▶▶	КАНАЛ +	▶▶	CH +		CH&PAGE ▶	
± ; SAT					ТВ ЧАТ;Больше ТВ		SAT		SAT	
CLEAR ; X					☐					
◀ ; ○			◀		◀		◀			
▶ ; i			▶		▶		▶			
▶ ; ?			▶		▶		▶			
■ ; X			■ ; STOP		■					
; ⏮					ПАУЗА				PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 191		Код 192		Код 193		Код 194		Код 195	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	▲		PAGEUP		PAGE ▲				▲	
AUDIO; NICAM	AUDIO		AUDIO		LANG		AUDIO		AUDIO	
VIDEO; SYS	MLP						NVOD		ANA/DIGI	
☐; ZOOM	ZOOM		WIDE						SIZE	
▼; TV	▼		PAGEDOWN		PAGE ▼				▼	
☐; ↗									F.BK	
☐; LOCK									LANG	
▲; FAV	FAV		FAV		FAV		FAV		FAV	
○	○		○		○		○		○	
AV					TV/SAT		MAIL		TV/SAT	
⌘	⌘		MUTE		MUTE		⌘		MUTE	
MENU	MENU		MENU		MENU		MENU		MENU	
EXIT	EXIT		EXIT		ESC		EXIT		EXIT	
▲	▲		▲		CH ▲		▲; P+		CH ▲	
◀	◀		◀		VOL ◀		◀; V-		VOL ◀	
OK	OK		OK		OK		OK		OK	
▶	▶		▶		VOL ▶		▶; V+		VOL ▶	
▼	▼		▼		CH ▼		▼; P-		CH ▼	
⌘; SETUP			OPTION		VIEW				TV	
♪; TITLE	RADIO		TV/RADIO		TV/RADIO		TV/RADIO		RADIO	
☐			TEXT		TEXT				TEXT	
GUIDE	EPG		GUIDE		GUIDE		EPG		GUIDE	
☐			SUBTITLE		SUB.T				OSD	
RED; ●	RED; FAV		RED		RED; GUIDE		RED			
GREEN; ▨	GREEN; RCL		GREEN		GREEN; TEXT					
YELLOW; ◀	YELLOW; EPG		YELLOW		YELLOW; SUB.T		YELLOW			
BLUE; ▨	BLUE; MLA		BLUE		BLUE; A.MODE		BLUE			
☐	INFO		INFO		INFO				INFO	
☐	RCL		BACK		RECAL		☐			
VOL -	◀		VOLUME -		VOL ◀		◀; V-		VOL ◀	
VOL +	▶		VOLUME +		VOL ▶		▶; V+		VOL ▶	
CH V; ◀	▼		CH -		CH ▼		▼; P-		CH ▼	
CH A; ▶	▲		CH +		CH ▲		▲; P+		CH ▲	
⊖; SAT	SAT				SAT					
CLEAR; X									CLEAR	
◀; ●							F1		WEST	
▶; i							F2			
▶; ?							F3		EAST	
■; X							-			
■; ⏸	PAUSE									
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 196		Код 197		Код 198		Код 199		Код 201	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	▲		PAGE ▲		▶▶				▶▶; SKIP	
AUDIO; NICAM	AUDIO		AUDIO		◀?					
VIDEO; SYS	UHF		9PIC		UHF				VIDEO; ON DEMAND	
☐; ZOOM									ENTER; ZOOM	
▼; TV	▼		PAGE ▼		◀◀				◀◀; REPLAY	
☐; ↗							SERV		RECORDED TV	
☐; LOCK							PERSO			
▲; FAV	FAV		FAV		FAV					
○	○		○		○		○		○; POWER	
AV							TV/SAT		TV/VIDEO	
⌘	⌘		⌘		⌘		⌘		MUTE	
MENU	MENU		MENU		MENU		PROGR		MENU	
EXIT	EXIT		EXIT		EXIT				⊖; BACK	
▲	CH +		▲		P +		▲		▲	
◀	◀		◀		V -		◀		◀	
OK	OK/LIST		OK		OK		OK		OK	
▶	▶		▶		V +		▶		▶	
▼	CH -		▼		P -		▼		▼	
⌘; SETUP			TV/RA				PILOT		TV; EXIT TO	
♪; TITLE	TV/RADIO		LANG		☐/☐					
☐					☐				GO INTERACTIVE	
GUIDE	EPG				GUIDE				GUIDE	
☐					☐					
RED; ●	RED; AUDIO		RED; F1; RECALL		RED; ☐	●	E		C; RED	●; RECORD
GREEN; ▨	GREEN; POSITION		GREEN; F2; 6PIC		GREEN; ☐		A		B; GREEN	
YELLOW; ◀	YELLOW; ☐		YELLOW; F4; INFO		YELLOW; ☐		B		A; YELLOW	
BLUE; ▨	BLUE; ☐		BLUE; F3; ADD		BLUE; ✓		C			
☐	INFO		INFO		i		D		INFO	
☐	RCL		RECALL		☐		+		LAST	
VOL -	◀		◀		V -		◀		VOL -	
VOL +	▶		▶		V +		▶		VOL +	
CH V; ◀	CH -		▼		P -		▼		CH/PG -	
CH A; ▶	CH +		▲		P +	▶▶	▲		CH/PG +	
⊖; SAT	SAT		SAT		☐					
CLEAR; X							X		DELETE	
◀; ●					◀◀				◀◀; REW	
▶; i					▶				▶; PLAY	
▶; ?					▶▶				▶▶; FF	
■; X					■				■; STOP	
■; ⏸	PAUSE				■				■; PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 202		Код 203		Код 204		Код 205		Код 206	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	PAGE ▲		P +		PG UP		▶▶		● ; DVD	
AUDIO ; NICAM			⏪		LANG		⏪		⏪	
VIDEO ; SYS			P/N		F1		V-FORMAT		● ; MEDIA	
☒ ; ZOOM			Q		F2		WIDE		ZOOM	
▼ ; TV	PAGE ▼		P -		PG DN		◀◀			
☐ ; ↔	PIP ON/OFF		UHF		F3		MEDIA			
☒ ; LOCK	PIP SWAP		☒		F4		LIST			
▲ ; FAV			FAV		F5		HELP			
○	○		○ ; POWER		○		○		○	
AV			TV/SAT		F6		SOURCE		☐	
⌘			⌘ ; MUTE		MUTE		⌘		⌘	
MENU	MENU		MENU		MENU		MENU		M ; MENU	
EXIT	EXIT		EXIT		EXIT		EXIT		X ; EXIT ; QUITTER	
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀		◀		◀	
OK	OK		OK		OK		OK		OK	
▶	▶		▶		▶		▶		▶	
▼	▼		▼		▼		▼		▼	
⌘ ; SETUP	PVR				HOME		TV PORTAL		☐ ; LIST ; INFOS	
♪ ; TITLE	BACK		☐/☒				TV/RADIO	RADIO	☐ ; RADIO	
☐			☐				TEXT	TEXT	☐	
GUIDE	GUIDE		EPG				GUIDE		GUIDE ; EPG	
☐	TITLES		☐		SUBT		OPT+			
☐			☐				☐		☐	
RED ; ●	RED	●	RED ; ⏪		RED	●	RED ; ☐ ; A	●	RED ; A	●
GREEN ; ▶	GREEN		GREEN ; ☐		GREEN		GREEN ; ☐ ; B		GREEN ; B	
YELLOW ; ◀	YELLOW	◀	YELLOW ; ○		YELLOW		YELLOW ; ○ ; C		YELLOW ; C	
BLUE ; ▶	BLUE	▶	BLUE ; ☐		BLUE		BLUE ; ☐ ; D		BLUE ; D	
☐	INFO		i				i		i ; INFO	
☐	PP		☐		LAST CH		BACK		RETOUR ; ☐ ; BACK	
VOL -	◀		◀		VOL -		VOL -		VOL - ; V - ; ◀	
VOL +	▶		▶		VOL +		VOL +		VOL + ; V + ; ▶	
CH V ; ◀◀	P -		▼		CH -	◀	CH ▼	◀◀	PROG - ; P -	◀◀
CH A ; ▶▶	P +		▲		CH +	▶	CH ▲	▶▶	PROG + ; P +	▶▶
CLEAR ; X			SAT						10	
◀◀ ; ○	◀◀				◀◀		◀◀		◀◀	
▶ ; i	▶		F1		▶▶		▶▶		▶▶	
▶▶ ; ?	▶▶		HELP		▶▶		▶▶		▶▶	
■ ; X	■				■		■		■	
■ ; ⏪	■		■		■		■		■	
■ ; ⏩	■		■		■		■		■	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0/☒		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 207		Код 208		Код 209		Код 210		Код 211	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	PAGE +				P +		PAGE UP		▲ ; PAGE UP	
AUDIO ; NICAM	AUDIO		AUDIO		WHITE ; AUDIO		AUDIO		⏪	
VIDEO ; SYS			V.FORMAT				HDMI		☐ ; PIP S.LIST	
☒ ; ZOOM	16:9/4:3		☐/☒ ; ZOOM						V.FORMAT	☐ ; PIP SWAP
▼ ; TV	PAGE -				P -		PAGE DOWN		▼ ; PAGE DOWN	
☐ ; ↔	SCAN ; TV/RADIO		☐ ; USB		FIND				☐ ; PIP	
☒ ; LOCK	TV/R ; SCAN		Q ; FIND						☑	
▲ ; FAV	FAV		FAV		FAV		FAV		FAV	▲ ; PLAY LIST
○	○		○ ; POWER		○		○ ; STANDBY		○	
AV	USB		TV/SAT		TV/R		USB		TV/SAT	
⌘			⌘ ; MUTE		⌘ ; MUTE		⌘ ; MUTE		⌘	
MENU	MENU		MENU		MENU		MENU		☐ ; MENU	
EXIT	EXIT		EXIT		EXIT		RETURN/EXIT		☐ ; EXIT	
▲	CH + ; ▲		▲		▲ ; CH +		▲ ; CH +		▲	
◀	VOL - ; ◀		◀		◀		◀ ; VOL -		◀	
OK	OK		OK		OK		OK		OK	
▶	VOL + ; ▶		▶		▶		▶ ; VOL +		▶	
▼	CH - ; ▼		▼		▼		▼ ; CH -		▼	
⌘ ; SETUP	MODE ; ZOOM		☐/☒ ; PLAY MODE		HOME				RESOLUTION	
♪ ; TITLE	F1 ; INFO ; LANG		TV/RADIO		TV/☐		TV/RADIO		TV/RAD ; TV/RADIO	
☐	TXT		TXT		TEXT		TEXT		☐ ; TELETXT	
GUIDE	EPG		EPG		EPG		EPG		☐ ; EPG	
☐			☐	Tms					SLEEP	
☐	F2 ; SUB ; PAL ; NTSC		☐ ; FOLDER		SUB-T		SUBTITLE		☐ ; SUBTITLE	
RED ; ●	RED ; AUDIO	●	RED ; AUDIO	● ; REC	RED ; CARD		RED	● ; REC	RED ; ☐	●
GREEN ; ▶	GREEN ; MODE ; ZOO		GREEN ; OPTION		GREEN ; MAILBOX		GREEN		GREEN ; ☐	
YELLOW ; ◀	YELLOW ; DISP ; i		YELLOW ; TXT	◀	YELLOW ; MODE		YELLOW		YELLOW ; ⏪	
BLUE ; ▶	BLUE ; PAUSE		BLUE	▶	BLUE ; STATUS		BLUE		BLUE ; ☐	
☐	DISP ; i		INFO		INFO		INFO		○ ; INFO	
☐	RECALL		☐ ; RECALL		☐		RETURN/EXIT		☐ ; RECALL	
VOL -	VOL -		VOL -		◀		◀ ; VOL -		VOL -	
VOL +	VOL +		VOL +		▶		▶ ; VOL +		VOL +	
CH V ; ◀◀	CH -	◀◀	PAGE -	◀◀ ; PREV	▼		▼ ; CH -	◀◀ ; PREV	CH ▼	◀◀
CH A ; ▶▶	CH +	▶▶	PAGE +	▶▶ ; NEXT	▲		▲ ; CH +	▶▶ ; NEXT	CH ▲	▶▶
+/ ; SAT	F3 ; GOTO ; 16:9/4:3		SAT						SAT	
CLEAR ; X			F1						UHF	
◀◀ ; ○	◀◀		◀◀ ; PAGE -		A		◀◀ ; REV		◀◀ ; ◀	
▶ ; i	▶		▶ ; PLAY		B		▶▶ ; PLAY/PAUSE		▶ ; ☐	
▶▶ ; ?	▶▶		▶▶ ; PAGE +		C		▶▶ ; FWD		▶▶	
■ ; X	■ ; USB		■ ; STOP		D		■ ; STOP		■	
■ ; ⏪	■		■ ; PAUSE		■		■ ; PLAY/PAUSE		■	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9,		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 212		Код 213		Код 214		Код 215		Код 216	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	▶▶; NEXT		PG +		▶		P +		▶▶	
AUDIO; NICAM	AUDIO		SOUND		AUDIO		AUDIO			
VIDEO; SYS	V.FORMAT				V.F.		TV FORMAT		*; []	
[] ZOOM	Q; ZOOM				ZOOM				АНОНС	
▼; TV	◀◀; PREV		PG -		◀		P -		◀◀	
[] ; ↻	⚙; USB								ИНТЕРНЕТ ТВ	
[] ; LOCK	[] ; PLAY MODE								КЛАВ.	
▲; FAV	FAV		FAV		FAV		FAV			
○	○		○; POWER		○		○; POWER		○	
AV	TV/SAT				AV				ПК	
⌘	⌘; MUTE		⌘; MUTE		⌘		⌘; MUTE		⌘	
MENU	MENU	F1	MENU		MENU		MENU		МЕНЮ	
EXIT	EXIT		EXIT		EXIT		EXIT		ВЫХОД	
▲	▲		CH ▲		▲		▲; CH +		▲; P +	
◀	◀		VOL ◀		◀		◀; V-		◀	
OK	OK		OK		OK		OK		OK	
▶	▶		VOL ▶		▶		▶; V+		▶	
▼	▼		CH ▼		▼		▼; CH -		▼; P -	
⌘; SETUP	⬆; PORTAL	F2	CHANNEL						В ЗФИРЕ	
♪; TITLE	TV/RADIO	F3	TV/RA		TV/R		TV/RADIO		ЯЗЫК	
[]	TXT		EPG		TEXT				АРХИВ	
GUIDE	EPG		EPG		EPG		EPG		ИПП	
⏻	⏻; SLEEP	TIME SHIFT							СОВЕТНИК	
[]	[] ; FOLDER		BISS		SUB		SUBTITLE		ПАНЕЛЬ	
RED; ●	RED; AUDIO	●; RECORD	RED		RED; V.F.	●	RED; LANGUAGE		RED; ITV	R; ЗАПИСЬ
GREEN; ▶	GREEN; OPTION		GREEN		GREEN; TEXT		GREEN; AUDIO		GREEN	
YELLOW; ◀	YELLOW; TXT	◀	YELLOW		YELLOW; SUB	◀	YELLOW; SUBTITLE		YELLOW	
BLUE; ▶	BLUE; []	▶	BLUE		BLUE; RCL	▶	BLUE; TEXT		BLUE	
[]	INFO		INFO		i		INFO		ИНФ	
[]	⏮; RECALL		RECALL		RCL		[]		УДАЛ.	
VOL -	V -		VOL ◀		V -		◀; V-		⏮	
VOL +	V +		VOL ▶		V +		▶; V+		⏭	
CH V; ◀◀	CH ▼	◀◀; PREV	CH ▼		P -		▼; CH -		▼; P -	◀◀
CH A; ▶▶	P ▲	▶▶; NEXT	CH ▲		P +		▲; CH +		▲; P +	▶▶
⊖; SAT	SAT		-		-		SAT		A/a	
CLEAR; X	Q; FIND		-		-					
◀◀; ●	◀◀; PAGE -				◀◀				◀◀	
▶▶; i	▶▶; PLAY				▶▶				▶▶	
▶▶; ?	▶▶; PAGE +				▶▶				▶▶	
■; X	■; STOP				■				■	
■; ⏸	■; PAUSE				■				■	
1, 2, ... 9, 0	1, 2, ... 9, 0/ZOOM		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 217		Код 218		Код 219		Код 220		Код 221	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	▶▶		F1		>		>		>	
AUDIO; NICAM	[]		Ⓜ?		AUDIO		AUDIO		AUDIO	
VIDEO; SYS	HD		V.FORMAT							
[] ZOOM	OPT+		Q /FIND							
▼; TV	◀◀		F2		<		<		<	
[] ; ↻	SAVE		RED; [] ; PIP							
[] ; LOCK	PAUSE		[] ; PLAY MODE							
▲; FAV	FAV		FAV							
○	○		○		○		○		○	
AV	TV/SAT	AV+	TV/SAT	⚙						
⌘	⌘		⌘		⌘		⌘		⌘	
MENU	MENU		MENU		MENU		MENU		MENU	
EXIT	EXIT		EXIT		EXIT		EXIT		EXIT	
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀		◀		◀	
OK	OK		OK		OK		OK		OK	
▶	▶		▶		▶		▶		▶	
▼	▼		▼		▼		▼		▼	
⌘; SETUP	SCREEN		[]	UHF	TV		TV		TV	
♪; TITLE	TV/RADIO		Ⓜ/Ⓜ		RADIO		RADIO		RADIO	
[]	[]		GREEN; [] ; []		[]		[]		[]	
GUIDE	EPG		EPG		EPG		EPG		EPG	
⏻	⏻		⏻							
[]	[]		[] ; []		[]		[]		[]	
RED; ●	RED	●	RED; [] ; PIP	●/REC	RED	●	RED	●	RED	●
GREEN; ▶	GREEN		GREEN; [] ; []		GREEN		GREEN		GREEN	
YELLOW; ◀	YELLOW		YELLOW; [] ; []	◀/▶; SLOW MO.	YELLOW		YELLOW		YELLOW	
BLUE; ▶	BLUE	▶	BLUE; [] ; []	◀/▶; SLOW MO.	BLUE		BLUE		BLUE	
[]	i		i		HELP		HELP		HELP	
[]	⏮; RECALL		⏮; RECALL							
VOL -	VOL -		◀		VOLUME -		VOLUME -		VOLUME -	
VOL +	VOL +		▶		VOLUME +		VOLUME +		VOLUME +	
CH V; ◀◀	CH ▼	◀◀	▼	◀◀	CHANNEL -		CHANNEL -		CHANNEL -	
CH A; ▶▶	CH ▲	▶▶	▲	▶▶	CHANNEL +		CHANNEL +		CHANNEL +	
⊖; SAT	SAT		SAT		[]		[]		[]	
CLEAR; X			[]							
◀◀; ●	◀◀		◀◀; P -		◀◀		◀◀		◀◀	
▶▶; i	▶▶		▶▶		▶▶		▶▶		▶▶	
▶▶; ?	▶▶		▶▶; P +		▶▶		▶▶		▶▶	
■; X	■		■		■		■		■	
■; ⏸	■		■		■		■		■	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0 / Q		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 222		Код 223		Код 224		Код 225		Код 226	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	>		DVB		MOTOR		▶▶; NEXT		▶▶; NEXT	
AUDIO; NICAM	AUDIO		VOD		AV+				AUDIO	
VIDEO; SYS			VIDEO CONFEREN.		HD		FIND			
☐; ZOOM			PVR		ORT+		☐; TV format			
▼; TV	<		IPTV		UHF		◀◀; PREV		◀◀; PREV	
☐; ↗			SEEK		SAVE		STATUS			
☐; LOCK			CAPTURE		PAUSE		OPTION			
▲; FAV			INTERNET		FAV		FAV		FAV	
○	○		○		○; STANDBY		○; POWER		○; STANDBY	
AV			TV/SAT		TV/SAT				USB	
⌘	⌘		⌘; MUTE		⌘		⌘; MUTE		⌘; MUTE	
MENU	MENU		HOME		MENU		MENU		MENU	
EXIT	EXIT		REFRESH		◀; EXIT		EXIT		EXIT	
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀		◀		◀	
OK	OK		ENTER		OK		OK/ENTER		OK	
▶	▶		▶		▶		▶		▶	
▼	▼		▼		▼		▼		▼	
⌘; SETUP	TV		SETUP		FINE TUNE		●; MODE		MEDIA	
♪; TITLE	RADIO		SOFTKEY		TV/RADIO		☐; TV/RADIO		TV/RADIO	
☐			TEXT		☐; PVR LIST		☐; FILE LIST		TTX	
GUIDE	EPG		EPG		☐; EPG		EPG		EPG	
☐			OSD		SLEEP					
☐			COLOR		COLOR		?: HELP		SUBTITLE	
RED; ●	RED	●; REC	●; REC/PAUSE		RED; ◀◀	●; REC	RED; AUDIO	●; REC	RED	●; RECORD
GREEN; ▶▶	GREEN				GREEN; ▶▶		GREEN; SUBTITLE		GREEN	
YELLOW; ◀◀	YELLOW		<<; SLOW REV		YELLOW; ■		YELLOW; SLEEP		YELLOW	
BLUE; ▶▶	BLUE		>>; SLOW FF		BLUE; ▶▶		BLUE; TEXT	▶▶; SLOW	BLUE	
☐	HELP		INFO		i; INFO		i; INFO		INFO	
☐			☐; BACK		☐		RECALL		RECALL	
VOL -	VOLUME -		VOLUME -		◀		◀		VOL -	
VOL +	VOLUME +		VOLUME +		▶		▶		VOL +	
CH V; ◀◀	CHANNEL -		CH/PAGE ▼		▼		▼	◀◀; PREV	CH -	◀◀; PREV
CH ▲; ▶▶	CHANNEL +		CH/PAGE ▲		▲		▲	▶▶; NEXT	CH +	▶▶; NEXT
⊖; SAT	☐		MTS		SAT					
CLEAR; X			DELETE		X+					
◀◀; ●	◀◀		◀◀; REW		◀◀		◀◀; REW		◀◀; REV	
▶▶; i	▶▶		▶▶; PLAY/PAUSE		▶▶		▶▶; PLAY/PAUSE		▶▶; PLAY	
▶▶; ?	▶▶		▶▶; FF		▶▶		▶▶; FF		▶▶; FWD	
■; X	■		■; STOP		■		■; STOP		■; STOP	
■; ⏸	■		▶▶; PLAY/PAUSE		▶▶		▶▶; PLAY/PAUSE		■; PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 227		Код 228		Код 229		Код 230		Код 231	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	▶▶; PG+		▲; +100		☐; JUMP		▶▶		▶▶	
AUDIO; NICAM			FILTER		☐; AV+		AUDIO		AUDIO	
VIDEO; SYS			V.FORMAT		☐; V.F		V-FORMAT			
☐; ZOOM			F1; ZOOM		☐; MEDIA PLAY		REPEAT			
▼; TV	◀◀; PG-		▼; -100		☐; MARK		◀◀		◀◀	
☐; ↗			☐; B.MARK		☐; PIP					
☐; LOCK			SORT							
▲; FAV			☐	▲; MODE	SAT/FAV		FAV		FAV; ★	
○	○		○		○; POWER		○; POWER		○	
AV					TV/STB		TVG		USB	
⌘	⌘; MENU POP UP		⌘		⌘; MUTE		⌘; MUTE		⌘; MUTE	
MENU			MENU		☐; MENU		MENU; ☐		MENU	
EXIT	CLEAR; ⊖		EXIT		⊖; EXIT		X; EXIT		EXIT	
▲	▲; CH+		CH ▲		▲; CH+		▲; CH+		▲	
◀	◀; V-		VOL ◀		◀		◀; VOL -		◀; VOL -	
OK	ENTER		OK		OK		OK		OK	
▶	▶; V+		VOL ▶		▶		▶; VOL +		▶; VOL +	
▼	▼; CH -		CH ▼		▼		▼; CH -		▼	
⌘; SETUP	TOP MENU; ●		▲; MODE		☐; FUNC				MEDIA	
♪; TITLE	SELECT; CAP/NUM		☐/☐		TV/RAD		TV/RADIO		TV/RADIO	
☐			F3; ☐		☐; PVR LIST		TTX		TTX	
GUIDE			EPG		☐; EPG		LIST		EPG	
☐			F2; SLEEP		☐; SLEEP	T.S; T.SHIFT	TIMER		TIMER	
☐			F4; ☐		☐; OPTION		SUB-T		SUBTITLE	
RED; ●	RED; A	●; REC	RED; FTA/CAS	●; MARK	RED; ☐	●; REC	RED	REC	RED; TIMER	RECORD
GREEN; ▶▶	GREEN; B		GREEN; SAT		GREEN; P.CH		GREEN		GREEN	
YELLOW; ◀◀	YELLOW; C		YELLOW		YELLOW; ■		YELLOW		YELLOW	
BLUE; ▶▶	BLUE; D		BLUE; A/V	▶▶; SLOW	BLUE		BLUE		BLUE; TMS	
☐	i; INFO		INFO		i; INFO		INFO		INFO	
☐	☐; RETURN		BACK		☐; RECALL		RECALL		RES; RECALL	
VOL -	◀; V-		VOL ◀	-	VOL -		◀; VOL -		◀; VOL -	
VOL +	▶; V+		VOL ▶	+	VOL +		▶; VOL +		▶; VOL +	
CH V; ◀◀	▼; CH -	◀◀; PG-	CH ▼	◀◀	CH -		▼; CH -	◀◀	CH -	◀◀
CH ▲; ▶▶	▲; CH +	▶▶; PG+	CH ▲	▶▶	CH +		▲; CH +	▶▶	CH +	▶▶
⊖; SAT			SAT		AZ		GOTO		BACK; GOTO	
CLEAR; X	CLEAR; ⊖				F6		X; EXIT			
◀◀; ●	◀◀		◀◀; REW		◀◀; REW		◀◀; REW		◀◀; REV	
▶▶; i	▶▶		▶▶; PLAY		▶▶; PLAY/PAUSE		▶▶; PLAY		▶▶; PLAY	
▶▶; ?	▶▶		▶▶; FF		▶▶; FF		▶▶; FF		▶▶; FWD	
■; X	■		■; R.V.		■; STOP		■; STOP		■; STOP	
■; ⏸	■		■; T.SHIFT		■; PLAY/PAUSE		■; PAUSE		■; PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 232		Код 233		Код 234		Код 235		Код 236	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	DVD/DVB						P +		P +	
AUDIO; NICAM	AUDIO				AUDIO		AUDIO		AUDIO	
VIDEO; SYS	P/N				ANGLE; ROTATE				UHF	
☐; ZOOM	ZOOM				☐; ZOOM				A-Z	
▼; TV	PREV				TV		P -		P -	
☐; ↗	PROG				☐; MODE				TV	
☐; LOCK	PS/VGA; SCAN									
▲; FAV	▲		FAV		▲		FAV		FAV	
○	○		○		○		○; POWER		POWER	
AV	SOURCE				☐; MODE		TV/SAT		TV/SAT	
✳	✳		✳		✳; MUTE		✳; MUTE		✳	
MENU	MENU; GREEN		MENU		POP UP MENU		MENU		MENU	
EXIT	EXIT; BLUE		EXIT		↵; RETURN		EXIT		EXIT	
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀		◀		◀	
OK	OK		OK		ENTER		OK		OK	
▶	▶		▶		▶		▶		▶	
▼	▼		▼		▼		▼		▼	
✳; SETUP	SETUP; RED	A-B			SETUP		MODE		MODE	
♪; TITLE	TITLE; FAV	3D	TV/R		SELECT		TV/RADIO		RADIO	
☐	ANGLE; TV/RAD		TEXT		TOP MENU		TELETEXT		TEXT	
GUIDE	LANG; SAT		EPG		?; SEARCH; Q		EPG		EPG	
☐	RETURN; YELLOW				●					
☐	SUB-T; INFO		SUB		SUBTITLE				LANG	
RED; ●	RED	●; SLOW	RED; F1		RED; A	●; REC	RED		RED	
GREEN; ▮	GREEN		GREEN; F2		GREEN; B		GREEN		GREEN	
YELLOW; ◀	YELLOW		YELLOW; F3		YELLOW; C		YELLOW		YELLOW	
BLUE; ▮	BLUE		BLUE; F4		BLUE; D	▮; SLOW	BLUE; TELETEXT		BLUE	
☐	DISP		INFO		?; INFO		INFO		INFO	
☐	PRE		PRE		↵; RETURN		PRE		PRE	
VOL -	VOL -		VOL -		V-		◀		◀	
VOL +	VOL +		VOL +		V+		▶		▶	
CH V; ◀	▼	◀; PAGE-	CH v		P -	◀; PREV	▼		▼	
CH A; ▶	▲	▶; PAGE+	CH ^		P +	▶; NEXT	▲		▲	
±; SAT	10+				URL		UHF		SAT	
CLEAR; X	GOTO; MP				←; CLEAR					
◀; ●	◀; REV				◀; REV					
▶; i	▶; PLAY				▶; PLAY					
▶; ?	▶; FWD				▶; FWD					
■; X	■; STOP				■; STOP					
; ⏸	; PAUSE				; PAUSE		PAUSE		PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 237		Код 238		Код 239		Код 240		Код 241	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	PG+		P +				P +		PG UP	
AUDIO; NICAM	AUDIO		AUDIO		AUDIO		☐?		LANG	
VIDEO; SYS			FIND		PVR		V.FORMAT		V-FORMAT	
☐; ZOOM			P -				Q; FIND	☐	ASPECT	ZOOM
▼; TV	PG-		TV/R				P -		PG DN	
☐; ↗	SEARCH						☐			
☐; LOCK							☐/☐; PLAY MODE			
▲; FAV			FAV		FAVOR		FAV		FAV	
○	○		○		○		○		○	
AV					SUB		TV/SAT			
✳	✳		✳; MUTE		MUTE		✳		✳	
MENU	MENU		MENU		MENU		MENU		MENU	
EXIT	EXIT		EXIT		EXIT		EXIT		EXIT	
▲	CH ▲		▲		CH ▲		▲		▲	
◀	VOL ◀		◀		VOL ◀		◀		◀	
OK	OK		OK		OK		OK		OK	
▶	VOL ▶		▶		VOL ▶		▶		▶	
▼	CH ▼		▼		CH ▼		▼		▼	
✳; SETUP	MODE		HOME				☐	F1	LIST	
♪; TITLE			TV/☐		TV/R		☐/☐	F2	TV/RADIO	
☐	TXT		TEXT		TEXT		☐		TTX	
GUIDE	EPG		EPG		EPG		EPG		EPG	
☐			☐		☐		☐		TIMER	TIME SHIFT
☐	SUB		SUB-T		SUB-T		☐		SUBTITLE	
RED; ●	RED		RED; CARD		RED; ◀		RED; ☐; PIP	●; REC	RED; ZOOM	REC
GREEN; ▮	GREEN		GREEN; MAILBOX		GREEN; ◀		GREEN; ☐; ☐		GREEN; ASPECT	
YELLOW; ◀	YELLOW		YELLOW; MODE		YELLOW; ▶		YELLOW; ☐; ☐	◀/▶; SLOW MOT.	YELLOW; V-FORM.	
BLUE; ▮	BLUE		BLUE; STATUS		BLUE; ▶	▶	BLUE; ☐; ☐	◀/▶; SLOW MOT.	BLUE; TIMER	
☐	INFO		INFO		INFO		i		INFO	
☐	LAST		☐		LAST		☐; RECALL		RECALL	REPEAT
VOL -	VOL ◀		◀		VOL ◀		◀		VOL -	
VOL +	VOL ▶		▶		VOL ▶		▶		VOL +	
CH V; ◀	CH ▼		▼		CH ▼	◀	▼	◀	CH -	◀
CH A; ▶	CH ▲		▲		CH ▲	▶	▲	▶	CH +	▶
±; SAT							SAT	UHF	GOTO	
CLEAR; X							✳			
◀; ●			A		◀		◀		◀	
▶; i			B		▶/		▶		▶	
▶; ?			C		▶		▶		▶	
■; X			D		■		■		■	
; ⏸					▶/					
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0/☐		1, 2, ... 9, 0		1, 2, ... 9, 0/☐		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 242		Код 243		Код 244		Код 245		Код 246	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	▶▶; NEXT				▲ PAGE		P +		PAGE +	
AUDIO; NICAM	▶▶; AUDIO		AUDIO		AUDIO		AUDIO		LANG; TTX	
VIDEO; SYS	▲; AV/YPBPR		9PIG				PVR		V-FORMAT	
☐; ZOOM	☐; ZOOM				ZOOM		ZOOM		ASPECT	
▼; TV	◀◀; PREV		TV/RAD		▼ PAGE		P -		PAGE -	
☐; ↻	☐; TV SYSTEM		SEARCH				MODE		TTX; LANG	
☐; LOCK			SCAN		PAUSE		FIND		REPEAT	
▲; FAV			FAV		FAV		FAV		FAV	
○	○; POWER		○		○		○		○; POWER	
AV					TV/STB		USB			
⌘	⌘; MUTE		⌘		⌘		MUTE		⌘; MUTE	
MENU	☰; HOME		MENU		MENU		MENU		MENU	
EXIT	↶; RETURN		EXIT		BACK; ZOOM		EXIT		EXIT	
▲	▲		▲		▲		▲		▲; CH +	
◀	◀		◀		◀		◀		◀; VOL -	
OK	OK		OK		OK		OK		OK	
▶	▶		▶		▶		▶		▶; VOL +	
▼	▼		▼		▼		▼		▼; CH -	
⌘; SETUP	⌘; SETUP		LANG		TV/RADIO		OPTION		TV/RADIO	
♪; TITLE					TEXT		TV/RADIO		TTX; LANG	LANG; TTX
☐	☐; OPTION				EPG		TEXT		EPG	
GUIDE					SLEEP	CLOCK	EPG		TIMER	TIMESHIFT
☐							SLEEP		SUB-T	
☐	▲; SUBTITLE				☐		SUBT		RED; PVR	●
RED; ●	RED		RED; SEARCH		RED; CLOCK	●; TV/STB	RED; LAST	●; REC	RED; V-FORMAT	
GREEN; ▶	GREEN		GREEN; VOL -		GREEN; SLEEP		GREEN; OPTION		GREEN; V-FORMAT	
YELLOW; ◀	YELLOW		YELLOW; SCAN		YELLOW; AUDIO		YELLOW; ZOOM		YELLOW; ASPECT	
BLUE; ▶	BLUE	▶; SLOW	BLUE; VOL +		BLUE; PAUSE		BLUE; MODE	▶; SLOW	BLUE; TIMER	
☐	i; DISPLAY		INFO		INFO		INFO		INFO	
☐	☐; REPEAT		RCL		PREV		LAST		RECALL	
VOL -	◀; VOL -		VOL -		VOL -		◀		◀; VOL -	
VOL +	▶; VOL +		VOL +		VOL +		▶		▶; VOL +	
CH V; ◀◀	▼	◀◀; PREV	▼		PR -		▼	SKIP -	▼; CH -	◀◀
CH A; ▶▶	▲	▶▶; NEXT	▲		PR +		▲	SKIP +	▲; CH +	▶▶
⊖; SAT	ρ; GOTO		SAT		SAT		SKIP -		GOTO	
CLEAR; X	A-B						SKIP +			
◀◀; ●	◀◀; FR						◀◀; REW		◀◀	
▶; i	▶▶; PLAY/PAUSE						▶; PLAY		▶	
▶▶; ?	▶▶; FF						▶▶; FF		▶▶	
■; ✕	■; STOP						■; STOP		■	
■; ⏸	■▶▶; PLAY/PAUSE		PAUSE		■▶▶; PREV		■▶▶; PAUSE		■▶▶; TIMESHIFT	
1, 2, ... 9, 0			1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0; SLEEP		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 247		Код 248		Код 249		Код 250		Код 251	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	▶▶		▶▶		PROMO VIDEO		PAGE +			
AUDIO; NICAM	ЯЗЫК		AUDIO		LNG		LANG		LANGUAGE	
VIDEO; SYS					☐; VIDEO		V-FORMAT			
☐; ZOOM							ASPECT		ZOOM	
▼; TV	◀◀		◀◀		PROMO TV		PAGE -			
☐; ↻										
☐; LOCK										
▲; FAV	*		FAV		★; FAV		FAV		FAV	
○	○		○; STANDBY		○		○; POWER		○; POWER	
AV	AV		USB							
⌘	⌘		⌘; MUTE				⌘; MUTE		⌘; MUTE	
MENU	МЕНЮ		MENU		MENU		MENU		MENU	
EXIT	ВЫХОД		EXIT		EXIT		EXIT		EXIT	
▲	▲; P+		CH ▲		▲		▲		▲; CH -; ◀◀	
◀	◀; V-		VOL ◀		◀		◀		◀; V -	
OK	OK		OK		OK		OK		OK	
▶	▶; V+		VOL ▶		▶		▶		▶; V +	
▼	▼; P-	◀◀; PREV	CH ▼		▼		▼		▼; CH +; ▶▶	
⌘; SETUP	ПАНЕЛЬ		MEDIA		⬆		PVR			
♪; TITLE	ИП		TV/RADIO		RADIO		TV/RADIO		TV/RADIO	
☐	АРХИВ		TTX		☐; GAMES		TTX		TEXT	
GUIDE	ПК		EPG		☐; TV GUIDE		EPG		EPG	
☐	СОВЕТНИК		TIMER	TIMESHIFT			TIMER	TIMESHIFT		
☐	КЛАВ.		SUBTITLE		+		SUBTITLE		SUBTITLE	
RED; ●	RED; i	R; ●	RED	REC	RED	R; REC	RED	●	RED; ZOOM	REC
GREEN; ▶	GREEN		GREEN		GREEN		GREEN		GREEN; LANGUAGE	
YELLOW; ◀	YELLOW; WEB		YELLOW		YELLOW		YELLOW		YELLOW	
BLUE; ▶	BLUE		BLUE		BLUE		BLUE		BLUE; TEXT	
☐	ИНФ		INFO		i		INFO		INFO	
☐			BACK		☐		RECALL		☐	
VOL -	◀; V-		VOL ◀		VOL -		VOL -		V -	
VOL +	▶; V+		VOL ▶		VOL +		VOL +		V +	
CH V; ◀◀	▼; P-	◀◀; PREV	CH ▼	◀◀	CH -		CH -	◀◀	CH -; ◀◀	
CH A; ▶▶	▲; P+	▶▶; NEXT	CH ▲	▶▶	CH +		CH +	▶▶	CH +; ▶▶	
⊖; SAT	A/a		GOTO				LIST			
CLEAR; X	УДАЛ.									
◀◀; ●	◀◀		◀◀		◀◀; REW		◀◀		◀◀	
▶; i	▶		▶▶		▶; PLAY		▶		▶▶	
▶▶; ?	▶▶		▶▶		▶▶; FF		▶▶		▶▶	
■; ✕	■		■		■; STOP		■		■	
■; ⏸	■▶▶		■▶▶		■▶▶; PAUSE		■▶▶		■▶▶	
1, 2, ... 9, 0			1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 252		Код 253		Код 254		Код 255		Код 256	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	PAGE +		PAGE +		#		▶▶; NEXT		P +	
AUDIO; NICAM	LANG		AUDIO		↵		AUDIO		AUDIO	
VIDEO; SYS			P/N		TV CHAT				⊕; PVR	
📺; ZOOM			ZOOM		+				FIND	
▼; TV	PAGE -		PAGE -		SEARCH		◀◀; PREV		P -	
🔒; LOCK					SAVE T/SHIFT					
▲; FAV	FAV		FAV		FAV		FAV		FAV	
⊖	⊖; POWER		⊖; POWER		⊖		⊖; STANDBY		📶; USB	
AV									🔇; MUTE	
🔇	🔇; MUTE		🔇; MUTE		🔇		🔇; MUTE		MENU	
MENU	MENU		MENU		MENU		MENU		EXIT	
EXIT	EXIT		EXIT		EXIT		EXIT		▲	
▲	▲; CH +		UP		▲		▲		◀	
◀			LEFT		◀		◀		▶	
OK	OK		OK		OK		OK		OK	
▶			RIGHT		▶		▶		▼	
▼	▼; CH -		DOWN		▼		▼		MODE	
🔗; SETUP	PVR		MP		SPLIT FILE				TV/📻	
🎵; TITLE	TV/RADIO		BROADCAST		TV/RADIO		TV/RADIO		TV/📄	
📺	TTX		LIST		REC LIST		TTX		TXT	
GUIDE	EPG		CALENDAR		GUIDE		EPG		EPG	
⌚	TIMESHIFT				⌚; CLOCK					
📄	SUB-T						SUBTITLE		SUBT	
RED; ●	RED	●	RED; SEARCH		RED; INFO	●; REC	RED	●; REC	RED; SUBT	●; REC
GREEN; ▶▶	GREEN; V-FORMAT		GREEN; PAUSE		GREEN; ↵		GREEN		GREEN; LIST; OPT	
YELLOW; ◀◀	YELLOW; ASPECT		YELLOW; OSD		YELLOW; 📄		YELLOW		YELLOW; STATUS	
BLUE; ▶▶	BLUE; TIMER		BLUE; SAT		BLUE; FAV	SLOW	BLUE		BLUE; AUDIO	▶▶; SLOW
📺	INFO		INFO		INFO		INFO		INFO	
🔄	RECALL		RETUNE		LAST		RECALL		🔄	
VOL -	VOL -		VOLUME -		VOL -		◀		◀	
VOL +	VOL +		VOLUME +		VOL +		▶		▶	
CH V; ◀◀	▼; CH -		DOWN		CH -		▼	◀◀; PREV	▼	◀◀; SKIP -
CH A; ▶▶	▲; CH +		UP		CH +		▲	▶▶; NEXT	▲	▶▶; SKIP +
⊖; SAT			SAT		📺					
CLEAR; X					📺					
◀◀; ●	◀◀				◀◀		◀◀; REV		◀◀; REW	
▶▶; i	▶▶		OSD		▶▶		▶▶; PLAY		▶▶; PLAY	
▶▶; ?	▶▶				▶▶		▶▶; FWD		▶▶; FF	
■; X	■				■		■; STOP		■; STOP	
⏸; ⏸	⏸; TIMESHIFT		PAUSE		⏸		⏸; PAUSE		⏸; PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 257		Код 258		Код 259		Код 260		Код 261	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	PAGE +		▶▶		◀◀; PREV		▶▶		▶▶	
AUDIO; NICAM	LANGUAGE		AUDIO		L/R		L/R		AUDIO	
VIDEO; SYS	V-FORMAT									
📺; ZOOM	ASPECT									
▼; TV	PAGE -		◀◀		▶▶; NEXT		◀◀		◀◀	
🔒; LOCK	REPEAT						TTX			
▲; FAV	FAV		FAV		FAV		FAV		FAVOR	
⊖	⊖		⊖		⊖; STANDBY		⊖; STANDBY		⊖	
AV			USB		USB		USB		USB	
🔇	MUTE		🔇		🔇; MUTE		🔇; MUTE		🔇	
MENU	MENU		MENU		MENU		MENU		MENU	
EXIT	EXIT		EXIT		EXIT		EXIT		EXIT	
▲	▲; CH +		CH ▲		▲; CH +		▲		CH ▲	
◀			VOL ◀		◀; VOL -		◀		VOL ◀	
OK	OK		OK		OK		OK		OK	
▶			VOL ▶		▶; VOL +		▶		VOL ▶	
▼	▼; CH -		CH ▼		▼; CH -		▼		CH ▼	
🔗; SETUP			MEDIA				LIST			
🎵; TITLE	TV/RADIO		TV/RADIO		TV/RADIO		TV/RADIO		TV/R	
📺	TTX		TTX		TEXT		TEXT; MEDIA	TTX	TEXT	
GUIDE	EPG		EPG		EPG		EPG		EPG	
⌚	TIMER	TIMESHIFT	TIME SHIFT							
📄	SUB		SUBTITLE		SUBT		SUB-T; SUBT		SUB-T	
RED; ●	RED; PVR	REC	RED	REC	RED	●; PVR	RED	●; REC	RED; ◀◀	●
GREEN; ▶▶	GREEN; V-FORMAT		GREEN		GREEN		GREEN		GREEN; ◀◀	
YELLOW; ◀◀	YELLOW; ASPECT		YELLOW		YELLOW		YELLOW		YELLOW; ▶▶	
BLUE; ▶▶	BLUE; TIMER		BLUE		BLUE		BLUE		BLUE; ▶▶	
📺	INFO		INFO		INFO		INFO		INFO	
🔄	RECALL		BACK		RECALL		🔄		LAST; GOTO	
VOL -	VOL -		VOL ◀		◀; VOL -		VOL -		VOL ◀	
VOL +	VOL +		VOL ▶		▶; VOL +		VOL +		VOL ▶	
CH V; ◀◀	▼; CH -	◀◀	CH ▼	◀◀	▼; CH -	◀◀; PREV	PAGE -; P -	◀◀	CH ▼	◀◀
CH A; ▶▶	▲; CH +	▶▶	CH ▲	▶▶	▲; CH +	▶▶; NEXT	PAGE +; P +	▶▶	CH ▲	▶▶
⊖; SAT	GOTO		GOTO		GOTO		GOTO			
CLEAR; X										
◀◀; ●	◀◀		◀◀		◀◀; REV		◀◀		◀◀	
▶▶; i	▶▶		▶▶		▶▶; PLAY		▶▶; ▶▶		▶▶; ▶▶	
▶▶; ?	▶▶		▶▶		▶▶; FWD		▶▶		▶▶	
■; X	■		■		■; STOP		■		RED	
⏸; ⏸	⏸; TIMESHIFT		⏸		⏸; PAUSE		▶▶; ▶▶		▶▶	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 262		Код 263		Код 264		Код 265		Код 266	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	▶▶									PGUP
AUDIO ; NICAM	L/R						AUDIO			AUDIO
VIDEO ; SYS							V-FORMAT			
☐ ; ZOOM		ZOOM					ASPECT			
▼ ; TV	◀◀						TV/RADIO			PGDN
☐ ; ↻			⏪			SEARCH				LIST
☐ ; LOCK							ZOOM			
▲ ; FAV	FAV				★ ; FAVORITES		FAV			FAV
⊖	⊖ ; STANDBY		⊖		POWER		⊖ ; POWER			⊖ ; STANDBY
AV	USB									USB
⌘	⌘ ; MUTE				⌘		⌘ ; MUTE			⌘ ; MUTE
MENU	MENU		МЕНЮ		MENU		MENU			MENU
EXIT	EXIT		✓				EXIT			EXIT
▲	▲ ; CH +		▲		▲		▲ ; UP			▲ ; CH +
◀	◀ ; VOL -		◀		◀		◀ ; LEFT			◀ ; VOL -
OK	OK		OK		OK		OK			OK
▶	▶ ; VOL +		▶		▶		▶ ; RIGHT			▶ ; VOL +
▼	▼ ; CH -		▼		▼		▼ ; DOWN			▼ ; CH -
⌘ ; SETUP					HOME		PVR			MEDIA
♪ ; TITLE	TV/RADIO						TV/RADIO			TV/RADIO
☐	TEXT				⚙ ; SETTINGS		TTX			TTX
GUIDE	EPG				▲ ; PROFILE		EPG			EPG
⊖							TIMER			TIMER
☐	SUBT				Фильмы		SUBT			SUBTITLE
RED ; ●	RED				RED		RED	●		RED
GREEN ; ▶	GREEN				GREEN		GREEN			GREEN
YELLOW ; ◀	YELLOW				YELLOW		YELLOW			YELLOW
BLUE ; ▶	BLUE	●			BLUE		BLUE			BLUE
☐	INFO				i ; INFO ; Инфо		INFO			INFO
☐	☐ ; RECALL		☐		LAST CH.		RECALL			BACK
VOL -	◀ ; VOL -				VOL - ; ◀		VOL -			◀ ; VOL -
VOL +	▶ ; VOL +				VOL + ; ▶		VOL +			▶ ; VOL +
CH V ; ◀◀	▼ ; CH -	◀◀	CH ▼		CH -		PAGE -	◀◀		▼ ; CH -
CH A ; ▶▶	▲ ; CH +	▶▶	CH ▲		CH +		PAGE +	▶▶		▲ ; CH +
⊖ ; SAT	GOTO						GOTO			
CLEAR ; X										
◀◀ ; ●	◀◀		◀◀		◀◀		◀◀			◀◀
▶▶ ; i	▶▶		▶▶		▶▶		▶▶			▶▶
▶▶ ; ?	▶▶		▶▶		▶▶		▶▶			▶▶
■ ; X	■		■		■		■			■
■ ; ⏪	■		■		■		■			■
■ ; ⏩	■		■		■		■			■
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0			1, 2, ... 9, 0

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 267		Код 268		Код 269		Код 270		Код 271	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	PgUp		▶▶ ; NEXT		PAGE +		▶▶		PAGE ▲	
AUDIO ; NICAM	AUDIO		AUDIO		LANG		AUDIO		AUDIO	
VIDEO ; SYS	V-FORMAT				V-FORMAT					
☐ ; ZOOM	ASPECT	ZOOM			ASPECT				ZOOM	
▼ ; TV	PgDn		◀◀ ; PREV		PAGE -		◀◀		PAGE ▼	
☐ ; ↻									INFO	
☐ ; LOCK					REPEAT				FIND	
▲ ; FAV	FAV		FAVOURITE		FAV		FAV		FAV	
⊖	⊖		⊖ ; STANDBY		⊖ ; POWER		⊖		⊖ ; POWER	
AV									USB	
⌘	⌘		⌘ ; MUTE		⌘ ; MUTE		⌘		⌘ ; MUTE	
MENU	MENU		MENU		MENU		MENU		MENU	
EXIT	EXIT		EXIT		EXIT		EXIT		EXIT	
▲	▲ ; CH +		▲ ; CH +		▲ ; CH +		▲ ; CH +		CH+	F1
◀	◀ ; VOL -		◀ ; VOL -		◀ ; VOL -		◀ ; VOL -		VOL-	F2
OK	OK		OK		OK		OK		OK	F3
▶	▶ ; VOL +		▶ ; VOL +		▶ ; VOL +		▶ ; VOL +		VOL+	F4
▼	▼ ; CH -		▼ ; CH -		▼ ; CH -		▼ ; CH -		CH-	F5
⌘ ; SETUP			PVR		PVR		PVR		MODE	
♪ ; TITLE	TV/RADIO		TV/RADIO		TV/RADIO		TV/RADIO		☐ ; TV/R	
☐	TTX		TTX		TTX		TTX		TXT	
GUIDE	EPG		EPG		EPG		EPG		EPG	
⊖	TIMER		REPEAT		TIMER	TIMESHIFT	REPEAT		SLEEP	TIME
☐	SUB-T		SUBTITLE		SUB-T		SUB-T		SUBT	
RED ; ●	RED ; ZOOM	REC	RED		RED ; PVR	●	RED	●	RED ; MENU	●
GREEN ; ▶	GREEN ; ASPECT		GREEN		GREEN ; V-FORMAT		GREEN		GREEN ; TXT	
YELLOW ; ◀	YELLOW ; V-FORM.		YELLOW		YELLOW ; ASPECT		YELLOW		YELLOW ; FIND	
BLUE ; ▶	BLUE ; TIMER		BLUE		BLUE ; TIMER		BLUE		BLUE ; INFO	
☐	INFO		INFO		INFO		INFO		DISPLAY	
☐	RECALL		RECALL		RECALL		RECALL		RECALL	
VOL -	◀ ; VOL -		◀ ; VOL -		◀ ; VOL -		◀ ; VOL -		VOL-	
VOL +	▶ ; VOL +		▶ ; VOL +		▶ ; VOL +		▶ ; VOL +		VOL+	
CH V ; ◀◀	▼ ; CH -	◀◀	▼ ; CH -	◀◀ ; PREV	▼ ; CH -	◀◀	▼ ; CH -	◀◀	CH-	◀◀
CH A ; ▶▶	▲ ; CH +	▶▶	▲ ; CH +	▶▶ ; NEXT	▲ ; CH +	▶▶	▲ ; CH +	▶▶	CH+	▶▶
⊖ ; SAT	GOTO		GOTO		GOTO		GOTO		SAT	
CLEAR ; X										
◀◀ ; ●	◀◀		◀◀ ; REV		◀◀		◀◀		◀◀	
▶▶ ; i	▶▶		▶▶ ; PLAY		▶▶		▶▶		▶▶	
▶▶ ; ?	▶▶		▶▶ ; FWD		▶▶		▶▶		▶▶	
■ ; X	■		■ ; STOP		■		■		■	
■ ; ⏪	■		■ ; PAUSE		■		■		■	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 272		Код 273		Код 274		Код 275		Код 276	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	▲		P +				P +; TEXT		▶▶	
AUDIO; NICAM			AUDIO				◀?; AUDIO		AUDIO	
VIDEO; SYS	V.FORMAT		HDMI						V-FORMAT	
☐; ZOOM	ZOOM						ASPECT		ASPECT	
▼; TV	▼		P -				P -; CC		◀◀	
☐; ↕							PIP			
☐; LOCK	▶▶								REPEAT	
▲; FAV	FAV		FAV		SHIFT		FAV			
○	○		○		○		○; STB POWER		○	
AV	☐				AV		MAIL			
⌘	⌘		⌘; MUTE		⌘		⌘; MUTE		⌘	
MENU	MENU		MENU		☰; MENU		MENU		MENU	
EXIT	EXIT		EXIT		BACK		EXIT		EXIT	
▲	▲		▲		▲		CH ▲		▲	
◀	◀	☐	◀		◀		VOL ◀		◀	
OK	OK		OK		OK		OK		OK/LIST	
▶	▶	☐	▶		▶		VOL ▶		▶	
▼	▼		▼		▼		CH ▼		▼	
⌘; SETUP	✓		FIND		SETUP				MEDIA	
♪; TITLE	♫/♫		TV/♫				♫/♫		TV/RADIO	
☐	☐		TEXT		TXT		TEXT		TEXT	
GUIDE	GUIDE		EPG		EPG		EPG		EPG	
⏻	SLEEP				#				TIME SHIFT	
☐	☐		SUB-T		@				SUB-T	
RED; ●	RED	●	RED; HOME	●; REC	RED	●; R	RED		RED; PVR	REC
GREEN; ▶▶	GREEN		GREEN; MAILBOX		GREEN		GREEN		GREEN; V-FORMAT	
YELLOW; ◀◀	YELLOW; ◀◀		YELLOW; PVR		YELLOW		YELLOW		YELLOW; ASPECT	
BLUE; ▶▶	BLUE; ☐	▶▶	BLUE; STATUS	▶▶; SLOW	BLUE		BLUE		BLUE; TIMER	
☐	INFO		INFO		INFO		INFO		INFO	
☐	☐		☐		LAST		☐; LAST		RECALL	
VOL -	VOL -		◀		◀-; VOL -		VOL ◀		VOL -	
VOL +	VOL +		▶		◀+; VOL +		VOL ▶		VOL +	
CH V; ◀◀	CH ▼	◀◀	▼	◀◀; SKIP -	-; CH -		CH ▼		CH -	◀◀
CH ▲; ▶▶	CH ▲	▶▶	▲	▶▶; SKIP +	+; CH +		CH ▲		CH +	▶▶
+/; SAT	SAT								GOTO	
CLEAR; X	☐						CC			
◀◀; ●	◀◀		◀◀; REW		◀◀				◀◀	
▶▶; i	▶▶		▶▶; PLAY		▶▶				▶▶	
▶▶; ?	▶▶		▶▶; FF		▶▶				▶▶	
■; ⌘	■		■; STOP		■				■	
■; ⏻	■		■; PAUSE		■				■	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 277		Код 278		Код 279		Код 280		Код 281	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	▶▶		PAGE UP						▶▶	
AUDIO; NICAM	AUDIO		AUDIO		AUDIO		♫		AUDIO	
VIDEO; SYS										
☐; ZOOM					ASPECT				ZOOM	
▼; TV	◀◀		PAGE DOWN						◀◀	
☐; ↕			USB							
☐; LOCK										
▲; FAV	FAV		FAV		★		★		FAV	
○	○; POWER		○; TV/AV		○; POWER		○		○; STANDBY	
AV									USB	
⌘	⌘; MUTE		⌘; MUTE		⌘; MUTE		⌘		⌘; MUTE	
MENU	MENU		MENU		MENU		МЕНЮ		MENU	
EXIT	EXIT		EXIT		EXIT		ВЫХОД		EXIT	
▲	▲; CH+		▲		▲		▲		▲; CH+	
◀	◀; VOL-		◀		◀		◀		◀; VOL-	
OK	OK		OK		OK		OK		OK	
▶	▶; VOL+		▶		▶		▶		▶; VOL+	
▼	▼; CH-		▼		▼		▼		▼; CH-	
⌘; SETUP							☐		PVR LIST	
♪; TITLE	TV/RADIO		TV/RADIO		TV/RADIO		♫/☐		TV/RADIO	
☐	TEXT		TEXT		TELETEXT		☐		TTX	
GUIDE	EPG		EPG		EPG		ТВ ГИД		EPG	
⏻									TIME SHIFT	
☐	SUBTITLE		SUBTITLE		SUBTITLE		☐		SUBTITLE	
RED; ●	RED	REC ●	RED	●; REC	RED; TV/RADIO		RED	●	RED	RECORD
GREEN; ▶▶	GREEN		GREEN		GREEN; SUBTITLE		GREEN		GREEN	
YELLOW; ◀◀	YELLOW		YELLOW		YELLOW; AUDIO		YELLOW		YELLOW	
BLUE; ▶▶	BLUE		BLUE		BLUE; ASPECT		BLUE		BLUE	
☐	INFO		INFO		INFO		ИНФО		INFO	
☐	○; RECALL		RETURN		BACK		☐		BACK	
VOL -	VOL-		VOL-		VOL-		⏻		◀; VOL-	
VOL +	VOL+		VOL+		VOL+		⏻+		▶; VOL+	
CH V; ◀◀	CH-	◀◀; REC ●	CH-	◀◀; PREV	CH-		КАН V		▼; CH-	◀◀
CH ▲; ▶▶	CH+	▶▶; TV/RADIO	CH+	▶▶; NEXT	CH+		КАН ▲		▲; CH+	▶▶
+/; SAT	GOTO								GOTO	
CLEAR; X										
◀◀; ●	◀◀; FAV		◀◀; REV						◀◀	
▶▶; i	▶▶; PLAY/PAUSE		▶▶; PLAY/PAUSE				▶▶		▶▶	
▶▶; ?	▶▶; EPG		▶▶; FWD				▶▶		▶▶	
■; ⌘	■; STOP		■; STOP				■		■	
■; ⏻	■; PLAY/PAUSE		■; PLAY/PAUSE				■		■	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 282		Код 283		Код 284		Код 285		Код 286	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	▶▶		PG ▲		PAGE ▲		▶▶		▶▶	
AUDIO; NICAM	AUDIO		Ω; AUDIO				AUDIO		AUDIO	
VIDEO; SYS			V.FORMAT		TV/AUX		V-FORMAT			
▣; ZOOM			WIDE	Ⓚ; ZOOM	Ⓚ; ZOOM		ASPECT			
▼; TV	◀◀		PG ▼		PAGE ▼		◀◀		◀◀	
▣; ↻			▣; MOSAIC							
▣; LOCK			▣; FREEZE							
▲; FAV	FAV		Ⓚ; ZOOM						FAV	
○	○; POWER		○		○; POWER		○		○	
AV			→; ADVANCE		TV/SAT; MODE				USB	
⌘	⌘; MUTE		⌘; MUTE		MUTE		⌘		⌘	
MENU	MENU		MENU		▣; MENU		MENU		MENU	
EXIT	EXIT		EXIT		→; QUIT		EXIT		EXIT	
▲	▲; CH+		CH +		▲		▲		▲	
◀	◀; VOL-		V -		◀		◀		◀	
OK	OK		OK		OK		OK/LIST		OK	
▶	▶; VOL+		V +		▶		▶		▶	
▼	▼; CH-		CH -		▼		▼		▼	
*; SETUP			Ⓞ; GROUP				MEDIA		MEDIA	
♪; TITLE	TV/RADIO		Ⓞ/Ⓟ; TV/RAD		Ⓞ/Ⓟ		TV/RADIO		TV/RADIO	
▣	TEXT		▣; TEXT				TEXT		TTX	
GUIDE	EPG		◀; GUIDE		◀; EPG		EPG		EPG	
Ⓞ	SUBTITLE		Ⓞ; SLEEP				TIME SHIFT			
▣			▣; SUBTITLE				SUBT		SUBTITLE	
RED; ●	RED	REC	RED	●	RED		RED; PVR	REC	RED	REC
GREEN; ▶	GREEN		GREEN		GREEN		GREEN; V-FORMAT		GREEN	
YELLOW; ◀	YELLOW		YELLOW		YELLOW		YELLOW; ASPECT		YELLOW	
BLUE; ▶	BLUE		BLUE	▶; SLOW	BLUE		BLUE; TIMER		BLUE	
▣	INFO		i; INFO		i; INFO		INFO		INFO	
Ⓞ	○; RECALL		○; RECALL		Ⓞ; BACK		RECALL		BACK	
VOL -	VOL-		V -	VOL ▼	VOL -		VOL -		VOL -	
VOL +	VOL+		V +	VOL ▲	VOL +		VOL +		VOL +	
CH V; ◀◀	CH-	◀◀; REC	CH -		PR -		CH -	◀◀	CH -	◀◀
CH A; ▶▶	CH+	▶▶; TV/RADIO	CH +		PR +		CH +	▶▶	CH +	▶▶
⊖; SAT	GOTO		▣; FILE LIST				GOTO			
CLEAR; X							REPEAT			
◀◀; ○	◀◀; FAV		◀◀		F1		◀◀		◀◀	
▶; i	▶▶; PLAY/PAUSE		▶		F2		▶▶		▶	
▶▶; ?	▶▶; EPG		▶▶		F3		▶▶		▶▶	
■; X	■; STOP		■				■		■	
■; Ⓞ	■▶; PLAY/PAUSE		■				■▶		■	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 287		Код 288		Код 289		Код 290		Код 291	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	▶▶; NEXT		APP		▲		PG +		P	
AUDIO; NICAM	AUDIO		♫; MODE		Ⓞ		AUDIO		Ⓞ?	
VIDEO; SYS					V-MODE		SIGNAL		▣	
▣; ZOOM	Ⓞ; ZOOM; Ⓞ						ZOOM		V.FORMAT	
▼; TV	◀◀; PREV		TV		▼		PG -		P ◀◀	
▣; ↻	▣; PIP		▣						▣	
▣; LOCK			Ⓞ		PAUSE				✓	
▲; FAV			FAV		FAV		FAV		FAV	▲
○	○		○		○		POWER		○	
AV							TV/SAT		TV/RAD	
⌘	⌘; MUTE		⌘		⌘		MUTE		⌘	
MENU	▣; MENU		MENU; ▣		MENU		MENU		MENU	
EXIT	→; EXIT		EXIT; Ⓞ		EXIT		EXIT		EXIT	
▲	▲		▲		▲		▲; CH +		▲	
◀	◀		◀		◀		◀; VOL -		◀	
OK	OK		OK		OK; LIST		OK		OK	
▶	▶		▶		▶		▶; VOL +		▶	
▼	▼		▼		▼		▼; CH -		▼	
*; SETUP	Ⓞ; HOME		Ⓞ; SETUP		SHIFT		OPTION		RESOLUTION	
♪; TITLE			Ⓞ; TV/RAD		TV/RADIO		TV/R		TV/RAD	
▣			Ⓞ; TXT/SUB		TXT/SUB		TEXT		▣	
GUIDE			EPG; GUIDE		EPG		EPG		▣; EPG	
Ⓞ	Ⓞ; ROT		Ⓞ				SLEEP		SLEEP	
▣	SUBT; SUB		Ⓞ; KB		TXT/SUB		SUB		▣	
RED; ●	RED	●; REC	RED; F1	●; REC	RED; FAV	●; RECORD	RED; AUDIO		RED; ▣	●
GREEN; ▶	GREEN		GREEN; F2		GREEN; FIND		GREEN; SUB		GREEN; ▣	
YELLOW; ◀	YELLOW		YELLOW; F3		YELLOW;		YELLOW; TEXT		YELLOW; Ⓞ?	
BLUE; ▶	BLUE		BLUE; F4		BLUE; OPT		BLUE; SLEEP		BLUE; Ⓞ	
▣	i; INFO		INFO; Ⓞ		i; INFO		INFO		○; INFO	
Ⓞ	Ⓞ; RETURN		BACK; Ⓞ		← PR		BACK		○; RECALL	
VOL -	VOL -		VOLUME -		V -		VOL -		VOL -	
VOL +	VOL +		VOLUME +		V +		VOL +		VOL +	
CH V; ◀◀	CH -; CH ▼	◀◀; PREV	CHANNEL -	◀◀; PG UP	CH -		▼; CH -		CH V	◀◀
CH A; ▶▶	CH +; CH ▲	▶▶; NEXT	CHANNEL +	▶▶; PG DOWN	CH +		▲; CH +		CH A	▶▶
⊖; SAT	F				◀		SAT			
CLEAR; X	DEL		Ⓞ; DEL		◀				▣	
◀◀; ○	◀◀; REW		◀◀		◀◀				◀◀	
▶; i	▶▶; PLAY		▶▶		▶; PLAY				▶▶	
▶▶; ?	▶▶; FWD		▶▶		▶▶				▶▶	
■; X			■		■; STOP				■	
■; Ⓞ	■▶; PAUSE		■▶		PAUSE		PAUSE		■	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 292		Код 293		Код 294		Код 295		Код 296	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	PAGE +									
AUDIO; NICAM	LANG		МЕДИАПЛЕЕР; ⌂		⌂?		AUDIO			
VIDEO; SYS	V-FORMAT		КИНО; 🎬							
📺; ZOOM	ASPECT		ИНТЕРНЕТ; 🌐		ASPECT				4:3/16:9	
▼; TV	PAGE -								📺; LTV	
📺; ↻			ВИДЖЕТЫ; 📺		PSCAN		SCAN		ADD	
🔒; LOCK					Email		PAUSE		DELETE	
▲; FAV	FAV				FAV		FAV		FAV.; FAVORITE	
⊖	⊖; POWER		⊖		⊖		⊖; POWER		⊖	
AV	USB								AV/HDMI	
🔇	🔇; MUTE		🔇		🔇		🔇; MUTE		MUTE	
MENU	MENU		МЕНЮ		MENU		MENU		MENU	
EXIT	EXIT		ВЫХОД		EXIT		EXIT		🏠; BACK	
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀		◀		◀	
OK	OK		OK		OK/LIST		OK		OK	
▶	▶		▶		▶		▶		▶	
▼	▼		▼		▼		▼		▼	
🔗; SETUP			НАСТРОЙКИ; ⚙️		Fn		MP		SETUP	
🎵; TITLE	TV/RADIO		РАДИО; 📻		📻/📻		TV/RADIO		MEDIA	
📺	TTX		ТЕЛЕТ.СУБ.; 📺						🏠; HOME	
GUIDE	EPG		ТВ ГИД		EPG				CACHING	
⊖	TIMER				⊖				TS; TIME SHIFT	
📺	SUB-T		📺		REPEAT				SCREEN	
RED; ●	RED	●	RED	RED	RED; ⏮	●	RED; FAV		RED	
GREEN; ▶	GREEN		GREEN	GREEN	GREEN; 🔍		GREEN; SAT		GREEN	
YELLOW; ◀	YELLOW		YELLOW	YELLOW	YELLOW; 📺		YELLOW; AUDIO		YELLOW	
BLUE; ▶	BLUE		BLUE	BLUE	BLUE; 📺		BLUE; TV/RADIO		BLUE	
📺	INFO		ИНФО		INFO		INFO		INFO	
📺	RECALL		📺		RECALL		📺		📺	
VOL -	VOL -		🔊 -		🔊 -		VOL -		VOL -	
VOL +	VOL +		🔊 +		🔊 +		VOL +		VOL +	
CH V; ⏮	CH -	⏮	КАНАЛ V		P-		PAGE -		PAGE -	
CH A; ⏭	CH +	⏭	КАНАЛ A		P+		PAGE +		PAGE +	
⏪; SAT			★		GOTO		SAT		-/-	
CLEAR; X			📺							
⏮; ●	⏮		⏮		⏮				⏮	
▶; i	▶		▶		▶				▶	
▶; ?	▶		▶		▶				▶	
■; X	■		■		■				■	
⏸; ⏸	⏸; TIMESHIFT		⏸		⏸		PAUSE		⏸	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 297		Код 298		Код 299		Код 301		Код 302	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	▶▶; NEXT		P+		PAGE +					
AUDIO; NICAM	AUDIO		AUDIO		AUDIO		AUDIO		AUDIO	
VIDEO; SYS			PORTAL				STATUS			
📺; ZOOM			📺		ASPECT		16:9/4:3		ASPECT	
▼; TV	⏮; PREV		P-		PAGE -		TV/STB		TV/R	
📺; ↻	PVR LIST									
🔒; LOCK			USB				FIND			
▲; FAV	FAVOURITE		FAV		FAV		FAV		FAV	
⊖	⊖; STANDBY		⊖; POWER		⊖		⊖		⊖	
AV			📺		MODE		USB		USB	
🔇	🔇; MUTE		🔇		🔇		🔇		🔇	
MENU	MENU		MENU		MENU		MENU		MENU	
EXIT	EXIT		EXIT		EXIT		EXIT		EXIT	
▲	▲; CH+		▲		▲		▲		▲	
◀	◀; VOL-		◀		◀		◀		◀	
OK	OK		OK		OK		OK		OK	
▶	▶; VOL+		▶		▶		▶		▶	
▼	▼; CH-		▼		▼		▼		▼	
🔗; SETUP			LIST		📺		OPTION			
🎵; TITLE	TV/RADIO		TV/R		TV/📻		TV/RADIO		TV/R	
📺	TXT		TEXT		TXT		TXT		TXT	
GUIDE	EPG		EPG		EPG		EPG		EPG	
⊖			⊖		⊖		SLEEP		⊖	
📺	SUBTITLE		SUB		SUBT		SUBT		SUBT	
RED; ●	RED	●; PVR REC	RED	●	RED; SUBT	REC	RED; ●; REC	●; REC	RED; ASPECT	●
GREEN; ▶	GREEN		GREEN		GREEN; LIST		GREEN; ■; STOP		GREEN; TXT	
YELLOW; ◀	YELLOW		YELLOW		YELLOW; TXT		YELLOW; ■; ⏮	◀	YELLOW; SUBT	
BLUE; ▶	BLUE		BLUE		BLUE; AUDIO	▶	BLUE; ▶; PLAY	▶	BLUE; AUDIO	
📺	INFO		INFO		INFO		INFO		INFO	
📺	RECALL		📺		📺		📺		📺	
VOL -	VOL -		VOL -		VOL -		◀		◀	
VOL +	VOL +		VOL +		VOL +		▶		▶	
CH V; ⏮	CH-	⏮; PREV	CH -	⏮	CH -	⏮	P-		▼	⏮
CH A; ⏭	CH+	⏭; NEXT	CH +	⏭	CH +	⏭	P+		▲	⏭
⏪; SAT							TV/STB			
CLEAR; X	REPEAT									
⏮; ●	⏮; REV		⏮		⏮		⏮		⏮	
▶; i	▶; PLAY		▶		▶		▶; PLAY		▶	
▶; ?	▶; FWD		▶		▶		▶		▶	
■; X	■; STOP		■		■		■; STOP		■	
⏸; ⏸	⏸; PAUSE		⏸		⏸		⏸; PAUSE		⏸	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0/⊖		1, 2, ... 9, 0/🔍		1, 2, ... 9, 0/📺	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 303		Код 304		Код 305		Код 306		Код 307	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			▶▶		SAT				▶▶	
AUDIO; NICAM	AUDIO		AUDIO		LANG		AUDIO		🔊; AUDIO	
VIDEO; SYS										
📺; ZOOM									ZOOM; ⬇️	
▼; TV	TV		◀◀		TV				◀◀	
📺; 🔍									SEARCH	
🔒; LOCK					PAUSE		PVR			
▲; FAV			FAV		FAV		FAV		↖️	
⊖	⊖		⊖		⊖; POWER		⊖		⊖; POWER	
AV			USB		TV/SAT				MODE	
🔇	🔇		🔇; MUTE		🔇; MUTE		🔇		🔇	
MENU	MENU		MENU		MENU		MENU		☰; POP UP MENU	
EXIT	EXIT		EXIT		EXIT		EXIT		↵; RET.	
▲	▲		▲; CH+		▲		▲		▲	
◀	◀	<	◀; VOL-		◀		◀		◀	
OK	OK		OK		OK		OK		ENTER	
▶	▶	>	▶; VOL+		▶		▶		▶	
▼	▼		▼; CH-		▼		▼		▼	
🔗; SETUP	PVR						HOME		SETUP	
🎵; TITLE	RADIO		TV/RADIO; TV/R		RADIO		TV/RADIO		⬆️; TOP MENU	
📄	TEXT		TEXT		TEXT		TEXT		SELECT	
GUIDE	HELP		EPG		EPG		EPG			
⏸️			SUBTITLE				TIMER			
📺							SUB.T		⋮; SUBTITLE	
RED; ●	RED	REC	RED	●; REC	RED; LANG		RED	●	RED; A	●; REC
GREEN; ▶▶	GREEN		GREEN		GREEN; PAUSE		GREEN		GREEN; B	
YELLOW; ◀◀	YELLOW		YELLOW		YELLOW; SOUND		YELLOW		YELLOW; C	
BLUE; ▶▶	BLUE		BLUE		BLUE; EPG		BLUE		BLUE; D	
📄	INFO		INFO		INFO		INFO		i; INFO	
📺			📺; ⊖		RECALL		📺		📺; PORTAL; 📺	
VOL-	VOLUME-		VOL-		◀		VOL-		V-	
VOL+	VOLUME+		VOL+		▶		VOL+		V+	
CH V; ◀◀	BOUQUET V		CH-	◀◀	P-		PAGE-		P-	◀◀
CH A; ▶▶	BOUQUET A		CH+	▶▶	P+		PAGE+		P+	▶▶
✖; SAT	<		GOTO		SAT					
CLEAR; X	>		-				📺		←; CLEAR	
◀◀; ●	◀◀		◀◀; ▲				◀◀		◀◀	
▶▶; i	▶▶		▶▶				▶▶		▶▶	
▶▶; ?	▶▶		▶▶; 📺				▶▶		▶▶	
■; X	■		■				■		■	
■; ⬇️	■		■				■		■	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 308		Код 309		Код 310		Код 311		Код 312	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	STB				PAGE+		UHF		PAGE UP	
AUDIO; NICAM	🔊; LANG		AUDIO		AUDIO		🔊; AUDIO		AUDIO	
VIDEO; SYS					V-FORMAT		Y-TUBE		HDMI	
📺; ZOOM	📺		🔀; SHUFFLE		ASPECT		ZOOM			
▼; TV					PAGE-		TV		PAGE DOWN	
📺; 🔍							PIP			
🔒; LOCK							LIST			
▲; FAV	FAV				FAV		MEDIA		FAV	
⊖	⊖		⊖		⊖; POWER		⊖		⊖; STANDBY	
AV	AV				USB		LAN		USB	
🔇	🔇; MUTE		🔇; MUTE		🔇; MUTE		🔇		🔇; MUTE	
MENU	☰; MENU		🏠; HOME		MENU		☰; MENU		MENU	
EXIT	⌂; BACK				EXIT		→🏠; EXIT		EXIT	
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀		◀	<	◀	
OK	OK		ENTER		OK		OK	>	OK	
▶	▶				▶		▶		▶	
▼	▼		▼		▼		▼		▼	
🔗; SETUP	📺; OPTION						HOME			
🎵; TITLE	?; HELP				TV/RADIO		RADIO		TV/RADIO	
📄	📺; INTERACTIVE				TTX		📄; TELETEXT		TEXT	
GUIDE	📄; GUIDE				EPG		EPG		EPG	
⏸️	VOD				TIMER		⊖; TIMER			
📺	📺; SUB		SUBTITLE		SUB-T		📺; SUBTITLE		SUBTITLE; SUB	
RED; ●	RED	●	📺; REPEAT		RED	●	RED; R	●	RED; FAV	●; RECORD
GREEN; ▶▶	GREEN		A-B		GREEN		GREEN; G		GREEN; EPG	
YELLOW; ◀◀	YELLOW		↔️ SYNC SUBT.		YELLOW		YELLOW; Y		YELLOW; AUDIO	
BLUE; ▶▶	BLUE		→ SYNC SUBT.		BLUE		BLUE; B		BLUE; TV/R	
📄	i; INFO		INFO		INFO		INFO	HELP	INFO	
📺	P⏪; LAST		📺; RETURN		📺		PROV.			
VOL-	◀; VOL-		VOL-		VOL-		VOL-		VOL-	
VOL+	▶; VOL+		VOL+		VOL+		VOL+		VOL+	
CH V; ◀◀	PROG ▼	◀◀	◀◀; PGUP		CH-	◀◀	CH V		CH-	◀◀; PREV
CH A; ▶▶	PROG ▲	▶▶	▶▶; PGDN		CH+	▶▶	CH A		CH+	▶▶; NEXT
✖; SAT							📺; SAT			
CLEAR; X							END			
◀◀; ●	◀◀		◀◀		◀◀		◀◀		◀◀; REV	
▶▶; i	▶▶		▶▶		▶▶		▶▶		▶▶; PLAY/PAUSE	
▶▶; ?	▶▶		▶▶		▶▶		▶▶		▶▶; FWD	
■; X	■		■		■		■		■; STOP	
■; ⬇️	■		■		■		■		■; PLAY/PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 313		Код 314		Код 315		Код 316		Код 317	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	MARK		▶▶		SAVE T/SHIFT		▶▶		PG UP	
AUDIO ; NICAM	AUDIO		AUDIO		AUDIO		AUDIO		AUDIO	
VIDEO ; SYS	SEARCH		PVR		GAMES					
☐ ; ZOOM	TIMESHIFT		ASPECT	ZOOM	☺					
▼ ; TV	TV		◀◀		TV CHAT		◀◀		PG DN	
☐ ; ↻	PIP		LANG		☐		RES		SWAP	
☐ ; LOCK	VKEY		ZOOM		SPLIT FILE				M/P	
▲ ; FAV	HELP		FAV		FAV		FAV		FAV	
○	○		○		○		○ ; STANDBY		○	
AV					SOURCE		USB		USB	
✳	☒		☒		MUTE		☒ ; MUTE		☒	
MENU	MENU		MENU		MENU		MENU		MENU	
EXIT	EXIT		EXIT		EXIT		EXIT		EXIT	
▲	▲		▲		▲		▲ ; CH +		▲	
◀	◀		◀		◀		◀ ; VOL -		◀	
OK	OK		OK		OK		OK		OK	
▶	▶		▶		▶		▶ ; VOL +		▶	
▼	▼		▼		▼		▼ ; CH -		▼	
✳ ; SETUP	FILELIST				HELP		MEDIA			
♪ ; TITLE	RADIO		TV/RADIO		TV/RADIO		TV/RADIO		TV/RADIO	
☐	TEXT		TTX		RECLIST		TTX		TTX	
GUIDE	GUIDE		EPG		GUIDE		EPG		EPG	
⏸	TIMER		TIMER		CLOCK		TIMER		SLEEP	
☐	SUBTITLE		SUBT		☐		SUBTITLE		SUBTITLE	
RED ; ●	RED	●	RED	●	RED ; i	REC	RED	RECORD	RED	●
GREEN ; ▶▶	GREEN		GREEN		GREEN ; ☐		GREEN		GREEN	
YELLOW ; ◀◀	YELLOW		YELLOW		YELLOW ; ☐		YELLOW		YELLOW	
BLUE ; ▶▶	BLUE	▶▶	BLUE		BLUE ; FAV	SLOW	BLUE		BLUE	
☐	i		INFO		i		INFO		INFO	
☐	PLAYLIST		RECALL		LAST		BACK		RECALL	
VOL -	VOL -		◀		VOL -		◀ ; VOL -		VOL -	
VOL +	VOL +		▶		VOL +		▶ ; VOL +		VOL +	
CH V ; ◀◀	P -		▼	◀◀	CH -		▼ ; CH -	◀◀	CH -	◀◀
CH A ; ▶▶	P +		▲	▶▶	CH +		▲ ; CH +	▶▶	CH +	▶▶
+- ; SAT	<		GOTO	*	*					
CLEAR ; X	>				#					
◀◀ ; ●	<<		◀◀		◀◀		◀◀		◀◀	
▶▶ ; i	▶▶		▶▶		▶▶		▶▶		▶▶	
▶▶ ; ?	>>		▶▶		▶▶		▶▶		▶▶	
■ ; X	■		■		■		■		■	
■ ; ⏸	■		■		■		■		■	
■ ; ⏸	■		■		■		■		■	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 318		Код 319		Код 320		Код 321		Код 322	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	▶▶ ; SKIP		↑						▶▶ ; NEXT	
AUDIO ; NICAM	ALT AUDIO				AUDIO		AUDIO		L/R	
VIDEO ; SYS	VIDEOS		☐							
☐ ; ZOOM	ASPECT				ZOOM					
▼ ; TV	◀◀ ; REPLAY		↓		TV/RADIO		☐/☐		◀◀ ; PREV	
☐ ; ↻	SEARCH				FREEZE				AD	
☐ ; LOCK	DELETE				FAV				FAV	
▲ ; FAV	○		○		○		○		○ ; STANDBY	
AV									USB	
✳	MUTE		☒		☒		☒		☒ ; MUTE	
MENU	MENU		MENU		MENU		MENU		MENU	
EXIT	EXIT		☐		EXIT		BACK		EXIT	
▲	▲		▲		▲ ; CH+		▲		▲ ; CH+	
◀	◀		◀		◀ ; V-		◀		◀ ; VOL -	
OK	OK		OK		OK		OK		OK	
▶	▶		▶		▶ ; V+		▶		▶ ; VOL +	
▼	▼		▼		▼ ; CH-		▼		▼ ; CH -	
✳ ; SETUP	OPTIONS				ADD					
♪ ; TITLE	ENTER		TITLES		TV/RADIO		☐/☐		TV/RADIO	
☐	TELETEXT		TEXT						TEXT	
GUIDE	GUIDE		GUIDE				EPG		EPG	
⏸	RECENT									
☐	RECORDED TV								SUBT	
RED ; ●	RED ; A	● ; REC	RED	●	RED ; AUDIO		RED ; REC		RED	REC ; PVR
GREEN ; ▶▶	GREEN ; B		GREEN		GREEN ; ☐		GREEN ; AUDIO		GREEN	
YELLOW ; ◀◀	YELLOW ; C		YELLOW	◀◀	YELLOW ; LANG.		YELLOW ; STOP		YELLOW	
BLUE ; ▶▶	BLUE ; D		BLUE	▶▶	BLUE ; AUTOSCAN		BLUE		BLUE	
☐	i ; INFO		i		INFO		INFO		INFO	
☐	◀- ; BACK		☐		☐				☐ ; RECALL	
VOL -	VOLUME -		VOL -		◀ ; V-		◀ ; VOL -		◀ ; VOL -	
VOL +	VOLUME +		VOL +		▶ ; V+		▶ ; VOL +		▶ ; VOL +	
CH V ; ◀◀	CH/PAGE -		CH -		▼ ; CH-		▼ ; CH -	◀◀ ; PREV	▼ ; CH -	◀◀ ; PREV
CH A ; ▶▶	CH/PAGE +		CH +		▲ ; CH+		▲ ; CH +	▶▶ ; NEXT	▲ ; CH +	▶▶ ; NEXT
+- ; SAT	*		*		SAT		GOTO		GOTO	
CLEAR ; X	#		#							
◀◀ ; ●	◀◀ ; REW		◀◀		◀◀		◀◀		◀◀ ; REV	
▶▶ ; i	▶▶ ; PLAY		▶▶		▶▶		▶▶		▶▶ ; PLAY	
▶▶ ; ?	▶▶ ; FF		▶▶		▶▶		▶▶		▶▶ ; FWD	
■ ; X	■ ; STOP		■		■		STOP		■ ; STOP	
■ ; ⏸	■ ; PAUSE		■		■		■		■ ; PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 323		Код 324		Код 325		Код 326		Код 327	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	▶▶		PAGE +		▶▶		▶▶		P +	
AUDIO ; NICAM	AUDIO		LANG		AUDIO		AUDIO		AUDIO	
VIDEO ; SYS			V-FORMAT							
☐ ; ZOOM	V-FORMAT		ASPECT				ZOOM		↶	
▼ ; TV	◀◀		PAGE -		◀◀		◀◀		P -	
☐ ; ↻			3D							
☐ ; LOCK									PAUSE	
▲ ; FAV	FAV		FAV		FAV		FAV		FAV	
○	○		○ ; POWER		○		○		○	
AV	USB		USB		USB		USB			
⌘	MUTE		⌘ ; MUTE		⌘		⌘		⌘	
MENU	MENU		MENU		MENU		MENU		MENU	
EXIT	EXIT		EXIT		EXIT		EXIT		EXIT	
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀		◀		◀	
OK	OK		OK		OK		OK		OK	
▶	▶		▶		▶		▶		▶	
▼	▼		▼		▼		▼		▼	
⌘ ; SETUP							PVR LIST			
♪ ; TITLE	TV/RADIO		TV/RADIO		TV/RADIO		TV/RADIO		TV/RAD	
☐	TEXT		TTX		TTX		TTX/CC			
GUIDE	EPG		EPG		EPG		EPG		EPG	
⌚			TIMER				TIME SHIFT			
☐	SUBTITLE		SUB-T		SUBTITLE		SUB			
RED ; ●	RED	REC	RED ; PVR	●	RED ; TV/RADIO	REC	RED	REC	RED	
GREEN ; ▶▶	GREEN		GREEN ; V-FORMAT		GREEN ; MEDIA		GREEN		GREEN ; ↶	
YELLOW ; ◀◀	YELLOW		YELLOW ; ASPECT		YELLOW ; AUDIO		YELLOW		YELLOW	
BLUE ; ▶▶	BLUE		BLUE ; TIMER		BLUE		BLUE		BLUE ; ☐	
☐	i		INFO		INFO		i		INFO	
☐	RECALL		BACK		BACK		☐		RCL	
VOL -	VOL -		VOL -		◀		◀		◀	
VOL +	VOL +		VOL +		▶		▶		▶	
CH V ; ◀◀	PAGE -	◀◀	CH -	◀◀	▼	◀◀	▼	◀◀	▼	
CH A ; ▶▶	PAGE +	▶▶	CH +	▶▶	▲	▶▶	▲	▶▶	▲	
+- ; SAT			GOTO				GOTO			
CLEAR ; X			REPEAT							
◀◀ ; ●	◀◀		◀◀		◀◀		◀◀			
▶▶ ; i	▶▶		▶▶		▶▶		▶▶			
▶▶ ; ?	▶▶		▶▶		▶▶		▶▶			
■ ; X	■		■		■		■			
■ ; ↻	■		■		■		■			
■ ; ⏸	■		■ ; TIMESHIFT		■		■			
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 328		Код 329		Код 330		Код 331		Код 332	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	▲		LANG		▶▶		▶▶		▶▶ ; TV/RADIO	
AUDIO ; NICAM	AUDIO		AUDIO		AUD		АУДИО		AUDIO	
VIDEO ; SYS			V-FORMAT		HDMI				V-FORMAT	
☐ ; ZOOM	ZOOM		ZOOM						ASPECT	
▼ ; TV	▼		TV/R		◀◀		◀◀		◀◀ ; REC	
☐ ; ↻										
☐ ; LOCK	PAUSE									
▲ ; FAV			FAVOR		FAV		ИЗБРН		FAV	
○	○		○		○		○		○ ; POWER	
AV			USB		USB		USB		USB	
⌘	⌘		MUTE		⌘		⌘		⌘ ; MUTE	
MENU	MENU		MENU		MENU		МЕНЮ		MENU	
EXIT	EXIT		EXIT		EXIT		ВЫХОД		EXIT	
▲	▲		▲		CH + ; ▲		▲		▲ ; CH+	
◀	◀		◀		VOL - ; ◀		◀		◀ ; VOL-	
OK	OK		OK		OK		OK		OK	
▶	▶		▶		VOL + ; ▶		▶		▶ ; VOL+	
▼	▼		▼		CH - ; ▼		▼		▼ ; CH-	
⌘ ; SETUP	9PIC		RECALL				МЕДИА			
♪ ; TITLE	TV/RADIO		TV/R		TV RA		ТВ/РАДИО		TV/RADIO	
☐	LIST		TEXT		TEXT		ТЕЛТЕКСТ		TEXT	
GUIDE	ADD		EPG		EPG		ТЕЛЕГИД		EPG	
⌚			REPEAT						TIMER	
☐			SUB-T		SUB		СУБТИТРЫ		SUBTITLE	
RED ; ●			RED ; ◀◀	●	RED ; FAV	REC	RED ; ТВ/РАДИО	REC	RED ; USB	REC
GREEN ; ▶▶			GREEN ; ◀◀		GREEN ; EPG		GREEN ; МЕДИА		GREEN ; V-FORMAT	
YELLOW ; ◀◀			YELLOW ; ▶▶		YELLOW ; AUD		YELLOW ; АУДИО		YELLOW ; ASPECT	
BLUE ; ▶▶			BLUE ; ▶▶		BLUE ; TV RA		BLUE ; РАСП		BLUE ; TIMER	
☐	INFO		INFO		INFO		ИНФО		INFO	
☐	RECALL		LAST				НАЗАД		☐ ; RECALL	
VOL -	VOLUME -		VOL -		VOL - ; ◀		◀		VOL-	
VOL +	VOLUME +		VOL +		VOL + ; ▶		▶		VOL+	
CH V ; ◀◀	PROGRAM -		PAGE -	◀◀	CH - ; ▼	◀◀	▼	◀◀	CH-	◀◀
CH A ; ▶▶	PROGRAM +		PAGE +	▶▶	CH + ; ▲	▶▶	▲	▶▶	CH+	▶▶
+- ; SAT			GOTO						GOTO	
CLEAR ; X										
◀◀ ; ●	▼		◀◀		◀◀		◀◀		◀◀ ; FAV	
▶▶ ; i			▶▶ / ■		▶▶		▶▶		▶▶ ; PLAY/PAUSE	
▶▶ ; ?	▲		▶▶		▶▶		▶▶		▶▶ ; EPG	
■ ; X			■		■		■		■ ; STOP	
■ ; ↻			■		■		■		■ ; PLAY/PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 333		Код 334		Код 335		Код 336		Код 337	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD			▶▶		▶▶ ; P.D		P+		PG UP	
AUDIO ; NICAM	AUDIO		AUDIO		AUDIO		AUDIO		AUDIO	
VIDEO ; SYS	V-FORMAT									
☐ ; ZOOM	WIDE		ZOOM		ZOOM		☐			
▼ ; TV			◀◀		◀◀ ; P.U		P-		PG DN	
☐ ; ↻			PVR LIST				AUTO SCAN			
☐ ; LOCK										
▲ ; FAV			FAV		FAV		FAV		FAV	
○	○		○ ; STANDBY		○		○		○	
AV			USB		USB					
⌘			⌘ ; MUTE		⌘		⌘		⌘	
MENU	МЕНЮ		MENU		MENU		MENU		MENU	
EXIT	ВЫХОД		EXIT		EXIT		EXIT		EXIT	
▲	▲		CH+		▲		CH+		▲ ; CH+	
◀	◀		VOL-		◀		VOL-		◀ ; VOL-	
OK	OK		OK		OK		OK		OK	
▶	▶		VOL+		▶		VOL+		▶ ; VOL+	
▼	▼		CH-		▼		CH-		▼ ; CH-	
⌘ ; SETUP			TV/RADIO		TV/R		TV/R		PVR	
♪ ; TITLE			TTX		TTX		TTX		TV/RADIO	
☐	СПИСОК		EPG		EPG		EPG		TTX	
GUIDE	ТВ-ГИД		TIME SHIFT		T.S.				EPG	
☐	☐ ; MAIL		SUBTITLE		SUB				SUB-T	
RED ; ●	RED	● ; REC	RED	RECORD	RED ; EPG	●	RED ; AUDIO		RED ; ◀◀	●
GREEN ; ▶▶	GREEN		GREEN		GREEN ; AUDIO		GREEN ; ☐		GREEN ; ▶▶	
YELLOW ; ◀◀	YELLOW		YELLOW		YELLOW ; SUB		YELLOW ; P+		YELLOW	
BLUE ; ▶▶	BLUE		BLUE		BLUE ; T.S.		BLUE ; P-		BLUE ; PVR	
☐	ИНФО		INFO		INFO		INFO		INFO	
☐	☐ ; НАЗАД		BACK		RECALL		☐		RECALL	
VOL -	V-		VOL-		◀		VOL-		◀ ; VOL-	
VOL +	V+		VOL+		▶		VOL+		▶ ; VOL+	
CH V ; ◀◀	CH-	◀◀	CH-	◀◀	▼	◀◀ ; P.U	CH-		▼ ; CH-	PG DN
CH A ; ▶▶	CH+	▶▶	CH+	▶▶	▲	▶▶ ; P.D	CH+		▲ ; CH+	PG UP
± ; SAT			GOTO				SAT			
CLEAR ; X										
◀◀ ; ○	◀◀ ; REW		◀◀		◀◀ ; FB				◀◀	
▶▶ ; i	▶▶ ; PLAY/PAUSE		▶▶		▶▶		▶▶ ; II		▶▶	
▶▶ ; ?	▶▶ ; FWD		▶▶		▶▶ ; FF				▶▶	
■ ; X	■ ; STOP		■		■		■		■	
■ ; ⬇	■ ; PLAY/PAUSE		■		■		■		■	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 338		Код 339		Код 340		Код 341		Код 342	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	PAGE ▲		▶▶		▶▶		F1		▶▶	
AUDIO ; NICAM	AUDIO		LANG		AUDIO		AUDIO		AUDIO	
VIDEO ; SYS	F1		V-FORMAT				q ; FIND			
☐ ; ZOOM	ZOOM		ASPECT				V.FORMAT		P.ADJ	
▼ ; TV	PAGE ▼		◀◀		◀◀		TV/SAT		◀◀	
☐ ; ↻	FIND						☐ ; FOLDER		SEARCH	
☐ ; LOCK	PAUSE						☐ ; PLAY M.		LIST	
▲ ; FAV	FAV		FAV		FAV		FAV		FAV	
○	POWER		○		○		○ ; POWER		○	
AV	USB						⌘ ; USB		MODE	
⌘	⌘		MUTE		MUTE		⌘ ; MUTE		⌘	
MENU	MENU		MENU		MENU		MENU		MENU	
EXIT	EXIT		EXIT		EXIT		EXIT		EXIT	
▲	▲		▲ ; CH+		▲		▲		▲ ; CH+	
◀	◀		◀ ; VOL-		◀		◀		◀ ; VOL-	
OK	OK		OK		OK		OK		OK	
▶	▶		▶ ; VOL+		▶		▶		▶ ; VOL+	
▼	▼		▼ ; CH-		▼		▼		▼ ; CH-	
⌘ ; SETUP	MODE						OPTION		PICT	
♪ ; TITLE	TV/R		TV/RADIO		TV/RADIO		TV/RADIO		TV/RADIO	
☐	TXT		TTX		TEXT		TTX		TEXT	
GUIDE	EPG		EPG		EPG		EPG		EPG	
☐	SLEEP	TIME	TIMER				☐	Tms	SLEEP	
☐	SUB		SUB-T		SUBTITLE		SUBTITLE		SUBTITLE	
RED ; ●	RED ; AUDIO	●	RED ; PVR	REC	RED	REC	RED ; AUDIO	● ; REC	RED	●
GREEN ; ▶▶	GREEN ; PAUSE		GREEN ; V-FORMAT		GREEN		GREEN ; OPTION		GREEN	
YELLOW ; ◀◀	YELLOW ; ZOOM		YELLOW ; ASPECT		YELLOW		YELLOW	◀◀	YELLOW	
BLUE ; ▶▶	BLUE ; INFO		BLUE ; TIMER		BLUE		BLUE	▶▶	BLUE	
☐	DISPLAY	INFO	INFO		i		INFO		INFO	
☐	RECALL		RECALL		RECALL		C ; RECALL		☐	
VOL -	VOL -		VOL -		VOL -		VOL -		◀ ; VOL-	
VOL +	VOL +		VOL +		VOL +		VOL +		▶ ; VOL+	
CH V ; ◀◀	CH -	◀◀	PAG -	◀◀	PAGE -	◀◀	PAGE -	◀◀ ; PREV	▼ ; CH-	◀◀
CH A ; ▶▶	CH +	▶▶	PAG +	▶▶	PAGE +	▶▶	PAGE +	▶▶ ; NEXT	▲ ; CH+	▶▶
± ; SAT	SAT		GOTO		SAT		SAT			
CLEAR ; X			REPEAT		L/M		WHITE			
◀◀ ; ○	◀◀		◀◀		◀◀		◀◀ ; PAGE-		◀◀	
▶▶ ; i	▶▶		▶▶		▶▶		▶▶ ; PLAY		▶▶	
▶▶ ; ?	▶▶		▶▶		▶▶		▶▶ ; PAGE+		▶▶	
■ ; X	■		■		■		■ ; STOP		■	
■ ; ⬇	■		■		■		■ ; PAUSE		■	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0/⌘		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 343		Код 344		Код 345		Код 346		Код 347	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	▶▶		P ▲				▶▶; NEXT			
AUDIO; NICAM	AUDIO		AUDIO				◀; AUDIO			
VIDEO; SYS										
☐; ZOOM			ZOOM		Q		☐; ZOOM		☐	
▼; TV	◀◀		P ▼				◀◀; PREV			
☐; ↻			USB				?; SEARCH			
☐; LOCK			PAUSE				◌; ANGLE/ROT.			
▲; FAV	FAV		FAV		↵		▲			
○	○; POWER		○		○		○		○ STB	
AV	USB		MODE				☐; MODE			
✳	☐		☐		☐		☐		☐	
MENU	MENU		MENU		MENU		☐; POP UP/MENU		☐ DOM.RU	
EXIT	EXIT		EXIT		BACK		☐; RETURN		EXIT	
▲	▲; CH+		CH ▲		▲		▲		▲	
◀	◀; VOL-		VOL ◀		◀		◀		<	
OK	OK/LIST		OK		OK		ENTER		OK	
▶	▶; VOL+		VOL ▶		▶		▶		>	
▼	▼; CH-		CH ▼		▼		▼		v	
✳; SETUP			FIND		☐		☐; SETUP			
♪; TITLE			☐/♯		☐		URL; TOP MENU			
☐	TTX				☐				☐	
GUIDE	EPG		EPG		EPG				ТВ-ГИД	
○	▶▶; TIME SHIFT		TIMER						Q	
☐	SUBT.		SUB	F4	S.INFO		☐; SUBTITLE			
RED; ●	RED	●	RED; AUDIO	●	RED		RED; A		RED	●
GREEN; ▶	GREEN		GREEN; ZOOM	F1	GREEN		GREEN; B		GREEN	
YELLOW; ◀	YELLOW		YELLOW; INFO	F2	YELLOW		YELLOW; C	◀; SLOW REW	YELLOW	
BLUE; ▶	BLUE		BLUE; PAUSE	F3	BLUE		BLUE; D	▶; SLOW FWD	BLUE	
☐	INFO		DISP		INFO		i; INFO		i	
☐	RECALL		☐		☐		☐; RETURN		☐	
VOL -	◀; VOL-		VOL ◀		VOL -		V -		◀	
VOL +	▶; VOL+		VOL ▶		VOL +		V +		▶	
CH V; ◀◀	▼; CH-	◀◀	CH ▼	◀◀	CH -		P -	◀◀; PREV	CH V	
CH ▲; ▶▶	▲; CH+	▶▶	CH ▲	▶▶; SUB	CH +		P +	▶▶; NEXT	CH ▲	
+-; SAT	GOTO		SAT				CAP/NUM; SELECT			
CLEAR; X					DEL		+-; CLEAR			
◀◀; ●	◀◀		◀◀; TIMER		◀◀		◀◀; REW		◀◀	
▶; i	▶▶; TIME SHIFT		▶▶		▶▶		▶▶; PLAY		▶▶	
▶▶; ?	▶▶		▶▶		▶▶		▶▶; FWD		▶▶	
■; X	■		■		■		■; STOP		■	
■; ⏸	▶▶; TIME SHIFT		■		■		■/▶▶; PAUSE/STEP		■	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к SAT устройствам

Кнопки пульта IRC SAT F	Код 348		Код 349		Код 350		Код 351		Код 352	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	KODI		▶▶; TV/RADIO		▶▶; RADIO		PAGE +			
AUDIO; NICAM	AUDIO		AUDIO		AUDIO		AUDIO			
VIDEO; SYS	DLNA				FORMAT		V-FORMAT			
☐; ZOOM	WEB				ASPECT		ASPECT			
▼; TV	IPTV		◀◀; REC		◀◀; REC		PAGE -		TV	
☐; ↻	☐									
☐; LOCK							REPEAT			
▲; FAV	FAV		FAV		FAV		FAV			
○	○		○; POWER		○		○; STANDBY		○	
AV					USB					
✳	MUTE		☐; MUTE		☐		☐; MUTE		☐	
MENU	MENU		MENU		MENU		MENU		MENU	
EXIT	EXIT		EXIT		EXIT		EXIT		BACK	
▲	▲		▲; CH+		▲; CH+		▲; CH+		▲	
◀	◀		◀; VOL-		◀; VOL-		◀; VOL-		◀	
OK	OK		OK		OK		OK		OK; ▷	
▶	▶		▶; VOL+		▶; VOL+		▶; VOL+		▶	
▼	▼		▼; CH-		▼; CH-		▼; CH-		▼	
✳; SETUP	HOME								←	
♪; TITLE	TV/R		TV/RADIO		RADIO		TV/RADIO		→	
☐	REC.LIST		TEXT		TTX		TTX		TEXT	
GUIDE	EPG		EPG		EPG		EPG			
○	TIME SHIFT		TIMER		TIMER		TIMER			
☐	SUBT		SUBTITLE		SUB		SUB-T			
RED; ●	RED; TTX	REC	RED	REC	RED; USB	REC	RED; PVR	●	RED	●; REC
GREEN; ▶	GREEN; SUBT		GREEN		GREEN; FORMAT		GREEN; V-FORMAT		GREEN	
YELLOW; ◀	YELLOW; REC		YELLOW		YELLOW; ASPECT		YELLOW; ASPECT		YELLOW	
BLUE; ▶	BLUE; TIME SHIFT		BLUE		BLUE; TIMER		BLUE; TIMER		BLUE	
☐	INFO		INFO		INFO		INFO		INFO	
☐	RECALL		☐; RECALL		RECALL		RECALL		BACK	
VOL -	VOL -		◀; VOL-		◀; VOL-		◀; VOL-		◀	
VOL +	VOL +		▶; VOL+		▶; VOL+		▶; VOL+		▶	
CH V; ◀◀	PAGE -	◀◀	▼; CH-	◀◀; REC	▼; CH-	◀◀; REC	▼; CH-	◀◀; PREV	↓	
CH ▲; ▶▶	PAGE +	▶▶	▲; CH+	▶▶; TV/RADIO	▲; CH+	▶▶; RADIO	▲; CH+	▶▶; NEXT	↑	
+-; SAT	SAT		GOTO		GOTO		GOTO		←	
CLEAR; X	DEL								→	
◀◀; ●	◀◀		◀◀; FAV		◀◀		◀◀; REV		◀◀	
▶; i	▶▶		▶▶; PLAY/PAUSE		▶▶		▶		▷	
▶▶; ?	▶▶		▶▶; EPG		▶▶		▶▶; FWD		▶▶	
■; X	■		■; STOP		■		■		■	
■; ⏸	▶▶; TIME SHIFT		▶▶; PLAY/PAUSE		▶▶		■/▶▶; TIME SHIFT		■	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC SAT F к TV устройствам

Кнопки пульта IRC SAT F	Коды 501-798	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM		
VIDEO ; SYS		
☐ ; ZOOM		
▼ ; TV		
⏪ ; ↻		
☒ ; LOCK		
▲ ; FAV		
⏻	POWER ; ⏻	
AV	TV/VIDEO ; TV/AV	
⊗	MUTE ; ⊗	
MENU		
EXIT		
▲		
◀		
OK		
▶		
▼		
⌘ ; SETUP		
🎵 ; TITLE		
☐		
GUIDE		
⏻		
☐		
RED ; ●		
GREEN ; ▬		
YELLOW ; ◀		
BLUE ; ▶		
☐		
☐		
VOL -	VOLUME ▼ ; ▾-	
VOL +	VOLUME ▲ ; ▸+	
CH V ; ◀◀	CHANNEL ▼ ; P -	
CH ▲ ; ▶▶	CHANNEL ▲ ; P +	
⊕ ; SAT		
CLEAR ; X		
◀◀ ; ●		
▶▶ ; i		
▶▶ ; ?		
■ ; X		
▬ ; ⏻		
1, 2, ... 9, 0	1, 2, ... 9, 0	