

Приложение IRC 01 F (версия 25.12.08 11:02)

Модели оригинальных пультов и соответствующие им коды пульта IRC приведены в разделе "Коды пульта IRC 01 F".

Функции всех кнопок для каждого кода пульта IRC можно узнать из таблиц данного приложения.

Пульт IRC может иметь дополнительные функции (если указаны в столбце "Доп. функция"). Доступ к ним осуществляется при помощи кнопки **SHIFT** (см. в инструкции рис.1, п.16). Для доступа к дополнительным функциям нажмите кнопку **SHIFT** и, **удерживая её нажатой**, нажмите ту кнопку, дополнительная функция которой Вам необходима.

После первой установки батареек

Кнопка устройства пульта IRC	Код пульта IRC	Кнопка устройства пульта IRC	Код пульта IRC
TV	101	SHIFT + TV*	105
VCR	102	SHIFT + VCR*	106
AUX	103	SHIFT + AUX*	107
SAT	104	SHIFT + SAT*	108

* Нажмите кнопку **SHIFT** и, удерживая её нажатой, нажмите и отпустите одну из кнопок пульта: TV, VCR, AUX или SAT.

Доступные коды пульта IRC 01 F

Номер базы кодов (диапазон кодов)	Устройство базы кодов	Доступные коды пульта IRC
1 (101-199)	TV	101 - 119
2 (201-299)	VCR	201 - 207
3 (301-399)	AUX	301 - 323
4 (401-499)	-	Нет
5 (501-599)	TV	501 - 599
6 (601-699)	TV	601 - 699
7 (701-799)	TV	701 - 765
8 (801-899)	SAT	801 - 899
9 (901-999)	SAT	901 - 999

Коды пульта IRC 01 F

Коды к устройствам

Модель*	Устр-во	Код
210-Y8810	TV	112
22LE3110	TV	117
32FLE9800	TV	118
40FLE9600	TV	119
42LE71213	TV	114
HOF12H057GPD10	TV	111
HOF13K745GPD1	TV	115
HOF13K745GPD1-W	TV	115
HOF14J016GPD10	TV	115
HOF18A910GPD16	TV	115
JH-11370	TV/AUX	110
JH-11490	TV	115
JH-16440	TV	115
RC-5VP06	VCR	201
RC-5VP07	VCR	201
RC-5VT03	TV	106
RC-6AS01	AUX, CD, DVD	301
RC-6AS09	AUX, CD, DVD	301
RC-6AS14	AUX, CD, DVD	301
RC-6AT03	AUX, CD, DVD	303
RC-6VT01	TV	101
RC-6VT05	TV	101
RC-6VT06	TV	101
RC-7AS06	AUX, CD, DVD	301
RC-7AS08	AUX, CD, DVD	301
RC-7AS09	AUX, CD, DVD	301
RC-7VC01	TV/VCR	105
RC-7VR11	VCR	206
RC-8AT05	AUX, CD, DVD	303
RC-8VP02	VCR	201
RC-A950LE (CD)	AUX, CD, DVD	321
RC-A950LE (TAPE)	AUX, CD, DVD	322
RC-AAS01	AUX, CD, DVD	306
RC-AAS11	AUX, CD, DVD	301
RC-AAT11	AUX, CD, DVD	307
RC-AAT20	AUX, CD, DVD	301
RC-AAT22	AUX, CD, DVD	308
RC-AVT02	TV	109
RC-BAR01	AUX, CD, DVD	323
RC-BAS03	AUX, CD, DVD	301
RC-BAS11	AUX, CD, DVD	301
RC-BVR08	VCR	205
RC-C202	AUX, CD, DVD	313
RC-C950	AUX, CD, DVD	316
RC-CAS01	AUX, CD, DVD	301

Модель	Устр-во	Код
RC-CAS02	AUX, CD, DVD	301
RC-CAS03	AUX, CD, DVD	301
RC-CAS10	AUX, CD, DVD	301
RC-CD2	AUX, CD, DVD	303
RC-EX08	AUX, CD, DVD	307
RC-T1000	TV/VCR	107
RC-T1400E	TV/VCR	102
RC-T1400KE AE	TV/VCR	108
RC-T1410	TV/VCR	102
RC-T145	AUX, CD, DVD	304
RC-T145 (AUDIO)	AUX, CD, DVD	305
RC-T148	AUX, CD, DVD	304
RC-T148 (AUDIO)	AUX, CD, DVD	305
RC-T2000	TV/VCR	107
RC-T2001	TV	104
RC-T501	AUX, CD, DVD	301
RC-T511 (CD)	AUX, CD, DVD	319
RC-T511 (DECK)	AUX, CD, DVD	320
RC-T514	AUX, CD, DVD	301
RC-T514	AUX, CD, DVD	301
RC-TC100	VCR	201
RC-TC141KE	TV	101
RC-TC400	VCR	201
RC-TE102S	VCR	204
RC-TE212	VCR	201
RC-TE212E	VCR	201
RC-TE313	VCR	201
RC-TE515	VCR	201
RC-TER1	VCR	203
RC-TER1	VCR	203
RC-TF150	VCR	201
RC-TFK500	VCR	206
RC-TFX600	VCR	206
RC-TG07	VCR	201
RC-TG100	VCR	201
RC-TG50P	VCR	201
RC-TG75P	VCR	201
RC-TG97	VCR	201
RC-TM10	VCR	204
RC-TN320EX	AUX, CD, DVD	301
RC-TN520EX	AUX, CD, DVD	301
RC-TN55F (CD)	AUX, CD, DVD	319
RC-TN55F (DECK)	AUX, CD, DVD	320
RC-TN990	AUX, CD, DVD	301
RC-TN999	AUX, CD, DVD	301

Модель	Устр-во	Код
RC-TT1420K	TV/VCR	105
RC-TT1420KER	TV/VCR	105
RC-TV2	TV	103
RC-TXE10	VCR	201
RC-TXG200	VCR	206
RC-TXG700	VCR	206
RC-TXG710	VCR	206
RC-TZ3000ML (CD)	AUX, CD, DVD	319
RC-TZ3000ML (DECK)	AUX, CD, DVD	320
RC-TZ650	AUX, CD, DVD	301
RC-TZ7000ML (CD)	AUX, CD, DVD	319
RC-TZ7000ML (DECK)	AUX, CD, DVD	320
RC-TZ720	AUX, CD, DVD	301
RC-TZ800	AUX, CD, DVD	301
RC-TZ95ML	AUX, CD, DVD	302
RC-W101 (DECK 1)	AUX, CD, DVD	314
RC-W101 (DECK 2)	AUX, CD, DVD	315
RC-ZAS01	AUX, CD, DVD	301
RC-ZAS02	AUX, CD, DVD	301
RC-ZAS04	AUX, CD, DVD	306
RC-ZAS05	AUX, CD, DVD	306
RC-ZAS10	AUX, CD, DVD	306
RC-ZAS15	AUX, CD, DVD	306
RC-ZAS17	AUX, CD, DVD	301
RC-ZVT03	TV	101
RC-ZVT03C	TV	101
RC-ZVT09	TV	101
RC-ZVT10	TV	101
RC-ZVT16	TV	101
RM-Z1S002	AUX, CD, DVD	312
RM-Z1S010	AUX, CD, DVD	307
RM-Z20001	AUX, CD, DVD	301
RM-Z20002	AUX, CD, DVD	309
RM-Z20004	AUX, CD, DVD	301
RM-Z20008	AUX, CD, DVD	311
RM-Z20010	AUX, CD, DVD	309
RM-Z20012	AUX, CD, DVD	309
RM-Z20013	AUX, CD, DVD	310
RM-Z20018	AUX, CD, DVD	301
RM-Z20019	AUX, CD, DVD	317
RM-Z20020	AUX, CD, DVD	317
RM-Z20024	AUX, CD, DVD	317
RM-Z20027	AUX, CD, DVD	317
RM-Z20051	AUX, CD, DVD	310
TV-VCR-01	TV/VCR	108

Модель	Устр-во	Код
VCR-01	VCR	207
VCR-02	VCR	202
Y-72C	TV	116
YS52D-B	TV	113

* По каталогу «IRC»

Коды к TV устройствам различных марок

Марка	Код
AEG	544
AIWA	502, 503, 523, 528, 579, 634, 678, 706, 710, 712, 716
AKAI	501, 503, 512, 516, 520, 522, 524, 525, 537, 538, 540, 545, 546, 547, 550, 571, 572, 582, 583, 584, 585, 596, 598, 608, 613, 626, 652, 673, 691, 704, 708, 711, 722, 731
AKIRA	511, 514, 516, 522, 524, 525, 537, 538, 541, 545, 547, 556, 577, 586, 594, 597, 598, 601, 623, 626, 629, 631, 649, 666, 680, 689, 690, 693, 699, 717, 739
AMCOL	501, 525, 545, 747
ANITECH	501, 525, 616, 726
ATLANTA	501, 751
AVEST	537, 538, 539
BANG & OLUFSEN	728, 737
BBK	522, 551, 594, 597, 684, 701
BEKO	525, 530, 535, 559, 723, 742
BIGSTON	501, 503
BLAUPUNKT	512
BORK	525, 547, 646
BRAND	711
BROKSONIC	501
CAMERON	538, 550, 567, 675, 697, 702
CASIO	529, 705, 706
CASKA	761
CHANGHONG	516, 596, 642
CLATRONIC	501, 545, 559, 571, 742
CONTEC	501, 603, 604, 613
CORTLAND	644
CROWN	501, 503, 511, 524, 525, 530, 571
DAEWOO	501, 508, 518, 520, 525, 526, 536, 538, 539, 546, 565, 571, 576, 598, 613, 685, 687, 692
DARTLAND	501
DAYTRON	501
DEXP	516, 579, 596, 684, 702
DIGITAL	547
DISTAR	562, 616
DNS	596, 702, 708
DOFFLER	684, 708
DUAL	746
ELEKTA	501, 503, 520, 525, 527, 615
ELEKTRONIKA	583
ELENBERG	538, 545, 550, 565, 567, 579, 581, 644, 655, 676, 683, 717
EPLUTUS	537, 644, 677, 682, 697, 724
ERC	537, 631, 764
ERISSON	511, 514, 516, 525, 526, 537, 538, 541, 550, 556, 561, 568, 586, 596, 599, 623, 626, 629, 631, 711, 712, 714, 739, 747
EVGO	538, 540, 630
FINLUX	501, 511, 583, 589, 608, 732, 758
FUJITSU	544, 573
FUNAI	501, 502, 503, 504, 505, 525, 537, 538, 581, 603, 764
FUSION	596, 642, 699, 705, 706
GBS	501, 520, 525, 571, 583
GENERAL	537, 556
GOLD STAR - LG	501, 512, 518, 525, 527, 559, 570, 583, 584, 589, 609, 613, 642, 706, 712, 742, 750, 765
GRUNDIG	501, 512, 525, 606, 662, 718, 719, 733
HAIER	518, 526, 561, 574, 657, 667, 669, 707
HAPPY	501
HARPER	706, 712
HCM	501, 503, 525
HELIX	701, 702, 708
HIL	503
HISENSE	525
HITACHI	501, 515, 518, 522, 525, 537, 544, 548, 554, 578, 584, 587, 588, 604, 613, 640, 729, 749
HORIZONT	525, 540, 545, 550, 559, 583, 664, 672
HPC	546
HYUNDAI	516, 518, 522, 525, 526, 537, 538, 540, 541, 546, 547, 550, 556, 580, 596, 597, 599, 626, 642, 648, 650, 655, 705, 711, 712, 714, 717, 760
INNO-HIT	501, 525, 571
IRBIS	596, 714
IVA (IBA)	537, 561, 637
IZUMI	516, 537, 596, 663, 691, 695, 703, 705, 711
JINLIPU	537, 637
JVC	513, 515, 593, 604, 727
KAMACROWN	571
KANSAI	501, 525
KENSTAR	516
KITT	503, 613, 616, 726
KNEISSEL	753
KONKA	537, 538, 560, 561, 581, 616, 626, 717
KRONMARK	596
LOEWE	542, 709, 744
MEDION	525
METZ	745
mitsubishi	501, 520, 522, 525, 604, 611, 722, 728, 744
MIYOTA	537, 644, 656
MTC	501, 583
MULTITECH	501, 525
MYSTERY	516, 537, 597, 642, 650, 653, 701, 702, 708
NAD	518, 525
NASH	537
NEC	501, 517, 520, 526, 552, 604, 625, 722
NESCO	501, 525
NESONS	708
NOKIA	519, 584, 610, 614, 616, 740, 746
NOVA	501, 616, 638
NOVEX	516, 546, 599
NTT	759
OMEGA	501, 571
ONIDA	513
ONIKS	516, 525, 537, 545, 546, 547, 680
ONWA	524, 525
OPERA	644, 666, 682
ORBITA	635
ORION	501, 503, 506, 507, 509, 516, 525, 528, 537, 591, 603, 617, 619, 627, 641, 643, 664, 715, 720, 722, 729, 746
ORSON	526, 537

Коды к TV устройствам различных марок

Марка	Код
PANASONIC	512, 531, 532, 752
PHANTOM	644
PHILIPS	501, 511, 524, 525, 540, 549, 628, 639, 707, 748
PHOENIX	613
PHOENIX GOLD	708
PIONEER	548, 555, 566, 575, 647, 666
PIXELVIEW	525
PLANTRON	735
POLAR	525, 526, 537, 538, 540, 543, 546, 547, 581, 596, 599, 663, 664, 683, 703, 711, 717
POLAROID	525
PRESTIGIO	564, 656
PRIMA	522, 547
PROLOGY	653, 655
RADUGA	525, 545, 569, 583, 743
RAINFORD	525, 537, 544, 545
RECOR	511, 525
REKORD	520, 525, 526, 537, 538, 539, 545, 547, 725, 736, 743, 747
RFT	535, 618, 728
ROADSTAR	501, 508, 525, 571
ROLSEN	503, 516, 525, 537, 538, 540, 543, 546, 564, 576, 592, 594, 596, 649, 656, 669, 684, 714
ROVERSCAN	662
ROYAL	501, 503, 525, 616
RUBIN	504, 516, 525, 537, 546, 583, 619, 665, 714
SABA	509, 510, 521, 602, 756
SALORA	584
SAMSUNG	501, 525, 526, 529, 563, 580, 595, 596, 608, 612, 613, 622, 641, 645, 688, 723, 741
SANSUI	524, 525, 538, 556, 695
SANYO	501, 519, 522, 525, 530, 540, 544, 550, 558, 604, 608, 610, 618, 621, 696, 722, 730, 734, 738
SATURN	702, 708
SCARLETT	541, 545
SCHNEIDER	525, 540, 571
SELECO	736, 763
SETRO	520
SHARP	526, 544, 548, 604, 707, 721
SHERION	616
SHIVAKI	501, 503, 508, 516, 518, 520, 525, 526, 527, 536, 538, 539, 540, 545, 546, 547, 550, 556, 580, 583, 585, 596, 599, 609, 619, 630, 632, 635, 636, 643, 644, 664, 681, 694, 708, 743
SIEMENS	512, 525, 660, 726, 734
SIESTA	501, 537, 637
SILELIS	613
SILVER	633
SITRONICS	503, 516, 525, 537, 538, 540, 543, 545, 594, 626, 629, 661, 671, 672, 674, 679, 680, 686
SOKOL	516, 525, 547, 635
SONY	533, 604, 659, 722
SPEKTR	525, 538, 668
START	525, 537, 545, 546, 547
STASSFURT	535, 618
STINOL	525
SUPER	537, 561, 644, 653, 654, 655, 666, 677, 682, 724, 754
SUPER GENERAL	537
SUPRA	501, 508, 516, 518, 520, 522, 525, 527, 529, 536, 537, 541, 563, 579, 580, 596, 597, 612, 642, 643, 687, 690, 705, 706, 712, 713
SUZUKI	516, 556
SVEN	574
TCL	521, 538, 540, 642
TEAC	525
TECHNICS	531, 537, 538
TECHNO	501, 525, 538, 544, 546, 556, 568, 579, 596, 599, 644, 664, 703
TECKTON	522, 582, 601, 669, 670
TELEFUNKEN	510, 521, 561, 590, 602, 605, 642, 708, 712, 714, 756, 757
TELEVISION	501, 525, 616
THOMSON	509, 510, 521, 550, 579, 602, 624, 642, 702, 756
TOSHIBA	516, 544, 553, 604, 651, 744
TRONY	516, 525, 537, 538, 550, 574, 657
TVT	511, 525, 530, 535, 538, 583, 586, 620, 630, 723, 742
UNITED	525
VARTA	642
VESTEL	525, 544, 556, 583, 619
VIEWSONIC	557, 698
VITA	547
VITEK	537, 650
VITYAS	525, 708
VOLNA (ВОЛНА)	635
VR	516, 537, 565, 598, 702, 714
WALTHAM	503, 509, 511, 583, 584, 607, 613, 729, 762
XORO	522, 526, 545
XPX	663
НЕИЗВЕСТНАЯ МАРКА	525, 546, 574, 596, 648, 656, 666, 711, 755

Коды к SAT устройствам различных марок

Марка	Код
AIRTONE	968
ALFA GOLD	828
AMINO (СТРИМ)	829, 902
ARION	835
ARRIS	883, 963, 974
ASTON	811
BBK	931
BIG STAR	965
BIGSAT	839, 840, 903, 936
CADENA	958, 962
CONTINENT	886, 975
COSHIP	855
DAEWOO	872
D-COLOR	946, 961
DELTA SYSTEMS	985
DIGIFORS	946
DIVISAT	957, 958
D-LINK	923
DNS	950, 968
DR.HD	983
DRE	804, 888
DREAM	819
DUNE	927, 934
ECHOSPACE	862
ECHOSTAR	808, 809, 822
ELTEX	987
EPLUTUS	961
EUROSKY	840, 981
EUROSTAR	863
EUSTON	825
EVO	965
GALAXY INNOVATIONS (GI)	878, 881, 908, 911, 912, 917, 924
GENERAL SATELLITE	804, 868, 888, 907, 933, 954
GLOBALTEQ	833
GLOBO	909, 915, 925, 935, 945, 956, 971, 973, 995, 999
GOLD STAR - LG	871
GOLDEN INTERSTAR	821, 841, 879, 918
GOLDEN MEDIA	847, 912
GOLDMASTER	911
HD BOX	847, 911
HITACHI	824, 832
HIVION	929
HOME	968
HOMECAST (ВОЛЯ)	820, 831, 836
HUAVEE	946
HUMAX	803, 804, 823, 848, 860, 861, 905, 949
HYUNDAI	968
ID DIGITAL	804
INTEK	984
INTERCROSS	988
INTRO	978
KAON	820, 949
KARTINA TV	934
KOSMOS	855, 856
LANS	970
LOCUS	946
LUMAX	852, 873, 907, 913, 965, 994
MAG	988
MEDIA COM	825
MOTOROLA	883, 884, 901, 974
MYSTERY	910, 997
NDS	814
NEXT	864
NOKIA	813
NOT	941
ONLIME	905
OPENBOX	827, 835, 869, 870, 911, 990, 991
OPENTECH	972
OPENTEL	865
OPTICUM	971
ORBITA	946, 995
ORIEL	887, 926, 941, 948, 955, 986
PACE	801, 932, 953
PATIX DIGITAL	946, 967, 992
PAUXIS	842, 859
PERFEO	960, 981
PHILIPS	857, 899
PIONEER	851
POLAR	858
REFLECT	959
REXANT	977
RIKOR	916, 947
ROLSEN	930, 941, 942, 961
SAGEMCOM	906
SAMSUNG	803, 810, 812, 854
SEG	818
SELENGA	946
SEZAM	882
SKY VISION	952, 966, 977, 982
SKYMASTER	830
SKYWAY	911
SKYWORTH	989
STAR	833
STAR TRACK	826, 835, 943
STARNET	885
STRONG	805, 806, 815, 816, 817, 828, 830, 914
SUNNIWELL	875
SUPERBOX	903

Коды к SAT устройствам различных марок

Марка	Код
SUPERMAX	821, 866, 880, 924
SUPRA	950, 960, 962
TECHNOSAT	852, 853
TEL-ANT	960
TELEFUNKEN	961, 968
TESLER	926
TOP BOX	965
TOPFIELD	837, 838, 877, 891
TOSHIBA	876
TV STAR	967
TVJET	946, 976
VESTEL	820, 824
VU+	919, 920, 921, 922
WORLD VISION	821, 928, 951, 952, 961, 968
XSAT	801, 807
XSAT (HTB+)	801, 802, 807, 906, 972, 984, 998
YUXING	904
ZYXEL	874
АРБАКОМ	967
БИЛАЙН	883, 884, 901, 923
ВОЛГАТЕЛЕКОМ	842, 843, 844, 845, 846, 847, 849, 850, 858, 867
ДОМ.RU	820, 905
ДОМОЛИНК	874, 904
МТС	829, 855, 902, 964, 974, 979, 980, 989, 993
НЕИЗВЕСТНАЯ МАРКА	834, 835, 842, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 903, 904, 937, 938, 939, 940, 944, 945, 969, 971, 978, 996
РОСТЕЛЕКОМ	874, 904, 923, 963, 988, 993
СИГНАЛ	867, 968
ТВОЁ ТВ	820
ТЕЛЕКАРТА	867, 909, 973
ТЕЛЕЦИФРА	968

Функции кнопок пульта IRC 01 F

Кнопки пульта IRC 01 F	Код 101		Код 102		Код 103		Код 104		Код 105	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	CAPTION						AUX/INPUT		PROG CFM	
AUDIO ; NICAM	SURROUND								F/TB	
VIDEO ; SYS	COLOR SYSTEM		PAL/SECAM		SYSTEM		TV SYSTEM		V.PLUS+ ; PROGR.	
⏏ ; ZOOM	100+		AUTO TRACKING						AUTO TRACKING	
▼ ; TV	TV/VIDEO						TV/SAT		TV MONITOR	
⏏ ; ⏏	PRESET		PRESET						COUN. MEM.:ZERO	
⏏ ; LOCK	RESET	CHILD LOCK	COUNTER RESET				TIME SEL. ; ⏏		COUNTER RESET	
▲ ; FAV			COUNTER MEMOR.						EJECT	
⏏	POWER		ON/STANDBY		STANDBY		STANDBY ; ⏏		POWER	
AV	AV MODE		TV MONITOR		AV/TV		TV/VCR ; ⏏ ; AUDIO B		INPUT SELECT	
⏏	MUTE ; ⏏		MUTE/NORMAL		MUTE		MUTE ; ⏏		MUTE/NORMAL	
MENU	MENU		BAR SELECT		FUNCTION		PICTURE SELECT		MENU	
EXIT										
▲	CHANNEL + ; ▲ ; P▲		FINE TUN. (TRK.) ▲						↑	
◀	VOLUME - ; ⏏		SET -				CONTR. ; PIC. ; MIN		←	
OK	ENTER ; ENTER/STR		ENTER				PICTURE SELECT		ENTER ; HOLD	
▶	VOLUME + ; ⏏		SET +				CONT. ; PIC. ; HOUR		→	
▼	CHANNEL - ; ▼ ; P▼		FINE TUN. (TRK.) ▼						↓	
⏏ ; SETUP	SELECT		AFT						STATUS	
⏏ ; TITLE	⏏ ; MTS				BAND				ONE TOUCH ; OTPB	
⏏			PROG. CFM						TEXT/MIX/TV	ONCE
GUIDE	GAME		CLOCK PROGRAM				TIME SET		AFT	DAILY
⏏	SLEEP	ON TIMER	SLEEP	TIMER REC	SLEEP		SLEEP ; ⏏		SLEEP	TIMER REC
⏏	LIST/FLOF		INDEX				TIMER SELECT		INDEX	WEEKLY
RED ; ●	RED ; COLOR SYS.		REPEAT	REC/OTR					RED	REC/OTR
GREEN ; ⏏	GREEN ; CHILD LOC.								GREEN	
YELLOW ; ⏏	YELLOW ; ⏏ ; MTS								YELLOW	
BLUE ; ⏏	BLUE ; SURROUND		⏏ ; SLOW						BLUE	⏏ ; SLOW
⏏	⏏ ; DISPLAY		CALL		DISPLAY		DISPLAY ; ⏏		CALL	
⏏	Q-VIEW ; PREV.CH		QUICK VIEW		P/C		CH. REC. ; SYS. ; PRE.		QUICK VIEW	
VOL -	VOLUME - ; ⏏		VOLUME/CONT. ▼		VOLUME ▼		VOL - ; ⏏		VOLUME ▼	FINE TUN. (TRK.) ▼
VOL +	VOLUME + ; ⏏		VOLUME/CONT. ▲		VOLUME ▲		VOL + ; ⏏		VOLUME ▲	FINE TUN. (TRK.) ▲
CH V ; ⏏	CHANNEL - ; ▼ ; P▼		CHANNEL ▼		CHANNEL ▼		CH - ; PROG. -		CHANNEL ▼	SET - ; - ; REVEAL
CH A ; ⏏	CHANNEL + ; ▲ ; P▲		CHANNEL ▲		CHANNEL ▲		CH + ; PROG. +		CHANNEL ▲	SET + ; + ; BROWSE
⏏ ; SAT	P - ; -/-		SP/LP		P - -		1-		SPEED ; SP/LP	
CLEAR ; X			CANCEL				2-		CANCEL/DISP CAN.	
⏏ ; ⏏	⏏		⏏ ; REW				3-		⏏ (REW)	SUB PAGE
▶ ; i	⏏		▶ ; PLAY				4-		▶ (PLAY)	PAGE INDEX
▶▶ ; ?	⏏		▶▶ ; F.FWD				5-		▶▶ (F.FWD)	REVEAL
■ ; ⏏	⏏		■ ; STOP						■ (STOP)	ENTER ; HOLD
■ ; ⏏	⏏ ; 16:9 ; ASPECT		■ ; PAUSE/STILL						■ (PAUSE/STILL)	BROWSE
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0/VCR		1, 2, ... 9, 0/AV		1, 2, ... 9, 0	

Функции кнопок пульта IRC 01 F

Кнопки пульта IRC 01 F	Код 106		Код 107		Код 108		Код 109		Код 110	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD			⏏ +						▶▶ ; SUBTITLE	
AUDIO ; NICAM	SURROUND				PAL/SECAM				I/I ; NICAM	
VIDEO ; SYS	SYSTEM				AUTO TRACKING				ZOOM	
⏏ ; ZOOM			REPEAT		TV MONITOR				⏏ ; SIZE	
▼ ; TV	TV/VIDEO		⏏ -		PRESET					
⏏ ; ⏏			PRESET	MEMORY	COUNTER RESET					
⏏ ; LOCK			ADD/DEL. ; RESET		COUNTER MEMOR.					
▲ ; FAV			▲ ; EJECT		ON/STANDBY				⏏ ; POWER	
⏏	STANDBY		FUNCTION		TV/VCR		⏏ ; ⏏		SOURCE	
AV	AV MODE/BAND		MUTE		MUTE/NORMAL		⏏		⏏	
⏏	MUTE/SKIP		MENU ; PROG.CH.		BAR SELECT		MENU		MENU	
MENU										
EXIT			ERASE							
▲			⏏ +		FINE TUN. (TRK.) ▲				▲	
◀			⏏ -		SET -				◀	
OK			SELECT ; CALL		ENTER		NORMAL ; OK ; ⏏		OK	
▶			⏏ +		SET +				▶	
▼			⏏ -		FINE TUN. (TRK.) ▼				▼	
⏏ ; SETUP	FUNCTION		INDEX		AFT				P.M.	
⏏ ; TITLE			TAPE SPEED						S.M.	
⏏			TIME SEARCH		INDEX		⏏		TEXT	
GUIDE			CLOCK SET ; SEL.		PROG. CFM				MIX	
⏏	SLEEP		SLEEP	TIMER SET	SLEEP	TIMER REC	SLEEP ; ⏏			
⏏			ON SCREEN		CLOCK PROGRAM		⏏		SUBTITLE	
RED ; ●			RED	● ; RECORD	REPEAT	REC/OTR	RED ; SKIP		RED ; 3D	
GREEN ; ⏏			GREEN	▶			GREEN ; MOVE		GREEN ; P.M.	
YELLOW ; ⏏			YELLOW				YELLOW ; DELETE		YELLOW ; S.M.	
BLUE ; ⏏			BLUE	SLOW	⏏ ; SLOW		BLUE ; MODE		BLUE ; ZOOM	
⏏	DISPLAY		CLOCK/COUNTER		QUICK VIEW		RECALL ; ⏏		INFO.	
⏏			PREVIOUS	P/C	CALL				RETURN	
VOL -	VOLUME ▼		VOL -		VOLUME/CONT. ▼		⏏ ; ⏏ ; ⏏		VOL -	
VOL +	VOLUME ▲		VOL +		VOLUME/CONT. ▲		▶ ; ⏏ ; ⏏		VOL +	
CH V ; ⏏	CHANNEL ▼		CH/SET -		CHANNEL ▼		▼ ; P		PR ▼	⏏ ; SIZE
CH A ; ⏏	CHANNEL ▲		CH/SET +		CHANNEL ▲		▲ ; P		PR ▲	▶▶ ; SUBTITLE
⏏ ; SAT	1/5-		-/-		SP/LP					
CLEAR ; X			CLEAR/RESET		CANCEL		⏏			
⏏ ; ⏏			⏏ ; REW		⏏ ; REW		⏏		⏏ ; REVEAL	
▶ ; i			▶ ; PLAY		▶ ; PLAY		⏏		▶▶ ; INDEX	INDEX
▶▶ ; ?			▶▶ ; F.FWD		▶▶ ; F.FWD		⏏		▶▶ ; MIX	REVEAL
■ ; ⏏			■ ; STOP		■ ; STOP		⏏		■ ; HOLD	HOLD
■ ; ⏏			■ ; PAUSE/STILL		■ ; PAUSE/STILL		⏏		■ ; INDEX	SIZE
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0/AV		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 01 F

Кнопки пульта IRC 01 F	Код 111		Код 112		Код 113		Код 114		Код 115	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	DTV/PVR		HDMI		DTV				You Tube	
AUDIO ; NICAM	NICAM		I/I ; AUDIO LANG		AUDIO		AUDIO	NICAM	NICAM ; I/I	
VIDEO ; SYS			YPbPr						3D	
⏏ ; ZOOM	ZOOM		ASPECT		ASPECT		ZOOM		ZOOM	
▼ ; TV	TV/RADIO		TV		TV/RADIO				TV/RADIO	
⏏ ; ⏏	USB	AUTO	USB		NICAM/A2 ; MEDIA		MIX		CHN LIST ; CH.LIST	
⏏ ; LOCK	⏏ ; FREEZE	FREEZE ; HOLD	FREEZE		FREEZE				FREEZE ; HOLD	
▲ ; FAV	FAV		FAV		FAV		FAV		FAV ; SIZE	
⏏	⏏		⏏ ; POWER		⏏		⏏		⏏ ; POWER	
AV	SOURCE		INPUT		SOURCE		SOURCE		SOURCE	
⏏	⏏		⏏ ; MUTE		⏏		⏏		⏏	
MENU	MENU		MENU		MENU		MENU		MENU	
EXIT	EXIT ; CANCEL		EXIT		EXIT				EXIT ; REC LIST	
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀		◀		◀	
OK	OK		OK		ENTER		OK		OK ; ENTER	
▶	▶		▶		▶		▶		▶	
▼	▼		▼		▼		▼		▼	
⌘ ; SETUP	P.P		PICTURE		PMODE		HOME		P.M. ; PICTURE	PVR LIST
⌘ ; TITLE	S.M		SOUND		SMODE		RADIO		S.M. ; SOUND	
⏏	⏏ ; TEXT	⏏ ; MIX	TEXT	MIX	TEXT		TEXT		HOME ; ⏏	TEXT
GUIDE	EPG		TIME		EPG		EPG		EPG	BROWSER
⏏	SLEEP		SLEEP		SLEEP		T.SHIFT		SLEEP	T.SHIFT
⏏	⏏ ; SUBTITLE		SUBTITLE		SUBTITLE		SUBTITLE		SUBTITLE	AD ; SUB-PAGE
RED ; ●	RED		RED		RED	● ; AUTO	RED ; RADIO	REC	RED ; REC	● ; REC
GREEN ; ▢	GREEN		GREEN		GREEN		GREEN ; AUDIO		GREEN	
YELLOW ; ◀	YELLOW		YELLOW		YELLOW		YELLOW ; INFO		YELLOW	
BLUE ; ▢	BLUE		BLUE		BLUE		BLUE ; ZOOM		BLUE	
⏏	INFO		INFO		DISPLAY		INFO		INFO.	INDEX
⏏	RETURN		RECALL		⏏		BACK		RETURN	RETURN ; BACK
VOL -	V -		VOL ▼		VOL ▼		VOL -		VOL - ; V -	
VOL +	V +		VOL ▲		VOL ▲		VOL +		VOL + ; V +	
CH V ; ⏏	P v	⏏	PROG ▼		CH ▼	⏏	PR -	⏏ ; REC	PR - ; PR V ; P -	⏏ ; SIZE
CH A ; ⏏	P ▲	⏏	PROG ▲		CH ▲	S.PAGE ; ⏏	PR +	⏏ ; NICAM	PR + ; PR A ; P +	⏏ ; SUB-PAGE
⌘ ; SAT	CH.LIST		CH.LIST		⌘ ; LIST				QUICK ; HOLD	
CLEAR ; X	EXIT ; ⏏ ; CANCEL		CANCEL		T.SHIFT		CANCEL		RETURN ; BACK	CANCEL
⏏ ; ⏏	⏏ ; SUB-PAGE	⏏ ; SUB-PAGE	SUBCODE		REVEAL ; ⏏	S.PAGE	⏏ ; EPG	SUB-PAGE	⏏ ; REVEAL	SUB-PAGE
▶ ; I	▶ / II	⏏ ; INDEX	INDEX		HOLD ; ⏏	INDEX	⏏ ; T.SHIFT	INDEX	▶ / II ; ⏏ ; INDEX	▶ / II ; ⏏ ; INDEX
⏏ ; ?	⏏	⏏ ; REVEAL	REVEAL		SIZE ; ⏏	REVEAL	⏏ ; FAV	REVEAL	⏏ ; MIX	REVEAL
⏏ ; ⏏	⏏	FREEZE ; HOLD	HOLD		INDEX ; ⏏	HOLD	⏏	HOLD	⏏ ; CANCEL	HOLD
⏏ ; ⏏	▶ / II	⏏ ; SIZE	SIZE		HOLD ; ⏏	SIZE	⏏ ; T.SHIFT	SIZE	▶ / II ; ⏏ ; INDEX	SIZE
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 01 F

Кнопки пульта IRC 01 F	Код 116		Код 117		Код 118		Код 119	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	⏏		HDMI		DVB			
AUDIO ; NICAM	NICAM/A2		NICAM		⏏ I/I ; AUDIO		AUDIO	
VIDEO ; SYS	MEDIA		YPbPr		TOOLS		SETUP ; ZOOM	
⏏ ; ZOOM	ASPECT	⏏	ZOOM		⏏ ; ⏏		ASPECT	
▼ ; TV	⏏	TV	TV		DMP ; USB		TV/RADIO	
⏏ ; ⏏	AUTO ; GOTO		PC		⏏		HOME ; CH LIST	
⏏ ; LOCK	FREEZE		FREEZE		⏏		MOUSE ; REFRESH	
▲ ; FAV	FAV				▲	♥	FAV	
⏏	⏏		⏏ ; POWER		⏏ ; POWER		⏏ ; POWER	
AV	SOURCE		INPUT		⏏ ; SOURCE	SD	INPUT	
⏏	⏏		⏏		⏏		⏏ ; MUTE	
MENU	MENU		MENU		MENU	DMENU	⏏ ; MENU	
EXIT	EXIT		EXIT		EXIT		⏏ ; EXIT	
▲	▲		▲		▲		▲	
◀	◀		◀		◀		◀	
OK	ENTER ; OK		OK		ENTER		OK	
▶	▶		▶		▶		▶	
▼	▼		▼		▼		▼	
⌘ ; SETUP	PMODE	REC	PICTURE		SETUP	PROG	P.MODE	SETUP ; ZOOM
⌘ ; TITLE	SMODE	DTV/RADIO	SOUND		TITLE	RADIO	S.MODE	
⏏	⏏	TEXT	TV/TEXT		⏏		TEXT	
GUIDE	EPG		MIX		EPG		EPG ; EPG/MOUSE	
⏏	SLEEP	TIME SHIFT	SLEEP		SLEEP		SLEEP	T-SHIFT
⏏	S.TITLE ; SUBTITLE	PVR LIST			⏏ ; SUBTITLE	LIST	SUB-T	
RED ; ●	RED		RED ; R		RED ; ⏏	●	RED	REC
GREEN ; ▢	GREEN		GREEN ; G		GREEN ; ⏏		GREEN	
YELLOW ; ◀	YELLOW	YELLOW	YELLOW ; Y		YELLOW ; ⏏		YELLOW	
BLUE ; ▢	BLUE		BLUE ; B		BLUE ; ⏏		BLUE	
⏏	DISPLAY	CH.LIST	INFO		INFO ; ⏏	INDEX	INFO	
⏏	⏏	⏏	RECALL		⏏	REPEAT	⏏	
VOL -	VOL ▼ ; VOL -		VOL ▼		VOL -		VOL -	
VOL +	VOL ▲ ; VOL +		VOL ▲		VOL +		VOL +	
CH V ; ⏏	CH ▼ ; CH -	⏏ ; TIME SHIFT	PROG ▼		CH - ; CH V	⏏	CH V	⏏ ; SIZE
CH A ; ⏏	CH ▲ ; CH +	⏏	PROG ▲		CH + ; CH A	⏏	CH A	⏏ ; CANCEL
⌘ ; SAT	⌘ ; SAT				GOTO		⌘ ; SAT	
CLEAR ; X	⏏		CANCEL		⏏		CANCEL	
⏏ ; ⏏	⏏ ; FAV	S.PAGE ; CH.LIST	SUBCODE		⏏	⏏	⏏ ; HOLD	SUBPAGE
▶ ; I	⏏	INDEX ; EPG	INDEX		⏏ ; ⏏	⏏	⏏ ; MIX	INDEX
⏏ ; ?	⏏	REVEAL ; PVR LIST	REVEAL		⏏		⏏ ; SUBPAGE	REVEAL
⏏ ; ⏏	⏏	HOLD ; DTV/RADIO	HOLD		⏏ ; ⏏ ; STILL	⏏	⏏ ; REVEAL	HOLD
⏏ ; ⏏	⏏	SIZE ; REC	SIZE		⏏ ; ⏏	⏏	⏏ ; MIX	SIZE
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 01 F

Кнопки пульта IRC 01 F	Код 201		Код 202		Код 203		Код 204		Код 205	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD			DVD		CENTER TRACKING				OUTPUT SELECT	
AUDIO ; NICAM	NTSC PB		AUDIO						AUDIO	SOUND
VIDEO ; SYS	SYSTEM		VCR	PRESET ; SYSTEM	INPUT SELECT				VHS ; VCR	
⏏ ; ZOOM	SUPER CLEAR		INDEX SEARCH		AUTO TRACKING				JOG	
▼ ; TV	CH		ERASE		MEMORY				TV/VCR	
⏏ ; ⏏	COUNTER MEMORY		QUICK-FIND		PRESET				AUTO	PRESET
⏏ ; LOCK	COUNTER RESET		AUTO REPEAT		COUNTER RESET				RESET	CHILD LOCK
▲ ; FAV	EJECT ; ▲		▲ ; EJECT		EJECT				▲ ; EJECT	
⏏	POWER		FUNCTION		POWER/TIMER REC		POWER		⏏ ; POWER	ez POWER OFF
AV	INPUT		TV/VCR		TV/VCR				TV/AV ; AV	
⏏			MUTE	MUTE VPT					⏏ ; MUTE	
MENU	MENU		PR.CHECK ; MENU	⏏	MENU		MENU		MENU ; i ; SETUP	
EXIT			JOG/SHUTTLE	⏏					ZERO ⏏	
▲	INDEX SEARCH +		▲	⏏	SET + ; SET ▲				▲ ; +	TRK ▲ ; SELECT ▲
◀			◀	⏏	SLOW - ; SLOW ▼				◀	SLOW -
OK	AUTO TRACKING		B. SELECT ; C.SET		ENTER				OK ; CLK/CNT	AUTO TRK
▶			▶	⏏	SLOW + ; SLOW ▲				▶	SLOW +
▼	INDEX SEARCH -		▼	⏏	SET - ; SET ▼				▼ ; -	TRK ▼ ; SELECT ▼
⚙ ; SETUP			INFO	⏏	TV MONITOR				SHOW VIEW ; *	
⏏ ; TITLE			TOP MENU	⏏					KARAOKE	
⏏			MONITOR	TIMER REC ; T. SET	AFT				VISS;INDEX;SEAR.	START ; Q. DEBUT
GUIDE	PROG ; SP/LP		TAPE SPEED	TIMER ; T-SET	PROGRAM				SKIP/MEMO	LENGTH ; Q.DUREE
⏏	TIMER PRGM	TIMER REC	SLEEP	ALARM	CLOCK SET	TIMER REC			TIMER	TIMER
⏏			CLOCK/COUNTER	TIME SEARCH	CLOCK/COUNTER				CLOCK/COUNTER	CLOCK
RED ; ●	REPEAT	● REC	MEMORY COUNTER	● REC ; RECORD	REPEAT	REC/OTR		● REC	MARK	● ; REC/OTR
GREEN ; ⏏			F ADV	⏏	SKIP SEARCH				⏏ ; F/ADV	S. REC
YELLOW ; ◀			▶	⏏	CH SKIP				FM/AM	REC END SEARCH
BLUE ; ▶	SLOW ; ▶		▶ ; SLOW	⏏	SLOW				AUX	OTPB
⏏	CLOCK/COUNTER		RECAL.;DISPL.;SEL.	CORRECT;ON SCR.	INDEX				ENTER ; DISPLAY	ERASE
⏏	NEXT ; >		P/C	REPEAT	CALL				REPEAT AUTO	ez REPEAT
VOL -	TRACKING -		VOL -		TRACKING - ; F.T.▼				VOLUME -	TRACKING ▼
VOL +	TRACKING +		VOL +		TRACKING + ; F.T.▲				VOLUME +	TRACKING ▲
CH V ; ⏏	CHANNEL ▼		CH.SET (TRAC.) -		CHANNEL ▼		P -		PR ▼	⏏
CH A ; ▶	CHANNEL ▲		CH.SET (TRAC.) +		CHANNEL ▲		P +		PR ▲	▶
⏏ ; SAT	-/-		-/-	+100 ; +10	SPEED ; SP/LP				SP/LP ; LP ; SPEED	RALENTI
CLEAR ; X	CANCEL ; CLEAR		CLEAR RESET	RESET ADD/CLEAR	CANCEL				CLEAR	CM SKIP ; AD-SKIP
◀ ; ●	◀ ; REW		◀ ; REW		◀ ; REW		◀ (REW)		◀ ; REW	◀
▶ ; i	▶ ; PLAY		▶ ; PLAY		▶ ; PLAY		▶ (PLAY)		▶ ; PLAY	
▶▶ ; ?	▶▶ ; F.FWD		▶▶ ; F.FWD	ALT ?	▶▶ ; F.FWD		▶▶ (F.FWD)		▶▶ ; F.FWD	▶▶
■ ; ⏏	■ ; STOP		■ ; STOP		■ ; STOP		■ (STOP)		■ ; STOP	
⏏ ; ⏏	⏏ ; PAUSE/STILL		⏏ ; PAUSE/STILL	⏏	⏏ ; PAUSE/STILL		⏏ (PAUSE)		⏏ ; PAUSE/STILL	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0				1, 2, ... 9, 0	

Функции кнопок пульта IRC 01 F

Кнопки пульта IRC 01 F	Код 206		Код 207	
	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	INDEX SEARCH			
AUDIO ; NICAM	A. MONITOR			
VIDEO ; SYS	INDEX MARK			
⏏ ; ZOOM	INDEX ERASE		SPEED SP/EP	
▼ ; TV	CH			
⏏ ; ⏏	COUNTER MEMORY			
⏏ ; LOCK	COUNTER RESET		RESET	
▲ ; FAV	▲ ; EJECT			
⏏	POWER		POWER	
AV	INPUT		TV/VCR	
⏏				
MENU	MENU ; OSD MENU			
EXIT				
▲	▲	⏏	TRACKING ▲	
◀	◀	⏏		
OK	OK		ENTER	
▶	▶	⏏		
▼	▼	⏏	TRACKING ▼	
⚙ ; SETUP	KARAOKE		PROG.CFM	
⏏ ; TITLE	ONE TOUCH PLAYB			
⏏	AUTO TUN PRESET		AUTO TRACKING	
GUIDE	CLOCK PRESET		PROGRAM	
⏏	COUNTER/CLOCK	T-REC	CLOCK/SET	TIMER REC
⏏	SUPER CLEAR			
RED ; ●	KAR. SEARCH ◀	● ; REC/OTR		REC/OTR
GREEN ; ⏏	KAR. SEARCH ▶	OTR		
YELLOW ; ◀	◀ SEARCH/IND.			
BLUE ; ▶	▶ SEARCH/IND.			
⏏	COUNTER DISPLAY		COUNTER/CLOCK	
⏏	A-TR			
VOL -	TRACKING -		SET ▼	
VOL +	TRACKING +		SET ▲	
CH V ; ⏏	CHANNEL ▼		CHANNEL ▼	
CH A ; ▶	CHANNEL ▲		CHANNEL ▲	
⏏ ; SAT	TAPE SPEED			
CLEAR ; X	CANCEL ; CLEAR		CANCEL	
◀ ; ●	◀ ; REW		◀ ; REW	
▶ ; i	▶ ; PLAY		▶ ; PLAY	
▶▶ ; ?	▶▶ ; FF		▶▶ ; F.FWD	
■ ; ⏏	■ ; STOP		■ ; STOP	
⏏ ; ⏏	⏏ ; PAUSE/STILL		PAUSE/STILL	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 01 F

Кнопки пульта IRC 01 F	Код 301		Код 302		Код 303		Код 304		Код 305	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ : DVD	DSP PRGM ; SURR.	DISC/ALBUM	CD		MARK		SPIEP (NTSC)			
AUDIO ; NICAM	T-BASS ; SOUND	SOUND ; TONE	TAPE				AUDIO MONITOR			
VIDEO ; SYS	VIDEO/AUX ; PHON.	SPECTRUM	VIDEO-1	VIDEO-3			SYSTEM			
⏏ : ZOOM	ZOOM	MPX	CD/DAT DIRECT							
▼ ; TV	DOLBY ; DSP MAN.	DISC SELECT	TUNER		GEQ					
⏏ : ⏏	DISPLAY ; K. ENTER	TUNER MEMORY	PHONO		MEMORY		COUNTER MEMORY			
⏏ : LOCK	KARAOKE	DIMMER	VIDEO-2				COUNTER RESET			
▲ ; FAV	▲ ; OPEN/CLOSE	BBE	▲ ; OP./CL.(DECK1)				COUNTER CALL			
⏏	POWER		POWER		POWER		POWER		POWER AUDIO C.	
AV	TUNER BAND/BAND	INPUT NEXT	TIMER STANDBY							
⏏	MUTE ; MUTE		MUTE/WAKE UP				MUTE			
MENU	PRGM ; PROGRAM	DIGEST	PRGM/CHECK				SET		FUNCTION AUDIO	
EXIT	DISC SKIP	DISC 5	LW				ERASE			
▲	▲ PRESET ; ALBUM	DISC 1	▲ ; OP./CL.(DECK2)							
◀	▼ ; WINDOW DOWN	DISC 2	◀ MS (DECK2)	BALANCE LEFT			< SELECT			
OK	ENTER	EDIT/REMAIN;CHECK	◀ ▶ ; PL./D.(DECK2)	SURROUND						
▶	▲ ; WINDOW UP	DISC 3	▶ MS (DECK2)	BALANCE RIGHT			> SELECT			
▼	▼ PRESET ; ALBUM	DISC 4	■ ; STOP (DECK2)							
⌘ : SETUP	PBC	MARK	MW		TUNER BAND		CLOCK CALL		OPTION AUDIO C.	
⌘ : TITLE	FM MODE ; T.MODE	GEQ ; TREBLE	FM		TUNER MODE/OSC		TUNER LINE			
⏏	FUNCTION ; PHONO	GEQ ; GEQ PRGM	FM MODE		PBC		TIMER			
GUIDE	REC MODE	GEQ MANUAL	RANDOM		DIGEST		CLOCK			
⏏	SLEEP	TIMER	SLEEP ; DISK SKIP		SLEEP		OFF TIMER	TIMER REC ●		
⏏	SEL. CLOCK/TIMER	SET CLOCK/TIMER	TIMER SET		TIMER		ON TIMER			
RED ; ●	REC/REC MUTE	● ; REC/REC MUTE	■ ; STOP (DECK1)	● ; REC/REC	REPEAT			● RECORD		
GREEN ; ⏏	DISC DIRECT PLAY	TAPE ◀ ▶ ; DECK1/2	◀ ▶ ; PL./D.(DECK1)	BBE						
YELLOW ; ◀	GEQ 2 ; REV MODE	PRGM GEQ	◀ MS (DECK1)	PRGM GRAPHIC EQ	CLOCK					
BLUE ; ▶	SLOW	MANUAL GEQ	▶ MS (DECK1)	MANU GRAPHIC EQ	SLOW					
⏏	DISPLAY	ON SCREEN	DISPLAY		OSD		CH CALL			
⏏	REPEAT	RANDOM/REPEAT	CD REPEAT		RANDOM					
VOL -	VOLUME ▼ ; -	TREBLE	VOLUME ▼		VOLUME ▼ ; DOWN		VOLUME V		VOLUME V AUDIO	
VOL +	VOLUME ▲ ; +	BASS	VOLUME ▲		VOLUME ▲ ; UP		VOLUME ▲		VOLUME ▲ AUDIO	
CH V ; ⏏	⏏ PRESET		TUNING/TIMER ▼		⏏ TUN. - ; ⏏ SKIP		CHANNEL V			
CH ▲ ; ⏏	⏏ PRESET		TUNING/TIMER ▲		⏏ TUN. + ; ⏏ SKIP		CHANNEL ▲			
⏏ ; SAT	+10	10	+10 ; MEMORY		+10+		11			
CLEAR ; X	CLEAR		▲ ; CD		CANCEL		12			
◀ ; ●	◀ ; TUN.DOWN	CLOCK	◀ ; ⏏		◀ ; TUN. - ; ⏏ SKIP		◀ REW			
▶ ; i	▶ / ◀ ▶ ; DIR. PRES.	CD ⏏	▶ ; PLAY/REPLAY		▶ ; ⏏ ; PLAY/PAUSE		▶ PLAY			
⏏ ; ?	⏏ ; TUN. UP		⏏ ; ⏏		⏏ TUN. + ; ⏏ SKIP		⏏ FWD			
■ ; ⏏	■ ; CLEAR		■ ; STOP/CL		■ ; STOP/⏏ RET.		■ STOP			
⏏ ; ⏏	⏏ ; SET		⏏ PAUSE		⏏ ; PLAY/PAUSE		⏏ PAUSE			
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 10/0		1, 2, ... 9, 0		1, 2, ... 9, 10			

Функции кнопок пульта IRC 01 F

Кнопки пульта IRC 01 F	Код 306		Код 307		Код 308		Код 309		Код 310	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ : DVD	CD				CD/CD BLANK SKIP		DVD		CD	
AUDIO ; NICAM	MONO TUNER		EQ		DSURROUND		AUDIO	DOSG ; BASS	AUDIO	AUDIO IN
VIDEO ; SYS	VIDEO/AUX				AUX/MD		NIGHT MODE		PLAY MODE	MD (VIDEO)
⏏ : ZOOM	TAPE ; DECK 1/2				RANDOM		DIMMER		TUNING MODE	ANGLE
▼ ; TV	CD EDIT/CHECK				TAPE		TUNER/BAND/BAND	SONY TV DIRECT	TUNER/BAND	
⏏ : ⏏	KARAOKE		MEMORY		EQ		MEMORY	KARAOKE	PLAY MODE/TUN.	TUNER MEMORY
⏏ : LOCK							ANGLE	A. FORMAT MODE	FM MODE	REPEAT/FM MODE
▲ ; FAV	▲ ; OPEN/CLOSE						▲ ; OPEN/CLOSE		i-BASS ; DSGS	
⏏	POWER		POWER ; OPERATE		POWER		I/⏏	TV I/⏏	I/⏏	
AV							AUTO FORMAT DIR.	TV/VIDEO	USB	a/A
⏏							MUTING		EFFECT ON/OFF	SOUND FIELD
MENU	DISC DIR. PLAY 01		MODE		MODE		MENU	A. MENU ; KARAOKE	DVD MENU	AMP MENU
EXIT	DISC DIR. PLAY 02						⏏ ; RETURN		⏏ ; RETURN ; ⏏	
▲	DISC DIR. PLAY 03		▶ ; PLAY				⏏ ; ▲	MIC VOL +	⏏	EQ
◀	DISC DIR. PLAY 04		◀ ; ⏏ SKIP/SEARCH				⏏ ; ◀	MIC ECHO -	⏏	KARAOKE
OK	DISC DIR. PLAY 05		⏏ ; PAUSE		EDIT		ENTER	ENTER	ENTER	PRESET EQ
▶	DISC DIR. PLAY 06		▶ ; ⏏ SKIP/SEARCH				⏏ ; ▶	MIC ECHO +	⏏	ECHO
▼	DISC DIR. PLAY 07		■ ; STOP				⏏ ; ▼	MIC VOL -	⏏	SURROUND
⌘ : SETUP			FUNCTION				DVD SETUP		DVD SETUP	GAME
⌘ : TITLE	TUNER ; BAND		BAND		TUNER/BAND		TUNER MENU	FM MODE;ST./MON.	DVD TOP MENU	TITLE UPDATE
⏏	MANUAL SELECT				BBE		FUNCTION		FUNCTION	P FILE
GUIDE	PRGM				PROGRAM		PLAY MODE; PROG.		OPTIONS	TRANSFER
⏏	SLEEP				SLEEP		SLEEP	NAME	SLEEP	SET CLOCK/TIMER
⏏	CLOCK				TIMER		SUBTITLE		SUBTITLE	SEL. CLOCK/TIMER
RED ; ●	RANDOM/REPEAT	● / REC ⏏	REPEAT		REPEAT	● ; REC/REC MUTE	REPEAT	SOUND FIELD -	HDD ▶	HDD REC ●
GREEN ; ⏏	SURROUND				MONO		DSGX;BASS LEVEL	SOUND FIELD +	USB ▶	HDD REC ⏏
YELLOW ; ◀	DOLBY PRO LOGIC				T-BASS		DVD TOP MENU	KEYCON b	CD ▶	◀ ; SLOW -
BLUE ; ▶	T-BASS				CLOCK		DVD MENU	KEYCON #	DMPORT ▶	▶ ; SLOW +
⏏	TIMER		DISPLAY		DISPLAY		DISPLAY		DISPLAY	A/B ; TAPE
⏏	MD; DISC DIR. PLAY				DISPLAY COLOR		DVD DISPLAY	REPEAT/FM MODE	DVD DISPLAY	REPEAT
VOL -	VOL ▼		VOL ▼		VOLUME -		VOLUME -	TV VOL -	VOL - ; VOLUME -	b
VOL +	VOL ▲		VOL ▲		VOLUME +		VOLUME +	TV VOL +	VOL + ; VOLUME +	#
CH V ; ⏏	◀ ; ⏏ TUN.DOWN		◀ ; ⏏ SKIP/SEARCH		◀ ; ⏏ TUN.DOWN		◀ ; PRESET -;PREV	TV CH -	◀ ; PRESET -;PREV	ALBUM - ; ⏏ -
CH ▲ ; ⏏	▶ ; ⏏ TUN. UP		▶ ; ⏏ SKIP/SEARCH		▶ ; ⏏ TUNING UP		▶ ; PRESET +;NEXT	TV CH +	▶ ; PRESET+NEXT	ALBUM + ; ⏏ +
⏏ ; SAT	+10		+10+ ; +10		+10+		⏏ ; >10		D.SKIP ; DISC SKIP	D. SKIP
CLEAR ; X	GEQ				CLEAR		CLEAR		CLEAR	CLEAR
◀ ; ●	◀ ; TUN.DOWN		◀ ; ⏏ SKIP/SEARCH		◀ ; ⏏ TUN.DOWN		◀ ; SLOW ◀ ; TUN.-		◀ ; TUNING -	
▶ ; i	▶ / ◀ ▶ ; PRESET		▶ ; PLAY		▶ / ◀ ▶ ; PRESET		▶ ; PLAY/SELECT		▶ ; ◀ ▶ ; SELECT	
⏏ ; ?	⏏ ; TUN. UP		⏏ ; ⏏ SKIP/SEARCH		⏏ ; ⏏ TUNING UP		⏏ ; SLOW ▶ ; TUN.+		⏏ ; TUNING +	
■ ; ⏏	■ ; CLEAR		■ ; STOP		■ ; CLEAR		■ ; STOP		■	
⏏ ; ⏏	⏏ ; SET		⏏ ; PAUSE		⏏ ; SET		⏏ ; PAUSE		⏏	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 10/0		1, 2, ... 9, 0		1, 2, ... 9, 10/0		1, 2, ... 9, 10/0	

Функции кнопок пульта IRC 01 F

Кнопки пульта IRC 01 F	Код 311		Код 312		Код 313		Код 314		Код 315	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	DVD									
AUDIO ; NICAM	AUDIO		T-BASS							
VIDEO ; SYS	VIDEO									
⏏ ; ZOOM	AV3 (OPT)									
▼ ; TV	TV/VIDEO									
⏏ ; ⏏	MEMORY									
⏏ ; LOCK	ANGLE						COUNT.RESET (D.1)		COUNT.RESET (D.2)	
▲ ; FAV					▲ ; OPEN/CLOSE					
⏏	I/O	TV I/O	POWER ; OPERATE							
AV	INPUT SELECT	TV/VIDEO (TV)								
⏏	MUTING						● ; REC MUTE (D.1)		● ; REC MUTE (D.2)	
MENU	i ; SETUP/MENU		MODE		PRGM / CHECK					
EXIT	⏏ ; RETURN									
▲	▲		ALBUM +							
◀	◀	TUNING -								
OK	ENTER ; OK									
▶	▶	TUNING +								
▼	▼		ALBUM -							
⌘ ; SETUP	DISC MENU		FUNCTION				SYN. DUB. HIGH		SYN. DUB. HIGH	
⌘ ; TITLE	TITLE		BAND				SYN. DUB. NORMAL		SYN. DUB. NORMAL	
⏏	SOUND FIELD				EDIT PR. ; A-B REP.					
GUIDE	PROGRAM		PROGRAM							
⏏	SUBTITLE									
RED ; ●	REPEAT	● ; ITR			REPEAT/BLANK		DUAL REC 1+2 ● ; REC (DECK 1)		DUAL REC 1+2 ● ; REC (DECK 2)	
GREEN ; ⏏	A-B									
YELLOW ; ◀							◀ ; PLAY (DECK 1)		◀ ; PLAY (DECK 2)	
BLUE ; ▶	TUNER FM/AM									
⏏	DISPLAY CLK/CNT		DISPLAY		DISPLAY		DISPLAY		DISPLAY	
⏏	SP/LP		REPEAT		RANDOM					
VOL -	VOLUME -	VOL - (TV)	VOL -							
VOL +	VOLUME +	VOL + (TV)	VOL +							
CH V ; ⏏	⏏	CH - (TV)	⏏ ; TUNE -		⏏ ; ⏏ SEARCH					
CH A ; ⏏	⏏	CH + (TV)	⏏ ; TUNE +		⏏ ; ⏏ SEARCH					
⏏ ; SAT	CM SKIP		>10		10+					
CLEAR ; X	CLEAR									
⏏ ; ●	⏏ ; SCAN/SLOW		⏏ ; TUNE -		⏏ ; ⏏ SEARCH		⏏ (DECK 1)		⏏ (DECK 2)	
▶ ; i	▶ ; PLAY		⏏		▶ ; ⏏ PLAY/PAUSE		▶ ; PLAY (DECK 1)		▶ ; PLAY (DECK 2)	
⏏ ; ?	⏏ ; SCAN/SLOW		⏏ ; TUNE +		⏏ ; ⏏ SEARCH		⏏ (DECK 1)		⏏ (DECK 2)	
■ ; ⏏	■ ; STOP		■		■ ; STOP/CLEAR		■ ; STOP (DECK 1)		■ ; STOP (DECK 2)	
⏏ ; ⏏	⏏ ; PAUSE/STEP		⏏		▶ ; ⏏ PLAY/PAUSE		⏏ ; PAUSE (DECK 1)		⏏ ; PAUSE (DECK 2)	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0/10		1, 2, ... 9, 0					

Функции кнопок пульта IRC 01 F

Кнопки пульта IRC 01 F	Код 316		Код 317		Код 318		Код 319		Код 320	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD			DSP PRGM ; SURR.	DISC/ALBUM			CD			
AUDIO ; NICAM			T-BASS ; SOUND	SOUND ; TONE			PHONO	KARAOKE VOCAL		
VIDEO ; SYS			VIDEO/AUX ; PHON.	SPECTRUM			VIDEO1/DAT			
⏏ ; ZOOM			ZOOM	MPX			TUNER			
▼ ; TV			DOLBY ; DSP MAN.	DISC SELECT			TAPE			
⏏ ; ⏏	CAL SYNC REC		DISPLAY ; K. ENTER	TUNER MEMORY			LW ; TUNER			
⏏ ; LOCK	CHECK		KARAOKE	DIMMER			MW ; AM			
▲ ; FAV	▲		▲ ; OPEN/CLOSE	BBE			▲ (CD)	▲ ; OPEN/CLOSE		
⏏			POWER				POWER			
AV	AC		TUNER BAND/BAND	INPUT NEXT			VIDEO2/AUX			
⏏			MUTE ; MUTING				MUTE			
MENU	FADE IN		PRGM ; PROGRAM	DIGEST			PRGM/CHECK	RANDOM		
EXIT	FADE OUT		DISC SKIP	DISC 5			VOCAL FADER			
▲			▲ PRESET ; ALBUM	DISC 1			▲	TUNING ▲		
◀			▼ ; WINDOW DOWN	DISC 2			◀			
OK			ENTER	EDIT/REMAIN;CHEK			DSP OFF/ON	SET		
▶			▲ ; WINDOW UP	DISC 3			▶			
▼			▼ PRESET ; ALBUM	DISC 4			▼	TUNING ▼		
⌘ ; SETUP	PLAY SYNC REC		PBC	MARK			FM ; BAND	DOLBY SURROUND		
⌘ ; TITLE	STOP SYNC REC		FM MODE ; T.MODE	GEQ ; TREBLE			FM MODE	VOLUME SELECT		
⏏	EDIT		FUNCTION ; PHONO	GEQ ; GEQ PRGM			PRGM	DSP		
GUIDE	PRGM		REC MODE	GEQ MANUAL			TIMER STANDBY	GEQ		
⏏	TIME		SLEEP	TIMER			SLEEP	AUTO/AI EDIT		
⏏	BLANK		SEL. CLOCK/TIMER	SET CLOCK/TIMER			DISC 5	PRGM/CONT EDIT		
RED ; ●	REPEAT 1/ALL		REC/REC MUTE	● ; REC/REC MUTE		● ; ● (DECK2)	DISC 1	MANUAL		● ; ● (DECK2)
GREEN ; ⏏	REPEAT A→B		TAPE ◀ ▶ ; DECK1/2	DISC DIRECT PLAY			DISC 2	AI A/B		
YELLOW ; ◀	INDEX ◀		GEQ 2 ; REV MODE	PRGM GEQ			DISC 3	T-BASS		
BLUE ; ▶	INDEX ▶		SLOW	MANUAL GEQ			DISC 4	BBE		
⏏			DISPLAY	ON SCREEN			DISPLAY	DISPLAY		
⏏	RANDOM		REPEAT	RANDOM/REPEAT			DISPLAY;	REPEAT		
VOL -	VOLUME ▼		VOLUME ▼ ; -	TREBLE			VOLUME ▼ ; DOWN			
VOL +	VOLUME ▲		VOLUME ▲ ; +	BASS			VOLUME ▲ ; UP			
CH V ; ⏏	⏏		⏏ PRESET				⏏ ; ⏏ SEARCH			
CH A ; ⏏	⏏		⏏ PRESET				⏏ ; ⏏ SEARCH			
⏏ ; SAT	10<		+10	10			+10 ; MEMORY			
CLEAR ; X	DELETE		CLEAR				■ ; CLEAR			
⏏ ; ●	⏏		⏏ ; TUN.DOWN	CLOCK		⏏ ; ⏏ (DECK1)	⏏ MS (DECK2)	⏏ ; ⏏ SEARCH	⏏ ; ⏏ (DECK1)	⏏ MS (DECK2)
▶ ; i	▶ ; PLAY		CD ⏏	▶ / ◀ ▶ ; DIR. ; PRES.		⏏ ; ▶ (DECK1)	⏏ ▶ (DECK2)	▶ ⏏	⏏ ; ▶ (DECK1)	⏏ ▶ (DECK2)
⏏ ; ?	⏏		⏏ ; TUN. UP	-		⏏ ; ⏏ (DECK1)	⏏ MS (DECK2)	⏏ ; ⏏ SEARCH	⏏ ; ⏏ (DECK1)	⏏ MS (DECK2)
■ ; ⏏	■ ; STOP		■ ; CLEAR	-		■ (DECK1/DAT)	■ (DECK2)	■ ; CLEAR	■ (DECK1/DAT)	■ (DECK2)
⏏ ; ⏏	⏏ ; PAUSE		CD ⏏	⏏ ; SET		⏏ ; ⏏ (DECK2)	⏏	▶ ⏏	⏏ ; ⏏ (DECK2)	⏏
1, 2, ... 9, 0	1, 2, ... 9, 10		1, 2, ... 9, 0			1, 2, ... 9, 10/0				

Функции кнопок пульта IRC 01 F

Кнопки пульта IRC 01 F	Код 321		Код 322		Код 323	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	CD				DVD/CD	
AUDIO ; NICAM	PHONO				AUDIO	SURROUND
VIDEO ; SYS	VIDEO/AUX				VIDEO1	VIDEO2
⏏ ; ZOOM					ZOOM	
▼ ; TV	TUNER				TV	
□ ; ◀▶	MW				TUNER/BAND	
⏏ ; LOCK	LW				↔ ; ANGLE	
▲ ; FAV					CABLE/SAT.	
⏻	POWER				POWER	
AV					TV/VIDEO	DIGITAL/ANALOG
⏻			● (DECK 1)	● (DECK 2)	MUTE	
MENU	PRGM				MENU	PRGM
EXIT					↶ ; RETURN	
▲	▲				▲	CENTER +
◀	◀				◀	REAR -
OK	GEQ OFF/ON				ENTER	
▶	▶				▶	REAR +
▼	▼				▼	CENTER -
✳ ; SETUP	FM				SETUP	MIDNIGHT
♪ ; TITLE	FM MODE				TITLE/CHP.	BASS/TRE
⏏	PRGM CD				TOP MENU	
GUIDE	MANUAL				SP SETUP	
⏻	SLEEP				SLEEP	
⏏					SUBTITLE	
RED ; ●	TAPE 1		● ; REC (DECK 1)	● ; REC (DECK 2)	REPEAT	
GREEN ; ⏏	TAPE 2/DAT				MONO TU	
YELLOW ; ◀	11		◀ (DECK 1)	◀ (DECK 2)	SLOW ◀	
BLUE ; ▶	12				SLOW ▶	
⏏	DISPLAY				ON SCREEN	
↺					RANDOM	
VOL -	VOLUME ▼				VOLUME -	SUBWOOFER -
VOL +	VOLUME ▲				VOLUME +	SUBWOOFER +
CH V ; ◀◀	◀◀				◀◀	
CH ▲ ; ▶▶	▶▶				▶▶	
✳ ; SAT	10<				+10	
CLEAR ; X					C	
◀◀ ; ●	◀◀		◀◀ MS (DECK 1)	◀◀ MS (DECK 2)	◀◀ ; TUNING -	
▶ ; i	▶		▶ (DECK 1)	▶ (DECK 2)	▶ ; PRESET	
▶▶ ; ?	▶▶		▶▶ MS (DECK 1)	▶▶ MS (DECK 2)	▶▶ ; TUNING +	
■ ; ✳	■		■ (DECK 1)	■ (DECK 2)	■ ; CLEAR	
■ ; ⏏	■				■ ; SET	
1, 2, ... 9, 0	1, 2, ... 9, 10/0				1, 2, ... 9, 0	

Функции кнопок пульта IRC 01 F

Кнопки пульта IRC 01 F	Коды 501-765	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM		
VIDEO ; SYS		
⏏ ; ZOOM		
▼ ; TV		
□ ; ◀▶		
⏏ ; LOCK		
▲ ; FAV		
⏻	POWER ; ⏻	
AV	TV/VIDEO ; TV/AV	
⏻	MUTE ; ⏻	
MENU		
EXIT		
▲		
◀		
OK		
▶		
▼		
✳ ; SETUP		
♪ ; TITLE		
⏏		
GUIDE		
⏻		
⏏		
RED ; ●		
GREEN ; ⏏		
YELLOW ; ◀		
BLUE ; ▶		
⏏		
↺		
VOL -	VOLUME ▼ ; ◀—	
VOL +	VOLUME ▲ ; ▶+	
CH V ; ◀◀	CHANNEL ▼ ; P-	
CH ▲ ; ▶▶	CHANNEL ▲ ; P+	
✳ ; SAT		
CLEAR ; X		
◀◀ ; ●		
▶ ; i		
▶▶ ; ?		
■ ; ✳		
■ ; ⏏		
1, 2, ... 9, 0	1, 2, ... 9, 0	

Ссылка на таблицы функций кнопок баз кодов 8 и 9 (SAT, STB, DVB устройства) находится в разделе "Инструкции к пультам IRC" на сайте www.pult-irc.ru