

Приложение IRC 02 F (версия 20.07.29 01:59)

Модели оригинальных пультов и соответствующие им коды пульта IRC приведены в разделе "Коды пульта IRC 02 F".

Функции всех кнопок для каждого кода пульта IRC можно узнать из таблиц данного приложения.

Пульт IRC может иметь дополнительные функции (если указаны в столбце "Доп. функция"). Доступ к ним осуществляется при помощи кнопки SHIFT (см. в инструкции рис.1, п.16). Для доступа к дополнительным функциям нажмите кнопку SHIFT и, удерживая её нажатой, нажмите ту кнопку, дополнительная функция которой Вам необходима.

После первой установки батареек

Кнопка устройства пульта IRC	Код пульта IRC
TV	133
VCR	135
AUX	129
SAT	130

Кнопка устройства пульта IRC	Код пульта IRC
SHIFT + TV*	113
SHIFT + VCR*	132
SHIFT + AUX*	301
SHIFT + SAT*	309

* Нажмите кнопку SHIFT и, удерживая её нажатой, нажмите и отпустите одну из кнопок пульта: TV, VCR, AUX или SAT.

Доступные коды пульта IRC 02 F

Номер базы кодов (диапазон кодов)	Устройство базы кодов	Доступные коды пульта IRC
1 (101-199)	TV	101 - 159
2 (201-299)	VCR	201 - 209
3 (301-399)	AUX	301 - 323
4 (401-499)	-	Нет
5 (501-599)	TV	501 - 599
6 (601-699)	TV	601 - 699
7 (701-799)	TV	701 - 736
8 (801-899)	SAT	801 - 899
9 (901-999)	SAT	901 - 999

Коды пульта IRC 02 F

Коды к устройствам марки АКАИ

Модель*	Устр-во	Код
105-212H	TV	102
190490	TV	111
5251-902	TV	153
8897	TV	154
939P245A9	TV	121
A0001011	TV	130
A0001012	TV	135
A0001013	TV	146
A0001024	TV	141
A1001021	TV	130
A1001023	TV	146
A1001032	TV	149
A1001033	TV	158
A1001034	TV	146
A3001011	TV/AUX	148
A4001031	TV/AUX	143
A4001032	TV	141
A4001033	TV	159
A7001011	AUX, CD, DVD	323
AK-405	AUX, CD, DVD	302
BT-0305A	TV	135
BT-0384A	TV	113
CT9432	TV	105
CT9498	TV	105
CX-507	TV	152
DVD-01	AUX, CD, DVD	321
DVD-02	AUX, CD, DVD	322
DV-P4530SK	AUX, CD, DVD	303
DV-P4745KDS	AUX, CD, DVD	305
DV-P4770DSM	AUX, CD, DVD	306
DV-P4775KDSM	AUX, CD, DVD	306
DV-P4790KDSM	AUX, CD, DVD	306
DV-P4799KDMC	AUX, CD, DVD	318
DV-P4990KDSM	AUX, CD, DVD	317
DV-P5330SL	AUX, CD, DVD	320
DV-R4050VSMK	AUX, CD, DVD	316
DV-R5000DST	AUX, CD, DVD	315
GC0VA1018SJ	TV	139
GC0VA1028SJ	TV	138
IRC	VCR	209
IRS1 PIP	TV	102
IRS2	TV	102
IRS3	TV	102
JC-94HB	AUX, CD, DVD	319
JJ-830S-1-B	TV	151

Модель	Устр-во	Код
JK-3009	AUX, CD, DVD	309
JK-3009-1	AUX, CD, DVD	309
JX-2002	AUX, CD, DVD	301
JX-2022E	AUX, CD, DVD	310
JX-2055A	AUX, CD, DVD	314
JX-2055AB	AUX, CD, DVD	314
JX-9001-1-B	AUX, CD, DVD	313
JX-9006A	AUX, CD, DVD	312
KF-8000X	AUX, CD, DVD	304
KM-228	AUX, CD, DVD	308
KZG-108	TV/AUX	145
KZG-108A	TV/AUX	145
KZG-201	AUX, CD, DVD	307
LEA-32A08G	TV	149
LM-E15CCSA	TV	126
LTA-15E307	TV	156
LTA-32R5W4HCM	TV	140
M105	TV	130
OBDD 12131	TV/AUX	147
R-34	TV	134
R-83301	TV	123
R-83308	TV	120
RC01-S512	TV	155
RC01-V59	TV	155
RC03-51	TV	133
RC-1153012	TV	124
RC-15C302	TV	131
RC-19	TV	111
RC-190	TV	128
RC-20	TV	142
RC-205	TV	110
RC-22B	VCR	203
RC-23	VCR	203
RC-23A	VCR	203
RC-23A-GB	VCR	203
RC-2408A	VCR	204
RC-240A	VCR	204
RC-240B	VCR	204
RC-250E	VCR	201
RC-2570	TV	102
RC-2570F	TV	102
RC-31A	VCR	203
RC-35A	VCR	203
RC-37	VCR	203
RC-425	VCR	203

Модель	Устр-во	Код
RC-425A	VCR	203
RC-465	VCR	203
RC-51A	TV	101
RC-55	VCR	204
RC-556	TV	118
RC-56A	VCR	203
RC-605A	VCR	203
RC-6129 (DVD)	AUX, CD, DVD	309
RC-6129 (TV)	TV	135
RC-61A	TV	101
RC-61B	TV	102
RC-71A	VCR	201
RC-71C	TV	114
RC-85	TV	103, 104
RC-9272	VCR	203
RC-F211	TV	107
RC-F311	TV	107
RC-F552	TV	108
RC-F703	TV	107
RC-G21	TV	118
RCK-1000	TV	111
RCK-142	TV	119
RCK-1420	TV	111
RCK-143	TV	109
RCK-144	TV	110
RCK-144A	TV	106
RCK-146	TV	111
RCK-147	TV	118
RCK-148	TV	110
RCK-148NZ	TV	110
RCK-2001	TV	111
RCK-202	TV	109
RCK-206	TV	111
RCK-206NZ	TV	111
RC-N1A	TV	116
RC-N1A (VCR)	VCR	202
RC-N2A	TV	116
RC-N2A (VCR)	VCR	202
RC-T4	VCR	204
RC-T8	VCR	204
RC-V10A	VCR	203
RC-V11	VCR	203
RC-V1102F	VCR	201
RC-V1105	VCR	204
RC-V115	VCR	204

Модель	Устр-во	Код
RC-V11A/EB	VCR	208
RC-V15	VCR	203
RC-V155	VCR	204
RC-V165A	VCR	204
RC-V19A	VCR	203
RC-V200	VCR	205
RC-V200E	VCR	201
RC-V22	VCR	203
RC-V220E	VCR	201
RC-V22A	VCR	203
RC-V22B	VCR	203
RC-V23A	VCR	203
RC-V23B	VCR	203
RC-V23E	VCR	201
RC-V240B	VCR	204
RC-V250E	VCR	201
RC-V252E	VCR	203
RC-V252F	VCR	202
RC-V260E	VCR	201
RC-V26E	VCR	201
RC-V27E	VCR	201
RC-V31A	VCR	203
RC-V33A	VCR	203
RC-V37A	VCR	203
RC-V37B	VCR	204
RC-V38A	VCR	204
RC-V38B	VCR	203
RC-V404	VCR	204
RC-V425	VCR	203
RC-V425A	VCR	203
RC-V426A	VCR	203
RC-V465A	VCR	203
RC-V466A	VCR	203
RC-V502F	VCR	201
RC-V51	VCR	203
RC-V51A	VCR	203
RC-V53A	VCR	203
RC-V55	VCR	203
RC-V55A	VCR	203
RC-V6	VCR	206
RC-V601A	VCR	203
RC-V603B	VCR	204
RC-V655A	VCR	203
RC-V655A/II	VCR	204
RC-V66A	VCR	203

* По каталогу «IRC»

Коды пульта IRC 02 F

Коды к TV, VCR, AUX устройствам марки AKAI

Модель	Устр-во	Код
RC-V73A	VCR	203
RC-V765	VCR	201
RC-V765A	VCR	203
RC-V7A	TV	116
RC-V7A (VCR)	VCR	202
RC-V82A	VCR	203
RC-V865A	VCR	203
RC-V866A	VCR	203
RC-V965A	VCR	203
RC-V966A	VCR	203
RC-V9A	TV	116
RC-V9A (VCR)	VCR	202
RC-VSP3	VCR	205
RC-W001TV	TV	124
RC-W1013	VCR	201
RC-W152E	VCR	201
RC-W153	VCR	201
RC-W159E	VCR	201
RC-W400E	VCR	201
RC-W612F	TV/VCR	207
RC-X101E	VCR	201
RC-X121E	VCR	201
RC-X176E	VCR	201
RM-101	TV	110
RM-109	TV	118
RM-109/II	TV	118
RM-113	TV	117
RM-3481	AUX, CD, DVD	311
RM-40	TV	129
RM-400	TV	129
RM-610	TV	127
RM-611	TV	127
SLP-006P	TV	137
SOME MODELS	TV	112
SOME MODELS	TV	115
TH-2-56	TV	116
TV-01	TV	122
TV-02	TV/AUX	136
TV-04	TV	135
TV-05	TV	144
TV-06	TV	150
TV-07	TV	157
TVD3	TV	125
TVD34	TV	132
TVD34-M1-1	TV/AUX	143

Модель	Устр-во	Код
Y-72C2 MEDIA	TV	158
ZD3279 (DVD)	AUX, CD, DVD	309
ZD3279 (TV)	TV	133

Коды к TV устройствам различных марок

Марка	Код
AEG	544
AIWA	502, 503, 523, 528, 579, 634, 678, 706, 710, 712, 716
AKAI	501, 503, 512, 516, 520, 522, 524, 525, 537, 538, 540, 545, 546, 547, 550, 571, 572, 582, 583, 584, 585, 596, 598, 608, 613, 626, 652, 673, 691, 704, 708, 711, 722, 731
AKIRA	511, 514, 516, 522, 524, 525, 537, 538, 541, 545, 547, 556, 577, 586, 594, 597, 598, 601, 623, 626, 629, 631, 649, 666, 680, 689, 690, 693, 699, 717
AMCOL	501, 525, 545
ANITECH	501, 525, 616, 726
ATLANTA	501
AVEST	537, 538, 539
BANG & OLUFSEN	728
BBK	522, 551, 594, 597, 684, 701
BEKO	525, 530, 535, 559, 723
BIGSTON	501, 503
BLAUPUNKT	512
BORK	525, 547, 646
BRAND	711
BROKSONIC	501
CAMERON	538, 550, 567, 675, 697, 702
CASIO	529, 705, 706
CHANGHONG	516, 596, 642
CLATRONIC	501, 545, 559, 571
CONTEC	501, 603, 604, 613
CORTLAND	644
CROWN	501, 503, 511, 524, 525, 530, 571
DAEWOO	501, 508, 518, 520, 525, 526, 536, 538, 539, 546, 565, 571, 576, 598, 613, 685, 687, 692
DARTLAND	501
DAYTRON	501
DEXP	516, 579, 596, 684, 702
DIGITAL	547
DISTAR	562, 616
DNS	596, 702, 708
DOFFLER	684, 708
ELEKTA	501, 503, 520, 525, 527, 615
ELEKTRONIKA	583
ELENBERG	538, 545, 550, 565, 567, 579, 581, 644, 655, 676, 683, 717
EPLUTUS	537, 644, 677, 682, 697, 724
ERC	537, 631
ERISSON	511, 514, 516, 525, 526, 537, 538, 541, 550, 556, 561, 568, 586, 596, 599, 623, 626, 629, 631, 711, 712, 714
EVGO	538, 540, 630
FINLUX	501, 511, 583, 589, 608, 732
FUJITSU	544, 573
FUNAI	501, 502, 503, 504, 505, 525, 537, 538, 581, 603
FUSION	596, 642, 699, 705, 706
GBS	501, 520, 525, 571, 583
GENERAL	537, 556
GOLD STAR - LG	501, 512, 518, 525, 527, 559, 570, 583, 584, 589, 609, 613, 642, 706, 712
GRUNDIG	501, 512, 525, 606, 662, 718, 719, 733
HAIER	518, 526, 561, 574, 657, 667, 669, 707
HAPPY	501
HARPER	706, 712
HCM	501, 503, 525
HELIX	701, 702, 708
HIL	503
HISENSE	525
HITACHI	501, 515, 518, 522, 525, 537, 544, 548, 554, 578, 584, 587, 588, 604, 613, 640, 729
HORIZONT	525, 540, 545, 550, 559, 583, 664, 672
HPC	546
HYUNDAI	516, 518, 522, 525, 526, 537, 538, 540, 541, 546, 547, 550, 556, 580, 596, 597, 599, 626, 642, 648, 650, 655, 705, 711, 712, 714, 717
INNO-HIT	501, 525, 571
IRBIS	596, 714
IVA (MBA)	537, 561, 637
IZUMI	516, 537, 596, 663, 691, 695, 703, 705, 711
JINLIPI	537, 637
JVC	513, 515, 593, 604, 727
KAMACROWN	571
KANSAI	501, 525
KENSTAR	516
KITT	503, 613, 616, 726
KONKA	537, 538, 560, 561, 581, 616, 626, 717
KRONMARK	596
LOEWE	542, 709
MEDION	525
MITSUBISHI	501, 520, 522, 525, 604, 611, 722, 728
MIYOTA	537, 644, 656
MTC	501, 583
MULTITECH	501, 525
MYSTERY	516, 537, 597, 642, 650, 653, 701, 702, 708
NAD	518, 525
NASH	537
NEC	501, 517, 520, 526, 552, 604, 625, 722
NESCO	501, 525
NESONS	708
NOKIA	519, 584, 610, 614, 616
NOVA	501, 616, 638
NOVEX	516, 546, 599
OMEGA	501, 571
ONIDA	513
ONIKS	516, 525, 537, 545, 546, 547, 680
ONWA	524, 525
OPERA	644, 666, 682
ORBITA	635
ORION	501, 503, 506, 507, 509, 516, 525, 528, 537, 591, 603, 617, 619, 627, 641, 643, 664, 715, 720, 722, 729
ORSON	526, 537
PANASONIC	512, 531, 532
PHANTOM	644
PHILIPS	501, 511, 524, 525, 540, 549, 628, 639, 707
PHOENIX	613
PHOENIX GOLD	708

Коды к TV устройствам различных марок

Марка	Код
PIONEER	548, 555, 566, 575, 647, 666
PIXELVIEW	525
PLANTRON	735
POLAR	525, 526, 537, 538, 540, 543, 546, 547, 581, 596, 599, 663, 664, 683, 703, 711, 717
POLAROID	525
PRESTIGIO	564, 656
PRIMA	522, 547
PROLOGY	653, 655
RADUGA	525, 545, 569, 583
RAINFORD	525, 537, 544, 545
RECOR	511, 525
REKORD	520, 525, 526, 537, 538, 539, 545, 547, 725, 736
RFT	535, 618, 728
ROADSTAR	501, 508, 525, 571
ROLSEN	503, 516, 525, 537, 538, 540, 543, 546, 564, 576, 592, 594, 596, 649, 656, 669, 684, 714
ROVERSCAN	662
ROYAL	501, 503, 525, 616
RUBIN	504, 516, 525, 537, 546, 583, 619, 665, 714
SABA	509, 510, 521, 602
SALORA	584
SAMSUNG	501, 525, 526, 529, 563, 580, 595, 596, 608, 612, 613, 622, 641, 645, 688, 723
SANSUI	524, 525, 538, 556, 695
SANYO	501, 519, 522, 525, 530, 540, 544, 550, 558, 604, 608, 610, 618, 621, 696, 722, 730, 734
SATURN	702, 708
SCARLETT	541, 545
SCHNEIDER	525, 540, 571
SELECO	736
SETRO	520
SHARP	526, 544, 548, 604, 707, 721
SHERION	616
SHIVAKI	501, 503, 508, 516, 518, 520, 525, 526, 527, 536, 538, 539, 540, 545, 546, 547, 550, 556, 580, 583, 585, 596, 599, 609, 619, 630, 632, 635, 636, 643, 644, 664, 681, 694, 708
SIEMENS	512, 525, 660, 726, 734
SIESTA	501, 537, 637
SILELIS	613
SILVER	633
SITRONICS	503, 516, 525, 537, 538, 540, 543, 545, 594, 626, 629, 661, 671, 672, 674, 679, 680, 686
SOKOL	516, 525, 547, 635
SONY	533, 604, 659, 722
SPEKTR	525, 538, 668
START	525, 537, 545, 546, 547
STASSFURT	535, 618
STINOL	525
SUPER	537, 561, 644, 653, 654, 655, 666, 677, 682, 724
SUPER GENERAL	537
SUPRA	501, 508, 516, 518, 520, 522, 525, 527, 529, 536, 537, 541, 563, 579, 580, 596, 597, 612, 642, 643, 687, 690, 705, 706, 712, 713
SUZUKI	516, 556
SVEN	574
TCL	521, 538, 540, 642
TEAC	525
TECHNICS	531, 537, 538
TECHNO	501, 525, 538, 544, 546, 556, 568, 579, 596, 599, 644, 664, 703
TECKTON	522, 582, 601, 669, 670
TELEFUNKEN	510, 521, 561, 590, 602, 605, 642, 708, 712, 714
TELEVISION	501, 525, 616
THOMSON	509, 510, 521, 550, 579, 602, 624, 642, 702
TOSHIBA	516, 544, 553, 604, 651
TRONY	516, 525, 537, 538, 550, 574, 657
TVT	511, 525, 530, 535, 538, 583, 586, 620, 630, 723
UNITED	525
VARTA	642
VESTEL	525, 544, 556, 583, 619
VIEWSONIC	557, 698
VITA	547
VITEK	537, 650
VITYAS	525, 708
VOLNA (ВОЛНА)	635
VR	516, 537, 565, 598, 702, 714
WALTHAM	503, 509, 511, 583, 584, 607, 613, 729
XORO	522, 526, 545
XPX	663
НЕИЗВЕСТНАЯ МАРКА	525, 546, 574, 596, 648, 656, 666, 711

Коды к SAT устройствам различных марок

Марка	Код
AIRTONE	968
ALFA GOLD	828
AMINO (СТРИМ)	829, 902
ARION	835
ARRIS	883, 963, 974
ASTON	811
BBK	931
BIG STAR	965
BIGSAT	839, 840, 903, 936
CADENA	958, 962
CONTINENT	886, 975
COSHIP	855
DAEWOO	872
D-COLOR	946, 961
DELTA SYSTEMS	985
DIGIFORS	946
DIVISAT	957, 958
D-LINK	923
DNS	950, 968
DR.HD	983
DRE	804, 888
DREAM	819
DUNE	927, 934
ECHOSPACE	862
ECHOSTAR	808, 809, 822
ELTEX	987
EPLUTUS	961
EUROSKY	840, 981
EUROSTAR	863
EUSTON	825
EVO	965
GALAXY INNOVATIONS (GI)	878, 881, 908, 911, 912, 917, 924
GENERAL SATELLITE	804, 868, 888, 907, 933, 954
GLOBALTEQ	833
GLOBO	909, 915, 925, 935, 945, 956, 971, 973, 995, 999
GOLD STAR - LG	871
GOLDEN INTERSTAR	821, 841, 879, 918
GOLDEN MEDIA	847, 912
GOLDMASTER	911
HD BOX	847, 911
HITACHI	824, 832
HIVION	929
HOME	968
HOMECAST (ВОЛЯ)	820, 831, 836
HUAVEE	946
HUMAX	803, 804, 823, 848, 860, 861, 905, 949
HYUNDAI	968
ID DIGITAL	804
INTEK	984
INTERCROSS	988
INTRO	978
KAON	820, 949
KARTINA TV	934
KOSMOS	855, 856
LANS	970
LOCUS	946
LUMAX	852, 873, 907, 913, 965, 994
MAG	988
MEDIA COM	825
MOTOROLA	883, 884, 901, 974
MYSTERY	910, 997
NDS	814
NEXT	864
NOKIA	813
NOT	941
ONLIME	905
OPENBOX	827, 835, 869, 870, 911, 990, 991
OPENTECH	972
OPENTEL	865
OPTICUM	971
ORBITA	946, 995
ORIEL	887, 926, 941, 948, 955, 986
PACE	801, 932, 953
PATIX DIGITAL	946, 967, 992
PAUXIS	842, 859
PERFEO	960, 981
PHILIPS	857, 899
PIONEER	851
POLAR	858
REFLECT	959
REXANT	977
RIKOR	916, 947
ROLSEN	930, 941, 942, 961
SAGEMCOM	906
SAMSUNG	803, 810, 812, 854
SEG	818
SELENGA	946
SEZAM	882
SKY VISION	952, 966, 977, 982
SKYMASTER	830
SKYWAY	911
SKYWORTH	989
STAR	833
STAR TRACK	826, 835, 943
STARNET	885
STRONG	805, 806, 815, 816, 817, 828, 830, 914
SUNNIWELL	875
SUPERBOX	903

Коды к SAT устройствам различных марок

Марка	Код
SUPERMAX	821, 866, 880, 924
SUPRA	950, 960, 962
TECHNOSAT	852, 853
TEL-ANT	960
TELEFUNKEN	961, 968
TESLER	926
TOP BOX	965
TOPFIELD	837, 838, 877, 891
TOSHIBA	876
TV STAR	967
TVJET	946, 976
VESTEL	820, 824
VU+	919, 920, 921, 922
WORLD VISION	821, 928, 951, 952, 961, 968
XSAT	801, 807
XSAT (НТВ+)	801, 802, 807, 906, 972, 984, 998
YUXING	904
ZYXEL	874
АРБАКОМ	967
БИЛАИН	883, 884, 901, 923
ВОЛГАТЕЛЕКОМ	842, 843, 844, 845, 846, 847, 849, 850, 858, 867
ДОМ.RU	820, 905
ДОМОЛИНК	874, 904
МТС	829, 855, 902, 964, 974, 979, 980, 989, 993
НЕИЗВЕСТНАЯ МАРКА	834, 835, 842, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 903, 904, 937, 938, 939, 940, 944, 945, 969, 971, 978, 996
РОСТЕЛЕКОМ	874, 904, 923, 963, 988, 993
СИГНАЛ	867, 968
ТВОЁ ТВ	820
ТЕЛЕКАРТА	867, 909, 973
ТЕЛЕЦИФРА	968

Функции кнопок пульта IRC 02 F к TV устройствам

Кнопки пульта IRC 02 F	Код 101		Код 102		Код 103		Код 104		Код 105	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD					MAC			⊕ +	PIP CH ▲	
AUDIO; NICAM					AUDIO; SOUND				⊞ I/II	-I/-
VIDEO; SYS					VIDEO; PICTURE		VIDEO; PICTURE		◀; PIP	
☐; ZOOM					S; R; ZOOM; SAT				16:9; PIC SIZE; ☐	SEARCH
▼; TV			TV		TV		TV	⊕ -	PIP CH ▼	
⊞; ↗					MULTI; ☐; >>	M; STORE	M; STORE		PIP; ☐; ☐; ☐	
☐; LOCK	NORMAL		NORM; ●		→<; IDEAL		→<; IDEAL		→<; →<; PP	STILL; ☐
▲; FAV					AUTO				☐; SWAP	
⊞	⊞		⊞		⊞		⊞		⊞	
AV	TV/VCR; TV/AV		AV		AV; ☐; ☐		AV; ☐; ☐		☐; ☐	
⌘	⌘; MUTE		⌘		⌘; MUTE		⌘; MUTE		⌘	⌘; 19'
MENU			M		MENU		MENU		MENU	
EXIT			C						EXIT	
▲			T+	⊕ +	▲ (MENU); ☐; ☐	▲ (TEXT)	▲ (VIDEO)	▲ (AUDIO)	MENU +; +; ▲	▲
◀			◀	⊕ -	◀ (MENU)	◀ (TEXT)	◀ (VIDEO)	◀ (AUDIO)	▼ U	☐ ◀ ◀
OK									ENTER; OK	
▶			▶	⊕ +	▶ (MENU)	▶ (TEXT)	▶ (VIDEO)	▶ (AUDIO)	▲ V	☐ ▶ ▶
▼			T-	⊕ -	▼ (MENU)	▼ (TEXT)	▼ (VIDEO)	▼ (AUDIO)	MENU -; -; ▼	▼
⌘; SETUP	PICTURE		⌘		⌘; ☐		⌘; ☐		⌘; ☐; ☐; ☐	
♪; TITLE			⌘ +		I/II		I/II		⌘; ☐; ☐; ☐; ☐	☐; ☐; ☐; ☐
☐	TEXT; TV/TXT		☐		☐; TEXT		☐; TEXT		☐; TEXT/TV; ☐	
GUIDE					PROG				STROBE	
⊞	SLEEP; ☐		⊞; ☐; ☐		⊞		⊞		⊞	⊞; ☐
☐	MIX		☐		☐		☐		KARAOKE	
RED; ●	RED; R		RED	⌘ -	RED; ☐; P - ☐	⌘ -	RED; ☐; P - ☐	⌘ -	RED	☐
GREEN; ▶	GREEN; G		GREEN	⌘ +	GREEN; ☐; P + ☐	⌘ +	GREEN; ☐; P + ☐	⌘ +	GREEN	☐
YELLOW; ◀	YELLOW; Y		YELLOW	⌘ -	YELLOW; ☐; ☐; ☐	⌘ -	YELLOW; ☐; ☐; ☐	⌘ -	YELLOW	☐
BLUE; ▶	BLUE; C		BLUE	⌘ +	BLUE; ☐; ☐; ☐	⌘ +	BLUE; ☐; ☐; ☐	⌘ +	BLUE	☐
☐	DISPLAY; INDEX; ☐				☐		☐		CALL; ☐; ☐	
☐			P/C		☐		☐		☐	P/C
VOL -	◀; FLOF		◀		VOLUME -; ◀	⊕ -	VOLUME -; ◀	◀; I/II; SAT	◀; -; ◀; V-	
VOL +	▶; LIST		▶		VOLUME +; ▶	⊕ +	VOLUME +; ▶	▶	◀; +; ▶; V+	
CH V; ◀	CH ▼; PR/PG -		P -		-; P -; SAT ◀		-; P -; SAT ◀	▼	0-49; ▼	
CH ▲; ▶	CH ▲; PR/PG +		P +		+; P +; SAT ▶		+; P +; SAT ▶	▲	0-49; ▲	
⌘; SAT	10+; ⌘		⌘		⌘		⌘		-; -; 1-	
CLEAR; X			☐		UPD; X				☐; 2-	☐; ☐; ☐
◀; ☐	SUB PAGE		☐		☐		☐		☐	
▶; i	INDEX		☐		☐; i		☐; i		☐	
▶; ?	REV		☐		☐; ?		☐; ?		☐	
☐; X	NORMAL; HOLD		☐		☐; ☐		☐; ☐		☐	
☐; ☐	EXP		☐		☐; S-AV; ☐; ☐		☐; S-AV; ☐; ☐		☐	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 02 F к TV устройствам

Кнопки пульта IRC 02 F	Код 106		Код 107		Код 108		Код 109		Код 110	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	⊕ ☐ ▲						▶; FIN +		COLOUR +; ☐ +	
AUDIO; NICAM			⌘; ⌘		⌘; ⌘				MODE; P/S	
VIDEO; SYS	SYSTEM		WHITE						SIZE	
☐; ZOOM									COLOUR -; ☐ -	
▼; TV	⊕ ☐ ▼		☐		☐		◀; FIN -		PIP	
⊞; ↗	PRESET		2#; M+1	+1 →	20; #; →; M+1	+1 ↗	AUTO.S		STILL	
☐; LOCK			→<		→<				FC	
▲; FAV							⊞; POWER		POWER; ☐	
⊞	⊞		⊞		⊞		AV; TV/AV		TV/VIDEO; TV/AV	
AV	☐ AV		AV		AV		MUTE; MUTING		MUTE; ⌘	
⌘	⌘; MUTE		⌘		⌘				FUNCT; MENU	
MENU										
EXIT										
▲	AUTO/S ▲		⌘ +		⌘ +	⌘ +	⌘ ☐ +		FUN+; +; ▲; ZOOM	
◀	FT ▼		⊕ -		⊕ -	⌘ -			⌘ -; ☐ -	
OK	SELECT								PIC SEL; FUNCT	
▶	FT ▲		⊕ +		⊕ +	⌘ +			⌘ +; ☐ +	
▼	AUTO/S ▼		⌘ -		⌘ -	⌘ -			FUN-; -; ▼; -PI-	
⌘; SETUP	Q.VIEW		⌘ +		⌘ -	⌘ -	⌘ ☐ -		PIC; SET ON TIME	
♪; TITLE	AFT/BAND		HIFI		HIFI		PIC; M.CH		X ON TIME	
☐	ON TIMER		☐		☐		BAND		MIN; MINUTE	
GUIDE	TIMER ENABLE								HOURL; HR CLOCK	
⊞	SLEEP		☐		☐		TIMER; NORM		SLEEP; OFF TIME; ☐	
☐	HOUR		☐ PHONE ON		☐; P-1					
RED; ●	2-		RED; ☐		RED; FTB; ☐		13		1-; 10-	
GREEN; ▶	3-		GREEN; PH. OFF		GREEN		14		2-	
YELLOW; ◀	4-		YELLOW; ☐		YELLOW; ☐		15		3-; SCAN	
BLUE; ▶	MINUTE		BLUE; ☐		BLUE; ☐		16		4-; MSG	
☐	CH CALL		↔		↔				RECALL; DISPLAY	
☐					P/C				⌘; Q.VIEW; ☐	
VOL -	◀		◀ ▶	⌘ -	VOL -		◀; VOL. DOWN		VOLUME ▼; ◀	
VOL +	▶		▶	⌘ +	VOL +		▶; VOL. UP		VOLUME ▲; ▶	
CH V; ◀	PR ▼		⌘ -		# -; CH. DOWN		# -; CH. DOWN		CHANNEL ▼; P -	
CH ▲; ▶	PR ▲		⌘ +		# +; CH. UP		# +; CH. UP		CHANNEL ▲; P +	
⌘; SAT	1-		10; *; MR		-; -; *		11		+	
CLEAR; X	SKIP		20		☐		12		RESET; CANCEL; X	
◀; ☐			☐		☐					
▶; i			☐		☐					
▶; ?			☐		☐					
☐; X			☐		☐					
☐; ☐			☐		☐					
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		ZOOM	
									1, 2, ... 9, 0	

Функции кнопок пульта IRC 02 F к TV устройствам

Кнопки пульта IRC 02 F	Код 111		Код 112		Код 113		Код 114		Код 115							
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция						
▲; DVD							DNR; PWR PIX	+; [D]	▶▶; LIST							
AUDIO; NICAM							[G]; [H]; I-I; SAP; [I]; S/M/D		AUDIO							
VIDEO; SYS							[K]; [L]									
[Z]; ZOOM	H.ADJ						[M]; 16:9	[N]; [O]								
▼; TV			TV				[P]; [Q]	[R]; Y	◀◀; HOLD							
[S]; [T]			▲; M				[U]; [V]; [W]; [X]; [Y]; [Z]; [AA]; [AB]; [AC]; [AD]; [AE]; [AF]; [AG]; [AH]; [AI]; [AJ]; [AK]; [AL]; [AM]; [AN]; [AO]; [AP]; [AQ]; [AR]; [AS]; [AT]; [AU]; [AV]; [AW]; [AX]; [AY]; [AZ]; [BA]; [BB]; [BC]; [BD]; [BE]; [BF]; [BG]; [BH]; [BI]; [BJ]; [BK]; [BL]; [BM]; [BN]; [BO]; [BP]; [BQ]; [BR]; [BS]; [BT]; [BU]; [BV]; [BW]; [BX]; [BY]; [BZ]; [CA]; [CB]; [CC]; [CD]; [CE]; [CF]; [CG]; [CH]; [CI]; [CJ]; [CK]; [CL]; [CM]; [CN]; [CO]; [CP]; [CQ]; [CR]; [CS]; [CT]; [CU]; [CV]; [CW]; [CX]; [CY]; [CZ]; [DA]; [DB]; [DC]; [DD]; [DE]; [DF]; [DG]; [DH]; [DI]; [DJ]; [DK]; [DL]; [DM]; [DN]; [DO]; [DP]; [DQ]; [DR]; [DS]; [DT]; [DU]; [DV]; [DW]; [DX]; [DY]; [DZ]; [EA]; [EB]; [EC]; [ED]; [EE]; [EF]; [EG]; [EH]; [EI]; [EJ]; [EK]; [EL]; [EM]; [EN]; [EO]; [EP]; [EQ]; [ER]; [ES]; [ET]; [EU]; [EV]; [EW]; [EX]; [EY]; [EZ]; [FA]; [FB]; [FC]; [FD]; [FE]; [FF]; [FG]; [FH]; [FI]; [FJ]; [FK]; [FL]; [FM]; [FN]; [FO]; [FP]; [FQ]; [FR]; [FS]; [FT]; [FU]; [FV]; [FW]; [FX]; [FY]; [FZ]; [GA]; [GB]; [GC]; [GD]; [GE]; [GF]; [GG]; [GH]; [GI]; [GJ]; [GK]; [GL]; [GM]; [GN]; [GO]; [GP]; [GQ]; [GR]; [GS]; [GT]; [GU]; [GV]; [GW]; [GX]; [GY]; [GZ]; [HA]; [HB]; [HC]; [HD]; [HE]; [HF]; [HG]; [HH]; [HI]; [HJ]; [HK]; [HL]; [HM]; [HN]; [HO]; [HP]; [HQ]; [HR]; [HS]; [HT]; [HU]; [HV]; [HW]; [HX]; [HY]; [HZ]; [IA]; [IB]; [IC]; [ID]; [IE]; [IF]; [IG]; [IH]; [II]; [IJ]; [IK]; [IL]; [IM]; [IN]; [IO]; [IP]; [IQ]; [IR]; [IS]; [IT]; [IU]; [IV]; [IW]; [IX]; [IY]; [IZ]; [JA]; [JB]; [JC]; [JD]; [JE]; [JF]; [JG]; [JH]; [JI]; [JJ]; [JK]; [JL]; [JM]; [JN]; [JO]; [JP]; [JQ]; [JR]; [JS]; [JT]; [JU]; [JV]; [JW]; [JX]; [JY]; [JZ]; [KA]; [KB]; [KC]; [KD]; [KE]; [KF]; [KG]; [KH]; [KI]; [KJ]; [KK]; [KL]; [KM]; [KN]; [KO]; [KP]; [KQ]; [KR]; [KS]; [KT]; [KU]; [KV]; [KW]; [KX]; [KY]; [KZ]; [LA]; [LB]; [LC]; [LD]; [LE]; [LF]; [LG]; [LH]; [LI]; [LJ]; [LK]; [LL]; [LM]; [LN]; [LO]; [LP]; [LQ]; [LR]; [LS]; [LT]; [LU]; [LV]; [LW]; [LX]; [LY]; [LZ]; [MA]; [MB]; [MC]; [MD]; [ME]; [MF]; [MG]; [MH]; [MI]; [MJ]; [MK]; [ML]; [MN]; [MO]; [MP]; [MQ]; [MR]; [MS]; [MT]; [MU]; [MV]; [MW]; [MX]; [MY]; [MZ]; [NA]; [NB]; [NC]; [ND]; [NE]; [NF]; [NG]; [NH]; [NI]; [NJ]; [NK]; [NL]; [NM]; [NO]; [NP]; [NQ]; [NR]; [NS]; [NT]; [NU]; [NV]; [NW]; [NX]; [NY]; [NZ]; [OA]; [OB]; [OC]; [OD]; [OE]; [OF]; [OG]; [OH]; [OI]; [OJ]; [OK]; [OL]; [OM]; [ON]; [OO]; [OP]; [OQ]; [OR]; [OS]; [OT]; [OU]; [OV]; [OW]; [OX]; [OY]; [OZ]; [PA]; [PB]; [PC]; [PD]; [PE]; [PF]; [PG]; [PH]; [PI]; [PJ]; [PK]; [PL]; [PM]; [PN]; [PO]; [PP]; [PQ]; [PR]; [PS]; [PT]; [PU]; [PV]; [PW]; [PX]; [PY]; [PZ]; [QA]; [QB]; [QC]; [QD]; [QE]; [QF]; [QG]; [QH]; [QI]; [QJ]; [QK]; [QL]; [QM]; [QN]; [QO]; [QP]; [QQ]; [QR]; [QS]; [QT]; [QU]; [QV]; [QW]; [QX]; [QY]; [QZ]; [RA]; [RB]; [RC]; [RD]; [RE]; [RF]; [RG]; [RH]; [RI]; [RJ]; [RK]; [RL]; [RM]; [RN]; [RO]; [RP]; [RQ]; [RR]; [RS]; [RT]; [RU]; [RV]; [RW]; [RX]; [RY]; [RZ]; [SA]; [SB]; [SC]; [SD]; [SE]; [SF]; [SG]; [SH]; [SI]; [SJ]; [SK]; [SL]; [SM]; [SN]; [SO]; [SP]; [SQ]; [SR]; [SS]; [ST]; [SU]; [SV]; [SW]; [SX]; [SY]; [SZ]; [TA]; [TB]; [TC]; [TD]; [TE]; [TF]; [TG]; [TH]; [TI]; [TJ]; [TK]; [TL]; [TM]; [TN]; [TO]; [TP]; [TQ]; [TR]; [TS]; [TU]; [TV]; [TW]; [TX]; [TY]; [TZ]; [UA]; [UB]; [UC]; [UD]; [UE]; [UF]; [UG]; [UH]; [UI]; [UJ]; [UK]; [UL]; [UM]; [UN]; [UO]; [UP]; [UQ]; [UR]; [US]; [UT]; [UU]; [UV]; [UW]; [UX]; [UY]; [UZ]; [VA]; [VB]; [VC]; [VD]; [VE]; [VF]; [VG]; [VH]; [VI]; [VJ]; [VK]; [VL]; [VM]; [VN]; [VO]; [VP]; [VQ]; [VR]; [VS]; [VT]; [VU]; [VV]; [VW]; [VX]; [VY]; [VZ]; [WA]; [WB]; [WC]; [WD]; [WE]; [WF]; [WG]; [WH]; [WI]; [WJ]; [WK]; [WL]; [WM]; [WN]; [WO]; [WP]; [WQ]; [WR]; [WS]; [WT]; [WU]; [WV]; [WW]; [WX]; [WY]; [WZ]; [XA]; [XB]; [XC]; [XD]; [XE]; [XF]; [XG]; [XH]; [XI]; [XJ]; [XK]; [XL]; [XM]; [XN]; [XO]; [XP]; [XQ]; [XR]; [XS]; [XT]; [XU]; [XV]; [XW]; [XX]; [XY]; [XZ]; [YA]; [YB]; [YC]; [YD]; [YE]; [YF]; [YG]; [YH]; [YI]; [YJ]; [YK]; [YL]; [YM]; [YN]; [YO]; [YP]; [YQ]; [YR]; [YS]; [YT]; [YU]; [YV]; [YW]; [YX]; [YY]; [YZ]; [ZA]; [ZB]; [ZC]; [ZD]; [ZE]; [ZF]; [ZG]; [ZH]; [ZI]; [ZJ]; [ZK]; [ZL]; [ZM]; [ZN]; [ZO]; [ZP]; [ZQ]; [ZR]; [ZS]; [ZT]; [ZU]; [ZV]; [ZW]; [ZX]; [ZY]; [ZZ]; [1, 2, ... 9, 0]									

Функции кнопок пульта IRC 02 F к TV устройствам

Кнопки пульта IRC 02 F	Код 116		Код 117		Код 118		Код 119		Код 120	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			[B]; BROWSE; [9]; ++		DBB	HUE +				
AUDIO; NICAM			I/II; RGB		[H]; [O]; [M]; STEREO				SOUND; PIC	
VIDEO; SYS	SYSTEM		S-VIDEO; I-II		PAL/SECAM; NIC.		[V]; VIDEO		SYS.; BOOKMARK	
[Z]; ZOOM			ROTATE		[Q]					
▼; TV	TV/AV		[L]; LIST; [9]; -		TV; [Q]	HUE -	TV			
[S]; [T]			STORE	◆	[R]; AST; SEAR; Q.V.		[A]; A/B			
[U]; LOCK	NORMAL		[V]; [W]; IPE		[X]; [Y]; P.P.; OK		NORM; RESET		ANA; PIC.; NORMAL	
▲; FAV					MEMO					
○	○; [K]; [L]; [M]; [N]; [O]; [P]; [Q]; [R]; [S]; [T]; [U]; [V]; [W]; [X]; [Y]; [Z]; [AA]; [AB]; [AC]; [AD]; [AE]; [AF]; [AG]; [AH]; [AI]; [AJ]; [AK]; [AL]; [AM]; [AN]; [AO]; [AP]; [AQ]; [AR]; [AS]; [AT]; [AU]; [AV]; [AW]; [AX]; [AY]; [AZ]; [BA]; [BB]; [BC]; [BD]; [BE]; [BF]; [BG]; [BH]; [BI]; [BJ]; [BK]; [BL]; [BM]; [BN]; [BO]; [BP]; [BQ]; [BR]; [BS]; [BT]; [BU]; [BV]; [BW]; [BX]; [BY]; [BZ]; [CA]; [CB]; [CC]; [CD]; [CE]; [CF]; [CG]; [CH]; [CI]; [CJ]; [CK]; [CL]; [CM]; [CN]; [CO]; [CP]; [CQ]; [CR]; [CS]; [CT]; [CU]; [CV]; [CW]; [CX]; [CY]; [CZ]; [DA]; [DB]; [DC]; [DD]; [DE]; [DF]; [DG]; [DH]; [DI]; [DJ]; [DK]; [DL]; [DM]; [DN]; [DO]; [DP]; [DQ]; [DR]; [DS]; [DT]; [DU]; [DV]; [DW]; [DX]; [DY]; [DZ]; [EA]; [EB]; [EC]; [ED]; [EE]; [EF]; [EG]; [EH]; [EI]; [EJ]; [EK]; [EL]; [EM]; [EN]; [EO]; [EP]; [EQ]; [ER]; [ES]; [ET]; [EU]; [EV]; [EW]; [EX]; [EY]; [EZ]; [FA]; [FB]; [FC]; [FD]; [FE]; [FF]; [FG]; [FH]; [FI]; [FJ]; [FK]; [FL]; [FM]; [FN]; [FO]; [FP]; [FQ]; [FR]; [FS]; [FT]; [FU]; [FV]; [FW]; [FX]; [FY]; [FZ]; [GA]; [GB]; [GC]; [GD]; [GE]; [GF]; [GG]; [GH]; [GI]; [GJ]; [GK]; [GL]; [GM]; [GN]; [GO]; [GP]; [GQ]; [GR]; [GS]; [GT]; [GU]; [GV]; [GW]; [GX]; [GY]; [GZ]; [HA]; [HB]; [HC]; [HD]; [HE]; [HF]; [HG]; [HH]; [HI]; [HJ]; [HK]; [HL]; [HM]; [HN]; [HO]; [HP]; [HQ]; [HR]; [HS]; [HT]; [HU]; [HV]; [HW]; [HX]; [HY]; [HZ]; [IA]; [IB]; [IC]; [ID]; [IE]; [IF]; [IG]; [IH]; [II]; [IJ]; [IK]; [IL]; [IM]; [IN]; [IO]; [IP]; [IQ]; [IR]; [IS]; [IT]; [IU]; [IV]; [IW]; [IX]; [IY]; [IZ]; [JA]; [JB]; [JC]; [JD]; [JE]; [JF]; [JG]; [JH]; [JI]; [JJ]; [JK]; [JL]; [JM]; [JN]; [JO]; [JP]; [JQ]; [JR]; [JS]; [JT]; [JU]; [JV]; [JW]; [JX]; [JY]; [JZ]; [KA]; [KB]; [KC]; [KD]; [KE]; [KF]; [KG]; [KH]; [KI]; [KJ]; [KK]; [KL]; [KM]; [KN]; [KO]; [KP]; [KQ]; [KR]; [KS]; [KT]; [KU]; [KV]; [KW]; [KX]; [KY]; [KZ]; [LA]; [LB]; [LC]; [LD]; [LE]; [LF]; [LG]; [LH]; [LI]; [LJ]; [LK]; [LM]; [LN]; [LO]; [LP]; [LQ]; [LR]; [LS]; [LT]; [LU]; [LV]; [LW]; [LX]; [LY]; [LZ]; [MA]; [MB]; [MC]; [MD]; [ME]; [MF]; [MG]; [MH]; [MI]; [MJ]; [MK]; [ML]; [MN]; [MO]; [MP]; [MQ]; [MR]; [MS]; [MT]; [MU]; [MV]; [MW]; [MX]; [MY]; [MZ]; [NA]; [NB]; [NC]; [ND]; [NE]; [NF]; [NG]; [NH]; [NI]; [NJ]; [NK]; [NL]; [NM]; [NO]; [NP]; [NQ]; [NR]; [NS]; [NT]; [NU]; [NV]; [NW]; [NX]; [NY]; [NZ]; [OA]; [OB]; [OC]; [OD]; [OE]; [OF]; [OG]; [OH]; [OI]; [OJ]; [OK]; [OL]; [OM]; [ON]; [OO]; [OP]; [OQ]; [OR]; [OS]; [OT]; [OU]; [OV]; [OW]; [OX]; [OY]; [OZ]; [PA]; [PB]; [PC]; [PD]; [PE]; [PF]; [PG]; [PH]; [PI]; [PJ]; [PK]; [PL]; [PM]; [PN]; [PO]; [PP]; [PQ]; [PR]; [PS]; [PT]; [PU]; [PV]; [PW]; [PX]; [PY]; [PZ]; [QA]; [QB]; [QC]; [QD]; [QE]; [QF]; [QG]; [QH]; [QI]; [QJ]; [QK]; [QL]; [QM]; [QN]; [QO]; [QP]; [QQ]; [QR]; [QS]; [QT]; [QU]; [QV]; [QW]; [QX]; [QY]; [QZ]; [RA]; [RB]; [RC]; [RD]; [RE]; [RF]; [RG]; [RH]; [RI]; [RJ]; [RK]; [RL]; [RM]; [RN]; [RO]; [RP]; [RQ]; [RR]; [RS]; [RT]; [RU]; [RV]; [RW]; [RX]; [RY]; [RZ]; [SA]; [SB]; [SC]; [SD]; [SE]; [SF]; [SG]; [SH]; [SI]; [SJ]; [SK]; [SL]; [SM]; [SN]; [SO]; [SP]; [SQ]; [SR]; [SS]; [ST]; [SU]; [SV]; [SW]; [SX]; [SY]; [SZ]; [TA]; [TB]; [TC]; [TD]; [TE]; [TF]; [TG]; [TH]; [TI]; [TJ]; [TK]; [TL]; [TM]; [TN]; [TO]; [TP]; [TQ]; [TR]; [TS]; [TU]; [TV]; [TW]; [TX]; [TY]; [TZ]; [UA]; [UB]; [UC]; [UD]; [UE]; [UF]; [UG]; [UH]; [UI]; [UJ]; [UK]; [UL]; [UM]; [UN]; [UO]; [UP]; [UQ]; [UR]; [US]; [UT]; [UU]; [UV]; [UW]; [UX]; [UY]; [UZ]; [VA]; [VB]; [VC]; [VD]; [VE]; [VF]; [VG]; [VH]; [VI]; [VJ]; [VK]; [VL]; [VM]; [VN]; [VO]; [VP]; [VQ]; [VR]; [VS]; [VT]; [VU]; [VV]; [VW]; [VX]; [VY]; [VZ]; [WA]; [WB]; [WC]; [WD]; [WE]; [WF]; [WG]; [WH]; [WI]; [WJ]; [WK]; [WL]; [WM]; [WN]; [WO]; [WP]; [WQ]; [WR]; [WS]; [WT]; [WU]; [WV]; [WW]; [WX]; [WY]; [WZ]; [XA]; [XB]; [XC]; [XD]; [XE]; [XF]; [XG]; [XH]; [XI]; [XJ]; [XK]; [XL]; [XM]; [XN]; [XO]; [XP]; [XQ]; [XR]; [XS]; [XT]; [XU]; [XV]; [XW]; [XX]; [XY]; [XZ]; [YA]; [YB]; [YC]; [YD]; [YE]; [YF]; [YG]; [YH]; [YI]; [YJ]; [YK]; [YL]; [YM]; [YN]; [YO]; [YP]; [YQ]; [YR]; [YS]; [YT]; [YU]; [YV]; [YW]; [YX]; [YY]; [YZ]; [ZA]; [ZB]; [ZC]; [ZD]; [ZE]; [ZF]; [ZG]; [ZH]; [ZI]; [ZJ]; [ZK]; [ZL]; [ZM]; [ZN]; [ZO]; [ZP]; [ZQ]; [ZR]; [ZS]; [ZT]; [ZU]; [ZV]; [ZW]; [ZX]; [ZY]; [ZZ]; [1, 2, ... 9, 0]									

Функции кнопок пульта IRC 02 F к TV устройствам

Кнопки пульта IRC 02 F	Код 121		Код 122		Код 123		Код 124		Код 125	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	MANUAL DEGAUSS									
AUDIO; NICAM	AUDIO				SOUND		S.SYS; SOUND SYS		CH +; SCAN	
VIDEO; SYS	VIDEO				PICTURE		COLOR SYS.		ACOUSTICS	
☐; ZOOM	SQV								AUTO; DPF; HDMI	
▼; TV	TV; CANCEL		TV/DVD						ZOOM	☐; CH-
☐; ↻	PIP	STORE			ST/D/III				CH -; ☐	
☐; LOCK	NORMAL; OPTIMUM				EFFECT				☐; ☐	SCAN
▲; FAV	S****								STILL	LOCK
⊖	OFF; POWER		POWER; ⊖		STANDBY		FAVORITE; SURF		FAV	☐; FAVS; CH+
AV	AV; TV/AV; INPUT	SOURCE	AV; PC		AV		STANDBY; ⊖		POWER; ⊖	
⌘	MUTE		MUTE		⌘		TV/AV		AV; TV/AV	
MENU	MENU; MODE	HOME	MENU		MENU		MUTE		MUTE; ⌘	
EXIT	MPX OFF						MENU; MENU/INS		MENU	F.MENU
▲	▲; ADJ ▶	INPUT ▲			P +; ▲		P +; ▲; PRO. ▲		EXIT	
◀	◀	AT L			-; ◀		V - ◀; VOL. ◀		CH +; P +; ▲	
OK	ENTER				OK/RECALL		OK		VOL -; V -; ◀	
▶	▶	AT R			+; ▶		V + ▶; VOL. ▶		ENTER; OK	
▼	▼; ADJ ◀	INPUT ▼			P -; ▼		P - ▼; PRO. ▼		VOL +; V +; ▶	
*; SETUP	FUNCTION	EXPANSION			PICTURE MODE		PIC.; DEL.; PIC./DEL.		CH -; P -; ▼	
♪; TITLE	LANGUAGE		I-II; STATUS		SOUND MODE				P.MODE	
☐	TEXT; ☐; ☐		TV/TXT; ☐						S.MODE	
GUIDE	MODE						CALENDAR		☐	
⊖	OFF TIMER		SLEEP; CS		SLEEP		CAPS		☐; E/W	
☐	MIX		MIX; ☐				SLEEP		SLEEP	
RED; ●	RED; SELECT		RED; R; OK				NOTE; NOTEBOOK		CAL; BIORHYTHM	
GREEN; ▨	GREEN; SET		GREEN; G; P.P				AT		RED; PICTURE; INFO	☐; E/W; CC
YELLOW; ◀	YELLOW		YELLOW; Y; ANA.				S.EFFECT		GREEN; SOUND	☐; PROG
BLUE; ▨	BLUE; TIMER ON		BLUE; B; P.S.				B.E		YELLOW; TIMER	☐; ☐
☐	CH DISP; DISPLAY		STATUS; RECAL.; I-II		OK/RECALL		SURROUND		BLUE; SETUP	
☐	Q.V.		RECALL; CLS; ☐				DISPLAY		DISPLAY; DSP	
VOL -	VOL ▼	FUNCTION -; -	VOL -; VOLUME ▼		-; ◀		RECALL; A/CH		RECALL	
VOL +	VOL ▲	FUNCTION +; +	VOL +; VOLUME ▲		+; ▶		V - ◀; VOL. ◀		VOL -; V -; ◀	
CH V; ◀	CH ▼	CHANNEL ▼	P -; CHANNEL ▼		P -; ▼		V + ▶; VOL. ▶		VOL +; V +; ▶	
CH ▲; ▨	CH ▲	CHANNEL ▲	P +; CHANNEL ▲		P +; ▲		P - ▼; PRO. ▼		CH -; P -; ▼	☐; CH-
+; SAT	1-		+				P + ▲; PRO. ▲		CH +; P +; ▲	☐; FAVS; CH+
CLEAR; X	2-	CANCEL/TIME	CANCEL; ☐						DIGIT; --	
◀; ●	TIME ADJ		SUBCODE; ☐						DEMO; TUNE; ☐	
▶; i	INDEX; i; ☐		INDEX; ☐				GAME		☐; GAME	
▶; ?	REVEAL; REVL		REVEAL; ☐						☐; HELP; ☐/III	
☐; X	HOLD		STOP; ☐						☐; LOCK	
☐; ⬇	SIZE		SIZE; ☐						☐	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0/AV						☐	
					1, 2, ... 9, 0				1, 2, ... 9, 0	

Функции кнопок пульта IRC 02 F к TV устройствам

Кнопки пульта IRC 02 F	Код 126		Код 127		Код 128		Код 129		Код 130	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD										
AUDIO; NICAM			☐/☐				B.E; WOOFER; DVB			
VIDEO; SYS							S.EFFECT			
☐; ZOOM					LARGE/SMALL		GAME		ZOOM; ☐	
▼; TV					TV/AV; AV/TV		SRS; SIZE; ESS/EPS			
☐; ↻	PIP		AUTO; PIP		M; P100		SCAN		SCAN	
☐; LOCK					→◀; P.P		LOCK/CAPS; CAPS		☐; LOCK	
▲; FAV							FAVORITE			
⊖	POWER		⊖		STAND-BY; ⊖		⊖; STANDBY		POWER; ⊖; ST-BY	
AV	SOURCE		☐		TV/AV; AV/TV		TV/AV		TV/AV; TB/AB; AV	
⌘	MUTE		⌘		MUTE		MUTE		MUTE; ⌘	
MENU	MENU/ENTER		MENU				MENU		MENU; MEHЮ	
EXIT							EXIT			
▲	▲		▲		PROG ▲; PROG. +				CH +; PP ▲; ↑; P +	
◀	VOLUME ◀		◀		VOL ◀; VOL. -				V -; 3B ▼; ◀; ↘	
OK	ENTER		MENU				OK; EXIT		MENU; MEHЮ	
▶	VOLUME ▶		▶		VOL ▶; VOL. +				V +; 3B ▲; →; ↗	
▼	▼		▼		PROG ▼; PROG. -				CH -; PP ▼; ↓; P -	
*; SETUP	V-CHIP		PICTURE		☐; PICTURE		PICTURE		→PP-; P.M.; PICT.	
♪; TITLE	SOUND MODE		SOUND				SOUND; S.SYS.		→S-; S.MODE	
☐	CAPTION/TEXT		TEXT		TV/TXT		TXT		TEXT; GAME	
GUIDE							NOTEBOOK			
⊖			SLEEP		⊖; TIMER		SLEEP		ТАЙМЕР; SLEEP	
☐			SUB.TITLE		TV/CLOCK		CALENDAR		MIX; CALENDAR	
RED; ●			RED; SOUND		RED; M; P100		RED; DISPL.; INDEX		RED; PICT.; ИЗОБП.	
GREEN; ▨			GREEN; PICTURE		GREEN; SKIP; MIX		GREEN; ZOOM/INS.		GREEN; ☐; CLOCK	
YELLOW; ◀			YELLOW; VTR; AUTO		YELLOW; SUB-PAG.		YELLOW; FAVORITE		YELLOW; TIME; ТАЙМЕР	
BLUE; ▨			BLUE; SCREEN		BLUE; ☐		CYAN; RECALL		BLUE; SOUND; 3BVK	
☐	DISPLAY		Q.VIEW		☐; RECALL		DISPL.; INDEX		?; CALL; ☐; DISP	
☐	QV						CYAN; RECALL		2V; ☐; A/CH; ALT	
VOL -	VOLUME ◀		VOL -		VOL ◀; VOL. -		VOL. ◀		V -; 3B ▼; ◀; ↘	
VOL +	VOLUME ▶		VOL +		VOL ▶; VOL. +		VOL. ▶		V +; 3B ▲; →; ↗	
CH V; ◀	CHANNEL ▼		CH -; PROG -		PROG ▼; PROG. -		PRO. ▼		CH -; PP ▼; ↓; P -	
CH ▲; ▨	CHANNEL ▲		CH +; PROG +		PROG ▲; PROG. +		PRO. ▲		CH +; PP ▲; ↑; P +	
+; SAT	+100		VTR; -/-		+		EXPAND; -/-		-/-	
CLEAR; X	ADD/ERASE								CANCEL	
◀; ●			SUB.PAGE		SUB-PAGE		SUBPAGE		SUBCODE	
▶; i			INDEX				MIX			
▶; ?			REVEAL		REVEAL		REVEAL; CLOCK		REVEAL	
☐; X			HOLD		STOP		AT; HOLD		HOLD; GAME	
☐; ⬇							UPDATE			
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 02 F к TV устройствам

Кнопки пульта IRC 02 F	Код 131		Код 132		Код 133		Код 134		Код 135	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD							APC			
AUDIO; NICAM	NICAM/A2				AUDIO; CALENDAR		MULTI MEDIA			
VIDEO; SYS					SYS.; MODE; GAME		MODE			
☐; ZOOM			EAST/WEST		ZOOM;PIC;☐;MAR.				ZOOM;☐;☐;SIZE	
▼; TV							ASC			
☐; ↗	SCAN		AUTO		P.P; AUTO; P.MODE		PIP		SCAN;REVEAL;RES.	
☐; LOCK			BIO		GAME;AUDIO;LOCK		ARC		☐; LOCK; SUBTIT.	
▲; FAV										
⊖	⊖; POWER		POWER		⊖; POWER		⊖		⊖	
AV	TV/AV		TV/AV		VIDEO; TV/AV; AV		TV/AV		TV/AV	
⌘	MUTE		MUTE		⌘; MUTE		⌘; MUTE		⌘; MUTE	
MENU	MENU		MENU		MENU; M		MENU		MENU	
EXIT										
▲	CH +		▲; CH +		CH +; P+; ▲		PR +		▲	
◀	VOL -		◀; VOL -		VOL -; ◀; V-; ◀		VOL -		◀	
OK	MENU		MENU		MENU; M		ENTER		MENU	
▶	VOL +		▶; VOL +		VOL +; ▶; V+; ▶		VOL +		▶	
▼	CH -		▼; CH -		CH -; P-; ▼		PR -		▼	
⌘; SETUP	PICTURE		P.MODE		⌘ L/R; GAME; PICT.		MULTI PIP		⌘; P.P; P.MODE	
♪; TITLE	SOUND				⌘ U/D; SOUND; S.M				⌘; SOUND	
☐	TXT/TV		TEXT		GAME		TEXT		TEXT	
GUIDE			HELP		LANG;SCAN;OPTIO.		MTS		GAME; HOLD	
⊖	TIMER				SLEEP; ⊖		SLEEP		⊖; SLEEP	
☐	MIX		MIX				MIX		CALENDAR; MIX	
RED; ●	RED		RED				RED; PIP CH -		RED; PICTURE; ☐	
GREEN; ▨	GREEN		GREEN				GREEN; PIP CH +		GREEN; ⊖	
YELLOW; ◀	YELLOW		YELLOW				YELLOW; SWAP		YELLOW; TIMER	
BLUE; ▨	CYAN		BLUE				BLUE; INPUT		BLUE;SOUND;SUR.	
☐	DISPLAY		DISP		CALL;DISPLAY;OSD		REVIEW		CALL; ?; DISP; ☐	
☐	RECALL		RECALL		☐; RECALL; QV				☐; QV; ALT	
VOL -	VOL -		◀; VOL -		VOL -; ◀; V-; ◀		VOL -		V-; ◀; VOL-; ◀	
VOL +	VOL +		▶; VOL +		VOL +; ▶; V+; ▶		VOL +		V+; ▶; VOL+; ▶	
CH V; ◀	CH -		▼; CH -		CH -; P-; ▼		PR -		P-; PR-; CH-; ▼	
CH A; ▶	CH +		▲; CH +		CH +; P+; ▲		PR +		P+; PR+; CH+; ▲	
⌘; SAT	-/-		DIGIT		-/-				⌘	
CLEAR; X	CANCEL		CANCEL				UPDATE ;POSITION		CANCEL	
◀; ●			SUBCODE				SUB PAGE		SUBCODE	
▶; i	INDEX		INDEX				INDEX			
▶; ?	REVEAL		REVEAL				REVEAL		REVEAL	
■; X	HOLD		HOLD				HOLD; STILL		HOLD	
■; ⬇	SIZE		SIZE				SIZE/SIZE		SIZE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 02 F к TV устройствам

Кнопки пульта IRC 02 F	Код 136		Код 137		Код 138		Код 139		Код 140	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD									USB/CARD	
AUDIO; NICAM	NICAM/A2		NICAM/A2		SUBP/NICAM		NICAM/A2			
VIDEO; SYS					SYSTEM		SYSTEM			
☐; ZOOM	MIX; ZOOM						ZOOM		ZOOM	
▼; TV			TV/AV		TV/AV				USB/CARD SETUP	
☐; ↗	SEARCH								SEARCH; SETUP	
☐; LOCK	ANGLE		FREEZE						P.RATIO	
▲; FAV	▲; OPEN									
⊖	POWER		⊖		⊖; POWER		⊖; POWER		⊖; POWER	
AV	TV/AV/DVD		TV/AV		TV/AV		TV/AV		INPUT	
⌘	MUTE		MUTE		MUTE		MUTE		⌘; MUTE	
MENU	SYS-MENU	MENU	TV-MENU		MENU		SYS-MENU		LCD MENU	
EXIT	SYS-EXIT		TV-EXIT				SYS-EXIT			
▲	CH +		▲		CH+		CH +		▲	
◀	◀		◀		VOL-		VOL -		◀	
OK	ENTER		OK		MENU		ENTER		OK	
▶	▶		▶		VOL+		VOL +		▶	
▼	CH -		▼		CH-		CH -		▼	
⌘; SETUP	PICTURE	SETUP	PICTURE		P-MODE		PICTURE		P.MODE	
♪; TITLE	SOUND	TITLE	SOUND		S-MODE		SOUND		S.MODE	
☐	TV/TXT; LANGUAGE		TV/TXT		TXT/TV		TV/TXT		TTX	
GUIDE									MTS	
⊖	TIMER		SLEEP		SLEEP		TIMER		SLEEP	
☐	SUBTITLE				MIX		MIX		FOLDER; LIST	
RED; ●	RED; PROGRAM		RED		RED		RED		RED; ◀; PREV	
GREEN; ▨	GREEN; SLOW		GREEN		GREEN		GREEN		GREEN; ▶; NEXT	
YELLOW; ◀	YELLOW; REPEAT		YELLOW		YELLOW		YELLOW		YELLOW; ◀; FR	
BLUE; ▨	BLUE; A-B	SLOW	BLUE		CYAN		BLUE		BLUE; ▶; FF	
☐	DISPLAY		DISPLAY		CALL		DISPLAY		DISPLAY; INFO	
☐	RETURN		☐		RECALL		RETURN		☐	REPEAT
VOL -	VOL -		◀; VOL -		VOL-		VOL -		VOL -	
VOL +	VOL +		▶; VOL +		VOL+		VOL +		VOL +	
CH V; ◀	CH -	◀	▼; CH -		CH-		CH -		CH -	◀; PREV
CH A; ▶	CH +	▶	▲; CH +		CH+		CH +		CH +	▶; NEXT
⌘; SAT	-/-		-/-		-/-		-/-		-/-	A-B
CLEAR; X	CANCEL; SEARCH		CANCEL		CANCEL		CANCEL		CANCEL	
◀; ●	◀	SUBPAGE; ANGLE	SUBPAGE		◀		◀		◀; FR	SUB.PG
▶; i	▶; PLAY/PAUSE	INDEX; TITLE	INDEX		INDEX		INDEX		▶; PLAY/PAUSE	INDEX
▶; ?	▶	REVEAL; SUBTITLE	REVEAL		REVEAL		REVEAL		▶; FF	REVEAL
■; X	■; STOP	HOLD; SETUP	HOLD		HOLD		HOLD		■; STOP	HOLD
■; ⬇	▶; PLAY/PAUSE	SIZE; MENU	SIZE		SIZE		SIZE		▶; PLAY/PAUSE	SIZE
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 02 F к TV устройствам

Кнопки пульта IRC 02 F	Код 141		Код 142		Код 143		Код 144		Код 145	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			AUX/INPUT		HDMI; USB; DVD				DVD/USB	
AUDIO; NICAM	NICAM				CD/II; AUDIO; SUBP.		AUDIO		NICAM; AUDIO	
VIDEO; SYS			TV SYSTEM				SYS; SIF			
☐; ZOOM	ASPECT				☐; ZOOM; ASPECT				ASPECT	ZOOM
▼; TV			TV/SAT							
☐; ↗	PC AUTO				PIP	SCAN		SCAN		
☐; LOCK			TIME SEL.; ⏮		☐; REPEAT		↔; P.P.		ANGLE	
▲; FAV	FAV				E/W; ▲; RADIO	♡; TITLE			AUTO; EJECT	FAV; TITLE
○	○; STANDBY		STANDBY; ○		○; POWER		○; POWER		○; STANDBY	
AV	INPUT		TV/VCR; Ⓜ; AUDIO B		INPUT; ☐		TV/AV		INPUT	
⌘	⌘; MUTE		MUTE; ⌘		⌘; MUTE		⌘; MUTE		⌘; MUTE	
MENU	MENU		PICTURE SELECT		MENU		MENU; PIC		LCD MENU	MENU
EXIT					EXIT; SCAN				EXIT; DVD SETUP	
▲	▲				▲		CH ▲; CH +		▲	
◀	◀		CONTR.; PIC.; MIN		◀		VOL ▼; V -		◀	
OK	ENTER		PICTURE SELECT		OK				ENTER	
▶	▶		CONT.+; PIC.+; HOUR		▶		VOL ▲; V +		▶	
▼	▼				▼		CH ▼; CH -		▼	
⌘; SETUP	P.MODE				⌘; P.MODE	SETUP	MODE; PRE		P.MODE	DVD SETUP
♪; TITLE	S.MODE				♪; S.MODE	TITLE	WOOF		S.MODE	TITLE
☐	TEXT				☐; TEXT; ▶ II		CHANNEL; EDIT		TEXT	
GUIDE			TIME SET		EPG; SETUP		RECEIVE; CLOCK		MIX; GOTO	
⏻	SLEEP		SLEEP; ⏻		SLEEP; MENU		SLEEP		SLEEP; MENU	
☐			TIMER SELECT		☐; SUBTITLE				SUBTITLE	
RED; ●	RED				RED; ◀				RED; PROGRAM	
GREEN; ▶	GREEN				GREEN; ▶				GREEN; DVD/USB	
YELLOW; ◀	YELLOW				YELLOW; ◀				YELLOW; REPEAT	
BLUE; ▶	BLUE				BLUE; ▶				BLUE; A-B	
☐			DISPLAY; ☐		DISP; ☐		CALL; DISPLAY		DISPLAY	
☐	☐		CH. REC.; SYS. PRE.		☐; RECALL		RETURN; ☐; CH/EN		☐	GOTO
VOL -	V -; VOL -		VOL -; ⏮		VOL -		VOL ▼; V -		VOL -	
VOL +	V +; VOL +		VOL +; ⏭		VOL +		VOL ▲; V +		VOL +	
CH V; ◀	CH -; CH V		CH -; PROG. -		CH -	◀	CH ▼; CH -		CH -	◀; NEXT; SIZE
CH ▲; ▶	CH +; CH ▲		CH +; PROG. +		CH +	▶	CH ▲; CH +		CH +	▶; PREV; INDEX
⏻; SAT	-/-		1-				-/-		-/-	
CLEAR; X			2-		☐; PIP				CANCEL; ANGLE	
◀; ●	SUBPAGE; NICAM		3-		◀	☐; SUBTITLE			PAGE DN; ◀; FR	SUBPAGE; SUBTITL
▶; i	INDEX; FAV		4-		▶ II	☐; INDEX			▶ II; PLAY/PAUSE	INDEX
▶; ?	REVEAL; PC AUTO		5-		▶	☐; REVEAL			PAGE UP; ▶; FF	REVEAL; ZOOM
■; ⌘	HOLD				■; STILL; ☐	☐; HOLD			■; STOP; HOLD	HOLD
■; Ⓜ	SIZE				▶ II	☐; ZOOM; ASPECT			▶ II; PLAY/PAUSE	SIZE
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0/AV		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 02 F к TV устройствам

Кнопки пульта IRC 02 F	Код 146		Код 147		Код 148		Код 149		Код 150	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			▶		▶		▶		DVD; USB/SD;	
AUDIO; NICAM	HEAR		NICAM/A2		III; AUDIO		NICAM/A2		CD III; AUDIO	
VIDEO; SYS					SMART					
☐; ZOOM	ZOOM		P.SIZE		4:3; P.SIZE		SCALE			
▼; TV			◀		TV; RADIO		◀; REVEAL			
☐; ↗	SCAN		AUTO		AUTO; T.FHIFT				PROG	
☐; LOCK	LOCK		PREEZE		FREEZE					
▲; FAV	FAV		FAV		FAV.				E/W; RADIO; ▲	♡
○	○; POWER		○; POWER		○; POWER		○; POWER		○; POWER	
AV	TV/AV		SOURCE		SOURCE		SOURCE		☐; SOURCE	
⌘	⌘; MUTE		⌘; MUTE		⌘; MUTE		⌘; MUTE		⌘	
MENU	MENU		MENU		MENU		MENU		MENU	SLEEP; MENU
EXIT			EXIT		EXIT		EXIT		EXIT	
▲	▲		▲; FAV +		▲; FAV +		▲; CH +		▲	
◀	◀		◀		◀		◀		◀	
OK	MENU		ENTER		ENTER		OK		ENTER	
▶	▶		▶		▶		▶		▶	
▼	▼		▼; FAV -		▼; FAV -		▼; CH -		▼	
⌘; SETUP	P.MODE; PICTURE		P.MODE		MEDIA		P.MODE		SETUP	
♪; TITLE	S.MODE; SOUND		S.MODE		3D		S.MODE		♡; TITLE	
☐	CAL; CALENDAR		TEXT		TEXT		☐; TEXT		☐; ▶	
GUIDE	BIO		EPG		EPG		MIX		EPG; SETUP	
⏻	SLEEP		SLEEP		SLEEP		SLEEP		SLEEP; MENU	
☐	DEMO		MEDIA		S.TITLE		☐; SUBPAGE		SUBTITLE	
RED; ●			RED	REPEAT	RED; Ⓜ	●; GOTO	RED; NICAM/A2		RED; ◀	
GREEN; ▶			GREEN	STEP	GREEN; ■	STEP	GREEN; P.MODE		GREEN; ▶	
YELLOW; ◀			YELLOW	A-B	YELLOW; ◀	A-B	YELLOW; S.MODE		YELLOW; ◀	
BLUE; ▶			BLUE	SLOW	BLUE; ◀	SLOW	BLUE; SLEEP		BLUE; ▶	
☐	DISP; DSP		DISPLAY		DISPLAY		DISPLAY; INFO		☐; INFO	
☐	RECALL; ☐; QV		☐		☐	REPEAT	☐		☐	
VOL -	VOL -; ◀		VOL -		V -		VOL -		VOL -	
VOL +	VOL +; ▶		VOL +		V +		VOL +		VOL +	
CH V; ◀	CH -; P ▼; P -		CH -	◀	P -	◀; HOLD	▼; CH -	◀; REVEAL	CH -	◀
CH ▲; ▶	CH +; P ▲; P +		CH +	▶	P +	▶; SIZE	▲; CH +	▶	CH +	▶
⏻; SAT	-/-		GOTO		GOTO				LIST; REPEAT	
CLEAR; X									☐; ☐	
◀; ●			◀	SUBPAGE	◀; S.PAGE	S.PAGE	◀; INDEX	SUBPAGE	◀	☐; SUBTITLE
▶; i			▶	INDEX	▶ II; TEXT	INDEX	▶ II; HOLD	INDEX	▶ II	☐
▶; ?			▶	REVEAL	▶; REVEAL	REVEAL	▶; SIZE	REVEAL	▶	☐; ☐
■; ⌘			■	HOLD	■; INDEX	HOLD	■; MIX	HOLD	■	☐; ☐; STILL
■; Ⓜ			■	SIZE	▶ II; TEXT	SIZE	▶ II; HOLD	SIZE	▶ II	☐; ☐
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 02 F к TV устройствам

Кнопки пульта IRC 02 F	Код 151		Код 152		Код 153		Код 154		Код 155	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	FAV+		FAV +						FAV +	
AUDIO; NICAM	NICAM	AUDIO	NICAM; MTS		AUDIO		AUDIO		ROOT; AUDIO	NICAM
VIDEO; SYS	P.SIZE		REPEAT		SYS; C-SYS; Сист-а		SYS		REPEAT	
☐; ZOOM	ASPECT	ZOOM	ASPECT		ZOOM				ASPECT; ZOOM; SIZE	
▼; TV	FAV-		FAV -						FAV -	
☐; ↗	PIP/POP		GOTO				SCAN		AUTO	
☐; LOCK	FREEZE		FREEZE		PP; ↗; P.MODE		P.P		HOME; FREEZE	
▲; FAV	FAV		FAV						FAV	
○	○; STANDBY		○		POWER; ○		○		○; POWER	
AV	INPUT		SOURCE		TV/AV; TB/AB		AV		INPUT	
✳	✳; MUTE		✳		MUTE; ✳		✳		✳; MUTE	
MENU	MENU		MENU		MENU; PRESET		MENU		MENU	HOME; FREEZE
EXIT	EXIT		EXIT						EXIT	
▲	▲		▲		CH +; P +; CH ▲; ▲		P +; P ▲		▲	
◀	◀		◀		V -; VOL -; ◀		V -; ◀		◀	
OK	ENTER		ENTER		MENU; PRESET		SELECT		ENTER; OK	
▶	▶		▶		V +; VOL +; ▶		V +; ◀+ ▶		▶	
▼	▼		▼		CH -; P -; CH ▼; ▼		P -; P ▼		▼	
✳; SETUP	P.MODE		P.MODE		PICTURE; PIC				P.MODE; - P -	
♪; TITLE	S.MODE		S.MODE		AUDIO; SOUND				S.MODE; - S -	TV/RADIO
☐	TEXT		ON/OFF		GAME				TEXT	
GUIDE	PC AUTO		ROOT		WOOF		GAME		EPG	
⏻	SLEEP		SLEEP		SLEEP; ZOOM		SLEEP		SLEEP; ZZZ	
☐	GOTO; SUB.T		MIX		CLOCK; OPTION; ○				SUBTITLE	
RED; ●	RED; ZOOM		RED						RED	●
GREEN; ▨	GREEN; MEDIA		GREEN						GREEN	
YELLOW; ◀	YELLOW; GOTO		YELLOW						YELLOW	
BLUE; ▨	BLUE; AUDIO	▨; INDEX	CYAN						BLUE	
☐	DISPLAY		INFO		OSD; DISPLAY; CALL		DISP		DISP; DISPLAY	
☐	RECALL	MEDIA; REPEAT	☐		REP; RECALL; ALT.		☐; ☐		☐; ☐	
VOL -	VOL -		VOL -		V -; VOL -; ◀		V -; ◀		V -; VOL-	
VOL +	VOL +		VOL +		V +; VOL +; ▶		V +; ◀+ ▶		V +; VOL+	
CH V; ◀	CH -	◀; FAV-	CH -	◀	CH -; P -; CH ▼; ▼		P -; P ▼		P -; CH-; CH ▼	◀; INDEX
CH ▲; ▶	CH +	▶; FAV+	CH +	▶	CH +; P +; CH ▲; ▲		P +; P ▲		P +; CH+; CH ▲	▶; SIZE
+/ SAT	P.POS		-/-		-/-; -/-		-/-		GOTO	
CLEAR; X	P.SWAP		CANCEL						A-B	
◀; ○	◀; SUBPAGE	SUBPAGE	◀; FAV	SUB.PG					◀; REVEAL	SUBPAGE
▶; i	▶; TEXT	INDEX	▶; CANCEL	INDEX					▶; TEXT	INDEX
▶; ?	▶; FAV	REVEAL	▶; FAV -	REVEAL					▶; SUBPAGE	REVEAL
▨; X	▨; HOLD	HOLD	▨; INDEX	HOLD					▨; HOLD	HOLD
▨; ⬇	▨; TEXT	SIZE	▨; CANCEL	SIZE					▨; TEXT	SIZE
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 02 F к TV устройствам

Кнопки пульта IRC 02 F	Код 156		Код 157		Код 158		Код 159	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	☐; PGUP				MEDIA		DVD; USB/SD; PC	
AUDIO; NICAM			AUDIO		AUDIO I/II		☐ I/II; AUDIO	S.MODE
VIDEO; SYS			MEDIA				P.MODE	
☐; ZOOM	SWAP				ASPECT		☐; ☐; ZOOM; SIZE	
▼; TV	☐; PGDN		TV		TV/RADIO		USB	
☐; ↗			AUTO		AUTO; SMART		☐; ☐; PIP	EXIT; SCAN
☐; LOCK					FREEZE		TOOLS; HDMI	
▲; FAV					FAV; ☐		E/W; ▲; RADIO	♡; TITLE
○	○		○; POWER		○; POWER		○; POWER	
AV	INPUT		SOURCE		SOURCE		☐; SOURCE; INPUT	
✳	✳		✳; MUTE		✳; MUTE		✳; MUTE	
MENU	MENU		MENU		MENU	REC. MENU; DEL;	MENU	
EXIT	EXIT		EXIT		EXIT		EXIT; SCAN	
▲	▲		▲		▲		▲	
◀	◀		◀		◀	FAV -; ♀	◀	
OK	OK		ENTER		OK		ENTER	
▶	▶		▶		▶	FAV +; ♀	▶	
▼	▼		▼		▼		▼	
✳; SETUP	P.MODE		P.M		P.MODE		✳	SETUP
♪; TITLE	S.MODE		S.M		S.MODE		♪	TITLE
☐	☐; TEXT				TEXT		☐; TEXT	
GUIDE					EPG; ⏪; ⏩		EPG; SETUP; ☐	
⏻	SLEEP		SLEEP		SLEEP	TIME SHIFT	SLEEP; MENU	
☐			SUBTITLE		SUBTITLE; ♀		☐; SUBTITLE	
RED; ●	RED		RED		RED	●; REC	RED; ◀	
GREEN; ▨	GREEN		GREEN		GREEN		GREEN; ▶	
YELLOW; ◀	YELLOW		YELLOW		YELLOW		YELLOW; ◀	
BLUE; ▨	CYAN		BLUE		BLUE		BLUE; ▶	
☐	DISPLAY		INFO		DISPLAY		☐; INFO; DISP	
☐	☐		☐		☐		☐; RECALL	REPEAT
VOL -	VOL -		VOL ▼		VOL -; VOL ▼		VOL -; ◀	
VOL +	VOL +		VOL ▲		VOL +; VOL ▲		VOL +; ◀+ ▶	
CH V; ◀	CH -		CH ▼	◀	CH ▼	◀; CANCEL	CH -; P ▼	◀
CH ▲; ▶	CH +		CH ▲	▶	CH ▲	▶; SUBPAGE	CH +; P ▲	▶
+/ SAT			-/-		-/-		LIST; REPEAT	
CLEAR; X					CANCEL	DEL; ☐	☐	☐; CANCEL
◀; ○	◀; SUBPAGE		◀		◀	SIZE	◀	◀; SUBTITLE
▶; i	☐; INDEX		▶		▶	HOLD	☐; ▶; TEXT	☐
▶; ?	☐; REVEAL		▶		▶	REVEAL	▶	☐; SOURCE
▨; X	▨; HOLD		▨		▨	INDEX	▨	☐; HOLD
▨; ⬇	☐; SIZE		▨		▨	HOLD	☐; ▨; TEXT	☐; ☐; ZOOM; SIZE
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 02 F к VCR устройствам

Кнопки пульта IRC 02 F	Код 201		Код 202		Код 203		Код 204		Код 205	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	I-HQ/PB		STATION ▲		TRACKING ►; A.TR				SHIFT	
AUDIO; NICAM	I-HQ		I-HQ		ECOUTE				ADD	
VIDEO; SYS	AUTO TRACKING		VCR		x2				MARK	
☐; ZOOM	SHOW VIEW		VISU SOUR.		COUNTER RESET				MEMORY	
▼; TV	TV/VCR		STATION ▼		TRACKING ◀				TAPE SPEED	
☐; ↻	VPT		ALIGN. AUTO	LISTE PROG.	BLANK SEAR.		MEMO		CH SEAR.;CLK/CNT	CH PRES.; ERASE
☐; LOCK	COUNTER RESET		ZERO COMP.		PRESET; NORMAL		RESET		CLK.CNT.; A.PROG	
▲; FAV	EJECT; ▲		EJECT		EJECT				EJECT	
⊖	POWER		POWER		POWER		POWER		POWER; СЕТЬ	
AV	AV		AV		TV/VCR				INPUT SELECT	VCR; VCR/TV
⌘			SILEN.							
MENU	MENU		MENU		MENU				MENU; PROGRAM	
EXIT	(-)		ECOUT.		EXT				D. TRK	
▲	MULTI SPEED +		CH ▲		PICTURE +		SET +		15; SLOW ▲	
◀	PICT. -; STEADY ►	☐	◀; TRACKING ◀		SPEED -; -		SHIFT ◀		SHUTTLE ◀◀	
OK	OK		OK		SET; MEMO; OK				BAND SEL	
▶	PICT. +; STEADY ◀	☐	▶; TRACKING ▶		SPEED +; +		SHIFT ▶		SHUTTLE ▶▶	
▼	MULTI SPEED -		CH ▼		PICTURE -		SET -		16; SLOW ▼	
⌘; SETUP	JOG SHUT		F. PROG.		AUTO/OFF				MONITOR; TV/CATV	
♪; TITLE	VERT.		DOLBY SURR.		BAND				DUB; A.DUB	
☐	TV TEXT		TV TEXT		PRGM		PROG		AFT	START OTR
GUIDE	PROG		PROG		LIST PROG.				ATR	OTR START
⊖	TIMER		TIMER		TIMER		TIMER		TIMER; LENGTH	LENGHT OTR
☐	PROG LIST		REST.		CLOCK		CLOCK		Q-PRO	
RED; ●	RED	● REC	RED	● REC	INTRO SCAN	● REC		● REC	11; SKIP ENCORE	●; REC; 3АП
GREEN; ►	GREEN		GREEN		AUTO SCAN; STAB				12	2nd; ► ПСК; F.ADV
YELLOW; ◀	YELLOW		YELLOW		REST.				13	
BLUE; ►	BLUE	SLOW; STILL	BLUE	►	SLOW; ►				14	SLOW ►
☐	DISPLAY		AFFIC.		DISPLAY		DISPLAY		DISPLAY	INDEX
☐	REPEAT		REPEAT		NEXT		RET TO "0"		P/C; CH 100	
VOL -	◀; TRACKING ◀		◀; TRACKING ◀	LECT. VAR. -	TRACKING ◀; COR.		◀◀		TRACK ▲	
VOL +	▶; TRACKING ▶		▶; TRACKING ▶	LECT. VAR. +	TRACKING ▶; A.TR		▶▶		TRACK ▲	
CH V; ◀◀	CH ▼	◀◀	CH ▼	◀◀	CHANNEL ▼	INDEX ◀◀	CH -		P-; CH ▼; КАНАЛ ▼	
CH A; ▶▶	CH ▲	▶▶	CH ▲	▶▶	CHANNEL ▲	INDEX ▶▶	CH +		P+; CH ▲; КАНАЛ ▲	
+-; SAT	SP/LP		STD DBL		SP/LP				-/-; SYSTEM SEL.	
CLEAR; X	CANCEL (S/W)		E/H ANN.		RECALL; CANCEL		CANCEL		CLEAR RESET	ERASE
◀◀; ●	◀◀; REW		◀◀; REW		◀◀; REW		◀◀; REW		◀◀; PH; REW	
▶; i	▶; PLAY		▶; PLAY		▶; PLAY		▶; PLAY		▶; БОСП; PLAY	
▶▶; ?	▶▶; F.FWD	NEXT	▶▶; F.FWD		▶▶; F.FWD		▶▶; F.FWD		▶▶; ПБ; F.F	
■; X	■; STOP		■; STOP		■; STOP		■; STOP		■; STOP; СТОП	
; ⬇	; PAUSE		; PAUSE		; PAUSE		; PAUSE		; P/S; ПАУЗА	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 02 F к VCR устройствам

Кнопки пульта IRC 02 F	Код 206		Код 207		Код 208		Код 209	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			☐				START OTR; OTR ▲	
AUDIO; NICAM			I-HQ				SHIFT	
VIDEO; SYS			VPT				MONITOR; MO/SW	
☐; ZOOM	X2		ANZ. WAHL.				MFT; 2nd	
▼; TV			☐				LENG. OTR; OTR ▼	
☐; ↻			AUTO SPUR				SEARCH	PRESET; CH.SET
☐; LOCK	RESET		ZAHL. NULL				SKIP SEARCH	
▲; FAV			EJECT				▲; EJECT	
⊖	POWER		POWER		POWER		POWER	
AV	VCR		VCR				VCR/TV	INPUT SELECT
⌘	OFF							
MENU	PROG		MENU				PROG	
EXIT								
▲			P +				SLOW +	
◀			VOL -				V-LOCK/MFT -; -	
OK	SELECT		OK				BAND SELECT	
▶			VOL +				V-LOCK/MFT +; +	
▼			P -				SLOW -	
⌘; SETUP	ON		LOSCH.				CLOCK; AUTO TRK.	
♪; TITLE			FOLGE FUNK				MEMORY	
☐	SET	10-26	TV TEXT				CLOCK COUNT	
GUIDE	A. DIR.	11-27	PROG				VPS	
⊖	CLOCK	12-28	TIMER		TIMER; PROG		TIMER	
☐	CLOCK SET	13-29	TIMER LISTE				CLOCK; CLEAR	
RED; ●	REPEAT	● REC	RED	● REC		● REC	D. TRK	● REC
GREEN; ►	►	14-30	GREEN	TONW.			Q-PRO	
YELLOW; ◀	◀◀	15-31	YELLOW	VERT.			MARK	
BLUE; ►	►►	16-32	BLUE	►			SLOW; ►	
☐	COUNTER						DISPLAY	
☐			JOG SHUTTLE				INDEX	
VOL -	▼; ◀◀		VOL -				TRK ▼	
VOL +	▲; ▶▶		VOL +				TRK ▲	
CH V; ◀◀	P -		P -	◀◀	P -		CHANNEL ▼	
CH A; ▶▶	P +		P +	▶▶	P +		CHANNEL ▲	
+-; SAT	-/-		SP/LP				TAPE SPEED	
CLEAR; X	CANCEL						ERASE	
◀◀; ●	◀◀(REW)		◀◀(REW)		◀◀(REW)		◀◀; REW	
▶; i	▶(PLAY)		▶(PLAY)		▶(PLAY)		▶; PLAY/x2	
▶▶; ?	▶▶(F.FWD)		▶▶(F.FWD)		▶▶(F.FWD)		▶▶; FF	
■; X	■(STOP)		■(STOP)		■(STOP)		■; STOP	
; ⬇	(PAUSE)		(PAUSE)		(PAUSE)		/ ; P/S F.ADV	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 02 F к AUX устройствам

Кнопки пульта IRC 02 F	Код 301		Код 302		Код 303		Код 304		Код 305	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	# ; 3D				KEY +		KARAOKE ; МИКР.		VOCAL	
AUDIO ; NICAM	LANGUAGE				LANGUAGE		LANGUAGE ; ЯЗЫК		AUDIO	
VIDEO ; SYS	P/N				DIGEST		MODE ; ВИДЕО	N/P	V MODE	
☐ ; ZOOM	ZOOM				ZOOM		ZOOM ; МАШТАБ		ZOOM	
▼ ; TV	b ; RESET				KEY -		МІС ; КАРАОКЕ		TV MODE	
☐ ; ↻	MEMORY		PRESET EQ		L/R		PSCAN/N ; РЕЖИМ		P/N	
☐ ; LOCK	RESET		SNOOZE		ANGLE		FUNC SELECT		DEFAULT	
▲ ; FAV	▲				▲ ; OPEN/CLOSE		▲ ; OPEN/CLOSE		▲ ; OPEN/CLOSE	
○	○ ; POWER		○		○ ; POWER		STANDBY		SLEEP	
AV	ANGLE				MODE		ANGLE ; УГОЛ		ANGLE ; ъ	
✳	MUTE		MUTE		MUTE		MUTE ; ВЫКЛ. ЗВ.		MUTE	
MENU	MENU		FUNCTION		MENU		MENU ; МЕНЮ		MENU	
EXIT	Y.Pr.Pb ; RETURN						RESUME ; ВОЗВРАТ			
▲	▲		FOLDER UP		▲		↑		▲	
←	←				←		←		←	
OK	ENTER				ENTER		PLAY ; ВОСПР.		ENTER	
▶	▶				▶		→		▶	
▼	▼		FOLDER DN		▼		↓		▼	
✳ ; SETUP	SETUP				SETUP		SETUP ; УСТАН-КА		SETUP	
♪ ; TITLE	TITLE ; PBC	3D			TITLE		TITLE ; ОГЛАВЛ.		TITLE	
☐	INTRO		PROGRAM ; PROG		PBC		PBC		PICTURE	
GUIDE	PROGRAM				PROGRAM		PROG ; ПРОГР.		PROGRAM	
⏻	A-TIME		SLEEP		TIME		TIME ; ПЕРЕХОД		SLEEP	
☐	SUBTITLE		TIMER		SUBTITLE		SUBTITLE ; СУБ-РЫ		SUBT. ; ☐	
RED ; ●	REPEAT				REPEAT		REPEAT ; ПОВТОР		REPEAT	
GREEN ; ▬	STEP				STEP		STEP ; ШАГ		A-B	
YELLOW ; ◀	A-B				A-B		A-B ; A-B			
BLUE ; ▶	SLOW				SLOW		SLOW ; МЕДЛЕННО		SLOW	
☐	OSD		REPEAT M. ; MODE		OSD		DISPLAY ; ДИСПЛЕИ		OSD	
↻	RETURN		RANDOM ; RAN						GOTO	
VOL -	VOLUME -		VOLUME ▼		VOL -		FUNC - ; ФУНКЦ. -		VOL -	
VOL +	VOLUME +		VOLUME ▲		VOL +		FUNC + ; ФУНКЦ. +		VOL +	
CH V ; ◀	◀		◀ ; TUNING ; SKIP UP		◀ ; PREV		◀ ; PREV ; ПРЕД.		◀	KEY -
CH A ; ▶	▶		▶ ; TUNING ; SKIP DN		▶ ; NEXT		▶ ; NEXT ; СЛЕД.		▶	KEY +
± ; SAT	10+	CHANNEL			10+		10+		10+	
CLEAR ; X	CLEAR								CLEAR	
◀ ; ○	◀		◀ ; TUNING ; SKIP UP		◀ ; REV		◀ ; REV ; НАЗАД		◀	
▶ ; i	▶ ; PLAY		▶ ; TUNING ; SKIP DN		▶ ; ENTER/PAUSE		▶ ; PLAY ; ВВОД		▶ ; ▬	
▶ ; ?	▶		▶ ; TUNING ; SKIP DN		▶ ; FWD		▶ ; FWD ; ВПЕРЕД		▶	
■ ; ✳	■		■ ; STOP/B ; STOP		■ ; STOP		■ ; STOP ; СТОП		■ ; /	
▬ ; ⏻	▬		▬ ; PAUSE		▬ ; PAUSE		▬ ; PAUSE ; ПАУЗА		▬ ; ▬	
1, 2, ... 9, 0	1, 2, ... 9, 0/10		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 02 F к AUX устройствам

Кнопки пульта IRC 02 F	Код 306		Код 307		Код 308		Код 309		Код 310	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	3D		MIC VOL +		ECHO +				LANGUAGE	
AUDIO ; NICAM	AUDIO		AUDIO		LANGUAGE	R/L	AUDIO	L/R	L/R	
VIDEO ; SYS	P/N		PAL/NTSC		VIDEO	N/P	VIDEO	P/N	P/N	
☐ ; ZOOM	ZOOM		ZOOM		ZOOM		ZOOM		ZOOM	
▼ ; TV	TV.MODE		MIC VOL -		ECHO -					
☐ ; ↻	SEARCH		MIC ON/OFF		MIC		VIEW		SEARCH	
☐ ; LOCK	P.SCAN		I/P		RESET		RESET		ANGLE	
▲ ; FAV	▲ ; OPEN/CLOSE		▲ ; OPEN/CLOSE		▲ ; OPEN/CLOSE		▲ ; OPEN/CLOSE		OPEN/CLOSE	
○	○ ; SLEEP		STANDBY		○ ; POWER		○ ; STANDBY		○ ; POWER	
AV	ANGLE		ANGLE		ANGLE		ANGLE		V-MODE	
✳	✳ ; MUTE		MUTE		MUTE		MUTE		MUTE	
MENU	MENU/PBC		MENU		PBC		MENU		MENU	
EXIT	RETURN		RESUME		RETURN		RETURN		RETURN	
▲	▲		▲		▲		▲		▲	
←	←		←		←		←		←	
OK	ENTER		ENTER / ▶		ENTER		ENTER		ENTER	
▶	▶		▶		▶		▶		▶	
▼	▼		▼		▼		▼		▼	
✳ ; SETUP	SETUP		SETUP		SETUP		SETUP		SETUP	
♪ ; TITLE	TITLE		TITLE/PBC		TITLE	SURR ; 3D	TITLE		TITLE	
☐	PROGRAM		PROGRAM		PROG		PBC		PBC	
GUIDE			SHUFFLE		GOTO		PROG		PROG	
⏻					RAN		TIME			
☐	SUBTITLE		SUBTITLE		SUBTITLE		SUBTITLE		SUBTITLE	
RED ; ●	1/ALL REPEAT		REPEAT		REPEAT		REPEAT		REPEAT	
GREEN ; ▬	STEP		▬ ; STEP		STEP		STEP		STEP	
YELLOW ; ◀	A-B REPEAT		A-B		SEGMENT ; A-B		A-B		A-B	
BLUE ; ▶	SLOW				SLOW		SLOW		SLOW	
☐	DISPLAY		DISPLAY		OSD		OSD		OSD	
↻			GOTO		RESUME		RETURN			
VOL -	VOLUME -		VOL -		VOL -		VOL -	ECHO - ; MIC -	VOL -	
VOL +	VOLUME +		VOL +		VOL +		VOL +	ECHO + ; MIC +	VOL +	
CH V ; ◀	◀ ; PREV		◀ ; PREV		◀		◀		PREV	
CH A ; ▶	▶ ; NEXT		▶ ; NEXT		▶		▶		NEXT	
± ; SAT	10+		+10		10+		GOTO		10+	
CLEAR ; X	CLEAR				CLEAR		RAN			
◀ ; ○	◀ ; F.BWD		◀ ; REV		◀		◀		REV	
▶ ; i	▶ ; PLAY/PAUSE		▶ ; ENTER / ▶		▶ ; PLAY		▶		PLAY	
▶ ; ?	▶ ; F.FWD		▶ ; FWD		▶		▶		FWD	
■ ; ✳	■ ; STOP		■ ; STOP		■ ; STOP		■		STOP	
▬ ; ⏻	▬ ; PLAY/PAUSE		▬ ; PAUSE/STEP		▬ ; PAUSE		▬		PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 02 F к AUX устройствам

Кнопки пульта IRC 02 F	Код 311		Код 312		Код 313		Код 314		Код 315	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	LANGUAGE				RAN				INTRO	
AUDIO ; NICAM	L/R ; MIC		AUDIO		AUDIO	R/L	LANGUAGE	L/R	AUDIO	3D
VIDEO ; SYS	N/P		N/P		N/P		V-MODE	N/P	V-MODE	P/N
☐ ; ZOOM	ZOOM		ZOOM		ZOOM		ZOOM		ZOOM	
▼ ; TV									CHANNEL	
☐ ; ↗			PI		VIEW				MEMORY	
☐ ; LOCK	ANGLE		3D		P/I				PRO-II	
▲ ; FAV	▲ ; OPEN/CLOSE		OPEN/CLOSE		▲ ; OPEN/CLOSE		▲ ; OPEN/CLOSE		▲	
○	○ ; STANDBY		○/I ; STANDBY/ON				○ ; POWER		○ ; POWER	
AV	MODE		ANGLE		ANGLE		ANGLE		ANGLE	
⌘	MUTE		MUTE		MUTE		MUTE		MUTE	
MENU	MENU		MENU		MENU		MENU ; KARAOKE		MENU	
EXIT	RETURN		RETURN		RESUME				↻ ; RETURN	
▲	▲		▲		▲		↑		▲ PRESET	
◀	◀		◀		◀		←		◀ SEARCH ; A. SCH	
OK	ENTER		ENTER		ENTER		ENTER		PLAY/SAVE	
▶	▶		▶		▶		→		▶ SEARCH ; ST/MO	
▼	▼		▼		▼		↓		▼ PRESET	
* ; SETUP	SETUP		SETUP		SETUP	3D	SETUP		SETUP	
♪ ; TITLE	TITLE		TITLE		TITLE		TITLE		TITLE/PBC	
☐	PBC		PBC		PBC		PBC ; PBC/MENU		FUNCTION	
GUIDE	PROG		PROG		PROG		PROGRAM		PROGRAM	
⏻	TIME						TIME		A-TIME	
☐	SUBTITLE		SUBTITLE		SUBTITLE		SUBTITLE		SUBTITLE	
RED ; ●	REPEAT		REPEAT		REPEAT		REPEAT		REPEAT	
GREEN ; ▬	STEP		STEP		STEP		STEP		▬ ; STEP	
YELLOW ; ◀	A-B		A-B		A-B		A-B		A-B	
BLUE ; ▬	SLOW		SLOW		SLOW		SLOW		SLOW	
☐	DISPLAY		OSD		OSD		DISPLAY		OSD	
↻	RESUME;KARAOKE		RESUME		RETURN	GOTO	RETURN		↻ ; RETURN	
VOL -	VOL -		VOLUME -		VOL -		VOL -		VOLUME-	
VOL +	VOL +		VOLUME +		VOL +		VOL +		VOLUME+	
CH V ; ◀	◀ ; PREV		◀ ; PREV		◀		◀ ; PREV		◀	
CH A ; ▶	▶ ; NEXT		▶ ; NEXT		▶		▶ ; NEXT		▶	
± ; SAT	10+		10+		10+		10+		10+	
CLEAR ; X			GOTO		CLEAR		CLEAR		CLEAR	
◀ ; ○	◀ ; REV		◀ ; REV		◀		◀ ; REV		◀	
▶ ; i	▶ ; PLAY		▶ ; PLAY/PAUSE		▶		▶ ; PLAY/PAUSE		▶ ; PLAY/PAUSE	
▶ ; ?	▶ ; FWD		▶ ; FWD		▶		▶ ; FWD		▶	
■ ; X	■ ; STOP		■ ; STOP		■ ; STOP		■ ; STOP		■	
■ ; ⏻	■ ; PAUSE		▶ ; PLAY/PAUSE		▶		▶ ; PLAY/PAUSE		■	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 02 F к AUX устройствам

Кнопки пульта IRC 02 F	Код 316		Код 317		Код 318		Код 319		Код 320	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	LANGUAGE		HDMI		AUDIO		5.1/2.1CH			
AUDIO ; NICAM	L/R		AUDIO		AUDIO		AUDIO		AUDIO	
VIDEO ; SYS	N/P		VIDEO	P/N	V MODE		DIMMER		V-MODE	
☐ ; ZOOM	ZOOM		ZOOM		ZOOM		ZOOM ; TV MODE		ZOOM	
▼ ; TV					TV MODE					
☐ ; ↗			VOCAL		L/R		MEMORY			
☐ ; LOCK	ANGLE		DEFAULT		P/N		P.SCAN/CVBS			
▲ ; FAV	▲ ; OPEN/CLOSE		▲ ; OPEN/CLOSE		▲ ; EJECT		▲ ; OPEN/CLOSE		▲ ; EJECT	
○	○ ; STANDBY		SLEEP ; STANDBY		POWER ; SLEEP		○ ; STANDBY/ON		○ ; POWER	
AV	V-MODE		USB/CARD		ANGLE		ANGLE		ANGLE	
⌘	MUTE		MUTE		MUTE		MENU		MUTE	
MENU	MENU		DIRECT		MENU		MENU		MENU	
EXIT	RETURN		RESUME				↻ ; RETURN			
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀		◀		◀	
OK	ENTER		ENTER		ENTER		ENTER		ENTER	
▶	▶		▶		▶		▶		▶	
▼	▼		▼		▼		▼		▼	
* ; SETUP	SETUP		SETUP		SETUP		SETUP		SETUP	
♪ ; TITLE	TITLE		TITLE		TITLE		SOUND		TITLE	
☐	PBC		PBC		PROGRAM		FUNCTION		PBC	
GUIDE	PROG		ANGLE				☐ PROLOGIC II		PROG	
⏻	SHUFF									
☐	SUBTITLE		SUB-T		SUBTITLE		SUBTITLE		SUBTITLE	
RED ; ●	REPEAT		REPEAT		REPEAT		BAND ; DISC REP.		REPEAT	
GREEN ; ▬	A-B		STEP		STEP		FM MODE ; A-B REP.		A-B	
YELLOW ; ◀	KARAOKE		A-B		A-B		◀ SLOW			
BLUE ; ▬	SLOW		SLOW		SLOW		▬ SLOW		SLOW	
☐	DISPLAY		OSD		DISPLAY		DISPLAY		OSD	
↻	SELECT		↻ ; RETURN		GOTO		GOTO		RESUME	
VOL -	VOL -		VOL -		VOL -		VOLUME -		VOLUME -	
VOL +	VOL +		VOL +		VOL +		VOLUME +		VOLUME +	
CH V ; ◀	PREV		◀ ; PREV		◀		◀ ; PREV		◀	
CH A ; ▶	NEXT		▶ ; NEXT		▶		▶ ; NEXT		▶	
± ; SAT	10+		10+		10+		+10		10+	
CLEAR ; X	CLEAR		GO TO		CLEAR		CLEAR		GOTO	
◀ ; ○	REV		◀ ; F.B		◀		◀ TUNING		◀	
▶ ; i	PLAY		▶ ; PLAY/PAUSE		▶		▶ ; PLAY		▶	
▶ ; ?	FWD		▶ ; F.F		▶		▶ TUNING		▶	
■ ; X	STOP		■ / ↻ ; STOP/RET.		■		■ ; STOP		■	
■ ; ⏻	PAUSE/STEP		▶ ; PLAY/PAUSE		▶		■ ; PAUSE		■	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 02 F к AUX устройствам

Кнопки пульта IRC 02 F	Код 321		Код 322		Код 323	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	DVD/USB/CARD		L/R/ST		ECHO +	
AUDIO ; NICAM	AUDIO		A-MODE		AUDIO	L/R
VIDEO ; SYS	VIDEO		V-MODE		VIDEO	P/N
☐ ; ZOOM	ZOOM		ZOOM		ZOOM	
▼ ; TV			CH-LEVEL		ECHO -	
☐ ; ↻	⊕ ; L/R		AUDIO ; MEMORY		VIEW	
☐ ; LOCK	N/P		ANGLE ; RDS			
▲ ; FAV	▲ ; OP/CL		▲ ; OPEN/CLOSE		▲ ; OPEN/CLOSE	
⊖	⊖ ; POWER		⊖ ; STANDBY		⊖ ; STANDBY	
AV	ANGLE		SOURCE SELECT		ANGLE	
⌘	⌘ ; MUTE		⌘		MUTE	
MENU	MENU		MENU ; MO/ST		MENU	
EXIT	RETURN				RETURN	
▲	▲		▲		▲	
◀	◀		◀		◀	
OK	ENTER		ENTER		ENTER	
▶	▶		▶		▶	
▼	▼		▼		▼	
⌘ ; SETUP	SETUP		SETUP		SETUP	
♪ ; TITLE	TITLE		TITLE ; AM/FM	TONE	TITLE	
☐	PBC		PROG		PBC	
GUIDE	PROG		S.EFFECT		PROG	
⊖	TIME ; GOTO				TIME	
☐	SUBTITLE		SUBTITLE ; AUTO		SUBTITLE	
RED ; ●	REPEAT		REPEAT		REPEAT	
GREEN ; ▢	▢ ; STEP		STEP		STEP	
YELLOW ; ◀	A-B		A-B		A-B	
BLUE ; ▢	▢ ; SLOW				SLOW	
☐	OSD		OSD		OSD	
☐	RAN				RANDOM	
VOL -	VOLUME -		VOLUME ▼	KEY -	VOL -	
VOL +	VOLUME +		VOLUME ▲	KEY +	VOL +	
CH V ; ◀	◀		◀ ; RADIO -		PREV	
CH A ; ▶	▶		▶ ; RADIO +		NEXT	
± ; SAT	10+		10+		GOTO	
CLEAR ; X	CLEAR		GOTO			
◀ ; ●	◀		◀ ; SEARCH -		REV	
▶ ; i	▶ ; PLAY/PAUSE		▶ ; ▢		PLAY/PAUSE	
▶ ; ?	▶		▶ ; SEARCH +		FWD	
■ ; X	■ ; STOP		■		STOP	
▢ ; ⬇	▶ ; PLAY/PAUSE		▢		PLAY/PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0/10		1, 2, ... 9, 0	

Функции кнопок пульта IRC 02 F к TV устройствам

Кнопки пульта IRC 02 F	Коды 501-736	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM		
VIDEO ; SYS		
☐ ; ZOOM		
▼ ; TV		
☐ ; ↻		
☐ ; LOCK		
▲ ; FAV		
⊖	POWER ; ⊖	
AV	TV/VIDEO ; TV/AV	
⌘	MUTE ; ⌘	
MENU		
EXIT		
▲		
◀		
OK		
▶		
▼		
⌘ ; SETUP		
♪ ; TITLE		
☐		
GUIDE		
⊖		
☐		
RED ; ●		
GREEN ; ▢		
YELLOW ; ◀		
BLUE ; ▢		
☐		
☐		
VOL -	VOLUME ▼ ; ◀-	
VOL +	VOLUME ▲ ; ▶+	
CH V ; ◀	CHANNEL ▼ ; P-	
CH A ; ▶	CHANNEL ▲ ; P+	
± ; SAT		
CLEAR ; X		
◀ ; ●		
▶ ; i		
▶ ; ?		
■ ; X		
▢ ; ⬇		
1, 2, ... 9, 0	1, 2, ... 9, 0	

Для просмотра функций кнопок баз кодов 8 и 9 (SAT, STB, DVB устройства) перейдите по следующей ссылке <http://www.pult-irc.ru/files/manual/SatCodesForIrcF.pdf>