

Приложение IRC 03 F (версия 20.09.03 01:54)

Модели оригинальных пультов и соответствующие им коды пульта IRC приведены в разделе "Коды пульта IRC 03 F".

Функции всех кнопок для каждого кода пульта IRC можно узнать из таблиц данного приложения.

Пульт IRC может иметь дополнительные функции (если указаны в столбце "Доп. функция"). Доступ к ним осуществляется при помощи кнопки SHIFT (см. в инструкции рис.1, п.16). Для доступа к дополнительным функциям нажмите кнопку SHIFT и, удерживая её нажатой, нажмите ту кнопку, дополнительная функция которой Вам необходима.

После первой установки батареек

Кнопка устройства пульта IRC	Код пульта IRC
TV	103
VCR	109
AUX	110
SAT	111

Кнопка устройства пульта IRC	Код пульта IRC
SHIFT + TV*	112
SHIFT + VCR*	114
SHIFT + AUX*	301
SHIFT + SAT*	302

* Нажмите кнопку SHIFT и, удерживая её нажатой, нажмите и отпустите одну из кнопок пульта: TV, VCR, AUX или SAT.

Доступные коды пульта IRC 03 F

Номер базы кодов (диапазон кодов)	Устройство базы кодов	Доступные коды пульта IRC
1 (101-199)	TV	101 - 135
2 (201-299)	VCR	201 - 214
3 (301-399)	AUX	301 - 315
4 (401-499)	SAT	401
5 (501-599)	TV	501 - 599
6 (601-699)	TV	601 - 699
7 (701-799)	TV	701 - 771
8 (801-899)	SAT	801 - 899
9 (901-999)	SAT	901 - 999

Коды пульта IRC 03 F

Коды к устройствам марки DAEWOO

Модель*	Устр-во	Код
10V-0	TV	102
143401300C	VCR	201
2011VR	TV	101
2155	TV	102
2211101402	TV	103
290600190A	TV	102
290600370A	TV	103
2906004400B	TV	123
290600510A	TV	123
4880N1011E	TV	103
97P0457100	VCR	204
97P0457200	VCR	203
97P04701	VCR	206
97P04701-A1	VCR	206
97P04794-2	VCR	211
97P04794-3	VCR	211
97P04858	AUX, CD, DVD	301
97P1803700 1	VCR	209
97P1803700 2	VCR	210
97P1803700 4	VCR	203
97P1809300C	VCR	201
97P1R2BT05	VCR	202
97P1R2BU02	VCR	201
97P1R2KCA0 (DVD)	AUX, CD, DVD	303
97P1R2KCA0 (TV)	TV	110
97P1R2PAA4	VCR	206
97P1R2RAB0	VCR	212
97P1R2ZJA0	AUX, CD, DVD	301
97P1R2ZJA6	AUX, CD, DVD	301
97PA204720	VCR	205
97PA206620	VCR	205
97PA217200	VCR	205
97PA224700	VCR	205
AF004B	AUX, CD, DVD	304
AM-41D	AUX, CD, DVD	304
AM-43D	AUX, CD, DVD	304
AM-44VM	AUX, CD, DVD	312
AMI-960	AUX, CD, DVD	313
CD-01	AUX, CD, DVD	313
CD-02	AUX, CD, DVD	312
CD-03	AUX, CD, DVD	315
CR-501	AUX, CD, DVD	302
DCS2034VR	TV	102
DCS412IR	TV	101
DL-9417	HOME APPLIANCES	214

Модель	Устр-во	Код
DLT2000	TV	117
DLT-RC01	TV	128
DMQ2072	TV	110
DTK2065VK	TV	103
DTT2173VF	TV	104
DV-1350S	AUX, CD, DVD	302
DV-3000	AUX, CD, DVD	305
DV-700S	AUX, CD, DVD	302
DVD2200	AUX, CD, DVD	306
DVD5900M	AUX, CD, DVD	307
DVD-R801	AUX, CD, DVD	304
DVF24	VCR	202
DVF44	VCR	202
DVR4286	VCR	204
DVR4783	VCR	201
DVR5179D	VCR	203
DVR8388	VCR	204
DVT2085DF	TV/VCR	109
EN-31905D	TV	130
HOF-54B	TV/AUX	121
HYDFSR-0048U0CCDU	TV	127
JRC-3612	AUX, CD, DVD	312
JX-2002E	AUX, CD, DVD	311
JX-9006	AUX, CD, DVD	309
KM-638	AUX, CD, DVD	308
KM-668	AUX, CD, DVD	310
KOR-K4603	TV	119
PK11V00840I	TV	118
PP5170	TV	103
R-10W	TV	104
R-10W-1	TV	104
R11	TV	103
R11AD-17	TV	103
R-16	TV	103
R-17	TV	113
R-18	TV	103
R-18A07	TV	103
R-18H43	TV	103
R-22	TV	108
R-23A01	TV	108
R-25	TV	108
R-26	TV	108
R-26A	TV	108
R-28A	TV	110
R-28B03	TV	108

Модель	Устр-во	Код
R-28B04	TV	108
R-29C06	TV/VCR	109
R-29C13	TV/VCR	109
R-29C13A	TV/VCR	109
R-30F21	TV	108
R-30F31	TV	108
R-33	TV	108
R-33C	TV	108
R-35F20	TV/VCR	112
R-40A01	TV	111
R-40A04	TV	111
R-40A10	TV	111
R-40A12	TV	111
R-40A15	TV	111
R-40B02	TV	108
R-40B07	TV	108
R-43	TV	122
R-44C07	TV	111
R-44C13	TV	111
R-46C04	TV/VCR	114
R-46C19	TV/VCR	114
R-46C21	TV/VCR	114
R-46C32	TV/VCR	114
R-46K35	TV	124
R-46L36	TV	115
R-47B04	TV	115
R-48A01	TV	111
R-49C05	TV	115
R-49C07	TV	115
R-50K14	TV	115
R-50K18	TV	115
R-53 (SAT)	SAT, STB, DVB	401
R-53 (TV)	TV	125
R-53 (VCR/DVD)	AUX, CD, DVD	314
R-54D06	TV	130
R-55C03	TV	115
R-55G10	TV	130
R-55H11	TV	130
R-59A01	TV	115
R-59C02	TV	111
R-9	TV	103
R-9A	TV	103
RC-0126B	VCR	206
RC-403BI	TV	132
RC-530BS	TV	133

Модель	Устр-во	Код
RC-55E05	TV	131
RC-753BI	TV	135
RC-DWT01-V01	TV/AUX	120
RD309E	TV	102
RS17-8891A	TV	129
RS41	TV	134
R-V1 (DSS)	HOME APPLIANCES	207
R-V1 (TV)	TV	126
R-V1 (VCR)	VCR	213
R-V28A	TV	116
R-V2A	TV	116
SOME MODELS	TV	105
SOME MODELS	TV	106
SOME MODELS	TV	107
VCR-01	VCR	201
VCR-02	VCR	201
VCR-03	VCR	208
XG-335MP	AUX, CD, DVD	312

* По каталогу «IRC»

Коды к TV устройствам различных марок

Марка	Код
AEG	544
AIWA	502, 503, 523, 528, 579, 634, 678, 706, 710, 712, 716
AKAI	501, 503, 512, 516, 520, 522, 524, 525, 537, 538, 540, 545, 546, 547, 550, 571, 572, 582, 583, 584, 585, 596, 598, 608, 613, 626, 652, 673, 691, 704, 708, 711, 722, 731, 769
AKIRA	511, 514, 516, 522, 524, 525, 537, 538, 541, 545, 547, 556, 577, 586, 594, 597, 598, 601, 623, 626, 629, 631, 649, 666, 680, 689, 690, 693, 699, 717, 739
AMCOL	501, 525, 545, 747
ANITECH	501, 525, 616, 726
ATLANTA	501, 751
AVEST	537, 538, 539, 766
BANG & OLUFSEN	728, 737
BBK	522, 551, 594, 597, 684, 701
BEKO	525, 530, 535, 559, 723, 742
BIGSTON	501, 503
BLAUPUNKT	512
BORK	525, 547, 646, 766
BRAND	711
BROKSONIC	501
CAMERON	538, 550, 567, 675, 697, 702
CASIO	529, 705, 706
CASKA	761
CHANGHONG	516, 596, 642
CLATRONIC	501, 545, 559, 571, 742
CONTEC	501, 603, 604, 613
CORTLAND	644
CROWN	501, 503, 511, 524, 525, 530, 571
DAEWOO	501, 508, 518, 520, 525, 526, 536, 538, 539, 546, 565, 571, 576, 598, 613, 685, 687, 692
DARTLAND	501
DAYTRON	501
DEXP	516, 579, 596, 684, 702
DIGITAL	547
DISTAR	562, 616
DNS	596, 702, 708
DOFFLER	684, 708
DUAL	746
ELEKTA	501, 503, 520, 525, 527, 615
ELEKTRONIKA	583
ELENBERG	538, 545, 550, 565, 567, 579, 581, 644, 655, 676, 683, 717
EPLUTUS	537, 644, 677, 682, 697, 724
ERC	537, 631, 764
ERISSON	511, 514, 516, 525, 526, 537, 538, 541, 550, 556, 561, 568, 586, 596, 599, 623, 626, 629, 631, 711, 712, 714, 739, 747
EVGO	538, 540, 630
FINLUX	501, 511, 583, 589, 608, 732, 758
FUJITSU	544, 573
FUNAI	501, 502, 503, 504, 505, 525, 537, 538, 581, 603, 764
FUSION	596, 642, 699, 705, 706
GBS	501, 520, 525, 571, 583
GENERAL	537, 556
GOLD STAR - LG	501, 512, 518, 525, 527, 559, 570, 583, 584, 589, 609, 613, 642, 706, 712, 742, 750, 765
GRUNDIG	501, 512, 525, 606, 662, 718, 719, 733
HAIER	518, 526, 581, 574, 657, 667, 669, 707
HAPPY	501
HARPER	706, 712
HCM	501, 503, 525
HELIX	701, 702, 708
HIL	503
HISENSE	525
HITACHI	501, 515, 518, 522, 525, 537, 544, 548, 554, 578, 584, 587, 588, 604, 613, 640, 729, 749
HORIZONT	525, 540, 545, 550, 559, 583, 664, 672, 771
HPC	546
HYUNDAI	516, 518, 522, 525, 526, 537, 538, 540, 541, 546, 547, 550, 556, 580, 596, 597, 599, 626, 642, 648, 650, 655, 705, 711, 712, 714, 717, 760
INNO-HIT	501, 525, 571
IRBIS	596, 714
IVA (ИВА)	537, 561, 637
IZUMI	516, 537, 596, 663, 691, 695, 703, 705, 711
JINLIPI	537, 637, 766
JVC	513, 515, 593, 604, 727
KAMACROWN	571
KANSAI	501, 525
KENSTAR	516
KITT	503, 613, 616, 726
KNEISSEL	753
KONKA	537, 538, 560, 561, 581, 616, 626, 717
KRONMARK	596
LOEWE	542, 709, 744
MEDION	525
METZ	745
MITSUBISHI	501, 520, 522, 525, 604, 611, 722, 728, 744
MIYOTA	537, 644, 656
MTC	501, 583
MULTITECH	501, 525
MYSTERY	516, 537, 597, 642, 650, 653, 701, 702, 708
NAD	518, 525
NASH	537
NEC	501, 517, 520, 526, 552, 604, 625, 722
NESCO	501, 525
NESONS	708
NOKIA	519, 584, 610, 614, 616, 740, 746, 767
NOVA	501, 616, 638
NOVEX	516, 546, 599
NTT	759
OMEGA	501, 571
ONIDA	513
ONIKS	516, 525, 537, 545, 546, 547, 680
ONWA	524, 525
OPERA	644, 666, 682
ORBITA	635
ORION	501, 503, 506, 507, 509, 516, 525, 528, 537, 591, 603, 617, 619, 627, 641, 643, 664, 715, 720, 722, 729, 746
ORSON	526, 537

Коды к TV устройствам различных марок

Марка	Код
PANASONIC	512, 531, 532, 752
PHANTOM	644
PHILIPS	501, 511, 524, 525, 540, 549, 628, 639, 707, 748
PHOENIX	613
PHOENIX GOLD	708
PIONEER	548, 555, 566, 575, 647, 666
PIXELVIEW	525
PLANTRON	735
POLAR	525, 526, 537, 538, 540, 543, 546, 547, 581, 596, 599, 663, 664, 683, 703, 711, 717
POLAROID	525
PRESTIGIO	564, 656
PRIMA	522, 547
PROLOGY	653, 655
RADUGA	525, 545, 569, 583, 743
RAINFORD	525, 537, 544, 545
RECOR	511, 525
REKORD	520, 525, 526, 537, 538, 539, 545, 547, 725, 736, 743, 747
RFT	535, 618, 728
ROADSTAR	501, 508, 525, 571
ROLSEN	503, 516, 525, 537, 538, 540, 543, 546, 564, 576, 592, 594, 596, 649, 656, 669, 684, 714, 768, 770
ROVERSCAN	662, 770
ROYAL	501, 503, 525, 616
RUBIN	504, 516, 525, 537, 546, 583, 619, 665, 714
SABA	509, 510, 521, 602, 756
SALORA	584
SAMSUNG	501, 525, 526, 529, 563, 580, 595, 596, 608, 612, 613, 622, 641, 645, 688, 723, 741
SANSUI	524, 525, 538, 556, 695
SANYO	501, 519, 522, 525, 530, 540, 544, 550, 558, 604, 608, 610, 618, 621, 696, 722, 730, 734, 738
SATURN	702, 708
SCARLETT	541, 545
SCHNEIDER	525, 540, 571, 771
SELECO	736, 763
SETRO	520
SHARP	526, 544, 548, 604, 707, 721
SHERION	616
SHIVAKI	501, 503, 508, 516, 518, 520, 525, 526, 527, 536, 538, 539, 540, 545, 546, 547, 550, 556, 580, 583, 585, 596, 599, 609, 619, 630, 632, 635, 636, 643, 644, 664, 681, 694, 708, 743
SIEMENS	512, 525, 660, 726, 734
SIESTA	501, 537, 637
SILELIS	613
SILVER	633
SITRONICS	503, 516, 525, 537, 538, 540, 543, 545, 594, 626, 629, 661, 671, 672, 674, 679, 680, 686, 766
SOKOL	516, 525, 547, 635
SONY	533, 604, 659, 722
SPEKTR	525, 538, 668
START	525, 537, 545, 546, 547
STASSFURT	535, 618
STINOL	525
SUPER	537, 561, 644, 653, 654, 655, 666, 677, 682, 724, 754
SUPER GENERAL	537
SUPRA	501, 508, 516, 518, 520, 522, 525, 527, 529, 536, 537, 541, 563, 579, 580, 596, 597, 612, 642, 643, 687, 690, 705, 706, 712, 713
SUZUKI	516, 556
SVEN	574
TCL	521, 538, 540, 642
TEAC	525
TECHNICS	531, 537, 538
TECHNO	501, 525, 538, 544, 546, 556, 568, 579, 596, 599, 644, 664, 703
TECKTON	522, 582, 601, 669, 670
TELEFUNKEN	510, 521, 561, 590, 602, 605, 642, 708, 712, 714, 756, 757
TELEVISION	501, 525, 616
THOMSON	509, 510, 521, 550, 579, 602, 624, 642, 702, 756
TOSHIBA	516, 544, 553, 604, 651, 744
TRONY	516, 525, 537, 538, 550, 574, 657
TVT	511, 525, 530, 535, 538, 583, 586, 620, 630, 723, 742
UNITED	525
VARTA	642
VESTEL	525, 544, 556, 583, 619
VIEWSONIC	557, 698
VITA	547
VITEK	537, 650
VITYAS	525, 708
VOLNA (ВОЛНА)	635
VR	516, 537, 565, 598, 702, 714
WALTHAM	503, 509, 511, 583, 584, 607, 613, 729, 762
XORO	522, 526, 545
XPX	663
НЕИЗВЕСТНАЯ МАРКА	525, 546, 574, 596, 648, 656, 666, 711, 755

Коды к SAT устройствам различных марок

Марка	Код
AIRTONE	968
ALFA GOLD	828
AMINO (СТРИМ)	829, 902
ARION	835
ARRIS	883, 963, 974
ASTON	811
BBK	931
BIG STAR	965
BIGSAT	839, 840, 903, 936
CADENA	958, 962
CONTINENT	886, 975
COSHIP	855
DAEWOO	872
D-COLOR	946, 961
DELTA SYSTEMS	985
DIGIFORS	946
DIVISAT	957, 958
D-LINK	923
DNS	950, 968
DR.HD	983
DRE	804, 888
DREAM	819
DUNE	927, 934
ECHOSPACE	862
ECHOSTAR	808, 809, 822
ELTEX	987
EPLUTUS	961
EUROSKY	840, 981
EUROSTAR	863
EUSTON	825
EVO	965
GALAXY INNOVATIONS (GI)	878, 881, 908, 911, 912, 917, 924
GENERAL SATELLITE	804, 868, 888, 907, 933, 954
GLOBALTEQ	833
GLOBO	909, 915, 925, 935, 945, 956, 971, 973, 995, 999
GOLD STAR - LG	871
GOLDEN INTERSTAR	821, 841, 879, 918
GOLDEN MEDIA	847, 912
GOLDMASTER	911
HD BOX	847, 911
HITACHI	824, 832
HIVION	929
HOME	968
HOMECAST (ВОЛЯ)	820, 831, 836
HUAVEE	946
HUMAX	803, 804, 823, 848, 860, 861, 905, 949
HYUNDAI	968
ID DIGITAL	804
INTEK	984
INTERCROSS	988
INTRO	978
KAON	820, 949
KARTINA TV	934
KOSMOS	855, 856
LANS	970
LOCUS	946
LUMAX	852, 873, 907, 913, 965, 994
MAG	988
MEDIA COM	825
MOTOROLA	883, 884, 901, 974
MYSTERY	910, 997
NDS	814
NEXT	864
NOKIA	813
NOT	941
ONLIME	905
OPENBOX	827, 835, 869, 870, 911, 990, 991
OPENTECH	972
OPENTEL	865
OPTICUM	971
ORBITA	946, 995
ORIEL	887, 926, 941, 948, 955, 986
PACE	801, 932, 953
PATIX DIGITAL	946, 967, 992
PAUXIS	842, 859
PERFEO	960, 981
PHILIPS	857, 899
PIONEER	851
POLAR	858
REFLECT	959
REXANT	977
RIKOR	916, 947
ROLSEN	930, 941, 942, 961
SAGEMCOM	906
SAMSUNG	803, 810, 812, 854
SEG	818
SELENGA	946
SEZAM	882
SKY VISION	952, 966, 977, 982
SKYMASTER	830
SKYWAY	911
SKYWORTH	989
STAR	833
STAR TRACK	826, 835, 943
STARNET	885
STRONG	805, 806, 815, 816, 817, 828, 830, 914
SUNNIWELL	875
SUPERBOX	903

Коды к SAT устройствам различных марок

Марка	Код
SUPERMAX	821, 866, 880, 924
SUPRA	950, 960, 962
TECHNOSAT	852, 853
TEL-ANT	960
TELEFUNKEN	961, 968
TESLER	926
TOP BOX	965
TOPFIELD	837, 838, 877, 891
TOSHIBA	876
TV STAR	967
TVJET	946, 976
VESTEL	820, 824
VU+	919, 920, 921, 922
WORLD VISION	821, 928, 951, 952, 961, 968
XSAT	801, 807
XSAT (НТВ+)	801, 802, 807, 906, 972, 984, 998
YUXING	904
ZYXEL	874
АРБАКОМ	967
БИЛАИН	883, 884, 901, 923
ВОЛГАТЕЛЕКОМ	842, 843, 844, 845, 846, 847, 849, 850, 858, 867
ДОМ.RU	820, 905
ДОМОЛИНК	874, 904
МТС	829, 855, 902, 964, 974, 979, 980, 989, 993
НЕИЗВЕСТНАЯ МАРКА	834, 835, 842, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 903, 904, 937, 938, 939, 940, 944, 945, 969, 971, 978, 996
РОСТЕЛЕКОМ	874, 904, 923, 963, 988, 993
СИГНАЛ	867, 968
ТВОЁ ТВ	820
ТЕЛЕКАРТА	867, 909, 973
ТЕЛЕЦИФРА	968

Функции кнопок пульта IRC 03 F к TV устройствам

Кнопки пульта IRC 03 F	Код 101		Код 102		Код 103		Код 104		Код 105	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	>; FIN +		COLOUR +; ⊕+		⊕⊕⊕▲		DBB	HUE +	DNR; PWR PIX	+; [RECALL]
AUDIO; NICAM							-II; ⊕; [RECALL]; STEREO		[RECALL]; [RECALL]; I-II; SAP; [RECALL]; S/M/D	
VIDEO; SYS			MODE; P/S		SYSTEM		PAL/SECAM; NIC.		[RECALL]; [RECALL]	
[ZOOM]			SIZE				[RECALL]		[RECALL]; 16:9	[RECALL]; Y
▼; TV	<; FIN -		COLOUR -; ⊕-		⊕⊕⊕▼		TV; [RECALL]	HUE -	[RECALL]	-; Y
[RECALL]; [RECALL]	AUTO.S		PIP		PRESET		▶▶; AST; SEAR; Q.V.	[RECALL]; [RECALL]	[RECALL]; [RECALL]	[RECALL]; INSTALL; [RECALL]
[LOCK]			STILL				▶;<; P.P.; OK		▶;<; PP; [RECALL]	[RECALL]; [RECALL]
▲; FAV			FC				MEMO		[RECALL]	[RECALL]
⊕	⊕; POWER		POWER; ⊕		⊕		⊕; OFF; STAND BY		⊕; POWER	
AV	AV; TV/AV		TV/VIDEO; TV/AV		⊕AV		AV; [RECALL]; VIDEO	[RECALL]; CLEAR	⊕; [RECALL]; EXT.; AV	[RECALL]
[MUTE]	MUTE; MUTING		MUTE; [RECALL]		[RECALL]; MUTE		[RECALL]; MUTE; [RECALL]		[RECALL]	[RECALL]
MENU			FUNCT; MENU				MENU		MENU; [RECALL]	FEATURE
EXIT							Arret		OFF; EXIT; OUT	WHITE; E; i
▲	⊕⊕+		FUN+; +; ▲; ZOOM		AUTO/S ▲		⊕+; ▲	⊕+	MENU+; ▲	⊕+
◀	⊕-		⊕-; ⊕-		FT ▼		FINE; FT; TUNE◀	⊕-	◀	⊕-
OK			PIC SEL; FUNCT		SELECT		MENU; F; PIC; SEL		ENTER; OK	SEL
▶	⊕+		⊕+; ⊕+		FT ▲		FINE+; FT+; TUNE▶	⊕+	▶	⊕+
▼	⊕⊕-		FUN-; -; ▼; [RECALL]		AUTO/S ▼		⊕-; ▼	⊕-	MENU-; ▼	⊕-
[SETUP]	PIC; M.CH		PIC; SET ON TIME		Q.VIEW		SMART CONT. PICT		SMART Picture [RECALL]	PICTURE; [RECALL]
[TITLE]	BAND		X ON TIME		AFT/BAND		SMART CO. SOUND		SMART Sound [RECALL]	SOUND; [RECALL]
[RECALL]			MIN; MINUTE		ON TIMER		[RECALL]; TTR; TTX	[RECALL]; MIX; TMM	[RECALL]	[RECALL]
GUIDE			HR; HR CLOCK		TIMER ENABLE		SYS; 13-24		[RECALL]	LIST
⊕	TIMER; NORM		SLEEP; OFF TIME.; [RECALL]		SLEEP		TIMER; SLEEP; [RECALL]		SLEEP; [RECALL]	⊕
[RECALL]					HOUR		[RECALL]; SPAT.; [RECALL]		[RECALL]	[RECALL]
RED; ●	13		1-; 10-		2-		RED; [RECALL]; Pon	[RECALL]	RED; A; PICTURE	INSTANT; ●
GREEN; [RECALL]	14		2-		3-		GREEN; [RECALL]; Pst	[RECALL]	GREEN; B; S-ND; [RECALL]	●
YELLOW; [RECALL]	15		3-; SCAN		4-		YELLOW; [RECALL]; Pst	[RECALL]	YELLOW; C; TIME.; [RECALL]	DBB
BLUE; [RECALL]	16		4-; MSG		MINUTE		BLUE; [RECALL]; [RECALL]	[RECALL]	BLUE; D; GAME; [RECALL]	[RECALL]; RADIO
[RECALL]			RECALL; DISPLAY		CH CALL		DISPLAY; STAT.; [RECALL]		[RECALL]; RECALL; OSD	[RECALL]; [RECALL]
[RECALL]			[RECALL]; Q. VIEW; [RECALL]				P◀P; Q.VIEW; [RECALL]		[RECALL]; A/CH; P/C; [RECALL]	[RECALL]
VOL -	[RECALL]; VOL. DOWN		VOLUME ▼; [RECALL]		[RECALL]		VOL -; [RECALL]; [RECALL]	[RECALL]; [RECALL]	[RECALL]; VOL -; V-	SMART CONTROL-
VOL +	[RECALL]; VOL. UP		VOLUME ▲; [RECALL]		[RECALL]		VOL +; [RECALL]; [RECALL]	[RECALL]; [RECALL]	[RECALL]; VOL. +; V+	SMART CONTROL+
CH V; [RECALL]	#-; CH. DOWN		CHANNEL ▼; P-		PR ▼		P -; CH -; PROG -	[RECALL]	P -; CHANNEL -	PIP -
CH ▲; [RECALL]	#+; CH. UP		CHANNEL ▲; P+		PR ▲		P+; CH +; PROG +	[RECALL]	P+; CHANNEL +	PIP +
[RECALL]; SAT	11		[RECALL]		1-		-/-; PAGE +; [RECALL]		-/-	SAT
CLEAR; X	12		RESET; CANCEL; X		SKIP		PIC; TPD; PAGE -; [RECALL]	[RECALL]; SYS; PIP; [RECALL]	X; [RECALL]; [RECALL]	CC
[RECALL]							[RECALL]; TSC; SUB. PAGE		[RECALL]	[RECALL]
[RECALL]							[RECALL]; X; T INDEX; [RECALL]		[RECALL]; WHITE; [RECALL]	2
[RECALL]							[RECALL]; [RECALL]; REV		[RECALL]; [RECALL]	X2
[RECALL]							[RECALL]; [RECALL]; TPH; STORE		[RECALL]; [RECALL]	[RECALL]
[RECALL]							[RECALL]; [RECALL]; TST		[RECALL]; [RECALL]	[RECALL]; [RECALL]
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 03 F к TV устройствам

Кнопки пульта IRC 03 F	Код 106		Код 107		Код 108		Код 109		Код 110	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	▶▶; LIST				CH ▲		INDEX ▶▶			
AUDIO; NICAM	AUDIO				SURROUND				LANGUAGE	
VIDEO; SYS					SYSTEM; L/FIT					
[ZOOM]			H.ADJ		16:9					
▼; TV	[RECALL]; HOLD				CH ▼		INDEX [RECALL]			
[RECALL]; [RECALL]					PinP	STORE	SEARCH		AUTO SEARCH	
[LOCK]	FREEZE				STILL		COUNTER RESET		NORMAL/OK	
▲; FAV	FAV		M.ADJ		SWAP					
⊕	⊕		⊕; POWER		OFF; [RECALL]		TV POWER	POWER	⊕	
AV	SOURCE		TV/AV		⊕; TV/VIDEO; [RECALL]; [RECALL]	TV/VIDEO	TV/AV		⊕; TV/VIDEO	
[MUTE]	[RECALL]		[RECALL]		[RECALL]; MUTE		[RECALL]		[RECALL]	
MENU	MENU				MENU; [RECALL]		MENU		MENU; 100	
EXIT	[RECALL]; EXIT				MENU OFF				E; [RECALL]; TV/CATV	
▲	▲				⊕▲		▲		▲	
◀	◀		PICT -; -				◀		◀	
OK	OK		PICT +; +		E; ENTER; OK; [RECALL]; [RECALL]		▶		SET/RESET	
▶	▶						▶			
▼	▼		PICTURE		⊕▼		▼		PICTURE	
[SETUP]	PICTURE				⊕; TV/TEXT					
[TITLE]	SOUND				⊕/II					
[RECALL]	TEXT				[RECALL]; TEXT; ?		ATK		[RECALL]; RECALL	
GUIDE	[RECALL]; TV GUIDE				2 PIC					
⊕	REC LIST		⊕; SLEEP		SLEEP; [RECALL]; [RECALL]		SLEEP		SLEEP	
[RECALL]	[RECALL]; CH LIST				NORMAL; [RECALL]; [RECALL]					
RED; ●	RED; AUDIO	●			RED; DEL; DELETE			REC/OTR	TIMER	
GREEN; [RECALL]	GREEN; SUBTITLE				GREEN; MOVE				HOUR	
YELLOW; [RECALL]	YELLOW; FAV				YELLOW; TIME; [RECALL]				MINUTE	
BLUE; [RECALL]	BLUE; AD				BLUE; MODE		[RECALL]; SLOW		QUICK VIEW	
[RECALL]	[RECALL]; INFO		RECALL; [RECALL]		POSITION		OSD			
[RECALL]	[RECALL]; BACK		RECALL; [RECALL]		RECALL; [RECALL]				2-; PIC	
VOL -	[RECALL]		[RECALL]		VOL ◀; [RECALL]; [RECALL]		VOL/V-LOCK ▼		[RECALL]	
VOL +	[RECALL]		[RECALL]		VOL ▶; [RECALL]; [RECALL]		VOL/V-LOCK ▲		[RECALL]	
CH V; [RECALL]	CH -	[RECALL]; HOLD	PROG -		PR ▼; ▼		CH/TRK. ▼	INDEX [RECALL]	PR ▼	
CH ▲; [RECALL]	CH +	[RECALL]; LIST	PROG +		PR ▲; ▲		CH/TRK. ▲	INDEX ▶▶	PR ▲	
[RECALL]; SAT			1-; 11		-/-		SPEED		1-; -/-	
CLEAR; X			2-; 12		SKIP; [RECALL]; [RECALL]; WOOF.	SKIP	COUNTER STOP		3-	
[RECALL]	[RECALL]; LANGUAGE		3-; 13				▶; REW		4-	
[RECALL]			14		TIME; [RECALL]		▶; PLAY		E; [RECALL]; TV/CATV	
[RECALL]	[RECALL]; REVEAL	REVEAL	15		[RECALL]		[RECALL]; F.FWD			
[RECALL]	[RECALL]; FREEZE	HOLD	16		SURROUND; [RECALL]		[RECALL]; STOP			
[RECALL]	[RECALL]; TEXT				[RECALL]		[RECALL]; PAUSE/STILL			
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 03 F к TV устройствам

Кнопки пульта IRC 03 F	Код 111		Код 112		Код 113		Код 114		Код 115	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD							INDEX +; []		MULTI MEDIA ; PC	
AUDIO ; NICAM									MODE; [] ; []	
VIDEO ; SYS	TV/VIDEO		SYSTEM ; []				C-STOP		N.R. ; VIDEO	
[] ; ZOOM	SIZE		SHOWVIEW						ZOOM; ASPECT; []	
▼; TV									POSITION	
[] ; []	PinP		MON/ATRK						PIP	
[] ; LOCK	NORMAL/OK ; []	CH.LOCK	NORMAL						NORMAL; PICT.; []	LOCK
▲; FAV	SWAP		EJECT						SWAP	
○	○		○				○		○; POWER	
AV	[] ; []		[]				[]		[] ; INPUT	INPUT
[]	[]		[]				[]		[] ; MUTE	
MENU	MENU		MENU				MENU		MENU	
EXIT										
▲			▲				CH ▲; PAGE ▲		PR ▲; []	
◀			◀				VOL ▼		◀; VOL ◀	
OK			■				MENU		OK; []	
▶			▶				VOL ▶		▶; VOL ▶	
▼			▼				CH ▼		PR ▼; []	
[] ; SETUP							PIC ; PICTURE		NORMAL; PICT.; []	
[] ; TITLE	MODE ; S.MODE								3D ; SOUND MODE	
[]	[]								[]	
GUIDE							TTX ; TV			
[]	SLEEP ; []		SLEEP				PP ; MIX ; FUZZY			
[]	[]						SLEEP ; [] ; HOLD	TIME	SLEEP	
[]	[]						AUTO LIST		[]	
RED ; ●	RED ; SKIP ; SWAP		RED ; CNT. RESET	REC/OTR ; []			RED		RED ; CLEAR	REC/OTR
GREEN ; ►	GREEN; MOVE; POS.		GREEN ; CNT. STOP				GREEN		GREEN ; SWAP	
YELLOW ; ◀	YELLOW; DEL.; PIP		YELLOW ; VISS ►►				YELLOW ; STORE		YELLOW; POSITION	
BLUE ; ►	BLUE ; MODE		BLUE ; VISS ◀◀				BLUE ; CANCEL		BLUE ; P.TV/VIDEO	
[]	POSITION		RECALL ; []				DISPLAY		[] ; RECALL	
[]	RECALL ; []						Q.VIEW ; BROWSE		PREV PR	
VOL -	◀; []		VOL/V-LOCK ▼				VOL ◀		◀; VOL ◀	
VOL +	▶; []		VOL/V-LOCK ▲				VOL ▶		▶; VOL ▶	
CH ▼; ◀	PR ▼		PR/TRK ▼; PAGE ▼	VISS ◀◀			CH ▼		PR ▼; []	
CH ▲; ►	PR ▲		PR/TRK ▲; PAGE ▲	VISS ►►			CH ▲		PR ▲; []	
±; SAT									MGDI	
CLEAR ; X	[] ; P.SIZE ; []		CLEAR ; []				CANCEL		SV/V+ ; []	CLEAR
◀; ○	[]		REW ; ◀	[]			◀; []	[]	[]	
▶; i	[]		PLAY ; ▲ ; []	[]			▶ ; []	[]	OK ; []	
▶▶; ?	[]		FF ; ▶▶	[]			▶▶ ; []	[]	[]	
■ ; X	[]		■ (STOP) ; []	[]			■ ; HOLD	[]	[]	STILL ; []
■ ; []	[]		PAUSE/STIL.; ▼; []	[]			LANG. ; [] ; EXP.	[]	[] ; P.SIZE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0				1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 03 F к TV устройствам

Кнопки пульта IRC 03 F	Код 116		Код 117		Код 118		Код 119		Код 120	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	ZOOM +				PC		PC		DVD	
AUDIO ; NICAM			[] ; []		MPX		3D		STEREO ; AUDIO	
VIDEO ; SYS	SCREEN MODE				AV2				D-SUB ; VGA ; PC	
[] ; ZOOM							[] ; []		ASPECT	
▼; TV	ZOOM -				TV ; []		TV		TV	
[] ; []			AUTO ; PIP						SCART ; COMPON.	SCAN ; SUBTITLE
[] ; LOCK	FREEZE								SET FAV	
▲; FAV									FAV	▲ ; EJECT
○	○ ; POWER		○		○ ; PWR		○		○ ; POWER	
AV	INPUT SELECT		[]		AV1		AV		SOURCE	
[]	MUTE		[]		MUTE		[]		[] ; MUTE	
MENU	MENU		MENU		MENU ; []		MENU		MENU	MENU
EXIT					EXIT ; []				EXIT	
▲			▲		▲		▲		▲	
◀	VOL ◀		◀		◀		◀		◀	
OK			MENU		OK		OK		ENTER	
▶	VOL ▶		▶		▶		▶		▶	
▼			▼		▼		▼		▼	
[] ; SETUP	PICTURE MODE		PICTURE				[]		P.M. ; PICTURE	SET UP
[] ; TITLE	SOUND MODE		SOUND						S.M. ; SOUND	TITLE
[]			TEXT		TEXT ; []		TXT/MIX		[] ; [] ; TITLE	
GUIDE									[] ; CARD	
[]	SLEEP		SLEEP		SLEEP				SLEEP	
[]			SUB.TITLE				[]		SUBTITLE ; ASPECT	SUBTITLE
RED ; ●			RED ; SOUND		RED		RED		RED ; ◀◀ ; FB	
GREEN ; ►			GREEN ; PICTURE		GREEN		GREEN		GREEN ; ▶▶ ; FF	
YELLOW ; ◀			YELLOW; VTR; AUTO		YELLOW		YELLOW		YELLOW; ◀◀ ; PREV	
BLUE ; ►			BLUE ; SCREEN		BLUE		BLUE		BLUE ; ▶▶ ; NEXT	SLOW
[]	DISPLAY ; RECALL		Q.VIEW		DISPLAY				DISPLAY	
[]					LAST CH		SWAP		[]	REPEAT
VOL -	VOL ◀		VOL -		VOL ▼		VOL -		VOL -	
VOL +	VOL ▶		VOL +		VOL ▲		VOL +		VOL +	
CH ▼; ◀	▼		CH - ; PROG -		CH ▼		PR -		CH ▼	
CH ▲; ►	▲		CH + ; PROG +		CH ▲		PR +		CH ▲	
±; SAT			VTR ; +/-						[] ; +10	GOTO
CLEAR ; X							[] ; UPDATE		[] ; MENU	
◀; ○			SUB.PAGE				[]		◀	[] ; GOTO
▶; i			INDEX		INDEX ; []		[]		▶ ; PLAY	[] ; SET UP
▶▶; ?			REVEAL		REVEAL ; []		[]		▶▶	[] ; SLOW
■ ; X			HOLD		HOLD ; []		[]		■ ; STOP	[] ; REPEAT
■ ; []							[]		■ ; PAUSE	[] ; ANGLE
1, 2, ... 9, 0			1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 03 F к TV устройствам

Кнопки пульта IRC 03 F	Код 121		Код 122		Код 123		Код 124		Код 125	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	DVD		Ⓢ; SURROUND							
AUDIO; NICAM	STEREO; AUDIO		Ⓜ/I; S.MODE; Ⓜ							ZOOM +
VIDEO; SYS	SCART		Ⓢ; STORE; ADD				MODE; Ⓢ			I-I
Ⓢ; ZOOM	D-SUB		ZOOM; P.SIZE; Ⓢ				ZOOM			MULTIMEDIA
▼; TV	TV		□; TV				TV			SCREEN SIZE
Ⓢ; ↻	SCAN		PIP ON; PIP; Ⓢ	CH.SCAN; ▲	MEMORY		Ⓢ			ZOOM -
Ⓢ; LOCK	SET FAV	ANGLE	STILL; Ⓢ	Ⓜ; K.LOCK						STILL
▲; FAV	FAV	▲	SWAP; Ⓢ	Ⓜ						
Ⓢ	Ⓢ; POWER		POWER; Ⓢ		POWER; ON/OFF		Ⓢ			Ⓢ
AV	SOURCE		VIDEO; Ⓢ; AV; Ⓢ		TV/VIDEO		AV			□/Ⓢ
Ⓢ	Ⓢ; MUTE		MUTE; Ⓢ		MUTE		Ⓢ			Ⓢ
MENU	MENU	MENU	MENU; Ⓢ; F.MENU				MENU			MENU
EXIT	EXIT									
▲	▲		P+; P▲; Ⓢ		▲; HOUR		PR▲; Ⓢ			PR▲; Ⓢ
◀	◀		↶; VOL◀				◀			VOL◀
OK	ENTER						MENU			MENU
▶	▶		↷; VOL▶				▶			VOL▶
▼	▼		P-; P▼; Ⓢ		▼; MIN		PR▼; Ⓢ			PR▼; Ⓢ
Ⓢ; SETUP	P.M.	SET UP	↶/↷; P.STD; Ⓢ		PICTURE					PICT.MODE; Ⓢ
♪; TITLE	S.M.	TITLE	↶/↷; S.STD; Ⓢ				SOUND; Ⓢ			SOUND MODE; Ⓢ
Ⓢ	Ⓢ; TITLE		TTX/MIX; Ⓢ; TEXT	Ⓢ; MIX			PIP SIZE; Ⓢ			Ⓢ
GUIDE			HELP; ?							
Ⓢ	SLEEP		Ⓢ; SLEEP; Ⓢ		SLEEP		Ⓢ; Ⓢ			SLEEP
Ⓢ	SUBTITLE		LANGUAG.; HELP; ?	Ⓢ; LIST	TIME					Ⓢ
RED; ●	RED; ◀		RED	LOCAT.; ROTAT.; Ⓢ			RED; TV			RED
GREEN; ▮	GREEN; ▶		GREEN	FACTORY; H1			GREEN; AV			GREEN
YELLOW; ◀	YELLOW; ▶		YELLOW	3-SPEED; H2			YELLOW; COMPON.			YELLOW
BLUE; ▮	BLUE; ▶	SLOW	BLUE				BLUE; PC			BLUE; I-I
Ⓢ	DISPLAY		DISPLAY; Ⓢ; Ⓢ		RECALL					RECALL
Ⓢ	Ⓢ	REPEAT	PP CH; PRE CH; c	P/C	RECALL					PREV PR
VOL -	VOL -		↶; VOL◀		VOL▼		↶			VOL◀
VOL +	VOL +		↷; VOL▶		VOL▲		↷			VOL▶
CH V; ◀	CH▼	◀	P-; P▼; Ⓢ		CH▼		PR▼; Ⓢ			PR▼; Ⓢ
CH A; ▶	CH▲	▶	P+; P▲; Ⓢ		CH▲		PR▲; Ⓢ			PR▲; Ⓢ
±; SAT	GOTO		-/-; +100; Ⓢ							
CLEAR; X	Ⓢ; MENU		X; Ⓢ; CANCEL; ERASE		SKIP		POSITION; Ⓢ			Ⓢ
◀; Ⓢ	◀	Ⓢ; GOTO	Ⓢ; SUBPAGE				Ⓢ; Ⓢ			Ⓢ
▶; i	▶	Ⓢ; SET UP	Ⓢ; INDEX				SOURCE; Ⓢ			Ⓢ
▶; ?	▶	Ⓢ; SLOW	Ⓢ; REVEAL				SOUND; Ⓢ			Ⓢ
Ⓢ; X	Ⓢ	Ⓢ; REPEAT	Ⓢ; HOLD				STILL; Ⓢ			Ⓢ
Ⓢ; Ⓢ	Ⓢ	Ⓢ; ANGLE	Ⓢ; SIZE; F/T/B				Ⓢ			Ⓢ
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0			1, 2, ... 9, 0

Функции кнопок пульта IRC 03 F к TV устройствам

Кнопки пульта IRC 03 F	Код 126		Код 127		Код 128		Код 129		Код 130	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	SEL; PIP INP; BLUE				LANGUAGE; LUCID.				P.PR▲	
AUDIO; NICAM	SSM; DASP; SSM/*	I / II; MTS; I/II/*			NICAM		AUDIO		Ⓜ/I	LANGUAGE
VIDEO; SYS	APC; PSM	EYE/*					SYS			MULTIMEDIA
Ⓢ; ZOOM	WIN.SIZE	SPLIT ZOOM	ZOOM; Ⓢ; Ⓢ; SIZE		ASPECT	ZOOM; CANCEL			ASPECT	ZOOM
▼; TV	TV/CATV; TV				Ⓢ				P.PR▼	TV; REVEAL
Ⓢ; ↻	ON/OFF; PIP; PIP/DW	CH.SEAR.; INDEX; Ⓢ	SCAN; REVEAL; RES		P-SCAN		SCAN			MGDI
Ⓢ; LOCK	PP; PSM; NORMAL	STILL; HOLD; Ⓢ	Ⓢ; LOCK; SUBTIT.		ANGLE		P.P		PICTURE; NORMAL	LOCK
▲; FAV	FCR; FAVOURITE	WIN.POSITION			▲				FAVOURITE	
Ⓢ	POWER		Ⓢ		POWER		Ⓢ		Ⓢ; POWER	
AV	TV/AV; INPUT SEL.		TV/AV		SOURCE		AV		TV/AV; AV; Ⓢ	DVB/ANA.; SOURCE
Ⓢ	MUTE		Ⓢ; MUTE		Ⓢ		Ⓢ		Ⓢ; MUTE	
MENU	MENU; SET-UP	PIP MENU			MENU	DVD MENU	MENU		M; MENU	
EXIT	AVL		GOTO						CANCEL/EXIT; EXIT	
▲	▲; ZOOM IN; ZOOM +		▲				P+; P▲		▲; Ⓢ	
◀	◀		◀				V-; ◀		◀	
OK	OK; ENTER		MENU		OK		SELECT		OK; SELECT	
▶	▶		▶		▶		V+; ▶		▶	
▼	▼; ZOOM OUT; Z-M -		▼		▼		P-; P▼		▼; Ⓢ	
Ⓢ; SETUP	PICTURE	PICTURE TURBO	↶/↷; P.P; P.MODE		P.MODE	SETUP; INDEX			EDIT; HDMI	
♪; TITLE	SOUND	PSEUDO; P.STEREO	↶/↷; SOUND		S.MODE	TITLE; REVEAL			SOUND	S.EFF.; 3D-PANOR.
Ⓢ	TEXT; Ⓢ; TEXT/*	MIX; Ⓢ	TEXT		TXT				Ⓢ; TEXT	Ⓢ; COMP; MIX
GUIDE	EXCH.; SWAP; YELL.		GAME; HOLD		ENTER		GAME		GUIDE; ZOOM	
Ⓢ	SLEEP	MODE; Ⓢ; SLEEP	Ⓢ; SLEEP		SLEEP		SLEEP		SLEEP; HOLD	
Ⓢ	LIST	CAPTION	CALENDAR; MIX		SUBTITLE; SUBP.				SUBTITLE; INDEX	
RED; ●	RED; PR -	AUTO PROG.	RED; PICTURE; Ⓢ		RED; P-SCAN	REPEAT			RED; P.MODE	DYNAMIC BASS
GREEN; ▮	GREEN; PR +	MEMORY / ERASE	GREEN; Ⓢ		GREEN; GOTO	A-B			GREEN; P.STILL	DYNAMIC BASS
YELLOW; ◀	YELLOW; SWAP	ARC; *	YELLOW; TIMER		YELLOW; ANGLE				YELLOW; P.SWAP	
BLUE; ▮	BLUE; INPUT	MULTIMEDIA; *	BLUE; SOUND; SUR.		BLUE; MEDIA				BLUE; P.INPUT	
Ⓢ	Q.VIEW; REVIEW		CALL; ?; DISP; Ⓢ		DISPLAY		DISP		Ⓢ; RECALL; INFO	
Ⓢ	RECALL		Ⓢ; QV; ALT		Ⓢ		Ⓢ; Ⓢ		PREV PR; PREV.	
VOL -	VOL◀	FINE -	V-; ◀; VOL-; ▶		◀; VOL -		V-; ◀		VOL▼; VOL-	
VOL +	VOL▶	FINE +	V+; ▶; VOL+; ◀		▶; VOL +		V+; ▶		VOL▲; VOL+	
CH V; ◀	PR▼	CH-/ ; RED; EYE/*	P-; PR-; CH-; ▼		▼; CH -	◀	P-; P▼		PR▼; Ⓢ; PR-	
CH A; ▶	PR▲	CH+; CH+/*; GREEN	P+; PR+; CH+; ▲		▲; CH +	▶	P+; P▲		PR▲; Ⓢ; PR+	
±; SAT	-/-; -		-/-		-/-		-/-		GAME	
CLEAR; X	POSIT.; UPDATE; Ⓢ	POSIT.; UPDATE; Ⓢ	CANCEL		CANCEL				Ⓢ; CANCEL; LANG.	
◀; Ⓢ	TIME; Ⓢ		SUBCODE		◀	SUBPAGE			Ⓢ; S-CODE	SUB.CODE
▶; i	9/4 PIP; Ⓢ; INDEX				▶	INDEX			Ⓢ; INDEX	INDEX
▶; ?	REVEAL; Ⓢ		REVEAL		▶	REVEAL			Ⓢ; REVEAL	REVEAL
Ⓢ; X	HOLD; STILL; Ⓢ	HOLD; Ⓢ	HOLD		Ⓢ	HOLD			Ⓢ; HOLD	HOLD
Ⓢ; Ⓢ	SIZE; Ⓢ	SIZE; Ⓢ	SIZE		▶	SIZE			Ⓢ; SIZE	STILL
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 03 F к TV устройствам

Кнопки пульта IRC 03 F	Код 131		Код 132		Код 133		Код 134		Код 135	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	📺/📺/📺	S.EFFECT	▶▶; LIST	RADIO	▶▶; LIST		▶▶; INDEX		LANGUAGE	
AUDIO; NICAM	MULTIMEDIA	COLOUR TEMP	LANGUAGE		S.MODE		AUDIO			
VIDEO; SYS	SCREEN SIZE		ZOOM		P.MODE					
📺; ZOOM	TV		ASPECT		ASPECT		ASPECT		ASPECT	
▼; TV	PIP		⏪; HOLD		⏪; HOLD		⏪; FAV			
📺; ↻	STILL		MTS						MTS; HOLD	
📺; LOCK	EDIT		FREEZE							
▲; FAV	📺; POWER		FAV		FAV		FAV		FAV	
📺	AV		📺		📺		📺; POWER		📺	
AV	📺; MUTE		SOURCE		INPUT		SOURCE		📺	
📺	MENU		📺; MUTE		📺		📺; MUTE		📺	
MENU	MENU		MENU		MENU		MENU		MENU; 📺	
EXIT			EXIT		EXIT		EXIT		EXIT	
▲	▲; 📺		▲		▲		▲		▲	
◀	◀		◀		◀		◀		<	
OK	MENU		OK		OK		OK		OK	
▶	▶		▶		▶		▶		>	
▼	▼; 📺		▼		▼		▼		▼	
📺; SETUP	P.MODE		P.MODE		📺		TV/RADIO		P.MODE	
📺; TITLE	S.MODE		S.MODE		📺		TEXT		S.MODE	
📺					📺; TTX		EPG		TTX	
GUIDE	MGDI		EPG		EPG		SLEEP		EPG	
📺	SLEEP		SLEEP		SLEEP		SUBTITLE		SLEEP; INDEX	
📺	📺; SWAP		SUBTITLE		MTS		RED		📺	
RED; ●	RED		RED	●; REC	RED; REC		GREEN	●	RED; REC	
GREEN; ▶▶	GREEN		GREEN; FAV		GREEN; P.MODE		YELLOW; ASPECT		GREEN; P.MODE	
YELLOW; ▶▶	YELLOW		YELLOW; ASPECT		YELLOW; S.MODE		BLUE; ▶▶		YELLOW; S.MODE	
BLUE; ▶▶	BLUE		BLUE; SUBTITLE		BLUE; ASPECT		📺		BLUE; ASPECT	
📺	📺; RECALL		INFO		INFO		📺		INFO; REVEAL	
📺	PREV.PR		📺		📺		📺		📺	
VOL -	VOL -; ▼		VOL -		VOL -		VOL -		VOL -	
VOL +	VOL +; ▲		VOL +		VOL +		VOL +		VOL +	
CH V; ⏪	PR; ▼	PR ▼	CH V	⏪; HOLD	CH V	⏪; HOLD	CH -	⏪; FAV	CH V	
CH ▲; ▶▶	PR+; ▲	PR ▲	CH ▲	▶▶; LIST	CH ▲	▶▶; LIST	CH +	▶▶; INDEX	CH ▲	
📺; SAT			LIST		CH.LIST		-/-		CH.LIST	
CLEAR; X	📺; SOURCE		📺; TTX						LIST	
◀; ●	📺; PIP		◀; LANGUAGE		◀; LANGUAGE		◀; SIZE	SUBPAGE	◀; LIST	
▶; i	📺; PR ▼		▶; INDEX	INDEX	▶; INDEX	INDEX	▶▶	INDEX	▶▶; LANGUAGE	INDEX
▶▶; ?	📺		▶▶; RADIO	REVEAL	▶▶; RADIO	REVEAL	▶▶; SUBPAGE		▶▶; TTX	REVEAL
■; X	📺; POSITION		■; REVEAL	HOLD	■; REVEAL	HOLD		HOLD	MTS; HOLD	
■; ⏪	📺; PR ▲		■; ZOOM		■; ZOOM		▶▶	SIZE	▶▶; LANGUAGE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 03 F к VCR устройствам

Кнопки пульта IRC 03 F	Код 201		Код 202		Код 203		Код 204		Код 205	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	SEARCH ▲		CURSOR ▶		TV LINE		INDEX +			
AUDIO; NICAM	AUTO SEARCH		3S		A.SEL;MEMO;TV LI.		A.SEL			
VIDEO; SYS	TV/LINE		AUX		PAL SECAM		AUX			
📺; ZOOM	INDEX SEARCH				VPS					
▼; TV	SEARCH ▼		CURSOR ◀		TV/CATV		INDEX -			
📺; ↻	CH. PRESET				AUTO SEARCH	PRESET				
📺; LOCK	COUNT RESET				COUNT RESET		CNT RESET			
▲; FAV	COUNT 0 STOP		EJECT		EJECT		EJECT			
📺	POWER		POWER		POWER; M/A		POWER		POWER	
AV	TV/VCR		TV/VCR		TV/VCR; VCR		TV/VCR			
📺	EJECT				AUDIO MUTE					
MENU	MENU		MENU		MENU		MENU	MENU		
EXIT					COUNT 0 STOP		0 STOP			
▲	SHARPNESS +		START +		SHUTTLE +;A.MUTE		+; FIN +			
◀	INDEX -		END-		◀; -		◀			
OK	ENTER; CH. MEM.		OK; CANC		ENTER	OK; OSD SET				
▶	INDEX +		END +		▶; +		▶			
▼	SHARPNESS -		START -		SHUTTLE-M.SEAR.		-; FIN -			
📺; SETUP	OTR; OK				SHOW VIEW;ERASE					
📺; TITLE	VPS; ENCORE				REAL PGM					
📺	PGM SET		PROG		AFT					
GUIDE	AFT RETRACKING				PROG; PGM SET		PROG			
📺	CLOCK SET	T. REC	TIMER		TIMER; T.REC	CLOCK SET	TIMER		TIMER; PROG	
📺	CLOCK/COUNTER				MARK MARQ.					
RED; ●		● REC		● REC; OTR	REPEAT; SYS.SEL.	REC	SHUTTLE/SLOW -	REC/OTR		● REC
GREEN; ▶▶			SPEED		MFT RETRACKING	OTR	SHUTTLE/SLOW +			
YELLOW; ▶▶			HI-REW		INDEX SEARCH		RETRK.			
BLUE; ▶▶	▶▶; SLOW		SLOW; ▶▶		▶▶; SLOW		▶▶; SLOW	▶▶		
📺	DISPLAY ON/OFF				DISPLAY ON/OFF		SHOW VIEW; 2S			
📺	P/C		P/C		ENTER;OS. RECALL		P/C			
VOL -	-; MFT -		VOL -		VOL -	VERT. HOLD-	VOL -			
VOL +	+; MFT +		VOL +		VOL +	VERT. HOLD+	VOL +			
CH V; ⏪	CH/TRKACKING ▼		PR/TRK -		PR/TRK -	INDEX -; ⏪	CH.TRK ▼	◀; DEBUT -	P -	
CH ▲; ▶▶	CH/TRACKING ▲		PR/TRK +		PR/TRK +	INDEX +; ▶▶	CH.TRK ▲	▶; DEBUT +	P +	
📺; SAT	SPEED; R.TRK		SLOW -;SHUTTLE -		SPEED; REALIGN		SPEED			
CLEAR; X	PGM CLEAR		SLOW +;SHUTTLE+		PGM CLEAR					
◀; ●	◀; REW		◀(REW)		◀; REW		◀; REW		◀(REW)	
▶; i	▶; PLAY		▶(PLAY)		▶; PLAY		▶; PLAY		▶(PLAY)	
▶▶; ?	▶▶; FF		▶▶(F.FWD)		▶▶; FF		▶▶; FF		▶▶(F.FWD)	
■; X	■; STOP		■(STOP)		■; STOP		■; STOP		■(STOP)	
■; ⏪	■; P/S;STILL/F.ADV		■(PAUSE)		■; P/S		■; P/S		■(PAUSE)	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 03 F к VCR устройствам

Кнопки пульта IRC 03 F	Код 206		Код 207		Код 208		Код 209		Код 210	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			DSS							
AUDIO; NICAM	A.SEL		AUDIO		3S		AUDIO SELECT			
VIDEO; SYS	PAL/SEC; SYS.SEL									
☐; ZOOM										
▼; TV	TV/VCR		TV/DSS		TV/VCR				TV/CATV	
☐; ↗	▶▶30						COUNT MEMO		COUNT MEMORY	
☐; LOCK	→↻←		STILL				COUNT RESET		COUNT RESET	
▲; FAV	▲; EJECT						▲; EJECT		▲; EJECT	
○	○; POWER		POWER		POWER		POWER		POWER	
AV	AV				INPUT		TV/VCR		TV/VCR	
✳			MUTE				AUDIO MUTE		MUTE	
MENU	MENU		MENU		MENU					
EXIT			EXIT							
▲			▲		START +					
◀	←		◀		END -		-		-	
OK	OK		SELECT				ENTER		ENTER	
▶	→		▶		END +		+		+	
▼			▼		START -					
✳; SETUP							MFT			
♪; TITLE							MARK			
☐	T.R		MINI GUIDE				PGM SET		MFT	
GUIDE	PROG		GUIDE				PGM CLEAR		PROGRAM SET	
☐	☐; ☐; ☐				CLK/CNT		CLOCK SET	T.REC	CLOCK SET	T.REC
☐	00:00		CALENDAR				INDEX		CLOCK/COUNTER	
RED; ●		● REC	VIEWER PROFILE	REC	INDEX -	REC/OTR	REPEAT	REC	OSD SET	REC/OTR
GREEN; ▶▶	SP/LP; SPEED		MANAGER		INDEX +		OSD TV/CATV		OSD RECALL	
YELLOW; ◀			HELP		RETRK.		OSD SET			
BLUE; ▶▶	▶▶		VIEWER		▶▶; SLOW		▶▶; SLOW			
☐	Q.S		DISP/TIME		OSD		DISPLAY ON/OFF		DISPLAY ON/OFF	
☐	A.D		PREV.				OSD RECALL			
VOL -	INDEX -		VOL ▼		◀				TRACKING -	
VOL +	INDEX +		VOL ▲		▶				TRACKING +	
CH V; ◀▶	PR -				CH./TRK. ▼		CHANNEL ▼		CH. DOWN	
CH ▲; ▶▶	PR +				CH./TRK. ▲		CHANNEL ▲		CH. UP	
±; SAT					SPEED		SPEED		SPEED	
CLEAR; X							ERASE		PROGRAM CLEAR	
◀▶; ●	◀▶				◀▶; REW		◀▶; REW		◀▶; REW	
▶; i	▶				▶; PLAY		▶; PLAY		▶/ ; PLAY	
▶▶; ?	▶▶				▶▶; FF		▶▶; FF		▶▶; FF	
■; X	■				■; STOP		■; STOP		■/▲; STOP/EJECT	
; ⬇					; P/S		; P&S		▶/ ; PAUSE/STILL	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 03 F к VCR устройствам

Кнопки пульта IRC 03 F	Код 211		Код 212		Код 213		Код 214	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD								
AUDIO; NICAM								
VIDEO; SYS	PAL/NTSC		PAL/NTSC					
☐; ZOOM								
▼; TV	TV/VCR							
☐; ↗	ENCORE		ENCORE					
☐; LOCK	R.TRK		R.TRK					
▲; FAV	▲ EJECT		▲ EJECT					
○	○		○		POWER		OFF	
AV	INPUT		TV/VCR		TV/VIDEO			
✳								
MENU							MODE	
EXIT	CM SKIP							
▲								
◀								
OK								
▶								
▼								
✳; SETUP							MODE	
♪; TITLE								
☐	RF OUT SYS		RF OUT SYS					
GUIDE	RF OUT CH		RF OUT CH					
☐							TIMER	
☐								
RED; ●	A.REPEAT	● REC	A.REPEAT	● REC		REC		
GREEN; ▶▶								
YELLOW; ◀								
BLUE; ▶▶	SLOW		SLOW					
☐	DISPLAY				DISP/TIME		ON/SPEED	
☐							SWING	
VOL -	VISS -		-					
VOL +	VISS +		+					
CH V; ◀▶	CH/TRK -		TRK -					
CH ▲; ▶▶	CH/TRK +		TRK +					
±; SAT	SPEED		SPEED					
CLEAR; X								
◀▶; ●	◀▶		◀▶		REW			
▶; i	▶		▶		PLAY			
▶▶; ?	▶▶		▶▶		FF			
■; X	■		■		STOP			
; ⬇					STILL			
1, 2, ... 9, 0					1, 2, ... 9, 0			

Функции кнопок пульта IRC 03 F к AUX устройствам

Кнопки пульта IRC 03 F	Код 301		Код 302		Код 303		Код 304		Код 305	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	DVD		#		TV/DVD		DVD ; TV SYS		AUDIO	L/R
AUDIO ; NICAM	AUDIO		AUDIO	3D	AUDIO		AUDIO ; PTY SEAR.	SURR.MODE		
VIDEO ; SYS	VCR		V-MODE	SYSTEM	PLAY MODE		VIDEO ; VIDEO 1	DIMMER	SYSTEM	
☐ ; ZOOM	ZOOM		ZOOM		q		ZOOM	D-RANGE	ZOOM	
▼ ; TV	TV VIEW		b		TV/DVD		TV/AUX ; TV			
☐ ; ↗	SEARCH	SYSTEM ; P-SCAN	SEARCH		T/C		GOTO ; A.MEM. ; SE-H	MEMORY	DIGEST	
☐ ; LOCK	ANGLE		h		☐		ANGLE	DIGEST ; TUN.PRES.		
▲ ; FAV	▲ ; OPEN/CLOSE		▲		OUTPUT		▲ ; OPEN/CLOSE		OPEN/CLOSE	
○	○ ; POWER		○		○ ; STANDBY		POWER ; ○/I		POWER	
AV	TV/VCR	OUTPUT ; INPUT	ANGLE		TV AV		VIDEO 2	TAPE/MD	ANGLE	
✳			MUTE		TV MUTE		MUTE		MUTE	
MENU	MENU		MENU		MENU DISC		MENU ; RETURN		FUNCTION	
EXIT	3D ; EXIT		RETURN		RETURN		MENU ; RETURN		RESUME	
▲	▲ ; PR +		▲		▲		▲		▲	
◀	◀		◀		◀		◀		◀	
OK	ENTER ; OK		PLAY		OK		ENTER		SELECT	
▶	▶		▶		▶		▶		▶	
▼	▼ ; PR -		▼		▼		▼		▼	
✳ ; SETUP	SETUP		SETUP		MENU SYSTEM		SET UP	P. MODE	SETUP	
♪ ; TITLE	TITLE/PBC		TITLE/PBC		SELECT		TITLE ; PBC	TUNER	TITLE	
☐	ANGLE/DIG. SPEED		MARK		EDIT		PBC ; RT ; EQ	GAME	PBC	
GUIDE	PROGRAM ; TIMER		PROGRAM				ANGLE ; DISPLAY		PROGRAM	
☐	CLK/CNT				TIMER		SLEEP	DELAY TIME	RANDOM	
☐	SUBTITLE		SUBTITLE		SUBTITLE		SUB TITLE ; MPX		SUBTITLE	
RED ; ●	REPEAT	● REC	REPEAT		REC MODE	● ; REC/OTR	REPEAT ; PTY	TEST TONE ; PROG.	REPEAT	
GREEN ; ►	A-B	REPLAY ; COPY	►				SPK.SETUP	MPX ; PTY SEARCH	STEP	
YELLOW ; ◀	◀ ; SLOW -	MARK	A-B		◀		A-B	tone	REP A-B	
BLUE ; ►	► ; SLOW +		SLOW		►		SLOW	P/NT	SLOW	
☐	DISPLAY		DISPLAY				DISPLAY ; FM MODE		OSD	
☐	LAST CH		INTRO				RANDOM ; RDS		RETURN	
VOL -			VOL -		PR -		VOL ▼ ; M. VOL ▼		-	
VOL +			VOL +		PR +		VOL ▲ ; M. VOL. ▲		+	
CH V ; ◀	◀◀ PREV		◀◀		◀◀ ; ◀		◀◀		SKIP ◀◀	
CH A ; ►	►► NEXT		►►		►► ; ►►		►►		SKIP ►►	
± ; SAT	CM-SKIP		10+				CH-LEVEL		10+	GOTO
CLEAR ; X	CLEAR/3D ; CLEAR		CHANNEL		CLEAR		CLEAR		CLEAR	
◀ ; ○	◀◀ ; REW		◀◀		◀◀ ; ◀◀		◀◀		SCAN ◀◀	
▶ ; i	▶▶ (PLAY/PAUSE)		PLAY		▶▶ ; ▶▶ (PLAY/PAUSE)		▶▶ ; PLAY		▶▶ ; PLAY	
▶▶ ; ?	▶▶ ; FF		▶▶		▶▶ ; ▶▶		▶▶		SCAN ▶▶	
■ ; X	■ ; STOP		■		■ ; STOP		■ ; STOP		■ ; STOP	
■ ; ⏸	PAUSE		■		▶▶ ; PLAY/PAUSE		■ ; PAUSE/STEP		■ ; PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0/10		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 03 F к AUX устройствам

Кнопки пульта IRC 03 F	Код 306		Код 307		Код 308		Код 309		Код 310	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD					3D ; USB/DVD				DVD TUNER	
AUDIO ; NICAM	AUDIO		AUDIO		R/L		AUDIO		R/L	
VIDEO ; SYS	MARKER				P/N		N/P		P/N	
☐ ; ZOOM	ZOOM		ZOOM		ZOOM		ZOOM		ZOOM	
▼ ; TV					LANGUAGE				DPL II MODE	
☐ ; ↗	3D SOUND		SEARCH		SEARCH ; GOTO		R/L		P/I SCAN	A. MEM. ; SEARCH
☐ ; LOCK	■ ; STEP		L/R		P/I/SCAN		P-SCAN		LANGUAGE	
▲ ; FAV	▲ ; OPEN/CLOSE		▲ ; OPEN/CLOSE		▲ ; OPEN/CLOSE		OPEN/CLOSE		▲ ; OPEN/CLOSE	
○	○		POWER		○ ; POWER		○/I ; STANDBY/ON		○ ; POWER	
AV	ANGLE		ANGLE		ANGLE		ANGLE		ANGLE	
✳			MUTE		MIC ON/OFF ; MUTE		MUTE		MUTE	
MENU	MENU		MENU		MENU		MENU		MENU	
EXIT			RETURN		RETURN		RETURN		RETURN	
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀		◀		◀ ; TUNING -	
OK	SEL		SELECT		ENTER		ENTER		ENTER	
▶	▶		▶		▶		▶		▶ ; TUNING +	
▼	▼		▼		▼		▼		▼	
✳ ; SETUP	SETUP		SETUP		SETUP		SETUP		SETUP	
♪ ; TITLE	TITLE		3D		TITLE		TITLE		TITLE	
☐	PBC		PROGRAM		PBC		PBC		PBC	
GUIDE	PROGRAM		DIGEST ; BALANCE		PROG		PROGRAM		PROG	
☐	DIGEST						TIME			
☐	SUBTITLE		SUBTITLE		SUBTITLE		SUBTITLE		RDS ; SUBTITLE	
RED ; ●	REPEAT		REPEAT		REPEAT		REPEAT		REPEAT	
GREEN ; ►	■ ; STEP		► ; STEP		STEP		STEP		STEP	
YELLOW ; ◀	A-B		A-B		A-B		A-B		FM MODE ; A-B	
BLUE ; ►			SLOW		SLOW		SLOW		SLOW	
☐	DISPLAY		OSD		DISPLAY		DISPLAY		DISPLAY	
☐	SHUFFLE		RESUME							
VOL -	VOLUME -		VOLUME -		VOLUME -		VOLUME -		- ; VOLUME -	
VOL +	VOLUME +		VOLUME +		VOLUME +		VOLUME +		+ ; VOLUME +	
CH V ; ◀	◀◀ ; PREV		◀◀		◀◀ ; PREV		◀◀ ; PREV		◀◀ ; PREV	
CH A ; ►	►► ; NEXT		►►		►► ; NEXT		►► ; NEXT		►► ; NEXT	
± ; SAT			10+		10+		10+		+10	
CLEAR ; X	CLEAR						EQ/CLEAR			
◀ ; ○	◀◀ ; FR/SR		◀◀		◀◀ ; REV		◀◀ ; REV		◀◀ ; REV	
▶ ; i	▶▶ ; PLAY/PAUSE		▶▶		▶▶ ; PLAY/PAUSE		▶▶ ; PLAY/PAUSE		▶▶ ; PLAY/PAUSE	
▶▶ ; ?	▶▶ ; FF/FS		▶▶		▶▶ ; FWD		▶▶ ; FWD		▶▶ ; FWD	
■ ; X	■ ; STOP/RETURN		STOP		■ ; STOP		■ ; STOP		■ ; STOP/BAND	
■ ; ⏸	▶▶ ; PLAY/PAUSE		■ ; PAUSE		▶▶ ; PLAY/PAUSE		▶▶ ; PLAY/PAUSE		▶▶ ; PLAY/PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 03 F к AUX устройствам

Кнопки пульта IRC 03 F	Код 311		Код 312		Код 313		Код 314		Код 315	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	DVD ; TV SYS	▲	▶▶		CD					
AUDIO ; NICAM	AUDIO		BAND ; MO/ST		BAND				EQ ; DSP ; TA/TP	
VIDEO ; SYS	TAPE 1/2		MO/ST:T.1/2:MODE		TAPE				AMS ; MP3/AMS	
☐ ; ZOOM	ZOOM		REPEAT;RDS MODE							
▼ ; TV	TUNER	▼	◀◀		TUNER					
☐ ; ↻	UBS	AUTO MEMORY	ID3		AUTO/MANUAL				SCAN; SCN;	
☐ ; LOCK	ANGLE ; DIGEST		GEQ						LOC ; LOCAL ; PTY	
▲ ; FAV	▲ ; OPEN/CLOSE		FOLDER				▲ ; OPEN/CLOSE		BAND; LOUD;	
○	○/I ; STAND BY/ON		○/I ; POWER		POWER		○		POWER ; PWR	
AV	AUX				AUX		⊞		MOD ; MODE	
⌘	MUTE		MUTE		MUTE				MUTE	
MENU	MENU ; RETURN ; ▼		FUNCTION				MENU			
EXIT	RETURN		RETURN							
▲	▲		VOL ▲		PRES./CD▲;MEM.▲		PR ▲		▶▶ ; TUN ▲ ; ▶▶	
◀	◀		PRESET ◀;RETURN		TUNING ▼					
OK	ENTER		; SET	ENTER	ENTER				SEL ; LOU/ENT	
▶	▶		PRESET ▶; ENTER		TUNING ▲					
▼	▼		VOL ▼		PRES./CD▼;MEM.▼		PR ▼		◀◀ ; TUN ▼ ; ◀◀	
* ; SETUP	SETUP		INTRO		MODE					
♪ ; TITLE	TITLE ; PBC		JBS; SUPER WOOF.		INTRO				ST ; MO	
☐	PROGRESSIVE		PGM ; PROGRAM		PROGRAM				▶▶ ; M1;1; PAUSE	
GUIDE	D.CHANGE		CLOCK		CLOCK ; DISPLAY				INT ; M2 ; CD SCAN	
⊞	SLEEP		SLEEP		SLEEP				RPT ; M3 ; REPEAT	
☐	SUBTITLE ; MPX		TIMER		TIMER				RDM ; M4; SHUFFLE	
RED ; ●	REPEAT;RDS MODE	REC ; ▲	DISC DIR. PLAY 1		REPEAT				DIS/REC	
GREEN ; ▶▶	PAUSE ; STEP	EQ	DISC DIR. PLAY 2							
YELLOW ; ◀◀	A-B ; PTY SEARCH	TEMPO	DISC DIR. PLAY 3							
BLUE ; ▶▶	SLOW	ECHO	▶ ; PLAY							
☐	DISP ; FM MODE				DISPLAY				DISP	
☐			RANDOM; PTY SEA.		RANDOM;SHUFFLE					
VOL -	VOL -		VOL ▼		VOLUME ▼				VOL - ; -	
VOL +	VOL +		VOL ▲		VOLUME ▲				VOL + ; +	
CH V ; ◀◀	◀◀ ; PREV		◀◀ ; TUNE ◀◀		◀◀◀◀		◀◀ ; PREV		◻ - ; M5 ; DN	
CH A ; ▶▶	▶▶ ; NEXT		▶▶ ; TUNE ▶▶		▶▶▶▶		▶▶ ; NEXT		◻ + ; M6 ; UP	
+ ; SAT	GOTO ; DEVICE				S/C					
CLEAR ; X	KEY CON		CLEAR		SPACE					
◀◀ ; ●	FR		◀◀ ; TUNE ◀◀		◀◀◀◀		◀◀ ; F.R/SLOW		◀◀ ; TUN ▼ ; ◀◀	
▶ ; i	▶ ; PLAY		DISC DIR. PLAY 1	▶ ; PLAY	PLAY ▶/		▶ ; PLAY		; PAUSE	
▶▶ ; ?	FF		▶▶ ; TUNE ▶▶		▶▶▶▶		▶▶ ; F.F/SLOW		▶▶ ; TUN ▲ ; ▶▶	
■ ; X	■ ; STOP		■ ; CLEAR		■ STOP		■ ; STOP			
; ⬇	PAUSE ; STEP		; SET		PLAY ▶/		; PAUSE		; PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 03 F к SAT устройствам

Кнопки пульта IRC 03 F	Код 401	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM		
VIDEO ; SYS		
☐ ; ZOOM		
▼ ; TV		
☐ ; ↻		
☐ ; LOCK		
▲ ; FAV		
○	○	
AV		
⌘		
MENU	MENU	
EXIT		
▲	PR ▲	
◀		
OK		
▶		
▼	PR ▼	
* ; SETUP		
♪ ; TITLE		
☐		
GUIDE		
⊞		
☐		
RED ; ●	RED	
GREEN ; ▶▶	GREEN	
YELLOW ; ◀◀	YELLOW	
BLUE ; ▶▶	BLUE	
☐		
☐		
VOL -		
VOL +		
CH V ; ◀◀	PR ▼	
CH A ; ▶▶	PR ▲	
+ ; SAT		
CLEAR ; X		
◀◀ ; ●		
▶ ; i		
▶▶ ; ?		
■ ; X		
; ⬇		
1, 2, ... 9, 0	1, 2, ... 9, 0	

Функции кнопок пульта IRC 03 F к TV устройствам

Кнопки пульта IRC 03 F	Коды 501-771	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM		
VIDEO ; SYS		
☐ ; ZOOM		
▼ ; TV		
⏪ ; ↻		
☒ ; LOCK		
▲ ; FAV		
⏻	POWER ; ⏻	
AV	TV/VIDEO ; TV/AV	
✳	MUTE ; 🔇	
MENU		
EXIT		
▲		
◀		
OK		
▶		
▼		
✳ ; SETUP		
🎵 ; TITLE		
☐		
GUIDE		
⏻		
☐		
RED ; ●		
GREEN ; ▢		
YELLOW ; ◀		
BLUE ; ▶		
☐		
☐		
VOL -	VOLUME ▼ ; 🔊-	
VOL +	VOLUME ▲ ; 🔊+	
CH V ; ⏪	CHANNEL ▼ ; P -	
CH ▲ ; ⏩	CHANNEL ▲ ; P +	
⊕ ; SAT		
CLEAR ; X		
⏪ ; ●		
▶ ; i		
▶ ; ?		
■ ; ✕		
⏮ ; ⏭		
1, 2, ... 9, 0	1, 2, ... 9, 0	

Для просмотра функций кнопок баз кодов 8 и 9 (SAT, STB, DVB устройства) перейдите по следующей ссылке <http://www.pult-irc.ru/files/manual/SatCodesForIrcF.pdf>