

# Приложение IRC 06 F (версия 20.07.26 11:27)

Модели оригинальных пультов и соответствующие им коды пульта IRC приведены в разделе "Коды пульта IRC 06 F".

Функции всех кнопок для каждого кода пульта IRC можно узнать из таблиц данного приложения.

Пульт IRC может иметь дополнительные функции (если указаны в столбце "Доп. функция"). Доступ к ним осуществляется при помощи кнопки SHIFT (см. в инструкции рис.1, п.16). Для доступа к дополнительным функциям нажмите кнопку SHIFT и, удерживая её нажатой, нажмите ту кнопку, дополнительная функция которой Вам необходима.

## После первой установки батареек

Кнопка устройства пульта IRC	Код пульта IRC	Кнопка устройства пульта IRC	Код пульта IRC
TV	101	SHIFT + TV*	105
VCR	102	SHIFT + VCR*	106
AUX	103	SHIFT + AUX*	107
SAT	104	SHIFT + SAT*	201

\* Нажмите кнопку SHIFT и, удерживая её нажатой, нажмите и отпустите одну из кнопок пульта: TV, VCR, AUX или SAT.

## Доступные коды пульта IRC 06 F

Номер базы кодов (диапазон кодов)	Устройство базы кодов	Доступные коды пульта IRC
1 (101-199)	TV	101 - 119
2 (201-299)	VCR	201 - 204
3 (301-399)	AUX	301 - 304
4 (401-499)	SAT	401
5 (501-599)	TV	501 - 599
6 (601-699)	TV	601 - 699
7 (701-799)	TV	701 - 799
8 (801-899)	SAT	801 - 899
9 (901-999)	SAT	901 - 999

## Коды пульта IRC 06 F

### Коды к устройствам марки GRUNDIG

Модель*	Устр-во	Код
16-2830T	TV	119
DAVIO 15 - 5710	TV	114
FHS081	TV	102
GVP500	VCR	203
GVP600	VCR	203
RC 8-11	AUX, CD, DVD	302
RC200	TV	113
RC202	TV	101
RC212	TV	101
RC2134602 (TV)	TV	117
RC300	TV	101
RC3304807	TV	118
RC5910	TV	103
RC611	TV	104
RC623	TV	101
RC-63301A	TV	102
RCD 6800 DEC-A	AUX, CD, DVD	301
RC-URC20 (CD)	AUX, CD, DVD	303
RC-URC20 (SAT)	SAT, STB, DVB	401
RC-URC20 (TAPE)	VCR	204
RC-URC20 (TUNER)	AUX, CD, DVD	304
RC-URC20 (TV)	TV	101
RC-URC20 (VCR)	VCR	201
RC-YC1	TV	112
RC-YE1	TV	116
SOME MODELS	VCR	202
TC610	TV	104
TC611	TV	108
TC630	TV	108
TC650	TV	108
TC660	TV	104
TELEVISION-I	TV	102
TELEVISION-II	TV	102
TP 110 C (TV)	TV	101
TP 125	TV	109
TP 140 C (TV)	TV	115
TP 15	TV	101
TP 160 C (TV)	TV	115
TP 200	TV	105
TP 300	TV	105
TP 310	TV	105
TP 350	TV	105
TP 360	TV	105
TP 380	TV	105
TP 390	TV	104

Модель	Устр-во	Код
TP 400	TV	105
TP 500 TT	TV	105
TP 590	TV	108
TP 600	TV	104
TP 600TT	TV	108
TP 604B	TV	105
TP 605	TV	105
TP 610	TV	104
TP 611	TV	104
TP 621	TV	106
TP 622	TV	107
TP 623	TV	101
TP 630	TV	108
TP 630TT	TV	104
TP 650	TV	108
TP 650TT	TV	104
TP 660	TV	104
TP 661	TV	107
TP 663	TV	101
TP 700	TV	101
TP 710	TV	101
TP 711	TV	101
TP 715	TV	101
TP 720	TV	101
TP 741 C	TV	111
TP 750 C (TV)	TV	101
TP 750 C (VCR)	VCR	201
TP 750 CB (TV)	TV	101
TP 750 CB (VCR)	VCR	201
TP 751 C (TV)	TV	101
TP 751 C (VCR)	VCR	201
TP 760	TV	101
TP 765 S (TV)	SAT, STB, DVB	401
TP 770	TV	101
TP 800	TV	101
TP 81 D (TV)	TV	115
TP 810SAT	TV	105
TP 85	TV	109
TP 900	TV	101
TP 911	TV	107
TP6187R	TV	118
TP6187R-3D	TV	118
TT630GB	TV	108
TVP1	TV/VCR	110
UFD100	TV	101

Модель	Устр-во	Код
YD1187R	TV	116

\* По каталогу «IRC»

**Коды к TV устройствам различных марок**

Марка	Код
AEG	544
AIWA	502, 503, 523, 528, 579, 634, 678, 706, 710, 712, 716
AKAI	501, 503, 512, 516, 520, 522, 524, 525, 537, 538, 540, 545, 546, 547, 550, 571, 572, 582, 583, 584, 585, 596, 598, 608, 613, 626, 652, 673, 691, 704, 708, 711, 722, 731, 769
AKIRA	511, 514, 516, 522, 524, 525, 537, 538, 541, 545, 547, 556, 577, 586, 594, 597, 598, 601, 623, 626, 629, 631, 649, 666, 680, 689, 690, 693, 699, 717, 739, 796, 797, 798, 799
AMCOL	501, 525, 545, 747
ANITECH	501, 525, 616, 726
ATLANTA	501, 751
AVEST	537, 538, 539, 766
BANG & OLUFSEN	728, 737
BBK	522, 551, 594, 597, 684, 701, 788, 792, 793
BEKO	525, 530, 535, 559, 723, 742
BIGSTON	501, 503
BLAUPUNKT	512
BORK	525, 547, 646, 766
BRAND	711
BROKSONIC	501
CAMERON	538, 550, 567, 675, 697, 702, 792, 794
CASIO	529, 705, 706
CASKA	761
CHANGHONG	516, 596, 642
CLATRONIC	501, 545, 559, 571, 742
CONTEC	501, 603, 604, 613
CORTLAND	644
CROWN	501, 503, 511, 524, 525, 530, 571
DAEWOO	501, 508, 518, 520, 525, 526, 536, 538, 539, 546, 565, 571, 576, 598, 613, 685, 687, 692
DARTLAND	501
DAYTRON	501
DEXP	516, 579, 596, 684, 702
DIGITAL	547
DISTAR	562, 616
DNS	596, 702, 708
DOFFLER	684, 708
DUAL	746
ELEKTA	501, 503, 520, 525, 527, 615
ELEKTRONIKA	583
ELENBERG	538, 545, 550, 565, 567, 579, 581, 644, 655, 676, 683, 717, 785
EPLUTUS	537, 644, 677, 682, 697, 724
ERC	537, 631, 764
ERISSON	511, 514, 516, 525, 526, 537, 538, 541, 550, 556, 561, 568, 586, 596, 599, 623, 626, 629, 631, 711, 712, 714, 739, 747, 779, 786, 795
EVGO	538, 540, 630
FINLUX	501, 511, 583, 589, 608, 732, 758, 774
FUJITSU	544, 573
FUNAI	501, 502, 503, 504, 505, 525, 537, 538, 581, 603, 764
FUSION	596, 642, 699, 705, 706, 781
GBS	501, 520, 525, 571, 583
GENERAL	537, 556
GOLD STAR - LG	501, 512, 518, 525, 527, 559, 570, 583, 584, 589, 609, 613, 642, 706, 712, 742, 750, 765
GRUNDIG	501, 512, 525, 606, 662, 718, 719, 733
HAIER	518, 526, 561, 574, 657, 667, 669, 707, 778
HAPPY	501
HARPER	706, 712
HCM	501, 503, 525
HELIX	701, 702, 708
HIL	503
HISENSE	525
HITACHI	501, 515, 518, 522, 525, 537, 544, 548, 554, 578, 584, 587, 588, 604, 613, 640, 729, 749, 775, 783
HORIZONT	525, 540, 545, 550, 559, 583, 664, 672, 771
HPC	546
HYUNDAI	516, 518, 522, 525, 526, 537, 538, 540, 541, 546, 547, 550, 556, 580, 596, 597, 599, 626, 642, 648, 650, 655, 705, 711, 712, 714, 717, 760
INNO-HIT	501, 525, 571
IRBIS	596, 714
IVA (MBA)	537, 561, 637
IZUMI	516, 537, 596, 663, 691, 695, 703, 705, 711, 792
JINLIPIU	537, 637, 766
JVC	513, 515, 593, 604, 727
KAMACROWN	571
KANSAI	501, 525
KENSTAR	516
KITT	503, 613, 616, 726
KNEISSEL	753
KONKA	537, 538, 560, 561, 581, 616, 626, 717
KRONMARK	596
LOEWE	542, 709, 744
MEDION	525
METZ	745
MITSUBISHI	501, 520, 522, 525, 604, 611, 722, 728, 744
MIYOTA	537, 644, 656
MTC	501, 583
MULTITECH	501, 525
MYSTERY	516, 537, 597, 642, 650, 653, 701, 702, 708, 773, 780, 789
NAD	518, 525
NASH	537
NEC	501, 517, 520, 526, 552, 604, 625, 722
NESCO	501, 525
NESONS	708
NOKIA	519, 584, 610, 614, 616, 740, 746, 767
NOVA	501, 616, 638
NOVEX	516, 546, 599
NTT	759
OMEGA	501, 571
ONIDA	513
ONIKS	516, 525, 537, 545, 546, 547, 680
ONWA	524, 525
OPERA	644, 666, 682
ORBITA	635
ORION	501, 503, 506, 507, 509, 516, 525, 528, 537, 591, 603, 617, 619, 627, 641, 643, 664, 715, 720, 722, 729, 746

**Коды к TV устройствам различных марок**

Марка	Код
ORSON	526, 537
PANASONIC	512, 531, 532, 752
PHANTOM	644
PHILIPS	501, 511, 524, 525, 540, 549, 628, 639, 707, 748
PHOENIX	613
PHOENIX GOLD	708
PIONEER	548, 555, 566, 575, 647, 666
PIXELVIEW	525
PLANTRON	735
POLAR	525, 526, 537, 538, 540, 543, 546, 547, 581, 596, 599, 663, 664, 683, 703, 711, 717
POLAROID	525
PREMIERA	773
PRESTIGIO	564, 656
PRIMA	522, 547
PROLOGY	653, 655, 777, 784
RADUGA	525, 545, 569, 583, 743
RAINFORD	525, 537, 544, 545
RECOR	511, 525
REKORD	520, 525, 526, 537, 538, 539, 545, 547, 725, 736, 743, 747
RFT	535, 618, 728
ROADSTAR	501, 508, 525, 571
ROLSEN	503, 516, 525, 537, 538, 540, 543, 546, 564, 576, 592, 594, 596, 649, 656, 669, 684, 714, 768, 770
ROVERSCAN	662, 770
ROYAL	501, 503, 525, 616
RUBIN	504, 516, 525, 537, 546, 583, 619, 665, 714, 776
SABA	509, 510, 521, 602, 756
SALORA	584
SAMSUNG	501, 525, 526, 529, 563, 580, 595, 596, 608, 612, 613, 622, 641, 645, 688, 723, 741
SANSUI	524, 525, 538, 556, 695
SANYO	501, 519, 522, 525, 530, 540, 544, 550, 558, 604, 608, 610, 618, 621, 696, 722, 730, 734, 738
SATURN	702, 708
SCARLETT	541, 545
SCHNEIDER	525, 540, 571, 771
SELECO	736, 763
SETRO	520
SHARP	526, 544, 548, 604, 707, 721
SHERION	616
SHIVAKI	501, 503, 508, 516, 518, 520, 525, 526, 527, 536, 538, 539, 540, 545, 546, 547, 550, 556, 580, 583, 585, 596, 599, 609, 619, 630, 632, 635, 636, 643, 644, 664, 681, 694, 708, 743, 791
SIEMENS	512, 525, 660, 726, 734
SIESTA	501, 537, 637
SILELIS	613
SILVER	633
SITRONICS	503, 516, 525, 537, 538, 540, 543, 545, 594, 626, 629, 661, 671, 672, 674, 679, 680, 686, 766
SOKOL	516, 525, 547, 635
SONY	533, 604, 659, 722
SPEKTR	525, 538, 668
START	525, 537, 545, 546, 547
STASSFURT	535, 618
STINOL	525
SUPER	537, 561, 644, 653, 654, 655, 666, 677, 682, 724, 754, 772, 780
SUPER GENERAL	537
SUPRA	501, 508, 516, 518, 520, 522, 525, 527, 529, 536, 537, 541, 563, 579, 580, 596, 597, 612, 642, 643, 687, 690, 705, 706, 712, 713, 790
SUZUKI	516, 556
SVEN	574
TCL	521, 538, 540, 642
TEAC	525
TECHNICS	531, 537, 538
TECHNO	501, 525, 538, 544, 546, 556, 568, 579, 596, 599, 644, 664, 703, 791
TECKTON	522, 582, 601, 669, 670
TELEFUNKEN	510, 521, 561, 590, 602, 605, 642, 708, 712, 714, 756, 757
TELEVISION	501, 525, 616
THOMSON	509, 510, 521, 550, 579, 602, 624, 642, 702, 756
TOSHIBA	516, 544, 553, 604, 651, 744
TRONY	516, 525, 537, 538, 550, 574, 657
TVT	511, 525, 530, 535, 538, 583, 586, 620, 630, 723, 742
UNITED	525
VARTA	642
VESTEL	525, 544, 556, 583, 619
VIEWSONIC	557, 698
VITA	547
VITEK	537, 650
VITYAS	525, 708
VOLNA (ВОЛНА)	635
VR	516, 537, 565, 598, 702, 714, 786
WALTHAM	503, 509, 511, 583, 584, 607, 613, 729, 762
XORO	522, 526, 545, 781, 782, 787
XPX	663
НЕИЗВЕСТНАЯ МАРКА	525, 546, 574, 596, 648, 656, 666, 711, 755

**Коды к SAT устройствам различных марок**

Марка	Код
AIRTONE	968
ALFA GOLD	828
AMINO (СТРИМ)	829, 902
ARION	835
ARRIS	883, 963, 974
ASTON	811
BBK	931
BIG STAR	965
BIGSAT	839, 840, 903, 936
CADENA	958, 962
CONTINENT	886, 975
COSHIP	855
DAEWOO	872
D-COLOR	946, 961
DELTA SYSTEMS	985
DIGIFORS	946
DIVISAT	957, 958
D-LINK	923
DNS	950, 968
DR.HD	983
DRE	804, 888
DREAM	819
DUNE	927, 934
ECHOSPACE	862
ECHOSTAR	808, 809, 822
ELTEX	987
EPLUTUS	961
EUROSKY	840, 981
EUROSTAR	863
EUSTON	825
EVO	965
GALAXY INNOVATIONS (GI)	878, 881, 908, 911, 912, 917, 924
GENERAL SATELLITE	804, 868, 888, 907, 933, 954
GLOBALTEQ	833
GLOBO	909, 915, 925, 935, 945, 956, 971, 973, 995, 999
GOLD STAR - LG	871
GOLDEN INTERSTAR	821, 841, 879, 918
GOLDEN MEDIA	847, 912
GOLDMASTER	911
HD BOX	847, 911
HITACHI	824, 832
HIVION	929
HOME	968
HOMECAST (ВОЛЯ)	820, 831, 836
HUAVEE	946
HUMAX	803, 804, 823, 848, 860, 861, 905, 949
HYUNDAI	968
ID DIGITAL	804
INTEK	984
INTERCROSS	988
INTRO	978
KAON	820, 949
KARTINA TV	934
KOSMOS	855, 856
LANS	970
LOCUS	946
LUMAX	852, 873, 907, 913, 965, 994
MAG	988
MEDIA COM	825
MOTOROLA	883, 884, 901, 974
MYSTERY	910, 997
NDS	814
NEXT	864
NOKIA	813
NOT	941
ONLIME	905
OPENBOX	827, 835, 869, 870, 911, 990, 991
OPENTECH	972
OPENTEL	865
OPTICUM	971
ORBITA	946, 995
ORIEL	887, 926, 941, 948, 955, 986
PACE	801, 932, 953
PATIX DIGITAL	946, 967, 992
PAUXIS	842, 859
PERFEO	960, 981
PHILIPS	857, 899
PIONEER	851
POLAR	858
REFLECT	959
REXANT	977
RIKOR	916, 947
ROLSEN	930, 941, 942, 961
SAGEMCOM	906
SAMSUNG	803, 810, 812, 854
SEG	818
SELENGA	946
SEZAM	882
SKY VISION	952, 966, 977, 982
SKYMASTER	830
SKYWAY	911
SKYWORTH	989
STAR	833
STAR TRACK	826, 835, 943
STARNET	885
STRONG	805, 806, 815, 816, 817, 828, 830, 914
SUNNIWELL	875
SUPERBOX	903

**Коды к SAT устройствам различных марок**

Марка	Код
SUPERMAX	821, 866, 880, 924
SUPRA	950, 960, 962
TECHNOSAT	852, 853
TEL-ANT	960
TELEFUNKEN	961, 968
TESLER	926
TOP BOX	965
TOPFIELD	837, 838, 877, 891
TOSHIBA	876
TV STAR	967
TVJET	946, 976
VESTEL	820, 824
VU+	919, 920, 921, 922
WORLD VISION	821, 928, 951, 952, 961, 968
XSAT	801, 807
XSAT (НТВ+)	801, 802, 807, 906, 972, 984, 998
YUXING	904
ZYXEL	874
АРБАКОМ	967
БИЛАИН	883, 884, 901, 923
ВОЛГАТЕЛЕКОМ	842, 843, 844, 845, 846, 847, 849, 850, 858, 867
ДОМ.RU	820, 905
ДОМОЛИНК	874, 904
МТС	829, 855, 902, 964, 974, 979, 980, 989, 993
НЕИЗВЕСТНАЯ МАРКА	834, 835, 842, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 903, 904, 937, 938, 939, 940, 944, 945, 969, 971, 978, 996
РОСТЕЛЕКОМ	874, 904, 923, 963, 988, 993
СИГНАЛ	867, 968
ТВОЁ ТВ	820
ТЕЛЕКАРТА	867, 909, 973
ТЕЛЕЦИФРА	968

Функции кнопок пульта IRC 06 F к TV устройствам

Кнопки пульта IRC 06 F	Код 101		Код 102		Код 103		Код 104		Код 105	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	⊕ +		DBB	HUE +	DNR; PWR PIX	+; [ ]			BT/TV	
AUDIO; NICAM	AUX; Z		I-II; Ⓞ; M; STEREO		Ⓞ; M; [ ]	I-II; SAP; [ ]; S/M/D	Ⓞ; [ ]		I-II; SAP; [ ]; S/M/D	
VIDEO; SYS	Ⓞ; AUX		PAL/SECAM; NIC.		[ ]	[ ]			MODE	
[ ]; ZOOM	16:9; TV-G; [ ]	[ ]	[ ]		[ ]; 16:9	[ ]; [ ]			PAGE	
▼; TV	⊖ -		TV; [ ]	HUE -	[ ]	-; Y	[ ]		TT/TV	
[ ]; ↗	PIP		▶; AST; SEAR.; Q.V.		[ ]; [ ]	▶; INSTALL; ▶	20; #; →; M+1	+1 ↗	1/2 PAGE	
[ ]; LOCK	↔		→; ←; P.P.; OK		→; ←; P.P.; [ ]	[ ]; [ ]	→; ←		→; ←	
▲; FAV			MEMO		Ⓞ	[ ]			TT RESET; NORM	
⊖	⊖		⊖; OFF; STAND BY		⊖; POWER	⊖			POWER; ⊖	
AV	AV		AV; ↗; VIDEO	[ ]; CLEAR	[ ]; [ ]; EXT.; AV	[ ]			AV	
[ ]	[ ]		[ ]; MUTE; [ ]		[ ]	[ ]			[ ]	
MENU	MENU; i		MENU		MENU; [ ]	FEATURE			[ ]	
EXIT			Arret		OFF; EXIT; OUT	WHITE; E; i			[ ]	
▲	⊕ +		⊕ +; ▲	⊕ +	MENU +; ▲	⊕ +		⊕ +	⊕ +	
◀	⊖ -; F		FINE-; FT; TUNE◀	⊖ -	◀	⊖ -		⊖ -	⊖ -	
OK	OK; E		MENU; F; PIC; SEL		ENTER; OK	SEL			OK	
▶	⊕ +		FINE+; FT+; TUNE▶	⊕ +	▶	⊕ +		⊕ +	⊕ +	
▼	⊖ -		⊖ -; ▼	⊖ -	MENU -; ▼	⊖ -		⊖ -	⊖ -	
[ ]; SETUP	[ ]		SMART CONT. PICT		SMART Picture [ ]	PICTURE; [ ]			[ ]	
[ ]; TITLE	[ ]		SMART CO. SOUND		SMART Sound [ ]	SOUND; [ ]			[ ]	
[ ]	[ ]; TXT; TEXT		[ ]; TTR; TTX	[ ]; MIX; TMM	[ ]; [ ]	[ ]			[ ]	
GUIDE			SYS; 13-24		[ ]	LIST			[ ]	
⊖	⊖		TIMER; SLEEP; [ ]		SLEEP; [ ]	⊖			TIME	
[ ]	[ ]		[ ]; SPAT; [ ]		[ ]	[ ]			[ ]	
RED; ●	RED; ●		RED; [ ]; Pon	[ ]	RED; A; PICTURE	INSTANT; ●			RED; FTB; [ ]	
GREEN; ▶	GREEN; [ ]		GREEN; [ ]; Pst	[ ]	GREEN; B; S-ND; [ ]	●			GREEN	
YELLOW; ◀	YELLOW; [ ]		YELLOW; [ ]; Psz	◀	YELLOW; C; TIME; [ ]	[ ]			YELLOW; [ ]	
BLUE; ▶	BLUE; [ ]		BLUE; [ ]; [ ]	▶	BLUE; D; GAME; [ ]	[ ]; RADIO			BLUE; [ ]	
[ ]	[ ]		DISPLAY; STAT.; [ ]		[ ]; [ ]; RECALL; OSD	[ ]; [ ]			[ ]	
[ ]	C/S; [ ]; MENUE		P-; Q; VIEW; [ ]		P-; A/CH; P/C; [ ]	[ ]			[ ]	
VOL -	<; [ ]		VOL -; [ ]	[ ]	VOL -; V-	SMART CONTROL-			VOL -	
VOL +	>; [ ]		VOL +; [ ]	[ ]	VOL +; V+	SMART CONTROL+			VOL +	
CH V; [ ]	V; P-	V; P-	P -; CH -; PROG -	[ ]	P -; CHANNEL -	PIP -			P -	
CH A; [ ]	▲; P+	▲; P+	P +; CH +; PROG +	[ ]	P +; CHANNEL +	PIP +			P +	
[ ]; SAT	[ ]		[ ]; PAGE +; [ ]		[ ]	SAT			[ ]	
CLEAR; X	[ ]		P/C; TPD; PAGE -; [ ]	[ ]; SYS; PIP; [ ]	X; [ ]; [ ]	CC			[ ]	
[ ]	[ ]		[ ]; TSC; SUB.PAGE		[ ]	[ ]			[ ]	
[ ]	[ ]		[ ]; X; T INDEX; [ ]		[ ]; WHITE; [ ]	2			[ ]	
[ ]	[ ]		[ ]; [ ]; REV		[ ]; [ ]	X2			[ ]	
[ ]	[ ]		[ ]; TP; STORE		[ ]; [ ]	[ ]			[ ]	
[ ]	[ ]		[ ]; TST		[ ]; [ ]	[ ]			[ ]	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0/AV	

Функции кнопок пульта IRC 06 F к TV устройствам

Кнопки пульта IRC 06 F	Код 106		Код 107		Код 108		Код 109		Код 110	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD									⊕ +	
AUDIO; NICAM			Hi-Fi; M+1		Ⓞ; [ ]					
VIDEO; SYS			AUX		WHITE				[ ]	
[ ]; ZOOM			↔						⊖ -	
▼; TV			TV		[ ]					
[ ]; ↗			+1 ↗		2#; M+1	+1 →			→; ←	
[ ]; LOCK			PIP		→; ←				→; ←	
▲; FAV									⊖	
⊖	⊖		⊖		⊖				⊖	
AV	AV		AV		AV				[ ]	
[ ]	[ ]		[ ]		[ ]				[ ]	
MENU			⊖						MENU	
EXIT									STOP	
▲					⊕ +				⊕ +	
◀			[ ]		⊖ -				<	
OK	OK		OK		⊕ +				OK	
▶			[ ]		⊖ -				>	
▼			[ ]		⊕ +				⊕ +	
[ ]; SETUP	[ ]		[ ]		⊖ -				⊖ -	
[ ]; TITLE			[ ]		HiFi				[ ]	
[ ]			[ ]		[ ]				PERI	
GUIDE			TINT						⊖	
⊖	⊖		⊖		⊖		TIME		⊖	
[ ]	TINT		[ ]		[ ] PHONE ON				[ ]	
RED; ●	⊖		RED; FTB; [ ]		RED; [ ]				● REC	
GREEN; ▶	⊖		GREEN; [ ]		GREEN; PH. OFF				[ ]	
YELLOW; ◀			YELLOW; -PC/STOP		YELLOW; [ ]				[ ]	
BLUE; ▶			BLUE; 0000/PC+		BLUE; [ ]				[ ]	
[ ]			i		↔				i	
[ ]	P/C		P/C; B-R						20	
VOL -	<; [ ]		<; [ ]		<; [ ]	[ ]			<; [ ]	
VOL +	>; [ ]		>; [ ]		>; [ ]	[ ]			>; [ ]	
CH V; [ ]	P ▼		P-		[ ]	[ ]			P-	
CH A; [ ]	P ▲		P+		[ ]	[ ]			P+	
[ ]; SAT	[ ]		Ⓞ		10; *; MR				10	
CLEAR; X	[ ]		[ ]		20				CL	
[ ]	[ ]		[ ]		[ ]				[ ]	
[ ]	[ ]		[ ]		[ ]				[ ]	
[ ]	[ ]		[ ]		[ ]				[ ]	
[ ]	STOP		[ ]		[ ]				[ ]	
[ ]	[ ]		[ ]		[ ]				[ ]	
[ ]	[ ]		[ ]		[ ]				[ ]	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0/AV	

Функции кнопок пульта IRC 06 F к TV устройствам

Кнопки пульта IRC 06 F	Код 111		Код 112		Код 113		Код 114		Код 115	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	COLOUR +; ⊕									
AUDIO; NICAM			▶▶		I/II					
VIDEO; SYS	MODE; P/S								SIZE	
☐; ZOOM	SIZE		16:09				16:9		☐	
▼; TV	COLOUR -; ⊖				TV		TV		SCAN	
☐; ↗	PIP		☐		AUTOSCAN		P100		PIP	
☐; LOCK	STILL				AUTO				PAP	
▲; FAV	FC		⬅							
⊖	POWER; ⊖		POWER		POWER		⊖		⊖	
AV	TV/VIDEO; TV/AV		☐; DOUBLE		SOURCE		AV		AV	
⌘	MUTE; ⌘		MUTE		MUTE		⌘		⌘	
MENU	FUNCT; MENU		M; ?		MENU		MENU		i; MENU	
EXIT			EXIT		EXIT					
▲	FUN+; +; ▲; ZOOM		▲		CH ▲		P +		P +	
◀	⊛ -; ⊖ -		◀		VOL ◀		VOL -		◀; -	
OK	PIC SEL; FUNCT		OK		MENU		OK		OK	
▶	⊛ +; ⊕ +		▶		VOL ▶		VOL +		▶; +	
▼	FUN-; -; ▼; -P/-		▼		CH ▼		P -		P -	
⌘; SETUP	PIC; SET ON TIME						☐			
♪; TITLE	X ON TIME						PC			
☐	MIN; MINUTE		TXT		☐		TV/TXT		TXT	
GUIDE	HOUR; HR CLOCK						PT			
⊖	SLEEP; OFF TIME; ⊖								Z; TIMER ON/OFF	
☐			☐		☐		MIX		?	
RED; ●	1-; 10~		RED; ●		RED		RED		RED; ●	
GREEN; ▶▶	2-		GREEN; ▶▶		GREEN		GREEN		GREEN; ▶▶	
YELLOW; ◀◀	3-; SCAN		YELLOW; ◀◀		YELLOW		YELLOW		YELLOW; ◀◀	
BLUE; ▶▶	4-; MSG		BLUE; ◀◀		BLUE		BLUE		BLUE; ◀◀	
☐	RECALL; DISPLAY		i		DISPLAY		INFO		TV +	
☐	⌘; Q. VIEW; ⌘		☐				SWP		POS	
VOL -	VOLUME ▼; -		◀		VOL ◀		VOL -		◀	
VOL +	VOLUME ▲; +		▶		VOL ▶		VOL +		▶	
CH V; ◀◀	CHANNEL ▼; P -		▼	⏪	CH ▼		P -		P -	
CH A; ▶▶	CHANNEL ▲; P +		▲	⏩	CH ▲		P +		P +	
⊖; SAT	⊖								-/-	
CLEAR; X	RESET; CANCEL; X		☐		☐					
◀◀; ●			◀◀				SUB		◀◀	
▶▶; i			▶▶		☐		UPDATE		▶▶	i; MENU
▶▶; ?			▶▶		☐		REV		▶▶	?
■; ⌘	⌘		■	⌘	☐		HOLD		■	
■; ⌘	ZOOM		■		☐		DOUB		■	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 06 F к TV устройствам

Кнопки пульта IRC 06 F	Код 116		Код 117		Код 118		Код 119	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			▶▶		▶▶			
AUDIO; NICAM	⌘; UPDATE		⌘		3D		AUDIO	
VIDEO; SYS	Q		ECO		REC LIST		16:9	
☐; ZOOM	16:9; ANGLE		☐	☐	☐		ZOOM	
▼; TV			◀◀		◀◀			
☐; ↗					3D		PIP	
☐; LOCK	☐		?		CEC; @			
▲; FAV	▲	FAV	◀◀		FAV		FAV	
⊖	POWER		⊖		⊖		STANDBY	
AV	☐		AV		☐		AV	
⌘	MUTE		⌘		⌘		⌘	
MENU	MENU; M				MENU; ⌘		MENU	
EXIT	⬅				EXIT		EXIT	
▲	▲		▲		▲		▲	
◀	◀		◀		◀		◀	
OK	OK		OK		OK		OK	
▶	▶		▶		>		>	
▼	▼		▼		▼		▼	
⌘; SETUP	SETUP				TOOLS		☐	
♪; TITLE	TITLE				♪		♪	
☐	TXT		TXT		TXT		TXT	
GUIDE	?/EPG; A-B		TV G		☐; GUIDE		EPG	
⊖			Z; ◀					
☐	☐; DOUBLE		☐		☐		SUBT	
RED; ●	RED; ▶▶		RED	●; ▶▶	RED; ●	●	RED	
GREEN; ▶▶	GREEN; ◀◀		GREEN		GREEN; ●●		GREEN	
YELLOW; ◀◀	YELLOW; ☐; ■		YELLOW		YELLOW; ●●●		YELLOW	
BLUE; ▶▶	BLUE; ▶▶		BLUE; ☐		BLUE; ●●●●		BLUE	
☐	i		i		?		INFO	
☐	☐; REPEAT		CEC; ☐		◀; BACK		BACK	
VOL -	V-		-		◀		VOL -	
VOL +	V+		+		▶		VOL +	
CH V; ◀◀	P-	⏪; TXT	P-		P-		PR -	
CH A; ▶▶	P+	⏩; HOLD; R	P+		P+		PR +	
⊖; SAT	GOTO				NETFLIX			
CLEAR; X					MY MEDIA			
◀◀; ●	◀◀		◀◀		◀◀			
▶▶; i	▶▶		▶▶		▶▶		POS	
▶▶; ?	▶▶		▶▶	?	▶▶		SWAP	
■; ⌘	■	HOLD	■		■		FREEZE	
■; ⌘	■		■		■		SIZE	
1, 2, ... 9, 0	1, 2, ... 9, 0/FAV		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 06 F к VCR устройствам

Кнопки пульта IRC 06 F	Код 201		Код 202		Код 203		Код 204	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD					I-HQ/PB		CD	
AUDIO; NICAM					I-HQ		TAPE	
VIDEO; SYS					AUTO TRACKING		VCR	
☐; ZOOM	↔		↔		SHOW VIEW			
▼; TV					TV/VCR		TV	
☐; ↗					VPT		TUNER	
☐; LOCK					COUNTER RESET			
▲; FAV					EJECT; ▲			
○	POWER		POWER		POWER		○ HIFI	
AV					AV			
✳							♫	
MENU					MENU			
EXIT					(-)			
▲					MULTI SPEED +			
◀	◀; ☐		◀; ☐		PICT. -; STEADY ▶	⌚	REAR/-	
OK					OK		SURROUND/INST	
▶	▶; ☐		▶; ☐		PICT. +; STEADY ◀	⌚	CENTRE/+	
▼					MULTI SPEED -			
✳; SETUP					JOG SHUT			
♪; TITLE					VERT.			
☐	ATS		ATS		TV TEXT			
GUIDE					PROG			
○					TIMER			
☐					PROG LIST			
RED; ●	● REC		● REC		RED	● REC		
GREEN; ▬					GREEN			
YELLOW; ◀					YELLOW			
BLUE; ▬	▬		▬		BLUE	SLOW; STILL		
☐					DISPLAY		TXT/i	
☐					REPEAT		◀ ▶	
VOL -	◀		◀		◀; TRACKING ◀		VOLUME -	
VOL +	▶		▶		▶; TRACKING ▶		VOLUME +	
CH V; ◀	P -		P -		CH ▼	◀	◀	
CH A; ▶	P +		P +		CH ▲	▶	▶	
±; SAT	LP		LP		SP/LP		SAT	
CLEAR; X					CANCEL (S/W)			
◀; ●	◀ (REW)		◀ (REW)		◀; REW		◀	
▶; i	▶ (PLAY)		▶ (PLAY)		▶; PLAY		▶	
▶; ?	▶ (F.FWD)		▶ (F.FWD)		▶; F.FWD	NEXT	▶	
■; ✕	■ (STOP)		■ (STOP)		■; STOP		■	
▬; ⏸	▬ (PAUSE)		▬ (PAUSE)		▬; PAUSE		▬	
1, 2, ... 9, 0					1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 06 F к AUX устройствам

Кнопки пульта IRC 06 F	Код 301		Код 302		Код 303		Код 304	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD					CD; DISC; SOURCE		SUBV +	
AUDIO; NICAM	EQ				TAPE		SURROUND; LOUD	
VIDEO; SYS	MODE				VCR		NIGHT	
☐; ZOOM					SAT		I-II; ☐; RDS	
▼; TV					TV		SUBW -	
☐; ↗					TUNER		PROG	
☐; LOCK	USB				AUTO DJ		PROG	
▲; FAV					▲; OPEN/CLOSE		PTY	
○	○; ON/OFF		○		○; POWER	○ HIFI	○	○ HIFI
AV	SOURCE				CD; DISC; SOURCE		AUX	
✳	✳				MUTE		✳; MUTE	
MENU					MENU; CLK/DISP.		MENU	
EXIT								
▲					▲; ▶; ▶		▲	
◀					◀		◀	
OK					OK		OK	
▶					▶		▶	
▼					▼; ◀; ▶		▼	
✳; SETUP					DSC		DBB	
♪; TITLE	RESUME ST/MO				DBB		SOUND; DSC	
☐	PROG.				PROG		☐	
GUIDE					TIMER ON/OFF		DIM	
○					SLEEP		SLEEP; TIMER	TIMER
☐					TIMER		TUNER	
RED; ●					DISC/PTY		REAR -	
GREEN; ▬			▬		REAR		REAR +	
YELLOW; ◀					CENTRE		CENTER -	
BLUE; ▬					SURROUND		CENTER +	
☐			DISPLAY		CLOCK		DISPLAY	
☐					SHUFFLE; SHUF		☐	
VOL -	◀		W		VOL -; VOLUME ▼		VOL -	
VOL +	▶		T		VOL +; VOLUME ▲		VOL +	
CH V; ◀	◀				ALB/PRESET -		P -; ◀	
CH A; ▶	▶				ALB/PRESET +		P +; ▶	
±; SAT					REPEAT; MODE		SAT	
CLEAR; X					REP ALL		TV	
◀; ●			◀		◀; REW		VCR	
▶; i	▬		▶		▶; PLAY; ▶	▬ (USB B)	CD	
▶; ?			▶		▶; FWD		TAPE	
■; ✕	■; BAND		■		■; STOP	■ (USB B)	■	
▬; ⏸	▬		▬		▬; PAUSE	▬ (USB B)	▬	
1, 2, ... 9, 0					1, 2, ... 9, 0		1, 2, ... 9, 0	



## Функции кнопок пульта IRC 06 F к SAT устройствам

Кнопки пульта IRC 06 F	Код 401	
	Функция	Доп. функция
▲ ; DVD	TV-G	
AUDIO ; NICAM		
VIDEO ; SYS		
⏏ ; ZOOM	⏏	
▼ ; TV	⏏	
⏏ ; ↻	PIP	
⏏ ; LOCK		
▲ ; FAV		
⊖	⊖	
AV		
⌘	⌘	
MENU	MHP	
EXIT		
▲	P +	
◀	◀ ; -	
OK	OK	
▶	▶ ; +	
▼	P -	
* ; SETUP		
♪ ; TITLE	RADIO	
⏏	TXT	
GUIDE		
⊖	⊖	
⏏	Z	
RED ; ●	RED ; ●	
GREEN ; ▯	GREEN ; ⊖	
YELLOW ; ◀	YELLOW ; ▯	
BLUE ; ▯	BLUE ; ♪	
⏏	i	TXT/i
⏏		
VOL -	◀ ; -	VOLUME -
VOL +	▶ ; +	VOLUME +
CH V ; ◀◀	P -	P -
CH A ; ▶▶	P +	P +
± ; SAT	A/B	
CLEAR ; X		
◀◀ ; ●		
▶ ; i		
▶▶ ; ?	?	
▣ ; ✕	VOLUME -	
▣ ; ⬇	VOLUME +	
1, 2, ... 9, 0	1, 2, ... 9, 0	

## Функции кнопок пульта IRC 06 F к TV устройствам

Кнопки пульта IRC 06 F	Коды 501-799	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM		
VIDEO ; SYS		
⏏ ; ZOOM		
▼ ; TV		
⏏ ; ↻		
⏏ ; LOCK		
▲ ; FAV		
⊖	POWER ; ⊖	
AV	TV/VIDEO ; TV/AV	
⌘	MUTE ; ⌘	
MENU		
EXIT		
▲		
◀		
OK		
▶		
▼		
* ; SETUP		
♪ ; TITLE		
⏏		
GUIDE		
⊖		
⏏		
RED ; ●		
GREEN ; ▯		
YELLOW ; ◀		
BLUE ; ▯		
⏏		
⏏		
VOL -	VOLUME ▼ ; ◀-	
VOL +	VOLUME ▲ ; ▶+	
CH V ; ◀◀	CHANNEL ▼ ; P -	
CH A ; ▶▶	CHANNEL ▲ ; P +	
± ; SAT		
CLEAR ; X		
◀◀ ; ●		
▶ ; i		
▶▶ ; ?		
▣ ; ✕		
▣ ; ⬇		
1, 2, ... 9, 0	1, 2, ... 9, 0	

Для просмотра функций кнопок баз кодов 8 и 9 (SAT, STB, DVB устройства) перейдите по следующей ссылке <http://www.pult-irc.ru/files/manual/SatCodesForIrcF.pdf>