

Приложение IRC 09 F (версия 19.06.07 09:35)

Модели оригинальных пультов и соответствующие им коды пульта IRC приведены в разделе "Коды пульта IRC 09 F".

Функции всех кнопок для каждого кода пульта IRC можно узнать из таблиц данного приложения.

Пульт IRC может иметь дополнительные функции (если указаны в столбце "Доп. функция"). Доступ к ним осуществляется при помощи кнопки SHIFT (см. в инструкции рис.1, п.16). Для доступа к дополнительным функциям нажмите кнопку SHIFT и, удерживая её нажатой, нажмите ту кнопку, дополнительная функция которой Вам необходима.

После первой установки батареек

Кнопка устройства пульта IRC	Код пульта IRC	Кнопка устройства пульта IRC	Код пульта IRC
TV	104	SHIFT + TV*	110
VCR	105	SHIFT + VCR*	111
AUX	103	SHIFT + AUX*	115
SAT	106	SHIFT + SAT*	101

* Нажмите кнопку SHIFT и, удерживая её нажатой, нажмите и отпустите одну из кнопок пульта: TV, VCR, AUX или SAT.

Доступные коды пульта IRC 09 F

Номер базы кодов (диапазон кодов)	Устройство базы кодов	Доступные коды пульта IRC
1 (101-199)	TV	101 - 115
2 (201-299)	VCR	201 - 204
3 (301-399)	-	Нет
4 (401-499)	-	Нет
5 (501-599)	TV	501 - 599
6 (601-699)	TV	601 - 699
7 (701-799)	TV	701 - 799
8 (801-899)	SAT	801 - 899
9 (901-999)	SAT	901 - 999

Коды пульта IRC 09 F

Коды к устройствам марки MITSUBISHI

Модель*	Устр-во	Код
14M1	TV	103
21M1	TV	104,105
25M1	TV	104,105
26283930	TV	110
290P014010	TV	104,105
290P014A4	TV	104,105
290P015030	TV	103
290P015A3	TV	104,105
290P015A4	TV	104,105
290P020A10 (TV)	TV	104,105
290P020A10 (VCR1)	VCR	201
290P020A10 (VCR2)	VCR	203
290P02101 (TV)	TV	106
290P02101 (VCR)	VCR	201
290P021A1 (TV)	TV	106
290P021A1 (VCR)	VCR	201
290P023090	TV	103
290P03A30	VCR	201
290P035B1 (TV)	TV	106
290P035B1 (VCR)	VCR	201
290P043010	TV	104,105
290P06001	TV	104,105
290P060010	TV	104,105
290P15A4	TV	104,105
2962204801	TV	108
739P212070	TV	104,105
739P37383	TV	104,105
939P03605	TV	101
939P036050	TV	101
939P03606	TV	102
939P03607	TV	101
939P03609	TV	101
939P05501	TV	102
939P06501	VCR	202
939P09405	TV	101
939P094050	TV	101
939P150A4	TV	102
939P17704	TV	104,105
939P20003	TV	104,105
939P20303	VCR	202
939P21201	TV	104,105
939P212010	TV	104,105
939P21201A	TV	104,105
939P212030	TV	104,105
939P212A1	TV	104,105

Модель	Устр-во	Код
939P212A3	TV	104,105
939P245A9	TV	106
939P270020	TV	104,105
939P317A5 (TV)	TV	106
939P317A5 (VCR)	VCR	201
939P371A6	TV	104,105
939P373030	TV	104,105
939P3737B	TV	104,105
939P375B1 (TV)	TV	106
939P375B1 (VCR)	VCR	201
939P385010	TV	104,105
939P398030	TV	103
939P403010	TV	103
939P403A5 (TV)	TV	103
939P403A5 (VCR)	VCR	201
939P403A6	TV	103
939P486A10 (TV)	TV	104,105
939P486A10 (VCR1)	VCR	201
939P486A10 (VCR2)	VCR	203
939P594030	TV	103
939P04301	TV	102
939P05701	TV	102
94817J	TV	104,105
CT1447	TV	104,105
CT1447EPC	TV	104,105
CT14MS1EEM	TV	104,105
CT2146TX	TV	104,105
CT2147	TV	106
CT2147E	TV	106
CT2148	TV	106
CT21AM1	TV	104,105
CT21M3EEM	TV	104,105
CT2228	TV	102
CT254TX	TV	104,105
CT25M2EET	TV	104,105
CT25M2EPT	TV	104,105
CT29AT5 (TV)	TV	106
CT29AT5 (VCR)	VCR	201
CT33C1 (TV)	TV	115
CT33C1 (VCR1)	VCR	201
CT33C1 (VCR2)	VCR	203
CT37C1 (TV)	TV	115
CT37C1 (VCR1)	VCR	201
CT37C1 (VCR2)	VCR	203
FA97C5408	VCR	201

Модель	Устр-во	Код
FB1	TV	110
FB90	TV	107
FB91	TV	107
HS0940	TV	104,105
HS318	VCR	202
HS330	VCR	202
HS412E	VCR	202
HS412ENZ	VCR	201
IR/TXT	TV	102
P083A10 (TV)	TV	104,105
P083A10 (VCR)	VCR	201
RD309E	TV	109
RM 531V-59403	TV	103
RM 541V-59202	TV	103
RM 551V-59502	TV	103
RM 551V-59503	TV	103
RM 561V-59504	VCR	201
RM M40-58201 (TV)	TV	104,105
RM M40-58201 (VCR)	VCR	201
RM M48-53804	VCR	201
RM M6050V-57802	TV	103
RM MS11V-57705 (TV)	TV	104,105
RM MS11V-57705 (VCR)	VCR	201
RM-01A01	TV	111
RM-05401	TV	103
RM-05405 (TV)	TV	104,105
RM-05405 (VCR)	VCR	201
RM-05407	TV	103
RM-05409	TV	103
RM-07901	TV	104,105
RM-08102	TV	104,105
RM-12	VCR	201
RM57401	VCR	201
SOME MODELS	TV	112
SOME MODELS	TV	113
SOME MODELS	TV	114
SOME MODELS	VCR	204
STP0000091	TV	109
TP650DATA	TV	108
TVP309	TV	109
URS0PB1019	TV	104,105

* По каталогу «IRC»

Коды к TV устройствам различных марок

Марка	Код
AEG	544
AIWA	502, 503, 523, 528, 579, 634, 678, 706, 710, 712, 716
AKAI	501, 503, 512, 516, 520, 522, 524, 525, 537, 538, 540, 545, 546, 547, 550, 571, 572, 582, 583, 584, 585, 596, 598, 608, 613, 626, 652, 673, 691, 704, 708, 711, 722, 731, 769
AKIRA	511, 514, 516, 524, 525, 537, 538, 541, 545, 547, 556, 577, 586, 594, 597, 598, 601, 623, 626, 629, 631, 649, 666, 680, 689, 690, 693, 699, 717, 739, 796, 797, 798, 799
AMCOL	501, 525, 545, 747
ANITECH	501, 525, 616, 726
ATLANTA	501, 751
AVEST	537, 538, 539, 766
BANG & OLUFSEN	728, 737
BBK	522, 551, 594, 597, 684, 701, 788, 792, 793
BEKO	525, 530, 535, 559, 723, 742
BIGSTON	501, 503
BLAUPUNKT	512
BORK	525, 547, 646, 766
BRAND	711
BROKSONIC	501
CAMERON	538, 550, 567, 675, 697, 702, 792, 794
CASIO	529, 705, 706
CASKA	761
CHANGHONG	516, 596, 642
CLATRONIC	501, 545, 559, 571, 742
CONTEC	501, 603, 604, 613
CORTLAND	644
CROWN	501, 503, 511, 524, 525, 530, 571
DAEWOO	501, 508, 518, 520, 525, 526, 536, 538, 539, 546, 565, 571, 576, 598, 613, 685, 687, 692
DARTLAND	501
DAYTRON	501
DEXP	516, 579, 684, 702
DIGITAL	547
DISTAR	562, 616
DNS	596, 702, 708
DOFFLER	684, 708
DUAL	746
ELEKTA	501, 503, 520, 525, 527, 615
ELEKTRONIKA	583
ELENBERG	538, 545, 550, 565, 567, 579, 581, 644, 655, 676, 683, 717, 785
EPLUTUS	537, 644, 677, 682, 697, 724
ERC	537, 631, 764
ERISSON	511, 514, 516, 525, 526, 537, 538, 541, 550, 556, 561, 568, 586, 596, 599, 623, 626, 629, 631, 711, 712, 714, 739, 747, 779, 786, 795
EVGO	538, 540, 630
FINLUX	501, 511, 583, 589, 608, 732, 758, 774
FUJITSU	544, 573
FUNAI	501, 502, 503, 504, 505, 525, 537, 538, 581, 603, 764
FUSION	596, 642, 699, 705, 706, 781
GBS	501, 520, 525, 571, 583
GENERAL	537, 556
GOLD STAR - LG	501, 512, 518, 525, 527, 559, 570, 583, 584, 589, 609, 613, 642, 706, 712, 742, 750, 765
GRUNDIG	501, 512, 525, 606, 662, 718, 719, 733
HAIER	518, 526, 561, 574, 657, 667, 669, 707, 778
HAPPY	501
HARPER	706, 712
HCM	501, 503, 525
HELIX	701, 702, 708
HIL	503
HITACHI	501, 515, 518, 522, 525, 537, 544, 548, 554, 578, 584, 587, 588, 604, 613, 640, 729, 749, 775, 783
HORIZONT	525, 540, 545, 550, 559, 583, 664, 672, 771
HPC	546
HYUNDAI	516, 518, 522, 525, 526, 537, 538, 540, 541, 546, 547, 550, 556, 580, 596, 597, 599, 626, 642, 648, 650, 655, 705, 711, 714, 717, 760
INNO-HIT	501, 525, 571
IRBIS	596, 714
IVA (ИВА)	537, 561, 637
IZUMI	516, 537, 596, 663, 691, 695, 703, 705, 711, 792
JINLIPI	537, 637, 766
JVC	513, 515, 593, 604, 727
KAMACROWN	571
KANSAI	501, 525
KENSTAR	516
KITT	503, 613, 616, 726
KNEISSEL	753
KONKA	537, 538, 560, 561, 581, 616, 626, 717
KRONMARK	596
LOEWE	542, 709, 744
MEDION	525
METZ	745
MITSUBISHI	501, 520, 522, 525, 604, 611, 722, 728, 744
MIYOTA	537, 644, 656
MTC	501, 583
MULTITECH	501, 525
MYSTERY	516, 537, 597, 642, 650, 653, 701, 702, 708, 773, 780, 789
NASH	537
NEC	501, 517, 520, 526, 552, 604, 625, 722
NESCO	501, 525
NESONS	708
NOKIA	519, 584, 610, 614, 616, 740, 746, 767
NOVA	501, 616, 638
NOVEX	516, 546, 599
NTT	759
OMEGA	501, 571
ONIDA	513
ONIKS	516, 525, 537, 545, 546, 547, 680
ONWA	524, 525
OPERA	644, 666, 682
ORBITA	635
ORION	501, 503, 506, 507, 509, 516, 525, 528, 537, 591, 603, 617, 619, 627, 641, 643, 664, 715, 720, 722, 729, 746
ORSON	526, 537
PANASONIC	512, 531, 532, 752

Коды к TV устройствам различных марок

Марка	Код
PHANTOM	644
PHILIPS	501, 511, 524, 525, 540, 549, 628, 639, 707, 748
PHOENIX	613
PHOENIX GOLD	708
PIONEER	548, 555, 566, 575, 647, 666
PIXELVIEW	525
PLANTRON	735
POLAR	525, 526, 537, 538, 540, 543, 546, 547, 581, 596, 599, 663, 664, 683, 703, 711, 717
POLAROID	525
PREMIERA	773
PRESTIGIO	564, 656
PRIMA	522, 547
PROLOGY	653, 655, 777, 784
RADUGA	525, 545, 569, 583, 743
RAINFORD	525, 537, 544, 545
RECOR	511, 525
REKORD	520, 525, 526, 537, 538, 539, 545, 547, 725, 736, 743, 747
RFT	535, 618, 728
ROADSTAR	501, 508, 525, 571
ROLSEN	503, 516, 525, 537, 538, 540, 543, 546, 564, 576, 592, 594, 596, 649, 656, 669, 684, 714, 768, 770
ROVERSCAN	662, 770
ROYAL	501, 503, 525, 616
RUBIN	504, 516, 525, 537, 546, 583, 619, 665, 714, 776
SABA	509, 510, 521, 602, 756
SALORA	584
SAMSUNG	501, 525, 526, 529, 563, 580, 595, 596, 608, 612, 613, 622, 641, 645, 688, 723, 741
SANSUI	524, 525, 538, 556, 695
SANYO	501, 519, 522, 525, 530, 540, 544, 550, 558, 604, 608, 610, 618, 621, 696, 722, 730, 734, 738
SATURN	702, 708
SCARLETT	541, 545
SCHNEIDER	525, 540, 571, 771
SELECO	736, 763
SETRO	520
SHARP	526, 544, 548, 604, 707, 721
SHERION	616
SHIVAKI	501, 503, 508, 516, 518, 520, 525, 526, 527, 536, 538, 539, 540, 545, 546, 547, 550, 556, 580, 583, 585, 596, 599, 609, 619, 630, 632, 635, 636, 643, 644, 664, 681, 694, 708, 743, 791
SIEMENS	512, 525, 660, 726, 734
SIESTA	501, 537, 637
SILELIS	613
SILVER	633
SITRONICS	503, 516, 525, 537, 538, 540, 543, 545, 594, 626, 629, 661, 671, 672, 674, 679, 680, 686, 766
SOKOL	516, 525, 547, 635
SONY	533, 604, 659, 722
SPEKTR	525, 538, 668
START	525, 537, 545, 546, 547
STASSFURT	535, 618
STINOL	525
SUPER	537, 561, 644, 653, 654, 655, 666, 677, 682, 724, 754, 772, 780
SUPER GENERAL	537
SUPRA	501, 508, 516, 518, 520, 522, 525, 527, 529, 536, 537, 541, 563, 579, 580, 596, 597, 612, 642, 643, 687, 690, 705, 706, 712, 713, 790
SUZUKI	516, 556
SVEN	574
TCL	521, 538, 540, 642
TEAC	525
TECHNICS	537, 538
TECHNO	501, 525, 538, 544, 546, 556, 568, 579, 596, 599, 644, 664, 703, 791
TECKTON	522, 582, 601, 669, 670
TELEFUNKEN	510, 521, 561, 590, 602, 605, 642, 708, 712, 714, 756, 757
TELEVISION	501, 525, 616
THOMSON	509, 510, 521, 550, 579, 602, 624, 642, 702, 756
TOSHIBA	516, 544, 553, 604, 651, 744
TRONY	516, 525, 537, 538, 550, 574, 657
TVT	511, 525, 530, 535, 538, 583, 586, 620, 630, 723, 742
UNITED	525
VARTA	642
VESTEL	525, 544, 556, 583, 619
VIEWSONIC	557, 698
VITA	547
VITEK	537, 650
VITYAS	525, 708
VOLNA (ВОЛНА)	635
VR	516, 537, 565, 598, 702, 714, 786
WALTHAM	503, 509, 511, 583, 584, 607, 613, 729, 762
XORO	522, 526, 545, 781, 782, 787
XPX	663
НЕИЗВЕСТНАЯ МАРКА	525, 546, 574, 596, 648, 656, 666, 711, 755

Коды к SAT устройствам различных марок

Марка	Код
AIRTONE	968
ALFA GOLD	828
AMINO (СТРИМ)	829, 902
ARION	835
ARRIS	883
ASTON	811
BBK	931
BIG STAR	965
BIGSAT	839, 840, 903, 936
CADENA	958, 962
CONTINENT	886, 975
COSHIP	855
DAEWOO	872
D-COLOR	946, 961
DELTA SYSTEMS	985
DIGIFORS	946
DIVISAT	957, 958
D-LINK	923
DNS	950, 968
DR.HD	983
DRE	804, 888
DREAM	819
DUNE	927, 934
ECHOSPACE	862
EHOSTAR	808, 809, 822
ELTEX	987
EPLUTUS	961
EUROSKY	840, 981
EUROSTAR	863
EUSTON	825
EVO	965
GALAXY INNOVATIONS	878, 881, 908, 911, 912, 917, 924
GENERAL SATELLITE	804, 868, 888, 907, 933, 954
GLOBALTEQ	833
GLOBO	909, 915, 925, 935, 945, 956, 971, 973, 995, 999
GOLD STAR - LG	871
GOLDEN INTERSTAR	821, 841, 879, 918
GOLDEN MEDIA	847, 912
GOLDMASTER	911
HD BOX	847, 911
HITACHI	824, 832
HIVION	929
HOME	968
HOMECAST (ВОЛЯ)	820, 831, 836
HUMAX	803, 804, 823, 848, 860, 861, 905, 949
HYUNDAI	968
ID DIGITAL	804
INTEK	984
INTERCROSS	988
KAON	820, 949
KARTINA TV	934
KOSMOS	855, 856
LANS	970
LOCUS	946
LUMAX	852, 873, 907, 913, 965, 994
MAG	988
MEDIA COM	825
MOTOROLA	883, 884, 901, 974
MYSTERY	910, 997
NDS	814
NEXT	864
NOKIA	813
NOT	941
ONLIME	905
OPENBOX	827, 835, 869, 870, 911, 990, 991
OPENTECH	972
OPENTEL	865
OPTICUM	971
ORBITA	946, 995
ORIEL	887, 926, 941, 948, 955, 986
PACE	801, 932, 953
PATIX DIGITAL	946, 967, 992
PAUXIS	842, 859
PERFEO	960, 981
PHILIPS	857, 899
PIONEER	851
POLAR	858
REFLECT	959
REXANT	977
RIKOR	916, 947
ROLSEN	930, 941, 942, 961
SAGEMCOM	906
SAMSUNG	803, 810, 812, 854
SEG	818
SELENGA	946
SEZAM	882
SKY VISION	952, 966, 977, 982
SKYMASTER	830
SKYWAY	911
SKYWORTH	989
STAR	833
STAR TRACK	826, 835, 943
STARNET	885
STRONG	805, 806, 815, 816, 817, 828, 830, 914
SUNNIWELL	875
SUPERBOX	903
SUPERMAX	821, 866, 880, 924
SUPRA	950, 960, 962

Коды к SAT устройствам различных марок

Марка	Код
TECHNOSAT	852, 853
TEL-ANT	960
TELEFUNKEN	961, 968
TESLER	926
TOP BOX	965
TOPFIELD	837, 838, 877, 891
TOSHIBA	876
TV STAR	967
TVJET	946, 976
VESTEL	820, 824
VU+	919, 920, 921, 922
WORLD VISION	821, 928, 951, 952, 961, 968
XSAT	801, 807
XSAT (НТВ+)	801, 802, 807, 906, 972, 984, 998
YUXING	904
ZUXEL	874
БИЛАЙН	883, 884, 901, 923
ВОЛГАТЕЛЕКОМ	842, 843, 844, 845, 846, 847, 849, 850, 858, 867
ДОМ.RU	820, 905
ДОМОЛИНК	874, 904
МТС	829, 855, 902, 964, 974, 979, 980, 989, 993
НЕИЗВЕСТНАЯ МАРКА	834, 835, 842, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 903, 904, 937, 938, 939, 940, 944, 945, 969, 971, 978, 996
РОСТЕЛЕКОМ	874, 904, 923, 963, 988, 993
СИГНАЛ	867, 968
ТЕЛЕКАРТА	867, 909, 973
ТЕЛЕЦИФРА	968

Функции кнопок пульта IRC 09 F к TV устройствам

Кнопки пульта IRC 09 F	Код 101		Код 102		Код 103		Код 104		Код 105	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD					DG		S****		SOURCE	
AUDIO; NICAM	▲ N				I-II		AUDIO	SYSTEM SOUND		
VIDEO; SYS	● N		■; VIDEO		BROWSE		VIDEO	SYSTEM COLOUR	POSITION	
☐; ZOOM					◀CH; ◀CAN		◀CH; Q.V.			
▼; TV			TV		TV		TV; ☐		TV; ☐	
☐; ↗			☐; A/B		●	CH-PRESET	STORE; PREDIT	CH. PRES.; TUNING	PIP	
☐; LOCK	■; ● N		NORM; RESET		●	OPTIMUM	→;←; OPTIMUM	→;←	STILL	
▲; FAV					CH ▲		▲ CH			
○	○		○		○		○; OFF		○; OFF	
AV	TV/VIDEO				◀; AV	AV	AV; ◀; TV/AV		AV; ◀; TV/AV	
⌘	MUTE; ⌘		⌘		⌘; MUTE		MUTE; ⌘		MUTE; ⌘	
MENU					MENU	STORE; MEMO	MENU; ☐	MEMORY	MENU; ☐	
EXIT					S****		SKIP		EX-CH	
▲	☼+		☼+				▲	☼+; PICT.; VIDEO; ▶		
◀	○-		○-		FUNCT -		◀; -	○-	FUNCTION +; AT R	
OK							ENTER			
▶	○+		○+		FUNCT +		▶; +	○+	FUNCTION -; AT L	
▼	☼-		☼-				▼	☼-; AUDIO; ◀		
⌘; SETUP					FUNCTION		FUNCTION		FUNCTION	
♪; TITLE					☐		I-II; MPX	☐; DISPLAY		
☐			TEXT		TV/TEXT/MIX	TEXT	TEXT; ☐	AFT	TEXT; ☐	
GUIDE					MODE		MODE; PP	AUTO-SEARCH		
☐	TIME		TIME; TEXT CL		OFF-TIMER		OFF TIMER		OFF TIMER	
☐			MIX		MIX		MIX; ☐		MIX; ☐	
RED; ●	☼-		-		RED; FUNCT	RED	RED	BAND	RED	
GREEN; ▶	☼+				GREEN	GREEN	GREEN	REAL; CM	GREEN	
YELLOW; ◀	☼-		L ⌘; TP OFF		YELLOW	YELLOW	YELLOW	BG/IL	YELLOW	
BLUE; ▶	☼+		R ⌘; TP ON		BLUE	BLUE	BLUE		BLUE	
☐	DISPLAY		☐		☐; DISPLAY		CH DISP; DISPLAY		CH DISP; DISPLAY	
☐	P/C		☐		STATUS		STATUS; SCROLL		PREVIOUS MENU	
VOL -	VOL -; ◀		◀		◀		◀	FUNCTION -; AT L	◀	
VOL +	VOL +; ▶		▶		▶		▶	FUNCTION +; AT R	▶	
CH V; ◀			PROGR -; HOLD		CH -		CH -		CH -	
CH A; ▶			PROGR +; REVEAL		CH +		CH +		CH +	
⌘; SAT	-;		10		*		-; 1-; *		-; 1-; *	
CLEAR; X	11		20		CM	CANCEL/TIME	2-	CANCEL/TIME	2-	
◀; ●	12				i		BROWSE; ☐		BROWSE; ☐	
▶; i	13				INDEX		INDEX; i; ☐		INDEX; i; ☐	
▶; ?	14				REVL		REVEAL	REVEAL	REVEAL	
■; ⌘	15				HOLD	HOLD	HOLD		HOLD	
■; ⌘	16/AV				SIZE		SIZE		SIZE	
1, 2, ... 9, 0	1, 2, ... 9, 10		1, 2 ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 09 F к TV устройствам

Кнопки пульта IRC 09 F	Код 106		Код 107		Код 108		Код 109		Код 110	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	MANUAL DEGAUSS		TOP; ☐	F +			COLOUR +; ☐+			
AUDIO; NICAM	AUDIO		☐; ☐		⌘; ⌘					
VIDEO; SYS	VIDEO		100		WHITE		MODE; P/S			
☐; ZOOM	SQV		☐				SIZE		QS ◀-▶; RA.	
▼; TV	TV; CANCEL	STORE	TV	F -	☐		COLOUR -; ☐-		TV	
☐; ↗	PIP		☐; ☐		2#; M+1	+1 →	PIP		STOP; HALT; STORE	
☐; LOCK	NORMAL; OPTIMUM		⌘	⌘; X	→;←		STILL		RESET; ⌘	
▲; FAV	S****		☐				FC			
○	OFF; POWER		○		○		POWER; ○		POWER; ☐	
AV	AV; TV/AV; INPUT	SOURCE	AV		AV		TV/VIDEO; TV/AV		AV; 16; 0	
⌘	MUTE		⌘		⌘		MUTE; ⌘		⌘; ▼	
MENU	MENU; MODE	HOME	M; ☐; *; MIX				FUNCT; MENU		M; SP	
EXIT	MPX OFF								C; CC	
▲	▲; ADJ ▶	INPUT ▲	▲	▲	☼+		FUN+; +; ▲; ZOOM		☼+; BRILLIANCE +	
◀	◀	AT L	-	VT-	○-		☼-; ○-		○-	
OK	ENTER		CM; MENU				PIC SEL; FUNCT		○+	
▶	▶	AT R	+	VT+	☼+		☼+; ○+		☼-; BRILLIANCE -	
▼	▼; ADJ ◀	INPUT ▼	▼	▼	☼-		FUN-; -; ▼; -PI-			
⌘; SETUP	FUNCTION	EXPANSION	☐				PIC; SET ON TIME		REVEAL; ⌘; TUNE	
♪; TITLE	LANGUAGE		☐; VT		HiFi		X ON TIME		☐; TEXT	
☐	TEXT; ☐; ☐		CM; MENU		☐		MIN; MINUTE		UHR ☐; TIME	
GUIDE	MODE		☐; ☐		PHONE ON		HOUR; HR CLOCK		LARGE	
☐	OFF TIMER		RED; ☐	☼-; ○-	RED; ☐		SLEEP; OFF TIME; ☐		F/T -; ⌘	
☐	MIX		GREEN; ☐	☼+; ○+	GREEN; PH. OFF		1-; 10-		F/T +; UP SOUND	
RED; ●	RED; SELECT		YELLOW; ☐; ☐	☼-	YELLOW; ☐		2-		☐-; COLOUR -	
GREEN; ▶	GREEN; SET		BLUE; ☐; ☐	☼+	BLUE; ☐		3-; SCAN		☐+; COLOUR +	
YELLOW; ◀	YELLOW		DIS		◀; ▶		4-; MSG		☐	
BLUE; ▶	BLUE; TIMER ON		☐; ☐				RECALL; DISPLAY		UPDATE	
☐	CH DISP; DISPLAY		P-	☐; #	⌘; ⌘		⌘; Q. VIEW; ☐		◀-; VOLUME -	
☐	Q.V.		P+	☐; ☐	⌘; ⌘		VOLUME ▼; ◀-		▶+; VOLUME +	
VOL -	VOL ▼	FUNCTION -; -	+		10; *; MR		CHANNEL ▼; P-		☐-; PROGRAM -	
VOL +	VOL ▲	FUNCTION +; +	☐				CHANNEL ▲; P+		☐+; PROGRAM +	
CH V; ◀	CH ▼	CHANNEL ▼	C	⌘; X	20		RESET; CANCEL; X		11	
CH A; ▶	CH ▲	CHANNEL ▲						12		
⌘; SAT	1-		☐; i; 0+#		☐			13		
CLEAR; X	2-	CANCEL/TIME	?		☐			14		
◀; ●	TIME ADJ		☐; ☐; ⌘		☐			15		
▶; i	INDEX; i; ☐		☐; ☐; ☐		☐			16		
▶; ?	REVEAL; REVL		☐; ☐; ☐		☐					
■; ⌘	HOLD		☐; ☐; ☐		☐					
■; ⌘	HOLD		☐; ☐; ☐		☐					
■; ⌘	SIZE		☐; ☐; ☐		☐					
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 09 F к TV устройствам

Кнопки пульта IRC 09 F	Код 111		Код 112		Код 113		Код 114		Код 115	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	CH ▲		DNR; PWR PIX	+; [REVEAL]	▶▶; LIST		⊗; [REVEAL] ▲			
AUDIO; NICAM	SURROUND		[REVEAL]; [REVEAL]	I-II; SAP; [REVEAL]; S/M/D	AUDIO				AUDIO	
VIDEO; SYS	SYSTEM; L/F/T		[REVEAL]	[REVEAL]; [REVEAL]			SYSTEM		VIDEO	
[ZOOM]; ZOOM	16:9		[REVEAL]; 16:9	[REVEAL]; Y						
▼; TV	CH ▼		[REVEAL]	-; Y	◀◀; HOLD		⊗; [REVEAL] ▼		[REVEAL]	
[REVEAL]; [REVEAL]	PinP	STORE	[REVEAL]; [REVEAL]; [REVEAL]	▶▶; INSTALL; ▶			PRESET		CH -PRESET	AUTO-SEARCH
[LOCK]; LOCK	STILL		▶◀◀; PP; [REVEAL]	[REVEAL]; [REVEAL]	FREEZE				▶▶▶	
▲; FAV	SWAP		[REVEAL]	[REVEAL]	FAV					
○	OFF; [REVEAL]		[REVEAL]; POWER	[REVEAL]	○				○	
AV	[REVEAL]; TV/VIDEO; [REVEAL]; [REVEAL]	TV/VIDEO	[REVEAL]; [REVEAL]; EXT.; AV	[REVEAL]	SOURCE		[REVEAL] AV		[REVEAL]	AV MEMORY
[REVEAL]	[REVEAL]; MUTE		[REVEAL]	[REVEAL]	[REVEAL]		[REVEAL]; MUTE		[REVEAL]	
MENU	MENU; [REVEAL]		MENU; [REVEAL]	FEATURE	MENU				MENU	
EXIT	MENU OFF		OFF; EXIT; OUT	WHITE; E; i	[REVEAL]; EXIT					
▲	Ω ▲		MENU +; ▲	[REVEAL] +	▲		AUTO/S ▲		◀	
◀			◀	[REVEAL] -	◀		FT ▼			
OK	E; ENTER; OK; [REVEAL]; [REVEAL]		ENTER; OK	SEL	OK		SELECT			
▶			▶	[REVEAL] +	▶		FT ▲		▶	
▼	Ω ▼		MENU -; ▼	[REVEAL] -	▼		AUTO/S ▼			
[REVEAL]; SETUP	[REVEAL]; TV/TEXT		SMART Picture [REVEAL]	PICTURE; [REVEAL]	PICTURE		Q.VIEW		SYSTEM	
[REVEAL]; TITLE	[REVEAL]		SMART Sound [REVEAL]	SOUND; [REVEAL]	SOUND		AFT/BAND		I/II	BG/IL
[REVEAL]	[REVEAL]; TEXT; ?		[REVEAL]; [REVEAL]	[REVEAL]	TEXT		ON TIMER		[REVEAL]	
GUIDE	2 PIC		[REVEAL]	LIST	[REVEAL]; TV GUIDE		TIMER ENABLE		LEARN	
○	SLEEP; [REVEAL]; [REVEAL]		SLEEP; [REVEAL]	[REVEAL]	REC LIST		SLEEP		LEARN CANCEL	
[REVEAL]	NORMAL; [REVEAL]; [REVEAL]		[REVEAL]	[REVEAL]	[REVEAL]; CH LIST		HOUR		[REVEAL]	
RED; ●	RED; DEL; DELETE		RED; A; PICTURE	INSTANT; ●	RED; AUDIO	●	2-		RED	A
GREEN; ▶	GREEN; MOVE		GREEN; B; S-ND; [REVEAL]	●	GREEN; SUBTITLE		3-		GREEN	B
YELLOW; ◀	YELLOW; TIME; [REVEAL]		YELLOW; C; TIME.; [REVEAL]	DBB	YELLOW; FAV		4-		YELLOW	C
BLUE; [REVEAL]	BLUE; MODE		BLUE; D; GAME; [REVEAL]	[REVEAL]; RADIO	BLUE; AD		MINUTE		BLUE	D
[REVEAL]	POSITION		[REVEAL]; [REVEAL]; [REVEAL]; OSD	[REVEAL]; [REVEAL]	[REVEAL]; INFO		CH CALL		[REVEAL]	
[REVEAL]	RECALL; [REVEAL]		[REVEAL]; A/CH; P/C; [REVEAL]	[REVEAL]	[REVEAL]; BACK					
VOL -	VOL ◀; [REVEAL]; [REVEAL]		◀-; VOL -; V-	SMART CONTROL-	◀-		◀-		◀-	
VOL +	VOL ▶; [REVEAL]; [REVEAL]		▶-; VOL +; V+	SMART CONTROL+	▶-		▶-		▶-	
CH V; [REVEAL]	PR ▼; ▼		P -; CHANNEL -	PIP -	CH -	◀◀; HOLD	PR ▼		CH ▼	
CH A; [REVEAL]	PR ▲; ▲		P +; CHANNEL +	PIP +	CH +	▶▶; LIST	PR ▲		CH ▲	
+; SAT	-/-		-/-	SAT			1-		*	
CLEAR; X	SKIP; [REVEAL]; [REVEAL]; WOOF.	SKIP	X; [REVEAL]; [REVEAL]	CC			SKIP		CM	
◀◀; [REVEAL]	TIME; [REVEAL]		[REVEAL]	[REVEAL]	◀◀; LANGUAGE					
▶; i	[REVEAL]		[REVEAL]; WHITE; [REVEAL]	2	▶					
▶▶; ?	[REVEAL]		[REVEAL]; [REVEAL]	X2	▶▶; REVEAL	REVEAL				
[REVEAL]; [REVEAL]	SURROUND; [REVEAL]		[REVEAL]; [REVEAL]	[REVEAL]	[REVEAL]; FREEZE	HOLD				
[REVEAL]; [REVEAL]	[REVEAL]		[REVEAL]; [REVEAL]	[REVEAL]	[REVEAL]; TEXT					
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0	[REVEAL]; [REVEAL]	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 09 F к VCR устройствам

Кнопки пульта IRC 09 F	Код 201		Код 202		Код 203		Код 204	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	ENCORE; VCR							
AUDIO; NICAM	AUDIO	AUDIO MONITOR						
VIDEO; SYS	VIDEO							
[ZOOM]; ZOOM	INDEX WRITE NEXT							
▼; TV								
[REVEAL]; [REVEAL]	COUNTER RESET	K						
▲; FAV	COUNT ZERO STOP							
○	POWER		POWER		POWER		POWER	
AV	INPUT	INPUT						
[REVEAL]	EJECT							
MENU	MENU				GG		MENU	
EXIT	-							
▲	+							
◀	SHUTTLE ◀; ◀	SHUTTLE ◀; ◀						
OK	SELECT; OK PROG	ENTER					SELECT	
▶	SHUTTLE ▶; ▶	SHUTTLE ▶; ▶						
▼	-							
[REVEAL]; SETUP	Q.V.	E						
[REVEAL]; TITLE	SP/LP	F						
[REVEAL]	DAILY/WEEKLY	G	13					
GUIDE	G-CODE	H	14					
○	TIME SEARCH	I	15					
[REVEAL]	TIMER COUNTER	J	16				PROG LIST	
RED; ●		●; REC		● REC		● REC		● REC
GREEN; ▶	▶; [REVEAL]	OFF-T; OTR					X2; FAST PLAY	
YELLOW; ◀		INDEX -; SLOW -						
BLUE; [REVEAL]	SLOW [REVEAL]; CANCEL	INDEX +; SLOW +		▶			▶; SLOW	
[REVEAL]	DATA ON SCREEN						DATA ON SCREEN	
[REVEAL]	P/C	JOG [REVEAL]; [REVEAL]						
VOL -	VOL -; CANCEL	-	SLOW ▼				INDEX -	
VOL +	VOL +	+	SLOW ▲				INDEX +	
CH V; [REVEAL]	P -	ADJ ◀			CH -		PROG ▼	
CH A; [REVEAL]	P +	ADJ ▶			CH +		PROG ▲	
+; SAT	-/-; 10-99		11				10-99	
CLEAR; X			12				CANCEL	
◀◀; [REVEAL]	◀◀; REW	SHUTTLE ◀◀	◀◀; REW		◀◀; REW		◀◀; REW	
▶; i	▶; PLAY		▶; PLAY		▶; PLAY		▶; PLAY	
▶▶; ?	▶▶; F.FWD	SHUTTLE ▶▶	▶▶; F.FWD		▶▶; F.FWD		▶▶; FF	
[REVEAL]; [REVEAL]	[REVEAL]; STOP		[REVEAL]; STOP		[REVEAL]; STOP		[REVEAL]; STOP	
[REVEAL]; [REVEAL]	[REVEAL]; PAUSE		[REVEAL]; PAUSE		[REVEAL]; PAUSE		[REVEAL]; PAUSE/STILL	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 09 F к TV устройствам

Кнопки пульта IRC 09 F	Коды 501-799	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM		
VIDEO ; SYS		
☐ ; ZOOM		
▼ ; TV		
⏪ ; ↻		
☒ ; LOCK		
▲ ; FAV		
⏻	POWER ; ⏻	
AV	TV/VIDEO ; TV/AV	
⊗	MUTE ; ⊗	
MENU		
EXIT		
▲		
◀		
OK		
▶		
▼		
⌘ ; SETUP		
🎵 ; TITLE		
☐		
GUIDE		
⏻		
☐		
RED ; ●		
GREEN ; ▬		
YELLOW ; ◀		
BLUE ; ▶		
☐		
☐		
VOL -	VOLUME ▼ ; ▾-	
VOL +	VOLUME ▲ ; ▸+	
CH V ; ◀◀	CHANNEL ▼ ; P -	
CH ▲ ; ▶▶	CHANNEL ▲ ; P +	
⊕ ; SAT		
CLEAR ; X		
◀◀ ; ●		
▶▶ ; i		
▶▶ ; ?		
■ ; ✕		
⏮ ; ⏭		
1, 2, ... 9, 0	1, 2, ... 9, 0	

Для просмотра функций кнопок баз кодов 8 и 9 (SAT, STB, DVB устройства) перейдите по следующей ссылке <http://www.pult-irc.ru/files/manual/SatCodesForIrcF.pdf>