

Приложение IRC 12 F (версия 21.06.18 03:02)

Модели оригинальных пультов и соответствующие им коды пульта IRC приведены в разделе "Коды пульта IRC 12 F".

Функции всех кнопок для каждого кода пульта IRC можно узнать из таблиц данного приложения.

Пульт IRC может иметь дополнительные функции (если указаны в столбце "Доп. функция"). Доступ к ним осуществляется при помощи кнопки SHIFT (см. в инструкции рис.1, п.16). Для доступа к дополнительным функциям нажмите кнопку SHIFT и, удерживая её нажатой, нажмите ту кнопку, дополнительная функция которой Вам необходима.

После первой установки батареек

Кнопка устройства пульта IRC	Код пульта IRC
TV	103
VCR	104
AUX	106
SAT	102

Кнопка устройства пульта IRC	Код пульта IRC
SHIFT + TV*	201
SHIFT + VCR*	303
SHIFT + AUX*	305
SHIFT + SAT*	306

* Нажмите кнопку SHIFT и, удерживая её нажатой, нажмите и отпустите одну из кнопок пульта: TV, VCR, AUX или SAT.

Доступные коды пульта IRC 12 F

Номер базы кодов (диапазон кодов)	Устройство базы кодов	Доступные коды пульта IRC
1 (101-199)	TV	101 - 115
2 (201-299)	VCR	201 - 205
3 (301-399)	AUX	301 - 322
4 (401-499)	-	Нет
5 (501-599)	TV	501 - 599
6 (601-699)	TV	601 - 699
7 (701-799)	TV	701 - 726
8 (801-899)	SAT	801 - 899
9 (901-999)	SAT	901 - 999

Коды пульта IRC 12 F

Коды к устройствам марки PANASONIC

Модель*	Устр-во	Код
536J-289002-W010	TV	114
CAR DVD 7N3T	AUX, CD, DVD	312
DVD-T001	AUX, CD, DVD	303
EUR16541	TV	102
EUR2646	TV	102
EUR37211	TV	102
EUR50100	TV	102
EUR501100	TV	103
EUR501101	TV/VCR	106
EUR501120A	TV/VCR	106
EUR501121A	TV/VCR	106
EUR501121B	TV/VCR	106
EUR501302	TV	103
EUR501310	TV	103
EUR501325	TV	103
EUR501380	TV	103
EUR50369	TV	102
EUR50370	TV	102
EUR50372	TV	102
EUR50535	TV	102
EUR50536	TV	102
EUR50621	TV	102
EUR50623	TV	103
EUR50624	TV	103
EUR50700	TV	103
EUR50701	TV	103
EUR50702	TV	103
EUR50703	TV	103
EUR50710	TV	103
EUR50717	TV	113
EUR50750	TV	103
EUR50752	TV	103
EUR50754	TV	103
EUR50755	TV	103
EUR50756 (TV)	TV	104
EUR50756 (VCR)	VCR	201
EUR50757	TV	103
EUR511020	TV	103
EUR511026 (TV)	TV	103
EUR511026 (VCR)	VCR	201
EUR511029 (TV)	TV	103
EUR511029 (VCR)	VCR	201
EUR511030	TV	103
EUR511032 (TV)	TV	103
EUR511032 (VCR)	VCR	201

Модель	Устр-во	Код
EUR511039 (TV)	TV	103
EUR511039 (VCR)	VCR	201
EUR511045 (TV)	TV	103
EUR511045 (VCR)	VCR	201
EUR511048 (TV)	TV	103
EUR511048 (VCR)	VCR	202
EUR511200 (DVD)	AUX, CD, DVD	303
EUR511200 (TV)	TV	111
EUR511200 (VCR)	VCR	201
EUR511226 (DVD)	VCR	202
EUR511226 (TV)	TV	111
EUR511226 (VCR)	VCR	201
EUR511300 (TV)	TV	111
EUR511300 (VCR)	VCR	201
EUR511310 (TV)	TV	111
EUR511310 (VCR)	VCR	201
EUR51140	TV	102
EUR51142	TV	102
EUR51143	TV	102
EUR51144	TV	103
EUR51169	TV	101
EUR51169/II	TV	102
EUR51200	TV	102
EUR51203	TV	102
EUR51204	TV	102
EUR51207	TV	102
EUR51210	TV	102
EUR51241	TV	102
EUR51246	TV	102
EUR51253	TV	102
EUR51805	TV	103
EUR51851	TV	103
EUR51903	TV	103
EUR51912	TV	103
EUR51916	TV	103
EUR51917 (TV)	TV	103
EUR51917 (VCR)	VCR	201
EUR51918 (TV)	TV	103
EUR51918 (VCR)	VCR	201
EUR51920	TV	103
EUR51921	TV	103
EUR51921 (VCR)	VCR	201
EUR51923	TV	103
EUR51931	TV	103
EUR51940	TV	103

Модель	Устр-во	Код
EUR51970 (TV)	TV	103
EUR51970 (VCR)	VCR	201
EUR51971	TV	103
EUR51973 (TV)	TV	103
EUR51973 (VCR)	VCR	201
EUR51974	TV	103
EUR51975	TV	103
EUR51976	TV	103
EUR51977	TV	103
EUR5370	TV	102
EUR571100	VCR	201
EUR571110	VCR	201
EUR571113	VCR	201
EUR571116	VCR	201
EUR571118	VCR	201
EUR571460	VCR	201
EUR57501	VCR	201
EUR57507	VCR	201
EUR57509	VCR	201
EUR57510	VCR	201
EUR61550	TV	103
EUR62531	TV	102
EUR64028	TV	102
EUR64102B	TV	102
EUR64150	TV	103
EUR641550	TV	103
EUR641584	TV	103
EUR641952	TV	103
EUR642160	AUX, CD, DVD	311
EUR642182	AUX, CD, DVD	322
EUR643821	AUX, CD, DVD	311
EUR643826	AUX, CD, DVD	311
EUR644660	TV	103
EUR644661	TV	103
EUR644666	TV	103
EUR644861	AUX, CD, DVD	311
EUR64510	TV	103
EUR64531	TV	102
EUR645408	TV	103
EUR64541	TV	102
EUR64542	TV	102
EUR64542/31	TV	102
EUR64546A	TV	102
EUR645645	TV	103
EUR64564A	TV	102

Модель	Устр-во	Код
EUR64564B	TV	102
EUR64598	TV	102
EUR646525	TV	107
EUR646526	TV	107
EUR646530	TV	107
EUR646552	AUX, CD, DVD	311
EUR646921 (TV)	TV	103
EUR646921 (VCR)	VCR	201
EUR646925	TV	103
EUR646931	TV	103
EUR646932	TV	103
EUR648251	AUX, CD, DVD	311
EUR648280	AUX, CD, DVD	311
EUR7502X30	AUX, CD, DVD	301
EUR7502XE0	AUX, CD, DVD	301
EUR7615LD0 (DVD)	AUX, CD, DVD	305
EUR7615LD0 (TV)	TV	103
EUR7615LD0 (VCR)	VCR	204
EUR7617020	AUX, CD, DVD	303
EUR7621020	AUX, CD, DVD	303
EUR7622X20 (CD)	AUX, CD, DVD	317
EUR7622X20 (DVD)	AUX, CD, DVD	303
EUR7622X20 (RECEIVER)	AUX, CD, DVD	316
EUR7622X20 (TAPE)	VCR	205
EUR7622X20 (TV)	TV	103
EUR7622X20 (VCR)	VCR	204
EUR7623010	AUX, CD, DVD	318
EUR7623X80	AUX, CD, DVD	301
EUR7623X80 (TV)	TV	103
EUR7623X80 (VCR)	VCR	201
EUR7623X90	AUX, CD, DVD	301
EUR7623X90 (TV)	TV	103
EUR7623X90 (VCR)	VCR	201
EUR7628010 (DVD)	AUX, CD, DVD	303
EUR7628010 (TV)	TV	110
EUR7628010 (VCR)	VCR	201
EUR7631110	AUX, CD, DVD	303
EUR7631230	AUX, CD, DVD	319
EUR7635040 (DVD)	AUX, CD, DVD	303
EUR7635040 (TV)	TV	111
EUR7635040 (VCR)	VCR	201
EUR7651030A (DVD)	AUX, CD, DVD	303
EUR7651030A (TV)	TV	108
EUR7651030A (VCR)	VCR	201
EUR7651120 (DVD)	AUX, CD, DVD	303

* По каталогу «IRC»

Коды пульта IRC 12 F

Коды к TV, VCR, AUX устройствам марки PANASONIC

Модель	Устр-во	Код
EUR7651120 (TV)	TV	108
EUR7651120 (VCR)	VCR	201
EUR7659YK0 (DVD)	AUX, CD, DVD	303
EUR7659YK0 (TV)	TV	103
EUR7662YE0	AUX, CD, DVD	315
EUR7662YK0	AUX, CD, DVD	314
EUR7710020	AUX, CD, DVD	302
EUR7717010	TV	109
EUR7717030	TV	109
EUR7717040R	TV	109
EUR7717060	TV	109
EUR7722KJ0 (DVD PLAYER)	AUX, CD, DVD	319
EUR7722KJ0 (DVD RECORDER)	AUX, CD, DVD	303
EUR7722KJ0 (RECEIVER)	AUX, CD, DVD	320
EUR7722KJ0 (TUNER)	AUX, CD, DVD	316
EUR7722KJ0 (TV)	TV	103
EUR7722KJ0 (VCR)	VCR	201
EUR7722X30 (AUX)	AUX, CD, DVD	314
EUR7722X30 (VCR)	VCR	201
MODEL501U50	AUX, CD, DVD	309
N20AYB000027 (DVD)	AUX, CD, DVD	303
N20AYB000027 (TV)	TV	108
N20AYB000027 (VCR)	VCR	201
N2QADC000011	AUX, CD, DVD	309
N2QAGB000021	AUX, CD, DVD	310
N2QAGB000036	TV	103
N2QAGB000040	TV	109
N2QAHB000047	AUX, CD, DVD	302
N2QAHB000048	AUX, CD, DVD	311
N2QAHB000051	AUX, CD, DVD	302
N2QAJB000055	AUX, CD, DVD	308
N2QAJB000057	AUX, CD, DVD	308
N2QAJB000074	AUX, CD, DVD	310
N2QAJB000075	AUX, CD, DVD	307
N2QAJB000076	AUX, CD, DVD	306
N2QAJB000080 (DVD)	AUX, CD, DVD	303
N2QAJB000080 (TV)	TV	109
N2QAJB000080 (VCR)	VCR	201
N2QAJB000084 (DVD)	AUX, CD, DVD	303
N2QAJB000084 (TV)	TV	109
N2QAJB000084 (VCR)	VCR	201
N2QAJB000108 (DVD)	AUX, CD, DVD	303
N2QAJB000108 (TV)	TV	109
N2QAJB000108 (VCR)	VCR	201
N2QAJB000117	AUX, CD, DVD	310

Модель	Устр-во	Код
N2QAJB000118	AUX, CD, DVD	306
N2QAJB000138	AUX, CD, DVD	313
N2QAJB000138 (TV)	TV	103
N2QAJB000147	AUX, CD, DVD	314
N2QAJB000161 (DVD)	AUX, CD, DVD	303
N2QAJB000161 (TV)	TV	109
N2QAJB000161 (VCR)	VCR	201
N2QAKB000057 (DVD)	AUX, CD, DVD	303
N2QAKB000057 (TV)	TV	111
N2QAKB000057 (VCR)	VCR	201
N2QAKB000077 (DISC)	AUX, CD, DVD	304
N2QAKB000077 (TV)	TV	103
N2QAKB000031	VCR	201
N2QAYB000011	AUX, CD, DVD	319
N2QAYB000094	AUX, CD, DVD	314
N2QAYB000096	AUX, CD, DVD	314
N2QAYB000113	AUX, CD, DVD	315
N2QAYB000125 (DVD)	AUX, CD, DVD	303
N2QAYB000125 (TV)	TV	103
N2QAYB000205	AUX, CD, DVD	314
N2QAYB000240 (DVD)	AUX, CD, DVD	303
N2QAYB000240 (TV)	TV	108
N2QAYB000240 (VCR)	VCR	201
N2QAYB000328 (DVD)	AUX, CD, DVD	303
N2QAYB000328 (TV)	TV	112
N2QAYB000423	AUX, CD, DVD	306
N2QAYB000572 (DVD/VCR)	AUX, CD, DVD	303
N2QAYB000572 (TV)	TV	112
N2QAYB000722	AUX, CD, DVD	304
N2QAYB000722 (TV)	TV	103
N2QAYB000752 (DVD)	AUX, CD, DVD	303
N2QAYB000752 (TV)	TV	112
N2QAYB000863	TV	112
N2QAYB000984	AUX, CD, DVD	321
N2QAYB000984-1	AUX, CD, DVD	321
N2QAYZ000005	AUX, CD, DVD	314
N2QAYZ000006	AUX, CD, DVD	314
RAK-RX135WH	AUX, CD, DVD	311
RAK-RX311WM	AUX, CD, DVD	311
RAK-RX928WK	AUX, CD, DVD	311
RAK-RX929WK	AUX, CD, DVD	311
RAK-RX942WK	AUX, CD, DVD	311
RAK-RX949WK	AUX, CD, DVD	311
RAK-SC001WH	AUX, CD, DVD	311
RC48125	TV	115

Модель	Устр-во	Код
SBAR20026A	TV	103
TC150E	TV	105
TNP107318AA	TV	102
TNQ10448	TV	103
TNQ104644D13	TV	103
TNQ10481	TV/VCR	106
TNQ1408	TV	102
TNQ1410	TV	102
TNQ1411	TV	102
TNQ14112	TV	102
TNQ1412	TV	102
TNQ1416	TV	102
TNQ1417	TV	101
TNQ1418	TV	101
TNQ1420	TV	102
TNQ1426	TV	101
TNQ1442	TV	102
TNQ1455	TV	102
TNQ1482	TV	102
TNQ1487/1	TV	102
TNQ16213	TV	101
TNQ1628	TV	102
TNQ16291	TV	101
TNQ1633	TV	101
TNQ1634	TV	101
TNQ1672	TV	101
TNQ1684	TV	101
TNQ1E2607	TV	102
TNQ1E2611	TV	102
TNQ2403	TV	102
TNQ2442	TV	102
TNQ2443	TV	102
TNQ2447	TV	102
TNQ2448	TV	102
TNQ2450	TV	101
TNQ2459	TV	102
TNQ2498	TV	102
TNQ2607	TV	102
TNQ2611	TV	102
TNQ2637	TV	102
TNQ2640	TV	102
TNQ4G0401	TV	103
TNQ4G0402	TV	103
TNQ4G0403	TV	103
TNQ611	TV	102

Модель	Устр-во	Код
TNQ696	TV	102
TNQ70446	TV	103
TNQ70465	TV	102
TNQ8E0401	TV	102
TNQ8E0402	TV	102
TNQ8E0403	TV	102
TNQ8E0404	TV	102
TNQ8E0405	TV	102
TNQ8E0406	TV	102
TNQ8E0407	TV	102
TNQ8E0408	TV	102
TNQ8E0409	TV	102
TNQ8E0410	TV	102
TNQ8E0411	TV	102
TNQ8E0412	TV	102
TNQ8E0413	TV	102
TNQ8E0414	TV	102
TNQ8E0415	TV	102
TNQ8E0417	TV	102
TNQ8E0418	TV	102
TNQ8E0419	TV	102
TNQ8E0421	TV	102
TNQ8E0422	TV	102
TNQ8E0423	TV	102
TNQ8E0428	TV	103
TNQ8E04281	TV	102
TNQ8E0430	TV	102
TNQ8E0432	TV	102
TNQ8E0433	TV	103
TNQ8E0434	TV	102
TNQ8E0435	TV	103
TNQ8E0436	TV	103
TNQ8E0438	TV	102
TNQ8E0439	TV	102
TNQ8E0440	TV	102
TNQ8E0441	TV	102
TNQ8E0442	TV	102
TNQ8E0443	TV	103
TNQ8E0445	TV	103
TNQ8E0446	TV	103
TNQ8E0447	TV	103
TNQ8E0448	TV	103
TNQ8E0449	TV	103
TNQ8E0453	TV	103
TNQ8E0454	TV	103

Модель	Устр-во	Код
TNQ8E0461	TV	103
TNQ8E0499	TV	103
TNQ8E0835	TV	102
TNQE007	TV	103
TNQE037	TV	103
TNQE038	TV	103
TNQE070	TV	103
TNQE095	TV	103
TNQE097	TV	103
TNQE132	TV	103
TNQE133	TV	103
TNQE134	TV	103
TX-24DR300	TV	113
TZS1EK001	TV	102
TZZ00000007A	TV	108
VEQ0393	VCR	203
VEQ0413	VCR	203
VEQ0427	VCR	203
VEQ0445	VCR	203
VEQ0460	VCR	203
VEQ0461	VCR	203
VEQ0499	VCR	203
VEQ0507	VCR	203
VEQ0508	VCR	203
VEQ0512	VCR	203
VEQ0528	VCR	203
VEQ0528 (TV)	TV	102
VEQ0530A	VCR	203
VEQ0531	VCR	203
VEQ0534	VCR	203
VEQ0540	VCR	203
VEQ0541	VCR	203
VEQ0551	VCR	203
VEQ0552	VCR	203
VEQ0570	VCR	203
VEQ0573	VCR	203
VEQ0574	VCR	203
VEQ0584	VCR	203
VEQ0615	VCR	203
VEQ0616	VCR	203
VEQ0677	VCR	203
VEQ0684	VCR	203
VEQ0685	VCR	203
VEQ0686	VCR	203
VEQ0687	VCR	203

Модель	Устр-во	Код
VEQ0692	VCR	203
VEQ0696	VCR	203
VEQ0701	VCR	203
VEQ0703	VCR	203
VEQ0709	VCR	203
VEQ0710	VCR	203
VEQ0719	VCR	203
VEQ0720	VCR	203
VEQ0721	VCR	203
VEQ0778	VCR	203
VEQ0795	VCR	203
VEQ0819	VCR	203
VEQ0836	VCR	203
VEQ0922	VCR	203
VEQ0946	VCR	203
VEQ0954	VCR	203
VEQ0955	VCR	203
VEQ1115	VCR	203
VEQ1145	VCR	203
VEQ1166	VCR	203
VEQ1251	VCR	203
VEQ1261	VCR	203
VEQ1302	VCR	201
VEQ1466	VCR	203
VEQ1477	VCR	203
VEQ1562	VCR	201
VEQ1566	VCR	201
VEQ1576	VCR	201
VEQ1597	VCR	201
VEQ1655	VCR	201
VEQ1681	VCR	201
VEQ1691	VCR	201
VEQ1914	AUX, CD, DVD	303
VEQ1962	VCR	201
VEQ1992	VCR	201
VEQ2017 (DVD)	AUX, CD, DVD	303
VEQ2110	AUX, CD, DVD	303
VEQ2136	VCR	201
VEQ2138M	VCR	201
VEQ2335	VCR	201
VEQ2337	VCR	201
VEQ2380	AUX, CD, DVD	303
VSQ0305	VCR	203
VSQ0359	VCR	203
VSQ0372	VCR	203

Модель	Устр-во	Код
VSQ0380	VCR	203
VSQ0393	VCR	203
VSQ0462	VCR	203
VSQ1497	VCR	201

Коды к TV устройствам различных марок

Марка	Код
AEG	544
AIWA	502, 503, 523, 528, 579, 634, 678, 706, 710, 712, 716
AKAI	501, 503, 512, 516, 520, 522, 524, 525, 537, 538, 540, 545, 546, 547, 550, 571, 572, 582, 583, 584, 585, 596, 598, 608, 613, 626, 652, 673, 691, 704, 708, 711, 722
AKIRA	511, 514, 516, 522, 524, 525, 537, 538, 541, 545, 547, 556, 577, 586, 594, 597, 598, 601, 623, 626, 629, 631, 649, 666, 680, 689, 690, 693, 699, 717
AMCOL	501, 525, 545
ANITECH	501, 525, 616, 726
ATLANTA	501
AVEST	537, 538, 539
BBK	522, 551, 594, 597, 684, 701
BEKO	525, 530, 535, 559, 723
BIGSTON	501, 503
BLAUPUNKT	512
BORK	525, 547, 646
BRAND	711
BROKSONIC	501
CAMERON	538, 550, 567, 675, 697, 702
CASIO	529, 705, 706
CHANGHONG	516, 596, 642
CLATRONIC	501, 545, 559, 571
CONTEC	501, 603, 604, 613
CORTLAND	644
CROWN	501, 503, 511, 524, 525, 530, 571
DAEWOO	501, 508, 518, 520, 525, 526, 536, 538, 539, 546, 565, 571, 576, 598, 613, 685, 687, 692
DARTLAND	501
DAYTRON	501
DEXP	516, 579, 596, 684, 702
DIGITAL	547
DISTAR	562, 616
DNS	596, 702, 708
DOFFLER	684, 708
ELEKTA	501, 503, 520, 525, 527, 615
ELEKTRONIKA	583
ELENBERG	538, 545, 550, 565, 567, 579, 581, 644, 655, 676, 683, 717
EPLUTUS	537, 644, 677, 682, 697, 724
ERC	537, 631
ERISSON	511, 514, 516, 525, 526, 537, 538, 541, 550, 556, 561, 568, 586, 596, 599, 623, 626, 629, 631, 711, 712, 714
EVGO	538, 540, 630
FINLUX	501, 511, 583, 589, 608
FUJITSU	544, 573
FUNAI	501, 502, 503, 504, 505, 525, 537, 538, 581, 603
FUSION	596, 642, 699, 705, 706
GBS	501, 520, 525, 571, 583
GENERAL	537, 556
GOLD STAR - LG	501, 512, 518, 525, 527, 559, 570, 583, 584, 589, 609, 613, 642, 706, 712
GRUNDIG	501, 512, 525, 606, 662, 718, 719
HAIER	518, 526, 561, 574, 657, 667, 669, 707
HAPPY	501
HARPER	706, 712
HCM	501, 503, 525
HELIX	701, 702, 708
HIL	503
HISENSE	525
HITACHI	501, 515, 518, 522, 525, 537, 544, 548, 554, 578, 584, 587, 588, 604, 613, 640
HORIZONT	525, 540, 545, 550, 559, 583, 664, 672
HPC	546
HYUNDAI	516, 518, 522, 525, 526, 537, 538, 540, 541, 546, 547, 550, 556, 580, 596, 597, 599, 626, 642, 648, 650, 655, 705, 711, 712, 714, 717
INNO-HIT	501, 525, 571
IRBIS	596, 714
IVA (MBA)	537, 561, 637
IZUMI	516, 537, 596, 663, 691, 695, 703, 705, 711
JINLIPI	537, 637
JVC	513, 515, 593, 604
KAMACROWN	571
KANSAI	501, 525
KENSTAR	516
KITT	503, 613, 616, 726
KONKA	537, 538, 560, 561, 581, 616, 626, 717
KRONMARK	596
LOEWE	542, 709
MEDION	525
MINISUBISHI	501, 520, 522, 525, 604, 611, 722
MIYOTA	537, 644, 656
MTC	501, 583
MULTITECH	501, 525
MYSTERY	516, 537, 597, 642, 650, 653, 701, 702, 708
NAD	518, 525
NASH	537
NEC	501, 517, 520, 526, 552, 604, 625, 722
NESCO	501, 525
NESONS	708
NOKIA	519, 584, 610, 614, 616
NOVA	501, 616, 638
NOVEX	516, 546, 599
OMEGA	501, 571
ONIDA	513
ONIKS	516, 525, 537, 545, 546, 547, 680
ONWA	524, 525
OPERA	644, 666, 682
ORBITA	635
ORION	501, 503, 506, 507, 509, 516, 525, 528, 537, 591, 603, 617, 619, 627, 641, 643, 664, 715, 720, 722
ORSON	526, 537
PANASONIC	512, 531, 532
PHANTOM	644
PHILIPS	501, 511, 524, 525, 540, 549, 628, 639, 707
PHOENIX	613
PHOENIX GOLD	708
PIONEER	548, 555, 566, 575, 647, 666
PIXELVIEW	525

Коды к TV устройствам различных марок

Марка	Код
POLAR	525, 526, 537, 538, 540, 543, 546, 547, 581, 596, 599, 663, 664, 683, 703, 711, 717
POLAROID	525
PRESTIGIO	564, 656
PRIMA	522, 547
PROLOGY	653, 655
RADUGA	525, 545, 569, 583
RAINFORD	525, 537, 544, 545
RECOR	511, 525
REKORD	520, 525, 526, 537, 538, 539, 545, 547, 725
RFT	535, 618
ROADSTAR	501, 508, 525, 571
ROLSEN	503, 516, 525, 537, 538, 540, 543, 546, 564, 576, 592, 594, 596, 649, 656, 669, 684, 714
ROVERSCAN	662
ROYAL	501, 503, 525, 616
RUBIN	504, 516, 525, 537, 546, 583, 619, 665, 714
SABA	509, 510, 521, 602
SALORA	584
SAMSUNG	501, 525, 526, 529, 563, 580, 595, 596, 608, 612, 613, 622, 641, 645, 688, 723
SANSUI	524, 525, 538, 556, 695
SANYO	501, 519, 522, 525, 530, 540, 544, 550, 558, 604, 608, 610, 618, 621, 696, 722
SATURN	702, 708
SCARLETT	541, 545
SCHNEIDER	525, 540, 571
SETRO	520
SHARP	526, 544, 548, 604, 707, 721
SHERION	616
SHIVAKI	501, 503, 508, 516, 518, 520, 525, 526, 527, 536, 538, 539, 540, 545, 546, 547, 550, 556, 580, 583, 585, 596, 599, 609, 619, 630, 632, 635, 636, 643, 644, 664, 681, 694, 708
SIEMENS	512, 525, 660, 726
SIESTA	501, 537, 637
SILELIS	613
SILVER	633
SITRONICS	503, 516, 525, 537, 538, 540, 543, 545, 594, 626, 629, 661, 671, 672, 674, 679, 680, 686
SOKOL	516, 525, 547, 635
SONY	533, 604, 659, 722
SPEKTR	525, 538, 668
START	525, 537, 545, 546, 547
STASSFURT	535, 618
STINOL	525
SUPER	537, 561, 644, 653, 654, 655, 666, 677, 682, 724
SUPER GENERAL	537
SUPRA	501, 508, 516, 518, 520, 522, 525, 527, 529, 536, 537, 541, 563, 579, 580, 596, 597, 612, 642, 643, 687, 690, 705, 706, 712, 713
SUZUKI	516, 556
SVEN	574
TCL	521, 538, 540, 642
TEAC	525
TECHNICS	531, 537, 538
TECHNO	501, 525, 538, 544, 546, 556, 568, 579, 596, 599, 644, 664, 703
TECKTON	522, 582, 601, 669, 670
TELEFUNKEN	510, 521, 561, 590, 602, 605, 642, 708, 712, 714
TELEVISION	501, 525, 616
THOMSON	509, 510, 521, 550, 579, 602, 624, 642, 702
TOSHIBA	516, 544, 553, 604, 651
TRONY	516, 525, 537, 538, 550, 574, 657
TVT	511, 525, 530, 535, 538, 583, 586, 620, 630, 723
UNITED	525
VARTA	642
VESTEL	525, 544, 556, 583, 619
VIEWSONIC	557, 698
VITA	547
VITEK	537, 650
VITYAS	525, 708
VOLNA (ВОЛНА)	635
VR	516, 537, 565, 598, 702, 714
WALTHAM	503, 509, 511, 583, 584, 607, 613
XORO	522, 526, 545
XPX	663
НЕИЗВЕСТНАЯ МАРКА	525, 546, 574, 596, 648, 656, 666, 711

Коды к SAT устройствам различных марок

Марка	Код
AIRTONE	968
ALFA GOLD	828
AMINO (СТРИМ)	829, 902
ARION	835
ARRIS	883, 963, 974
ASTON	811
BBK	931
BIG STAR	965
BIGSAT	839, 840, 903, 936
CADENA	958, 962
CONTINENT	886, 975
COSHIP	855
DAEWOO	872
D-COLOR	946, 961
DELTA SYSTEMS	985
DIGIFORS	946
DIVISAT	957, 958
D-LINK	923
DNS	950, 968
DR.HD	983
DRE	804, 888
DREAM	819
DUNE	927, 934
ECHOSPACE	862
EHOSTAR	808, 809, 822
ELTEX	987
EPLUTUS	961
EUROSKY	840, 981
EUROSTAR	863
EUSTON	825
EVO	965
GALAXY INNOVATIONS (GI)	878, 881, 908, 911, 912, 917, 924
GENERAL SATELLITE	804, 868, 888, 907, 933, 954
GLOBALTEQ	833
GLOBO	909, 915, 925, 935, 945, 956, 971, 973, 995, 999
GOLD STAR - LG	871
GOLDEN INTERSTAR	821, 841, 879, 918
GOLDEN MEDIA	847, 912
GOLDMASTER	911
HD BOX	847, 911
HITACHI	824, 832
HIVION	929
HOME	968
HOMECAST (ВОЛЯ)	820, 831, 836
HUAVEE	946
HUMAX	803, 804, 823, 848, 860, 861, 905, 949
HYUNDAI	968
ID DIGITAL	804
INTEK	984
INTERCROSS	988
INTRO	978
KAON	820, 949
KARTINA TV	934
KOSMOS	855, 856
LANS	970
LOCUS	946
LUMAX	852, 873, 907, 913, 965, 994
MAG	988
MEDIA COM	825
MOTOROLA	883, 884, 901, 974
MYSTERY	910, 997
NDS	814
NEXT	864
NOKIA	813
NOT	941
ONLIME	905
OPENBOX	827, 835, 869, 870, 911, 990, 991
OPENTECH	972
OPENTEL	865
OPTICUM	971
ORBITA	946, 995
ORIEL	887, 926, 941, 948, 955, 986
PACE	801, 932, 953
PATIX DIGITAL	946, 967, 992
PAUXIS	842, 859
PERFEO	960, 981
PHILIPS	857, 899
PIONEER	851
POLAR	858
REFLECT	959
REXANT	977
RIKOR	916, 947
ROLSEN	930, 941, 942, 961
SAGEMCOM	906
SAMSUNG	803, 810, 812, 854
SEG	818
SELENGA	946
SEZAM	882
SKY VISION	952, 966, 977, 982
SKYMASTER	830
SKYWAY	911
SKYWORTH	989
STAR	833
STAR TRACK	826, 835, 943
STARNET	885
STRONG	805, 806, 815, 816, 817, 828, 830, 914
SUNNIWELL	875
SUPERBOX	903

Коды к SAT устройствам различных марок

Марка	Код
SUPERMAX	821, 866, 880, 924
SUPRA	950, 960, 962
TECHNOSAT	852, 853
TEL-ANT	960
TELEFUNKEN	961, 968
TESLER	926
TOP BOX	965
TOPFIELD	837, 838, 877, 891
TOSHIBA	876
TV STAR	967
TVJET	946, 976
VESTEL	820, 824
VU+	919, 920, 921, 922
WORLD VISION	821, 928, 951, 952, 961, 968
XSAT	801, 807
XSAT (НТВ+)	801, 802, 807, 906, 972, 984, 998
YUXING	904
ZYXEL	874
АРБАКОМ	967
БИЛАИН	883, 884, 901, 923
ВОЛГАТЕЛЕКОМ	842, 843, 844, 845, 846, 847, 849, 850, 858, 867
DOM.RU	820, 905
ДОМОЛИНК	874, 904
МТС	829, 855, 902, 964, 974, 979, 980, 989, 993
НЕИЗВЕСТНАЯ МАРКА	834, 835, 842, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 903, 904, 937, 938, 939, 940, 944, 945, 969, 971, 978, 996
РОСТЕЛЕКОМ	874, 904, 923, 963, 988, 993
СИГНАЛ	867, 968
ТВОЁ ТВ	820
ТЕЛЕКАРТА	867, 909, 973
ТЕЛЕЦИФРА	968

Функции кнопок пульта IRC 12 F к TV устройствам

Кнопки пульта IRC 12 F	Код 101		Код 102		Код 103		Код 104		Код 105	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD			I-II	⊕ +	PIP ACTION	⊕ +	AI			
AUDIO ; NICAM			AUDIO		A ; S	AUDIO SWAP	I-II ; √			
VIDEO ; SYS			VIDEO	SYSTEM	V ; P	SYSTEM	⊞ ; RESET			
⊞ ; ZOOM			⊞ ; REVEAL		ASPECT	SELF ASPECT	TXT MIX ; MIX			
▼ ; TV	TV		TV	⊖ -	TV	⊖ -	CH SEARCH			
⊞ ; LOCK	⊞		STORE		PIP	⊞ ; LIST STORE	PIP			
▲ ; FAV			NORM ; N	RESET	STILL	⊞ ; RESET	STILL			
⊞			AV..		FAVORITE	F.P.	⊞ ; LIST STORE			
⊞	⊞		⊞		⊞ ; POWER	100Hz/PROGRE	⊞		⊞	
AV			TV/AV		TV/AV	AV SELECT	TV/AV		AV	
⊞	⊞		⊞		⊞	V.H.BASS	⊞		⊞	
MENU					MENU ; MAIN MENU	MODE	FEATURE MENU			
EXIT			DISPL. CANCEL		PNR	P.AI	MODE			
▲	⊞ +		+	⊞ +	UP ; ▲	+	▲			
◀	⊞ -	⊞ -	⊞-	⊞ -	LEFT ; ◀	⊞-	◀			
OK					N	R-TUNE	N		OK	
▶	⊞ +	⊞ +	⊞+	⊞ +	RIGHT ; ▶	⊞+	▶			
▼	⊞ - ; UP DATE		-	⊞ -	DOWN ; ▼	-	▼			
⊞ ; SETUP	WHITE ; 1		⊞		PICTURE MENU	MOOD LIGHT	PICTURE MENU		⊞	
⊞ ; TITLE			⊞		SOUND MENU	⊞ ; SURROUND	SOUND MENU			
⊞			⊞		⊞ ; TXT	CH SEARCH	TV/TEXT		⊞	
GUIDE			ROTATE		TV/TEXT	CH SEARCH	F.P.			
⊞			⊞	ALARM	⊞	WAKE UP	⊞		⊞	
⊞			⊞		⊞ ; LIST/F.TEXT	⊞	⊞ ; LIST/F.TEXT		TINT	
RED ; ●	13 ; BOTT.		RED	⊞ -	RED	⊞ -	RED		⊞	
GREEN ; ▨	14		GREEN	⊞+ ; LIST STORE	GREEN	⊞+	GREEN		⊞	
YELLOW ; ◀	15 ; TP OFF		YELLOW	⊞	YELLOW	⊞ -	YELLOW			
BLUE ; ▨	16 ; TP ON		BLUE	⊞R	BLUE	⊞ +	BLUE			
⊞	⊞		⊞		⊞	MULTI WINDOW	⊞			
⊞			P/C		P/C	CHANGE	CHANGE		P/C	
VOL -	⊞ -		⊞ -	⊞- ; LIST	⊞ - ; -	⊞ -	⊞ -		⊞ -	
VOL +	⊞ +		⊞ +	⊞ +	⊞+ ; +	⊞ +	⊞ +		⊞ +	
CH V ; ◀	P -		P -		P - ; V	⊞ -	⊞ -		P -	
CH ▲ ; ▶	P +		P +		P + ; ▲	⊞ +	⊞ +		P +	
⊞ ; SAT	11 ; FULL		-/-		-/-	HI ; √	-/-			
CLEAR ; X	12 ; TOP		CS		⊞ ; CANCEL	GAME	⊞ ; DISP. CANCEL			
◀ ; ●			⊞		⊞ ; TIME TEXT	⊞	⊞ ; TIME TEXT			
▶ ; i			⊞		⊞ ; INDEX	⊞+ ;	⊞ ; INDEX			
▶ ; ?			⊞		⊞ ; REVEAL	⊞R	⊞ ; REVEAL			
⊞ ; X			⊞		⊞ ; HOLD	⊞ -	⊞ ; HOLD		STOP	
⊞ ; ⊞			⊞		⊞ ; F/T/B	STROBE	⊞ ; F/T/B			
1, 2, ... 9, 0	1, 2, ... 9, 10		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 12 F к TV устройствам

Кнопки пульта IRC 12 F	Код 106		Код 107		Код 108		Код 109		Код 110	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	KARAOKE				SD ; SD CARD		⊞ ; SURROUND			
AUDIO ; NICAM	I-II ; ⊞		⊞ ; SURROUND		AUDIO		VII ; ⊞/⊞			
VIDEO ; SYS	MONITOR				LINK VIERA		⊞ ; F.P.			
⊞ ; ZOOM	COUNTER CALL		⊞ ; ASPECT		⊞ ; ASPECT		⊞ ; ASPECT		⊞ ; ASPECT	
▼ ; TV			PC		TV INPUT ; MODE		R-TUNE			
⊞ ; LOCK	MIC/ECHO		MULTI PIP		⊞ ; MULTI WINDOW		⊞ ; MULTI PIP			
▲ ; FAV	COUNTER RESET		N		N		NORMALIZE ; N		N	
⊞	SURROUND		R		FAVORITE		FAVORITE		⊞	
AV	⊞		⊞		⊞		⊞ ; POWER		⊞	
⊞	TV/AV		INPUT		AV INPUT ; TV/AV		TV/AV		TV/AV	
MENU	⊞		⊞		⊞ ; MUTE		⊞ ; MUTE		⊞	
EXIT	MAIN MENU	VCR MENU	⊞ ; SET UP		MENU		MENU		MENU	
▲	▲		▲		X ; EXIT	⊞ ; BACK/RETURN		CH ▲ ; ▲	▲	
◀	◀		◀		◀		VOL - ; ◀	⊞ -	⊞ -	
OK	N		■		OK		OK		OK	
▶	▶		▶		▶		VOL + ; ▶	⊞ +	⊞ +	
▼	▼		▼		▼		CH ▼ ; ▼	⊞ -	⊞ -	
⊞ ; SETUP	PICTURE MENU		⊞ ; PICTURE		OPTION		PIC MENU			
⊞ ; TITLE	SOUND MENU		⊞ ; SOUND		⊞ ; ▲ ; SRS		⊞ ; SOUND MENU			
⊞	KARAOKE MENU		SELECT		⊞ ; TEXT		⊞ ; TV/TEXT		⊞ ; TV/TEXT	
GUIDE	SP/LP		SWAP		GUIDE		⊞ ; F.P.		⊞ ; F.P.	
⊞	⊞	TIMER REC	⊞ ; OFF TIMER		⊞ ; OFF TIMER		⊞ ; OFF TIMER			
⊞	INTRO/INDEX		PICTURE POS./SIZE		F.P. ; ⊞		WAKE UP			
RED ; ●		● REC			RED	● ; DIRECT TV REC	RED		RED	● ; DIRECT TV REC
GREEN ; ▨	▨ ; F.ADV/SLOW	OTR			GREEN	● ; SD REC	GREEN		GREEN	
YELLOW ; ◀	TRACKING -				YELLOW		YELLOW		YELLOW	
BLUE ; ▨	TRACKING +				BLUE		BLUE		BLUE	
⊞	⊞		⊞		i		⊞ ; RECALL		⊞	
⊞			MOVE		⊞ ; LAST VIEW					
VOL -	⊞ -		VOL ⊞ -		VOL - ; ⊞ -		VOL - ; ◀	⊞ -	⊞ -	
VOL +	⊞ +		VOL ⊞ +		VOL + ; ⊞ +		VOL + ; ▶	⊞ +	⊞ +	
CH V ; ◀	CH -	INDEX ◀	▼		CH ▼ ; ▼		CH ▼ ; ▼	⊞ -	⊞ -	
CH ▲ ; ▶	CH +	INDEX ▶	▲		CH ▲ ; ▲		CH ▲ ; ▲	⊞ +	⊞ +	
⊞ ; SAT	-/-		-/-		⊞ ; STILL		-/-		-/-	
CLEAR ; X	C		C		C		C		C	
◀ ; ●	◀ REW				SUBPAGE	◀				
▶ ; i	▶ PLAY				⊞ ; INDEX	▶ /	⊞ ; INDEX ; CH SEA.		⊞ ; INDEX	
▶ ; ?	▶ FF				REVEAL	▶				
⊞ ; X	STOP				⊞ ; HOLD	■	⊞ ; HOLD ; STILL		⊞ ; HOLD	
⊞ ; ⊞	⊞ ; PAUSE/STILL				SIZE	▶ /				
1, 2, ... 9, 0	1, 2, ... 9, 0				1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 12 F к TV устройствам

Кнопки пульта IRC 12 F	Код 111		Код 112		Код 113		Код 114		Код 115	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	SD		VIERA TOOLS		▶▶; LIST				⌂	
AUDIO; NICAM	Ⓢ; SURROUND		Ⓢ; SURROUND		L/R		I/II		LANG.	
VIDEO; SYS	100Hz/PROGRE		3D				AD		Ⓢ	
Ⓢ; ZOOM	Ⓢ; ASPECT		Ⓢ; ASPECT		16:9; WIDE	ZOOM	ZOOM		←□→	
▼; TV	PC		TV INPUT	DIRECT TV REC	⏏; HOLD				ⓈTV	
⏏; ↵	Ⓢ; MULTI PIP; Ⓢ		Ⓢ; STTL		AI				Ⓢ	
Ⓢ; LOCK	N		N							
▲; FAV	R-TUNE		INTERNET		FAV		FAV		* / Ⓢ	
Ⓢ	Ⓢ		Ⓢ		Ⓢ		Ⓢ		Ⓢ	
AV	TV/AV		AV INPUT	SD HC	SOURCE; AV SEL.		SOURCE		Ⓢ	
Ⓢ	Ⓢ		Ⓢ; MUTE		Ⓢ; MUTE		Ⓢ		Ⓢ	
MENU	MENU; Ⓢ; SET UP		MENU	VIERA LINK	MENU		MENU		MENU	
EXIT	EXIT		X; EXIT				EXIT		EXIT	
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀		◀		◀	
OK	OK		OK		OK; N		OK		OK	
▶	▶		▶		▶		▶		▶	
▼	▼		▼		▼		▼		▼	
*; SETUP	F; □; PICTURE		HOME		SMART P; PICTURE		HOME		Q.MENU	
♪; TITLE	♪; SOUND		Ⓢ; BACK/RETURN		SMART S; SOUND		NETFLIX		BACK	
Ⓢ	Ⓢ; TV/TEXT	STR	Ⓢ; TEXT		Ⓢ; TTX		TEXT		Ⓢ	
GUIDE	Ⓢ; F.P.		GUIDE		EPG		GUIDE		NETFLIX	
Ⓢ	Ⓢ		APPS		F1		Ⓢ		Ⓢ	
Ⓢ	I/II; Ⓢ/Ⓢ		OPTION		Ⓢ		SUBTITLE		Ⓢ	
RED; ●	RED	●; DIRECT TV REC	RED	●	RED	REC	RED; R		RED	●
GREEN; ▶▶	GREEN	●; SD REC	GREEN		GREEN; SUBTITLE		GREEN; G		GREEN	
YELLOW; ◀◀	YELLOW		YELLOW		YELLOW; FAV		YELLOW; Y		YELLOW	
BLUE; ▶▶	BLUE		BLUE		BLUE; EPG		BLUE; B		BLUE	
Ⓢ	Ⓢ; i		i		INFO; Ⓢ		INFO		i	
Ⓢ	?; HELP		Ⓢ; LAST VIEW		Ⓢ		BACK		Ⓢ	
VOL -	Ⓢ		Ⓢ		VOL -; Ⓢ		VOL -		V -	
VOL +	Ⓢ		Ⓢ		VOL +; Ⓢ		VOL +		V +	
CH V; ◀◀	V		V	◀◀	CH -	◀◀; HOLD	P V		P -	
CH ▲; ▶▶	▲		▲	▶▶	CH +	▶▶; LIST	P ▲		P +	
+; SAT	-/-		?; eHELP				LIST		ⓈTV	
CLEAR; X	C		X; EXIT						Ⓢ	
◀◀; Ⓢ	Ⓢ; TIME TEXT		◀◀		◀◀; LANGUAGE		◀◀; REVEAL		◀◀	
▶▶; i	Ⓢ; INDEX; CH SEAR.		▶▶	Ⓢ; INDEX	▶▶; INDEX	INDEX	▶▶; INDEX	INDEX	▶▶	
▶▶; ?	Ⓢ; REVEAL		▶▶		▶▶; RADIO	REVEAL	▶▶; HOLD	REVEAL	▶▶	
■; X	Ⓢ; HOLD; STILL		■	Ⓢ; HOLD	■; REVEAL	HOLD	■	HOLD	■	
Ⓢ; Ⓢ	Ⓢ; F/T/B		Ⓢ		Ⓢ; ZOOM		Ⓢ		Ⓢ	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 12 F к VCR устройствам

Кнопки пульта IRC 12 F	Код 201		Код 202		Код 203		Код 204		Код 205	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	CH ▲	▲			Ⓢ		OUTPUT VHS/DVD			
AUDIO; NICAM	AUDIO OUT; SOUND	SAP/Hi-Fi			AUDIO		AUDIO			
VIDEO; SYS	VIDEO/TV; VCR/TV	VCR; VTR			VPS		INPUT SELECT			
Ⓢ; ZOOM	G-CODE	AUTO TRACKING			X2		DUBBING			
▼; TV	CH ▼	▼			Ⓢ					
⏏; ↵	SEARCH	M; ZERO STOP			PIP	INTRO SCAN				
Ⓢ; LOCK	COUNTER RESET	MEMORY			RESET	MEMO S.; LOCK	CANCEL/RESET			
▲; FAV	TIMER REC; EJECT	CLOCK/COUNTER			STROB					
Ⓢ	POWER; VCR Ⓢ		Ⓢ		Ⓢ		Ⓢ VHS/DVD	Ⓢ TV	Ⓢ	
AV	INPUT; INPUT SEL.						AV			
Ⓢ	-									
MENU	MENU	MARK			PROG; +/-		MENU			
EXIT	EXIT	SKIP			GO TO; TIME SEAR.					
▲	▲	ON +			+		▲			
◀	◀	OFF -			Ⓢ		◀			
OK	ENTER; OK	DISPLAY / ENTER					ENTER			
▶	▶	OFF +			Ⓢ		▶			
▼	▼	ON -			-		▼			
*; SETUP	PAL/MESECAM	PICTURE MODE			Ⓢ		PICTURE			
♪; TITLE	REPEAT	REPEAT			G		MUSIC w/PICTURE			
Ⓢ	CLOCK COUNT	MONITOR			CHECK PROG		PROG PLAY			
GUIDE	PROG./CHECK	P			NEXT		PROG/CHECK			
Ⓢ	SLEEP	TIME SEARCH			TIMER	Ⓢ	Ⓢ; TIMER			
Ⓢ	TAPE SELECT	NAVI			3P		NAVI			
RED; ●	● DIRECT REC	● REC	B DISC SIDE		MR	● REC	TRACK./V-LOCK -	● REC		
GREEN; ▶▶	▶▶; STILL ADV	SPEED; SP/LP	▶▶; A DISC SIDE		▶		TRACK./V-LOCK +			
YELLOW; ◀◀	REV	REV PLAY			REVER; ◀◀					
BLUE; ▶▶	FWD	SLOW; ▶▶			SLOW; ▶▶		JET REW ◀◀			
Ⓢ	DISPLAY	INDEX					DISPLAY			
Ⓢ	OSD	◀◀ JET REW			P/C		SPEED			
VOL -	TRACK./V-LOCK -	SLOW -; SEARCH -			-		VOLUME -			
VOL +	TRACK./V-LOCK +	SLOW +; SEARCH +			+		VOLUME +			
CH V; ◀◀	V; CH V	INDEX ◀◀	V; ◀◀ SKIP		▼		INDEX ◀◀			
CH ▲; ▶▶	▲; CH ▲	INDEX ▶▶	▲; ▶▶ SKIP		▲		INDEX ▶▶			
+; SAT	-/-	100			-/-	11	-/-			
CLEAR; X	ADD/DEL	CANCEL			C		CANCEL/RESET			
◀◀; Ⓢ	◀◀ (REW)	<<	◀◀		◀◀ (REW)	12	◀◀		◀◀	
▶▶; i	▶▶ (PLAY)	3x ▶▶	▶▶		▶▶ (PLAY)	13	▶▶		▶▶	
▶▶; ?	▶▶ (F.FWD)	>>	▶▶		▶▶ (F.FWD)	14	▶▶		▶▶	
■; X	■ (STOP)	DATE -	■		■ (STOP)	15	■		■	
Ⓢ; Ⓢ	Ⓢ (PAUSE); ▶▶	DATE +	Ⓢ		Ⓢ (PAUSE)	16	Ⓢ / ▶▶		Ⓢ	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 12 F к AUX устройствам

Кнопки пульта IRC 12 F	Код 301		Код 302		Код 303		Код 304		Код 305	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	DVD/CD	DVD/CD	DISC		PLAY SPEED	QUICK REPLAY	AUDIO;SECONDAR		OUTPUT VHS/DVD	
AUDIO ; NICAM	AUDIO	SUPER SURROUND	S.SOUND EQ		AUDIO		AUDIO		AUDIO	
VIDEO ; SYS	VCR	SEAT POSITION			PLAY MODE	EXT LINK			CINEMA	
☐ ; ZOOM	DISC	ZOOM			ZOOM				ZOOM	
▼ ; TV	TV	DIGITAL	TUNER ; BAND		DRIVE SELECT	● ; DIRECT TV REC		S		
☐ ; ↻	P.MEMORY	TEST	PRESET EQ		SHOW VIEW	ONE TOUCH MEM.		PIP	MUSIC w/PICTURE	
☐ ; LOCK	ANGLE				ANGLE ; PAGE	POSITION MEMORY		RE-MASTER	ANGLE/PAGE	
▲ ; FAV	AUX	DR COMP			▲ ; OPEN/CLOSE			▲ ; OPEN/CLOSE		
○	○		○		○ ; POWER			○	○ VHS/DVD	○ TV
AV	TV/AV	AV EFFECT	AUX		INPUT SELECT	AV LINK		SELECT DRIVE	AV	
✳	MUTING	VOICE MUTE	MUTING							
MENU	MENU	PLAY MODE	PLAY MODE		MENU ; PLAY LIST	FUNCTIONS		POP-UP MENU	PLAY LIST ; MENU	
EXIT	RETURN	ECHO	DEL		EXIT	MANUAL SKIP		EXIT	RETURN	
▲	▲		ALBUM →		▲			▲	▲	
◀	◀	b	CURSOR ←		◀ ; ◀			◀ ; ◀	◀	
OK	ENTER	CENTER FOCUS	ENTER		ENTER ; SEL.	FL SELECT		OK	ENTER	
▶	▶	#	CURSOR →		▶ ; ▶			▶ ; ▶	▶	
▼	▼		ALBUM ←		▼			▼	▼	
✳ ; SETUP	SETUP	CINEMA	DIMMER		SETUP	ADV. DISC REVIEW		FUNCTION MENU	SETUP	
♪ ; TITLE	TOP MENU	TUNER/BAND	TITLE SEARCH		TOP MENU ; TITLE	SOUND ENHANC.		TOP	T. MENU ; DIR. NAV.	
☐	DISC MANAGER	C.S.M	PROGRAM		PROGRAM	PROG/CHECK		OPTION	QUICK REPLAY	
GUIDE	KARAOKE ON/OFF	GROUP			OFF/ON SUBTITLE	GROUP		CAST ; INTERNET	DUBBING	
⏰	TIMER ; SLEEP	DELAY TIME	SLEEP	AUTO OFF	SLEEP	TIME/SLEEP/RET R.			⏰ ; TIMER	
☐	SUB TITLE	KARAOKE DISPLAY	CLOCK/TIMER		SUBTITLE	MARKER		STATUS	SUBTITLE	
RED ; ●	REPEAT	MIX 2ch	INTRO	○ PLAY/REC	REPEAT MODE	● ; REC		RED	PLAY MODE	
GREEN ; ▶	A-B REPEAT	PAGE	MARKER		A-B REPEAT	REC MODE		GREEN	POSITION MEMORY	
YELLOW ; ◀	MARKER	SUBWOOF. LEVEL	ALBUM ←		SLOW ◀	F REC		YELLOW	A.SRD	
BLUE ; ▶	SFC	SUBWOOF. LEVEL	ALBUM →		SLOW ▶	AV ENHANCER		BLUE	/ ▶	
☐	DISPLAY	FL DISPLAY	CD DISP		DISPLAY ; ON SCR.	Q. OSD ; STATUS		DISPLAY	DISPLAY	
☐	PRO LOGIC	SEQUENTIAL	REPEAT		RETURN	RANDOM		○ ; RETURN	REPEAT	
VOL -	VOLUME -	TV VOL -	VOL -		VOLUME -			VOL -	VOLUME -	
VOL +	VOLUME +	TV VOL +	VOL +		VOLUME +			VOL +	VOLUME +	
CH V ; ◀	CHANNEL ▼	SKIP ◀	◀ ; REW/V		CH ▼ ; TR./V.-L. -	◀ ; SKIP/INDEX		◀ ; SKIP	CH ▼	SKIP ◀
CH ▲ ; ▶	CHANNEL ▲	SKIP ▶	▶ ; A/FF		CH ▲ ; TR./V.-L. +	▶ ; SKIP/INDEX		▶ ; SKIP	CH ▲	SKIP ▶
+ ; SAT	≥10 / +	CH SELECT	≥10		≥10				≥10	
CLEAR ; X	CANCEL	DISC SKIP	CLEAR		CANCEL ; CLEAR ; *	DELETE		CANCEL	CANCEL/RESET	
◀ ; ○	◀ (SEARCH)		◀ ; REW/V		◀ SLOW/S. ; REW	A ; A.SRD ; V.S.S.		◀ SEARCH	SLOW/SEARCH ◀	
▶ ; i	▶ (PLAY)	QUICK REPLAY	CD ▶ / II	TAPE ▶	▶ ; PLAY	B ; BASS		▶ ; PLAY	▶	
▶ ; ?	▶ (SEARCH)		▶ ; A/FF		▶ SLOW/S. ; FF	C ; CINEMA		▶ SEARCH	SLOW/SEARCH ▶	
■ ; X	■ (STOP)		■ ; CLEAR		■ ; STOP	C ; CREATE CHAPT.		■ ; STOP	■	
; ⏸	(PAUSE)		CD ▶ / II		; PAUSE	D ; D.ENH		; PAUSE	/ ▶	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0			1, 2, ... 9, 0	1, 2, ... 9, 0	

Функции кнопок пульта IRC 12 F к AUX устройствам

Кнопки пульта IRC 12 F	Код 306		Код 307		Код 308		Код 309		Код 310	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	DISC ; CD MODE		CINEMA		DVD		D.ZOOM +		DISC	
AUDIO ; NICAM	AUDIO	S.WOOFER	AUDIO	SURROUND	AUDIO				S.SOUND EQ	
VIDEO ; SYS	PLAY MODE		PLAY MODE		DISC		VIDEO INPUT		PLAY MODE	
☐ ; ZOOM	ZOOM		ZOOM		ANGLE				ZOOM	
▼ ; TV	TUNER/BAN./FM/AM	CH.SEL	SUBWOOFER		TUNER/AUX (BAND)	TV/VIDEO	D.ZOOM -		TUNER/AUX;TUNER	
☐ ; ↻	P.MEMORY		P.MEMORY		TAPE/DECK 1/2				DIMMER	
☐ ; LOCK	TAPE ◀ ▶		ANGLE		POSITION MEMORY	KARAOKE EFFECT	FREEZE		TAPE ◀ ▶	
▲ ; FAV	PAGE		TUNER/AUX		▲				○	
○	○	TV ○	○	TV ○	○	TV ○	○ ; POWER		○	
AV	TV/VIDEO		TV/AV		VCR(EXT)/VDP(AUX)	AV EFFECT	RGB INPUT		AUX	
✳	MUTING	V.MUTE	MUTING		MUTING		SHUTTER		MUTING	
MENU	MENU ; PLAY LIST	TEST	MENU ; PLAY LIST		MENU	SUPER SOUND EQ	MENU		ALBUM	
EXIT	○ ; RETURN		RETURN		CH SELECT	S.3D AI EQ			↻	#
▲	▲	TV CH▲	▲		▲				▲	
◀	◀	b	◀		◀				◀	
OK	ENTER ; OK		ENTER		ENTER		ENTER		ENTER	
▶	▶	#	▶		▶				▶	
▼	▼	TV CH▼	▼		▼				▼	b
✳ ; SETUP	SETUP	REC USB	SETUP		SETUP	PLAY MODE	AUTO SETUP		MULTI-SCREEN	
♪ ; TITLE	TOP MENU ; D.NAVI.	REC TAPE	TOP MENU ; D.NAVI.	SOUND	TOP MENU	FM MODE	STD		KARAOKE	
☐	GROUP	ECHO	PAGE		KARAOKE	MIX 2CH			PROGRAM	
GUIDE	PROGRAM	CSM	PROGRAM		PROGRAM	PAGE			CLOCK/TIMER	
⏰	SLEEP - AUTO OFF	CLOCK/TIMER; ○	SLEEP	CLOCK/TIMER	SLEEP	GROUP			SLEEP ; AUTO OFF	
☐	SUBTITLE	D.RE-MASTER	SUBTITLE		SUBTITLE	MARKER			TIME ACCESS	
RED ; ●	ADV. SURROUND	○ PLAY/REC	REPEAT	○ PLAY/REC	REPEAT	SUPER SRND			REPEAT	○ PLAY/REC
GREEN ; ▶	S.SOUND EQ	■ PL	DOUBL.RE-MASTER		A-B REPEAT	EQ			KEYCON	
YELLOW ; ◀	SOUND EQ - MAN.	MIX 2CH	GROUP		TEST	CINEMA			SOUND EQ;MAN.EQ	
BLUE ; ▶	START	S.POS	D.ENH		LIGHT	D.ENH			ECHO	
☐	GUI DISP; FUNCT.	FL DISPLAY;SLEEP	DISPLAY	GUI DISP	GUI DISPLAY		INDEX WINDOW		OSD	CD DISP; DISPLAY
☐	QUICK REPLAY	DIMMER	QUICK REPLAY		RETURN	RANDOM			RESUME PLAY	
VOL -	VOLUME -	TV VOL -	VOLUME -	TV VOL -	VOLUME -		VOLUME -		VOLUME -	ALBUM ←
VOL +	VOLUME +	TV VOL +	VOLUME +	TV VOL +	VOLUME +		VOLUME +		VOLUME +	ALBUM →
CH V ; ◀	◀ ; SKIP ▼	◀ ; V/REW	◀ ; SKIP ▼	TV CHV	◀ ; SKIP ▼	TV CH V			◀ ; PREV ▼	V-INDEX ←
CH ▲ ; ▶	▶ ; SKIP ▲	▶ ; A/FF	▶ ; SKIP ▲	TV CH▲	▶ ; SKIP ▲	TV CH ▲			▶ ; NEXT ▲	V-INDEX →
+ ; SAT	≥10	REPEAT ; DIMMER	≥10		≥10	■ PL			≥10	
CLEAR ; X	CANCEL ; DEL	C.F	CANCEL		CANCEL	SUBWOOF. LEVEL				
◀ ; ○	◀ SLOW/SEARCH	◀ ; V/REW	◀ SLOW/SEARCH		◀ SLOW/SEARCH				◀ ; REW	
▶ ; i	▶ DVD/CD	PLAY USB	▶ DVD/CD		▶ DVD/CD				▶ ; II ; SEL. CD	
▶ ; ?	▶ SLOW/SEARCH	▶ ; A/FF	▶ SLOW/SEARCH		▶ SLOW/SEARCH				▶ ; FF	
■ ; X	■		■		■ ; STOP				■ ; PBC CLEAR	
; ⏸					; PAUSE ; ◀ / II				; PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0				1, 2, ... 9, 0	

Функции кнопок пульта IRC 12 F к AUX устройствам

Кнопки пульта IRC 12 F	Код 311		Код 312		Код 313		Код 314		Код 315	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ : DVD	CD	DOLBY NR			CD MODE		CH ▲	DVD/CD ; DVD	DISC	
AUDIO ; NICAM	TAPE	BEEP	AUDIO		AUDIO		AUDIO	SFC ; EQ ; SRD ENH	AUDIO	S.SOUND EQ
VIDEO ; SYS	REPE.;PLAY M.(CD)		OSD ; NTSC/PAL		PLAY MODE		PLAY SPEED	VCR/AUX	CD MODE	
☐ ; ZOOM	OPEN/ATOP PANEL	DECK 2 OPEN/CL.			ZOOM		ZOOM	C.FOCUS	ZOOM	
▼ ; TV	TUNER ;TUN. BAND	B.P			DISC		CH ▼	TV/VCR ; TV	TUNER/MUSIC P.	
☐ ; ↻	AUTO SCAN	M.SCAN (TUNER)	SCAN		A.DISC REVIEW	M.RE-MASTER	S.SRD ; PL II	ANGLE/PAGE	MIC LEVEL	
☐ ; LOCK	CLOSE▼TOP PAN.	C-RESET (TAPE)			DIMMER		M. PORT ; IPOD/USB	CH SELECT ; TEST	TAPE ◀▶	
▲ ; FAV	▲ ; OPEN / CLOSE	DECK 1 OPEN/CL.			TUNER/AUX		ONE TOUCH PLAY	TEST ; AUTO	ECHO ; KARAOKE	
○	OFF/ON ; POWER; ○		SRC ; POWER		○		○	○ (TV)	○ TV	
AV	AUX ; CD/AUX		ANGLE		ANGLE/PAGE		EXT-IN ; AUX	TV/AV	TV/AV	EXT-IN
✳	MUTING -20Db		MUTE		MUTING		MUTING	V.MUTE	MUTING	V.MUTE
MENU	MEMORY (TUNER)	MW BAND (TUNER)	MENU ; TITLE		MENU ; PLAYLIST		PLAY LIST ; MENU	GROUP	MENU ; PLAY LIST	
EXIT	MEM/REC. ; PROG.		RETURN		RETURN		MANUAL SKIP	○ (VCR)	RETURN ; SETUP	
▲	PRESET ▲ (TUNER)		▲		▲		▲		▲	#
◀	MANUAL - (TUNER)		◀		◀		◀		◀ ; ◀◀	
OK	TOP PANEL OPEN.		ENTER		ENTER		ENTER		ENTER	
▶	MANUAL + (TUNER)		▶		▶		▶		▶ ; ▶▶	
▼	PRESET ▼ (TUNER)		▼		▼		▼		▼	b
✳ ; SETUP	POWER BLASTER	SW BAND (TUNER)	SEL		SETUP		SETUP	C.S.M.	SETUP	RETURN ; SETUP
♪ ; TITLE	FM MODE;ST/MON.	SW 2 BAND (TUN.)	GRP ; TITLE/CHAPT.		TOP MENU;DIR. NA.		D. NAV. ; TOP MENU	TUNER/BAND ; FM	TOP MENU ; D.NAVI.	SOUND
☐	BAND(TUNER) ; FM	ON / FLAT EQ	BAND		FUNCTIONS	TUNER PGM	FUNCTIONS ; KAR-E	PROGRESSIVE	FUNCTIONS	
GUIDE	TIMER FADER	MODE EQ			PROGRESSIVE	GROUP	QUICK OSD	H.BASS	MANUAL EQ	
○	SLEEP	TIMER CHECK			SLEEP	CLOCK/TIMER	SLEEP ; SETUP	ECHO	SLEEP/A.OFF	CLOCK/TIMER
☐	INTRO		SUBTITLE		SUBTITLE	ECHO	SUBTITLE	POSITION MEMORY	SUBTITLE	
RED ; ●	XBS ; V.BASS	○ PLAY/REC	REPEAT		REPEAT	○ PLAY/REC	ADV. DISC REVIEW	SUPER SRND	REPEAT	○ PLAY/REC
GREEN ; ▶▶	PRESET EQ ; XBS	REC PAUSE (TAPE)			PLAY SPEED	S.SOUND EQ	QUICK REPLAY	START	ADVANCED SURR.	
YELLOW ; ◀◀	S.VIRTUALIZER	◀ (TAPE)			AUTO OFF	SOUND EQ - MAN.	PLAY MOD.;CH SEL.	b	SUBWOOFER	
BLUE ; ▶▶	S.WOOFER ; XBS	REV MODE (TAPE)			TAPE ◀▶	A.SRND	LEVEL ; ECHO ; SUB.	#	PLAY MODE	
☐	DISPLAY		OSD ; NTSC/PAL		FL DISPLAY	QUICK OSD	FL DISPLAY	PAGE	FL. DISPLAY	QUICK OSD
☐	RANDOM (CD)	DECK 1/2 (TAPE)	RANDOM		QUICK REPLAY		RETURN ; SETUP	REPEAT	DIMMER	
VOL -	VOLUME -	TUNE- (TUN.);TUN.-	VOL -		VOLUME -		VOLUME -	TV VOL -	VOLUME -	TV VOLUME -
VOL +	VOLUME +	TUNE+(TUN.);TUN.+	VOL +		VOLUME +		VOLUME +	TV VOL +	VOLUME +	TV VOLUME +
CH V ; ◀◀	PRES.TUNE▼;CD◀◀	CLOSE▼TOP PAN.	◀◀ TRACK/SEARCH		◀◀ ; REW/▼		◀◀ SKIP ; CH ▼	TV CH ▼	◀◀ ; /REW	TV CH ▼
CH ▲ ; ▶▶	PRES.TUNE▲;CD▶▶	OPEN▲TOP PANEL	▶▶ TRACK/SEARCH		▶▶ ; ▲ / FF		▶▶ SKIP ; CH ▲	TV CH ▲	▶▶ ; FF/▲	TV CH ▲
± ; SAT	>=10 ; +10				>=10 ; /-		>=10 ; /-	MIX 2CH	>=10	
CLEAR ; X	CANCEL (CD)				CANCEL	MANUAL SKIP	CANCEL		CANCEL	
◀◀ ; ●	◀◀ (CD)	REW (TAPE);◀◀TPS	◀◀ TRACK/SEARCH		◀◀ SLOW/SEARCH		◀◀ SLOW/SEARCH		◀◀ SLOW/SEARCH	
▶▶ ; i	▶▶ (CD) ; CD	▶▶ (TAPE) ; ▶▶(T)	▶▶ TRACK/SEARCH		DVD/CD ▶▶		▶▶ ; PLAY		DVD/CD ▶▶	USB ▶▶
▶▶ ; ?	▶▶▶▶ (CD)	FF (TAPE);▶▶▶▶TPS	▶▶▶▶ TRACK/SEARCH		▶▶▶▶ SLOW/SEARCH		▶▶▶▶ SLOW/SEARCH		▶▶▶▶ SLOW/SEARCH	
■ ; ✳	■ /CLEAR (CD)	■ (TAPE)	■ ; STOP		■		■ ; STOP		■ ; STOP	
■ ; ⏸	■ (CD)	EDIT PAUSE (CD)	■▶▶▶ ; PLAY/PAUSE		■▶▶▶		■▶▶▶ ; PAUSE		■▶▶▶ ; PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 12 F к AUX устройствам

Кнопки пульта IRC 12 F	Код 316		Код 317		Код 318		Код 319		Код 320	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ : DVD	DVD		CD		CD ; DVD		PICTURE MODE		DVD PLAYER	
AUDIO ; NICAM	AUDIO OFF		PHONO		AUDIO ONLY		AUDIO		SUBWOOFER	
VIDEO ; SYS	VCR		TAPE1		EXT ; VCR		PLAY MODE		VCR	
☐ ; ZOOM	STEREO		TAPE2		GROUP		ZOOM		LEVEL/TEST	
▼ ; TV	TV		DECK 1/2 (DECK)		AUX ; TV		TRANSFER MODE		TV	
☐ ; ↻	DIMMER				PLAY MODE/P.MEM.		FL SELECT		H.BASS/C.FOCUS	
☐ ; LOCK	SURROUND				TEST		DIALOGUE ENHAN.		INPUT MODE	
▲ ; FAV	TUNER		▲ ; OPEN/CLOSE		BAND ; TUNER		▲ ; OPEN/CLOSE		DISC/DIRECT TUN.	
○	○ RECEIVER		○ ; POWER (CD)	POWER (TAPE)	○	○ AV SYSTEM	○		○ RECEIVER	
AV	AUX	TV/AV	AUX		TV/AV		ANGLE/PAGE		○ AV SYSTEM	
✳	MUTING		MUTING		MUTING				MUTING	
MENU	DISC/BAND		DISC		MENU ; PLAY LIST		MENU		SUB MENU/PLAY L.	
EXIT	PHONO		DISC SKIP		RETURN		RETURN		RETURN	
▲	TAPE ; TAPE 1		TUNER PRESET ▲		▲		▲		▲	
◀	/L				◀		◀		◀	
OK	INPUT MODE		DISC ENTER		ENTER		ENTER		ENTER	
▶	+R				▶		▶		▶	
▼	TAPE 2		TUNER PRESET ▼		▼		▼		▼	
✳ ; SETUP	TEST/SETUP				SETUP ; FM MODE		SETUP		FUNCTIONS	
♪ ; TITLE	STEREO/2CH MIX				TOP MENU ; DIR. NA.		TOP MENU		TOP MENU	
☐	CD		PROGRAM MODE		C.S.M		PBC		OFF	
GUIDE	DCC		RANDOM MODE		DOUB. RE-MASTER		FUNCTIONS		PLII	
○	SLEEP		TIME MODE	SLEEP	SLEEP	DELAY TIME			MUSIC SFC	
☐	NEO:6		TAPE ; MONITOR		C.FOCUS		SUBTITLE		AV/MOVIE SFC	
RED ; ●	SFC		A-B REPEAT		REPEAT/MIX 2CH		REPEAT		TONE/BALANCE	
GREEN ; ▶▶	DOLBY PRO LOG. II		REPEAT		PL II		A-B REPEAT		EFFECT	
YELLOW ; ◀◀	SUBWOOFER		LEVEL -	◀ (DECK)	SUBWOOF. LEVEL		ADVANCED SURR.		/L	
BLUE ; ▶▶	TONE/BALANCE		LEVEL +		SFC		MANUAL SKIP		+R	
☐	EFFECT ; DELAY		10		DISPLAY	FL DISPLAY ; RDS	Q. OSD ; STATUS		TUNER/BAND	
☐	DIRECT TUNING		RECALL		CH SELECT		QUICK REPLAY		DRIVE SELECT	
VOL -	VOLUME -		VOLUME -	TV VOL -	VOLUME -		VOLUME -		VOLUME - ; ◀-	
VOL +	VOLUME +		VOLUME +	TV VOL +	VOLUME +		VOLUME +		VOLUME + ; ▶+	
CH V ; ◀◀	CH ▼ ; TUNER PR.V		◀◀ SKIP (CD)	PREV. DISC	◀◀ SKIP		◀◀ SKIP		CH -	◀◀ SKIP
CH ▲ ; ▶▶	CH ▲ ; TUNER PR.▲		▶▶ SKIP (CD)	NEXT DISC	▶▶ SKIP		▶▶ SKIP		CH +	▶▶ SKIP
± ; SAT	>=10		>=10		>=10 ; /-		>=10 ; /-		>=10	
CLEAR ; X	LEVEL		CLEAR		CANCEL		CANCEL		TOP	
◀◀ ; ●			◀◀ SLOW/SEARCH	◀◀ (DECK)	◀◀ SLOW/SEARCH		◀◀ SLOW/SEARCH		◀◀ SLOW/SEARCH	
▶▶ ; i			▶▶ (CD)	▶▶ (DECK)	▶▶		▶▶ ; PLAY		▶▶ ; PLAY	
▶▶ ; ?			▶▶ SLOW/SEARCH	▶▶ (DECK)	▶▶ SLOW/SEARCH		▶▶ SLOW/SEARCH		▶▶ SLOW/SEARCH	
■ ; ✳	H.BASS/C.FOCUS		■ (CD)	■ (DECK)	■		■ ; STOP		■ ; STOP	
■ ; ⏸	AV/MOVIE SFC		■ (CD)	■ (DECK)	■▶▶▶		■▶▶▶ ; PAUSE		■▶▶▶ ; PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 12 F к AUX устройствам

Кнопки пульта IRC 12 F	Код 321		Код 322	
	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	USB/CD		CD	TAPE
AUDIO ; NICAM	SOUND		AUTO/MONO; FM M.	
VIDEO ; SYS			PTY SELECT	EXT (VCR);VCR/VDP
☐ ; ZOOM			PRO LOGIC	PRO LOGIC
▼ ; TV	‡		TUNER/BAND	DECK 1/2 (TAPE)
☐ ; ↻			SEARCH	
☐ ; LOCK			PHONO	
▲ ; FAV	▲ ; CD		OPEN/CLOSE (CD)	OPEN/CLOSE(TAPE)
⊙	⊙		POWER	
AV	RADIO/AUX ; RADIO		AUX	
⌘	MUTE		MUTING -20dB	
MENU	PLAY MENU		TEST	
EXIT			EXT	
▲	ALBUM ▲		CENTER +	EFFECT ▲
◀	ALBUM ▼		SURROUND -	BALANCE L
OK	OK		EQ ; EQ SPACE	
▶	ALBUM ▲		SURROUND +	BALANCE R
▼	ALBUM ▼		CENTER -	EFFECT ▼
* ; SETUP	SETUP		DISC	
♪ ; TITLE	RADIO/AUX ; RADIO		FLAT ; EQ SPACE	V.BASS
☐	DIMMER		ON/FLAT	
GUIDE			PROGRAM (CD)	
⊙	USB/CD		SLEEP	DELAY TIME
☐	‡		EQ	SFP
RED ; ●			CD/TAPE	TUNER (EASY
GREEN ; ►			VCR ; VCR SEL.	TAPE (EASY PLAY)
YELLOW ; ◀			VDP ; VDP SEL.	◀ (TAPE)
BLUE ; ►			DAT/DCC SEL.	CD (EASY PLAY)
☐	DISPLAY		DISPLAY MODE	
☐			REPEAT (CD)	
VOL -	VOL -		VOLUME -	
VOL +	VOL +		VOLUME +	
CH V ; ◀◀	◀◀◀		◀◀ ; ◀◀◀ (CD)	TUNER PRESET ▼
CH A ; ▶▶	▶▶▶		▶▶ ; ▶▶▶ (CD)	TUNER PRESET ▲
+ ; SAT			≥10	
CLEAR ; X			CANCEL (CD)	
◀◀ ; ●	◀◀◀		◀◀ ; ◀◀◀ (CD)	◀◀ (TAPE)
▶ ; i	▶ / II		▶ (CD)	▶ (TAPE)
▶▶ ; ?	▶▶▶		▶▶ ; ▶▶▶ (CD)	▶▶ (TAPE)
■ ; X	■		■ (CD)	■ (TAPE)
II ; Ⓢ	▶ / II		II (CD)	REC PAUSE (TAPE)
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 12 F к TV устройствам

Кнопки пульта IRC 12 F	Коды 501-726	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM		
VIDEO ; SYS		
☐ ; ZOOM		
▼ ; TV		
☐ ; ↻		
☐ ; LOCK		
▲ ; FAV		
⊙	POWER ; ⊙	
AV	TV/VIDEO ; TV/AV	
⌘	MUTE ; ⌘	
MENU		
EXIT		
▲		
◀		
OK		
▶		
▼		
* ; SETUP		
♪ ; TITLE		
☐		
GUIDE		
⊙		
☐		
RED ; ●		
GREEN ; ►		
YELLOW ; ◀		
BLUE ; ►		
☐		
☐		
VOL -	VOLUME ▼ ; ◀-	
VOL +	VOLUME ▲ ; ▶+	
CH V ; ◀◀	CHANNEL ▼ ; P-	
CH A ; ▶▶	CHANNEL ▲ ; P+	
+ ; SAT		
CLEAR ; X		
◀◀ ; ●		
▶ ; i		
▶▶ ; ?		
■ ; X		
II ; Ⓢ		
1, 2, ... 9, 0	1, 2, ... 9, 0	

Для просмотра функций кнопок баз кодов 8 и 9 (SAT, STB, DVB устройства) перейдите по следующей ссылке <http://www.pult-irc.ru/files/manual/SatCodesForIrcF.pdf>