

Приложение IRC 16 F (версия 23.07.19 00:55)

Модели оригинальных пультов и соответствующие им коды пульта IRC приведены в разделе "Коды пульта IRC 16 F".

Функции всех кнопок для каждого кода пульта IRC можно узнать из таблиц данного приложения.

Пульт IRC может иметь дополнительные функции (если указаны в столбце "Доп. функция"). Доступ к ним осуществляется при помощи кнопки SHIFT (см. в инструкции рис. 1, п. 16). Для доступа к дополнительным функциям нажмите кнопку SHIFT и, удерживая её нажатой, нажмите ту кнопку, дополнительная функция которой Вам необходима.

После первой установки батареек

Кнопка устройства пульта IRC	Код пульта IRC	Кнопка устройства пульта IRC	Код пульта IRC
TV	102	SHIFT + TV*	116
VCR	113	SHIFT + VCR*	119
AUX	114	SHIFT + AUX*	122
SAT	115	SHIFT + SAT*	129

* Нажмите кнопку SHIFT и, удерживая её нажатой, нажмите и отпустите одну из кнопок пульта: TV, VCR, AUX или SAT.

Доступные коды пульта IRC 16 F

Номер базы кодов (диапазон кодов)	Устройство базы кодов	Доступные коды пульта IRC
1 (101-199)	TV	101 - 148
2 (201-299)	VCR	201 - 211
3 (301-399)	AUX	301 - 342
4 (401-499)	SAT	401 - 405
5 (501-599)	TV	501 - 599
6 (601-699)	TV	601 - 682
7 (701-799)	-	Нет
8 (801-899)	SAT	801 - 899
9 (901-999)	SAT	901 - 999

Коды пульта IRC 16 F

Коды к устройствам

Модель*	Устр-во	Код
00001B (DVD,VCR)	AUX, CD, DVD	307
00001B (TV)	TV	115
00002A (TV)	TV	124
00002G	AUX, CD, DVD	307
00002R	AUX, CD, DVD	307
00005B	AUX, CD, DVD	329
00005B (SHUTTLE)	AUX, CD, DVD	335
00006C	TV/VCR	114
00008D	AUX, CD, DVD	306
00008E (DVD,VCR)	AUX, CD, DVD	306
00008E (TV)	TV	115
00008J	AUX, CD, DVD	306
00011A	AUX, CD, DVD	301
00011E	AUX, CD, DVD	301
00011K	AUX, CD, DVD	301
00013C	VCR	201
00015F (DVD,VCR)	AUX, CD, DVD	305
00015F (TV)	TV	115
00016F (TV)	TV	115
00016F (VCR)	VCR	201
00025A	AUX, CD, DVD	301
00025A (TV)	TV	119
00038A	TV	115
00043A	TV/VCR	137
00048A (VCR)	VCR	201
00048C (VCR)	VCR	201
00049A	VCR	210
00052E	AUX, CD, DVD	334
00054A	AUX, CD, DVD	311
00055G (DVD)	AUX, CD, DVD	332
00055G (TV)	TV	119
00071A	AUX, CD, DVD	301
00071H (DVD)	AUX, CD, DVD	311
00071H (TV)	TV	119
00072C (DVD)	AUX, CD, DVD	311
00072C (TV)	TV	119
00074A	AUX, CD, DVD	334
00084K (DVD)	AUX, CD, DVD	333
00084K (TV)	TV	119
00092A	AUX, CD, DVD	301
00092M	AUX, CD, DVD	301
00092S	AUX, CD, DVD	301
00092T	AUX, CD, DVD	301
00093C	AUX, CD, DVD	301
00094V	AUX, CD, DVD	301

Модель	Устр-во	Код
00100A (PC)	AUX, CD, DVD	309
00100A (TV)	TV	122
00100A (VCR)	VCR	201
00104A	TV	119
00104B	TV	119
00104C	TV	119
00104D	TV	119
00104E	TV	119
00104J	TV	119
00104K	TV	119
00107C	TV/VCR	114
00128B	TV	119
00130A (DVD)	AUX, CD, DVD	301
00130A (TV)	TV	128
00130A (VCR)	VCR	201
00141D (TV)	TV	124
00143B (DVD)	AUX, CD, DVD	301
00143B (TV)	TV	123
00143B (VCR)	VCR	201
00198D	TV	119
00198E	TV	119
00198F	TV	119
00198G	TV	119
00198H	TV	119
00199D	TV	119
00200B (TV)	TV	119
00200B (VCR)	VCR	201
00204A	TV/AUX	125
00204B	TV/AUX	125
00217B	TV	118
00220A (PC)	AUX, CD, DVD	309
00220A (TV)	TV	120
00220A (VCR)	VCR	201
00221E	TV/VCR	114
00221F	TV/VCR	114
00266F (DVD)	AUX, CD, DVD	301
00266F (TV)	TV	121
00266F (VCR)	VCR	201
00268C (DVD)	AUX, CD, DVD	301
00268C (TV)	TV	123
00268C (VCR)	VCR	201
00302H	TV	124
00308 (DVD)	AUX, CD, DVD	301
00308 (MONITOR)	TV	123
00308 (VCR)	VCR	201

Модель	Устр-во	Код
0070-37	VCR	201
01053A	AUX, CD, DVD	301
01137C	AUX, CD, DVD	301
01169G	AUX, CD, DVD	304
01169G (TV)	TV	123
01225C	AUX, CD, DVD	304
01271A	AUX, CD, DVD	308
10075M (TV)	TV	116
10075M (VCR)	VCR	201
10079B	TV	116
10103H	TV	128
10107C	TV	115
10107N	TV	115
10116A	TV	115
10116B	TV	115
10124A (TV)	TV	115
10124A (VCR)	VCR	206
10129B	TV	115
10129C	TV	115
10129D (TV)	TV	115
10329D (VCR)	VCR	201
10329G (TV)	TV	115
10329G (VCR)	VCR	201
10357A	VCR	201
10414A	VCR	201
10420A	VCR	201
10420L	VCR	201
14909-502-210	AUX, CD, DVD	318
14909-503-360 (CD)	AUX, CD, DVD	319
14909-503-360 (TAPE)	AUX, CD, DVD	317
19239-0013-00	AUX, CD, DVD	318
19239-0031-01	AUX, CD, DVD	319
19239-0039-01	AUX, CD, DVD	320
32199101020	TV	101
33004430241	TV	101
33004-441-251	TV	104
33004540031	TV	102
3F14-0000-313	TV	101
3F14-00003-330	TV	101
3F14-00004-250	TV	101
3F14-00007-010	TV	105
3F14-00007-250	TV	101
3F14-00007-311	TV	101
3F14-00007-313	TV	101
3F14-00007-330	TV	107

Модель	Устр-во	Код
3F14-00007-410	TV	105
3F14-00009-103	TV	101
3F14-00016-040	TV	106
3F14-00024-060	TV	107
3F14-00031-040	TV	102
3F14-00031-050	TV	102
3F14-00031-071	TV	102
3F14-00031-170	TV	102
3F14-00031-181	TV	102
3F14-00031-211	TV	102
3F14-00032-140	TV	102
3F14-00032-300	TV	102
3F14-00033-060	TV	102
3F14-00033-061	TV	102
3F14-00033-270	TV	117
3F14-00033-320	TV	102
3F14-00033-360	TV	117
3F14-00033-470	TV	102
3F14-00034-140	TV	102
3F14-00034-141	TV	102
3F14-00034-402	TV	112
3F14-00034-480	TV	102
3F14-00034-510	TV	112
3F14-00034-781	TV	107
3F14-00034-790	TV	107
3F14-00034-840	TV	102
3F14-00034-843	TV	102
3F14-00034-981	TV	107
3F14-00034-A10	TV	112
3F14-00037-022 (TV)	TV	103
3F14-00037-022 (VCR)	VCR	201
3F14-00037-040	TV	115
3F14-00037-041 (TV)	VCR	201
3F14-00037-041 (VCR)	TV	115
3F14-00038-092	TV	115
3F14-00038-093	TV	115
3F14-00038-110	TV	112
3F14-00038-150	TV	126
3F14-00038-170 (TV)	TV	115
3F14-00038-170 (VCR)	VCR	201
3F14-00038-242 (TV)	TV	115
3F14-00038-242 (VCR)	VCR	203
3F14-00038-300	TV	115
3F14-00038-321	TV	115
3F14-00038-450 (TV)	TV	115

* По каталогу «IRC»

Коды пульта IRC 16 F

Коды к устройствам

Модель	Устр-во	Код
3F14-00038-450 (VCR)	VCR	201
3F14-00040-060	TV/VCR	114
3F14-00040-061	TV/VCR	114
3F14-00040-071	TV/VCR	114
3F14-000401	VCR	202
3F14-00040-141	TV/VCR	114
3F14-00048-110	TV/VCR	114
3F14-00048-170	TV/VCR	114
3F14-00048-260	TV	116
3F14-00050-020	TV	116
3F14-00050-040 (TV)	TV	138
3F14-00050-040 (VCR)	VCR	201
3F14-0007-330/II	TV	101
3F14-026050	TV	117
3GBB600649	TV	106
6100485891	TV	109
633-110	VCR	202
633-209	VCR	201
633-251	VCR	201
633-254	VCR	201
636-202	VCR	201
636-209	VCR	201
A931234567890	TV	102
AA59-00003A	TV/VCR	137
AA59-00332A	TV	129
AA59-00332C	TV	129
AA59-00332D	TV	129
AA59-00332E	TV	129
AA59-00332F	TV	129
AA59-00332G	TV	129
AA59-00332H	TV	129
AA59-00353A (TV)	TV	131
AA59-00353A (VCR)	VCR	201
AA59-00357B	TV	129
AA59-00357D	TV	129
AA59-00370B	TV	129
AA59-00385A	TV	124
AA59-00399A	TV	129
AA59-00401B	TV	129
AA59-00401C	TV	129
AA59-00421A	TV	129
AA59-00431A	TV	140
AA59-00560A	TV	140
AA59-00581A	TV	140
AA59-00602A	TV	140

Модель	Устр-во	Код
AA59-00638A	TV	140
AA59-00741A	TV	140
AA59-00742A	TV	140
AA59-00743A	TV	140
AA59-00793A	TV	140
AA59-00795A	TV	140
AA59-00818A	TV	148
AA59-00823A	TV	140
AA59-10014R	TV	115
AA59-10027P	TV/VCR	114
AA59-10032W	TV	115
AA59-10075F	TV/VCR	114
AA59-10075G	TV/VCR	114
AA59-10075J	TV/VCR	114
AA59-10075K	TV	115
AA59-10075W	TV/VCR	114
AA59-10076M	TV	115
AA59-10076P	TV	115
AA59-10079M	TV	116
AA59-10079S	TV	122
AA59-10079T	TV	122
AA59-10081F	TV	115
AA59-10081N	TV	115
AA59-10083T (TV)	TV	128
AA59-10083T (VCR)	VCR	201
AA59-10095U	TV	115
AA59-10107F	TV	124
AA59-10116A	TV	115
AA59-00004U (CD)	AUX, CD, DVD	312
AA59-00004U (TAPE)	AUX, CD, DVD	317
AA59-00043F (CD)	AUX, CD, DVD	312
AA59-00043F (TAPE)	AUX, CD, DVD	317
AA59-00043N	AUX, CD, DVD	312
AA59-00063A (DECK)	AUX, CD, DVD	317
AA59-00063A (DVD/CD)	AUX, CD, DVD	321
AA59-00134E (CD)	AUX, CD, DVD	312
AA59-00134E (TAPE)	AUX, CD, DVD	317
AA59-00134H (CD)	AUX, CD, DVD	312
AA59-00134H (TAPE)	AUX, CD, DVD	317
AA59-00134L (CD)	AUX, CD, DVD	312
AA59-00134L (TAPE)	AUX, CD, DVD	317
AA59-00134T (CD)	AUX, CD, DVD	312
AA59-00134T (TAPE)	AUX, CD, DVD	317
AA59-01049A	AUX, CD, DVD	302
AA59-01049B	AUX, CD, DVD	302

Модель	Устр-во	Код
AH59-01049G	AUX, CD, DVD	302
AH59-01055A (CD)	AUX, CD, DVD	312
AH59-01055A (TAPE)	AUX, CD, DVD	317
AH59-01068B	AUX, CD, DVD	303
AH59-01101G	AUX, CD, DVD	303
AH59-01159F (CD)	AUX, CD, DVD	322
AH59-01159F (TAPE)	AUX, CD, DVD	322
AH59-01159H (CD)	AUX, CD, DVD	322
AH59-01159H (TAPE)	AUX, CD, DVD	322
AH59-01159L (CD)	AUX, CD, DVD	322
AH59-01159L (TAPE)	AUX, CD, DVD	322
AH59-01159Q (CD)	AUX, CD, DVD	322
AH59-01159Q (TAPE)	AUX, CD, DVD	322
AH59-01159S (CD)	AUX, CD, DVD	323
AH59-01159S (TAPE)	AUX, CD, DVD	323
AH59-01175A	AUX, CD, DVD	315
AH59-01252G	AUX, CD, DVD	339
AH59-01317A	AUX, CD, DVD	304
AH59-01359A (CD)	AUX, CD, DVD	312
AH59-01359A (TAPE)	AUX, CD, DVD	317
AH59-01404B (DVD)	AUX, CD, DVD	304
AH59-01404B (TV)	TV	113
AH59-01418A	AUX, CD, DVD	310
AH59-01422A	AUX, CD, DVD	308
AH59-01426A (DVD)	AUX, CD, DVD	304
AH59-01426A (TV)	TV	113
AH59-01511A	AUX, CD, DVD	304
AH59-01527G (DVD)	AUX, CD, DVD	304
AH59-01527G (TV)	TV	113
AH59-01527H (DVD)	AUX, CD, DVD	304
AH59-01527H (TV)	TV	113
AH59-01588B	AUX, CD, DVD	342
AH59-01617Q (DVD)	AUX, CD, DVD	304
AH59-01617Q (TV)	TV	113
AH59-01622R	AUX, CD, DVD	308
AH59-01643C (DVD)	AUX, CD, DVD	304
AH59-01643C (TV)	TV	113
AH59-01644Y	AUX, CD, DVD	331
AH59-01644Z	AUX, CD, DVD	308
AH59-01662B (DVD)	AUX, CD, DVD	304
AH59-01662B (TV)	TV	124
AH59-01662V (DVD)	AUX, CD, DVD	304
AH59-01662V (TV)	TV	113
AH59-01695E	AUX, CD, DVD	316
AH59-01718A (DVD)	AUX, CD, DVD	304

Модель	Устр-во	Код
AH59-01718A (TV)	TV	113
AH59-01778S (DVD)	AUX, CD, DVD	304
AH59-01778S (TV)	TV	113
AH59-01778T (DVD)	AUX, CD, DVD	304
AH59-01778T (TV)	TV	113
AH59-01778V	AUX, CD, DVD	331
AH59-01787R (DVD)	AUX, CD, DVD	304
AH59-01787R (TV)	TV	113
AH59-01907D (DVD)	AUX, CD, DVD	313
AH59-01907D (TV)	TV	113
AH59-01907R	AUX, CD, DVD	304
AH59-01951E (DVD)	AUX, CD, DVD	313
AH59-01951E (TV)	TV	113
AH59-01951G (DVD)	AUX, CD, DVD	313
AH59-01951G (TV)	TV	113
AH59-01960B	AUX, CD, DVD	314
AH59-02010E	AUX, CD, DVD	314
AH59-02146A	AUX, CD, DVD	330
AH59-02146S	AUX, CD, DVD	330
AH59-02291A (DVD REC.)	AUX, CD, DVD	340
AH59-02291A (DVD REC.)	AUX, CD, DVD	340
AH59-02296A (DVD REC.)	AUX, CD, DVD	340
AH59-02296A (BD REC.)	AUX, CD, DVD	340
AH59-02299A (BD REC.)	AUX, CD, DVD	340
AH59-02303A (BD REC.)	AUX, CD, DVD	340
AH59-02339A (BD REC.)	AUX, CD, DVD	340
AH59-02341A (BD REC.)	AUX, CD, DVD	340
AH59-02342A (BD REC.)	AUX, CD, DVD	340
AH59-02343A (BD REC.)	AUX, CD, DVD	340
AH59-02344A (BD REC.)	AUX, CD, DVD	340
AH59-02348A (BD REC.)	AUX, CD, DVD	340
AH59-02353A (DVD REC.)	AUX, CD, DVD	340
AH59-02357A (DVD REC.)	AUX, CD, DVD	340
AH59-02361A (DVD)	AUX, CD, DVD	313
AH59-02361A (TV)	TV	140
AH59-02378A	AUX, CD, DVD	338
AH59-02380A	AUX, CD, DVD	338
AH59-02418A (DVD REC.)	AUX, CD, DVD	340
AH59-02426A	AUX, CD, DVD	337
AH59-02431A	AUX, CD, DVD	322
AH59-02530A	AUX, CD, DVD	340
AH59-02533A	AUX, CD, DVD	340
AH59-02537A (BD REC.)	AUX, CD, DVD	340
AH59-02538A (BD REC.)	AUX, CD, DVD	340
AH59-02538B (BD REC.)	AUX, CD, DVD	340

Модель	Устр-во	Код
AH59-02546B	AUX, CD, DVD	338
AH59-02546B (TV)	TV	124
AH59-02547B	AUX, CD, DVD	338
AH59-02547B (TV)	TV	124
AH59-02550A (DVD REC.)	AUX, CD, DVD	340
AH59-02555A	AUX, CD, DVD	337
AH59-02569A	AUX, CD, DVD	340
AH59-02569B (BD REC.)	AUX, CD, DVD	340
AH59-02612A	AUX, CD, DVD	338
AH59-02612A (TV)	TV	124
AH59-02615E	AUX, CD, DVD	341
AH59-02631J	AUX, CD, DVD	338
AH59-02692P	AUX, CD, DVD	338
AH59-02733B	AUX, CD, DVD	338
AH59-02767C	AUX, CD, DVD	338
AH59-10082A	AUX, CD, DVD	324
AH59-10085A	AUX, CD, DVD	319
AH59-10096A (CD)	AUX, CD, DVD	325
AH59-10096A (DECK 1)	AUX, CD, DVD	326
AH59-10096A (DECK 2)	AUX, CD, DVD	327
AH59-10120A (CD)	AUX, CD, DVD	312
AH59-10120A (TAPE)	AUX, CD, DVD	317
AH59-10124B	AUX, CD, DVD	312
AH64-50327A	AUX, CD, DVD	301
AH64-50361A	AUX, CD, DVD	301
AH64-50361A-A	AUX, CD, DVD	307
AH64-504361A	AUX, CD, DVD	301
AH81-00453A	AUX, CD, DVD	312
AIR COND-01	HOME APPLIANCES	211
AK59-00103D	AUX, CD, DVD	311
AK59-00103G	AUX, CD, DVD	311
AK59-00110A (DVD)	AUX, CD, DVD	333
AK59-00110A (TV)	TV	127
AK59-00117A	AUX, CD, DVD	311
AK59-00118A	AUX, CD, DVD	333
AK59-00133A	AUX, CD, DVD	336
AK59-00148A	AUX, CD, DVD	336
AK59-00148A (TV)	TV	119
AR-222	VCR	202
AR-3133 (CD)	AUX, CD, DVD	319
AR-3133 (TAPE)	AUX, CD, DVD	326
AR-427	VCR	202
AR-5027 (CD)	AUX, CD, DVD	312
AR-5027 (TAPE)	AUX, CD, DVD	317
AUX-01	AUX, CD, DVD	319

Модель	Устр-во	Код
BN59-00343A (DVD)	AUX, CD, DVD	301
BN59-00343A (TV)	TV	127
BN59-00343A (VCR)	VCR	201
BN59-00366A	TV	136
BN59-00378A (TV)	TV	143
BN59-00378C (TV)	TV	143
BN59-00397B (TV)	TV	139
BN59-00434C	TV	135
BN59-00437A	TV	129
BN59-00488A	TV	134
BN59-00507A	TV	113
BN59-00529A (DVD)	AUX, CD, DVD	301
BN59-00529A (TV)	TV	133
BN59-00529A (VCR)	VCR	201
BN59-00530A (DVD)	AUX, CD, DVD	301
BN59-00530A (TV)	TV	143
BN59-00530A (VCR)	VCR	201
BN59-00539A (DVD)	AUX, CD, DVD	301
BN59-00539A (TV)	TV	113
BN59-00539A (VCR)	VCR	201
BN59-00557A (DVD)	AUX, CD, DVD	301
BN59-00557A (TV)	TV	133
BN59-00557A (VCR)	VCR	201
BN59-00567A (DVD)	AUX, CD, DVD	301
BN59-00567A (TV)	TV	133
BN59-00567A (VCR)	VCR	201
BN59-00589A	TV	141
BN59-00602A (TV)	TV	113
BN59-00603A (DVD)	AUX, CD, DVD	301
BN59-00603A (TV)	TV	144
BN59-00603A (VCR)	VCR	201
BN59-00609A	TV	113
BN59-00683A	TV	142
BN59-00684B	TV	142
BN59-00685A	TV	140
BN59-00686A	TV	140
BN59-00861A	TV	140
BN59-00863A	TV	140
BN59-00865A	TV	140
BN59-00938A	TV	140
BN59-00940A	TV	140
BN59-00960A	TV	140
BN59-01014A	TV	140
BN59-01039A	TV	140
BN59-01054A	TV	140

Модель	Устр-во	Код
BN59-01069A	TV	146
BN59-01081A	TV	140
BN59-01189A	TV	140
BN59-01198C	TV	140
BN59-01199G	TV	140
BN59-01259B	TV	145
BN59-01268D	TV	140
BN59-01268G	TV	140
BN59-01303A	TV	140
BN59-01305A	TV	140
BN59-01315G	TV	140
BP59-00042A (DVD)	AUX, CD, DVD	301
BP59-00042A (TV)	TV	130
BP59-00042A (VCR)	VCR	201
CB528Z	TV	107
CH116	TV	107
CJ044	TV	115
CRM-E5A	HOME APPLIANCES	208
CRM-E6	HOME APPLIANCES	208
CRM-K3	HOME APPLIANCES	208
DSR-9000	SAT, STB, DVB	402
DSR-9400	SAT, STB, DVB	403
DSR-9500	SAT, STB, DVB	403
DVD-909	AUX, CD, DVD	307
I.R.C.	TV	105
KCD-11	AUX, CD, DVD	328
M701	TV	101
MF59-00242A	SAT, STB, DVB	403
MF59-00242C	SAT, STB, DVB	404
R43	TV	115
RC10302	VCR	203
RC633206	VCR	203
RC633208	VCR	203
RC633211	VCR	202
RC-7100	TV	111
RC-H1	HOME APPLIANCES	207
REM07	TV	101
REM101	TV	101
REM23	TV	101
RF1400009103	TV	101
RM-097	TV	105
RM-101	TV	101
RM-103	TV	107
RM-105	TV	117
RM-109	TV	102

Модель	Устр-во	Код
RM-111	TV	117
RM-113	TV	132

Коды к TV устройствам различных марок

Марка	Код
AEG	544
AIWA	502, 503, 523, 528, 579, 634, 678
AKAI	501, 503, 512, 516, 520, 522, 524, 525, 537, 538, 540, 545, 546, 547, 550, 571, 572, 582, 583, 584, 585, 596, 598, 608, 613, 626, 652, 673
AKIRA	511, 514, 516, 522, 524, 525, 537, 538, 541, 545, 547, 556, 577, 586, 594, 597, 598, 601, 623, 626, 629, 631, 649, 666, 680
AMCOL	501, 525, 545
ANITECH	501, 525, 616
ATLANTA	501
AVEST	537, 538, 539
BBK	522, 551, 594, 597
BEKO	525, 530, 535, 559
BIGSTON	501, 503
BLAUPUNKT	512
BORK	525, 547, 646
BROKSONIC	501
CAMERON	538, 550, 567, 675
CASIO	529
CHANGHONG	516, 596, 642
CLATRONIC	501, 545, 559, 571
CONTEC	501, 603, 604, 613
CORTLAND	644
CROWN	501, 503, 511, 524, 525, 530, 571
DAEWOO	501, 508, 518, 520, 525, 526, 536, 538, 539, 546, 565, 571, 576, 598, 613
DARTLAND	501
DAYTRON	501
DEXP	516, 579, 596
DIGITAL	547
DISTAR	562, 616
DNS	596
ELEKTA	501, 503, 520, 525, 527, 615
ELEKTRONIKA	583
ELENBERG	538, 545, 550, 565, 567, 579, 581, 644, 655, 676
EPLUTUS	537, 644, 677, 682
ERC	537, 631
ERISSON	511, 514, 516, 525, 526, 537, 538, 541, 550, 556, 561, 568, 586, 596, 599, 623, 626, 629, 631
EVGO	538, 540, 630
FINLUX	501, 511, 583, 589, 608
FUJITSU	544, 573
FUNAI	501, 502, 503, 504, 505, 525, 537, 538, 581, 603
FUSION	596, 642
GBS	501, 520, 525, 571, 583
GENERAL	537, 556
GOLD STAR - LG	501, 512, 518, 525, 527, 559, 570, 583, 584, 589, 609, 613, 642
GRUNDIG	501, 512, 525, 606, 662
HAIER	518, 526, 561, 574, 657, 667, 669
HAPPY	501
HCM	501, 503, 525
HIL	503
HISENSE	525
HITACHI	501, 515, 518, 522, 525, 537, 544, 548, 554, 578, 584, 587, 588, 604, 613, 640
HORIZONT	525, 540, 545, 550, 559, 583, 664, 672
HPC	546
HYUNDAI	516, 518, 522, 525, 526, 537, 538, 540, 541, 546, 547, 550, 556, 580, 596, 597, 599, 626, 642, 648, 650, 655
INNO-HIT	501, 525, 571
IRBIS	596
IVA (ИВА)	537, 561, 637
IZUMI	516, 537, 596, 663
JINLIPIU	537, 637
JVC	513, 515, 593, 604
KAMACROWN	571
KANSAI	501, 525
KENSTAR	516
KITT	503, 613, 616
KONKA	537, 538, 560, 561, 581, 616, 626
KRONMARK	596
LOEWE	542
MEDION	525
MITSUBISHI	501, 520, 522, 525, 604, 611
MIYOTA	537, 644, 656
MTC	501, 583
MULTITECH	501, 525
MYSTERY	516, 537, 597, 642, 650, 653
NAD	518, 525
NASH	537
NEC	501, 517, 520, 526, 552, 604, 625
NESCO	501, 525
NOKIA	519, 584, 610, 614, 616
NOVA	501, 616, 638
NOVEX	516, 546, 599
OMEGA	501, 571
ONIDA	513
ONIKS	516, 525, 537, 545, 546, 547, 680
ONWA	524, 525
OPERA	644, 666, 682
ORBITA	635
ORION	501, 503, 506, 507, 509, 516, 525, 528, 537, 591, 603, 617, 619, 627, 641, 643, 664
ORSON	526, 537
PANASONIC	512, 531, 532
PHANTOM	644
PHILIPS	501, 511, 524, 525, 540, 549, 628, 639
PHOENIX	613
PIONEER	548, 555, 566, 575, 647, 666
PIXELVIEW	525
POLAR	525, 526, 537, 538, 540, 543, 546, 547, 581, 596, 599, 663, 664
POLAROID	525
PRESTIGIO	564, 656
PRIMA	522, 547
PROLOG	653, 655
RADUGA	525, 545, 569, 583

Коды к TV устройствам различных марок

Марка	Код
RAINFORD	525, 537, 544, 545
RECOR	511, 525
REKORD	520, 525, 526, 537, 538, 539, 545, 547
RFT	535, 618
ROADSTAR	501, 508, 525, 571
ROLSEN	503, 516, 525, 537, 538, 540, 543, 546, 564, 576, 592, 594, 596, 649, 656, 669
ROVERSCAN	662
ROYAL	501, 503, 525, 616
RUBIN	504, 516, 525, 537, 546, 583, 619, 665
SABA	509, 510, 521, 602
SALORA	584
SAMSUNG	501, 525, 526, 529, 563, 580, 595, 596, 608, 612, 613, 622, 641, 645
SANSUI	524, 525, 538, 556
SANYO	501, 519, 522, 525, 530, 540, 544, 550, 558, 604, 608, 610, 618, 621
SCARLETT	541, 545
SCHNEIDER	525, 540, 571
SETRO	520
SHARP	526, 544, 548, 604
SHERION	616
SHIVAKI	501, 503, 508, 516, 518, 520, 525, 526, 527, 536, 538, 539, 540, 545, 546, 547, 550, 556, 580, 583, 585, 596, 599, 609, 619, 630, 632, 635, 636, 643, 644, 664, 681
SIEMENS	512, 525, 660
SIESTA	501, 537, 637
SILELIS	613
SILVER	633
SITRONICS	503, 516, 525, 537, 538, 540, 543, 545, 594, 626, 629, 661, 671, 672, 674, 679, 680
SOKOL	516, 525, 547, 635
SONY	533, 604, 659
SPEKTR	525, 538, 668
START	525, 537, 545, 546, 547
STASSFURT	535, 618
STINOL	525
SUPER	537, 561, 644, 653, 654, 655, 666, 677, 682
SUPER GENERAL	537
SUPRA	501, 508, 516, 518, 520, 522, 525, 527, 529, 536, 537, 541, 563, 579, 580, 596, 597, 612, 642, 643
SUZUKI	516, 556
SVEN	574
TCL	521, 538, 540, 642
TEAC	525
TECHNICS	531, 537, 538
TECHNO	501, 525, 538, 544, 546, 556, 568, 579, 596, 599, 644, 664
TECKTON	522, 582, 601, 669, 670
TELEFUNKEN	510, 521, 561, 590, 602, 605, 642
TELEVISION	501, 525, 616
THOMSON	509, 510, 521, 550, 579, 602, 624, 642
TOSHIBA	516, 544, 553, 604, 651
TRONY	516, 525, 537, 538, 550, 574, 657
TVT	511, 525, 530, 535, 538, 583, 586, 620, 630
UNITED	525
VARTA	642
VESTEL	525, 544, 556, 583, 619
VIEWSONIC	557
VITA	547
VITEK	537, 650
VITYAS	525
VOLNA (ВОЛНА)	635
VR	516, 537, 565, 598
WALTHAM	503, 509, 511, 583, 584, 607, 613
XORO	522, 526, 545
XPX	663
НЕИЗВЕСТНАЯ МАРКА	525, 546, 574, 596, 648, 656, 666

Коды к SAT устройствам различных марок

Марка	Код
AIRTONE	968
ALFA GOLD	828
AMINO (СТРИМ)	829, 902
ARION	835
ARRIS	883, 963, 974
ASTON	811
BBK	931
BIG STAR	965
BIGSAT	839, 840, 903, 936
CADENA	958, 962
CONTINENT	886, 975
COSHIP	855
DAEWOO	872
D-COLOR	946, 961
DELTA SYSTEMS	985
DIGIFORS	946
DIVISAT	957, 958
D-LINK	923
DNS	950, 968
DR.HD	983
DRE	804, 888
DREAM	819
DUNE	927, 934
ECHOSPACE	862
ECHOSTAR	808, 809, 822
ELTEX	987
EPLUTUS	961
EUROSKY	840, 981
EUROSTAR	863
EUSTON	825
EVO	965
GALAXY INNOVATIONS (GI)	878, 881, 908, 911, 912, 917, 924
GENERAL SATELLITE	804, 868, 888, 907, 933, 954
GLOBALTEQ	833
GLOBO	909, 915, 925, 935, 945, 956, 971, 973, 995, 999
GOLD STAR - LG	871
GOLDEN INTERSTAR	821, 841, 879, 918
GOLDEN MEDIA	847, 912
GOLDMASTER	911
HD BOX	847, 911
HITACHI	824, 832
HIVION	929
HOME	968
HOMECAST (ВОЛЯ)	820, 831, 836
HUAVEE	946
HUMAX	803, 804, 823, 848, 860, 861, 905, 949
HYUNDAI	968
ID DIGITAL	804
INTEK	984
INTERCROSS	988
INTRO	978
KAON	820, 949
KARTINA TV	934
KOSMOS	855, 856
LANS	970
LOCUS	946
LUMAX	852, 873, 907, 913, 965, 994
MAG	988
MEDIA COM	825
MOTOROLA	883, 884, 901, 974
MYSTERY	910, 997
NDS	814
NEXT	864
NOKIA	813
NOT	941
ONLIME	905
OPENBOX	827, 835, 869, 870, 911, 990, 991
OPENTECH	972
OPENTEL	865
OPTICUM	971
ORBITA	946, 995
ORIEL	887, 926, 941, 948, 955, 986
PACE	801, 932, 953
PATIX DIGITAL	946, 967, 992
PAUXIS	842, 859
PERFEO	960, 981
PHILIPS	857, 899
PIONEER	851
POLAR	858
REFLECT	959
REXANT	977
RIKOR	916, 947
ROLSEN	930, 941, 942, 961
SAGEMCOM	906
SAMSUNG	803, 810, 812, 854
SEG	818
SELENGA	946
SEZAM	882
SKY VISION	952, 966, 977, 982
SKYMASTER	830
SKYWAY	911
SKYWORTH	989
STAR	833
STAR TRACK	826, 835, 943
STARNET	885
STRONG	805, 806, 815, 816, 817, 828, 830, 914
SUNNIWELL	875
SUPERBOX	903

Коды к SAT устройствам различных марок

Марка	Код
SUPERMAX	821, 866, 880, 924
SUPRA	950, 960, 962
TECHNOSAT	852, 853
TEL-ANT	960
TELEFUNKEN	961, 968
TESLER	926
TOP BOX	965
TOPFIELD	837, 838, 877, 891
TOSHIBA	876
TV STAR	967
TVJET	946, 976
VESTEL	820, 824
VU+	919, 920, 921, 922
WORLD VISION	821, 928, 951, 952, 961, 968
XSAT	801, 807
XSAT (НТВ+)	801, 802, 807, 906, 972, 984, 998
YUXING	904
ZUXEL	874
АРБАКОМ	967
БИЛЛАЙН	883, 884, 901, 923
ВОЛГАТЕЛЕКОМ	842, 843, 844, 845, 846, 847, 849, 850, 858, 867
ДОМ.RU	820, 905
ДОМОЛИНК	874, 904
МТС	829, 855, 902, 964, 974, 979, 980, 989, 993
НЕИЗВЕСТНАЯ МАРКА	834, 835, 842, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 903, 904, 937, 938, 939, 940, 944, 945, 969, 971, 978, 996
РОСТЕЛЕКОМ	874, 904, 923, 963, 988, 993
СИГНАЛ	867, 968
ТВОЁ ТВ	820
ТЕЛЕКАРТА	867, 909, 973
ТЕЛЕЦИФРА	968

Функции кнопок пульта IRC 16 F

Кнопки пульта IRC 16 F	Код 101		Код 102		Код 103		Код 104		Код 105	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	COLOUR +; ● +		DBB	HUE +	←		☐; BROWSE; 9+ +		➤; FIN +	
AUDIO; NICAM			HI; CD; 3; STEREO		☐		I/I; RGB			
VIDEO; SYS	MODE; P/S		PAL/SECAM; NIC.		☐		S-VIDEO; I-I			
☐; ZOOM	SIZE		☐		☐		ROTATE			
▼; TV	COLOUR -; ● -		TV; ☐	HUE -	☐		☐; LIST; 9+ -		◀; FIN -	
☐; ↻	PIP		➤; AST; SEAR.; Q.V.		◊; ☐		STORE	◆	▲; AUTO.S	
☐; LOCK	STILL		➤; ←; P.P.; OK		☐	δ	➤; ←; IPE			
▲; FAV	FC		MEMO		☐					
☐	POWER; ☐		☐; OFF; STAND BY		☐		☐		☐; POWER	
AV	TV/VIDEO; TV/AV		AV; +☐; VIDEO	☐; CLEAR	☐	☐ AV1	TV/AV		AV; TV/AV	
☐	MUTE; ☐		☐; MUTE; ☐		☐		☐		MUTE; MUTING	
MENU	FUNCT; MENU		MENU		MENU					
EXIT			Arret							
▲	FUN+; +; ▲; ZOOM		☐ +; ▲	☐ +	▲; ☐		☐ +	☐ +	☐ +	
◀	☐ -; ☐ -		FINE-; FT-; TUNE ◀	☐ -	◀		☐ -	☐ -		
OK	PIC SEL; FUNCT		MENU; F; PIC; SEL		←					
▶	☐ +; ☐ +		FINE+; FT+; TUNE ▶	☐ +	▶		☐ +	☐ +		
▼	FUN-; -; ▼; -PI-		☐ -; ▼	☐ -	▼; ☐		☐ -	☐ -	☐ -	
☐; SETUP	PIC; SET ON TIME		SMART CONT. PICT		☐		☐; PICTURE		☐; M.CH	
♪; TITLE	X ON TIME		SMART CO. SOUND		☐		☐/0; M/S		BAND	
☐	MIN; MINUTE		☐; TTR; TTX	☐; MIX; TMM	☐	☐	☐			
GUIDE	HOUR; HR CLOCK		SYS; 13- 24		☐		CS			
☐	SLEEP; OFF TIME; ☐		TIMER; SLEEP; ☐		☐				TIMER; NORM	
RED; ●	1-; 10-		☐; 3; SPAT.; ☐		☐		☐			
GREEN; ►	2-		RED; ♪; Pon	9+ -	RED		RED; INDEX	R	13	
YELLOW; ◀	3-; SCAN		GREEN; ♪; Pst	9+ +	GREEN		GREEN	G	14	
BLUE; ►	4-; MSG		YELLOW; ♪; Psz	◀	YELLOW		YELLOW	Y	15	
☐	RECALL; DISPLAY		BLUE; ☐; ←	▶	BLUE		BLUE	B	16	
☐	☐; Q.VIEW; ☐		DISPLAY; STAT.; ☐		☐		P/C; 2-; ☐			
VOL -	VOLUME ▼; ◀		P ◀ P; Q.VIEW; ☐		☐	P/C; 2; Pr.				
VOL +	VOLUME ▲; ▶		VOL -; ◀; -	◀; ◀; L	◀		◀	◀; L	◀; VOL.DOWN	
CH V; ◀	CHANNEL ▼; P -		VOL +; ▶; +	▶; ▶; R	▶		▶	▶; R	▶; VOL. UP	
CH A; ►	CHANNEL ▲; P +		P -; CH -; PROG -	◊ -	▼; ☐		PR -	→ -	# -; CH. DOWN	
+/; SAT	+		P +; CH +; PROG +	◊ +	▲; ☐		PR +	→ +	# +; CH. UP	
CLEAR; X	RESET; CANCEL; X		-/-; PAGE +; ☐		-/-; ☐		-/-; 1-; N/N		11	
◀; ☐			P/C; TPD; PAGE -; ☐	☐; SYS; PIP; ☐	X; ☐		☐; UPDATE		12	
▶; i			☐; TSC; SUB.PAGE		☐		☐			
▶; ?			☐; X; T INDEX; ☐		☐		☐; S. KEY +			
■; 3			☐; ☐; REV		☐		☐; S. KEY -			
■; 3			☐; ☐; TPH; STORE		☐		☐			
■; 3			☐; ☐; TST		☐		☐			
1, 2, ... 9, 0	1, 2, ... 9, 0									

Функции кнопок пульта IRC 16 F

Кнопки пульта IRC 16 F	Код 106		Код 107		Код 108		Код 109		Код 110	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	◀R									
AUDIO; NICAM	Ω									
VIDEO; SYS	S									
☐; ZOOM	1/2									
▼; TV	I.L									PIP OFF
☐; ↻	M									PIP
☐; LOCK	3									CH SEARCH
▲; FAV										
☐	☐		POWER		POWER		POWER		☐; POWER	
AV	☐		TV/VIDEO		MUTE		TV/VIDEO; TV		SOURCE	
☐	☐		☐				MUTE		MUTE	
MENU									MENU	
EXIT									EXIT	
▲	☐ +		MODE ▲				BRIGHT ▲		▲	
◀	☐ -		FINE ▼				COLOR ▼		◀	
OK										
▶	☐ +		FINE ▲				COLOR ▲		▶	
▼	☐ -		MODE ▼				BRIGHT ▼		▼	
☐; SETUP	☐ -		P-MODE				Q.V.		CAPTION	
♪; TITLE	☐								MTS/S-MODE	
☐	☐									
GUIDE	☐ ?		SLEEP				HOUR			
☐	☐						MIN			
RED; ●	RED		BRIGHT ▼				SLEEP			
GREEN; ►	GREEN		BRIGHT ▲				CLOCK			
YELLOW; ◀	YELLOW		COLOR ▼				ON TIME			
BLUE; ►	BLUE		COLOR ▲				OFF TIME			
☐	30		STD							
☐	P/C		RECALL				RECALL		DISPLAY	
VOL -	◊ -	◊ -	VOL ▼		VOLUME -		VOL ▼		PRE. CH	
VOL +	◊ +	◊ +	VOL ▲		VOLUME +		VOL ▲		VOL -	
CH V; ◀	P -	9+ -	CH ▼				CH ▼		CH ▼	
CH A; ►	P +	9+ +	CH ▲				CH ▲		CH ▲	
+/; SAT	-/-		1*		1-		1*			
CLEAR; X	20		2*		2-					
◀; ☐	☐									
▶; i	☐									
▶; ?	☐									
■; 3	☐									
■; 3	☐									
1, 2, ... 9, 0	1, 2, ... 9, 0/AV									

Функции кнопок пульта IRC 16 F

Кнопки пульта IRC 16 F	Код 111		Код 112		Код 113		Код 114		Код 115	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			FINE ▲		DVD		TRK ▲; []		[] SURROUND	
AUDIO; NICAM					I-II; DUAL		LANG.SEL; []		[] S.MODE; []	
VIDEO; SYS			CAPTION		VCR		SHOW VIEW		[] STORE; ADD	
[] ZOOM	ZOOM		AUTO-PRG;A.SEAR.		SIZE	(●); SRS	[]		ZOOM; P.SIZE; []	
▼; TV	TV		FINE ▼		TV		TRK ▼; []		[] TV	
[] LOCK			PRE-CH		PIP		M; MEMORY; []		PIP ON; PIP; []	CH.SCAN; ▲
▲; FAV			ERASE		[] SWAP		SP/LP		STILL; []	[] K.LOCK
[]	[]				E.SAVING	Anynet	▲; EJECT		SWAP; []	[]
[] AV	AV		POWER		[] POWER		OFF; [] POWER		POWER; []	
[] MUTE	[] MUTE		TV/VIDEO		TV/VIDEO; []	HDMI	[] INPUT		VIDEO; [] AV; []	
MENU	MENU		[] MUTE		[] MUTE		MUTE; []		MUTE; []	
EXIT	MENU		MENU		MENU; []		MENU; []	V MENU	MENU; [] F.MENU	
▲	P+	[]	ESCAPE		EXIT; [] C.ANC.					
◀	[]	[]	MODE ▲							
OK	OK				▲				P+; P ▲; []	
▶	[]	[]			[] ENTER				[] VOL ▲	
▼	P-	[]			▶					
[] SETUP		[]	MODE ▼		▼				[] VOL ▼	
[] TITLE		[]	P-MODE		[] TV	[] P.MODE	I-II; S.MODE		P-; P ▼; []	
[] GUIDE	TEXT		AIR/CATV; TV/CATV		[] S.MODE		[] S.STD		[] S.STD; []	
[]			DEMO		[] TTX/MIX		[] TV/TEXT	REC; [] ENRG.	TTX/MIX; [] TEXT	[] MIX
[]	SLEEP		ADD		[] POSITION; []		[] P.STD; []	[] SLOW	HELP; ?	
[]	[]		SLEEP		SLEEP		[] SLEEP		[] SLEEP; []	
RED; []	RED; FOTO		CH MGR; CH LIST		CH MGR; CH LIST		CRYSTAL PB	[]	LANGUAG.; HELP; ?	[] LIST
GREEN; []	GREEN; ZOOM		RED; [] P.MOD.	[] REC	RED; [] P.MOD.	[] REC	RED; []	RED; []	RED	LOCAT.; ROTAT.; []
YELLOW; []	YELLOW; ?		GREEN; [] S.M.	STB	GREEN; [] S.M.	STB	GREEN; []	GREEN; []	GREEN	FACTORY; H1
BLUE; []	BLUE; []		YELLOW; STILL	CABLE	YELLOW; STILL	CABLE	YELLOW; INDEX; []	YELLOW; []	YELLOW	3-SPEED; H2
[]	[]		BLUE; P.SIZE	PC	BLUE; P.SIZE	PC	BLUE; MENU; []	BLUE; []	BLUE	
[]	[]		[] INFO	[]	[] INFO	[]	[]	[]	DISPLAY; []	[]
[]	[]		PRE-CH	RETURN; []	[] PRE-CH	RETURN; []	[] PRE-CH	P/C	PP CH; PRE CH; []	P/C
VOL -	[]		VOLUME ▼		VOLUME -; []		[]	[]	[] VOL ▲	
VOL +	[]		VOLUME ▲		VOLUME +; []		[]	[]	[] VOL ▼	
CH V; []	[]		CHANNEL ▼		CH; CH▼; P▼; []	P▼	C/P▼; []		P-; P▼; []	
CH A; []	P+		CHANNEL ▲		CH+; CH▲; P▲; []	P▲	C/P▲; []		P+; P▲; []	
[] SAT			+100		[]		[]		[] +100; []	
CLEAR; X					[] CANCEL		CLEAR; X; []		[] C.ANC.; ERASE	
[]					[] REW		[] REW; []	[]	[] SUBPAGE	
[]					[] PLAY/PAUSE	[]	[] PLAY; []	[]	[] INDEX	
[]					[] FF	[]	[] FF; []	[] SLOW; []	[] REVEAL	
[]					[] STOP	[] PIP	[] STOP; []		[] HOLD	
[]					[] PLAY/PAUSE	[] SOURCE	P/S; [] P1		[] SIZE; F/T/B	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F

Кнопки пульта IRC 16 F	Код 116		Код 117		Код 118		Код 119		Код 120	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	PAGE ▲		Q.VIEW; +; ↑				[] SWAP		VCR/DVD DEVICE	
AUDIO; NICAM	[] S.STD		S-SEL				LOCATE; []		PERFECT FOCUS	
VIDEO; SYS	[] P.STD		P-SEL				SIZE		[] TV/VIDEO	
[] ZOOM	P.SIZE		SIZE				P.SIZE; []		POSITION/SIZE	
▼; TV	PAGE ▼		-; ↓		PC		TV; []		TV; []	
[] LOCK	PinP ON; PIP	▲; SCAN	PIP ON/OFF/DIOMA		PIP; ON	AUTO	PIP ON	SCAN	PIP; PIP ON	SCAN
▲; FAV	[] SWAP	[] STILL	RESET; NORM/CL.		STILL; []		[] STILL PICTURE		[] SWAP	
[]	[] ROTATE; LOCAT.						[] STILL		LOCATE; []	
[]	[] POWER		POWER		POWER; []		POWER; []		POWER; []	
AV	[] TV/VIDEO	TV/VIDEO	TV/VIDEO		TV/VIDEO; []		VIDEO; []	TV/VIDEO	VIDEO; []	
[] MUTE	[] MUTE		MUTE		MUTE; []		MUTE; []		[] MUTE	
MENU	[] MENU		AUTO/MAN SYS.; ±		MENU; []		MENU; []		MENU; []	
EXIT					EXIT					
▲	CH ▲; CH UP		MODE ▲				CH ▲			
◀										
OK	[] STORE									
▶										
▼	CH ▼; CH DOWN		MODE ▼				CH ▼			
[] SETUP	[] P.MENU		PIC. MODE; P-MODE		P.STD; []		P.MENU; []		INFO.	
[] TITLE	[] S.MODE; MTS	[] SURROUND			S.STD; []		S-MODE; I-II; []		S-MODE; []	[]
[] GUIDE	[] TV/TEXT	[] MIX	S-MODE; CLOCK		TTX/MIX; []		[] TTX/MIX		[] TEXT/MIX	
[]	N.R		HOUR		MIX; []		SLEEP; []		TV DEVICE	
[]	[] SLEEP	SKIP TIMER	SLEEP; AC		SLEEP; []		SLEEP; []		SLEEP; []	
[]	[] LIST/FLOF		TIMER		LIST/FLOF; []		[] MIX		MIX	
RED; []	RED; PRE-CH		MINUTE; MIN		RED; P.SIZE		RED; TURBO		RED; []	AV-LINK []
GREEN; []	GREEN		TIME ON; MENU 2		GREEN		GREEN; S.MENU		G.; S.STD; []	AV-LINK []
YELLOW; []	YELLOW		TIME OFF; MENU 1		YELLOW		YEL.; S.STD; []		Y.; P.STD; []	PC DEVICE
BLUE; []	BLUE		MANUAL SYS.; X		BLUE; LOCATE		BLUE; P.STD; []		BLUE; [] MUTE	CABLE DEVICE
[]	[] DISPLAY	[] MULTI	RECALL		DISPLAY; []		DISPLAY; []		DISPLAY; []	
[]	P/C		ROTATE		PRE-CH					
VOL -	VOL -		VOUMEL ▼		[]		VOL -		[]	
VOL +	VOL +		VOLUME ▲		[]		VOL +		[]	
CH V; []	CH ▼; P-		CHANNEL ▼		P▼; []		CH/P▼		CH/P▼	CH▼; P▼
CH A; []	CH ▲; P+		CHANNEL ▲		P▲; []		CH/P▲		CH/P▲	CH▲; P▲
[] SAT	[] +100		1*; +/-		[]		[]		[]	
CLEAR; X	[] CANCEL		2*; STORE; =		CANCEL; []		[]		[]	
[]	[] SUBPAGE				SUBPAGE; []		[]		[]	
[]	[] INDEX				[]		[]		[]	
[]	[] REVEAL				DUAL VII; []		[]		[]	
[]	[] HOLD				HOLD; []		[]		[]	
[]	[] F/T/B; P.SIZE		STILL/STROBO		SIZE; []		[]		[] P.SIZE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F

Кнопки пульта IRC 16 F	Код 121		Код 122		Код 123		Код 124		Код 125	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	DVD DEVICE		VCR/DVD DEVICE	CABLE DEVICE	DVD DEVICE		DVD DEVICE	CABLE DEVICE	TV ⇄ DVD	
AUDIO ; NICAM	CABLE DEVICE		S.STD ; - J -		CABLE DEVICE		A.SOUND		S.STD ; - J -	
VIDEO ; SYS	VCR DEVICE		P.STD ; - J -		VCR DEVICE		VCR DEVICE		P.STD ; - J -	
Ⓜ ; ZOOM	P.SIZE ; Ⓜ ; Ⓜ	SIZE	P.SIZE ; Ⓜ		P.SIZE ; Ⓜ ; Ⓜ	SIZE	ASPECT ; P.SIZE	SIZE	ZOOM	
▼ ; TV	TV ; Ⓜ	TV DEVICE	TV DEVICE	PC DEVICE	TV ; Ⓜ	TV DEVICE	TV DEVICE	TV/PC	TV ⇄ DVD	
Ⓜ ; ↻	PIP ON	SCAN	PIP ON	SCAN ; ▲	PIP ON	SCAN	PIP ON	CH.SCAN		
Ⓜ ; LOCK	Ⓜ ; STILL PICTURE		Ⓜ ; STILL		Ⓜ ; STILL		STILL		P.SIZE	
▲ ; FAV			R/B				FAV.CH		▲ ; OPEN/CLOSE	
Ⓜ	Ⓜ		POWER ; Ⓜ		POWER ; Ⓜ		POWER ; Ⓜ		POWER ; Ⓜ	
AV	VIDEO ; Ⓜ ; Ⓜ	TV/VIDEO	TV/VIDEO ; Ⓜ		VIDEO ; Ⓜ	TV/VIDEO ; SOURC	TV/VIDEO ; SOURCE	SOURCE ; TV/VIDEO	INPUT ; Ⓜ	
Ⓜ	MUTE ; Ⓜ		Ⓜ ; MUTE		MUTE ; Ⓜ		MUTE ; Ⓜ		MUTE ; Ⓜ	
MENU	MENU ; Ⓜ		Ⓜ ; MENU		Ⓜ ; MENU ; Ⓜ		Ⓜ ; MENU		Ⓜ ; MENU	
EXIT			ESCAPE		Ⓜ ; MENU ; Ⓜ		EXIT ; - J ; ZOOM		Ⓜ ; MENU	
▲	P ▲		CH ▲		▲		▲		▲	
◀					◀		◀		◀	
OK					Ⓜ		Ⓜ ; ENTER		Ⓜ	
▶					▶		▶		▶	
▼	P ▼		CH ▼		▼		▼		▼	
Ⓜ ; SETUP	P.MENU ; Ⓜ		P.MENU ; Ⓜ		INFO.		P.MODE ; P.STD		Ⓜ ; PROGRAM	
♪ ; TITLE	S.MODE ; Ⓜ ; Ⓜ		S.MODE ; Ⓜ ; Ⓜ	Ⓜ ; SURROUND	S.MODE ; Ⓜ ; Ⓜ		S.MODE	SURROUND ; Ⓜ	I/II ; AUDIO	
Ⓜ	Ⓜ ; TTX/MIX		Ⓜ ; TV/TEXT	Ⓜ ; MULTI	Ⓜ ; TEXT/MIX		CAPTION		Ⓜ ; TV/TEXT	
GUIDE	DNLE		Ⓜ ; LIST/FLOF		Ⓜ ; MULTI		V.CHIP		STEP&LNA	
Ⓜ	SLEEP ; Ⓜ ; Ⓜ		SLEEP ; Ⓜ		SLEEP ; Ⓜ		SLEEP		SLEEP	
Ⓜ	Ⓜ ; MIX		Ⓜ ; MIX		MIX		R.SURF ; SKIP TIME.		SUBTITLE	
RED ; ●	RED ; TURBO	Ⓜ ; SWAP	RED ; MIX	Ⓜ ; ROTATE	RED ; INFO.	AV-LINK ●	MTS		RED ; MENU ; Ⓜ	
GREEN ; ▶	GREEN ; S.MENU	Ⓜ ; STILL	GREEN	Ⓜ ; SWAP	G. ; S.STD ; - J -	AV-LINK ■	ADD/ERASE		GREEN ; DISC MENU	
YELLOW ; ◀	YEL. ; S.STD ; - J -	LOCATE ; Ⓜ	YELLOW	Ⓜ ; STORE	Y. ; P.STD ; - J -	Ⓜ ; SWAP	LOCATE		YELLOW ; TOP MENU	
BLUE ; ▶	BLUE ; P.STD ; - J -		BLUE	CONV.	BLUE ; SCAN-MODE	LOCATE ; Ⓜ	SWAP		BLUE ; DISPLAY ; Ⓜ	
Ⓜ	DISPLAY ; Ⓜ ; Ⓜ		DISPLAY ; Ⓜ		DISPLAY ; Ⓜ ; Ⓜ		DISPLAY ; Ⓜ ; INFO		Ⓜ	
Ⓜ			P/C				PRE-CH		PRE-CH	◊ ; Ⓜ ; RETURN
VOL -	↘		VOL -		↘		VOL -		↘	
VOL +	↗		VOL +		↗		VOL +		↗	
CH V ; ◀▶	P ▼		CH ▼ ; PAGE ▼		P ▼	P ▼	CH ▼	CH ▼	P ▼ ; Ⓜ	◀▶
CH A ; ▶▶	P ▲		CH ▲ ; PAGE ▲		P ▲	P ▲	CH ▲	CH ▲	P ▲ ; Ⓜ	▶▶ ; TXT_MIX
Ⓜ ; SAT	Ⓜ ; Ⓜ		- J		- J		+100 ; -		- J	
CLEAR ; X			Ⓜ ; CANCEL		Ⓜ		TURBO	TURBO	X ; Ⓜ ; CLEAR	
◀ ; ●	Ⓜ		Ⓜ ; SUBPAGE		Ⓜ		◀ ; REW		◀ ; ◀	Ⓜ ; ANGLE
▶ ; i	Ⓜ		Ⓜ ; INDEX		Ⓜ		▶ ; PLAY		▶ ; ▶	
▶▶ ; ?	Ⓜ		Ⓜ ; REVEAL		Ⓜ		▶▶ ; FF		▶▶ ; ▶	Ⓜ ; REPEAT
Ⓜ ; Ⓜ	Ⓜ		Ⓜ ; HOLD		Ⓜ		Ⓜ ; STOP		Ⓜ	Ⓜ ; BOOKMARK
Ⓜ ; Ⓜ	Ⓜ		Ⓜ ; F/T/B		Ⓜ		▶ ; ▶		▶ ; ▶	Ⓜ ; SLEEP
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F

Кнопки пульта IRC 16 F	Код 126		Код 127		Код 128		Код 129		Код 130	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD			DVD	CABLE	MULTI ; Ⓜ		DNLE		DVD	STB
AUDIO ; NICAM	ST/DUAL		S.STD ; - J -		- J ; S.STD		- J ; S.M.		S.M. ; - J -	CATV
VIDEO ; SYS	VIDEO		P.STD ; - J -		- J ; P.STD		- J ; P.M.		P.M. ; - J -	VCR
Ⓜ ; ZOOM			Ⓜ ; SIZE ; Ⓜ		ZOOM ; Ⓜ		Ⓜ ; P.SIZE ; Ⓜ	ZOOM	Ⓜ ; P.SIZE ; Ⓜ	
▼ ; TV	TV		TV		TV ; Ⓜ		TV ; Ⓜ		TV ; Ⓜ	TV
Ⓜ ; ↻	GRAPHIC		PIP ON		PIP ON	CH.SCAN ; ▲	PIP		PIP ON	
Ⓜ ; LOCK			Ⓜ ; LIST/FLOF		Ⓜ ; STILL PICTURE		Ⓜ ; STILL		Ⓜ ; STILL	
▲ ; FAV			P.SIZE ; Ⓜ		SWAP ; Ⓜ	ROTATE ; Ⓜ	Ⓜ ; SWAP		Ⓜ ; SWAP	
Ⓜ	POWER		POWER ; Ⓜ		POWER ; Ⓜ		Ⓜ ; POWER		Ⓜ ; POWER	
AV			TV/VIDEO ; Ⓜ	VCR	VIDEO ; Ⓜ		Ⓜ ; VIDEO ; Ⓜ	TV/VIDEO ; SOURCE	VIDEO ; Ⓜ ; Ⓜ	
Ⓜ			MUTE ; Ⓜ		MUTE ; Ⓜ		Ⓜ ; MUTE		MUTE ; Ⓜ	
MENU	MENU		Ⓜ ; MENU ; Ⓜ		MENU ; Ⓜ		MENU ; Ⓜ ; Ⓜ		MENU ; Ⓜ ; Ⓜ	
EXIT			EXIT				XIT/TV Ⓜ ; - J ; Ⓜ		EXIT ; - J	
▲	KEY +		▲		▲		▲ ; P ▲		▲	
◀	TEMPO -		◀		◀		◀ ; Ⓜ		◀	
OK	S.SEL		Ⓜ		◀ ; O.K		Ⓜ ; ENTER		ENTER ; ◀	
▶	TEMPO +		▶		▶		▶ ; SIZE		▶	
▼	KEY -		▼		▼		▼ ; P ▼		▼	
Ⓜ ; SETUP	P.SEL		PC		HELP ; ?		W.LINK			
♪ ; TITLE	KARAOKE/TV		DUAL I/II ; Ⓜ		Ⓜ ; S.MODE		S.MENU			
Ⓜ	INDEX		Ⓜ ; Ⓜ ; TEXT/MIX		Ⓜ ; Ⓜ ; TEXT/MIX		Ⓜ ; Ⓜ ; TTX/MIX		Ⓜ ; Ⓜ ; TTX/MIX	
GUIDE	RES.		DOLBY VIRT. ; Ⓜ		? ; HELP		ROTATE			
Ⓜ	SLEEP		SLEEP ; Ⓜ ; Ⓜ				SLEEP ; Ⓜ ; Ⓜ		SLEEP ; Ⓜ	
Ⓜ	PSEUDO		Ⓜ ; MIX		Ⓜ ; MIX	DEVICE 1	Ⓜ ; EZ.VIEW			
RED ; ●			RED ; Ⓜ ; SWAP		RED	AV LINK ●	RED ; TURBO		RED ; SURROUND ; Ⓜ	
GREEN ; ▶			GREEN ; SOURCE		GREEN	AV LINK ■	GREEN ; S.MENU		GREEN ; S.M. ; - J -	
YELLOW ; ◀			YELLOW ; P ▼		YELLOW	DEVICE 2	YELLOW ; - J ; S.M.		YELLOW ; P.M. ; - J -	
BLUE ; ▶			BLUE ; Ⓜ ; LOCATE		BLUE	DEVICE 3	BLUE ; - J ; P.M.		BLUE ; DUAL HI	
Ⓜ	RECALL		DISPLAY ; Ⓜ		DISPLAY ; Ⓜ		INFO ; Ⓜ ; Ⓜ		INFO ; Ⓜ ; Ⓜ	
Ⓜ			PRE-CH				Ⓜ ; PRE-CH		PRE-CH ; Ⓜ	
VOL -	VOL -		↘		VOL - ; ↘		↘		↘	
VOL +	VOL +		↗		VOL + ; ↗		↗		↗	
CH V ; ◀▶	CH ▼		P ▼ ; Ⓜ	P ▼	P ▼ ; Ⓜ	CH ▼	P ▼ ; Ⓜ	CH ▼	P ▼ ; Ⓜ	P ▼
CH A ; ▶▶	CH ▲		P ▲ ; Ⓜ	P ▲	P ▲ ; Ⓜ	CH ▲	P ▲ ; Ⓜ	CH ▲	P ▲ ; Ⓜ	P ▲
Ⓜ ; SAT	- J		- J		- J		- J ; Ⓜ		- J ; Ⓜ	
CLEAR ; X			Ⓜ ; Ⓜ ; STILL		Ⓜ ; CANCEL		Ⓜ		Ⓜ ; Ⓜ	
◀ ; ●			SUBPAGE ; Ⓜ ; P ▲		Ⓜ ; TIME/SUBPAGE		◀ ; REW	Ⓜ ; DUAL HI	Ⓜ ; ◀	◀
▶ ; i	START/STOP		Ⓜ		INFO ; Ⓜ		▶ ; PLAY/PAUSE	Ⓜ	i ; CH.INFO	▶ ; ▶
▶▶ ; ?			Ⓜ		Ⓜ ; REVEAL		▶▶ ; FF	Ⓜ	INFO ; Ⓜ ; Ⓜ	▶▶
Ⓜ ; Ⓜ			Ⓜ		Ⓜ		Ⓜ ; STOP	Ⓜ	Ⓜ ; ▶ ; ▶	Ⓜ
Ⓜ ; Ⓜ			Ⓜ ; SIZE ; Ⓜ		Ⓜ ; SIZE		▶▶ ; PLAY/PAUSE	Ⓜ	Ⓜ ; ▶ ; ▶	▶▶
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F

Кнопки пульта IRC 16 F	Код 131		Код 132		Код 133		Код 134		Код 135	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	DVD	VCR/DVD	→→+		PC	DVD	PC		I-II; DUAL/MTS	
AUDIO; NICAM					CH MGR	CABLE	DUAL; I-II		☐; POSITION	
VIDEO; SYS	DNIe				WISELINK	VCR				
☐; ZOOM	☐; P.SIZE; ☐				P.SIZE	STB	P.SIZE		P.SIZE	
▼; TV	TV	CABLE	→-		TV	TV	TV; ☐			
☐; ↻	PIP ON		◇		PIP		PIP; ☐		☐; PIP	
☐; LOCK	☐; STILL		N/N		E.SAVING		☐; STILL		☐; SIZE	
▲; FAV			CS		FAV. CH				MAGIC-CH	
○	○; POWER		○		○; POWER		○; POWER		○; POWER	
AV	VIDEO; ☐	STB	AV/TV		SOURCE	SOURCE	☐; SOURCE; ☐		☐; SOURCE; ☐	
⏏	MUTE; ⏏		⏏		⏏; MUTE		⏏; MUTE		⏏; MUTE	
MENU	MENU; ☐; ☐				MENU; ☐; ☐		MENU; ☐; ☐		MENU; ☐; ☐	
EXIT	EXIT/TV ☐; →☐				EXIT; →☐		EXIT ☐; →☐		EXIT; →☐	
▲	▲		☼+		▲		▲		▲	
◀	◀		○-	○+	◀		◀		◀	
OK	ENTER; ↵		○-	○+	↵; ENTER		ENTER; ↵		ENTER; ↵	
▶	▶		☼+	☼-	▶		▶		▶	
▼	▼		☼-	☼+	▼		▼		▼	
⌘; SETUP	LIVE		☐		P.MODE		☐; P.M.		P.MODE	
♪; TITLE	SURROUND; ☐		I/II		S.MODE		☐; S.M.		☐; S.MODE	
☐	☐; TTX/MIX		☐		CAPTION		☐; TTX/MIX		☐; TTX/MIX	
GUIDE	DVR				MTS					
⏻	SLEEP; ⏻				SLEEP		SLEEP; ☐			
☐			☐		POSITION		☐; AUTO PROG.			
RED; ●	RED; DVR MENU	REC	RED		RED: P.MODE	SRS (●)	RED: DUAL; I-II		RED; AUTO	
GREEN; ►	GREEN; TELEWEB	QUICK PLAY	GREEN		GREEN; S.MODE	DNIe	GREEN; ☐; S.M.		GREEN; M/B; P.MOD.	
YELLOW; ◀	YELLOW; S.M.; ☐		YELLOW	☐; ☐	YELLOW; STILL	D-NET	YELLOW; P.SIZE		YELLOW; P.SIZE	
BLUE; ▶	BLUE; P.M.; ☐		BLUE	☐; ☐	BLUE; P.SIZE	SWAP	BLUE; ☐; P.M.		BLUE; STILL	
☐	INFO; ☐; ☐		☐		INFO		INFO; ☐; ☐		☐; INFO ☐	
⏻					PRE-CH		PRE-CH		☐; PRE-CH	
VOL -	↵		↵	↵	VOL -		↵		↵	
VOL +	↵		↵	↵	VOL +		↵		↵	
CH V; ◀	P ▼; ☐		PR -	☐; ☐	CH ▼	CH ▼	P ▼; ☐		CH P ▼; ☐	
CH A; ▶	P ▲; ☐		PR +	☐; ☐	CH ▲	CH ▲	P ▲; ☐		CH P ▲; ☐	
⊕; SAT					-	ANTENNA	☐; ☐		☐; +100	
CLEAR; X	☐; DUAL HI		☐		ADD/DEL		☐			
◀; ●	☐; HOME	◀; REW	☐		◀; REW		☐; ADD/DEL		☐	
▶; i	☐	▶; PAUSE/PLAY	☐		▶; PAUSE/PLAY		☐		☐	
▶; ?	☐	▶; FF	☐		▶; FF		☐		☐	
■; ⏏		■; STOP	☐		■; STOP		☐		☐; PIP	
; ●	☐; P.SIZE; ☐	; PAUSE/PLAY	☐		; PAUSE/PLAY		☐		☐; SOURCE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F

Кнопки пульта IRC 16 F	Код 136		Код 137		Код 138		Код 139		Код 140	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	OFF						DVD		SRS (●)	☐; TV/DTV
AUDIO; NICAM	S. SEL (PIP)				☐; S.STD		CABLE		☐; 3D	
VIDEO; SYS	SWAP (PIP)		MONITOR		☐; P.STD		VCR		MEDIA. P; W.LINK	
☐; ZOOM	ZOOM				☐; ZOOM	☐; SWAP	P. SIZE; ☐	SIZE	P. SIZE	
▼; TV	SIZE (PIP)				☐; TV		TV		☐; TV	SOCIAL; TV
☐; ↻	PIP ON				PIP ON		PIP ON	SCAN	CH LIST; ☐	PIP
☐; LOCK	STILL				☐; S.MODE		SWAP; ☐		CON-T; SMART HUB	SEARCH
▲; FAV	LOCATE (PIP)		▲; EJECT		☐; ROTATE		☐; POSITION		☐; POWER	
○	○; ON		○; POWER		○; POWER		○; POWER		☐; SOURCE; ☐	HDMI
AV	SOURCE	SOURCE (PIP)	LINE IN		☐; AV	☐; A/V	☐; SOURCE; ☐	SOURCE	☐; SOURCE; ☐	
⏏	⏏; MUTE		⏏; MUTE		⏏; MUTE		⏏; MUTE		⏏; MUTE	
MENU	MENU; ☐; ☐		☐; MENU		☐; F.MENU		MENU; ☐; ☐		MENU; ☐; ☐; ☐	SPORTS
EXIT	EXIT; →☐						EXIT; →☐		EXIT; →☐; ☐	
▲	▲		TRK +		P ▲		▲		▲	
◀	◀		TRK -				◀		◀	
OK	↵						☐; ENTER		☐; ENTER	
▶	▶		TRK +				▶		▶	
▼	▼		TRK -		P ▼		▼		▼	
⌘; SETUP	P. MODE		P.STD		☐; P.MENU		P.MODE; ☐; ☐		P.MODE	E.MODE
♪; TITLE	S. MODE				☐; S.MENU		S.MODE; ☐; ☐		S.MODE	DUAL; I-II
☐			VISS		☐; TEXT	☐; MIX	☐; TTX/MIX		☐; TTX/MIX	DMA
GUIDE			P.PLUS						GUIDE	INTERNET; @TV
⏻	TIMER		REPEAT		☐; SLEEP		SLEEP; ☐		TOOLS; ☐; ☐	AD
☐	CLOCK DISPLAY		SPEED		i; INFO				SUBT.; AD/SUBT.	E-MANUAL; SUPP.
RED; ●	RED; AUTO		●; REC		RED		RED; DNIe		RED; A	●
GREEN; ►	GREEN; S. EFFECT		►; F. ADV SKIP		GREEN		GREEN; STILL		GREEN; B	STATUS
YELLOW; ◀	YELLOW; P. SIZE		SLOW -		YELLOW		YELLOW; DUAL I-II		YELLOW; C	HISTORY
BLUE; ▶	BLUE; MDC		SLOW +		BLUE		BLUE; SRS T.; (●)		BLUE; D	FAMILY STORY
☐	INFO		DISPLAY		☐; DISPLAY		☐; INFO ☐		INFO; i; ☐	CAMERA
⏻			PRE-CH		P/C				PRE-CH; ☐	RETURN; ☐; ☐
VOL -	VOL -		VOL -		↵		↵		↵	
VOL +	VOL +		VOL +		↵		↵		↵	
CH V; ◀	CH ▼		CH ▼		P ▼; ☐		P ▼; ☐	P ▼	P ▼; ☐	
CH A; ▶	CH ▲		CH ▲		P ▲; ☐		P ▲; ☐	P ▲	P ▲; ☐	
⊕; SAT			+100		☐; ☐		☐; ☐		☐; ☐	
CLEAR; X			X; CANCEL				STB			
◀; ●			◀; REW		☐; SUBPAGE		☐	◀; REW	◀; REW	☐
▶; i			▶; PLAY		☐; INDEX		☐	▶; PAUSE/PLAY	▶; PAUSE/PLAY	☐
▶; ?			▶; FF		☐; REVEAL		☐	▶; FF	▶; FF	☐
■; ⏏			■; STOP		☐; HOLD		☐	■; STOP	■; STOP	☐
; ●			; PAUSE		☐; FT/B		☐	; PAUSE/PLAY	; PAUSE/PLAY	☐
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F

Кнопки пульта IRC 16 F	Код 141		Код 142		Код 143		Код 144		Код 145	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			HDMI		DVD	CABLE	TV/DTV	DVD		
AUDIO; NICAM	- P -; S.MODE				I-II; DUAL		I-II; DUAL	VCR		
VIDEO; SYS	- P -; P.MODE		W.LINK		WISELINK	VCR	CH LIST			
⏏; ZOOM	⏏; P.SIZE		P.SIZE		⏏; P.SIZE	⏏; SWAP	⏏; P.SIZE			
▼; TV	□; TV		□; TV/DTV		□; TV		□; TV	CABLE		
⏏; ↻			CH.LIST		⏏; PIP; PIP ON		⏏; PIP			
⏏; LOCK	⏏; STILL		DMA		⏏; STILL		⏏; STILL			
▲; FAV					PC		ANYNET			
⏏	⏏; POWER		⏏; POWER		⏏; POWER		⏏; POWER			
AV	⏏; SOURCE; ⏏		⏏; SOURCE; ⏏		⏏; SOURCE; ⏏	SOURCE	⏏; SOURCE; ⏏			
⏏	⏏; MUTE		⏏; MUTE		⏏; MUTE		⏏; MUTE			MUTE
MENU	MENU; ⏏; ⏏		MENU; ⏏; ⏏		MENU; ⏏; ⏏		MENU; ⏏; ⏏			⏏
EXIT	EXIT; ↻; ⏏		EXIT; ↻; ⏏		EXIT; ↻; ⏏		EXIT; ↻; ⏏			EXTRA
▲	▲		▲		▲		▲			▲
◀	◀		◀		◀		◀			◀
OK	⏏; ENTER		⏏; ENTER		⏏; ENTER		⏏; ENTER/OK			OK
▶	▶		▶		▶		▶			▶
▼	▼		▼		▼		▼			▼
*; SETUP			⏏; TOOLS; ⏏		⏏; P.MODE; ↻; ⏏		⏏; P.MODE			
♪; TITLE			E.MODE		⏏; S.MODE		D.MENU			
⏏			⏏; TTX/MIX		⏏; TTX/MIX		⏏; TTX/MIX			
GUIDE			GUIDE; ⏏		CH MGR		GUIDE			EPG
⏏	⏏; SLEEP				⏏; SLEEP					
⏏; ●	⏏; TTX/MIX		SUBT.		SRS (●)		SUBTITLE			
RED; ●	RED; ↻; P.MOD.		RED	●	RED; STILL; TeleWeb		RED	●; REC		
GREEN; ▶	GREEN; ↻; S.M.		GREEN		GREEN; HOME		GREEN			
YELLOW; ◀	YELLOW; ⏏; STILL		YELLOW		YELLOW; DUAL I-II		YELLOW			
BLUE; ▶	BLUE; ⏏; P.SIZE		BLUE		BLUE; ⏏; SURR.		BLUE			
⏏	⏏; INFO; ⏏		INFO; i; ⏏		INFO; i; ⏏		INFO; i; ⏏			
↻	↻; PRE-CH		PRE-CH; ⏏	↻; RETURN; ⏏	↻; PRE-CH; ⏏		PRE-CH; ⏏	↻; RETURN		↻
VOL -	↵		↵		↵		↵			VOL -
VOL +	↵+		↵+		↵+		↵+			VOL +
CH V; ◀	P ▼; ⏏		P ▼; ⏏		P ▼; ⏏	P V	P ▼; ⏏			CH -
CH A; ▶	P ▲; ⏏		P ▲; ⏏		P ▲; ⏏	P ▲	P ▲; ⏏			CH +
+/SAT	⏏; ↻		↻		↻	STB		STB		
CLEAR; X	⏏		⏏		⏏		⏏			
◀; ●	⏏; DUAL I-II		◀	⏏	◀; REW	⏏; DNie	◀; REW	⏏		
▶; i			▶	⏏	▶; PLAY/PAUSE	⏏	▶; PLAY/PAUSE	⏏		▶
▶; ?	⏏		▶	⏏	▶; FF	⏏	▶; FF	⏏		
■; ⏏	⏏		■	⏏	■; STOP	⏏; PIP; PIP ON	■; STOP	⏏		
■; ●	⏏		■	⏏	■; PLAY/PAUSE	⏏; P.MODE; ↻; ⏏	■; PLAY/PAUSE	⏏		■
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0			123,123,123

Функции кнопок пульта IRC 16 F

Кнопки пульта IRC 16 F	Код 146		Код 147		Код 148	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			FAV +			
AUDIO; NICAM	DUAL; I-II		ROOT; AUDIO	NICAM		
VIDEO; SYS	HDMI		REPEAT			
⏏; ZOOM	P.SIZE		ASPECT; ZOOM; SIZ			
▼; TV	INTERNET; @TV		FAV -			
⏏; ↻	MEDIA.P		AUTO		CH LIST; ⏏	
⏏; LOCK	CH LIST; ⏏		HOME; FREEZE		⏏; TOOLS; ⏏	
▲; FAV			FAV			
⏏	⏏; POWER		⏏; POWER		⏏	
AV	⏏; SOURCE; ⏏		INPUT		⏏; SOURCE; ⏏	
⏏	⏏; MUTE		⏏; MUTE		⏏; MUTE	
MENU	⏏; MENU; ⏏		MENU	HOME; FREEZE	⏏; MENU; ⏏	
EXIT	EXIT; ↻; ⏏		EXIT		EXIT; ↻; ⏏	
▲	▲		▲		▲	
◀	◀		◀		◀	
OK	⏏; ENTER		ENTER; OK		⏏; ENTER	
▶	▶		▶		▶	
▼	▼		▼		▼	
*; SETUP	⏏; TOOLS; ⏏		P.MODE; ↻; ⏏		HOME	
♪; TITLE	S.MODE		S.MODE; ↻; ⏏	TV/RADIO	CONTENT	
⏏	⏏; TTX/MIX		TEXT		⏏; TTX/MIX	
GUIDE	GUIDE		EPG		GUIDE; ⏏	
⏏	ALARM		SLEEP; Zz; ↻	SLEEP	ALARM	
⏏	SUBT.		SUBTITLE		SUBT.	
RED; ●	RED; A	●	RED	●	RED; A	
GREEN; ▶	GREEN; B		GREEN		GREEN; B	
YELLOW; ◀	YELLOW; C		YELLOW		YELLOW; C	
BLUE; ▶	BLUE; D		BLUE		BLUE; D	
⏏	i; ⏏; INFO		DISP; DISPLAY		i; ⏏; INFO	
↻	↻; RETURN; ⏏		↻; ↻		↻; RETURN; ⏏	
VOL -	↵		V-; VOL-		↵	
VOL +	↵+		V+; VOL+		↵+	
CH V; ◀	P ▼; ⏏		P-; CH-; CH ▼	◀; INDEX	P ▼; ⏏	
CH A; ▶	P ▲; ⏏		P+; CH+; CH ▲	▶; SIZE	P ▲; ⏏	
+/SAT	CH LIST; ⏏		GOTO	↻		
CLEAR; X	PRE-CH; ⏏	⏏	A-B		⏏	
◀; ●	◀	⏏	◀; REVEAL	SUBPAGE	◀; ◀	⏏
▶; i		⏏	▶; TEXT	INDEX	▶	⏏
▶; ?	▶	⏏	▶; SUBPAGE	REVEAL	▶; ▶	⏏
■; ⏏	■	⏏	■; HOLD	HOLD	■	⏏
■; ●	■	⏏	■; TEXT	SIZE	■	⏏
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F

Кнопки пульта IRC 16 F	Код 201		Код 202		Код 203		Код 204		Код 205	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	FINE TRACK ▲		SHIFT		START OTR; OTR ▲				TAPE FINDER +	
AUDIO ; NICAM	AUDIO ; OUTPUT		ADD		SHIFT				A. DUB	
VIDEO ; SYS	SYSTEM		MARK		MONITOR ; MO/SW					
⏏ ; ZOOM	INDEX		MEMORY		MFT ; 2nd					
▼ ; TV	FINE TRACK ▼		TAPE SPEED		LENG. OTR ; OTR ▼				TAPE FINDER -	
⏏ ; ↻	MEMORY	PRESET	CH SEAR.;CLK/CNT	CH PRES. ; ERASE	SEARCH	PRESET ; CH.SET			MEMO	
⏏ ; LOCK	SHIFT	MARK	CLK.CNT.; A.PROG		SKIP SEARCH				NORM	
▲ ; FAV	EJECT		EJECT		▲ ; EJECT				EJECT ; ▲	
⏏	⏏ ; POWER		POWER ; CЕТЬ		POWER		POWER		POWER ; ⏏	
AV	TV/VCR	INPUT	INPUT SELECT	VCR ; VCR/TV	VCR/TV	INPUT SELECT			AUX	
⏏										
MENU	MENU ; PROG.	PROG.	MENU ; PROGRAM		PROG				MENU	
EXIT	ERASE	ERASE	D. TRK							
▲	▲	▲	15 ; SLOW ▲		SLOW +				▲	
◀	◀	◀ ; SOFTEN	SHUTTLE ◀◀		V-LOCK/MFT - ; -				◀	
OK	ENTER	OK	BAND SEL		BAND SELECT				ENTER	
▶	▶	▶ ; SHARPEN	SHUTTLE ▶▶		V-LOCK/MFT + ; +				▶	
▼	▼	▼	16 ; SLOW ▼		SLOW -				▼	
⌘ ; SETUP	PICTURE ; IPC		ONITOR ; TV/CATV		CLOCK ; AUTO TRK.				VIEW SKIP/BLANK	
♪ ; TITLE	A.DUB		DUB ; A.DUB		MEMORY				OOOO ; T-160	
⏏	BAND		AFT	START OTR	CLOCK COUNT				S.Q.P. ; G-CODE	
GUIDE	AFT		ATR	OTR START	VPS				COUNT REMAIN	
⏏	ShowView ; TIMER	CLOCK COUNTER	TIMER ; LENGTH	LENGHT OTR	TIMER				AUTO ; TIMER	
⏏	Q-PRO		Q-PRO		CLOCK ; CLEAR				i ; INDEX	
RED ; ●	SEARCH	● REC ; REC/OTR	11 ; SKIP ENCORE	● ; REC ; ЗАП	D. TRK	● REC	● REC		SP/LP ; TAPE SP.	● REC
GREEN ; ▒	D. TRK ; A. TRK		12	2nd ; ▒ ПСК ; F. ADV	Q-PRO				▒ ; F. ADV	
YELLOW ; ◀	SLOW ▼		13		MARK				SLOW - ; SPEED -	
BLUE ; ▶	SLOW ▲	▶ ; SLOW	14	SLOW ▶	SLOW ; ▶				SLOW - ; SPEED +	SLOW
⏏	DISPLAY		DISPLAY	INDEX	DISPLAY				DISPLAY	
⏏	↻ ; REPEAT		P/C ; CH 100		INDEX				⏏ ; TV/VTR	REPEAT
VOL -	VOL ▼	SHUTTLE <<	TRACK ▼		TRK ▼				TRACKING ▼	
VOL +	VOL ▲	SHUTTLE >>	TRACK ▲		TRK ▲				TRACKING ▲	
CH V ; ◀▶	CH ▼ ; TRK ▼	-	P- ; CH ▼ ; КАНАЛ ▼		CHANNEL ▼		P -		CH ▼	
CH A ; ▶▶	CH ▲ ; TRK ▲	+	P+ ; CH ▲ ; КАНАЛ ▲		CHANNEL ▲		P +		CH ▲	
⊕ ; SAT	SPEED ; SP/LP		-/- ; SYSTEM SEL.		TAPE SPEED				CH 1/2	
CLEAR ; X	CLEAR ; RESET		CLEAR RESET	ERASE	ERASE					
◀◀ ; ●	◀◀ ; REW ; ◀		◀◀ ; ПН ; REW		◀◀ ; REW		◀◀ (REW)		◀◀ ; REW ; ◀	
▶ ; i	▶ ; PLAY/x2 ; ▲		▶ ; БОСП ; PLAY		▶ ; PLAY/x2		▶ (PLAY)		▶ ; PLAY ; ▲	
▶▶ ; ?	▶▶ ; F.FWD ; ▶		▶▶ ; ПВ ; F.F		▶▶ ; FF		▶▶ (F.FWD)		▶▶ ; F.FWD ; ▶	
■ ; ⏏	■ ; STOP ; ■ / ▲ ; ▼		■ ; STOP ; СТОП		■ ; STOP		■ (STOP)		■ ; STOP ; ▼	
⏏ ; ●	⏏ ; PAUSE ; P/S ; ▒		⏏ ; P/S ; ПАУЗА		⏏ / ▒ ; P/S F. ADV		⏏ (PAUSE)		⏏ ; PAUSE ; ENTER	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F

Кнопки пульта IRC 16 F	Код 206		Код 207		Код 208		Код 209		Код 210	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD										
AUDIO ; NICAM	AUDIO								AUDIO	
VIDEO ; SYS	MIC-DUB		MAC/PAL							
⏏ ; ZOOM										
▼ ; TV									TV/VCR	
⏏ ; ↻			SCAN							
⏏ ; LOCK			STORE							
▲ ; FAV	▲ ; EJECT								▲ ; EJECT	
⏏	ON/STANDBY		POWER		START/STOP		START/STOP		STANDBY/ON	
AV	TV/VCR								INPUT	
⏏			MUTE							
MENU	MENU		BAND				Z/MEMORY		MENU	
EXIT										
▲									▲	
◀									◀	
OK	ENTER		SELECT						OK	
▶									▶	
▼									▼	
⌘ ; SETUP	LESSON		MODE				COUNTER			
♪ ; TITLE	KARAOKE		PL		TITLE ON/OFF		TITLE ON/OFF		DUB	
⏏	A. TRK ; ATR		D. EMP						A. TRK	
GUIDE	MARK		V/H						IPC	
⏏					SELF TIMER		SELF TIMER		TIMER	
⏏	INDEX								INDEX	
RED ; ●	ERASE	REC/OTR; LINE REC			INT.REC; TIME LAP.		INT.REC			REC
GREEN ; ▒	ERASE						DATE			
YELLOW ; ◀							TIME			
BLUE ; ▶	SLOW									
⏏	DISPLAY				DISPLAY ; DATA SC.		DATA SCREEN		DISPLAY	
⏏	NEXT									
VOL -	TRACKING ▼		TUNE ▼						TRK ▼	
VOL +	TRACKING ▲		TUNE ▲						TRK ▲	
CH V ; —	SELECT ▼		PR. ▼		W ; ZOOM W		W		PROG ▼	
CH A ; ▶▶	SELECT ▲		PR. ▲		T ; ZOOM T		T		PROG ▲	
⊕ ; SAT									SPEED	
CLEAR ; X									CLR/RST	
◀◀ ; ●	◀◀ ; REW				◀◀ ; REW		REW ; EDIT -		◀◀	
▶ ; i	▶ ; PLAY				▶ ; PLAY		▶ (PLAY)		▶ ▒	
▶▶ ; ?	▶▶ ; FF				▶▶ ; F.F		F/F ; EDIT +		▶▶	
■ ; ⏏	■ / ▲ ; STOP/EJEC				■ ; STOP		STOP		■	
⏏ ; ●	⏏ ; PAUSE/STILL				⏏ ; STILL		STILL		⏏	
1, 2, ... 9, 0			1, 2, ... 9, 0						1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F

Кнопки пульта IRC 16 F	Код 211	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM		
VIDEO ; SYS		
⏏ ; ZOOM		
▼ ; TV		
⏏ ; ↗		
⏏ ; LOCK		
▲ ; FAV		
⊖	⊖	
AV		
⏏		
MENU	FAN MODE	
EXIT	COOL MODE	
▲		
◀		
OK		
▶		
▼		
⌘ ; SETUP	ON/OFF E. SAVER	
⏏ ; TITLE		
⏏	FAN MODE	
GUIDE	COOL MODE	
⊖	SLEEP	
⏏	TIMER	
RED ; ●	HIGH FAN	
GREEN ; ▸	MED FAN	
YELLOW ; ◀	LOW FAN	
BLUE ; ▶		
⏏		
↔	↔ ; SWING	
VOL -	TEMP V	
VOL +	TEMP ^	
CH V ; ◀◀	TEMP V	
CH A ; ▶▶	TEMP ^	
⊕ ; SAT		
CLEAR ; X		
◀◀ ; ●		
▶ ; i		
▶▶ ; ?		
■ ; ⌘		
⏏ ; ●		
1, 2, ... 9, 0	LOW,MED,HIGH	

Функции кнопок пульта IRC 16 F

Кнопки пульта IRC 16 F	Код 301		Код 302		Код 303		Код 304		Код 305	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	DVI SEL.		TEMPO +		DVD		DVD		DVD	
AUDIO ; NICAM	AUDIO		AUDIO		MO:ST ; AUDIO		Z V.;S. MODE;AUD.	MELODY	AUDIO	
VIDEO ; SYS	VIDEO SEL.		MALE/FEMALE		D.R.C		SC;NTS.PAL.EZ V.	MOVIE	VCR	
⏏ ; ZOOM	ZOOM ; I.REPLAY		ZOOM		ZOOM ; TV SYSTEM		ZOOM	MALE; FEM. ; ZOOM	ZOOM ; INPUT SEL.	
▼ ; TV	SACD/CD		TEMPO -	DECK 1/2	BAND TUNER		BAND TUNER	SD/HD	FM/AM	
⏏ ; ↗	DIGEST ; I.SKIP		HI-LIGHT		TEST TONE		TUN. MEM.;P. SCAN	SEARCH SONG	EZ VIEW	
⏏ ; LOCK	ANGLE		ANGLE		ANGLE		LOGO ; DIMMER		ANGLE ; IPC	
▲ ; FAV	OPEN/CLOSE ; ▲		SCORE		▲ ; OPEN/CLOSE		▲ ; OPEN/CLOSE	FAVORITE SONG	▲ ; OPEN/CLOSE	
⊖	POWER ; ⊖/I		⊖/I		⊖/I		⊖/I ; ⊖ ; POWER		STANDBY/ON	
AV	DVD/M.STICK/AV-IN		AUX ; SOUND EDIT		AUX		DIMMER ; TV/VIDEO	TV/VIDEO	TV/VCR	
⏏	VOL.CON. ; PROG		MUTE		MUTE		MUTE ; ⏏		MUTE	
MENU	MENU ; DISC MENU		MENU		MENU		MENU ; ⏏	SOUND EDIT	MENU	
EXIT	⊖		DISC SKIP ; ⏏SURR.				EXIT ; ↗		A.DUB ; RETURN	
▲			▲		▲		▲		▲	
◀			◀		◀		◀		◀	
OK	ENTER ; ⏏		ENTER		ENTER		ENTER ; ⏏		OK ; ↗	
▶			▶		▶		▶		▶	
▼			▼		▼		▼		▼	
⌘ ; SETUP	SET-UP ; MENU		SETUP		SETUP		MOVIE;REP.;S.MOD.	SEL. HDMI AUDIO	DISC MENU	
⏏ ; TITLE	TOP (TITLE) MENU	3D	TITLE	BAND TUNER	TITLE		⏏ P.LII MODE	⏏ P.LII EFFECT	TITLE ; SPEED	
⏏	MODE ; PROG		SET ; PROGRAM		PROGRAM		AUX ; FUNC. ; USB	USB	SOUND MODE	
GUIDE	BOOKMARK		SEARCH SONG		SOUND EDIT		MUSIC ; DSP/EQ	TEST TONE	MARK ; SEARCH	
⊖	TIME SEARCH		IMER ON/OFF;SPK.	SLEEP	SLEEP		SLEEP	ASC		
⏏	SUBTITLE	SUBTITLE ON/OFF	SUBTITLE		SUB TITLE		SUB TITLE;S. SONG	V-H/P ; SUPER 5.1	SUBTITLE ; TIMER	
RED ; ●	I.REP.;VOL.;ZOOM	⊖	KEY CONTROL b	EQ	DSP/DPLII MODE	REPEAT	b KEY CONTROL	REPEAT ; DIGEST	SPEAKER	● REC
GREEN ; ▸	I.REPLAY ; ZOOM	⊖	KEY CONTROL #	MELODY	DSP/DPLII EFFECT	A -B REPEAT	# KEY CONTROL	REPEAT	TEST	
YELLOW ; ◀	STEP; LCD ON/OFF	⊖	STEP	FANFARE	STEP	SPK MODE	SUPER 5.1 ; STEP	TEMPO -	BASS	
BLUE ; ▶	SLOW	⊖	SLOW	SUBWOOF. LEVEL	SLOW	PRO LOGIC II	MO:ST ; SLOW	TEMPO +	TREBLE	
⏏	DISPLAY ; INFO	INFO	DISPLAY		DISPLAY	REMAIN	INFO	REMAIN	INFO	
↔	RETURN ; ⊖		RETURN	REPEAT	RETURN		RETURN ; ↗		MODE ; REPEAT	
VOL -	PRE. INDEX		VOLUME -		VOLUME -		VOLUME -	MIC VOL -	AMP VOL. -	
VOL +	NEXT INDEX		VOLUME +		VOLUME +		VOLUME +	MIC VOL +	AMP VOL. +	
CH V ; —	◀◀	PRE. PAGE	—		◀◀		◀◀	▼ TUNING/CH	◀◀ ; ◀◀	PROG/TRK ▼
CH A ; ▶▶	▶▶	NEXT PAGE	▶▶		▶▶		▶▶	▲ TUNING/CH	▶▶ ; ▶▶	PROG/TRK ▲
⊕ ; SAT	REPEAT	REPEAT A-B ; KAR.	GO TO		GO TO		RESERVE			
CLEAR ; X	CLEAR ; CANCEL	C	MO:ST;CANC./CLR.		CLEAR		CANCEL		CLEAR	
◀◀ ; ●	◀◀		◀◀ ; DOWN TUNING	◀◀ TAPE	◀◀ ; DOWN TUNING		◀◀		◀◀ ; ◀◀	
▶ ; i	▶▶ ; PLAY		▶▶	◀◀ TAPE	▶▶		▶▶ ; PLAY		▶▶ ; ▶▶	
▶▶ ; ?	▶▶		▶▶ ; UP TUNING	▶▶ TAPE	▶▶ ; UP TUNING		▶▶		▶▶ ; ▶▶	
■ ; ⌘	■ ; STOP		■	■ TAPE	■		■ ; STOP		■	
⏏ ; ●	▶▶ ; PLAY		⏏		⏏		▶▶ ; PLAY		▶▶	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F

Кнопки пульта IRC 16 F	Код 306		Код 307		Код 308		Код 309		Код 310	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	DVD		DVD		ECHO +				TUNING ▲	
AUDIO ; NICAM	AUDIO		AUDIO ; SETUP		AUDIO				AUDIO	
VIDEO ; SYS	VCR				HIGHLIGHT				EZ VIEW	
⏏; ZOOM			ZOOM;SVHS;SP-D		ZOOM				ZOOM	
▼; TV	TV/VCR		TV/VCR; A.TRK		ECHO -				TUNING ▼	
⏏; ↻	MARK ; SEARCH				DIMMER ; REMAIN	DIMMER			TAPE 1/2	SEARCH SONG
⏏; LOCK	ANGLE ; IPC		ANGLE ; MUTE		ANGLE				BAND ; TUNER	TUNER MEMORY
▲; FAV	▲; OPEN/CLOSE		▲; OPEN/CLOSE		▲; OPEN/CLOSE	FAVORITE			▲; OPEN/CLOSE	FAVORITE SONG
⏏	STANDBY/ON		STANDBY/ON		⏏/I				⏏/I	
AV	INPUT SEL.; F.ADV.		A.TRK;INP.SEL;TV.		MALE/FEMALE				AUX	MALE ; FEMALE
⏏			MUTE						⏏; MUTE	
MENU	MENU		DISC MENU		MENU/PBC ; ⏏				MENU ; ⏏	
EXIT	RETURN				DISK SKIP				DISC SKIP	
▲	▲		▲		▲				▲	
◀	◀		◀		◀				◀	
OK	OK ; ↵		SETUP/ENTER		ENTER ; ↵				⏏; ENTER	
▶	▶		▶		▶				▶	
▼	▼		▼		▼				▼	
⌘; SETUP	DISC MENU		MODE ; REPEAT		SET UP	SLIDE MODE			SLIDE MODE	
🎵; TITLE	KARAOKE		TITLE/SPEED		TITLE	SEARCH SONG			SOUND MODE	
⏏	EZ VIEW		CLOCK/COUNTER		EZ VIEW				LOGO	
GUIDE	SPEED		RET./A.DUB;AUDIO		DIGEST				MELODY	
⏏	TIMER		SCR.FIT ; SVHS		LOGO				SLEEP	
⏏	SUBTITLE		SUBTITLE ; TIMER		SUBTITLE				SUBTITLE	
RED ; ●		● REC	MARK/INDEX	● REC	KEYCON b	MELODY			b KEY CONTROL	
GREEN ; ⏏			3D SOUND		KEYCON #	SCORE			# KEY CONTROL	
YELLOW ; ◀	F.ADV/STEP		DIGEST.F.ADV/STE.		STEP	FANFARE			STEP	
BLUE ; ▶					SLOW	RESERVE			SLOW	
⏏	INFO.		DISPLAY		DISPLAY ; INFO				INFO	REMAIN
⏏	MODE ; REPEAT		AN.; KAR.; LAST PR		⏏; RETURN	REPEAT			⏏; RETURN	REPEAT
VOL -	TRK ▼; VOLUME -		TRK ▼; VOLUME ▼		TEMPO -				VOLUME -	TEMPO -
VOL +	TRK ▲; VOLUME +		TRK ▲; VOLUME ▲		TEMPO +				VOLUME +	TEMPO +
CH V ; ⏏	⏏; ⏏	PROG/TRK ▼	PROG/TRK ▼;ECH▼	⏏; REC	⏏				CH/P ▼	
CH A ; ⏏	⏏; ⏏	PROG/TRK ▲	PROG/TRK ▲;ECH▲	⏏; FRAME/STEP	⏏				CH/P ▲	
⏏; SAT					GOTO					
CLEAR ; X	CLEAR		CLEAR		CANCEL				CANCEL	
⏏; ⏏	⏏; ⏏		⏏; ⏏		⏏; SCAN				⏏	
▶; i	▶; i		▶; i		▶; i				▶; i	◀▶ TAPE
▶; ?	▶; ?		▶; ?		▶; ?				▶; ?	
■; ⏏	■; ⏏		■; ⏏		■; ⏏				■; ⏏	
⏏; ⏏	⏏; ⏏		⏏; ⏏		⏏; ⏏				⏏; ⏏	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0				1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F

Кнопки пульта IRC 16 F	Код 311		Код 312		Код 313		Код 314		Код 315	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			MONO/ST; FM MOD.		DVD	TEMPO + ; TUN. M.	DVD		DVD	
AUDIO ; NICAM	AUDIO		S. LEVEL ; S.BASS		AUDIO ; FAV. SONG	TEST TONE	AUDIO ; FAV. SONG		AUDIO ; FAV. SONG	
VIDEO ; SYS	EZ VIEW		SHUFFLE CD		DSP/EQ	NTSC/PAL; EZ VIEW	DEMO/DIMMER		DEMO/DIMMER	NTSC/PAL
⏏; ZOOM	ZOOM		TUNING MODE		ZOOM; MALE; FEM.	ZOOM	ZOOM; MALE FEM.		ZOOM; MALE FEM.	ZOOM
▼; TV	USB		TUN. BAND ; BAND		TUNER	TEMPO - ; MO/ST	TUNER		TUNER	
⏏; ↻	BOOK MARK		EQ PRESET		PORT	SD/HD; TUN. MEM.	USB	SD/HD ; TUN. MEM.	USB	T/SEARCH
⏏; LOCK					RESERVE		RES. ; CD RIPPING			
▲; FAV	▲; OPEN/CLOSE		▲; OPEN/CLOSE		▲	USB	▲		▲	
⏏	⏏/I; POWER		⏏; ON/STANDBY		⏏; POWER		⏏; POWER		⏏; POWER	
AV	VIDEO SEL.		AUX		AUX	TV/VIDEO	AUX		AUX	
⏏			⏏; MUTE		⏏; MUTE ; ⏏		⏏; MUTE		⏏; MUTE	MUTE
MENU	⏏; MENU		PROGRAM/SET		MENU ; ⏏	SLIDE MODE	MENU ; ⏏		MENU ; ⏏	PROGRAM
EXIT			DISC SKIP		EXIT ; ↵					
▲	▲				▲				▲	
◀	◀				◀				◀	
OK	ENTER ; ⏏				ENTER ; ↵		ENTER ; ↵		▶; i ; SELECT	
▶	▶				▶		▶		▶	
▼	▼				▼		▼		▼	
⌘; SETUP	DISC MENU		FUNCTION		LOGO ; DIMMER	DIGEST	EXIT ; ↵		EXIT ; ↵	
🎵; TITLE	🎵; TOOLS		SOUND MODE		⏏ PLII MODE	⏏ PLII EFFECT	P.SOUND	DSP/EQ ; EQ	P.SOUND	SOUND
⏏	I.REPLAY		POWER SOUND		SOUND EDIT	DIMMER	TIMER/CLOCK		TIMER/CLOCK	SHUFFLE
GUIDE	I.SKIP		BAND		ASC		ON/OFF TIMER		ON/OFF TIMER	REPEAT
⏏			TIMER ON/OFF	AL OFF SLEEP	SLEEP ; ECHO		SLEEP	SLEEP ; ECHO	SLEEP	
⏏	SUBTITLE		TIMER/CLOCK		SUB T.; SEA. SONG		SUBTITLE; S. SONG		SUBTITLE; S. SONG	
RED ; ●	REPEAT	●; RECORD	POWER Surr.		KEY CON. b ; TITLE		b KEY CONTROL	⏏ PL II MODE	b	
GREEN ; ⏏	KARAOKE; A-B RE.		COUNTER RESET		KEY CON. # ; DISC	STEP	# KEY CONTROL	⏏ PL II EFFECT	#	
YELLOW ; ◀	STEP		CD SYNC		P.BASS		STEP	CD RIPPING		
BLUE ; ▶			RANDOM		MO/ST ; SLOW		MO/ST ; SLOW	TREB/BASS		SLOW
⏏	i ; INFO		DISPLAY		INFO ; LYRIC VIEW	REMAIN	INFO ; LYRIC VIEW	REMAIN		VIEW
⏏	⏏; RETURN		CD REPEAT	CD REPEAT A+B	RETURN ; ⏏	REPEAT	⏏; RETURN	REPEAT		RETURN
VOL -			VOL. -		VOLUME -	MIC VOL -	VOLUME -	TEMPO -		
VOL +			VOL. +		VOLUME +	MIC VOL +	VOLUME +	TEMPO +		
CH V ; ⏏	⏏; ⏏		CD ⏏; ▼		⏏	TUNING/CH ▼	⏏	TUNING ▼		⏏; PREV.
CH A ; ⏏	⏏; ⏏		CD ⏏; ▲		⏏	TUNING/CH ▲	⏏	TUNING ▲		⏏; NEXT
⏏; SAT			+10		S.VOL		LOGO			
CLEAR ; X	⏏; CANCEL		+10 ; CNT. RESET		CANCEL		CANCEL			
⏏; ⏏	⏏; ⏏		CD ⏏; ▼		⏏		⏏			⏏; PREV.
▶; i	▶; i ; PLAY		▶; i ; CD		▶; PLAY		▶; PLAY		▶; i ; SELECT	
▶; ?	▶; ?		CD ⏏; ▲		▶; ?		▶; ?		▶; ? ; NEXT	
■; ⏏	■; STOP		■; CD		■; STOP		■; STOP		■	
⏏; ⏏	⏏; ⏏; PLAY		▶; i ; CD		⏏; PAUSE		⏏; PAUSE		⏏; PAUSE	▶; i ; SELECT
1, 2, ... 9, 0	1, 2, ... 9, 0		▶; i ; CD		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F

Кнопки пульта IRC 16 F	Код 316		Код 317		Код 318		Код 319		Код 320	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	DVD				CD		CD			
AUDIO ; NICAM	LOGO ; AUDIO		SUBWOOF. LEVEL		TAPE		TAPE		ST/MO	
VIDEO ; SYS	NT/PAL ; EZ VIEW		CD SYNC		VIDEO/AUX		EQ DISPLAY			
⏏ ; ZOOM	ZOOM						EQ ON/FLAT			
▼ ; TV	TUNER BAND		TUNER BAND		TUNER		TUNER			
⏏ ; ↻	P.SCAN ; TUN. MEM.		DECK 1/2, A/B		AUTO		TUNER MEMORY			
🔒 ; LOCK	MELODY ; REP. A-B		COUNTER RESET				MODE ; M./ST ; FM			
▲ ; FAV	▲ ; OPEN/CLOSE						SHUF. ; RANDOM			
⊖	⊖ ; POWER		⊖ ; ON/STANDBY		POWER		POWER		POWER (AC)	
AV	AUX	MALE ; FEMALE	AUX		AUX		AUX	PHONO ; AUX		
⏏ ; MUTE	⏏ ; MUTE		⏏ ; MUTE		MUTE		MUTE		MUTE	
MENU	MENU ; ⏏		PROGRAM/SET		MEMO		PROGRAM		PROGRAM	
EXIT	DISC SKIP						DISC SKIP			
▲	▲				PRE SET ▲		PRESET ▲			
◀	◀				TUN ▼		TUNING ▼			
OK	ENTER ; ↵									
▶	▶				TUN ▲		TUNING ▲			
▼	▼				PRE SET ▼		PRESET ▼			
⌘ ; SETUP	SURROUND MODE		FUNCTION		P/S		FUNCTION	HI-LITE ; INT.SCAN	FUNCTION	
♪ ; TITLE	SOUND MODE		SOUND MODE				BAND	FREQ. ; EQ PRESET	3MODE EQ	
📖	DIGEST ; FAV. SONG		TUNING MODE		BAND		TIMER ON/OFF		BAND	
GUIDE	SLIDE M. ; S. SONG		MONO/ST		CLOCK		CLOCK		CLK/ADJ	
⊖	SLEEP		TIMER ON/OFF		SLEEP		SLEEP ; AI SLEEP	AI SLEEP	SLEEP	
⊖ ; ●	SUBTITLE		AL OFF SLEEP		TIMER ON		TIMER SET	TIMER CHECK	TIMER ON/OFF	
RED ; ●	b KEY CONTROL		POWER SOUND	●/ ; REC/PAUSE			CD SYNCHRO	P.SCAN ; PRESET	INTRO	
GREEN ; ▶	# KEY CONTROL		POWER SURR.				CD EDIT	MEMORY	SHUFFLE	
YELLOW ; ◀	STEP		EQ PRESET				LEVEL ▼	USER		
BLUE ; ▶	SLOW ; TUN. MODE						LEVEL ▲	PRESET		
⏏	INFO	REMAIN ; TAPE 1/2	TIMER/CLOCK				TIME DISPLAY		DISPLAY	
↺	⊖ ; RETURN	CD REPEAT					MODE ⏏ ; ⏏ ; ⏏	REPEAT	REPEAT	
VOL -	VOLUME -	TEMPO -	VOL. -		VOL -		VOLUME ▼		VOLUME -	
VOL +	VOLUME +	TEMPO +	VOL. +		VOL +		VOLUME ▲		VOLUME +	
CH V ; ◀	◀	TUNING ▼	▼		⏏ SKIP		⏏		PRESET HOR/MIN ▼	
CH A ; ▶	▶	TUNING ▲	▲		▶▶ SKIP		▶▶		PRESET HOR/MIN ▲	
⊕ ; SAT	RESERVE		+10				+10 ; CD SYNCHRO		+10	
CLEAR ; X	CANCEL		+10 ; CNT. RESET				CURVE SPENA			
◀ ; ●	◀		◀ ; REW		⏏ SKIP		⏏ ; ⏏ SKIP SEAR.		◀ ; ⏏ SKIP/SEAR.	
▶ ; i	▶ ;	TAPE ◀ ▶	◀ ▶ TAPE ; F.PLAY	REV. M. ; ◀ ; R.PLAY	▶ ; PLAY/PAUSE		▶ ; PLAY/PAUSE		▶ ; PLAY/PAUSE	
▶▶ ; ?	▶▶		▶▶ ; FF		▶▶ SKIP		▶▶ ; ▶▶ SKIP SEAR.		▶▶ ; TUN./SKIP/SEAR.	
■ ; ⏏	■		■ ; STOP		■ ; STOP		■ ; STOP		■ ; STOP/CLEAR	
; ●	▶ ;		●/ ; REC/PAUSE		▶ ; PLAY/PAUSE		▶ ; PLAY/PAUSE		▶ ; PLAY/PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0				1, 2, ... 8				1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F

Кнопки пульта IRC 16 F	Код 321		Код 322		Код 323		Код 324		Код 325	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	SPEAKER MODE				DECK 1/2				DOLBY PRO LOGIC	
AUDIO ; NICAM	AUDIO		EQ		MO/ST ; REP. A-B				MONO/ST	
VIDEO ; SYS	BOOK MARK		MEDLEY		SRS WOW				TEST	
⏏ ; ZOOM	ZOOM								DELAY	
▼ ; TV	TUNING MODE				BAND ; TUNER				BAND	
⏏ ; ↻	🔒 DOLBY SURR.		MO/ST ; REP. A-B		TREBLE/BASS				MEMORY	
🔒 ; LOCK	ANGLE		COUNTER RESET		COUNTER RESET				SURROUND	
▲ ; FAV	▲ ; OPEN/CLOSE						▲ ; OPEN/CLOSE		▲	
⊖	⊖ ; ON/STANDBY		⊖/i ; POWER		⊖/i		POWER		POWER	
AV	AUX		AUX		AUX					
⏏ ; MUTE	MUTE		⏏ ; MUTE		⏏ ; MUTE				MUTE	
MENU	MENU		BAND ; TUNER		PROGRAM/SET		PROGRAM		PROGRAM	
EXIT	DISC SKIP		DISC SKIP						DISC SKIP	
▲	▲		▲ ; TUNING ▲		TUNING ▲				LEVEL ▲	
◀	◀		◀ ; VOL -						TUNING -	
OK	ENTER		ENTER				SELECT		CENTER	
▶	▶		▶ ; VOL +						TUNING +	
▼	▼		▼ ; TUNING ▼		TUNING ▼				LEVEL ▼	
⌘ ; SETUP	SETUP		DEMO/DIMMER		DEMO/DIMMER		DISC MODE		FUNCTION	
♪ ; TITLE	TITLE		EQ/S.BASS		EQ/S.BASS		SOUND		DSP/EQ	
📖	BAND		PROGRAM/SET				INTRO		PRESET/MANUAL	
GUIDE	TIMER ON/OFF		TIMER/CLOCK		TIMER/CLOCK		RANDOM		TIMER CHECK	
⊖	SLEEP		SLEEP ; AL SLEEP		SLEEP ; AL SLEEP		TIME		SLEEP	
📖	SUB TITLE		TIMER ON/OFF		TIMER ON/OFF				ON/OFF TIMER	
RED ; ●	PROGRAM	S.BASS	SHUFFLE ; ● ; USB R.		RDS-PTY		LAST MEMORY/S/M		CD ; REPEAT	
GREEN ; ▶	DSP/EQ	TEST TONE	TREBLE/BASS		MEDLEY		REPEAT		CD SYNCHRO	
YELLOW ; ◀	STEP	SOUND EDIT	SRS WOW		REV.MODE		SINGLE STEP ▶		L-CH	
BLUE ; ▶	POWER SOUND		RDS-PTY		TAPE SPEED		SLOW MOTION ▶		R-CH	
⏏	DISPLAY		RDS-DIPLAY		RDS-DIPLAY		DISPLAY		TAPE ; DISPLAY	
↺	RETURN	REPEAT	REPEAT				RETURN			
VOL -	VOLUME -		VOLUME - ; VOL -		VOLUME -				VOLUME -	
VOL +	VOLUME +		VOLUME + ; VOL +		VOLUME +				VOLUME +	
CH V ; —	▼		— (CD)				◀ ; PREVIOUS		—	
CH A ; ▶▶	▲		▶▶ (CD)				▶▶ ; NEXT		▶▶	
⊕ ; SAT			+10 ; TUNING MODE		+10 ; TUNING MODE					
CLEAR ; X	CLEAR		+10				CLEAR		AI OFF	
◀ ; ●	◀ ; ◀		◀		◀ (TAPE)		SEARCH ◀		—	
▶ ; i	▶ ; ; DVD/CD		▶ (CD)		▶ (TAPE)		▶ ; SELECT		▶ ;	
▶▶ ; ?	▶▶ ; ▶▶		▶▶		▶▶ (TAPE)		SEARCH ▶▶			
■ ; ⏏	■		■ (CD)		■ (TAPE)		■ ; RETURN		■	
; ●	▶ ; ; DVD/CD		▶ ; (CD)				▶ ; SELECT		▶ ;	
1, 2, ... 9, 0	1, 2, ... 9, 0				1, 2, ... 9, 0				1, 2, ... 9, +10	

Функции кнопок пульта IRC 16 F

Кнопки пульта IRC 16 F	Код 326		Код 327		Код 328		Код 329		Код 330	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	1-2 ; TAPE REPT.		1-2 ; TAPE REPT.				DVD		DVD ▶ ; AUX	
AUDIO ; NICAM	MONO/ST		MONO/ST				AUDIO		AUDIO	
VIDEO ; SYS	REV MODE		REV MODE				VCR		CD RIPPING	
⏏ ; ZOOM							ZOOM ; ATR		ZOOM	
▼ ; TV							TV/VCR		TAPE ▶	
⏏ ; ↻	MEMORY		MEMORY				SCREEN FIT ; SVHS		TUNER	TUNER MEMORY
⏏ ; LOCK	AI OFF		AI OFF				ANGLE		ANGLE	
▲ ; FAV						OPEN/CLOSE	▲ ; OPEN/CLOSE		▲	
⏏	POWER		POWER			POWER	STANDBY/ON		⏏ ; POWER	
AV							INPUT		AUX ; USB	
⏏	MUTE		MUTE				MUTE		⏏ ; MUTE	
MENU	PRESET/MANUAL		PRESET/MANUAL			OK MENU	DISC MENU		⏏ MENU	
EXIT									→EXIT	DISC SKIP
▲	TUNING -		TUNING -			KEY CONTROL ▲	▲		▲	
◀						TEMPO CONTR. ▼	◀		◀	
OK						OK MENU	ENTER ; ↵		⏏ ENTER	
▶						TEMPO CONTR. ▲	▶		▶	
▼	TUNING +		TUNING +			KEY CONTROL ▼	▼		▼	
* ; SETUP	FUNCTION		FUNCTION			SCORE	SETUP		P.SOUND	
♪ ; TITLE	DSP/EQ		DSP/EQ			MELODY	TITLE ; SPEED		P.BASS	DSP/EQ
⏏	BAND		BAND				MARK ; INDEX		DIMMER ; DEMO	
GUIDE	TIMER CHECK		TIMER CHECK				FM/AM		TIMER/CLOCK	
⏏	SLEEP		SLEEP				TEST		SLEEP	TIMER ON/OFF
⏏	ON/OFF ; TIMER		ON/OFF ; TIMER				SUBTITLE ; TIMER		SUBTITLE	
RED ; ●	● ; REC PAUSE					CONTINUE RESERV.	SOUND MODE	● ; REC	REPEAT	REC
GREEN ; ⏏						CHECK	SOUND EFFECT		A-B REPEAT	PARTY
YELLOW ; ◀	◀ (DECK 1)		◀ (DECK 2)			RESERVE	STEP		STEP	TREB/BASS
BLUE ; ▶							SPEAKER		SLOW	ECHO
⏏	TAPE ; DISPLAY		TAPE ; DISPLAY				DISPLAY		i INFO	REMAIN
⏏						REPEAT	⏏ ; RETURN/A.DUB		⏏ ; RETURN	
VOL -	VOLUME -		VOLUME -				AMP VOL -		VOL -	MIC VOL -
VOL +	VOLUME +		VOLUME +				AMP VOL. +		VOL +	MIC VOL +
CH V ; ⏏						⏏	PROG/TRK ▼		⏏	TUNING ▼
CH A ; ⏏						⏏	PROG/TRK ▲		⏏	TUNING ▲
+ ; SAT							MODE ; REPEAT		MO/ST	
CLEAR ; X						CANCEL	CLEAR		⌀ ; CANCEL	
◀ ; ●	◀ (DECK 1)		◀ (DECK 2)			MALE ; ⏏ ; SKIP	⏏ ; ⏏		◀	
▶ ; i	▶ (DECK 1)		▶ (DECK 2)			▶ ; PLAY/PAUSE	▶ ; ⏏		▶ ; PLAY	
▶ ; ?	▶ (DECK 1)		▶ (DECK 2)			FEMALE ; ▶ ; SKIP	▶ ; ▶		▶	
■ ; ⏏	■ (DECK 1)		■ (DECK 2)			■ ; STOP	■ ; STOP		■ ; STOP	
⏏ ; ●	⏏ ; PAUSE		● ; REC PAUSE			▶ ; PLAY/PAUSE	▶ ; ⏏		⏏ ; PAUSE	
1, 2, ... 9, 0						1, 2, ... 9, 0/4+10			1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F

Кнопки пульта IRC 16 F	Код 331		Код 332		Код 333		Код 334		Код 335	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	DVD		TV/DVD		DVD		DVD		DVD	
AUDIO ; NICAM	AUDIO ; FAV. SONG		AUDIO		AUDIO		AUDIO		AUDIO	
VIDEO ; SYS	NT/PAL ;		REC MODE		VIDEO SEL.		VCR		VCR	
⏏ ; ZOOM	TAPE ◀▶	ZOOM ; TUN. MODE			ZOOM		ZOOM		ZOOM	
▼ ; TV	ECHO ; MALE ; FEM.				USB		TV/VCR		TV/VCR	
⏏ ; ↻	TUNER ; BAND	TUN. MEM. ; P.SCAN			REPEAT		MARK ; SEARCH		MARK ; SEARCH	
⏏ ; LOCK	USB				REPEAT A-B		ANGLE ; IPC		ANGLE ; IPC	
▲ ; FAV	▲ ; EJECT		▲ ; OPEN/CLOSE		▲ ; OPEN/CLOSE		▲ ; OPEN/CLOSE		▲ ; OPEN/CLOSE	
⏏	⏏ ; POWER		STANDBY/ON		⏏ ; POWER		STANDBY/ON		STANDBY/ON	
AV	AUX ; USB		INPUT SEL		HDMI SEL.		INPUT SEL		INPUT SEL	
⏏	⏏ ; MUTE									
MENU	⏏ MENU		⏏ MENU		⏏ ; MENU		⏏ ; MENU		⏏ ; MENU	
EXIT	→EXIT				→EXIT		⏏ ; RETURN		⏏ ; RETURN	
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀		◀		◀	
OK	⏏ ENTER		⏏ ENTER		⏏ ; ENTER		⏏ ; ENTER		⏏ ; ENTER	
▶	▶		▶		▶		▶		▶	
▼	▼		▼		▼		▼		▼	
* ; SETUP	SLIDE MODE	DEMO/DIMMER	TITLE LIST ; D. MENU		DISC MENU		DISC MENU		DISC MENU	
♪ ; TITLE	P.SOUND	DSP/EQ ; DIMMER	PLAY LIST ; T. MENU		TITLE MENU		KARAOKE		KARAOKE	
⏏	DIGEST	RESERVE	TIMER ; MARKER		⏏ ; TOOLS		EZ VIEW		EZ VIEW	
GUIDE	TIMER/CLOCK		REPEAT		KARAOKE					
⏏	SLEEP	ON/OFF TIMER	TIME SLIP				TIMER		TIMER	
⏏	SUBTITLE ; S.		SUBTITLE		SUBTITLE		SUBTITLE		SUBTITLE	
RED ; ●	KEY CONTROL b	● ; CD SYNC	KEYCON b	● ; REC	REPEAT	● ; RECORD	SHUTTLE ◀◀	● ; REC	SHUTTLE ◀◀	● ; REC
GREEN ; ⏏	KEY CONTROL #	ZOOM ; REP.A-	KEYCON #		STEP		SHUTTLE ▶▶	F.ADV/STEP	SHUTTLE ▶▶	F.ADV/STEP
YELLOW ; ◀	STEP ; COUNT. RES.		◀		A-B REPEAT		ARAOK SEAR. ◀◀		ARAOK SEAR. ◀◀	
BLUE ; ▶	MO/ST ; SLOW		▶ ; RESERVE		I.REPLAY		ARAOK SEAR. ▶▶		ARAOK SEAR. ▶▶	
⏏	INFO	REMAIN	INFO ; KARAOKE		INFO		INFO		INFO	
⏏	⏏ ; RETURN	REPEAT	⏏ ; RETURN		⏏ ; RETURN		MODE ; REPEAT		MODE ; REPEAT	
VOL -	VOLUME -	TEMPO -	TEMPO ▼		BOOKM. ; MARKER		TRK ▼ ; KEYCON b		TRK ▼ ; KEYCON b	
VOL +	VOLUME +	TEMPO +	TEMPO ▲		EZ VIEW		TRK ▲ ; KEYCON #		TRK ▲ ; KEYCON #	
CH V ; —	◀◀	TUNING ▼	◀◀ ; MELODY		◀◀		PROG/TRK ▼		PROG/TRK ▼	
CH A ; ▶▶	▶▶	TUNING ▲	▶▶ ; FAVORITE		▶▶		PROG/TRK ▲		PROG/TRK ▲	
+ ; SAT	LOGO ; REV. MODE		ANYKEY		⌀ ; CANCEL		SPEED ; USB		SPEED ; USB	
CLEAR ; X	CANCEL ;		⌀ ; CANCEL		⌀ ; CANCEL		⌀ ; CANCEL		⌀ ; CANCEL	
◀ ; ●	◀		◀ ; SEARCH SONG		◀		◀		◀	
▶ ; i	▶ ; PLAY		▶ ; PLAY		▶ ; PLAY		▶ ; PLAY		▶ ; PLAY	
▶ ; ?	▶		▶ ; FEMALE/MALE		▶		▶		▶	
■ ; ⏏	■ ; STOP		■ ; STOP		■ ; STOP		■ ; STOP		■ ; STOP	
⏏ ; ●	⏏ ; PLAY		⏏ ; PLAY		⏏ ; PAUSE		⏏ ; PLAY		⏏ ; PLAY	
1, 2, ... 9, 0					1, 2, ... 9, 0				1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F

Кнопки пульта IRC 16 F	Код 336		Код 337		Код 338		Код 339		Код 340	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD			DVD ; DISC SKIP		INPUT SELECT >		DVD		3D SOUND	
AUDIO ; NICAM	AUDIO		EQ		AUDIO SYNC		MO/ST ; SLOW		SOUND EF. ; P.BASS	AUDIO
VIDEO ; SYS			SPEED ; CD REC		AUX		TAPE		GIGA	
⏏ ; ZOOM	FULL SCREEN		MY KARAOKE		≠ PAIR		ZOOM		FULL SCREEN ; ⏏	
▼ ; TV					INPUT SELECT <		BAND ; TUNER		TV SOUND ; ⏏	vTUNER
⏏ ; ↗	VIEW ; BONUS				SPEAKER		TIMER/CLOCK	TUNER MEMORY	SEARCH	TUNER MEMORY
🔒 ; LOCK			REPEAT		OPTICAL		STEP ; CNT.RESET		2D → 3D	
▲ ; FAV	▲				USB/BLUETOOTH		▲ ; OPEN/CLOSE		▲	
⏏	⏏		⏏		⏏ ; POWER	AUTO POWER	⏏/1		⏏ ; POWER	
AV					⏏ ; SOURCE		AUX		FUNCTION;TV SOU.	INPUT BD/DVD
⏏					⏏ ; MUTE		⏏ ; MUTE		MUTE ; ⏏	S.VOL
MENU	HOME ; HOME		⏏ ; HOME		SOUND EF-T ; MODE		⏏ ; MENU		HOME ; ⏏ ; MENU	SFE MODE ; SOUND
EXIT	→⏏ ; EXIT		→⏏ ; EXIT		SMART VOLUME		⏏ ; RETURN		EXIT ; →⏏	
▲	▲		▲ ; TUNING ▲		▲	VOL +	▲		▲	
◀	◀		◀ ; b		◀ SOUND CONTR.	S/W L-L <; WOOF. -	◀		◀ ; b	
OK	⏏		⏏		▶▶ ; MUTE	⏏ ; MUTE	⏏ ; ENTER		⏏	
▶	▶		▶ ; #		▶ SOUND CONTR.	S/W L-L >; WOOF. +	▶		▶ ; #	
▼	▼		▼ ; TUNING ▼		▼	VOL -	▼		▼	
⚙ ; SETUP	⏏ ; TOOLS		FUNCTION		SOUND CONTR. ; ⏏		SRS WOW		TOOLS ; ⏏	S.MODE ; V-SOUND
🎵 ; TITLE	POPUP:TITLE MENU		SOUND		🎵 SOUND: 3D S.		EQ/S.BASS	TREBLE/BASS	ITLE MENU:POPUP	PL II ; KARAOKE
📀	DISC MENU		⏏ ; TOOLS		EQUALIZER WOOF.		SLIDE MODE		DISC MENU ; SETUP	S/W LEVEL
GUIDE	HUB ; SMART				WOOFER		DIGEST		SMART HUB ; INT.@	V-SURROUND
⏏					ANYNET		SLEEP	TIMER ON/OFF	SLEEP ; ECHO	FOOTBALL
📄	SUBTITLE				DRC		SUB TITLE		SUBTITLE	DSP/EQ
RED ; ●	A ; RED		RED ; A ; DISPLAY	● ; USB REC	SOUND MODE <		REPEAT	REP A↔B	RED ; A	USB REC
GREEN ; ▶	B ; GREEN		GREEN ; B ; MO/ST		SOUND MODE >		STEP		GREEN ; B ; IPOD S.	
YELLOW ; ◀	C ; YELLOW		YELLOW ; C		S/W L-L <; WOOF. -		REMAIN		YELLOW ; C ; TUNER	
BLUE ; ▶	D ; BLUE		BLUE ; D ; KEYCON		S/W L-L >; WOOF. +	BLUETOOTH PWR.	SLOW		BLUE ; D ; MO/ST	
⏏	i ; INFO		i ; INFO		DIMMER		INFO	EZ VIEW	INFO ; i	
⏏	⏏ ; RETURN		⏏ ; RETURN		⏏ ; REPEAT		⏏ ; RETURN		RETURN ; ⏏	REPEAT
VOL -			VOL -	MIC VOL -	VOL -	AUDIO SYNC -	VOLUME -		VOL -	MIC VOL -
VOL +			VOL +	MIC VOL +	VOL +	AUDIO SYNC +	VOLUME +		VOL +	MIC VOL +
CH V ; ⏏	⏏		⏏ ; RDS PTY		⏏		TUNING ▼		TUNING/CH ▼	⏏
CH A ; ▶▶	▶▶				▶▶		TUNING ▲		TUNING/CH ▲	▶▶
⊕ ; SAT	REPEAT				SOUND SHARE ; C-T		LOGO		MO/ST ; MY KAR.	
CLEAR ; X							CANCEL		DIMMER	
◀ ; ●	◀		◀		◀		◀		◀	
▶ ; i	▶		▶		▶▶		▶ / ; ◀ ▶		▶	
▶▶ ; ?	▶▶		▶▶ ; RDS DISPLAY		▶▶		▶▶		▶▶	
■ ; ⏏	■		■		■		■		■	
; ●							▶ / ; ◀ ▶			
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F

Кнопки пульта IRC 16 F	Код 341		Код 342	
	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD			KEY CON #	
AUDIO ; NICAM			AUDIO	
VIDEO ; SYS			LOGO	
⏏ ; ZOOM			ZOOM	
▼ ; TV			KEY CON b	
⏏ ; ↗			P.SCAN	
🔒 ; LOCK			MALE ; FEMALE	
▲ ; FAV			▲ ; OPEN/CLOSE	FAVORITE
⏏	⏏ ; POWER		POWER ; ⏏/1	
AV	SOURCE		SLIDE MODE	
⏏	⏏ ; MUTE			
MENU			⏏ ; MENU	
EXIT	■ ; TUNING MODE		⏏ ; RETURN	
▲	▲ ALBUM		▲	
◀	◀ TUNING		◀	
OK	▶▶ ; ENTER		ENTER ; ↵	
▶	▶▶ TUNING		▶	
▼	▼ ALBUM		▼	
⚙ ; SETUP	BLUETOOTH		DIMMER	
🎵 ; TITLE	SOUND EFFECT		MELODY	
📀			REMAIN	
GUIDE			SEARCH SONG	
⏏			EZ VIEW	
📄			SUB TITLE	
RED ; ●	USB REC		REPEAT	
GREEN ; ▶			STEP	
YELLOW ; ◀			DIGEST	
BLUE ; ▶			SLOW	
⏏			INFO.	
⏏	REPEAT ; MO/ST		⏏ ; RETURN	
VOL -	VOL -		TEMPO -	
VOL +	VOL +		TEMPO +	
CH V ; —	SYNC -		—	
CH A ; ▶▶	SYNC +		▶▶	
⊕ ; SAT			RESERVE	
CLEAR ; X			CANCEL	
◀ ; ●	◀ TUNING		◀	
▶ ; i	▶▶ ; ENTER		▶ /	
▶▶ ; ?	▶▶ TUNING		▶▶	
■ ; ⏏	■ ; TUNING MODE		■	
; ●	; ENTER		▶ /	
1, 2, ... 9, 0			1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F

Кнопки пульта IRC 16 F	Код 401		Код 402		Код 403		Код 404		Код 405	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	Pg Up; CTR ▲		Pg +		PG +		PG +			
AUDIO; NICAM	RADIO; АУДИО		AUDIO		AUDIO		AUDIO			
VIDEO; SYS	UHF; МОДУЛЯТОР									
⏏; ZOOM										
▼; TV	Pg Dn; CTR ▼		Pg -		PG -		PG -			
🔒; LOCK										
▲; FAV			FAV		FAV		FAV			
⏻	⏻		POWER		⏻; POWER		⏻; POWER		⏻	
AV	TV/SAT; ТВ/СП								VIASAT	
🔇	🔇		MUTE		🔇; MUTE		🔇; MUTE			
MENU	MENU; МЕНЮ		MENU		MENU; 📄		MENU; 📄		MENU	
EXIT	EXIT; ВЫХОД		EXIT		EXIT; 📄		EXIT; 📄		BACK	
▲	P +; ▲		CH +; ▲		CH +; ▲		CH +; ▲		▲	
◀	VOL -; ◀		VOL -; ◀		VOL -; ◀		VOL -; ◀		◀	
OK	OK; ВВОД		OK		OK; 📄		OK; 📄		OK	
▶	VOL +; ▶		VOL +; ▶		VOL +; ▶		VOL +; ▶		▶	
▼	P -; ▼		CH -; ▼		CH -; ▼		CH -; ▼		▼	
⚙; SETUP									OPTIONS	
🎵; TITLE			TV/RADIO		TV/RADIO		TV/RADIO		VOD	
📄	📄		TEXT		TEXT		TEXT			
GUIDE	TV GUIDE; ГИД		EPG		EPG		EPG		PLANNER	
⌚			TIMER		TIMER		TIMER			
📄										
RED; ●			RED; i		RED; i		RED; i		RED; 📄	●
GREEN; 📄			GREEN; TEXT		GREEN; TEXT		GREEN; TEXT		GREEN	
YELLOW; ◀			YELLOW; ALT		YELLOW; ALT		YELLOW; ALT		YELLOW	
BLUE; ▶			BLUE; AUDIO		BLUE; AUDIO		BLUE; AUDIO		BLUE	
📄	i; ИНФ		i		i		i		📄	
📄	RECALL; 📄		LAST		LAST		LAST		BACK	
VOL -	VOL -; ◀		VOL -; ◀		VOL -		VOL -			
VOL +	VOL +; ▶		VOL +; ▶		VOL +		VOL +			
CH V; 📄	P -; ▼		CH -; ▼		CH ▼		CH ▼		CH -	
CH A; 📄	P +; ▲		CH +; ▲		CH ▲		CH ▲		CH +	
⊕; SAT										
CLEAR; X										
⏪; ●									⏪	
▶; i									▶	
▶▶; ?									▶▶	
■; 📄									■	
⏸; ●									⏸	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0/TIMER		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 16 F

Кнопки пульта IRC 16 F	Коды 501-682	
	Функция	Доп. функция
▲; DVD		
AUDIO; NICAM		
VIDEO; SYS		
⏏; ZOOM		
▼; TV		
🔒; LOCK		
▲; FAV		
⏻	POWER; ⏻	
AV	TV/VIDEO; TV/AV	
🔇	MUTE; 🔇	
MENU		
EXIT		
▲		
◀		
OK		
▶		
▼		
⚙; SETUP		
🎵; TITLE		
📄		
GUIDE		
⌚		
📄		
RED; ●		
GREEN; 📄		
YELLOW; ◀		
BLUE; ▶		
📄		
📄		
VOL -	VOLUME ▼; 📄	
VOL +	VOLUME ▲; 📄	
CH V; 📄	CHANNEL ▼; P -	
CH A; 📄	CHANNEL ▲; P +	
⊕; SAT		
CLEAR; X		
⏪; ●		
▶; i		
▶▶; ?		
■; 📄		
⏸; ●		
1, 2, ... 9, 0	1, 2, ... 9, 0	

Ссылка на таблицы функций кнопок баз кодов 8 и 9 (SAT, STB, DVB устройства) находится в разделе "Инструкции к пультам IRC" на сайте www.pult-irc.ru