

Приложение IRC 17 F (версия 20.06.09 06:22)

Модели оригинальных пультов и соответствующие им коды пульта IRC приведены в разделе "Коды пульта IRC 17 F".

Функции всех кнопок для каждого кода пульта IRC можно узнать из таблиц данного приложения.

Пульт IRC может иметь дополнительные функции (если указаны в столбце "Доп. функция"). Доступ к ним осуществляется при помощи кнопки SHIFT (см. в инструкции рис.1, п.16). Для доступа к дополнительным функциям нажмите кнопку SHIFT и, удерживая её нажатой, нажмите ту кнопку, дополнительная функция которой Вам необходима.

После первой установки батареек

Кнопка устройства пульта IRC	Код пульта IRC	Кнопка устройства пульта IRC	Код пульта IRC
TV	101	SHIFT + TV*	105
VCR	102	SHIFT + VCR*	106
AUX	103	SHIFT + AUX*	107
SAT	104	SHIFT + SAT*	108

* Нажмите кнопку SHIFT и, удерживая её нажатой, нажмите и отпустите одну из кнопок пульта: TV, VCR, AUX или SAT.

Доступные коды пульта IRC 17 F

Номер базы кодов (диапазон кодов)	Устройство базы кодов	Доступные коды пульта IRC
1 (101-199)	TV	101 - 125
2 (201-299)	VCR	201 - 205
3 (301-399)	AUX	301 - 306
4 (401-499)	-	Нет
5 (501-599)	TV	501 - 599
6 (601-699)	TV	601 - 699
7 (701-799)	TV	701 - 799
8 (801-899)	SAT	801 - 899
9 (901-999)	SAT	901 - 999

Коды пульта IRC 17 F

Коды к устройствам марки SANYO

Модель*	Устр-во	Код
060-01220-1.4	TV	106
11UV19-2	TV	113
1AV0010B01900	TV	106
1AV0110B00800	TV	106
1AV0U10B00800	TV	107
1AV0U10B01900	TV	106
1AV0U10B03200	TV	107
1AV0U10B04000	TV/VCR	114
1AV0U10B08600	AUX, CD, DVD	301
1AV0U10B31200	TV	115
440MT0009A	TV	119
4AA4U1T0010	TV	107
4AA4U1T0016	TV	106
4AA4U1T0023	TV	106
4AA4U1T0032	TV	106
4AA4U1T0055	TV	107
4AA4U1T0063	TV	106
4AA4U1T0064	TV	106
4AA4U1T0069A	TV	107
4AA4U1T0094	TV	106
4AA4U1T0102	TV	106
4AA4U1T069	VCR	201
4AA4UT10092	TV	106
4AA4UT10093	TV	106
A05209	VCR	205
A06209	VCR	205
B01032	VCR	205
B04802	VCR	204
CBP2146	TV	109
CBP2148	TV	108
CEP3100	TV	112
CG0127GESA	VCR	202,203
CPT6144	TV	110
CXEА	AUX, CD, DVD	301
CXGM	AUX, CD, DVD	301
CXHD	AUX, CD, DVD	301
CXHD (CURSOR)	AUX, CD, DVD	306
EUR5972A	TV	105
FXFA	TV	119
FXFB	TV	119
INFRARED RC	VCR	201
JXBA	TV	110
JXDA	TV	109
JXDB	TV	109
JXDJ	TV	109

Модель	Устр-во	Код
JXDK	TV	109
JXDR	TV	108
JXDS	TV	108
JXDV	TV	108
JXDW	TV	108
JXDZ	TV	108
JXGA	TV	111
JXGL	TV	111
JXGM	TV	111
JXGT	TV	106
JXGTUS0383	TV	106
JXHARC730	TV	108
JXHB	TV	108
JXHD	TV	108
JXHG	TV	106
JXHGS	TV	106
JXKB	TV	108
JXKE	TV	108
JXLB	TV	106
JXMEB (TV)	TV	115
JXMEB (VCR)	VCR	201
JXMRM	TV	115
JXPSB	TV	115
JXPSC	TV	115
JXRA	TV	106
JXRB	TV	106
JXRC	TV	107
JXTB	TV/VCR	114
KT1045-2	TV	123
MXE	TV	102
RB-A8501-EU	AUX, CD, DVD	303
RB-D5	AUX, CD, DVD	304
RB-DA100	AUX, CD, DVD	304
RB-SL20	AUX, CD, DVD	302
RB-SL25	AUX, CD, DVD	302
RB-SL33KR	AUX, CD, DVD	302
RC 218	TV	101
RC 222	TV	101
RC 228	TV	101
RC 238	TV	101
RC 243	TV	112
RC 254	TV	112
RC 258	TV	112
RC 279	TV	101
RC 282	TV	112

Модель	Устр-во	Код
RC 302	TV	112
RC 303	TV	101
RC 304	TV	101
RC 305	TV	112
RC 307	TV	110
RC 308	TV	110
RC 315	TV	112
RC 317	TV	110
RC 339	TV	101
RC 347	TV	110
RC 348	TV	110
RC 612	TV	110
RC 625	TV	110
RC 628	TV	110
RC 629	TV	110
RC 632	TV	112
RC 645	TV	112
RC 650	TV	109
RC 651	TV	109
RC 655	TV	109
RC 658	TV	109
RC 659	TV	109
RC 660	TV	108
RC 662	TV	108
RC 663	TV	108
RC 664	TV	108
RC 666	TV	108
RC 667	TV	108
RC 669	TV	106
RC 669JXLB	TV	106
RC 68	VCR	201
RC 688	TV	110
RC 699	TV	108
RC 699JXKB	TV	108
RC 700	TV	111
RC 700A	TV	111
RC 700JXGA	TV	111
RC 700JXGM	TV	111
RC 702	TV	111
RC 710	TV	111
RC 711	TV	106
RC 730	TV	108
RC 731	TV	108
RC 733	TV	108
RC EDO	TV	107

Модель	Устр-во	Код
RC EDOM	TV	107
RC-102-0F	TV	116
RC1900	TV	124
RC-2040	TV	113
RC-2100	TV	121
RC-2440	TV	113
RC-J11-0A	TV	122
RC-U42R-0L	TV	120
RC-Y35-0A	TV	125
REM40	TV	103
REM80	TV	104
RM-40	TV	117
RMB1X	TV	118
SCR-18	AUX, CD, DVD	305
SF138	TV	113
TV-02	TV	101
UG 0006	TV	112
US 0049	TV	110
US 0211	TV	112
US 0383	TV	106
US 0384 (TV)	TV	106
US 0384 (VCR)	VCR	201
US 0388	TV	106
US 0389	TV	106

* По каталогу «IRC»

Коды к TV устройствам различных марок

Марка	Код
AEG	544
AIWA	502, 503, 523, 528, 579, 634, 678, 706, 710, 712, 716
AKAI	501, 503, 512, 516, 520, 522, 524, 525, 537, 538, 540, 545, 546, 547, 550, 571, 572, 582, 583, 584, 585, 596, 598, 608, 613, 626, 652, 673, 691, 704, 708, 711, 722, 731, 769
AKIRA	511, 514, 516, 524, 525, 537, 538, 541, 545, 547, 556, 577, 586, 594, 597, 598, 601, 623, 626, 629, 631, 649, 666, 680, 689, 690, 693, 699, 717, 739, 796, 797, 798, 799
AMCOL	501, 525, 545, 747
ANITECH	501, 525, 616, 726
ATLANTA	501, 751
AVEST	537, 538, 539, 766
BANG & OLUFSEN	728, 737
BBK	522, 551, 594, 597, 684, 701, 788, 792, 793
BEKO	525, 530, 535, 559, 723, 742
BIGSTON	501, 503
BLAUPUNKT	512
BORK	525, 547, 646, 766
BRAND	711
BROKSONIC	501
CAMERON	538, 550, 567, 675, 697, 702, 792, 794
CASIO	529, 705, 706
CASKA	761
CHANGHONG	516, 596, 642
CLATRONIC	501, 545, 559, 571, 742
CONTEC	501, 603, 604, 613
CORTLAND	644
CROWN	501, 503, 511, 524, 525, 530, 571
DAEWOO	501, 508, 518, 520, 525, 526, 536, 538, 539, 546, 565, 571, 576, 598, 613, 685, 687, 692
DARTLAND	501
DAYTRON	501
DEXP	516, 579, 684, 702
DIGITAL	547
DISTAR	562, 616
DNS	596, 702, 708
DOFFLER	684, 708
DUAL	746
ELEKTA	501, 503, 520, 525, 527, 615
ELEKTRONIKA	583
ELENBERG	538, 545, 550, 565, 567, 579, 581, 644, 655, 676, 683, 717, 785
EPLUTUS	537, 644, 677, 682, 697, 724
ERC	537, 631, 764
ERISSON	511, 514, 516, 525, 526, 537, 538, 541, 550, 556, 561, 568, 586, 596, 599, 623, 626, 629, 631, 711, 712, 714, 739, 747, 779, 786, 795
EVGO	538, 540, 630
FINLUX	501, 511, 583, 589, 608, 732, 758, 774
FUJITSU	544, 573
FUNAI	501, 502, 503, 504, 505, 525, 537, 538, 581, 603, 764
FUSION	596, 642, 699, 705, 706, 781
GBS	501, 520, 525, 571, 583
GENERAL	537, 556
GOLD STAR - LG	501, 512, 518, 525, 527, 559, 570, 583, 584, 589, 609, 613, 642, 706, 712, 742, 750, 765
GRUNDIG	501, 512, 525, 606, 662, 718, 719, 733
HAIER	518, 526, 561, 574, 657, 667, 669, 707, 778
HAPPY	501
HARPER	706, 712
HCM	501, 503, 525
HELIX	701, 702, 708
HIL	503
HITACHI	501, 515, 518, 522, 525, 537, 544, 548, 554, 578, 584, 587, 588, 604, 613, 640, 729, 749, 775, 783
HORIZONT	525, 540, 545, 550, 559, 583, 664, 672, 771
HPC	546
HYUNDAI	516, 518, 522, 525, 526, 537, 538, 540, 541, 546, 547, 550, 556, 580, 596, 597, 599, 626, 642, 648, 650, 655, 705, 711, 712, 714, 717, 760
INNO-HIT	501, 525, 571
IRBIS	596, 714
IVA (ИВА)	537, 561, 637
IZUMI	516, 537, 596, 663, 691, 695, 703, 705, 711, 792
JINLIPI	537, 637, 766
JVC	513, 515, 593, 604, 727
KAMACROWN	571
KANSAI	501, 525
KENSTAR	516
KITT	503, 613, 616, 726
KNEISSEL	753
KONKA	537, 538, 560, 561, 581, 616, 626, 717
KRONMARK	596
LOEWE	542, 709, 744
MEDION	525
METZ	745
MITSUBISHI	501, 520, 522, 525, 604, 611, 722, 728, 744
MIYOTA	537, 644, 656
MTC	501, 583
MULTITECH	501, 525
MYSTERY	516, 537, 597, 642, 650, 653, 701, 702, 708, 773, 780, 789
NAD	518, 525
NASH	537
NEC	501, 517, 520, 526, 552, 604, 625, 722
NESCO	501, 525
NESONS	708
NOKIA	519, 584, 610, 614, 616, 740, 746, 767
NOVA	501, 616, 638
NOVEX	516, 546, 599
NTT	759
OMEGA	501, 571
ONIDA	513
ONIKS	516, 525, 537, 545, 546, 547, 680
ONWA	524, 525
OPERA	644, 666, 682
ORBITA	635
ORION	501, 503, 506, 507, 509, 516, 525, 528, 537, 591, 603, 617, 619, 627, 641, 643, 664, 715, 720, 722, 729, 746
ORSON	526, 537

Коды к TV устройствам различных марок

Марка	Код
PANASONIC	512, 531, 532, 752
PHANTOM	644
PHILIPS	501, 511, 524, 525, 540, 549, 628, 639, 707, 748
PHOENIX	613
PHOENIX GOLD	708
PIONEER	548, 555, 566, 575, 647, 666
PIXELVIEW	525
PLANTRON	735
POLAR	525, 526, 537, 538, 540, 543, 546, 547, 581, 596, 599, 663, 664, 683, 703, 711, 717
POLAROID	525
PREMIERA	773
PRESTIGIO	564, 656
PRIMA	522, 547
PROLOGY	653, 655, 777, 784
RADUGA	525, 545, 569, 583, 743
RAINFORD	525, 537, 544, 545
RECOR	511, 525
REKORD	520, 525, 526, 537, 538, 539, 545, 547, 725, 736, 743, 747
RFT	535, 618, 728
ROADSTAR	501, 508, 525, 571
ROLSEN	503, 516, 525, 537, 538, 540, 543, 546, 564, 576, 592, 594, 596, 649, 656, 669, 684, 714, 768, 770
ROVERSCAN	662, 770
ROYAL	501, 503, 525, 616
RUBIN	504, 516, 525, 537, 546, 583, 619, 665, 714, 776
SABA	509, 510, 521, 602, 756
SALORA	584
SAMSUNG	501, 525, 526, 529, 563, 580, 595, 596, 608, 612, 613, 622, 641, 645, 688, 723, 741
SANSUI	524, 525, 538, 556, 695
SANYO	501, 519, 522, 525, 530, 540, 544, 550, 558, 604, 608, 610, 618, 621, 696, 722, 730, 734, 738
SATURN	702, 708
SCARLETT	541, 545
SCHNEIDER	525, 540, 571, 771
SELECO	736, 763
SETRO	520
SHARP	526, 544, 548, 604, 707, 721
SHERION	616
SHIVAKI	501, 503, 508, 516, 518, 520, 525, 526, 527, 536, 538, 539, 540, 545, 546, 547, 550, 556, 580, 583, 585, 596, 599, 609, 619, 630, 632, 635, 636, 643, 644, 664, 681, 694, 708, 743, 791
SIEMENS	512, 525, 660, 726, 734
SIESTA	501, 537, 637
SILELIS	613
SILVER	633
SITRONICS	503, 516, 525, 537, 538, 540, 543, 545, 594, 626, 629, 661, 671, 672, 674, 679, 680, 686, 766
SOKOL	516, 525, 547, 635
SONY	533, 604, 659, 722
SPEKTR	525, 538, 668
START	525, 537, 545, 546, 547
STASSFURT	535, 618
STINOL	525
SUPER	537, 561, 644, 653, 654, 655, 666, 677, 682, 724, 754, 772, 780
SUPER GENERAL	537
SUPRA	501, 508, 516, 518, 520, 522, 525, 527, 529, 536, 537, 541, 563, 579, 580, 596, 597, 612, 642, 643, 687, 690, 705, 706, 712, 713, 790
SUZUKI	516, 556
SVEN	574
TCL	521, 538, 540, 642
TEAC	525
TECHNICS	531, 537, 538
TECHNO	501, 525, 538, 544, 546, 556, 568, 579, 596, 599, 644, 664, 703, 791
TECKTON	522, 582, 601, 669, 670
TELEFUNKEN	510, 521, 561, 590, 602, 605, 642, 708, 712, 714, 756, 757
TELEVISION	501, 525, 616
THOMSON	509, 510, 521, 550, 579, 602, 624, 642, 702, 756
TOSHIBA	516, 544, 553, 604, 651, 744
TRONY	516, 525, 537, 538, 550, 574, 657
TVT	511, 525, 530, 535, 538, 583, 586, 620, 630, 723, 742
UNITED	525
VARTA	642
VESTEL	525, 544, 556, 583, 619
VIEWSONIC	557, 698
VITA	547
VITEK	537, 650
VITYAS	525, 708
VOLNA (ВОЛНА)	635
VR	516, 537, 565, 598, 702, 714, 786
WALTHAM	503, 509, 511, 583, 584, 607, 613, 729, 762
XORO	522, 526, 545, 781, 782, 787
XPX	663
НЕИЗВЕСТНАЯ МАРКА	525, 546, 574, 596, 648, 656, 666, 711, 755

Коды к SAT устройствам различных марок

Марка	Код
AIRTONE	968
ALFA GOLD	828
AMINO (СТРИМ)	829, 902
ARION	835
ARRIS	883, 963, 974
ASTON	811
BBK	931
BIG STAR	965
BIGSAT	839, 840, 903, 936
CADENA	958, 962
CONTINENT	886, 975
COSHIP	855
DAEWOO	872
D-COLOR	946, 961
DELTA SYSTEMS	985
DIGIFORS	946
DIVISAT	957, 958
D-LINK	923
DNS	950, 968
DR.HD	983
DRE	804, 888
DREAM	819
DUNE	927, 934
ECHOSPACE	862
ECHOSTAR	808, 809, 822
ELTEX	987
EPLUTUS	961
EUROSKY	840, 981
EUROSTAR	863
EUSTON	825
EVO	965
GALAXY INNOVATIONS (GI)	878, 881, 908, 911, 912, 917, 924
GENERAL SATELLITE	804, 868, 888, 907, 933, 954
GLOBALTEQ	833
GLOBO	909, 915, 925, 935, 945, 956, 971, 973, 995, 999
GOLD STAR - LG	871
GOLDEN INTERSTAR	821, 841, 879, 918
GOLDEN MEDIA	847, 912
GOLDMASTER	911
HD BOX	847, 911
HITACHI	824, 832
HIVION	929
HOME	968
HOMECAST (ВОЛЯ)	820, 831, 836
HUAVEE	946
HUMAX	803, 804, 823, 848, 860, 861, 905, 949
HYUNDAI	968
ID DIGITAL	804
INTEK	984
INTERCROSS	988
INTRO	978
KAON	820, 949
KARTINA TV	934
KOSMOS	855, 856
LANS	970
LOCUS	946
LUMAX	852, 873, 907, 913, 965, 994
MAG	988
MEDIA COM	825
MOTOROLA	883, 884, 901, 974
MYSTERY	910, 997
NDS	814
NEXT	864
NOKIA	813
NOT	941
ONLIME	905
OPENBOX	827, 835, 869, 870, 911, 990, 991
OPENTECH	972
OPENTEL	865
OPTICUM	971
ORBITA	946, 995
ORIEL	887, 926, 941, 948, 955, 986
PACE	801, 932, 953
PATIX DIGITAL	946, 967, 992
PAUXIS	842, 859
PERFEO	960, 981
PHILIPS	857, 899
PIONEER	851
POLAR	858
REFLECT	959
REXANT	977
RIKOR	916, 947
ROLSEN	930, 941, 942, 961
SAGEMCOM	906
SAMSUNG	803, 810, 812, 854
SEG	818
SELENGA	946
SEZAM	882
SKY VISION	952, 966, 977, 982
SKYMASTER	830
SKYWAY	911
SKYWORTH	989
STAR	833
STAR TRACK	826, 835, 943
STARNET	885
STRONG	805, 806, 815, 816, 817, 828, 830, 914
SUNNIWELL	875
SUPERBOX	903

Коды к SAT устройствам различных марок

Марка	Код
SUPERMAX	821, 866, 880, 924
SUPRA	950, 960, 962
TECHNOSAT	852, 853
TEL-ANT	960
TELEFUNKEN	961, 968
TESLER	926
TOP BOX	965
TOPFIELD	837, 838, 877, 891
TOSHIBA	876
TV STAR	967
TVJET	946, 976
VESTEL	820, 824
VU+	919, 920, 921, 922
WORLD VISION	821, 928, 951, 952, 961, 968
XSAT	801, 807
XSAT (НТВ+)	801, 802, 807, 906, 972, 984, 998
YUXING	904
ZYXEL	874
АРБАКОМ	967
БИЛАИН	883, 884, 901, 923
ВОЛГАТЕЛЕКОМ	842, 843, 844, 845, 846, 847, 849, 850, 858, 867
ДОМ.RU	820, 905
ДОМОЛИНК	874, 904
МТС	829, 855, 902, 964, 974, 979, 980, 989, 993
НЕИЗВЕСТНАЯ МАРКА	834, 835, 842, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 903, 904, 937, 938, 939, 940, 944, 945, 969, 971, 978, 996
РОСТЕЛЕКОМ	874, 904, 923, 963, 988, 993
СИГНАЛ	867, 968
ТВОЁ ТВ	820
ТЕЛЕКАРТА	867, 909, 973
ТЕЛЕЦИФРА	968

Функции кнопок пульта IRC 17 F к TV устройствам

Кнопки пульта IRC 17 F	Код 101		Код 102		Код 103		Код 104		Код 105	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD							>+; FT+		COLOUR+; ☉+	
AUDIO; NICAM	▲ N				CD/O		9; ↑ ↓			
VIDEO; SYS	⊙ N		■; VIDEO				STD		MODE; P/S	
☐; ZOOM							☐		SIZE	
▼; TV			TV		TV		<<; FT-		COLOUR-; ☉-	
☐; ↗			☐; A/B		PAGE		M; STORE		PIP	
☐; LOCK	⌘; ○ N		NORM; RESET		⌘		⌘		STILL	
▲; FAV									FC	
○	○		○		○		○		POWER; ○	
AV	TV/VIDEO				AV		AV		TV/VIDEO; TV/AV	
⌘	MUTE; ⌘		⌘		⌘		⌘		MUTE; ⌘	
MENU									FUNCT; MENU	
EXIT										
▲	☉+		☉+		☉+		☉+		FUN+; +; ▲; ZOOM	
◀	○-		○-		○-	☉-	○-	☉-	☉-; ○-	
OK									PIC SEL; FUNCT	
▶	○+		○+		○+	☉+	○+	☉+	☉+; ○+	
▼	☉-		☉-		☉-		☉-		FUN-; -; ▼; -PI-	
⌘; SETUP					SC; ☐		☐		PIC; SET ON TIME	
♪; TITLE					STD		A-B; ☐☐		X ON TIME	
☐			TEXT		☐		☐		MIN; MINUTE	
GUIDE									HOUR; HR CLOCK	
☐	TIME		TIME; TEXT CL		☐		☐	-; SLEEP	SLEEP; OFF TIME.; ☐	
☐			MIX		☐		☐			
RED; ●	☉-				DPY -	9;-	RED; P1	9;-	1-; 10-	
GREEN; ▨	☉+				DPY +; STR	9;+	GREEN; P2	9;+	2-	
YELLOW; ▨	☉-		L ⌘; TP OFF		FT -	▨	YELLOW; P3	▨	3-; SCAN	
BLUE; ▨	☉+		R ⌘; TP ON		FT +	▨R	BLUE; P4	▨R	4-; MSG	
☐	DISPLAY		☐☐		STATUS		DISPLAY		RECALL; DISPLAY	
☐	P/C				P/C		P/C		⌘; Q. VIEW; ☐	
VOL -	VOL-; ▾		▾		▾	▾-	▾	▾-	VOLUME ▾; ▾-	
VOL +	VOL+; ▸		▸		▸	▸+	▸	▸+	VOLUME ▸; ▸+	
CH V; ⌘			PROGR -; HOLD		P -		P -		CHANNEL ▾; P -	
CH A; ⌘			PROGR +; REVEAL		P +		P +		CHANNEL ▸; P +	
±; SAT	-/-		10		-/-		-/-; 1-	3-	±	
CLEAR; X	11		20		☐; CLEAR		2-	C	RESET; CANCEL; X	
◀; ●	12				☐; ☐II		☐	- <<		
▶; i	13				☐		☐			
▶; ?	14				☐; ☐I		☐	>> +		
■; X	15				☐		☐		⌘	
■; ⬇	16/AV								ZOOM	
1, 2, ... 9, 0	1, 2, ... 9, 10		1, 2 ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0/AV		1, 2, ... 9, 0	

Функции кнопок пульта IRC 17 F к TV устройствам

Кнопки пульта IRC 17 F	Код 106		Код 107		Код 108		Код 109		Код 110	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			V. TON		<> +		☐; BROWSE; 9;+		VOL+	
AUDIO; NICAM			9; ▨ ▨; AUDIO				I/II; RGB			
VIDEO; SYS			MODE	☐			S-VIDEO; HI			
☐; ZOOM			<>				ROTATE			
▼; TV	TV; C; ☐		TV; ☐		<>		☐; LIST; 9;+		VOL-	
☐; ↗	MEMORY		PIP	MEMO	☐		STORE	◆		
☐; LOCK	→←		→←		→←		→←; IPE		NORM	RESET
▲; FAV			8							
○	○		○		○		○		○	○
AV	AV		AV; TV/AV		AV		TV/AV		AV	
⌘	⌘		⌘		⌘		⌘		⌘	
MENU	MENU		MENU; SURROUND							
EXIT	P/C		STOP							
▲	☉+		☐☐		☉+		☉+	▸+	☉+	
◀	○-	☐☐-	▾ ▸		○-		○-	☉-	☉-	☉-
OK			☐							
▶	○+	PICTURE; ☐☐+	▾ ▸		○+		○+	☉+	☉+	☉+
▼	☉-		☐☐		☉-		☉-	▸-	☉-	☉-
⌘; SETUP	PICTURE		☐	○	☐		☐; PICTURE			
♪; TITLE	LIST		☐☐	Ω	☐+		☐/0; M/S			
☐	☐☐		☐☐	☐☐	☐☐		CS		☐; PERI TV	
GUIDE	CLOCK; S. PAGE		FL.BANK; TXT MODE		FLOF LIST					
☐	TIMER; ☐		☐; →←	☐; A/B BANK	☐				TIME	
☐	☐		HELP; ☐		☐		☐		☐	
RED; ●	R		RED		RED		RED; INDEX	R	COLOR-	
GREEN; ▨	G		GREEN		GREEN		GREEN	G	COLOR+	
YELLOW; ▨	Y		YELLOW		YELLOW		YELLOW	Y	BR-	
BLUE; ▨	B		BLUE		BLUE		BLUE	B	BR+	
☐	RECALL; S		☐		☐		P/C; 2-; ☐		P/C; 2-	
☐	P/S; ALT		P/C; 2-; CS; BANK		P/C				VOL-	
VOL -	▾	☐-	▾		▾		▾	▾ ▸ L	VOL+	
VOL +	▸	☐+	▸		▸		▸	▸ ▸ R		
CH V; ⌘	P -		P ▾		P -		PR -	→-	P-	
CH A; ⌘	P +		P ▸		P +		PR +	→+	P+	
±; SAT	-/-		-/-; 1-		-/-		-/-; 1-; N/N		-/-; 1-	
CLEAR; X	CANCEL		☐		☐		☐; UPDATE		*	
◀; ●			☐		☐		☐			
▶; i	☐; INDEX		☐; MENU		☐		☐; S. KEY +			
▶; ?	☐; REVEAL		☐		☐		☐; S. KEY -		REV	
■; X	☐; STOP		☐		☐		☐			
■; ⬇	☐; SIZE		☐		☐		☐		SIZE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 17 F к TV устройствам

Кнопки пульта IRC 17 F	Код 111		Код 112		Код 113		Код 114		Код 115	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	□+								BASS; [B]	
AUDIO; NICAM					□				S.SYS; SYSTEM	
VIDEO; SYS									C.SYS	
▣; ZOOM					▣; WIDE				SWAP	
▼; TV	□-				TV; DTV				CH SCAN	
□; ↻					▣; □		MEMORY		SURROUND	
▣; LOCK	→←		→←		PP		→←		∇ A/B	
▲; FAV					○		RESET		○	
○	○		○		○		○		TV/AV	
AV			TV/VCR		▣; ▣; SOURCE		TV/▣		*	
*	*		*		▣		*		MENU; F	
MENU					MENU; ▣; SL; M		MENU			
EXIT										
▲	☼+		☼+		▲		P▲		P▲; CH▲	
◀	○-		○-		▲; -		◀		◀; ◀	
OK					OK	OK	OK			
▶	○+		○+		▶; +		▶		▶; ▶	
▼	☼-		☼-		▼		P▼		P▼; CH▼	
*; SETUP			B						PIC MODE; PICTURE	
♪; TITLE			<OD>		I-II				SOUND; ▣	
▣	□▣				▣		INDEX		TXT/TV	
GUIDE					S		ATR			
⏻	▣; ●		A; SLEEP		SLEEP; ○		●	TIMER REC	TIMER; ▣	
□							F; □			
RED; ●	RED; 13				RED; SND.; ▲			● REC	RED	
GREEN; ▣	GREEN; 14				GREEN; PIC.; ▼				GREEN	
YELLOW; ◀	YELLOW; 15/av				YELLOW; FEATURE				YELLOW	
BLUE; ▣	BLUE; 16/av				BLUE; INSTALL				BLUE	
▣	i				INFO; ▣; i		▣		▣; ▣	
▣	P&P				PP; SWAP		P&P		P&P; ▣	
VOL -	◀		◀		VOL -; V-		◀		◀; ◀	
VOL +	▶		▶		VOL +; V+		▶		▶; ▶	
CH V; ◀	P -; ○○-				P▼; P-		P▼		P▼; CH▼	
CH ▲; ▶	P +; ○○+				P▲; P+		P▲		P▲; CH▲	
+-; SAT	-/-; UPDATE		11 - 27		-/-; EXIT		-/-		-/-; ▣	
CLEAR; X	17-28		12 - 28		▣; X; ▣		SP/LP		▣	
◀; ●			13 - 29		▣; ●		◀(REW)		▣	
▶; i	P/C; ▣		14 - 30		▣; i; GUIDE		▶(PLAY)		▣	
▶; ?			15 - 31		▣; ?		▶(F.FWD)		▣	
▣; X			16 - 32; AV		▣; X; ▣		▣(STOP)		▣	
▣; ⏻			17 - 32		▣; ⏻; ▣; WIDE		▣(PAUSE)		▣	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 10		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 17 F к TV устройствам

Кнопки пульта IRC 17 F	Код 116		Код 117		Код 118		Код 119		Код 120	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	PIP-POS		B.E; WOOFER; DVB						○+	
AUDIO; NICAM	STEREO		S.EFFECT		S.SYS; SOUND SYS				○	
VIDEO; SYS	FREEZE; ●		GAME		COLOR SYS.		VIDEO MODE			
▣; ZOOM	ZOOM; Q		SRS; SIZE; ESS/EPS							
▼; TV	POP		SCAN						○-	
□; ↻	PIP		LOCK/CAPS; CAPS						AUTO	
▣; LOCK	AUTO; CHILD LOCK		FAVORITE		FAVORITE; SURF		CAPTION			
▲; FAV	FAV.		○; STANDBY		STANDBY; ○		POWER		○; POWER	
○	○		TV/AV		TV/AV				▣; SOURCE	
AV	▣; SOURCE		MUTE		MUTE		MUTE		*; MUTE	
*	*; MUTE		MENU		MENU; MENU/INS		AUTO (MENU)		▣; MENU	
MENU	MENU; ▣		EXIT							
EXIT										
▲	▲				P + ▲; PRO. ▲		+(MENU)		CH▲	
◀	◀				V - ◀; VOL. ◀		-(MENU)		VOL▼	
OK	ENTER		OK; EXIT		OK				▣/OK	
▶	▶				V + ▶; VOL. ▶		+(MENU)		VOL▲	
▼	▼				P - ▼; PRO. ▼		-(MENU)		CH▼	
*; SETUP	P.MODE		PICTURE		PIC.; DEL.; PIC./DEL.		MENU; SETUP		P.P	
♪; TITLE	S.MODE		SOUND; S.SYS.				DIGICON (MENU)		S.P	
▣	TEXT	M.WIN	TXT		CALENDAR				▣; TELETEXT	
GUIDE	SORT; SWAP	ACT.WIN	NOTEBOOK		CAPS				POS	
⏻	○; SLEEP		SLEEP		SLEEP		SLEEP		TIMER	
□	MIX		CALENDAR		NOTE; NOTEBOOK				▣; MIX	
RED; ●	RED; P.MODE		RED; DISPL.; INDEX		AT				RED; ○; STEREO	
GREEN; ▣	GREEN; S.MODE		GREEN; ZOOM/INS.		S.EFFECT				GREEN; ○; TIMER	
YELLOW; ◀	YELLOW; FAV.		YELLOW; FAVORITE		B.E				YELLOW; □; DSP	
BLUE; ▣	BLUE; ○; SLEEP		CYAN; RECALL		SURROUND				BLUE; AUTO	
▣	▣; DSP/CAPS		DISPLAY; INDEX		DISPLAY		DISPLAY		▣; DSP	
▣	▣		CYAN; RECALL		RECALL; A/CH		CH-RECALL		▣	
VOL -	VOLUME -		VOL. ◀		V - ◀; VOL. ◀		VOLUME▼		VOL▼	
VOL +	VOLUME +		VOL. ▶		V + ▶; VOL. ▶		VOLUME▲		VOL▲	
CH V; ◀	CHANNEL -		PRO. ▼		P - ▼; PRO. ▼		CH▼		CH▼	
CH ▲; ▶	CHANNEL +		PRO. ▲		P + ▲; PRO. ▲		CH▲		CH▲	
+-; SAT	-/-		EXPAND; -/-						-/-	
CLEAR; X										
◀; ●	TIMER		SUBPAGE						○; CLOCK	
▶; i	UPDATE		MIX		GAME				▣; INDEX	
▶; ?	REVEAL		REVEAL; CLOCK						▣; REVEAL	
▣; X	HOLD		AT; HOLD						▣; HOLD	
▣; ⏻	SIZE		UPDATE						▣	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 17 F к TV устройствам

Кнопки пульта IRC 17 F	Код 121		Код 122		Код 123		Код 124		Код 125	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD					VGA		■; ▲			
AUDIO; NICAM	I-II		STEREO				LANG			STEREO
VIDEO; SYS			?		YPbPr		SCREEN; →←			
■; ZOOM	ZOOM		■; ZOOM		ASPECT		■; ■; WIDE			q; ZOOM
▼; TV	TV		TV/RADIO		TV		■; PC; ▼	TV; ■; TV/DTV		
■; ↗	PIP		?				■; ■; PIP; INFO	SEARCH M.; ★/Q		AUTO
■; LOCK	PP		FREEZE				■; ■; Q.MENU	■		STILL
▲; FAV			FAV.; D.FAV.		USB		FAV			
○	○		○; POWER		○		○			○; POWER
AV	AV		←		←		AV; SOURCE; ■			←; SOURCE
⌘	⌘		⌘; MUTE		⌘; MUTE		⌘; MUTE			⌘; MUTE
MENU	MENU		■; MENU		■		■; M; MENU			■; MENU
EXIT			↵; EXIT		EXIT		C; EXIT			
▲	▲		▲		▲		▲			CH ▲
◀	◀		◀		◀		◀			VOL ◀
OK	OK		OK		OK		OK; SELECT			OK
▶	▶		▶		▶		▶			VOL ▶
▼	▼		▼		▼		▼			CH ▼
⌘; SETUP			■; P.MODE		P.M		■; HDMI CONTR.	■; ■; ANGLE		P.MODE
♪; TITLE			♪; S.MODE		S.M		I-II			S.MODE
■	TEXT		■; TELETEXT/MIX		CH.LIST		TXT; ■; TEXT			■; TELETEXT
GUIDE			EPG				EPG; ■			
○	?/TIME		SLEEP		SLEEP		SLEEP			○; SLEEP
□	LIST		■; DTV MENU				SUBTITLE; ■			■; MIX
RED; ●	RED; AV		RED; STEREO		RED		RED; SOUND; ▲; Z-M	●		RED; STEREO
GREEN; ■	GREEN; LIST		GREEN; SLEEP		GREEN		GREEN; PIC; ▼; REP.			GREEN; ○; SLEEP
YELLOW; ■	YELLOW; ZOOM		YELLOW; FREEZE		YELLOW		YELLOW; FEAT.; R-T	MY BUTTON 1 ★		YELLOW; ■; STILL
BLUE; ■	BLUE; PIP		BLUE; AUTO; C.LOC		BLUE		BLUE; INST.; TITLE	MY BUTTON 2 ★		BLUE; AUTO
■			i; INFO		DISPLAY		■; INFO/?; i	DISPLAY; ★/○		□
○	P<P		■		RECALL		SWAP; PP; ○; ■	PP; PP; PRESETS		○
VOL -	V -		VOL V		VOL -		V +; ■; V ▼			VOL ◀
VOL +	V +		VOL ▲		VOL +		V +; ■; V ▲			VOL ▶
CH V; ■	P -		CH -		CH -	■	P -; P/CH -; CH ▼	■		CH ▼
CH ▲; ■	P +		CH +		CH +	■	P +; P/CH +; CH ▲	■		CH ▲
±; SAT			?		■		--; ■; RETURN			
CLEAR; X			■; UPDATE		■		■; ■; GUIDE			
◀; ○			CC; SUB.PAGE		■		■	■; SLEEP		○; CLOCK
▶; i			■; INDEX		■		■			■; INDEX
▶; ?			■; REVEAL		■		■			■; REVEAL
■; X	?/TIME; ■		■; HOLD		■		■; ■; WIDE			■; HOLD
■; ■			■; SIZE		■		■; ■			■; SIZE
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0			1, 2, ... 9, 0

Функции кнопок пульта IRC 17 F к VCR устройствам

Кнопки пульта IRC 17 F	Код 201		Код 202		Код 203		Код 204		Код 205	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			TRACKING ▲		DVD					SLOW +
AUDIO; NICAM					AUDIO OUT					AUDIO
VIDEO; SYS	SP/LP		MODE OSD		VCR	VIDEO WIP.; S.PIC.	SYSTEM; ■			SP/LP
■; ZOOM	EJECT		x2		G; REV. SEARCH	QUICK-FIND	INDEX			ZOOM
▼; TV			TRACKING ▼		LCD ON/OFF		MON TV			SIZE
■; ↗	MEMO REPEAT		100	MEMORY; ZERO B.	SEARCH	STORE; SET	MEMORY	PRESET		SLOW -
■; LOCK	→←; RESET		C-LOCK; ■		100		ATR; ■	RESET		PIP
▲; FAV	▲		▲; EJECT		▲; EJECT	SKIP SEARCH	▲; EJECT			RESET
○	POWER		OPERATE		OPERATE		○; POWER			MEM.
AV	VCR		TV/AV; INPUT; SP/LP		TV/AV; INPUT SEL.	INPUT; SIMUL	TV VTR			TV/AV
⌘			MUTE		SHUT ON/OFF					⌘
MENU	CHECK; PROG		OSP; MENU	1 ○	OSP; MENU	SEARCH MODE	MENU; OK			⌘; SEARCH
EXIT			2 ○		CANCEL	ADD/ERASE				
▲	▲		▲	3 ○			▲			▲
◀	◀		◀	4 ○			◀			◀
OK	OK; ■		▶	5 ○	OSP; CONFIR.; CALL		OK	OK		OK
▶	▶		▶	6 ○			▶			▶
▼	▼		▼				▼			▼
⌘; SETUP			PROG; MENU		MODE OSD; ON SC.		VPS			CHECK
♪; TITLE			SHUT ON/OFF		SP/LP; TAPE SPEED		VPT			AUDIO DUB
■	VPS		TIME; ○		TIME; ○		PROG			MARK
GUIDE	MARK		CLOCK		CLOCK					X2
○			TIMER ON/OFF	TIME REC	TIMER ON/OFF	G-CODE/T.; PROG	CLOCK			
□	CL; PROG		OSP; CONFIR.; CALL		OSP; CONFIR.; CAL		0000			REMAIN
RED; ●	REPEAT; TRACK	● REC	SP/LP; TAPE SPEED	● REC	SET		RED	● REC		MEMORY REPEAT
GREEN; ■	F. ADV.		■; F.ADV	1 ○	■; F.ADV		GREEN			STROBE
YELLOW; ■	REW PLAY		2 ○		RENTAL REWIND		YELLOW			REL
BLUE; ■	■		■; SLOW	3 ○	■; SLOW		BLUE; CLOCK	■; SLOW		W
■	REMAIN		DISPLAY; M. OSD		DISPLAY; M. OSD		DISPLAY			ART
○	REPEAT; ○		REPEAT; ○		REPEAT; ○					TRACK
VOL -	SLOW -		SLOW -; DPSS ◀		SLOW -; DPSS ▶		SLOW -			◀
VOL +	SLOW +		SLOW +; DPSS ▶		SLOW +; DPSS ▶		SLOW +			▶
CH V; ■	P -; -		CHANNEL -		CHANNEL -	TRACKING ▼	P -			▼
CH ▲; ■	P +; +		CHANNEL +		CHANNEL +	TRACKING ▲	P +			▲
±; SAT	-/-		-/-		-/-	+10	SP/LP			INS
CLEAR; X	-/-		CLEAR; C. RESET		CLEAR; C. RESET		CL	CL		CANCEL
◀; ○	◀; REW		◀; REW		◀; REW		◀; ○			◀; (REW)
▶; i	▶; PLAY		▶; PLAY		▶; PLAY		▶			▶; (PLAY)
▶; ?	▶; F.FWD		▶; F.FWD		▶; F.FWD		▶			▶; (F.FWD)
■; X	■; STOP		■; STOP		■; STOP		■; STOP			■; (STOP)
■; ■	■; PAUSE		■; PAUSE		■; PAUSE		■			■; (PAUSE)
1, 2, ... 9, 0	1, 2, ... 9, 0/AV		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0/AV			1, 2, ... 9, 0

Функции кнопок пульта IRC 17 F к AUX устройствам

Кнопки пульта IRC 17 F	Код 301		Код 302		Код 303		Код 304		Код 305	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	D.ZOOM ▲		KARAOKE ON/OFF		SOUND		TAPE			
AUDIO; NICAM			AUDIO		AUDIO		SOUND PRESET			
VIDEO; SYS	VIDEO		PICTURE MODE		ANGLE		VIDEO			
☐; ZOOM			ZOOM		ZOOM		RANDOM			
▼; TV	D.ZOOM ▼		VOCAL		TU/BAND		TUNER/BAND			
☐; ↗	AUTO IMAGE		SEARCH MODE		SEARCH MODE		MEMORY			
☐; LOCK	NORMAL; ↗↖		ANGLE		SET/CLEAR		PRESET			
▲; FAV			OPEN/CLOSE		ADJUST					
○	○; ON-OFF		○/ON		○/ON		○/ON		START/STOP	
AV			ANGLE REPLAY		FM MODE					
✳	MUTE; ✳				MUTE					
MENU	MENU; PIC.☐		MENU		MENU					
EXIT			RETURN		RETURN					
▲	▲		▲		▲					
◀	◀; LEVEL -		◀		◀					
OK	SELECT		ENT		ENTER					
▶	▶; LEVEL +		▶		▶					
▼	▼		▼		▼					
✳; SETUP			SETUP		SET UP					
♪; TITLE			TITLE; TOP MENU		TITLE		FM MODE			
☐	NO SHOW		PROGRAM/RAND.		PROG	PRESET/PTY CK				
GUIDE	N		SURROUND		FUNCTION	RDS				
⏸	P-TIMER		SUBTITLE CHANGE		SLEEP	TIMER	SLEEP			
☐	COMPUTER		SUBTITLE ON/OFF		SUBTITLE	CLOCK				
RED; ●	FOCUS ▼		REPEAT; PLAY MO.		REPEAT	TEST TONE				
GREEN; ▮	FOCUS ▲		A-B REPEAT		A.REPLAY	SURROUND				
YELLOW; ◀	ZOOM ▼		◀; REV SLOW		◀; REV SLOW	BASS				
BLUE; ▮	ZOOM ▲		▮; FWD SLOW		▮; FWD SLOW	TRIM				
☐			ON SCREEN		ON SCREEN					
☐			LAST/MEMO		LAST MEMO		REPEAT			
VOL -	VOLUME -; ↘		KEY -		VOLUME -		VOLUME -			
VOL +	VOLUME +; ↗		KEY +		VOLUME +		VOLUME +			
CH V; ◀	KEYSTONE ▼		◀ PREV		◀; PREV		◀; ◀		SCENE SEARCH -	
CH A; ▮	KEYSTONE ▲		▮ NEXT		▮; NEXT		▮; ▮		SCENE SEARCH +	
±; SAT			+10		+10					
CLEAR; X			C; CLEAR		CLEAR	-				
◀; ●	LENS SHIFT ▼		◀ REV		◀; REV		◀; ◀		◀	
▶; i	LENS SHIFT		▶ PLAY		▶; PLAY		▶; ▮		▶	
▶; ?	LENS SHIFT ▲		▶ FWD		▶; FWD		▶; ▮		▶	
■; ✳			■		■; STOP		■		■	
▮; ⏸	FREEZE		▮ PAUSE/STEP		▮; PAUSE/STILL		▮/▮		▮	
1, 2, ... 9, 0			1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0			

Функции кнопок пульта IRC 17 F к AUX устройствам

Кнопки пульта IRC 17 F	Код 306	
	Функция	Доп. функция
▲; DVD		
AUDIO; NICAM		
VIDEO; SYS		
☐; ZOOM		
▼; TV		
☐; ↗		
☐; LOCK		
▲; FAV		
○		
AV		
✳		
MENU	☐	
EXIT	☐	
▲	▲	
◀	◀	
OK	OK	
▶	▶	
▼	▼	
✳; SETUP		
♪; TITLE		
☐		
GUIDE		
⏸		
☐		
RED; ●		
GREEN; ▮		
YELLOW; ◀		
BLUE; ▮		
☐		
☐		
VOL -		
VOL +		
CH V; ◀		
CH A; ▮		
±; SAT		
CLEAR; X		
◀; ●		
▶; i		
▶; ?		
■; ✳		
▮; ⏸		
1, 2, ... 9, 0		

Функции кнопок пульта IRC 17 F к TV устройствам

Кнопки пульта IRC 17 F	Коды 501-799	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM		
VIDEO ; SYS		
☐ ; ZOOM		
▼ ; TV		
⏪ ; ⏩		
☒ ; LOCK		
▲ ; FAV		
⏻	POWER ; ⏻	
AV	TV/VIDEO ; TV/AV	
⌘	MUTE ; ⌘	
MENU		
EXIT		
▲		
◀		
OK		
▶		
▼		
⌘ ; SETUP		
🎵 ; TITLE		
☐		
GUIDE		
⏻		
☐		
RED ; ●		
GREEN ; ▢		
YELLOW ; ◀		
BLUE ; ▶		
☐		
⏻		
VOL -	VOLUME ▼ ; 🔊-	
VOL +	VOLUME ▲ ; 🔊+	
CH V ; ⏪	CHANNEL ▼ ; P -	
CH ▲ ; ⏩	CHANNEL ▲ ; P +	
⊕ ; SAT		
CLEAR ; X		
⏪ ; ●		
▶ ; i		
▶ ; ?		
■ ; X		
⏻ ; ⏩		
1, 2, ... 9, 0	1, 2, ... 9, 0	

Для просмотра функций кнопок баз кодов 8 и 9 (SAT, STB, DVB устройства) перейдите по следующей ссылке <http://www.pult-irc.ru/files/manual/SatCodesForIrcF.pdf>