

Приложение IRC 25 F (версия 21.03.18 23:24)

Модели оригинальных пультов и соответствующие им коды пульта IRC приведены в разделе "Коды пульта IRC 25 F".

Функции всех кнопок для каждого кода пульта IRC можно узнать из таблиц данного приложения.

Пульт IRC может иметь дополнительные функции (если указаны в столбце "Доп. функция"). Доступ к ним осуществляется при помощи кнопки SHIFT (см. в инструкции рис.1, п.16). Для доступа к дополнительным функциям нажмите кнопку SHIFT и, удерживая её нажатой, нажмите ту кнопку, дополнительная функция которой Вам необходима.

После первой установки батареек

Кнопка устройства пульта IRC	Код пульта IRC
TV	104
VCR	103
AUX	106
SAT	108

Кнопка устройства пульта IRC	Код пульта IRC
SHIFT + TV*	109
SHIFT + VCR*	111
SHIFT + AUX*	112
SHIFT + SAT*	302

* Нажмите кнопку SHIFT и, удерживая её нажатой, нажмите и отпустите одну из кнопок пульта: TV, VCR, AUX или SAT.

Доступные коды пульта IRC 25 F

Номер базы кодов (диапазон кодов)	Устройство базы кодов	Доступные коды пульта IRC
1 (101-199)	TV	101 - 124
2 (201-299)	VCR	201 - 204
3 (301-399)	AUX	301 - 308
4 (401-499)	SAT	401
5 (501-599)	TV	501 - 599
6 (601-699)	TV	601 - 699
7 (701-799)	TV	701 - 799
8 (801-899)	SAT	801 - 899
9 (901-999)	SAT	901 - 999

Коды пульта IRC 25 F

Коды к устройствам марки TOSHIBA

Модель*	Устр-во	Код
2312-0876	TV	101
2312-0895	TV	101
CT-32F2	TV	123
CT-5626	TV	101
CT-8010	TV/AUX	115
CT-8023	TV/AUX	114
CT-8035	TV	122
CT-816	TV	107
CT-830	TV	107
CT-830 (VCR)	VCR	201,202
CT-833	TV	104
CT-841	TV	104
CT-865	TV	104
CT-893	TV	117
CT-90044	TV	109,110
CT-90045	TV	109,110
CT-90046	TV	104
CT-90056	AUX, CD, DVD	301
CT-90089	TV	104
CT-90093	TV	104
CT-90119	TV	104
CT-90126 (DVD)	AUX, CD, DVD	302
CT-90126 (TV)	TV	104
CT-90126 (VCR)	VCR	201,202
CT-90131	TV	104
CT-90131 (DVD)	AUX, CD, DVD	302
CT-90131 (VCR)	VCR	201,202
CT-90141 (DVD)	AUX, CD, DVD	302
CT-90141 (TV)	TV	104
CT-90141 (VCR)	VCR	201,202
CT-90142 (DVD)	AUX, CD, DVD	302
CT-90142 (TV)	TV	104
CT-90142 (VCR)	VCR	201,202
CT-90161	TV	104
CT-90166	TV	104
CT-90170	TV	104
CT-90173	TV	104
CT-90209	TV	104
CT-90211	TV	104
CT-90214 (DVD)	AUX, CD, DVD	302
CT-90214 (TV)	TV	104
CT-90214 (VCR)	VCR	201,202
CT-90229	TV	116
CT-90230	TV	116
CT-90239	TV	104

Модель	Устр-во	Код
CT-90253	TV	104
CT-90272 (DVD)	AUX, CD, DVD	302
CT-90272 (STB)	SAT, STB, DVB	401
CT-90272 (TV)	TV	104
CT-90288 (DVD)	AUX, CD, DVD	302
CT-90288 (REGZA-LINK)	HOME APPLIANCES	203
CT-90288 (TV)	TV	112
CT-90298	TV	104
CT-90326	TV	112
CT-90383	TV/AUX	114
CT-90386	TV	119
CT-90404	TV/AUX	114
CT-90429	TV	121
CT-90430	TV	121
CT-9107	TV	102
CT-9108	TV	102
CT-9117	TV	102
CT-9123	TV	102
CT-9128	TV	102
CT-9129	TV	102
CT-9141	TV	102
CT-9143	TV	102
CT-9149	TV	102
CT-9165	TV	102
CT-9176	TV	102
CT-9178	TV	102
CT-9184	TV	102
CT-9185	TV	102
CT-9186	TV	102
CT-9187A	TV	102
CT-9191	TV	102
CT-9193	TV	102
CT-9194	TV	102
CT-9199	TV	102
CT-9207	TV	102
CT-923	TV	101
CT-9230	TV	102
CT-9231	TV	102
CT-9233	TV	102
CT-9234	TV	102
CT-9268	TV	102
CT-9289	TV	102
CT-9292	TV	102
CT-9293	TV	104
CT-9294	TV	104

Модель	Устр-во	Код
CT-9296	TV	102
CT-9321	TV	102
CT-933 A	TV	101
CT-9332	TV	102
CT-9335	TV	104
CT-9340	TV	102
CT-935	TV	101
CT-9357	TV	104
CT-9369	TV	102
CT-9381	TV	102
CT-9384	TV	102
CT-9385	TV	104
CT-9386	TV	104
CT-939 A	TV	101
CT-9391	TV	104
CT-9396	TV	104
CT-9399	TV	104
CT-9401	TV	104
CT-9430	TV	104
CT-9432	TV	104
CT-9433	TV	102
CT-9434	TV	104
CT-9450	TV	104
CT-9455	TV	102
CT-9463	TV	102
CT-9470	TV	102
CT-9475	TV	104
CT-9476	TV	102
CT-9481	TV	104
CT-9493	TV	104
CT-95011	TV	112
CT-9507	TV	104
CT-9511	TV	104
CT-9526	TV	104
CT-9552	TV	104
CT-957	TV	102
CT-9573	TV	104
CT-9574	TV	104
CT-9580	TV	104
CT-9581	TV	104
CT-9623	TV	104
CT-9626	TV	104
CT-9639	TV	104
CT-9640	TV	104
CT-9673	TV	104

Модель	Устр-во	Код
CT-9678	TV	104
CT-9684	TV	104
CT-9712	TV	104
CT-9732	TV	104
CT-9736	TV	104
CT-9763	TV	104
CT-9768	TV	104
CT-9782	TV	104
CT-9785	TV	104
CT-9787	TV	104
CT-9818	TV	104
CT-9840	TV	104
CT-9843	TV	104
CT-9851	TV	104
CT-9856	TV	104
CT-9879	TV	104
CT-9880	TV	104
CT-9881	TV	104
CT-9914	TV	104
CT-9922	TV	104
CT-9975	TV	104
CT-9992	TV	104
CTM-7158	TV	105
DC-G1U	TV/AUX	103
DT-2112	TV	104
DT-2527	TV	104
DV-90N	VCR	201,202
RC1900	TV	124
RC-32TR	TV/AUX	111
RC6	HOME APPLIANCES	204
SE-R0019	AUX, CD, DVD	302
SE-R0033 (DVD)	AUX, CD, DVD	303
SE-R0033 (TV)	TV	104
SE-R0049	AUX, CD, DVD	302
SE-R0075	AUX, CD, DVD	302
SE-R0088	VCR/AUX	304
SE-R0092	VCR/AUX	305
SE-R0100	AUX, CD, DVD	302
SE-R0111	VCR/AUX	305
SE-R0117 (DVD)	AUX, CD, DVD	302
SE-R0117 (TV)	TV	104
SE-R0127	AUX, CD, DVD	302
SE-R0133 (DVD)	AUX, CD, DVD	308
SE-R0133 (TV)	TV	102
SE-R0143	AUX, CD, DVD	302

* По каталогу «IRC»

Коды пульта IRC 25 F

Коды к TV, VCR, AUX, SAT устройствам марки TOSHIBA

Модель	Устр-во	Код
SE-R0147	VCR/AUX	306
SE-R0157	AUX, CD, DVD	302
SE-R0177	AUX, CD, DVD	302
SE-R0185	AUX, CD, DVD	302
SE-R0198	VCR/AUX	306
SE-R0213	AUX, CD, DVD	302
SE-R0217	AUX, CD, DVD	302
SE-R0236	AUX, CD, DVD	307
SE-R0238	AUX, CD, DVD	307
SE-R0239	AUX, CD, DVD	302
SE-R0244	AUX, CD, DVD	308
SE-R0273	AUX, CD, DVD	308
SE-R0282	TV	120
SE-R0284	AUX, CD, DVD	308
SE-R0295	AUX, CD, DVD	308
SE-R0302	AUX, CD, DVD	302
SE-R0319	TV/AUX	113
SE-R0327	AUX, CD, DVD	302
SE-R0329	TV/AUX	118
SE-R0337	TV/AUX	113
VC-606	VCR	201,202
VC-6A	VCR	201,202
VC-73A	VCR	201,202
VC-73C	VCR	201,202
VC-788TK	VCR	201,202
VC-83F	VCR	201,202
VC-90F	VCR	201,202
VC-93F	VCR	201,202
VT-11	VCR	201,202
VT-12F	VCR	201,202
VT-1420	TV/AUX	103
VT-20	VCR	201,202
VT-206R	VCR	201,202
VT-20F	VCR	201,202
VT-21F	VCR	201,202
VT-21FL3	TV/VCR	106
VT-21FPR	TV/VCR	108
VT-22F	VCR	201,202
VT-300B	VCR	201,202
VT-30F	VCR	201,202
VT-32F	VCR	201,202
VT-410W	VCR	201,202
VT-43F	VCR	201,202
VT-454F	VCR	201,202
VT-56F	VCR	201,202

Модель	Устр-во	Код
VT-710W	VCR	201,202
VT-752EW	VCR	201,202
VT-76F	VCR	201,202
VT-852EW (VCR)	VCR	201,202
VT-858F (TV)	TV	104
VT-858F (VIDEO)	VCR	201,202
VT-859G (TV)	TV	104
VT-859G (VIDEO)	VCR	201,202
VT-C6	VCR	201,202
VT-K10	VCR	201,202
VT-K3C	VCR	201,202
VT-K5	VCR	201,202
VT-L41G	VCR	201,202
VT-L43F	VCR	201,202
VT-L43G	VCR	201,202
VT-W58	VCR	201,202
WC-G1R	TV/VCR	108

Коды к TV устройствам различных марок

Марка	Код
AEG	544
AIWA	502, 503, 523, 528, 579, 634, 678, 706, 710, 712, 716
AKAI	501, 503, 512, 516, 520, 522, 524, 525, 537, 538, 540, 545, 546, 547, 550, 571, 572, 582, 583, 584, 585, 596, 598, 608, 613, 626, 652, 673, 691, 704, 708, 711, 722, 731, 769
AKIRA	511, 514, 516, 522, 524, 525, 537, 538, 541, 545, 547, 556, 577, 586, 594, 597, 598, 601, 623, 626, 629, 631, 649, 666, 680, 689, 690, 693, 699, 717, 739, 796, 797, 798, 799
AMCOL	501, 525, 545, 747
ANITECH	501, 525, 616, 726
ATLANTA	501, 751
AVEST	537, 538, 539, 766
BANG & OLUFSEN	728, 737
BBK	522, 551, 594, 597, 684, 701, 788, 792, 793
BEKO	525, 530, 535, 559, 723, 742
BIGSTON	501, 503
BLAUPUNKT	512
BORK	525, 547, 646, 766
BRAND	711
BROKSONIC	501
CAMERON	538, 550, 567, 675, 697, 702, 792, 794
CASIO	529, 705, 706
CASKA	761
CHANGHONG	516, 596, 642
CLATRONIC	501, 545, 559, 571, 742
CONTEC	501, 603, 604, 613
CORTLAND	644
CROWN	501, 503, 511, 524, 525, 530, 571
DAEWOO	501, 508, 518, 520, 525, 526, 536, 538, 539, 546, 565, 571, 576, 598, 613, 685, 687, 692
DARTLAND	501
DAYTRON	501
DEXP	516, 579, 596, 684, 702
DIGITAL	547
DISTAR	562, 616
DNS	596, 702, 708
DOFFLER	684, 708
DUAL	746
ELEKTA	501, 503, 520, 525, 527, 615
ELEKTRONIKA	583
ELENBERG	538, 545, 550, 565, 567, 579, 581, 644, 655, 676, 683, 717, 785
EPLUTUS	537, 644, 677, 682, 697, 724
ERC	537, 631, 764
ERISSON	511, 514, 516, 525, 526, 537, 538, 541, 550, 556, 561, 568, 586, 596, 599, 623, 626, 629, 631, 711, 712, 714, 739, 747, 779, 786, 795
EVGO	538, 540, 630
FINLUX	501, 511, 583, 589, 608, 732, 758, 774
FUJITSU	544, 573
FUNAI	501, 502, 503, 504, 505, 525, 537, 538, 581, 603, 764
FUSION	596, 642, 699, 705, 706, 781
GBS	501, 520, 525, 571, 583
GENERAL	537, 556
GOLD STAR - LG	501, 512, 518, 525, 527, 559, 570, 583, 584, 589, 609, 613, 642, 706, 712, 742, 750, 765
GRUNDIG	501, 512, 525, 606, 662, 718, 719, 733
HAIER	518, 526, 561, 574, 657, 667, 669, 707, 778
HAPPY	501
HARPER	706, 712
HCM	501, 503, 525
HELIX	701, 702, 708
HIL	503
HISENSE	525
HITACHI	501, 515, 518, 522, 525, 537, 544, 548, 554, 578, 584, 587, 588, 604, 613, 640, 729, 749, 775, 783
HORIZONT	525, 540, 545, 550, 559, 583, 664, 672, 771
HPC	546
HYUNDAI	516, 518, 522, 525, 526, 537, 538, 540, 541, 546, 547, 550, 556, 580, 596, 597, 599, 626, 642, 648, 650, 655, 705, 711, 712, 714, 717, 760
INNO-HIT	501, 525, 571
IRBIS	596, 714
IVA (MBA)	537, 561, 637
IZUMI	516, 537, 596, 663, 691, 695, 703, 705, 711, 792
JINLIPIU	537, 637, 766
JVC	513, 515, 593, 604, 727
KAMACROWN	571
KANSAI	501, 525
KENSTAR	516
KITT	503, 613, 616, 726
KNEISSEL	753
KONKA	537, 538, 560, 561, 581, 616, 626, 717
KRONMARK	596
LOEWE	542, 709, 744
MEDION	525
METZ	745
MITSUBISHI	501, 520, 522, 525, 604, 611, 722, 728, 744
MIYOTA	537, 644, 656
MTC	501, 583
MULTITECH	501, 525
MYSTERY	516, 537, 597, 642, 650, 653, 701, 702, 708, 773, 780, 789
NAD	518, 525
NASH	537
NEC	501, 517, 520, 526, 552, 604, 625, 722
NESCO	501, 525
NESONS	708
NOKIA	519, 584, 610, 614, 616, 740, 746, 767
NOVA	501, 616, 638
NOVEX	516, 546, 599
NTT	759
OMEGA	501, 571
ONIDA	513
ONIKS	516, 525, 537, 545, 546, 547, 680
ONWA	524, 525
OPERA	644, 666, 682
ORBITA	635
ORION	501, 503, 506, 507, 509, 516, 525, 528, 537, 591, 603, 617, 619, 627, 641, 643, 664, 715, 720, 722, 729, 746

Коды к TV устройствам различных марок

Марка	Код
ORSON	526, 537
PANASONIC	512, 531, 532, 752
PHANTOM	644
PHILIPS	501, 511, 524, 525, 540, 549, 628, 639, 707, 748
PHOENIX	613
PHOENIX GOLD	708
PIONEER	548, 555, 566, 575, 647, 666
PIXELVIEW	525
PLANTRON	735
POLAR	525, 526, 537, 538, 540, 543, 546, 547, 581, 596, 599, 663, 664, 683, 703, 711, 717
POLAROID	525
PREMIERA	773
PRESTIGIO	564, 656
PRIMA	522, 547
PROLOGY	653, 655, 777, 784
RADUGA	525, 545, 569, 583, 743
RAINFORD	525, 537, 544, 545
RECOR	511, 525
REKORD	520, 525, 526, 537, 538, 539, 545, 547, 725, 736, 743, 747
RFT	535, 618, 728
ROADSTAR	501, 508, 525, 571
ROLSEN	503, 516, 525, 537, 538, 540, 543, 546, 564, 576, 592, 594, 596, 649, 656, 669, 684, 714, 768, 770
ROVERSCAN	662, 770
ROYAL	501, 503, 525, 616
RUBIN	504, 516, 525, 537, 546, 583, 619, 665, 714, 776
SABA	509, 510, 521, 602, 756
SALORA	584
SAMSUNG	501, 525, 526, 529, 563, 580, 595, 596, 608, 612, 613, 622, 641, 645, 688, 723, 741
SANSUI	524, 525, 538, 556, 695
SANYO	501, 519, 522, 525, 530, 540, 544, 550, 558, 604, 608, 610, 618, 621, 696, 722, 730, 734, 738
SATURN	702, 708
SCARLETT	541, 545
SCHNEIDER	525, 540, 571, 771
SELECO	736, 763
SETRO	520
SHARP	526, 544, 548, 604, 707, 721
SHERION	616
SHIVAKI	501, 503, 508, 516, 518, 520, 525, 526, 527, 536, 538, 539, 540, 545, 546, 547, 550, 556, 580, 583, 585, 596, 599, 609, 619, 630, 632, 635, 636, 643, 644, 664, 681, 694, 708, 743, 791
SIEMENS	512, 525, 660, 726, 734
SIESTA	501, 537, 637
SILELIS	613
SILVER	633
SITRONICS	503, 516, 525, 537, 538, 540, 543, 545, 594, 626, 629, 661, 671, 672, 674, 679, 680, 686, 766
SOKOL	516, 525, 547, 635
SONY	533, 604, 659, 722
SPEKTR	525, 538, 668
START	525, 537, 545, 546, 547
STASSFURT	535, 618
STINOL	525
SUPER	537, 561, 644, 653, 654, 655, 666, 677, 682, 724, 754, 772, 780
SUPER GENERAL	537
SUPRA	501, 508, 516, 518, 520, 522, 525, 527, 529, 536, 537, 541, 563, 579, 580, 596, 597, 612, 642, 643, 687, 690, 705, 706, 712, 713, 790
SUZUKI	516, 556
SVEN	574
TCL	521, 538, 540, 642
TEAC	525
TECHNICS	531, 537, 538
TECHNO	501, 525, 538, 544, 546, 556, 568, 579, 596, 599, 644, 664, 703, 791
TECKTON	522, 582, 601, 669, 670
TELEFUNKEN	510, 521, 561, 590, 602, 605, 642, 708, 712, 714, 756, 757
TELEVISION	501, 525, 616
THOMSON	509, 510, 521, 550, 579, 602, 624, 642, 702, 756
TOSHIBA	516, 544, 553, 604, 651, 744
TRONY	516, 525, 537, 538, 550, 574, 657
TVT	511, 525, 530, 535, 538, 583, 586, 620, 630, 723, 742
UNITED	525
VARTA	642
VESTEL	525, 544, 556, 583, 619
VIEWSONIC	557, 698
VITA	547
VITEK	537, 650
VITYAS	525, 708
VOLNA (ВОЛНА)	635
VR	516, 537, 565, 598, 702, 714, 786
WALTHAM	503, 509, 511, 583, 584, 607, 613, 729, 762
XORO	522, 526, 545, 781, 782, 787
XPX	663
НЕИЗВЕСТНАЯ МАРКА	525, 546, 574, 596, 648, 656, 666, 711, 755

Коды к SAT устройствам различных марок

Марка	Код
AIRTONE	968
ALFA GOLD	828
AMINO (СТРИМ)	829, 902
ARION	835
ARRIS	883, 963, 974
ASTON	811
BBK	931
BIG STAR	965
BIGSAT	839, 840, 903, 936
CADENA	958, 962
CONTINENT	886, 975
COSHIP	855
DAEWOO	872
D-COLOR	946, 961
DELTA SYSTEMS	985
DIGIFORS	946
DIVISAT	957, 958
D-LINK	923
DNS	950, 968
DR.HD	983
DRE	804, 888
DREAM	819
DUNE	927, 934
ECHOSPACE	862
ECHOSTAR	808, 809, 822
ELTEX	987
EPLUTUS	961
EUROSKY	840, 981
EUROSTAR	863
EUSTON	825
EVO	965
GALAXY INNOVATIONS (GI)	878, 881, 908, 911, 912, 917, 924
GENERAL SATELLITE	804, 868, 888, 907, 933, 954
GLOBALTEQ	833
GLOBO	909, 915, 925, 935, 945, 956, 971, 973, 995, 999
GOLD STAR - LG	871
GOLDEN INTERSTAR	821, 841, 879, 918
GOLDEN MEDIA	847, 912
GOLDMASTER	911
HD BOX	847, 911
HITACHI	824, 832
HIVION	929
HOME	968
HOMECAST (ВОЛЯ)	820, 831, 836
HUAVEE	946
HUMAX	803, 804, 823, 848, 860, 861, 905, 949
HYUNDAI	968
ID DIGITAL	804
INTEK	984
INTERCROSS	988
INTRO	978
KAON	820, 949
KARTINA TV	934
KOSMOS	855, 856
LANS	970
LOCUS	946
LUMAX	852, 873, 907, 913, 965, 994
MAG	988
MEDIA COM	825
MOTOROLA	883, 884, 901, 974
MYSTERY	910, 997
NDS	814
NEXT	864
NOKIA	813
NOT	941
ONLIME	905
OPENBOX	827, 835, 869, 870, 911, 990, 991
OPENTECH	972
OPENTEL	865
OPTICUM	971
ORBITA	946, 995
ORIEL	887, 926, 941, 948, 955, 986
PACE	801, 932, 953
PATIX DIGITAL	946, 967, 992
PAUXIS	842, 859
PERFEO	960, 981
PHILIPS	857, 899
PIONEER	851
POLAR	858
REFLECT	959
REXANT	977
RIKOR	916, 947
ROLSEN	930, 941, 942, 961
SAGEMCOM	906
SAMSUNG	803, 810, 812, 854
SEG	818
SELENGA	946
SEZAM	882
SKY VISION	952, 966, 977, 982
SKYMASTER	830
SKYWAY	911
SKYWORTH	989
STAR	833
STAR TRACK	826, 835, 943
STARNET	885
STRONG	805, 806, 815, 816, 817, 828, 830, 914
SUNNIWELL	875
SUPERBOX	903

Коды к SAT устройствам различных марок

Марка	Код
SUPERMAX	821, 866, 880, 924
SUPRA	950, 960, 962
TECHNOSAT	852, 853
TEL-ANT	960
TELEFUNKEN	961, 968
TESLER	926
TOP BOX	965
TOPFIELD	837, 838, 877, 891
TOSHIBA	876
TV STAR	967
TVJET	946, 976
VESTEL	820, 824
VU+	919, 920, 921, 922
WORLD VISION	821, 928, 951, 952, 961, 968
XSAT	801, 807
XSAT (НТВ+)	801, 802, 807, 906, 972, 984, 998
YUXING	904
ZYXEL	874
АРБАКОМ	967
БИЛАИН	883, 884, 901, 923
ВОЛГАТЕЛЕКОМ	842, 843, 844, 845, 846, 847, 849, 850, 858, 867
ДОМ.RU	820, 905
ДОМОЛИНК	874, 904
МТС	829, 855, 902, 964, 974, 979, 980, 989, 993
НЕИЗВЕСТНАЯ МАРКА	834, 835, 842, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 903, 904, 937, 938, 939, 940, 944, 945, 969, 971, 978, 996
РОСТЕЛЕКОМ	874, 904, 923, 963, 988, 993
СИГНАЛ	867, 968
ТВОЁ ТВ	820
ТЕЛЕКАРТА	867, 909, 973
ТЕЛЕЦИФРА	968

Функции кнопок пульта IRC 25 F к TV устройствам

Кнопки пульта IRC 25 F	Код 101		Код 102		Код 103		Код 104		Код 105	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			PAGE +		TV/DVD		PIP CH ▲		TOP; Ⓞ	F +
AUDIO; NICAM	▲ N		▶		AUDIO		Ⓞ/III	- J	ⓄⓄ; Ⓞ	
VIDEO; SYS	Ⓞ N		Ⓞ		PLAY MODE		Ⓞ/PIP		100	
Ⓞ; ZOOM			Ⓞ		CH RTN; ZOOM		16:9; PIC SIZE; Ⓞ	SEARCH	Ⓞ	
▼; TV			PAGE -		TV/DVD		PIP CH ▼		TV	F -
Ⓞ; Ⓞ			FAST/NORM.		REPEAT A-B		PIP; Ⓞ; Ⓞ; Ⓞ		Ⓞ; Ⓞ	→
Ⓞ; LOCK	Ⓞ; Ⓞ N		→←		ANGLE		- J ; - J ; PP	STILL; Ⓞ	Ⓞ; Ⓞ	Ⓞ; X
▲; FAV			ROT.		▲; OPEN/CLOSE		Ⓞ; SWAP		Ⓞ	
Ⓞ			Ⓞ		ON/STANDBY		Ⓞ		Ⓞ	
AV	TV/VIDEO		Ⓞ	TV/VIDEO	AV		Ⓞ; Ⓞ		AV	
Ⓞ	MUTE; Ⓞ		Ⓞ		MUTE		Ⓞ		Ⓞ	
MENU			Ⓞ		DVD MENU		Ⓞ		M; Ⓞ; ; MIX	
EXIT					RETURN		EXIT			
▲	Ⓞ +		Ⓞ +	Ⓞ +	▲; CH/PAGE +		MENU +; +; ▲	▲	▲	▲
◀	Ⓞ -		-	Ⓞ -	◀		▼ U	Ⓞ ◀	-	VT-
OK					SELECT/ENTER		ENTER; OK		CM; MENU	
▶	Ⓞ +		+	Ⓞ +	▶		AV	Ⓞ ▶	+	VT+
▼	Ⓞ -		Ⓞ -	Ⓞ -	▼; CH/PAGE -		MENU -; -; ▼	▼	▼	▼
Ⓞ; SETUP			Ⓞ	Ⓞ	MENU; SETUP		Ⓞ; Ⓞ; Ⓞ		Ⓞ	
Ⓞ; TITLE			Ⓞ	Ⓞ	TOP MENU		Ⓞ; Ⓞ; Ⓞ; Ⓞ	Ⓞ; Ⓞ; Ⓞ	Ⓞ	
Ⓞ			Ⓞ; Ⓞ -		TEXT/MIX/TV		Ⓞ; TEXT/TV; Ⓞ		Ⓞ; VT	
GUIDE			Ⓞ; SLEEP		MARKER		STROBE		CM; MENU	
Ⓞ	TIME		Ⓞ		SUBTITLE		Ⓞ		Ⓞ; Ⓞ	
Ⓞ			LIST		RED		KARAOKE		Ⓞ	
RED; ●	Ⓞ -		RED		GREEN		RED	Ⓞ	RED; Ⓞ	Ⓞ -; Ⓞ -
GREEN; ▶	Ⓞ +		GREEN		YELLOW		GREEN	Ⓞ	GREEN; Ⓞ	Ⓞ +; Ⓞ +
YELLOW; ◀	Ⓞ -		YELLOW		BLUE	◀ SLOW; RED	YELLOW	Ⓞ	YELLOW; Ⓞ; Ⓞ	Ⓞ -
BLUE; ▶	Ⓞ +		BLUE		Ⓞ	▶ SLOW; BLUE	BLUE	Ⓞ	BLUE; Ⓞ; Ⓞ	Ⓞ +
Ⓞ	DISPLAY		CALL; Ⓞ +		DISPLAY; CALL		CALL; Ⓞ; Ⓞ		DIS	
Ⓞ	P/C		10; P/C		CH RTN; ZOOM		Ⓞ	P/C	Ⓞ; Ⓞ	
VOL -	VOL -; ◀		◀		VOL -; VOLUME ▼		◀; -; ◀; V-		◀	
VOL +	VOL +; ▶		▶		VOL +; VOLUME ▲		▶; +; ▶; V+		▶	
CH V; ◀			0-29; CH -		▼; CH/PAGE -	◀ SKIP; HOLD	0-49; ▼		P-	Ⓞ; #
CH A; ▶			0-29; CH +		▲; CH/PAGE +	▶ SKIP; F/T/B	0-49; ▲		P+	Ⓞ; Ⓞ
Ⓞ; SAT	-/-		1-; TP ON; 11		JUMP		-/-; 1-		Ⓞ	
CLEAR; X	11		2-; TP OFF; 12		CANCEL		Ⓞ; 2-	Ⓞ; Ⓞ; Ⓞ	Ⓞ	Ⓞ; X
◀; Ⓞ	12		TIME TXCL; Ⓞ		◀ SEAR.; REVEAL		Ⓞ		Ⓞ	
▶; i	13				▶; PLAY		Ⓞ		Ⓞ; i; 0* #	
▶; ?	14		INITIAL		▶ SEAR.; SUB PAG.		Ⓞ		?	
Ⓞ; X	15				Ⓞ; STOP		Ⓞ		Ⓞ; Ⓞ; Ⓞ	
Ⓞ; Ⓞ	16/AV		Ⓞ; Ⓞ		Ⓞ; PAUSE; GREEN		Ⓞ		Ⓞ; Ⓞ; Ⓞ	
1, 2, ... 9, 0	1, 2, ... 9, 10		1, 2, ... 9, 0		1, 2, ... 9, 0/AV		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 25 F к TV устройствам

Кнопки пульта IRC 25 F	Код 106		Код 107		Код 108		Код 109		Код 110	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	PROG CFM				DVD		PAGE ▲	F + PIP CH ▲	F + PIP CH ▲	
AUDIO; NICAM	F/T/B		Ⓞ/III; Ⓞ		AUDIO SELECT		Ⓞ/III	F + Ⓞ/III	F + Ⓞ/III	
VIDEO; SYS	V.PLUS+; PROGR.		Ⓞ; Ⓞ		TRK -; PLAY MODE		Ⓞ	F + Ⓞ	F + Ⓞ	
Ⓞ; ZOOM	AUTO TRACKING		Ⓞ; Ⓞ		REVEAL/ZOOM		Ⓞ	F + Ⓞ	F + Ⓞ	
▼; TV	TV MONITOR		TV Ⓞ		TV/VCR		PAGE ▼	F + PIP CH ▼	F + PIP CH ▼	
Ⓞ; Ⓞ	COUN. MEM.; ZERO		Ⓞ		INDEX/SUB PAGE		PIP	SEARCH	F + PIP	
Ⓞ; LOCK	COUNTER RESET		Ⓞ		CNT. RES./ANGLE		Ⓞ	F + Ⓞ	F + Ⓞ	
▲; FAV	EJECT				ON/STANDBY		Ⓞ	F + Ⓞ	F + Ⓞ	
Ⓞ	POWER		Ⓞ		AV		Ⓞ	F + Ⓞ	F + Ⓞ	
AV	INPUT SELECT		Ⓞ; Ⓞ		MUTE		Ⓞ	F + Ⓞ	F + Ⓞ	
Ⓞ	MUTE/NORMAL		Ⓞ		MUTE		Ⓞ	F + Ⓞ	F + Ⓞ	
MENU	MENU		MENU; Ⓞ		MENU/SETUP		MENU	F + MENU	F + MENU	
EXIT					SP/LP/RETURN					
▲	↑		P ▲; Ⓞ		↑; GREEN		CH ▲; ▲	F + CH ▲; ▲	F + CH ▲; ▲	
◀	←		◀		←; RED		◀; ◀	F + ◀; ◀	F + ◀; ◀	
OK	ENTER; HOLD		MENU; Ⓞ		ENTER; HOLD		ENTER	F + ENTER	F + ENTER	
▶	→		▶		→; BLUE		▶; ▶	F + ▶; ▶	F + ▶; ▶	
▼	↓		P ▼; Ⓞ		↓; YELLOW		CH ▼; ▼	F + CH ▼; ▼	F + CH ▼; ▼	
Ⓞ; SETUP	STATUS				TRK +; DVD MENU					
Ⓞ; TITLE	ONE TOUCH.; OTPB		Ⓞ		ATR/TOP MENU					
Ⓞ	TEXT/MIX/TV	ONCE	TXT/MIX; Ⓞ; Ⓞ		TEXT/MIX/TV		TEXT/TV	F + TEXT/TV	F + TEXT/TV	
GUIDE	AFT	DAILY			PROGR./REP. A-B		STROBE	F + PIP		
Ⓞ	SLEEP	TIMER REC	Ⓞ		SLEEP	TIMER REC	Ⓞ/Ⓞ		F + Ⓞ/Ⓞ	
Ⓞ	INDEX	WEEKLY			ZERO RET./SUBTIT.		Ⓞ	F + Ⓞ	F + Ⓞ	
RED; ●	RED	REC/OTR	RED; TURBO		RED	● REC	RED	F + RED	F + RED	
GREEN; ▶	GREEN		GREEN; Ⓞ		GREEN		GREEN	F + GREEN	F + GREEN	
YELLOW; ◀	YELLOW		YELLOW; - J		YELLOW		YELLOW	F + YELLOW	F + YELLOW	
BLUE; ▶	BLUE	▶; SLOW	BLUE; - J		BLUE	▶ SLOW	BLUE	F + BLUE	F + BLUE	
Ⓞ	CALL		CALL; Ⓞ		DISPLAY		CALL; Ⓞ		F + CALL; Ⓞ	
Ⓞ	QUICK VIEW									
VOL -	VOLUME ▼	FINE TUN. (TRK.) ▼	◀		VOLUME ▼	TRK -	◀; ◀		F + ◀; ◀	
VOL +	VOLUME ▲	FINE TUN. (TRK.) ▲	▶		VOLUME ▲	TRK +	▶; ▶		F + ▶; ▶	
CH V; ◀	CHANNEL ▼	SET -; ; REVEAL	P ▼; Ⓞ		CH/PAGE ▼	CH. RET.; SKIP ◀	CH ▼; ▼	PIP CH ▼	F + CH ▼; ▼	
CH A; ▶	CHANNEL ▲	SET +; +; BROWSE	P ▲; Ⓞ		CH/PAGE ▲	TEXT/MIX.; SKIP ▶	CH ▲; ▲	PIP CH ▲	F + CH ▲; ▲	
Ⓞ; SAT	SPEED; SP/LP		-/-; Ⓞ		CM SKIP/JUMP		-/-	F + -/-	F + -/-	
CLEAR; X	CANCEL; DISP CAN.				CANCEL/F/T/B		Ⓞ/Ⓞ	F + Ⓞ/Ⓞ	F + Ⓞ/Ⓞ	
◀; Ⓞ	◀(REW)	SUB PAGE	Ⓞ		◀; REV	INDEX/SUB PAGE				
▶; i	▶(PLAY)	PAGE INDEX	Ⓞ		▶; PLAY		CALL; Ⓞ	F + CALL; Ⓞ	F + CALL; Ⓞ	
▶; ?	▶(F.FWD)	REVEAL	Ⓞ		▶; FWD	REVEAL	Ⓞ	F + Ⓞ	F + Ⓞ	
Ⓞ; X	Ⓞ(STOP)	ENTER; HOLD	Ⓞ		Ⓞ; STOP	HOLD	Ⓞ	F + Ⓞ	F + Ⓞ	
Ⓞ; Ⓞ	Ⓞ(PAUSE/STILL)	BROWSE	Ⓞ; Ⓞ		Ⓞ; PAUSE/STILL		Ⓞ	F + Ⓞ	F + Ⓞ	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0/AV		1, 2, ... 9, 0		F+1, F+2, ... F+9, F+0	

Функции кнопок пульта IRC 25 F к TV устройствам

Кнопки пульта IRC 25 F	Код 111		Код 112		Код 113		Код 114		Код 115	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	DVD		NETFLIX		TV/DVD		TV/DVD		CD III	
AUDIO ; NICAM	AUDIO	- / -	TEXT ; AUDIO		AUDIO SELECT		CD III	3D	CD III	
VIDEO ; SYS	VIDEO	- / -	PRIME VIDEO							
☐ ; ZOOM	ZOOM				PIC SIZE	CH RTN ; ZOOM	☐	ZOOM	PIC SIZE	
▼ ; TV	TV		CON.MENU;ATV/DT		TV/DVD		ATV/DTV ; TV		TEXT/MIX/TV	
☐ ; ↗	PC-AUTO/DPMS		- / -		REPEAT A-B		☐			
☐ ; LOCK			☐		ANGLE		☐		NORMAL ; F/T/B	
▲ ; FAV	▲ ; EJECT		YouTube		▲ ; EJECT		▲			
⊖	POWER		⊖		⊖/I		⊖		⊖	
AV			⊖		INPUT		⊖		⊖	
⌘	MUTE		⌘		MUTE		⌘		⌘	
MENU	☐ ; TV MENU		MENU	AD	MENU ; SETUP		MENU		MENU	
EXIT	EXIT/CANCEL	RETURN	EXIT		RETURN		EXIT	RETURN; ☐ ; BACK		
▲	▲		▲		▲ ; P +		▲	▲	▲	
◀	◀		◀		◀		◀	◀	◀	
OK	OK		OK		ENTER/CH LIST		OK		ENTER	
▶	▶		▶		▶		▶	▶	▶	
▼	▼		▼		▼ ; P -		▼	▼	▼	
⌘ ; SETUP	DVD MENU	SETUP	SET UP		DVD MENU		DVD/MENU	SETUP	MULTI PICTURE	
♪ ; TITLE	DVD TITLE		RETURN ; BACK	CD III	TOP MENU		TOP MENU	TITLE	PICTURE POSITION	
☐	VIEW MODE		☐	TEXT ; AUDIO	☐		TEXT ; ANGLE	☐	TEXT/MIX/TV	
GUIDE	PLAY MODE		TOP MENU ; GUIDE		MARKER		GUIDE	QUICK	STATUS ; HOLD	
⊖	TIME SEARCH		☐ / ☐		SLEEP		☐		SLEEP	
☐	SUBTITLE		SUBTITLE		SUBTITLE		SUBTITLE	LIST	MAIN/SUB	
RED ; ●	REPEAT		RED		RED ; ◀ SLOW		RED ; ZOOM	● REC	RED	
GREEN ; ▮	BOOKMARK		GREEN		GREEN ; ▮ ; PAUSE		GREEN ; REPEAT	▮ / ▮	GREEN	
YELLOW ; ◀			YELLOW		YELLOW ; PLAY M.	◀ SLOW	YELLOW ; ROOT		YELLOW	
BLUE ; ▮			BLUE		BLUE ; ▮ SLOW	▶ SLOW	BLUE ; TITLE		BLUE	
☐	OSD		☐ ; ☐		DISPLAY		☐ ; ☐	MORE INFO	CALL	
☐	FLASHBACK		☐		CH RTN ; ZOOM		☐	JUMP	CH RTN ; SUB PAGE	
VOL -	VOL -		↘		VOL -		↘		VOL -	
VOL +	VOL +		↗		VOL +		↗		VOL +	
CH V ; ◀	CH ▼	◀ ; PREV	P ▼ ; P -		▼ ; P -	◀ SKIP			CH ▼	◀
CH ▲ ; ▶	CH ▲	▶ ; NEXT	P ▲ ; P +		▲ ; P +	▶ SKIP			CH ▲	▶
+/ SAT	+10		QUICK		JUMP				SKIP ; REVEAL	
CLEAR ; X	EXIT/CANCEL		MEDIA	☐	EXIT/CANCEL		☐ / ☐			
◀ ; ●	◀ ; FR		◀	☐	▶ ; FF	☐ ; ☐	◀	☐	◀	CH RTN ; SUB PAGE
▶ ; i	▶ ; I		▶	☐	▶ ; PLAY		▶	☐	▶	
▶ ; ?	▶ ; FF		▶	☐	◀ ; REV	☐	▶	☐	▶	SKIP ; REVEAL
▮ ; X			▮	☐	▮ ; STOP	☐	▮	☐	▮	STATUS ; HOLD
▮ ; ☐	▮ ; I		▮	☐	▮ ; PAUSE	☐	▮ ; ▮ / ▮	☐	▮	
1, 2, ... 9, 0	1, 2, ... 9, 10/0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 25 F к TV устройствам

Кнопки пульта IRC 25 F	Код 116		Код 117		Код 118		Код 119		Код 120	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD					TV/DVD		AD		TV/DVD	
AUDIO ; NICAM	CD III		- / -		AUDIO SELECT		CD III		AUDIO SELECT	
VIDEO ; SYS			- / -		PLAY MODE				PLAY MODE	
☐ ; ZOOM					PIC SIZE	ZOOM	☐		PIC SIZE	INPUT ; ZOOM
▼ ; TV	TXT/TV		☐ / ☐ / ☐		ATV/DTV		TV		TV/DVD	
☐ ; ↗			☐		MARKER		LIST		MARKER	
☐ ; LOCK					ANGLE		☐		ANGLE	
▲ ; FAV					▲ ; EJECT		⊖		▲ ; EJECT	
⊖	⊖		⊖		⊖/I		⊖		⊖/I	
AV	⊖		⊖		INPUT		⊖		INPUT ; ZOOM	
⌘	⌘		⌘		MUTE		⌘		MUTE	
MENU	MENU		MENU		MENU ; SETUP	DIGITAL MENU	MENU		DVD MENU	
EXIT			EXIT		EXIT/CANCEL	RETURN	EXIT		EXIT/CANCEL	
▲	CH ▲		P ▲		▲		▲		▲	
◀	↘		↘ ; ◀		◀		◀		◀	
OK	↗		OK		ENTER/CH LIST		OK		ENTER/CH LIST	
▶	↗		↗ ; ▶		▶		▶		▶	
▼	CH ▼		P ▼		▼		▼		▼	
⌘ ; SETUP	☐				DVD MENU		QUICK		MENU ; SETUP	
♪ ; TITLE	♪		CD III		TOP MENU	TV/RADIO			TOP MENU	
☐	TXT/TV		☐ / ☐ / ☐		☐		TEXT			
GUIDE					GUIDE		GUIDE			
⊖	⊖ ; ☐		⊖		SLEEP		☐ / ☐		SLEEP	
☐			☐ / ☐		SUBTITLE		SUBTITLE		SUBTITLE	
RED ; ●	RED		RED		RED ; ◀ SLOW		RED		REPEAT A-B	
GREEN ; ▮	GREEN		GREEN		GREEN ; ▮ ; PAUSE		GREEN			
YELLOW ; ◀	YELLOW		YELLOW		YELLOW ; PLAY MO.	◀ SLOW	YELLOW		◀ SLOW	
BLUE ; ▮	BLUE		BLUE		BLUE ; ▮ SLOW	▶ SLOW	BLUE		▶ SLOW	
☐	CALL ; ☐		CALL		i		☐ ; ☐		DISPLAY	
☐			☐		CH RTN ; ZOOM	REPEAT A-B	☐ ; BACK		RETURN	RANDOM
VOL -	↘		↘ ; ◀		VOL -		↘		VOL -	
VOL +	↗		↗ ; ▶		VOL +		↗		VOL +	
CH V ; ◀	CH ▼		P ▼		CH/PAGE v	◀ SKIP ; ☐	P ▼	◀ ; ☐	CH v	◀ SKIP
CH ▲ ; ▶	CH ▲		P ▲		CH/PAGE ▲	▶ SKIP ; ☐	P ▲	▶ ; ☐ / ☐	CH ▲	▶ SKIP
+/ SAT	-/-		-/-		JUMP				JUMP	10+
CLEAR ; X	☐ / ☐		☐ / ☐		EXIT/CANCEL		☐		EXIT/CANCEL	
◀ ; ●	☐ / ☐		☐		◀ ; REV ; ☐	☐	◀ ; REV	☐	◀ ; REV	
▶ ; i	☐		☐		▶ ; PLAY		▶	☐	▶ ; PLAY	
▶ ; ?	☐		☐		▶ ; FF ; ☐	☐	▶ ; FF	☐	▶ ; FF	
▮ ; X	☐		☐		▮ ; STOP	☐	▮ ; STOP	☐	▮ ; STOP	
▮ ; ☐	☐		☐		▮ ; PAUSE	☐	▮ ; ▮ / ▮	☐	▮ ; PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 25 F к TV устройствам

Кнопки пульта IRC 25 F	Код 121		Код 122		Код 123		Код 124	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	LIST		★1/⊖		▶▶; LIST		⊖; ▲	
AUDIO; NICAM	⊖ III	3D	⊖ III		S.MODE		LANG	
VIDEO; SYS	QUICK				P.MODE		SCREEN; ↔	
⊞; ZOOM	⊞	Q	⊞		16:9; WIDE	ZOOM	⊞; ⊞; WIDE	
▼; TV	TV		★2/Q		◀◀; HOLD		⊞; PC; ▼	TV; ⊞; TV/DTV
⊞; ↻	↻		LIST		⊞		⊞; ⊞; PIP:INFO	SEARCH M.; ★/Q
⊞; LOCK	⊞		⊞				⊞; ⊞; Q.MENU	⊞
▲; FAV	⊞; BACK		QUICK		FAV		FAV	
⊞	⊞		⊞		⊞		⊞	
AV	↻		↻		SOURCE		AV; SOURCE; ↻	
⌘	⌘		⌘		⌘; MUTE		⌘; MUTE	
MENU	⌘		MENU		MENU		⊞; M; MENU	
EXIT	EXIT		EXIT		EXIT		C; EXIT	
▲	▲	▲	▲		▲		▲	
◀	◀	◀◀	◀		◀		◀	
OK	OK		OK		OK		OK; SELECT	
▶	▶	▶▶	▶		▶		▶	
▼	▼	▼▼	▼		▼		▼	
⌘; SETUP	⌘		⌘		F1		⌘; HDMI CONTR.	⌘; ⊞; ANGLE
♪; TITLE	⊞		⊞; BACK		L/R		I-II	
⊞	TEXT		TEXT		⊞; TTX		TXT; ⊞; TEXT	
GUIDE	GUIDE		GUIDE		EPG		EPG; ⊞	
⊞	SLEEP						SLEEP	
⊞	SUBTITLE		SUBTITLE		SUBTITLE		SUBTITLE; ⊞	
RED; ●	RED	●; REC	RED	● REC	RED	● REC	RED; SOUND; ▲; Z-M	●
GREEN; ▶▶	GREEN		GREEN		GREEN; SUBTITLE		GREEN; PIC; ▼; REP.	
YELLOW; ◀◀	YELLOW		YELLOW		YELLOW; FAV		YELLOW; FEAT; R-T	MY BUTTON 1 ★
BLUE; ▶▶	BLUE		BLUE		BLUE; EPG		BLUE; INST; TITLE	MY BUTTON 2 ★
⊞	⊞; ⊞		⊞		INFO		⊞; INFO/?; i	DISPLAY; ★/⊞
⊞	⊞	⊞; BACK	⊞		⊞		SWAP; PP; ⊞; ⊞	PP; PP; PRESETS
VOL -	↻		↻		↻		V +; ↻; V ▼	
VOL +	↻		↻		↻		V +; ↻; V ▲	
CH V; ◀◀	P ▼	◀◀; ⊞	P ▼		P ▼	◀◀; HOLD	P -; P/CH -; CH ▼	◀◀
CH A; ▶▶	P ▲	▶▶; ⊞; ⊞	P ▲		P ▲	▶▶; LIST	P +; P/CH +; CH ▲	▶▶
±; SAT	AD						--; ⊞; RETURN	
CLEAR; X	Q	⊞					⊞; ⊞; GUIDE	
◀◀; ⊞	◀◀; ⊞	⊞	◀◀		◀◀; LANGUAGE		◀◀	⊞; SLEEP
▶▶; i	▶▶; ⊞	⊞	▶▶		▶▶; INDEX	INDEX	▶▶	⊞
▶▶; ?	▶▶; ⊞	⊞	▶▶		▶▶; RADIO	REVEAL	▶▶	⊞
■; X	■	⊞	■		■; REVEAL	HOLD	■	⊞; ⊞; WIDE
■; ⊞	■	⊞	■		■; ZOOM		■	⊞; ⊞
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 25 F к VCR устройствам

Кнопки пульта IRC 25 F	Код 201		Код 202		Код 203		Код 204	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	INDEX +; INDEX		INDEX +; INDEX		▶▶		▶▶	
AUDIO; NICAM	AUDIO SELECT	A DUB	TUNER		AUDIO			
VIDEO; SYS	PNR; VIDEO INSERT		SP/LP; SP/SLP				⊞	
⊞; ZOOM	COUNT/TR		HORL				#	
▼; TV	INDEX -; F.ADV	TV A.I.	INDEX -; F.ADV	TV A.I.	◀◀		◀◀	
⊞; ↻	INDEX	A. DIR.; TIME SEAR.	INDEX	PGM. SEARCH			⊞	
⊞; LOCK	COUNTER RESET		SPURLAGE/V-STAB.		▲		+	
▲; FAV	▲; EJECT		▲; EJECT		▲		+	
⊞	POWER; ON/STAND.		POWER; ON/STAND.		⊞		⊞	
AV	TV/VIDEO; TV/VCR	AV; SOURCE; I.SEL.	TV/VIDEO; TV/VCR					
⌘								
MENU	MENU; PROG; OSD		MENU; PROG; OSD		MENU		⌘	
EXIT					EXIT		◀	
▲	CURSOR ▲	MIC LEVEL ▲	PROG. ▲	MIC LEVEL ▲	▲		▲	
◀	CURSOR ◀	ECHO ▼	TRACK/V-LOCK ▼	ECHO ▼	◀		◀	
OK	OK	ENTER	ENTER		OK		OK	
▶	CURSOR ▶	ECHO ▲	TRACK/V-LOCK ▲	ECHO ▲	▶		▶	
▼	CURSOR ▼	MIC LEVEL ▼	PROG. ▼	MIC LEVEL ▼	▼		▼	
⌘; SETUP	PICTURE; VPS		BESTAT.		SET UP		ENTER	
♪; TITLE	DNR; PNR		SLOW 1/2		TOP MENU			
⊞	PROG.; SHOWVIEW	PROG.; FRAME	PROG.; FRAME				T	
GUIDE	LECTURE AUTO.		PRES.		CONTENT MENU			
⊞	TIMER REC; AUTO.	CLOCK SET	TIMER REC; AUTO.					
⊞	ARRET AUTO.		CONF.				⊞	
RED; ●	OTR ON	● REC; ENR	IMAGE ▼	● REC; ENR	RED		RED	●
GREEN; ▶▶	OTR; OTR OFF	SAT. CONT.	IMAGE ▲		GREEN	■/■▶	GREEN	
YELLOW; ◀◀	X2	SAT. MONI.	CANAL; REG. CAN.		YELLOW		YELLOW	
BLUE; ▶▶	▶▶; SLOW 1/6	SLOW 1/2	▶▶; SLOW 1/6		BLUE		BLUE	
⊞	DISPLAY	DIGITAL TRACKING	DISPLAY		⊞		i	
⊞	ZERO RETURN		ONCE MORE		⊞		◀	
VOL -	TRACK/V-LOCK ▼	-	TRACK/V-LOCK ▼	-	◀		◀-	
VOL +	TRACK/V-LOCK ▲	+	TRACK/V-LOCK ▲	+	▶		▶+	
CH V; ◀◀	PROG. ▼	SHIFT ◀; TRK ▼	PROG. ▼	KEY CONT. ▼	P ▼	◀◀	⊞-	
CH A; ▶▶	PROG. ▲	SHIFT ▶; TRK ▲	PROG. ▲	KEY CONT. ▲	P ▲	▶▶	⊞+	
±; SAT	-/-; 100; COUNT.RST	SP/LP; SP/SLP	-/-; 100; COUNT.RST					
CLEAR; X	CANCEL; CLR/RST		CLEAR				CLEAR	
◀◀; ⊞	◀◀; REW; CURS. ◀	KEY CONT. ▼	◀◀; REW; CURS. ◀	⊞	◀◀		◀◀	
▶▶; i	▶▶; PLAY; CURS. ▶		▶▶; PLAY; CURS. ▶		▶▶		▶▶	
▶▶; ?	▶▶; FF; CURSOR	KEY CONT. ▲	▶▶; FF; CURSOR	⊞	▶▶		▶▶	
■; X	■; STOP; CURS. ▼		■; STOP; CURS. ▼	⊞	■		■	
■; ⊞	■; PAUSE/STILL; OK		■; PAUSE/STILL; OK	⊞	■/■▶		■	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 25 F к AUX устройствам

Кнопки пульта IRC 25 F	Код 301		Код 302		Код 303		Код 304		Код 305	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	RESIZE +		DVD	CD/DVD	DISC SKIP ▶		DVD/VCR		DVD	
AUDIO; NICAM	VIDEO 2		AUDIO; Ⓞ	SPK MODE	AUDIO; Ⓞ		AUDIO; AUDIO SEL.		Ⓞ; AUDIO	
VIDEO; SYS	VIDEO		BD;TV/V.PAL; E.A.M.		SETUP; TV/VIDEO		PLAY MODE;SP/SLP		VCR	
☐; ZOOM	AUTO SET		ZOOM	FL DIMMER	ZOOM		ZOOM; CM SKIP		ZOOM	
▼; TV	RESIZE -		TUNER;DVD/FM/AM		DISC SKIP ◀		TV/VCR		TV/VCR	
☐; ↗	PIP		HDMI	MEMORY; PROGR.	T; SEARCH	MEMORY			SEARCH	
☐; LOCK	FREEZE		ANGLE; Ⓜ		NAVI		ANGLE;COUN.RES.		Ⓜ; ANGLE	AUTO TRK
▲; FAV			▲; OPEN/CLOSE	MARKER; ECHO	▲; OPEN/CLOSE		▲; OPEN/CLOSE	▲; TAPE EJECT	▲; OPEN/CLOSE	
⊖	ON/STANDBY		ON/STANDBY; I/⊖		POWER; I/⊖		I/⊖		I/⊖	
AV	INPUT		INPUT SELECT		ANGLE; Ⓜ		INPUT SELECT		INPUT SELECT	
⌘	MUTE		⌘; MUTE							
MENU	MENU		MENU; DIGEST	KARAOKE	MENU	▶	MENU		MENU	
EXIT	RESET; EXIT		↶; RETURN		RETURN	▼	RETURN		RETURN	
▲	▲		▲; CH ▲	TEST TONE	▲	DISC SELECT 1	▲; TRACKING/SET +		▲; PR/TRK +	
◀	-		◀; VOL -	PL II	◀	DISC SELECT 2	◀; CH ▼		◀	
OK	ENTER		ENTER; TV; OK	EFFECT PL II	ENTER	DISC SELECT 3	ENTER		ENTER; OK	
▶	+		▶; VOL +	BASS BOOST	▶	DISC SELECT 4	▶; CH ▲		▶	
▼	▼		▼; CH ▼	NAVI	▼	DISC SELECT 5	▼; TRACKING/SET -		▼; PR/TRK -	
⌘; SETUP			SETUP; TV/VIDEO	E.P.M.; PIC MODE	V-REMOTE	▲	SETUP; VCR MENU		SETUP; VCR MENU	
♪; TITLE			TITLE; TOP MENU	MODE PL II;TONE	TOP MENU	▲	TOP MENU		TOP MENU	
☐	KEystone		REMAIN	AUX	FL DIMMER		CLOCK COUNTER		BLANK SEARCH	MARKER
GUIDE	MARKER		FL SEL.; PBC; KAR.	AUX	DNR		MARKER		PROGRAM; SHOWV	
⊖			SLEEP	RDS	3D		TIMER REC			
☐	CAMERA		SUBTITLE; ☐	RDS	SUBTITLE; ☐		SUB TITLE; ATR		☐; SUBTITLE	
RED; ●	RGB		REPEAT; PLAY M.	A-B RPT; REP. A-B	REPEAT	A-B RPT	REC OTR		REPEAT	REC/OTR
GREEN; ▶	RGB 2		/ ; PAUSE/STEP	SOUND EDIT	/ ; PAUSE/STEP		A-B RPT		/ ; PAUSE/STEP	
YELLOW; ◀	ITEM -		◀; SLOW -	◀ SLOW	◀ SLOW ◀		▶; SLOW		▶; SLOW	
BLUE; ▶	ITEM +		▶; SLOW +	PROGRESSIVE	SLOW ▶		DISPLAY/CALL		DISPLAY; CLK/CNT	
☐	CALL		DISPLAY; DISP./RDS				JUMP; ZERO RET.		RANDOM; INS. SKIP	
VOL -	-		T; SEARCH; JUMP	RANDOM	QUICK; Ⓜ	RANDOM	▼; TRACKING/SET -		◀ SKIP	
VOL +	+		◀; VOL -	VOL ▲	ZOOM -		▲; TRACKING/SET +		▶ SKIP	
CH V; ◀	▼		▼; CH ▼	◀ SKIP; PRESET -	◀ SKIP		◀; CH ▼	◀; INDEX/SKIP -	▼; PR/TRK -	◀ SKIP
CH A; ▶	▲		▲; CH ▲	▶ SKIP; PRESET +	▶; SKIP		▶; CH ▲	▶; INDEX/SKIP +	▲; PR/TRK +	▶ SKIP
±; SAT			+10		+10				A-B RPT; SP/LP	
CLEAR; X			CLEAR; -; VOCAL	CANCEL	CLEAR; -		CANCEL		CLEAR; CNT. RESET	
◀; ●			◀; REV; PRESET -		◀		◀; REV		◀; REV	
▶; i			▶; PLAY; ▶/	◀; REV PLAY	▶; PLAY	▶/	▶; PLAY		▶; PLAY	
▶; ?			▶; FWD; PRESET +		▶		▶; FWD		▶; FWD	
■; X			■; STOP		■; STOP		■; STOP		■; STOP	
; Ⓜ			/ ; PAUSE/STEP		/ ; PAUSE/STEP		; PAUSE/STILL		/ ; PAUSE/STEP	
1, 2, ... 9, 0			1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 25 F к AUX устройствам

Кнопки пульта IRC 25 F	Код 306		Код 307		Код 308	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	DVD		ECHO +		DVD	SAT.CONT.
AUDIO; NICAM	Ⓞ; AUDIO SEL.		AUDIO		Ⓞ; AUDIO	
VIDEO; SYS	VCR		BOOKMARK		HDMI; PROGRESS.	REC MODE
☐; ZOOM	ZOOM		ZOOM		ZOOM	EXTEND
▼; TV	TV/VCR		ECHO -		TV/DVR	SAT.MONI.
☐; ↗	PLAY MODE; SP/LP		T-SEARCH		P in P	T.SEARCH;SEARCH
☐; LOCK	Ⓜ; ANGLE; COUNT.				Ⓜ; ANGLE; AV S.	DIMMER
▲; FAV	▲; OPEN/CLOSE		OPEN/CLOSE		▲; OPEN/CLOSE	SHOWVIEW
⊖	I/⊖; POWER		⊖; ON/STANDBY		I/⊖	
AV			ANGLE		INPUT SELECT; ☐	
⌘			MENU		DUBBING	
MENU	MENU		MENU		MENU; DISC MENU	REC MENU;TIMER
EXIT	RETURN		RETURN		RETURN	▶; INSTANT SKIP
▲	▲; CH +		▲		▲	
◀	◀; SET -		◀		◀	
OK	ENTER		OK		ENTER	EASY NAVI
▶	▶; SET +		▶		▶	
▼	▼; CH -		▼		▼	
⌘; SETUP	SETUP; VCR MENU		SETUP		SETUP	EDIT MENU
♪; TITLE	TOP MENU		TITLE		TOP MENU	CONTENT MENU
☐	CLOCK; COUNTER	MARKER	KARAOKE; PREVI.		HDD	LIBRARY
GUIDE	PROGRAM		PROG		VCR	FL SELECT
⊖	TIMER REC				TIME SLIP	TIMER SET
☐	☐; SUBTITLE; ATR		SUBTITLE		☐; SUBTITLE	TIME BAR
RED; ●	ONE TOUCH REP.	REC/OTR	REPEAT		RED; REC; ●	●; HDD/DVD REC
GREEN; ▶	/ ; PAUSE/STILL		STEP		GREEN; ★; MODE	CHP DIVIDE;CH.M.
YELLOW; ◀	A-B RPT;DVD/CARD		A-B		YELLOW; ●	◀ SLOW
BLUE; ▶	▶; SLOW		SLOW		BLUE;QUICK MENU	▶ SLOW
☐	DISPLAY; CALL		DISPLAY		DISPLAY	REMAIN
☐	JUMP; ZERO RET.		RANDOM		▶; INST. REPLAY	REPEAT
VOL -	◀ SKIP; INDEX -		MIC VOL -		◀ FRAME/ADJ.	
VOL +	▶ SKIP; INDEX +		MIC VOL +		▶ FRAME/ADJ.	
CH V; ◀	▼; CH -	◀ SKIP; INDEX -	◀; PREV		CHANNEL ▼	◀ SKIP
CH A; ▶	▲; CH +	▶ SKIP; INDEX +	▶; NEXT		CHANNEL ▲	▶ SKIP
±; SAT	INSTANT SKIP		+10		+10	SATELLITE LINK
CLEAR; X	CANCEL; CLEAR		CLEAR		CLEAR	DELETE
◀; ●	◀; REV		◀; F.R		◀; PIC.S.; REV	
▶; i	▶; PLAY		▶ ; PLAY/PAUSE		▶; PLAY	1.3X/0.8X PLAY
▶; ?	▶; FWD		▶; F.F		▶; PIC.S.; FWD	
■; X	■; STOP		■; STOP		■; STOP	
; Ⓜ	/ ; PAUSE/STILL		▶ ; PLAY/PAUSE		; PAUSE	
1, 2, ... 9, 0			1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 25 F к SAT устройствам

Кнопки пульта IRC 25 F	Код 401	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM		
VIDEO ; SYS		
⏏ ; ZOOM		
▼ ; TV		
⏏ ; ↻		
🔒 ; LOCK		
▲ ; FAV		
⊖	⊖	
AV	⏏	
⌘	⌘	
MENU		
EXIT		
▲	P ▲	
◀	↶	
OK		
▶	↷	
▼	P ▼	
⌘ ; SETUP		
🎵 ; TITLE		
📺		
GUIDE		
⏻		
📺		
RED ; ●		
GREEN ; ⏏	⏏/⏏	
YELLOW ; ◀	⏏	
BLUE ; ▶	⏏	
📺		
⏏		
VOL -	↶	
VOL +	↷	
CH V ; ◀	P ▼	◀
CH ▲ ; ▶	P ▲	▶
⊕ ; SAT		
CLEAR ; X		
◀ ; ●	◀	
▶ ; i	▶	
▶ ; ?	▶	
■ ; X	■	
⏏ ; ⏏	⏏/⏏	
1, 2, ... 9, 0	1, 2, ... 9, 0	

Функции кнопок пульта IRC 25 F к TV устройствам

Кнопки пульта IRC 25 F	Коды 501-799	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM		
VIDEO ; SYS		
⏏ ; ZOOM		
▼ ; TV		
⏏ ; ↻		
🔒 ; LOCK		
▲ ; FAV		
⊖	POWER ; ⊖	
AV	TV/VIDEO ; TV/AV	
⌘	MUTE ; ⌘	
MENU		
EXIT		
▲		
◀		
OK		
▶		
▼		
⌘ ; SETUP		
🎵 ; TITLE		
📺		
GUIDE		
⏻		
📺		
RED ; ●		
GREEN ; ⏏		
YELLOW ; ◀		
BLUE ; ▶		
📺		
⏏		
VOL -	VOLUME ▼ ; ↶-	
VOL +	VOLUME ▲ ; ↷+	
CH V ; ◀	CHANNEL ▼ ; P -	
CH ▲ ; ▶	CHANNEL ▲ ; P +	
⊕ ; SAT		
CLEAR ; X		
◀ ; ●		
▶ ; i		
▶ ; ?		
■ ; X		
⏏ ; ⏏		
1, 2, ... 9, 0	1, 2, ... 9, 0	

Для просмотра функций кнопок баз кодов 8 и 9 (SAT, STB, DVB устройства) перейдите по следующей ссылке <http://www.pult-irc.ru/files/manual/SatCodesForIrcF.pdf>