

Приложение IRC 61 F (версия 20.06.14 03:31)

Модели оригинальных пультов и соответствующие им коды пульта IRC приведены в разделе "Коды пульта IRC 61 F".

Функции всех кнопок для каждого кода пульта IRC можно узнать из таблиц данного приложения.

Пульт IRC может иметь дополнительные функции (если указаны в столбце "Доп. функция"). Доступ к ним осуществляется при помощи кнопки SHIFT (см. в инструкции рис.1, п.16). Для доступа к дополнительным функциям нажмите кнопку SHIFT и, удерживая её нажатой, нажмите ту кнопку, дополнительная функция которой Вам необходима.

После первой установки батареек

Кнопка устройства пульта IRC	Код пульта IRC
TV	101
VCR	102
AUX	103
SAT	104

Кнопка устройства пульта IRC	Код пульта IRC
SHIFT + TV*	105
SHIFT + VCR*	106
SHIFT + AUX*	107
SHIFT + SAT*	108

* Нажмите кнопку SHIFT и, удерживая её нажатой, нажмите и отпустите одну из кнопок пульта: TV, VCR, AUX или SAT.

Доступные коды пульта IRC 61 F

Номер базы кодов (диапазон кодов)	Устройство базы кодов	Доступные коды пульта IRC
1 (101-199)	TV	101 - 143
2 (201-299)	VCR	201
3 (301-399)	AUX	301 - 325
4 (401-499)	SAT	401 - 405
5 (501-599)	TV	501 - 599
6 (601-699)	TV	601 - 699
7 (701-799)	TV	701 - 761
8 (801-899)	SAT	801 - 899
9 (901-999)	SAT	901 - 999

Коды пульта IRC 61 F

Коды к устройствам марки ROLSEN

Модель*	Устр-во	Код	Модель	Устр-во	Код
2031C	TV	135	KR-50	TV/AUX	139
6222-10	SAT, STB, DVB	403	KRC-4229	AUX, CD, DVD	302
6710V00070A	TV	110	KRC-6163CR	TV	118
6710V00070B	TV	110	KRC-T4271	TV	126
97P1R2PAA4	VCR	201	LC03-AR028A	TV/AUX	116
97P1R2JA0	AUX, CD, DVD	308	LC03-AR033A	TV/AUX	131
97P1R2ZJA6	AUX, CD, DVD	308	R-52B02	TV/AUX	121
97P1RA3AB0	AUX, CD, DVD	308	R802E	AUX, CD, DVD	312
BT-0305A	TV	108	RC1153038	TV	109
CD-01	AUX, CD, DVD	323	RC-63301	TV	102
DVB-01	SAT, STB, DVB	401	RC-7	TV	114
DVB-02	SAT, STB, DVB	404	RC-7-DVD	TV/AUX	113
DVD-02	AUX, CD, DVD	310	RC-P03A	AUX, CD, DVD	306
E6900-X005A	AUX, CD, DVD	301	RDB-532	SAT, STB, DVB	405
E6900-X019A	AUX, CD, DVD	304	RDR-410	TV/AUX	125
E6900-X032A	AUX, CD, DVD	305	RDV-2009	AUX, CD, DVD	325
E6900-X036B	AUX, CD, DVD	307	RDV-4000	AUX, CD, DVD	320
EN-21602C	TV	127	RDV-4001	AUX, CD, DVD	313
EN-21610	TV	119	RDV-4009	AUX, CD, DVD	324
EN-21610R	TV	119	RDV-820	AUX, CD, DVD	313
EN-21662R	TV/AUX	129	RDV-850	AUX, CD, DVD	317
EN-31603R	TV/AUX	128	RDV-890	AUX, CD, DVD	313
ER-21609	TV/AUX	130	RHT-860	AUX, CD, DVD	309
ER-22641R	TV/AUX	140	RL-16L11	TV	138
ER-31607R	TV/AUX	130	RL-16L12	TV	132
ER-33904R	TV	136	RL-19L1005U	TV	142
GRC-02	AUX, CD, DVD	314	RM569-RU	AUX, CD, DVD	303
HRC-01	AUX, CD, DVD	315	SG-102HUC	AUX, CD, DVD	321
HRC-02	AUX, CD, DVD	315	SG-190LU	AUX, CD, DVD	322
HYPPFD-0142	AUX, CD, DVD	311	SG-80M	AUX, CD, DVD	316
JX-8002	AUX, CD, DVD	318	SR106B	TV	107
K10B-C1	TV	101	SW-0347	TV	124
K10J-C1	TV	101	TRC-902	TV	111
K10N-C5	TV	103	TV-01	TV	115
K11F-C3	TV	104	TV-02	TV	122
K11F-C9	TV	104	TV-03	TV/AUX	137
K12D-C2	TV	106	TV-04	TV/AUX	141
K18D-C4	TV	120	TV-DVD-01	TV/AUX	117
KB-4600	TV	123	TV-DVD-02	TV/AUX	112
KEX1D-C23	TV	105	TV-DVD-04	TV/AUX	133
KEX1D-C6	TV	105	TV-DVD-05	TV/AUX	134
KEX2C-C22	TV	105	VSR100B	TV	107
KF-8777	AUX, CD, DVD	319	WLR 800-B11	TV	107
KF-8777A	AUX, CD, DVD	319	WS-528-82-A	SAT, STB, DVB	402
KR-44	TV/AUX	143	YX-CY309E	TV	135

* По каталогу «IRC»

Коды к TV устройствам различных марок

Марка	Код
AEG	544
AIWA	502, 503, 523, 528, 579, 634, 678, 706, 710, 712, 716
AKAI	501, 503, 512, 516, 520, 522, 524, 525, 537, 538, 540, 545, 546, 547, 550, 571, 572, 582, 583, 584, 585, 596, 598, 608, 613, 626, 652, 673, 691, 704, 708, 711, 722, 731
AKIRA	511, 514, 516, 524, 525, 537, 538, 541, 545, 547, 556, 577, 586, 594, 597, 598, 601, 623, 626, 629, 631, 649, 666, 680, 689, 690, 693, 699, 717, 739
AMCOL	501, 525, 545, 747
ANITECH	501, 525, 616, 726
ATLANTA	501, 751
AVEST	537, 538, 539
BANG & OLUFSEN	728, 737
BBK	522, 551, 594, 597, 684, 701
BEKO	525, 530, 535, 559, 723, 742
BIGSTON	501, 503
BLAUPUNKT	512
BORK	525, 547, 646
BRAND	711
BROKSONIC	501
CAMERON	538, 550, 567, 675, 697, 702
CASIO	529, 705, 706
CASKA	761
CHANGHONG	516, 596, 642
CLATRONIC	501, 545, 559, 571, 742
CONTEC	501, 603, 604, 613
CORTLAND	644
CROWN	501, 503, 511, 524, 525, 530, 571
DAEWOO	501, 508, 518, 520, 525, 526, 536, 538, 539, 546, 565, 571, 576, 598, 613, 685, 687, 692
DARTLAND	501
DAYTRON	501
DEXP	516, 579, 684, 702
DIGITAL	547
DISTAR	562, 616
DNS	596, 702, 708
DOFFLER	684, 708
DUAL	746
ELEKTA	501, 503, 520, 525, 527, 615
ELEKTRONIKA	583
ELENBERG	538, 545, 550, 565, 567, 579, 581, 644, 655, 676, 683, 717
EPLUTUS	537, 644, 677, 682, 697, 724
ERC	537, 631
ERISSON	511, 514, 516, 525, 526, 537, 538, 541, 550, 556, 561, 568, 586, 596, 599, 623, 626, 629, 631, 711, 712, 714, 739, 747
EVGO	538, 540, 630
FINLUX	501, 511, 583, 589, 608, 732, 758
FUJITSU	544, 573
FUNAI	501, 502, 503, 504, 505, 525, 537, 538, 581, 603
FUSION	596, 642, 699, 705, 706
GBS	501, 520, 525, 571, 583
GENERAL	537, 556
GOLD STAR - LG	501, 512, 518, 525, 527, 559, 570, 583, 584, 589, 609, 613, 642, 706, 712, 742, 750
GRUNDIG	501, 512, 525, 606, 662, 718, 719, 733
HAIER	518, 526, 581, 574, 657, 667, 669, 707
HAPPY	501
HARPER	706, 712
HCM	501, 503, 525
HELIX	701, 702, 708
HIL	503
HITACHI	501, 515, 518, 522, 525, 537, 544, 548, 554, 578, 584, 587, 588, 604, 613, 640, 729, 749
HORIZONT	525, 540, 545, 550, 559, 583, 664, 672
HPC	546
HYUNDAI	516, 518, 522, 525, 526, 537, 538, 540, 541, 546, 547, 550, 556, 580, 596, 597, 599, 626, 642, 648, 650, 655, 705, 711, 712, 714, 717, 760
INNO-HIT	501, 525, 571
IRBIS	596, 714
IVA (MBA)	537, 561, 637
IZUMI	516, 537, 596, 663, 691, 695, 703, 705, 711
JINLIPI	537, 637
JVC	513, 515, 593, 604, 727
KAMACROWN	571
KANSAI	501, 525
KENSTAR	516
KITT	503, 613, 616, 726
KNEISSEL	753
KONKA	537, 538, 560, 561, 581, 616, 626, 717
KRONMARK	596
LOEWE	542, 709, 744
MEDION	525
METZ	745
MINISUBISHI	501, 520, 522, 525, 604, 611, 722, 728, 744
MIYOTA	537, 644, 656
MTC	501, 583
MULTITECH	501, 525
MYSTERY	516, 537, 597, 642, 650, 653, 701, 702, 708
NAD	518, 525
NASH	537
NEC	501, 517, 520, 526, 552, 604, 625, 722
NESCO	501, 525
NESONS	708
NOKIA	519, 584, 610, 614, 616, 740, 746
NOVA	501, 616, 638
NOVEX	516, 546, 599
NTT	759
OMEGA	501, 571
ONIDA	513
ONIKS	516, 525, 537, 545, 546, 547, 680
ONWA	524, 525
OPERA	644, 666, 682
ORBITA	635
ORION	501, 503, 506, 507, 509, 516, 525, 528, 537, 591, 603, 617, 619, 627, 641, 643, 664, 715, 720, 722, 729, 746
ORSON	526, 537
PANASONIC	512, 531, 532, 752

Коды к TV устройствам различных марок

Марка	Код
PHANTOM	644
PHILIPS	501, 511, 524, 525, 540, 549, 628, 639, 707, 748
PHOENIX	613
PHOENIX GOLD	708
PIONEER	548, 555, 566, 575, 647, 666
PIXELVIEW	525
PLANTRON	735
POLAR	525, 526, 537, 538, 540, 543, 546, 547, 581, 596, 599, 663, 664, 683, 703, 711, 717
POLAROID	525
PRESTIGIO	564, 656
PRIMA	522, 547
PROLOGY	653, 655
RADUGA	525, 545, 569, 583, 743
RAINFORD	525, 537, 544, 545
RECOR	511, 525
REKORD	520, 525, 526, 537, 538, 539, 545, 547, 725, 736, 743, 747
RFT	535, 618, 728
ROADSTAR	501, 508, 525, 571
ROLSEN	503, 516, 525, 537, 538, 540, 543, 546, 564, 576, 592, 594, 596, 649, 656, 669, 684, 714
ROVERSCAN	662
ROYAL	501, 503, 525, 616
RUBIN	504, 516, 525, 537, 546, 583, 619, 665, 714
SABA	509, 510, 521, 602, 756
SALORA	584
SAMSUNG	501, 525, 526, 529, 563, 580, 595, 596, 608, 612, 613, 622, 641, 645, 688, 723, 741
SANSUI	524, 525, 538, 556, 695
SANYO	501, 519, 522, 525, 530, 540, 544, 550, 558, 604, 608, 610, 618, 621, 696, 722, 730, 734, 738
SATURN	702, 708
SCARLETT	541, 545
SCHNEIDER	525, 540, 571
SELECO	736
SEURO	520
SHARP	526, 544, 548, 604, 707, 721
SHERION	616
SHIVAKI	501, 503, 508, 516, 518, 520, 525, 526, 527, 536, 538, 539, 540, 545, 546, 547, 550, 556, 580, 583, 585, 596, 599, 609, 619, 630, 632, 635, 636, 643, 644, 664, 681, 694, 708, 743
SIEMENS	512, 525, 660, 726, 734
SIESTA	501, 537, 637
SILELIS	613
SILVER	633
SITRONICS	503, 516, 525, 537, 538, 540, 543, 545, 594, 626, 629, 661, 671, 672, 674, 679, 680, 686
SOKOL	516, 525, 547, 635
SONY	533, 604, 659, 722
SPEKTR	525, 538, 668
START	525, 537, 545, 546, 547
STASSFURT	535, 618
STINOL	525
SUPER	537, 561, 644, 653, 654, 655, 666, 677, 682, 724, 754
SUPER GENERAL	537
SUPRA	501, 508, 516, 518, 520, 522, 525, 527, 529, 536, 537, 541, 563, 579, 580, 596, 597, 612, 642, 643, 687, 690, 705, 706, 712, 713
SUZUKI	516, 556
SVEN	574
TCL	521, 538, 540, 642
TEAC	525
TECHNICS	531, 537, 538
TECHNO	501, 525, 538, 544, 546, 556, 568, 579, 596, 599, 644, 664, 703
TECKTON	522, 582, 601, 669, 670
TELEFUNKEN	510, 521, 561, 590, 602, 605, 642, 708, 712, 714, 756, 757
TELEVISION	501, 525, 616
THOMSON	509, 510, 521, 550, 579, 602, 624, 642, 702, 756
TOSHIBA	516, 544, 553, 604, 651, 744
TRONY	516, 525, 537, 538, 550, 574, 657
TVT	511, 525, 530, 535, 538, 583, 586, 620, 630, 723, 742
UNITED	525
VARTA	642
VESTEL	525, 544, 556, 583, 619
VIEWSONIC	557, 698
VITA	547
VITEK	537, 650
VITYAS	525, 708
VOLNA (ВОЛНА)	635
VR	516, 537, 565, 598, 702, 714
WALTHAM	503, 509, 511, 583, 584, 607, 613, 729
XORO	522, 526, 545
XPX	663
НЕИЗВЕСТНАЯ МАРКА	525, 546, 574, 596, 648, 656, 666, 711, 755

Коды к SAT устройствам различных марок

Марка	Код
AIRTONE	968
ALFA GOLD	828
AMINO (СТРИМ)	829, 902
ARION	835
ARRIS	883, 963, 974
ASTON	811
BBK	931
BIG STAR	965
BIGSAT	839, 840, 903, 936
CADENA	958, 962
CONTINENT	886, 975
COSHIP	855
DAEWOO	872
D-COLOR	946, 961
DELTA SYSTEMS	985
DIGIFORS	946
DIVISAT	957, 958
D-LINK	923
DNS	950, 968
DR.HD	983
DRE	804, 888
DREAM	819
DUNE	927, 934
ECHOSPACE	862
ECHOSTAR	808, 809, 822
ELTEX	987
EPLUTUS	961
EUROSKY	840, 981
EUROSTAR	863
EUSTON	825
EVO	965
GALAXY INNOVATIONS (GI)	878, 881, 908, 911, 912, 917, 924
GENERAL SATELLITE	804, 868, 888, 907, 933, 954
GLOBALTEQ	833
GLOBO	909, 915, 925, 935, 945, 956, 971, 973, 995, 999
GOLD STAR - LG	871
GOLDEN INTERSTAR	821, 841, 879, 918
GOLDEN MEDIA	847, 912
GOLDMASTER	911
HD BOX	847, 911
HITACHI	824, 832
HIVION	929
HOME	968
HOMECAST (ВОЛЯ)	820, 831, 836
HUAVEE	946
HUMAX	803, 804, 823, 848, 860, 861, 905, 949
HYUNDAI	968
ID DIGITAL	804
INTEK	984
INTERCROSS	988
INTRO	978
KAON	820, 949
KARTINA TV	934
KOSMOS	855, 856
LANS	970
LOCUS	946
LUMAX	852, 873, 907, 913, 965, 994
MAG	988
MEDIA COM	825
MOTOROLA	883, 884, 901, 974
MYSTERY	910, 997
NDS	814
NEXT	864
NOKIA	813
NOT	941
ONLIME	905
OPENBOX	827, 835, 869, 870, 911, 990, 991
OPENTECH	972
OPENTEL	865
OPTICUM	971
ORBITA	946, 995
ORIEL	887, 926, 941, 948, 955, 986
PACE	801, 932, 953
PATIX DIGITAL	946, 967, 992
PAUXIS	842, 859
PERFEO	960, 981
PHILIPS	857, 899
PIONEER	851
POLAR	858
REFLECT	959
REXANT	977
RIKOR	916, 947
ROLSEN	930, 941, 942, 961
SAGEMCOM	906
SAMSUNG	803, 810, 812, 854
SEG	818
SELENGA	946
SEZAM	882
SKY VISION	952, 966, 977, 982
SKYMASTER	830
SKYWAY	911
SKYWORTH	989
STAR	833
STAR TRACK	826, 835, 943
STARNET	885
STRONG	805, 806, 815, 816, 817, 828, 830, 914
SUNNIWELL	875
SUPERBOX	903

Коды к SAT устройствам различных марок

Марка	Код
SUPERMAX	821, 866, 880, 924
SUPRA	950, 960, 962
TECHNOSAT	852, 853
TEL-ANT	960
TELEFUNKEN	961, 968
TESLER	926
TOP BOX	965
TOPFIELD	837, 838, 877, 891
TOSHIBA	876
TV STAR	967
TVJET	946, 976
VESTEL	820, 824
VU+	919, 920, 921, 922
WORLD VISION	821, 928, 951, 952, 961, 968
XSAT	801, 807
XSAT (НТВ+)	801, 802, 807, 906, 972, 984, 998
YUXING	904
ZYXEL	874
АРБАКОМ	967
БИЛАИН	883, 884, 901, 923
ВОЛГАТЕЛЕКОМ	842, 843, 844, 845, 846, 847, 849, 850, 858, 867
ДОМ.RU	820, 905
ДОМОЛИНК	874, 904
МТС	829, 855, 902, 964, 974, 979, 980, 989, 993
НЕИЗВЕСТНАЯ МАРКА	834, 835, 842, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 903, 904, 937, 938, 939, 940, 944, 945, 969, 971, 978, 996
РОСТЕЛЕКОМ	874, 904, 923, 963, 988, 993
СИГНАЛ	867, 968
ТВОЁ ТВ	820
ТЕЛЕКАРТА	867, 909, 973
ТЕЛЕЦИФРА	968

Функции кнопок пульта IRC 61 F к TV устройствам

Кнопки пульта IRC 61 F	Код 101		Код 102		Код 103		Код 104		Код 105	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD										
AUDIO; NICAM			SOUND; PIC				- P -		SOUND	
VIDEO; SYS			SYS.; BOOKMARK		VIDEO		- P -		PICTURE	
☐; ZOOM					VIDEO				ZOOM	
▼; TV										
☐; ↗					SCAN				AUTO	
☐; LOCK			ANA; PIC.; NORMAL		AUTO				HELP	
▲; FAV										
○			○; STANDBY		○		○		○	
AV	TV/AV		TV/AV; ☐→		VIDEO		AV		TV/AV	
⌘	⌘		⌘; MUTE		MUTE		MUTE		MUTE	
MENU	MENU		MENU; M		MENU		MENU		MENU	
EXIT					PREVIOUS					
▲	↑		↑				↑		CH +	
◀	←		←				←		VOL -	
OK							MENU		MENU	
▶	→		→				→		VOL +	
▼	↓		↓				↓		CH -	
⌘; SETUP			PIC; PICTURE		P.MODE				P.MODE	
♪; TITLE			SOUND MODE		S.MODE				S.MODE	
☐	CAL		WOOFER; CALEND.		TEXT		CAL		TEXT	
GUIDE	SORT				CAL				BIORHYTHM	
☐	☐		SLEEP; ☐; INTRO		SLEEP				TIMER	
☐			CALL		MIX				MIX	
RED; ●			S.EFFECT		RED				RED; PICTURE	
GREEN; ▮			BBE		GREEN				GREEN; SWAP; SND.	
YELLOW; ◀					YELLOW				YELLOW; TIMER	
BLUE; ▮					BLUE				BLUE; SETUP	
☐	☐		☐; DISPLAY		DISPLAY		☐		DISPLAY	
☐	RECALL		RECALL; DISPLAY		RECALL		RECALL		RECALL	
VOL -	↘		VOLUME -; ◀		VOL -		↘		VOL -	
VOL +	↗		VOLUME +; ▶		VOL +		↗		VOL +	
CH V; ◀	P ▼		PROGRAM -; ▼		CH -		CH ▼		CH -	
CH A; ▶	P ▲		PROGRAM +; ▲		CH +		CH ▲		CH +	
+/ SAT	-/-		+		---		---		DIGIT	
CLEAR; X			SKIP		CANCEL				CANCEL	
◀; ●					SUBCODE				SUBCODE	
▶; i					INDEX				TUNE; INDEX	
▶; ?					REVEAL				REVEAL	
▮; X					HOLD				HOLD	
▮; ☐					SIZE				EAST/WEST	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 61 F к TV устройствам

Кнопки пульта IRC 61 F	Код 106		Код 107		Код 108		Код 109		Код 110	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD									DUAL; DUAL*/ I/II	
AUDIO; NICAM			- S -				S.SYS; SOUND SYS		PSEUDO; UBB; SSM	
VIDEO; SYS			- P -				COLOR SYS.		PICTURE	
☐; ZOOM	AUTO		ZOOM; Z		ZOOM; ☐; ☐; SIZE				EYE; EYE*	
▼; TV			TV/AV; ☐							
☐; ↗	SCAN		SCAN		SCAN; REVEAL; RES.				PIP; *	
☐; LOCK	- P -		☐; ●		☐; LOCK; SUBTIT.				MODE; SLEEP; ☐	
▲; FAV	F		♥; FAV				FAVORITE; SURF		ARC	
○	○		○		○		STANDBY; ○		POWER	
AV	TV/AV		TV/AV; ☐		TV/AV		TV/AV		TV/AV	
⌘	MUTE		⌘		⌘; MUTE		MUTE		MUTE	
MENU	MENU		MENU; ☐		MENU		MENU; MENU/INS		MENU;	
EXIT			VOL PP							
▲	↑		P ▲		▲		P + ▲; PRO. ▲		PR ▲	
◀	←		↘		◀		V - ◀; VOL. ◀		VOL ◀	
OK	MENU		↗		MENU		OK		OK	
▶	→		↗		▶		V + ▶; VOL. ▶		VOL ▶	
▼	↓		P ▼				P - ▼; PRO. ▼		PR ▼	
⌘; SETUP			☐		- P -; P.P; P.MODE		PIC.; DEL.; PIC./DEL.		PSM	
♪; TITLE			☐		- S -; SOUND				SSM; SSM*	
☐	GAME		☐; MSG		TEXT		CALENDAR		TEXT; ☐; ☐	
GUIDE	SORT		COD		GAME; HOLD		CAPS		SYSTEM; LIST	
☐	TIMER				☐; SLEEP		SLEEP		SLEEP	
☐					CALENDAR; MIX		NOTE; NOTEBOOK		MIX; ☐	
RED; ●					RED; PICTURE; ☐		AT		RED; SSM; PR-	
GREEN; ▮					GREEN; ○		S.EFFECT		GREEN; PR+	
YELLOW; ◀					YELLOW; TIMER		B.E		YELLOW; SLEEP	
BLUE; ▮					BLUE; SOUND; SUR.		SURROUND		BLUE; -/-; INPUT	
☐	☐		☐; DEMO		CALL; ?; DISP; ☐		DISPLAY		Q.VIEW	
☐	RECALL		Q.V.; ☐		☐; QV; ALT		RECALL; A/CH			
VOL -	↘		↘		V -; ↘; VOL -; ◀		V - ◀; VOL. ◀		VOL ◀	
VOL +	↗		↗		V +; ↗; VOL +; ▶		V + ▶; VOL. ▶		VOL ▶	
CH V; ◀	P ▼		P ▼		P -; PR -; CH -; ▼		P - ▼; PRO. ▼		PR ▼	
CH A; ▶	P ▲		P ▲		P +; PR +; CH +; ▲		P + ▲; PRO. ▲		PR ▲	
+/ SAT	-/-		-/-		+				-/-	
CLEAR; X					CANCEL				UPDATE; POS.; ☐	
◀; ●					SUBCODE				TIME; ☐	
▶; i							GAME		INDEX; 9/4 PIP; ☐	
▶; ?					REVEAL				REVEAL; ☐	
▮; X					HOLD				HOLD; STILL; ☐	
▮; ☐					SIZE				SIZE; ☐	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 61 F к TV устройствам

Кнопки пульта IRC 61 F	Код 111		Код 112		Код 113		Код 114		Код 115	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	PC		DVD	●; NEXTP.; SURR.	DVD/TV				ARC	ARC
AUDIO; NICAM	S.STD		- /	AUDIO	AUDIO		SOUND; Ⓞ		SSM; SPM	I/II
VIDEO; SYS	P.STD		- /	PIP SOURCE	VIDEO		VIDEO; PP		PSM; PPM; PP	
☐; ZOOM			☐; P.SIZE	ZOOM					POSITION	
▼; TV	TV		PC	☐; PREP.; ANGLE			TV		TV/PC	
☐; ↗	VID		PIP ON/OFF	☐; STORE; CLEAR	☐		☐		PIP	
☐; LOCK			☐; STILL	PIP SOUND			PP		EYE	
▲; FAV			▲; OPEN/CLOSE	PIP SWAP ☐					FAV.PR; ☐	
⊖	POWER		⊖; POWER		⊖		⊖; POWER		⊖; POWER	
AV			↔; TV/VIDEO		AV		AV; AV/TV		TV/AV; AV; AV/TV	INPUT
⌘	MUTE		⌘; MUTE		⌘		⌘		⌘; MUTE; ⌘	
MENU	MENU		☐; TV.MENU	MENU	MENU		MENU; OK		MENU	
EXIT									SWAP	
▲	CH ▲; ☐		▲		P ▲		▲		PR ▲	
◀	VOL ◀		◀		◀		◀		VOL ◀	
OK	SEL		ENTER		OK		OK		OK	
▶	VOL ▶		▶		▶		▶		VOL ▶	
▼	CH ▼; ☐		▼		P ▼		▼		PR ▼	
*; SETUP	☐		SETUP		DVD MENU; I/II				SUPER PICTURE; Г	DRP
♪; TITLE	SURROUND		TITLE		SOUND		I/II		SUPER SOUND; Ⓞ	
☐	☐		☐; TTX	☐; MIX; A-B	☐; ■		☐; TXT; TEXT		☐; TEXT/MIX; TXT	
GUIDE	MTS		M/S						MODE	
⊖	SLEEP		⊖; SLEEP		●; GOTO		●; SLEEP		SLEEP; ●	MODE; ☐; SLEEP
☐	☐		SUBTITLE	☐; L/F; AUDIO	☐; SUB-T		☐; MIX		MIX; ☐	
RED; ●	RED		RED; SETUP	STEP ◀	RED; ▶		RED		RED; PIP. PR -	
GREEN; ■	GREEN		GREEN; TITLE	STEP ■	GREEN; ■		GREEN		GREEN; PIP. PR +	
YELLOW; ◀	YELLOW		YELLOW; MENU	SLOW ◀	YELLOW; ■		YELLOW		YELLOW; PIP. SWAP	
BLUE; ▶	BLUE		BLUE	SLOW ▶	BLUE; ▶		BLUE		BLUE; PIP. INPUT	
☐	Q.VIEW		☐; DISPLAY				☐		☐; LIST	
☐	RECALL		PRE		PP		PP; ☐		FAV.PR; ☐	
VOL -	VOL ◀		VOL ▼		◀		◀; VOL ◀; ◀		VOL ◀	
VOL +	VOL ▶		VOL ▲		▶		▶; VOL ▶; ▶		VOL ▶	
CH V; ◀	CH ▼; ☐		PROG ▼	◀; STEP ◀	P ▼		P ▼; CH ▼; ▼		PR ▼	PR ▼
CH A; ▶	CH ▲; ☐		PROG ▲	▶; STEP ▶	P ▲		P ▲; CH ▲; ▲		PR ▲	PR ▲
+; SAT	-/-		-/-		X; ☐				*	*
CLEAR; X			☐; EXIT/CANCEL	CLEAR			X; ☐; ☐		☐; UPDATE; POSIT.	
◀; ●	☐		◀; SLOW ◀	☐; SUBP.; ZOOM	⊖; ☐		⊖; TIME		☐; TIME; ⊖	
▶; i	☐		▶; ■	☐; INDEX; REPEAT	☐; WHITE; ☐		☐; i; WHITE; ☐		☐; LIST; SCAN; i	
■; ?	☐		▶; SLOW ▶	☐; REVEAL; GOTO	?; AUDIO; ☐		?; ☐		☐; REVEAL; ?	
■; x	☐		■	☐; HOLD; PROG.	☐; ☐		☐; HOLD; PROG.		☐; HOLD; STILL	
■; ⬇	☐		▶; ■	☐; SIZE; SUBTITLE	☐; ☐		☐; ☐		☐; HOLD; STILL	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 61 F к TV устройствам

Кнопки пульта IRC 61 F	Код 116		Код 117		Код 118		Код 119		Код 120	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	M/S	☐; BOOKMAR.; OPT	DVD	☐; NEXTPAG.; SUR.	MTS		DMP		CH +; SCAN	
AUDIO; NICAM	↔; S.STD	AUDIO	☐; L/F; AUDIO	- / ; S.STD	S.SELECT		I/II		ACOUSTICS	
VIDEO; SYS	↔; P.STD	SOURCE PIP	VIDEO	- / ; P.STD	ARC		P.M.SYNC		AUTO; DFP; HDMI	
☐; ZOOM	☐; P.SIZE	ZOOM	☐; P.SIZE	ZOOM	P.SIZE		ZOOM		ZOOM	☐; CH-
▼; TV	TV/DVB-T	☐; ANGLE; LIST	TV	☐; PREPAG.; ANG.	TV		TV		CH -; ☐	
☐; ↗	ON/OFF PIP		☐; STORE; CLEAR		PIP	STORE	PIP; SIZE		☐; ☐	SCAN
☐; LOCK	☐; STILL	SOUND PIP	M/S		STILL	AUTO	STILL		STILL	LOCK
▲; FAV	▲; OPEN/CLOSE	SWAP ☐	▲; OPEN/CLOSE		P.INPUT		PAGE/VOLUME		FAV	☐; FAVS; CH+
⊖	⊖; POWER		⊖; POWER		POWER		⊖		POWER; ⊖	
AV	↔; LINE				SOURCE		SOURCE		AV; TV/AV	
⌘	⌘; MUTE		⌘; MUTE		MUTE		MUTE		MUTE; ⌘	
MENU	☐; TV.MENU	MENU	☐; TV.MENU	MENU	MENU		MENU; ■		MENU	F.MENU
EXIT	↔; X; EXIT		EXIT/CANCEL	SKIP	SWAP		EXIT		EXIT	
▲	▲; P +; ☐		▲		P + ▲		CH ▲	UP/FWD	CH +; P +; ▲	
◀	◀; ↗		◀		VOL - ◀		VOL ▼	LEFT/PREV	VOL -; V -; ◀	
OK	ENTER		ENTER		ENTER		OK	ENTER	ENTER; OK	
▶	▶; ↗		▶		VOL + ▶		VOL ▲	RIGHT/NEXT	VOL +; V +; ▶	
▼	▼; P -; ☐		▼		P - ▼		CH ▼	DOWN/REW	CH -; P -; ▼	
*; SETUP	SETUP		SETUP		PSM		PICTURE		P.MODE	
♪; TITLE	TITLE		TITLE		SSM		SOUND		S.MODE	
☐	☐; TTX		☐; TTX		TTX ON		TEXT	MIX	☐	
GUIDE	EPG		☐; MIX; A-B		P.POSITION		DMP ZOOM		☐; E/W	
⊖	⊖; SLEEP	⊖; REPEAT	⊖; SLEEP		SLEEP		SLEEP; HOLD		SLEEP	
☐	SUBTITLE	☐; AUDIO	SUBTITLE		MIX ☐		DMP DISPLAY		CAL; BIORHYTHM	
RED; ●	RED; SETUP	●; REC	RED	◀; STEP ◀	RED	-	RED		RED; PICTURE; INFO	☐; E/W; CC
GREEN; ■	GREEN; INPUT	STEP ■	GREEN	▶; STEP ▶	GREEN	-	GREEN		GREEN; SOUND	☐; PROG
YELLOW; ◀	YELLOW; TITLE	SLOW ◀	YELLOW	◀; SLOW ◀	YELLOW		YELLOW		YELLOW; TIMER	☐; ☐
BLUE; ▶	BLUE; MENU	SLOW ▶	BLUE	▶; SLOW ▶	BLUE		BLUE		BLUE; SETUP	
☐	☐; DISPLAY		DISPLAY		DISPLAY		DISPLAY		DISPLAY; DSP	
☐	PRE		PRE		LAST		RECALL		RECALL	
VOL -	VOL ▼		VOL ▼		VOL - ◀		VOL ▼		VOL -; V -; ◀	
VOL +	VOL ▲		VOL ▲		VOL + ▶		VOL ▲		VOL +; V +; ▶	
CH V; ◀	PROG ▼	◀; STEP ◀	PROG ▼	◀; STEP ◀	P - ▼		CH ▼	CH ▼	CH -; P -; ▼	☐; CH-
CH A; ▶	PROG ▲	▶; STEP ▶	PROG ▲	▶; STEP ▶	P + ▲		CH ▲	CH ▲	CH +; P +; ▲	☐; FAVS; CH+
+; SAT	-/-		-/-		FLOF LIST				DIGIT; -	
CLEAR; X	☐; CANCEL; i		☐; EXIT/CANCEL		UPDATE		CANCEL		DEMO; TUNE; ☐	
◀; ●	◀; SLOW ◀	☐; ZOOM; EPG	◀; SLOW ◀	☐; SUBP.; ZOOM	TIME		SOURCE; SUB.CODE	REW	☐; GAME	
▶; i	▶; PLAY/PAUSE	☐; A-B	▶; ■	☐; INDEX; REPEAT	INDEX		MOVE; INDEX	▶; ■; PLAY/PAUSE	☐; HELP; ☐/III	
■; ?	▶; SLOW ▶	☐; GOTO	▶; SLOW ▶	☐; REVEAL; GOTO	REVEAL		SWAP; REVEAL	FWD	☐; LOCK	
■; x	■; PROG.; MENU		■	☐; HOLD; PROG.	HOLD		SLEEP; HOLD		☐	
■; ⬇	▶; PLAY/PAUSE	☐; SUBTITLE	▶; ■	☐; SIZE; SUBTITLE	SIZE		PIP; SIZE		☐	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 61 F к TV устройствам

Кнопки пульта IRC 61 F	Код 121		Код 122		Код 123		Код 124		Код 125	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	TV/AV; DVD						S-VIDEO		DISC OPER	
AUDIO; NICAM	SOUND MODE		AUDIO; CALENDAR		SSM		AIR/CABLE		AUDIO	
VIDEO; SYS			SYS.; MODE; GAME		PSM		VIDEO		N/P	
▣; ZOOM	ASPECT	q	ZOOM; PIC; MAR.		ZOOM	PIP POSITION	LIST/FLOF		ZOOM	
▼; TV					PC/DVI; TV/PC		TV		TV	
▣; ↗			P.P; AUTO; P.MODE		PIP	SCAN	SEARCH		USB	
▣; LOCK	NORMAL		GAME; AUDIO; LOCK		STILL		AUTO		ANGLE	
▲; FAV	▲; EJECT				ARC	PIP ARC	STORE		▲; OPEN/CLOSE	
○	○; POWER		○; POWER		○; POWER		○; POWER		○; STANDBY/ON	
AV	TV/AV; DVD		VIDEO; TV/AV; AV		INPUT		SOURCE		AV	
⌘	⌘		⌘; MUTE		⌘; MUTE		⌘; MUTE		MUTE	
MENU	TV MENU	MENU/PBC	MENU; M		MENU		MENU		MENU	
EXIT	MENU/PBC				EXIT		EXIT		EDIT	
▲	▲		CH +; P+; ▲		CH +; PR ▲		▲		▲	
◀	◀		VOL -; ◀-; V; ◀		VOL -; VOL ◀		◀		◀	
OK	OK; ENTER		MENU; M		OK		MENU; j		ENTER	
▶	▶		VOL +; ▶+; V+; ▶		VOL +; VOL ▶		▶		▶	
▼	▼		CH -; P-; ▼		CH -; PR ▼		▼		▼	
⌘; SETUP	SETUP		⌘ L/R; GAME; PICT.		⌘; MODE		BRIGHTNESS		SETUP	
♪; TITLE	TITLE		♪ U/D; SOUND; S.M		I-II		CONTRAST		TITLE	
▣; TITLE	▣; TITLE		GAME		▣; TEXT		PC		P/I	
GUIDE	▣; Q		LANG; SCAN; OPTIO.		LIST				PROG	
⏻	SLEEP		SLEEP; ⏻		SLEEP				TIMER	
▣	▣				▣; MIX		TTX/MIX		SUBTITLE	
RED; ●	RED; CLEAR				RED; PIP PR +		RED		REPEAT	●; REC
GREEN; ▣	GREEN; ADD MARK.				GREEN; PIP PR -		GREEN		▣; STEP	
YELLOW; ◀	YELLOW; SEARCH				YELLOW; SWAP		YELLOW		RANDOM	
BLUE; ▶	BLUE; SOUND MOD.				BLUE; PIP INPUT		BLUE		SLOW	
▣	DISPLAY		CALL; DISPLAY; OSD		Q.VIEW		INFO		DISPLAY	
⏪			⏪; RECALL; QV		A.SWAP		PRE.P-CH		RETURN	
VOL -	VOL ◀		VOL -; ◀-; V; ◀		VOL -; VOL ◀		VOL v		VOL -	
VOL +	VOL ▶		VOL +; ▶+; V+; ▶		VOL +; VOL ▶		VOL ^		VOL +	
CH V; ◀	▼; PR ▼; ⏻	◀	CH -; P-; ▼		CH -; PR ▼	PIP PR -	P-CHANNEL v		CH -	◀
CH A; ▶	▲; PR ▲; ⏩	▶	CH +; P+; ▲		CH +; PR ▲	PIP PR +	P-CHANNEL ^		CH +	▶
±; SAT			-/-				P-CH EDIT		GOTO	
CLEAR; X	▣; REP	CLEAR			▣; UPDATE				ADD/CLEAR	
◀; ●	◀; F.R/STEP	▣; PGM			▣; TIME		SUB PAGE		◀	
▶; i	▶; PLAY	▣; RANDOM			▣; INDEX		INDEX		▶; PLAY	
▶; ?	▶; F.F/STEP	▣; SETUP			▣; REVEAL		REVEAL		▶	
■; x	■; STOP	▣; ⏻			▣; HOLD		HOLD		■; STOP	
■; ⏻	■; PAUSE/STEP	▣; A-B			▣; SIZE		SIZE		■/▣; PAUSE/STEP	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 61 F к TV устройствам

Кнопки пульта IRC 61 F	Код 126		Код 127		Код 128		Код 129		Код 130	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD					MEDIA	CH ▲; CANCEL			HDMI	
AUDIO; NICAM			I/II		I/II		DMP; MEDIA		I/II	
VIDEO; SYS					DMP		I/II; AUDIO		VGA	
▣; ZOOM	P.SIZE; ▣		ASPECT	ZOOM	ZOOM	DMP ZOOM	YOUTUBE		ZOOM	
▼; TV	◀; TV/VIDEO		TV		TV	CH ▼	ZOOM	DMP ZOOM; PVR	TV	
▣; ↗	▣; STORE		STILL		PIP; SIZE		TV		DMP	
▣; LOCK	▣; L/F				STILL		STILL		STILL	
▲; FAV							FAV		SUBCODE; FAV	
○	○; POWER		POWER		○		POWER; ○		○; POWER	
AV	◀; TV/VIDEO		SOURCE		SOURCE		SOURCE; ◀		SOURCE	
⌘	⌘; MUTE		MUTE		⌘		MUTE		⌘; MUTE	
MENU	MENU; ▣		MENU		MENU; ▣		MENU; ▣		▣; MENU	
EXIT	SKIP						EXIT		EXIT	
▲	P+; ▲		CH +		▲		▲		▲	
◀	◀; ◀		VOL -		◀		◀		◀	
OK	MENU; ▣		MENU		OK		OK	o	OK	
▶	▶; ▶		VOL +		▶		▶		▶	
▼	P-; ▼		CH -		▼		▼		▼	
⌘; SETUP	P.MODE; - +		P.MODE		PICTURE	SETUP	HOME	PICTURE	PICTURE	
♪; TITLE	S.MODE; - +		S.MODE		SOUND		◀; RETURN	SOUND	SOUND	
▣	▣; TTX		TEXT		TEXT		TEXT; MIX	MIX	TEXT	
GUIDE	M/S						EPG		EPG; SIZE	
⏻	○; SLEEP		SLEEP		SLEEP; HOLD		SLEEP; HOLD		SLEEP	
▣	▣; MIX		MIX		INFO		SUBTITLE		SUBTITLE	INDEX; SUBTITLE
RED; ●	RED		RED; AV		RED		RED		RED	
GREEN; ▣	GREEN		GREEN; PC		GREEN		GREEN		GREEN	
YELLOW; ◀	YELLOW		YELLOW; YPBPR		YELLOW		YELLOW		YELLOW	
BLUE; ▶	BLUE		BLUE; HDMI		BLUE		BLUE		BLUE	
▣	▣; DISPLAY		DISPLAY		DISPLAY		DISPLAY; INFO		INFO	DMP; DISPLAY
⏪	PRE		RECALL		RECALL		▣		RECALL	
VOL -	◀; ◀		VOL -		VOL v		VOL -		VOL v; VOL -	
VOL +	▶; ▶		VOL +		VOL ^		VOL +		VOL ^; VOL +	
CH V; ◀	P-; ▼		CH -		CH ▼	◀	CH -; CH v	CH v; MIX	CH v; CH -	◀
CH A; ▶	P+; ▲		CH +		CH ▲	▶	CH +; CH ^	CH ^; CANCEL	CH ^; CH +	▶
±; SAT	-/-				CH v		RECALL; PRE-CH		MIX; COMP	
CLEAR; X	▣; CANCEL		CANCEL		CH ▲; CANCEL		CANCEL		CANCEL; LANG	
◀; ●	▣; SUB PAGE		SUBCODE		◀	SOURC.; SUB.CODE	◀	SOURCE; SUB.COD	◀	SUBCODE; FAV
▶; i	▣; INDEX		INDEX		▶/▣	POSITION; INDEX	▣; T.SHIFT	MOVE; INDEX	▣; PLAY/PAUSE	INDEX; SUBTITLE
▶; ?	▣; REVEAL		REVEAL		▶	SWAP; REVEAL	▶	SWAP; REVEAL	▶	REVEAL; TV
■; x	▣; HOLD		HOLD		■	HOLD	■	HOLD	■; STOP	HOLD; SLEEP
■; ⏻	▣; SIZE				▶/▣	SIZE	▣; T.SHIFT	SIZE	▣; PLAY/PAUSE	SIZE; EPG
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 61 F к TV устройствам

Кнопки пульта IRC 61 F	Код 131		Код 132		Код 133		Код 134		Код 135	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	DTV MENU				DVD-TV/AV				FILE	
AUDIO; NICAM	☐; AUDIO	PIP SOUND	☐/III; AUDIO		AUDIO		AUDIO		AUDIO	
VIDEO; SYS	PC				MODE/A-B		P/N		MEDIA; 📺; HOME	
☐; ZOOM	ZOOM	P.SIZE			16:9/4:3	ZOOM	16:9		SCALE	
▼; TV	TV		RADIO; SUBTITLE		CARD/USB				DTV/RADIO	
☐; ↗	PIP ON/OFF		REVEAL		SEARCH		COLOR		AUTO; ⏏; MOUSE	
☐; LOCK	OPT		DMP; USB				F1		STILL	
▲; FAV	▲; OPEN/CLOSE		♥; FAV		ZOOM				FAV	
○	○; POWER		○; POWER		POWER		○; POWER		○; POWER	
AV	LINE	REC INPUT	SOURCE		DVD-TV/AV		SOURCE		SOURCE	
⌘	⌘; MUTE		⌘		MUTE		⌘; MUTE		⌘; MUTE	
MENU	☐; TV.MENU	MENU	MENU		MENU		MENU		MENU	REC MENU
EXIT	☐; EXIT		EXIT				⌚; ROTATE		EXIT	
▲	▲; P+; ☐		▲		▲		▲		▲	
◀	◀; ↙		◀		◀		◀		◀	
OK	ENTER		ENTER		OK		OK		OK	
▶	▶; ↘		▶		▶		▶		▶	
▼	▼; P-; ☐		▼		▼		▼		▼	
⌘; SETUP	SETUP		P.MODE		SETUP		SMART P		P.MODE	
♪; TITLE	TITLE		S.MODE		TITLE		SMART S		S.MODE	
☐	☐; TTX	ANGLE	☐; 📄		PBC		☐		TEXT	MIX
GUIDE	EPG	BOOKMARK	EPG		PROG				EPG	
⏻	SLEEP		SLEEP				⏻		SLEEP	TIME; REVEAL
☐	SUBTITLE	LIST	LIST		SUB-TITLE				SUBTITLE	
RED; ●	RED; M/S	●; REC	RED; ◀	●; REC					RED	●; REC
GREEN; 📄	GREEN; STILL		GREEN; ▶				◀; PREV.		GREEN	
YELLOW; ◀	YELLOW; SLEEP		YELLOW; ▶▶				▶▶; NEXT		YELLOW	
BLUE; 📄	BLUE; P.SIZE		BLUE; ▶▶		SLOW				BLUE	
☐	DISPLAY	●	☐; INFO		DISPLAY		☐		INFO	
☐	PRE		☐		REPEAT		☐		☐	REPEAT; SUBPAGE
VOL -	VOL ▼		VOL -		VOL -		VOL -		VOL -; VOL ▼	ZOOM -
VOL +	VOL ▲		VOL +		VOL +		VOL +		VOL +; VOL ▲	ZOOM +
CH V; ◀	PROG ▼	◀; STEP ◀	CH -		CH -	PREV	CH -; PROG. -	◀; PREV.	CH -; CH ▼	◀; MIX
CH A; ▶	PROG ▲	▶; STEP ▶	CH +		CH +	NEXT	CH +; PROG. +	▶; NEXT	CH +; CH ▲	▶; TIME; REVEAL
+/ SAT	-/		-/		10+				CH.LIST	
CLEAR; X	☐		☐; CANCEL						GOTO; REVEAL	
◀; ●	◀; SLOW ◀	☐; SUBTITLE	☐; SUBTITLE	◀	◀		◀; REV.		◀; TEXT	SUBPAGE
▶; i	▶; PLAY/PAUSE	☐; A-B	▶; INDEX	▶	▶		▶; PLAY		▶; INDEX	INDEX
▶; ?	▶; SLOW ▶	☐; GOTO	▶; SOURCE	▶	▶		▶; FWD.		▶; HOLD	REVEAL
■; X	■; STOP	☐; REPEAT	☐; ■; STILL	■; STILL	■		■; STOP		■; SIZE	HOLD
■; ⏻	■; PLAY/PAUSE		☐; ■; SIZE	■; SIZE	■		■; PAUSE		■; INDEX	SIZE
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 61 F к TV устройствам

Кнопки пульта IRC 61 F	Код 136		Код 137		Код 138		Код 139		Код 140	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			HDMI		FAV+		▶▶		HDMI	
AUDIO; NICAM	LANGUAGE; /III		NICAM		AUDIO		AUDIO		/III	
VIDEO; SYS	MEDIA		VGA		HOLD; ZOOM				VGA	
☐; ZOOM			P.SIZE	P.ZOOM	ASPECT				ZOOM	
▼; TV	TV		TV		FAV-		◀◀		TV	
☐; ↗	ECO		USB		TV/RADIO		SEARCH		DMP	
☐; LOCK	3D		FREEZE		FAV				STILL	
▲; FAV	FAV		FAV		▲; AUTO		FAV			
○	○		○; STANDBY		○; STANDBY		○		○	
AV	☐; SOURCE		SOURCE	AV	INPUT		INPUT		SOURCE	
⌘	⌘; MUTE		⌘; MUTE		⌘; MUTE		⌘		⌘; MUTE	
MENU	☐; MENU		MENU		LCD MENU; MENU	D.MENU; INDEX	MENU		☐; MENU	
EXIT	EXIT	☐; RETURN	EXIT		DVD SETUP; EXIT		RETURN		EXIT	
▲	▲		▲		▲		▲; CH +		▲	
◀	◀		◀		◀		◀		◀	
OK	OK		OK		OK		ENTER		OK	
▶	▶		▶		▶		▶		▶	
▼	▼		▼		▼		▼; CH -		▼	
⌘; SETUP	P.MODE		P.MODE		P.MODE	DVD SETUP; EXIT	SETUP		PICTURE	
♪; TITLE	S.MODE		S.MODE		S.MODE	TITLE; SIZE	INFO		SOUND	
☐	TEXT; MIX		TEXT		TEXT; ANGLE		TXT		TEXT	
GUIDE	EPG		MIX		EPG		EPG		MIX	
⏻	SLEEP	T.SHIFT	SLEEP		SLEEP		PVR		HOLD; SLEEP	
☐	SUBT.		SUBTITLE		SUBTITLE		SUB		SUBTITLE	
RED; ●	RED	●; PVR	RED		RED; PROG	●	RED		RED	
GREEN; 📄	GREEN		GREEN		GREEN; INTRO		GREEN		GREEN	
YELLOW; ◀	YELLOW		YELLOW		YELLOW; REPEAT		YELLOW		YELLOW	
BLUE; 📄	BLUE		BLUE		BLUE; A-B	▶; MEDIA	BLUE		BLUE	
☐	INFO		DISPLAY		DISPLAY	D.DISP; REVEAL	DISPLAY		INFO	
☐	PRE-CH		☐; RECALL		☐		RETURN		RECALL	
VOL -	VOL -		VOL -		VOL -		VOL -		VOL ▼	
VOL +	VOL +		VOL +		VOL +		VOL +		VOL ▲	
CH V; ◀	CH ▼	◀; SUB. CODE	CH -	◀; REVEAL	CH -	◀	▼; CH -	◀	CH ▼	◀
CH A; ▶	CH ▲	▶; CANCEL	CH +	▶; SUBPAGE	CH +	▶	▲; CH +	▶	CH ▲	▶
+/ SAT	CH.LIST		REPEAT		-/					
CLEAR; X	CANCEL		VGA AUTO		GOTO; SUBPAGE				CANCEL	
◀; ●	◀; HOLD	SUB. CODE	◀; MIX	SUBPAGE	◀	SUBPAGE	◀		◀	SUBCODE
▶; i	▶; INDEX	INDEX	▶; HOLD	INDEX	▶	INDEX	▶		▶	INDEX
▶; ?	▶; INDEX	REVEAL	▶; SIZE	REVEAL	▶	REVEAL	▶		▶	REVEAL
■; X	■; HOLD	HOLD	■; HOLD	HOLD	■	HOLD	■		■	HOLD; SLEEP
■; ⏻	■; HOLD	SIZE	■; HOLD	SIZE	■	SIZE	■		■	SIZE
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 61 F к TV устройствам

Кнопки пульта IRC 61 F	Код 141		Код 142		Код 143	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	▶▶ ; NEXT		▶▶		▶▶	
AUDIO ; NICAM	▶▶ ; AUDIO		NICAM/A2		MULTIMEDIA	
VIDEO ; SYS	☐ ; TV SYSTEM				SD/USB	
☐ ; ZOOM	☐ ; 16:9	☐ ; ZOOM	SCALE		ZOOM	
▼ ; TV	◀◀ ; PREV		◀◀ ; REVEAL		◀◀	
☐ ; ↻	☐ ; 4:3				REC ; DISPLAY	
☐ ; LOCK	☐ ; ANGLE		STILL		REPEAT	
▲ ; FAV	▲ ; EJECT		FAV		A-B	
⊙	⊙ ; POWER		⊙ ; POWER		⊙	
AV	☐ ; SELECT		SOURCE		INPUT	
⌘	⌘ ; MUTE		MUTE		⌘	
MENU	☐ ; MENU		MENU		MENU	
EXIT	↶ ; RETURN		EXIT		RETURN	
▲	▲		▲ ; CH +		▲ ; CH +	
◀	◀		◀		◀	
OK	OK		OK		OK	
▶	▶		▶		▶	
▼	▼		▼ ; CH -		▼ ; CH -	
⌘ ; SETUP	⌘ ; SETUP		PMODE		SETUP	
♪ ; TITLE	☐ ; TITLE		SMODE		TITLE/PBC	
☐	☐ ; BROWSER		☐ ; TEXT		PANEL ON/OFF	
GUIDE	☐ ; GUIDE		MIX		EPG	
⊙	☐ ; REPEAT		SLEEP		SLOW	
☐	▲ ; SUBTITLE		☐ ; SUBPAGE		SUBTIT	
RED ; ●	☐ ; COPY	RED	RED ; NICAM/A2		RED	REC ; DISPLAY
GREEN ; ▶▶	☐ ; CONFIRM	GREEN	GREEN ; PMODE		GREEN	
YELLOW ; ◀◀	☐ ; OPTION	YELLOW	YELLOW ; SMODE		YELLOW	
BLUE ; ▶▶	▶▶ ; SLOW	BLUE	BLUE ; SLEEP		BLUE	SLOW
☐	i ; DISPLAY		DISPLAY ; INFO		INFO	
☐	↶ ; RETURN		☐		ESC	
VOL -	◀ ; VOL -		VOL -		VOL -	
VOL +	▶ ; VOL +		VOL +		VOL +	
CH V ; ◀◀	▼	◀◀ ; PREV	▼ ; CH -	◀◀ ; REVEAL	▼ ; CH -	◀◀
CH A ; ▶▶	▲	▶▶ ; NEXT	▲ ; CH +	▶▶	▲ ; CH +	▶▶
± ; SAT	ρ ; GOTO				10+	
CLEAR ; X	☐ ; ZOOM				GOTO	
◀◀ ; ●	◀◀ ; FR		◀◀ ; INDEX	SUBPAGE	◀◀	
▶▶ ; i	▶▶ ; PLAY		▶▶ ; HOLD	INDEX	▶▶	
▶▶ ; ?	▶▶ ; FF		▶▶ ; SIZE	REVEAL	▶▶	
■ ; X	■ ; STOP		■ ; MIX	HOLD	STOP	
; ⏸	/ ▶ ; PAUSE/STOP		; HOLD	SIZE		
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 61 F к VCR устройствам

Кнопки пульта IRC 61 F	Код 201	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM	A.SEL	
VIDEO ; SYS	PAL/SEC ; SYS.SEL	
☐ ; ZOOM		
▼ ; TV	TV/VCR	
☐ ; ↻	▶▶30	
☐ ; LOCK	↶↷	
▲ ; FAV	▲ ; EJECT	
⊙	⊙ ; POWER	
AV	AV	
⌘		
MENU	MENU	
EXIT		
▲		
◀	←	
OK	OK	
▶	→	
▼		
⌘ ; SETUP		
♪ ; TITLE		
☐	T.R	
GUIDE	PROG	
⊙	☐ ; ⏸	
☐	00:00	
RED ; ●		● REC
GREEN ; ▶▶	SP/LP ; SPEED	
YELLOW ; ◀◀		
BLUE ; ▶▶	▶▶	
☐	Q.S	
☐	A.D	
VOL -	INDEX -	
VOL +	INDEX +	
CH V ; ◀◀	PR -	
CH A ; ▶▶	PR +	
± ; SAT		
CLEAR ; X		
◀◀ ; ●	◀◀	
▶▶ ; i	▶▶	
▶▶ ; ?	▶▶	
■ ; X	■	
; ⏸		
1, 2, ... 9, 0	1, 2, ... 9, 0	

Функции кнопок пульта IRC 61 F к AUX устройствам

Кнопки пульта IRC 61 F	Код 301		Код 302		Код 303		Код 304		Код 305	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	KEY +				ECHO +		SURR MODE		AUDIO ONLY	
AUDIO; NICAM	AUDIO	L/R/ST	AUDIO		AUDIO		AUDIO	L/R/ST	AUDIO	
VIDEO; SYS	NTSC/PAL		PAL/NT		P/N		NTSC/PAL		PLAY MODE	
☐; ZOOM	ZOOM		ZOOM		ZOOM		ZOOM		ZOOM	
▼; TV	KEY -				ECHO -		FM MODE		TV MODE	
☐; ↗	SEARCH		P.SCAN		I/P		SEARCH		DIMMER	
☐; LOCK	ANGLE		3D SURR		ANGLE		MEMORY		3D	
▲; FAV	OPEN/CLOSE		OPEN/CLOSE		▲		Open/Close; ▲		OPEN/CLOSE; ▲	
⊖	POWER		POWER		POWER		POWER; ⊖		POWER; ⊖	
AV			ANGLE		SHIFT; KODAK T.E		ANGLE		ANGLE	
⌘	MUTE		MUTE		MUTE		MUTE		MUTE	
MENU	MENU		MENU		MENU		MENU		MENU	
EXIT	RETURN				PBC OFF				RETURN	
▲	▲		▲		▲		▲; TUNING UP		↑	
◀	◀		◀		◀		◀; PRESET DOWN		←	
OK	PLAY		ENTER		ENTER/▶		ENTER		ENTER	
▶	▶		▶		▶		▶; PRESET UP		→	
▼	▼		▼		▼		▼; TUNING DOWN		↓	
*; SETUP	SET UP		SETUP		SETUP		SETUP		SETUP	
♪; TITLE	TITLE		TITLE		TITLE	VOCAL ASSIST	TITLE		TITLE	
☐	PBC		PROGRAM		PROGRAM		PBC		PBC	
GUIDE	PROGRAM		BOOKMARK		SUFFLE		CH-LEVEL		PROGRAM	
⊖	SUBTITLE		SUBTITLE		SUB-T		SLEEP		SUBTITLE	
RED; ●	REPEAT		REPEAT		REPEAT		SUBTITLE		A-B	
GREEN; ▮	STEP		STEP/SLOW		STEP		REPEAT			
YELLOW; ◀	A-B		A-B		A-B RPT		STEP		◀; ◀ SLOW	
BLUE; ▮	SLOW		STEP/SLOW		SLOW		DIMMER		▮; ▮ SLOW	
☐	DISPLAY		DISPLAY		DISPLAY		SLOW		DISPLAY	
☐	RESUME				RESUME	GOTO	DISPLAY		GO TO	
VOL -	VOL -		◀		VOL -		FUNCTION		VOL -	
VOL +	VOL +		▶		VOL +		MASTER VOL. ▼		VOL +	
CH V; ◀	SKIP ◀		◀		SKIP ◀		MASTER VOL. ▲		◀; ◀ STEP	
CH A; ▮	SKIP ▮		▮		SKIP ▮		◀		▮; ▮ STEP	
+; SAT	+10		GOTO		+10		▮		+10	
CLEAR; X	CLEAR		CLEAR		CLEAR		+10		CLEAR	
◀; ●	◀ SCAN		◀; S-REW		◀(REV)		CLEAR		◀; ◀ SLOW	
▶; i	PLAY		▶; PLAY/PAUSE		▶		◀		▶; ▶	
▮; ?	SCAN ▮		▮; S-FWD		▮(FWD)		▶; PLAY		▮; ▮ SLOW	
■; X	STOP		STOP		■(STOP)		▶		■; ■	
▮; ⬇	▮		PAUSE		▮(PAUSE)		■; STOP		▮; ▮	
▮; ⬇	▮		PAUSE		▮(PAUSE)		▮; PAUSE		▮; ▮	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		▮; PAUSE		▮; ▮	
							1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 61 F к AUX устройствам

Кнопки пульта IRC 61 F	Код 306		Код 307		Код 308		Код 309		Код 310	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	#		P-UP		DVD		DVD		DVD	
AUDIO; NICAM	AUDIO	3D	AUDIO; SHADOW		AUDIO		AUDIO		AUDIO	ST/MO
VIDEO; SYS	SYSTEM		NTSC/PAL; P.CHECK		VCR		P/N		PAL/NTSC	
☐; ZOOM	ZOOM		ZOOM		ZOOM		ZOOM		ZOOM	
▼; TV	b		P-DOWN		TV VIEW		BAND		FM	
☐; ↗	SEARCH		SEARCH; P-UP		SEARCH	SYSTEM; P.SCAN	MEMORY		MEMORY	
☐; LOCK	ANGLE		ANGLE		ANGLE		ANGLE		☐; ANGLE	
▲; FAV	▲		OPEN/CLOSE		▲; OPEN/CLOSE		OPEN/CLOSE		▲; OPEN/CLOSE	
⊖	⊖		POWER		⊖; POWER		POWER		⊖; STANDBY/ON	
AV	V-MODE				TV/VCR	OUTPUT; INPUT	MODE		INPUT	
⌘	MUTE		MUTE				MUTE		⌘; MUTE	
MENU	MENU		MENU; ⌘		MENU		MENU	AMP MENU	MENU	
EXIT	RETURN				3D; EXIT		AMP MENU		RETURN	
▲	▲		▲; #		▲; PR +		▲		▲	
◀	◀		◀; TEMPO -		◀		◀		◀	
OK	PLAY		SELECT		ENTER; OK		ENTER		ENTER	
▶	▶		▶; TEMPO +		▶		▶		▶	
▼	▼		▼; b		▼; PR -		▼		▼	
*; SETUP	SETUP		SETUP		SETUP		SETUP		SETUP	AMP
♪; TITLE	TITLE/PBC		TITLE/PBC; P-DOWN		TITLE/PBC		TITLE		TITLE	SOUND
☐	PROGRAM		PROGRAM		ANGLE/DIG. SPEED		FUNCTION		INFO	NAME
GUIDE	h				PROGRAM; TIMER		PROGRAM		PROGRAM	
⊖	INTRO				CLK/CNT		PBC OFF		SLEEP	TIME
☐	SUBTITLE		SUBTITLE; URGENT		SUBTITLE		SUB-T		SUBTITLE	
RED; ●	REPEAT		REPEAT		REPEAT	● REC	SHIFT	REPEAT	REPEAT	
GREEN; ▮	STEP		A-B		A-B	REPLAY; COPY	STEP	A-B RPT	STEP/SLOW	
YELLOW; ◀	A-B				◀; SLOW -		SLOW-R		A-B	
BLUE; ▮	SLOW		SLOW		▮; SLOW +		SLOW-F		STEP/SLOW	
☐	DISPLAY		DISPLAY		DISPLAY		DISPLAY		DVD DISPLAY	
☐	CHANNEL				LAST CH		RESUME	GOTO	DIMMER	
VOL -	VOLUME -						VOLUME -		VOLUME -	
VOL +	VOLUME +						VOLUME +		VOLUME +	
CH V; ◀	◀		◀		◀ PREV		◀; PRESET -		◀; PRESET -	
CH A; ▮	▮		▮		▮ NEXT		▮; PRESET +		▮; PRESET +	
+; SAT	+10		+10		CM-SKIP		+10		MARK	
CLEAR; X	MARK		CANCEL		CLEAR/3D; CLEAR		CLEAR		CLEAR	
◀; ●	◀		◀; MALE		◀; REW		◀; TUNING -		◀; TUNING -	
▶; i	PLAY		▶; PLAY		▶(PLAY/PAUSE)		▮; PLAY/PAUSE		▶; PLAY	
▮; ?	▮		▮; FEMALE		▮; FF		▮; TUNING +		▮; TUNING +	
■; X	■		■; STOP		■; STOP		■; STOP		■; STOP	
▮; ⬇	▮		PAUSE		PAUSE		▮; PAUSE		▮; PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0/10		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 61 F к AUX устройствам

Кнопки пульта IRC 61 F	Код 311		Код 312		Код 313		Код 314		Код 315	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD			DVD		KARAOKE		3D			
AUDIO ; NICAM	AUDIO		AUDIO		LANGUAGE		AUDIO		AUDIO	
VIDEO ; SYS	P/N		VCR PLUS +		MODE	N/P	V-MODE		P/N	
☐ ; ZOOM	ZOOM		ZOOM		ZOOM		ZOOM		ZOOM	
▼ ; TV	TV MODE		DISC		MIC		CHANNEL		TV MODE	
☐ ; ↗					PSCAN/NORMAL		SEARCH		I/P	
☐ ; LOCK	SHUFFLE		ANGLE		ANGLE		SYSTEM			
▲ ; FAV	▲		▲ ; OPEN/CLOSE		▲ ; OPEN/CLOSE		▲		▲ ; OPEN/CLOSE	
○	POWER		○ ; POWER		○ ; STANDBY		○		○	
AV	ANGLE		INPUT		USB		ANGLE		ANGLE	
⌘	MUTE		MUTE		MUTE		MUTE		MUTE	
MENU	MENU		MENU/PLAYLIST		MENU		MENU		MENU	
EXIT	RESUME				RESUME		RETURN		GOTO	
▲	▲		▲		▲		▲	#	▲	
◀	◀		◀		◀		◀		◀	
OK	ENTER/▶		ENTER		PLAY/ENTER		PLAY	h	ENTER ; PLAY	
▶	▶		▶		▶		▶		▶	
▼	▼		▼		▼		▼	b	▼	
* ; SETUP	SETUP		SETUP		SETUP		SETUP		SETUP	
♪ ; TITLE	TITLE		TITLE/PBC		TITLE		TITLE/PBC		TITLE	
☐	KODAK T.E. ; I/P		PROGRAM		PBC		PROGRAM		T.E.	
GUIDE	PROGRAM		EDIT		PROG		MARK		PROGRAM	
☐			TIME SHIFT	TIMER RECORD			INTRO		SHUFFLE	
☐	SUB-T		SUBTITLE		SUBTITLE		SUBTITLE		SUBTITLE	
RED ; ●	REPEAT		REPEAT	REC	REPEAT		REPEAT		REPEAT	
GREEN ; ▶	STEP		A-B	REC PAUSE	STEP		▶		▶ ; STEP	
YELLOW ; ◀	A-B RPT			REC STOP	A-B		A-B		A-B	
BLUE ; ▶	SLOW		SLOW		SLOW		SLOW		SLOW	
☐	DISPLAY		OSD		DISPLAY		DISPLAY		DISPLAY	
☐	GOTO		REPLAY		FUNC SELECT				RESUME	
VOL -	VOL -		VOL -		FUNC -		VOL -		VOL -	KEY -
VOL +	VOL +		VOL +		FUNC +		VOL +		VOL +	KEY +
CH V ; ◀	◀ SKIP		CH -	◀	◀ ; PREV		◀		◀ ; PREV	
CH A ; ▶	▶ SKIP		CH +	▶	▶ ; NEXT		▶		▶ ; NEXT	
+ ; SAT	+10		CH MARK		+10		+10		+10	
CLEAR ; X	CLEAR				GOTO				CLEAR	
◀ ; ○	◀ ; REV		◀		◀ ; F.REV		◀		◀ ; REV	
▶ ; i	▶		▶ ; PLAY		▶ ; PLAY/ENTER		▶ ; PLAY		▶ ; PLAY	
▶ ; ?	▶ ; FWD		▶		▶ ; F.FWD		▶		▶ ; FWD	
■ ; X	■ ; STOP		■ ; STOP		■ ; STOP		■		■ ; STOP	
■ ; ⬇	■ ; PAUSE		■ ; PAUSE		■ ; PAUSE		■		■ ; PAUSE/STEP	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0/10		1, 2, ... 9, 0	

Функции кнопок пульта IRC 61 F к AUX устройствам

Кнопки пульта IRC 61 F	Код 316		Код 317		Код 318		Код 319		Код 320	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD							DVD		RANDOM	
AUDIO ; NICAM	LANGUAGE	L/R	LANGUAGE	L/R	AUDIO		AUDIO	ST/MO	LANGUAGE	L/R
VIDEO ; SYS	☐ ; VIDEO	N/P	P/N		N/P		PAL/NT		VIDEO ; PSCAN/N.	P/N
☐ ; ZOOM	ZOOM		ZOOM		ZOOM		ZOOM		ZOOM	
▼ ; TV							DIGITAL IN			
☐ ; ↗	P-SCAN		L/R				MEMORY	DIGEST	DIGEST	
☐ ; LOCK	DEFAULT						ANGLE		VIDEO ; PSCAN/N.	
▲ ; FAV	▲		▲ ; OPEN/CLOSE		▲ ; EJECT		▲ ; OPEN/CLOSE		▲ ; OPEN/CLOSE	
○			○ ; POWER		○ ; STANDBY		○ ; STANDBY/I/O		○ ; STANDBY	
AV	ANGLE		ANGLE		ANGLE		INPUT 1 ; INPUT	INPUT 2	ANGLE	
⌘	* ; MUTE		MUTE		MUTE		MUTE		MUTE	
MENU	MENU		MENU/PBC				MENU		MENU	
EXIT	RETURN						RETURN			
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀		◀		◀	
OK	ENTER		ENTER		ENTER		ENTER		ENTER	
▶	▶		▶		▶		▶		▶	
▼	▼		▼		▼		▼		▼	
* ; SETUP	SETUP		SETUP		SETUP		SETUP		SETUP	
♪ ; TITLE	TITLE		TITLE		TITLE		TITLE	SURROUND	TITLE	
☐	PBC		MARK		PBC		INFO		EQ ; PBC	
GUIDE	MIC						PROGRAM		PROG	
☐	BOOKMARK		TIME		TIME		SLEEP		TIME	
☐	SUBTITLE		SUB.TITLE		SUBTITLE		SUBTITLE		SUBTITLE	
RED ; ●	REPEAT		REPEAT		REPEAT		REPEAT	NAME	REPEAT	
GREEN ; ▶	STEP				A-B		STEP/SLOW	PROLOGIC II	STEP ; MODE	
YELLOW ; ◀	A-B						A-B	EQ	A-B	
BLUE ; ▶	SLOW		SLOW		SLOW		STEP/SLOW	MARK	SLOW	
☐	DISPLAY		DISPLAY		DISPLAY		DISPLAY		DISPLAY	
☐	RESUME	GOTO	RETURN		RETURN		FM		RETURN	
VOL -	VOL -		VOL -		VOL -		VOLUME -		VOL -	
VOL +	VOL +		VOL +		VOL +		VOLUME +		VOL +	
CH V ; ◀	◀ ; PREV		◀ ; PREV		◀ ; PREV		◀ ; PRESET -		◀ ; PREV	
CH A ; ▶	▶ ; NEXT		▶ ; NEXT		▶ ; NEXT		▶ ; PRESET +		▶ ; NEXT	
+ ; SAT	+10		GO TO		+10		GOTO		+10	
CLEAR ; X	CLEAR						CLEAR		GOTO	
◀ ; ○	◀ ; FB		◀ ; FR		◀ ; REV		◀ ; TUNING -		◀ ; REV	
▶ ; i	▶		▶ ; PLAY		▶ ; PLAY/PAUSE		▶ ; PLAY/PAUSE		▶ ; PLAY	
▶ ; ?	▶ ; FF		▶ ; FF		▶ ; FWD		▶ ; TUNING +		▶ ; FWD	
■ ; X	■ ; STOP		■ ; STOP		■ ; STOP		■ ; STOP		■ ; STOP	
■ ; ⬇	■ ; PAUSE		■ ; PAUSE/STEP		■ ; PAUSE/PAUSE		■ ; PAUSE/PAUSE		■ ; PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 61 F к AUX устройствам

Кнопки пульта IRC 61 F	Код 321		Код 322		Код 323		Код 324		Код 325	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD			GOTO		CD/USB/CARD		DISC/USB		DVD/USB	
AUDIO ; NICAM	LANGUAGE	L/R	LANGUAGE	L/R			LANG		V-MODE	
VIDEO ; SYS	REPEAT ; VIDEO	N/P	VIDEO	N/P			V-MODE		VIDEO	
☐ ; ZOOM	ZOOM		ZOOM				ZOOM			
▼ ; TV			MIC ; USB							
☐ ; ↗			P-SCAN				L/R			
☐ ; LOCK	DEFAULT		DEFAULT				N/P			
▲ ; FAV	▲ ; OPEN/CLOSE		▲				▲ ; OPEN/CLOSE		▲ ; OPEN/CLOSE	
○	○ ; STANDBY ; ■		○ ; STANDBY				○ ; POWER		○ ; POWER	
AV	ANGLE		USB		MODE		ANGLE		V-MODE	
⌘	⌘ ; MUTE		⌘ ; MUTE				⌘ ; MUTE		MUTE	
MENU	MENU		MENU		PROG.		MENU		MENU/PBC	
EXIT	RESUME ; REPEAT		RESUME				RETURN			
▲	▲		▲				▲		▲	
←	←		←				◀ ; MIC VOL -		←	
OK	ENTER		ENTER				ENTER		ENTER	
▶	▶		▶				▶ ; MIC VOL +		▶	
▼	▼		▼				▼		▼	
⌘ ; SETUP	SETUP		SETUP				SETUP		SETUP	
♪ ; TITLE	TITLE		TITLE				TITLE		TITLE	
☐	PBC ; DVD/USB		PBC				PBC		PROG	
GUIDE	BOOKM. ; PROGR.		BOOKMARK ; PROG				PROG			
☐									TIME	
☐	SUBTITLE		SUBTITLE				SUB/REC		SUB/REC	
RED ; ●	REPEAT ; VIDEO		REPEAT				REPEAT		SUB/REC	
GREEN ; ▨	STEP		STEP				STEP			
YELLOW ; ◀	A-B		A-B				A-B			
BLUE ; ▨	SLOW		SLOW				SLOW			
☐	DISPLAY		DISPLAY		INTRO		DISPLAY		OSD	
☐	RETURN	GOTO	RETURN				GOTO		REPEAT	
VOL -	VOLUME -		VOL -				VOL -		▲	
VOL +	VOLUME +		VOL +				VOL +		▲	
CH V ; ◀	◀ ; PREV		◀ ; PREV		DIR-		◀ ; PREV		◀ ; PREV	
CH A ; ▶	▶ ; NEXT		▶ ; NEXT		DIR+		▶ ; NEXT		▶ ; NEXT	
± ; SAT	10+		10+		10-		10+		10+	
CLEAR ; X	CLEAR		CLEAR		10+		CLEAR			
◀ ; ●	◀ ; REV		◀ ; REV		PREV/REW		◀ ; REV		◀ ; REV	
▶ ; i	▶ ; PLAY		▶ ; II		PLAY/PAUSE		▶ ; PLAY		▶ ; PAUSE/PLAY	
▶ ; ?	▶ ; FWD		▶ ; FF		NEXT/FF		▶ ; FWD		▶ ; FWD	
■ ; X	■ ; STOP		■ ; STOP		STOP		■ ; STOP		■ ; STOP	
■ ; ⏸	■ ; PAUSE		■ ; II		PLAY/PAUSE		■ ; PLAY		■ ; PAUSE/PLAY	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0/10	

Функции кнопок пульта IRC 61 F к SAT устройствам

Кнопки пульта IRC 61 F	Код 401		Код 402		Код 403		Код 404		Код 405	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	▶		PG UP		▶ ; NEXT		▶		▶	
AUDIO ; NICAM	AUDIO		LANG		▶ ; AUDIO		AUDIO		AUD	
VIDEO ; SYS	V-FORMAT		V-FORMAT		▲ ; AV/YPBPR				HDMI	
☐ ; ZOOM	REPEAT		ASPECT	ZOOM	☐ ; ZOOM					
▼ ; TV	◀		PG DN		◀ ; PREV		◀		◀	
☐ ; ↗					☐ ; TV SYSTEM					
☐ ; LOCK										
▲ ; FAV	FAV		FAV				FAVOR		FAV	
○	○ ; POWER		○		○ ; POWER		○		○	
AV	TVG						USB		USB	
⌘	⌘ ; MUTE		⌘		⌘ ; MUTE		⌘		⌘	
MENU	MENU ; ⏸		MENU		⏸ ; HOME		MENU		MENU	
EXIT	X ; EXIT		EXIT		↶ ; RETURN		EXIT		EXIT	
▲	▲ ; CH +		▲		▲ ; RETURN		CH ▲		CH + ; ▲	
←	← ; VOL -		←		←		VOL ◀		VOL - ; ◀	
OK	OK		OK		OK		OK		OK	
▶	▶ ; VOL +		▶		▶		VOL ▶		VOL + ; ▶	
▼	▼ ; CH -		▼		▼		CH ▼		CH - ; ▼	
⌘ ; SETUP			LIST		⌘ ; SETUP					
♪ ; TITLE	TV/RADIO		TV/RADIO				TV/R		TV RA	
☐	TTX		TTX		☐ ; OPTION		TEXT		TEXT	
GUIDE	LIST		EPG				EPG		EPG	
☐	TIMER		TIMER	TIME SHIFT						
☐	SUB-T		SUBTITLE		▲ ; SUBTITLE		SUB-T		SUB	
RED ; ●	RED	REC	RED ; ZOOM	REC	RED		RED ; ◀	●	RED ; FAV	REC
GREEN ; ▨	GREEN		GREEN ; ASPECT		GREEN		GREEN ; ◀		GREEN ; EPG	
YELLOW ; ◀	YELLOW		YELLOW ; V-FORM.		YELLOW		YELLOW ; ▶		YELLOW ; AUD	
BLUE ; ▨	BLUE		BLUE ; TIMER		BLUE	▶ ; SLOW	BLUE ; ▶		BLUE ; TV RA	
☐	INFO		INFO		i ; DISPLAY		INFO		INFO	
☐	RECALL		RECALL	REPEAT	☐ ; REPEAT		LAST ; GOTO			
VOL -	◀ ; VOL -		VOL -		◀ ; VOL -		VOL ◀		VOL - ; ◀	
VOL +	▶ ; VOL +		VOL +		◀ ; VOL +		VOL ▶		VOL + ; ▶	
CH V ; ◀	▼ ; CH -	◀	CH -	◀	▼	◀ ; PREV	CH ▼	◀	CH - ; ▼	◀
CH A ; ▶	▲ ; CH +	▶	CH +	▶	▲	▶ ; NEXT	CH ▲	▶	CH + ; ▲	▶
± ; SAT	GOTO		GOTO		ρ ; GOTO					
CLEAR ; X	X ; EXIT				A-B					
◀ ; ●	◀		◀		◀ ; FR		◀		◀	
▶ ; i	▶ ; PLAY		▶		▶ ; PLAY/PAUSE		▶ ; II		▶ ; II	
▶ ; ?	▶		▶		▶ ; FF		▶		▶	
■ ; X	■ ; STOP		■		■ ; STOP		RED		■	
■ ; ⏸	■ ; PAUSE		■		■ ; PLAY/PAUSE		▶ ; II		■	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 61 F к TV устройствам

Кнопки пульта IRC 61 F	Коды 501-761	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM		
VIDEO ; SYS		
☐ ; ZOOM		
▼ ; TV		
⏪ ; ↻		
☒ ; LOCK		
▲ ; FAV		
⏻	POWER ; ⏻	
AV	TV/VIDEO ; TV/AV	
⌘	MUTE ; ⌘	
MENU		
EXIT		
▲		
◀		
OK		
▶		
▼		
⌘ ; SETUP		
🎵 ; TITLE		
☐		
GUIDE		
⏻		
☐		
RED ; ●		
GREEN ; ▢		
YELLOW ; ◀		
BLUE ; ▶		
☐		
☐		
VOL -	VOLUME ▼ ; 🔊-	
VOL +	VOLUME ▲ ; 🔊+	
CH V ; ⏪	CHANNEL ▼ ; P -	
CH ▲ ; ⏩	CHANNEL ▲ ; P +	
⊕ ; SAT		
CLEAR ; X		
⏪ ; ●		
▶ ; i		
▶ ; ?		
■ ; ✕		
⏮ ; ⏭		
1, 2, ... 9, 0	1, 2, ... 9, 0	

Для просмотра функций кнопок баз кодов 8 и 9 (SAT, STB, DVB устройства) перейдите по следующей ссылке <http://www.pult-irc.ru/files/manual/SatCodesForIrcF.pdf>