

Приложение IRC 70 F (версия 19.01.24 00:08)

Модели оригинальных пультов и соответствующие им коды пульта IRC приведены в разделе "Коды пульта IRC 70 F".

Функции всех кнопок для каждого кода пульта IRC можно узнать из таблиц данного приложения.

Пульт IRC может иметь дополнительные функции (если указаны в столбце "Доп. функция"). Доступ к ним осуществляется при помощи кнопки SHIFT (см. в инструкции рис.1, п.16). Для доступа к дополнительным функциям нажмите кнопку SHIFT и, **удерживая её нажатой**, нажмите ту кнопку, дополнительная функция которой Вам необходима.

После первой установки батареек

Кнопка устройства пульта IRC	Код пульта IRC	Кнопка устройства пульта IRC	Код пульта IRC
TV	101	SHIFT + TV*	105
VCR	102	SHIFT + VCR*	106
AUX	103	SHIFT + AUX*	107
SAT	104	SHIFT + SAT*	108

* Нажмите кнопку SHIFT и, удерживая её нажатой, нажмите и отпустите одну из кнопок пульта: TV, VCR, AUX или SAT.

Доступные коды пульта IRC 70 F

Номер базы кодов (диапазон кодов)	Устройство базы кодов	Доступные коды пульта IRC
1 (101-199)	TV	101 - 108
2 (201-299)	VCR	201 - 202
3 (301-399)	AUX	301 - 307
4 (401-499)	-	Нет
5 (501-599)	TV	501 - 599
6 (601-699)	TV	601 - 699
7 (701-799)	TV	701 - 799
8 (801-899)	SAT	801 - 899
9 (901-999)	SAT	901 - 999

Коды пульта IRC 70 F

Коды к устройствам марки ELEKTA

Модель*	Устр-во	Код
105-188H	TV/VCR	104
290600950C	TV/VCR	107
97P1809300C	VCR	202
CT-5118H	TV	106
CTV-1430DVD	TV/AUX	108
DVD-01	AUX, CD, DVD	305
DVD-03	AUX, CD, DVD	306
DVD-04	AUX, CD, DVD	307
E-1000	AUX, CD, DVD	301
E6900-X005A	AUX, CD, DVD	302
KM-308	AUX, CD, DVD	303
PP5170	TV	105
R-10W	TV	102
R-10W-1	TV	102
RC 9751M	TV	102
RC-290601	VCR	202
RC-310	VCR	201
TV-01	TV	103
TV-02	TV	101
WN-699	AUX, CD, DVD	304

* По каталогу «IRC»

Коды к TV устройствам различных марок

Марка	Код
AEG	544
AIWA	502, 503, 523, 528, 579, 634, 678, 706, 710, 712, 716
AKAI	501, 503, 512, 516, 520, 522, 524, 525, 537, 538, 540, 545, 546, 547, 550, 571, 572, 582, 583, 584, 585, 596, 598, 608, 613, 626, 652, 673, 691, 704, 708, 711, 722, 731, 769
AKIRA	511, 514, 516, 524, 525, 537, 538, 541, 545, 547, 556, 577, 586, 594, 597, 598, 601, 623, 626, 629, 631, 649, 666, 680, 689, 690, 693, 717, 739, 796, 797, 798, 799
AMCOL	501, 525, 545, 747
ANITECH	501, 525, 616, 726
ATLANTA	501, 751
AVEST	537, 538, 539, 766
BANG & OLUFSEN	728, 737
BBK	522, 551, 594, 597, 684, 701, 788, 792, 793
BEKO	525, 530, 535, 559, 723, 742
BIGSTON	501, 503
BLAUPUNKT	512
BORK	525, 547, 646, 766
BRAND	711
BROKSONIC	501
CAMERON	538, 550, 567, 675, 697, 702, 792, 794
CASIO	529, 705, 706
CASKA	761
CHANGHONG	516, 642
CLATRONIC	501, 545, 559, 571, 742
CONTEC	501, 603, 604, 613
CORTLAND	644
CROWN	501, 503, 511, 524, 525, 530, 571
DAEWOO	501, 508, 518, 520, 525, 526, 536, 538, 539, 546, 565, 571, 576, 598, 613, 685, 687, 692
DARTLAND	501
DAYTRON	501
DEXP	516, 702
DIGITAL	547
DISTAR	562, 616
DNS	596, 702, 708
DOFFLER	708
DUAL	746
ELEKTA	501, 503, 520, 525, 527, 615
ELEKTRONIKA	583
ELENBERG	538, 545, 550, 565, 567, 579, 581, 644, 655, 676, 683, 717, 785
EPLUTUS	537, 644, 677, 682, 697, 724
ERC	537, 631, 764
ERISSON	511, 514, 516, 525, 526, 537, 538, 541, 550, 556, 561, 568, 586, 596, 599, 623, 626, 629, 631, 711, 712, 714, 739, 747, 779, 786, 795
EVGO	538, 540, 630
FINLUX	501, 511, 583, 589, 608, 732, 758, 774
FUJITSU	544, 573
FUNAI	501, 502, 503, 504, 505, 525, 537, 538, 581, 603, 764
FUSION	596, 642, 699, 705, 706
GBS	501, 520, 525, 571, 583
GENERAL	537, 556
GOLD STAR - LG	501, 512, 518, 525, 527, 559, 570, 583, 584, 589, 609, 613, 642, 706, 712, 742, 750, 765
GRUNDIG	501, 512, 525, 606, 662, 718, 719, 733
HAIER	518, 526, 581, 574, 657, 667, 669, 707, 778
HAPPY	501
HARPER	706, 712
HCM	501, 503, 525
HELIX	701, 702, 708
HIL	503
HITACHI	501, 515, 518, 522, 525, 537, 544, 548, 554, 578, 584, 587, 588, 604, 613, 640, 729, 749, 775, 783
HORIZONT	525, 540, 545, 550, 559, 583, 664, 672, 771
HPC	546
HYUNDAI	516, 518, 522, 525, 526, 537, 538, 540, 541, 546, 547, 550, 556, 580, 596, 597, 599, 626, 642, 648, 650, 655, 705, 711, 714, 717, 760
INNO-HIT	501, 525, 571
IRBIS	596, 714
IVA (MBA)	537, 561, 637
IZUMI	516, 537, 596, 663, 691, 695, 703, 705, 711, 792
JINLIPI	537, 637, 766
JVC	513, 515, 593, 604, 727
KAMACROWN	571
KANSAI	501, 525
KENSTAR	516
KITT	503, 613, 616, 726
KNEISSEL	753
KONKA	537, 538, 560, 561, 581, 616, 626, 717
KRONMARK	596
LOEWE	542, 709, 744
MEDION	525
METZ	745
MINISUBISHI	501, 520, 522, 525, 604, 611, 722, 728, 744
MIYOTA	537, 644, 656
MTC	501, 583
MULTITECH	501, 525
MYSTERY	516, 537, 597, 642, 650, 653, 701, 702, 708, 773, 780, 789
NASH	537
NEC	501, 517, 520, 526, 552, 604, 625, 722
NESTO	501, 525
NOKIA	519, 584, 610, 614, 616, 740, 746, 767
NOVA	501, 616, 638
NOVEX	516, 546, 599
NTT	759
OMEGA	501, 571
ONIDA	513
ONIKS	516, 525, 537, 545, 546, 547, 680
ONWA	524, 525
OPERA	644, 666, 682
ORBITA	635
ORION	501, 503, 506, 507, 509, 516, 525, 528, 537, 591, 603, 617, 619, 627, 641, 643, 664, 715, 720, 722, 729, 746
ORSON	526, 537
PANASONIC	512, 531, 532, 752
PHANTOM	644
PHILIPS	501, 511, 524, 525, 540, 549, 628, 639, 707, 748

Коды к TV устройствам различных марок

Марка	Код
PHOENIX	613
PHOENIX GOLD	708
PIONEER	548, 555, 566, 575, 647, 666
PIXELVIEW	525
PLANTRON	735
POLAR	525, 526, 537, 538, 540, 543, 546, 547, 581, 596, 599, 663, 664, 683, 703, 711, 717
POLAROID	525
PREMIERA	773
PRESTIGIO	564, 656
PRIMA	522, 547
PROLOGY	653, 655, 777, 784
RADUGA	525, 545, 569, 583, 743
RAINFORD	525, 537, 544, 545
RECOR	511, 525
REKORD	520, 525, 526, 537, 538, 539, 545, 547, 725, 736, 743, 747
RFT	535, 618, 728
ROADSTAR	501, 508, 525, 571
ROLSEN	503, 516, 525, 537, 538, 540, 543, 546, 564, 576, 592, 594, 596, 649, 656, 669, 684, 714, 768, 770
ROVERSCAN	662, 770
ROYAL	501, 503, 525, 616
RUBIN	504, 516, 525, 537, 546, 583, 619, 665, 714, 776
SABA	509, 510, 521, 602, 756
SALORA	584
SAMSUNG	501, 525, 526, 529, 563, 580, 595, 596, 608, 612, 613, 622, 641, 645, 688, 723, 741
SANSUI	524, 525, 538, 556, 695
SANYO	501, 519, 522, 525, 530, 540, 544, 550, 558, 604, 608, 610, 618, 621, 696, 722, 730, 734, 738
SATURN	702, 708
SCARLETT	541, 545
SCHNEIDER	525, 540, 571, 771
SELECO	736, 763
SETRO	520
SHARP	526, 544, 548, 604, 707, 721
SHERION	616
SHIVAKI	501, 503, 508, 516, 518, 520, 525, 526, 527, 536, 538, 539, 540, 545, 546, 547, 550, 556, 580, 583, 585, 596, 599, 609, 619, 630, 632, 635, 636, 643, 644, 664, 681, 694, 708, 743, 791
SIEMENS	512, 525, 660, 726, 734
SIESTA	501, 537, 637
SILELIS	613
SILVER	633
SITRONICS	503, 516, 525, 537, 538, 540, 543, 545, 594, 626, 629, 661, 671, 672, 674, 679, 680, 686, 766
SOKOL	516, 525, 547, 635
SONY	533, 604, 659, 722
SPEKTR	525, 538, 668
START	525, 537, 545, 546, 547
STASSFURT	535, 618
STINOL	525
SUPER	537, 561, 644, 653, 654, 655, 666, 677, 682, 724, 754, 772, 780
SUPER GENERAL	537
SUPRA	501, 508, 516, 518, 520, 525, 527, 529, 536, 537, 541, 563, 579, 580, 596, 597, 612, 642, 643, 687, 690, 705, 706, 712, 713, 790
SUZUKI	516, 556
SVEN	574
TCL	521, 538, 540, 642
TEAC	525
TECHNICS	537, 538
TECHNO	501, 525, 538, 544, 546, 556, 568, 579, 596, 599, 644, 664, 703, 791
TECKTON	522, 582, 601, 669, 670
TELEFUNKEN	510, 521, 561, 590, 602, 605, 642, 708, 712, 714, 756, 757
TELEVISION	501, 525, 616
THOMSON	509, 510, 521, 550, 579, 602, 624, 642, 702, 756
TOSHIBA	516, 544, 553, 604, 651, 744
TRONY	516, 525, 537, 538, 550, 657
TVT	511, 525, 530, 535, 538, 583, 586, 620, 630, 723, 742
UNITED	525
VARTA	642
VESTEL	525, 544, 556, 583, 619
VIEWSONIC	557, 698
VITA	547
VITEK	537, 650
VITYAS	525, 708
VOLNA (ВОЛНА)	635
VR	516, 537, 565, 702, 714, 786
WALTHAM	503, 509, 511, 583, 584, 607, 613, 729, 762
XORO	522, 526, 545, 781, 782, 787
НЕИЗВЕСТНАЯ МАРКА	525, 546, 574, 596, 648, 656, 666, 711, 755

Коды к SAT устройствам различных марок

Марка	Код
AIRTONE	968
ALFA GOLD	828
AMINO (СТРИМ)	829, 902
ARION	835
ARRIS	883
ASTON	811
BBK	931
BIG STAR	965
BIGSAT	839, 840, 903, 936
CADENA	958, 962
CONTINENT	886, 975
COSHIP	855
DAEWOO	872
D-COLOR	946, 961
DELTA SYSTEMS	985
DIGIFORS	946
DIVISAT	957, 958
D-LINK	923
DNS	950, 968
DR.HD	983
DRE	804, 888
DREAM	819
DUNE	927, 934
ECHOSPACE	862
EHOSTAR	808, 809, 822
ELTEX	987
EPLUTUS	961
EUROSKY	840, 981
EUROSTAR	863
EUSTON	825
EVO	965
GALAXY INNOVATIONS	878, 881, 908, 911, 912, 917, 924
GENERAL SATELLITE	804, 868, 888, 907, 933, 954
GLOBALTEQ	833
GLOBO	909, 915, 925, 935, 945, 956, 971, 973, 995, 999
GOLD STAR - LG	871
GOLDEN INTERSTAR	821, 841, 879, 918
GOLDEN MEDIA	847, 912
GOLDMASTER	911
HD BOX	847, 911
HITACHI	824, 832
HIVION	929
HOME	968
HOMECAST (ВОЛЯ)	820, 831, 836
HUMAX	803, 804, 823, 848, 860, 861, 905, 949
HYUNDAI	968
ID DIGITAL	804
INTEK	984
INTERCROSS	988
KAON	820, 949
KARTINA TV	934
KOSMOS	855, 856
LANS	970
LOCUS	946
LUMAX	852, 873, 907, 913, 965, 994
MAG	988
MEDIA COM	825
MOTOROLA	883, 884, 901, 974
MYSTERY	910, 997
NDS	814
NEXT	864
NOKIA	813
NOT	941
ONLIME	905
OPENBOX	827, 835, 869, 870, 911, 990, 991
OPENTECH	972
OPENTEL	865
OPTICUM	971
ORBITA	946, 995
ORIEL	887, 926, 941, 948, 955, 986
PACE	801, 932, 953
PATIX DIGITAL	946, 967, 992
PAUXIS	842, 859
PERFEO	960, 981
PHILIPS	857, 899
PIONEER	851
POLAR	858
REFLECT	959
REXANT	977
RIKOR	916, 947
ROLSEN	930, 941, 942, 961
SAGEMCOM	906
SAMSUNG	803, 810, 812, 854
SEG	818
SELENGA	946
SEZAM	882
SKY VISION	952, 966, 977, 982
SKYMASTER	830
SKYWAY	911
SKYWORTH	989
STAR	833
STAR TRACK	826, 835, 943
STARNET	885
STRONG	805, 806, 815, 816, 817, 828, 830, 914
SUNNIWELL	875
SUPERBOX	903
SUPERMAX	821, 866, 880, 924
SUPRA	950, 960, 962

Коды к SAT устройствам различных марок

Марка	Код
TECHNOSAT	852, 853
TEL-ANT	960
TELEFUNKEN	961, 968
TESLER	926
TOP BOX	965
TOPFIELD	837, 838, 877, 891
TOSHIBA	876
TV STAR	967
TVJET	946, 976
VESTEL	820, 824
VU+	919, 920, 921, 922
WORLD VISION	821, 928, 951, 952, 961, 968
XSAT	801, 807
XSAT (НТВ+)	801, 802, 807, 906, 972, 984, 998
YUXING	904
ZUXEL	874
БИЛЛАЙН	883, 884, 901, 923
ВОЛГАТЕЛЕКОМ	842, 843, 844, 845, 846, 847, 849, 850, 858, 867
ДОМ.RU	820, 905
ДОМОЛИНК	874, 904
МТС	829, 855, 902, 964, 974, 979, 980, 989, 993
НЕИЗВЕСТНАЯ МАРКА	834, 835, 842, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 903, 904, 937, 938, 939, 940, 944, 945, 969, 971, 978, 996
РОСТЕЛЕКОМ	874, 904, 923, 963, 988, 993
СИГНАЛ	867, 968
ТЕЛЕКАРТА	867, 909, 973
ТЕЛЕЦИФРА	968

Функции кнопок пульта IRC 70 F к TV устройствам

Кнопки пульта IRC 70 F	Код 101		Код 102		Код 103		Код 104		Код 105	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			DBB	HUE +	AUX/INPUT				⊕ ⊗ ⊕ ▲	
AUDIO; NICAM			II; OD; M; STEREO				BAND			
VIDEO; SYS			PAL/SECAM; NIC.		TV SYSTEM		V.SYSTEM		SYSTEM	
☐; ZOOM	ADD/ERASE		☐		TV/SAT		TV ON/OFF		⊕ ⊗ ⊕ ▼	
▼; TV			TV; ☐	HUE -	TV/SAT		TV ON/OFF			
☐; ↗	STORE		▶; AST; SEAR.; Q.V.				MEMORY		PRESET	
☐; LOCK	RESET		↔; P.P.; OK		TIME SEL.; M		RESET	P.P		
▲; FAV			MEMO				EJECT			
⊙	POWER		⊙; OFF; STAND BY		STANDBY; ⊙		POWER		⊙	
AV	TV/VIDEO		AV; ↔; VIDEO	☐; CLEAR	TV/VCR; ⊕; AUDIO B		TV/AV		☐ AV	
⌘	MUTE		⌘; MUTE; ⌘		MUTE; ⌘		MUTE		⌘; MUTE	
MENU	MENU		MENU		PICTURE SELECT		MENU			
EXIT	SKIP		Arret				ADD/DEL			
▲	☐		⊕ +; ▲	⊗ +			+		AUTO/S ▲	
◀			FINE-; FT; TUNE◀	⊗ -	CONTR.-; PIC.-; MIN		TRK -		FT ▼	
OK			MENU; F; PIC; SEL		PICTURE SELECT		A.TRK		SELECT	
▶			FINE+; FT+; TUNE▶	⊕ +	CONT.+; PIC.+; HOUR		TRK +		FT ▲	
▼	☐		⊙ -; ▼	⊗ -			-		AUTO/S ▼	
⌘; SETUP	PICTURE		SMART CONT. PICT				SETUP		Q.VIEW	
♪; TITLE			SMART CO. SOUND				VISS		AFT/BAND	
☐	TEXT; ☐		☐; TTR; TTX	☐ ☐; MIX; TMM			PICTURE		ON TIMER	
GUIDE	STD; FUZZY		SYS; 13-24		TIME SET				TIMER ENABLE	
⊙	SLEEP		TIMER; SLEEP; ⊙		SLEEP; ⊙		SLEEP		SLEEP	
☐	MIX; ☐		☐; SPAT; ☐		TIMER SELECT				HOUR	
RED; ●	RED; PICTURE		RED; ♪; Pon	♪ -				● REC	2-	
GREEN; ▶	GREEN; PRESET		GREEN; ⌘; Pst	♪ +					3-	
YELLOW; ◀	YELLOW		YELLOW; ☐; Psz	◀					4-	
BLUE; ▶	BLUE; CLOCK		BLUE; ☐; ←	▶					MINUTE	
☐	STATUS; RECALL		DISPLAY; STAT.; ☐		DISPLAY; ☐		DISPLAY		CH CALL	
☐			P; P; Q.VIEW; ☐		CH. REC.; SYS.; PRE.					
VOL -	VOL ▼; VOL ◀		VOL -; ◀; -	◀ ◀; IL	VOL -; ◀		VOL -		◀	
VOL +	VOL ▲; VOL ▶		VOL +; ▶; +	▶ ▶; IR	VOL +; ▶		VOL +		▶	
CH V; ◀	PR ▼		P -; CH -; PROG -	↓ -	CH -; PROG -		PR -		PR ▼	
CH A; ▶	PR ▲		P +; CH +; PROG +	↑ +	CH +; PROG +		PR +		PR ▲	
±; SAT	--; +/-		-/-; PAGE +; ☐		1-		1-		1-	
CLEAR; X	CANCEL; ☐		P/C; TPD; PAGE -; ☐	☐; SYS; PIP; ☐	2-		CLR/MON		SKIP	
◀; ●	SUB CODE; ☐		☐; TSC; SUB.PAGE		3-		◀ (REW)			
▶; i	INDEX; ☐		☐; X; T INDEX; ☐		4-		▶ (PLAY)			
▶; ?	REVEAL; ☐		☐; ☐; REV		5-		▶▶ (F.FWD)			
■; X	HOLD; ☐		☐; ☐; TPH; STORE				■ (STOP)			
■; ⬇	SIZE; ☐		☐; ☐; TST				■ (PAUSE)			
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0/AV		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 70 F к TV устройствам

Кнопки пульта IRC 70 F	Код 106		Код 107		Код 108	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	COLOUR +; ⊕ +				TV/DVD	
AUDIO; NICAM					AUDIO ST/D/III	
VIDEO; SYS	MODE; P/S		P&S		ANGLE	
☐; ZOOM	SIZE				ZOOM	
▼; TV	COLOUR -; ⊕ -		TV ON/OFF			
☐; ↗	PIP		COUNT MEMORY		SEARCH	
☐; LOCK	STILL		COUNT RESET		PP	
▲; FAV	FC		EJECT		▲; OPEN/CLOSE	
⊙	POWER; ⊙		POWER		⊙; STANDBY	
AV	TV/VIDEO; TV/AV				TV/AV	
⌘	MUTE; ⌘		A. MUTE		MUTE	
MENU	FUNCT; MENU				MENU	
EXIT						
▲	FUN+; +; ▲; ZOOM				▲	
◀	⊗ -; ● -				◀	
OK	PIC SEL; FUNCT		ENTER		▶; ENTER/PLAY	
▶	⊗ +; ⊕ +		+			
▼	FUN-; -; ▼; -PI-				▼	
⌘; SETUP	PIC; SET ON TIME		INDEX		SETUP	
♪; TITLE	X ON TIME		VPS		TITLE/PBC	
☐	MIN; MINUTE		PGM SET		DVD MENU	
GUIDE	HOUR; HR CLOCK		PGM CLEAR		PROG	
⊙	SLEEP; OFF TIME; ☐		SLEEP	T. REC	SLEEP	
☐			CLK SET		SUBTITLE	
RED; ●	1-; 10-			REC	REPEAT	
GREEN; ▶	2-			OTR	REPEAT A-B	
YELLOW; ◀	3-; SCAN				MARK	
BLUE; ▶	4-; MSG		SLOW		SLOW PLAY	
☐	RECALL; DISPLAY		OSD		DISPLAY	
☐	☐; Q.VIEW; ☐		REPEAT		RECALL	
VOL -	VOLUME ▼; ◀-		VOLUME DOWN		V -	
VOL +	VOLUME ▲; ▶+		VOLUME UP		V +	
CH V; ◀	CHANNEL ▼; P-		CHANNEL DOWN		P -	◀; PREV
CH A; ▶	CHANNEL ▲; P+		CHANNEL UP		P +	▶; NEXT
±; SAT	-		SPEED		-/-	
CLEAR; X	RESET; CANCEL; X				SWAP	
◀; ●			REW; ◀		◀; F.REV	
▶; i			PLAY		▶; ENTER/PLAY	
▶; ?			FF; ▶▶		▶▶; F.FWD	
■; X			STOP/EJECT		■; STOP	
■; ⬇	ZOOM				■ (PAUSE/STEP)	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 70 F к VCR устройствам

Кнопки пульта IRC 70 F	Код 201		Код 202	
	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	SHIFT ▶		SEARCH ▲	
AUDIO; NICAM			AUTO SEARCH	
VIDEO; SYS			TV/LINE	
☐; ZOOM			INDEX SEARCH	
▼; TV	SHIFT ◀		SEARCH ▼	
⏪; ⏩	SKIP; ZERO RTN		CH. PRESET	
☒; LOCK	RESET		COUNT RESET	
▲; FAV	■/▲; STOP/EJECT	LINE T. CH; EJECT	COUNT 0 STOP	
⊖	⊖; OPERATE		POWER	
AV	AV; TIMER SET		TV/VCR	
⌘			EJECT	
MENU	MENU		MENU	
EXIT				
▲	PICTURE +		SHARPNESS +	
◀	SLOW -		INDEX -	
OK	ENTER; ENT		ENTER; CH. MEM.	
▶	SLOW +		INDEX +	
▼	PICTURE -		SHARPNESS -	
*; SETUP			OTR; OK	
♪; TITLE			VPS; ENCORE	
☐	PROGRAM		PGM SET	
GUIDE	LINE T. CH; EJECT		AFT RETRACKING	
⊖	AV; TIMER SET		CLOCK SET	T. REC
☐			CLOCK/COUNTER	
RED; ●	13	● REC		● REC
GREEN; ▬	14			
YELLOW; ◀	CLOCK COUNT; 15			
BLUE; ▬	BACK; 16		▬; SLOW	
☐	OSD; DISP SELECT		DISPLAY ON/OFF	
⏪	BACK		P/C	
VOL -			-; MFT -	
VOL +			+; MFT +	
CH V; ◀	CH -; CH ▼		CH./TRKACKING ▼	
CH A; ▶	CH +; CH ▲		CH./TRACKING ▲	
+; SAT	1-; 20; 11		SPEED; R.TRK	
CLEAR; X	2-; 30; 12		PGM CLEAR	
◀; ●	◀; REW		◀; REW	
▶; i	▶; PLAY		▶; PLAY	
▶; ?	▶; FF		▶; FF	
■; X	■/▲; STOP/EJECT		■; STOP	
▬; ⏪	▬; PAUSE		▬; P/S; STILL/F.ADV	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 70 F к AUX устройствам

Кнопки пульта IRC 70 F	Код 301		Код 302		Код 303		Код 304		Код 305	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD			KEY +							
AUDIO; NICAM	LANGUAGE		AUDIO		AUDIO		AUDIO		LANGUAGE	
VIDEO; SYS	N/P		NTSC/PAL		N/P		VIDEO		P/N	
☐; ZOOM	ZOOM		ZOOM		ZOOM		ZOOM		ZOOM	
▼; TV			KEY -							
☐; ⏪	SEARCH		SEARCH		MODEL		P/N		MARK	
☒; LOCK	L/R		L/R/ST		L/R		DEFAULT		L/R	
▲; FAV	OPEN/CLOSE		OPEN/CLOSE		OPEN/CLOSE		▲		▲	
⊖	POWER		POWER		POWER		⊖; SLEEP		POWER	
AV	ANGLE		ANGLE		ANGLE		ANGLE		ANGLE	
⌘	MUTE		MUTE		MUTE		MUTE		MUTE	
MENU	MENU		MENU		MENU/VIEW		PICTURE		MENU	
EXIT	RESUME						RESUME		GOTO	
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀		◀		◀	
OK	SELECT		ENTER		ENTER		ENTER		ENTER	
▶	▶		▶		▶		▶		▶	
▼	▼		▼		▼		▼		▼	
*; SETUP	SETUP		SET UP		SETUP		SETUP		SETUP	
♪; TITLE	TITLE		TITLE		TITLE		TITLE	VOCAL	TITLE	
☐	PROGRAM		PBC		PBC		PBC		PBC	
GUIDE	DIGEST		PROGRAM		PROG		PROGRAM		PROG	
⊖	3D				TIME		SHUFFLE		SHUF	
☐	SUBTITLE		SUBTITLE		SUBTITLE		SUB-T		SUBTITLE	
RED; ●	REPEAT		REPEAT		REPEAT		REPEAT		REPEAT	
GREEN; ▬	A-B		STEP		STEP		STEP		STEP	
YELLOW; ◀			A-B		A-B		A-B		A-B	
BLUE; ▬	SLOW		SLOW		SLOW		SLOW		SLOW	
☐	OSD		DISPLAY		DISPLAY		OSD		OSD	
⏪	RETURN		RETURN		RETURN		GO TO		RETURN	
VOL -	VOL -		VOL -		VOL -		VOL -		VOL -	
VOL +	VOL +		VOL +		VOL +		VOL +		VOL +	
CH V; ◀			◀		◀; PREV		◀; PREV		◀	
CH A; ▶			▶		▶; NEXT		▶; NEXT		▶	
+; SAT	10+		+10		+10		+10		+10	
CLEAR; X	CLEAR		CLEAR		CLEAR		CLEAR		CLEAR	
◀; ●			◀		◀; REV		◀; F.B		◀	
▶; i	SELECT/PLAY		PLAY		PLAY/PAUSE		PLAY/PAUSE		PLAY	
▶; ?			▶		▶; FWD		▶; F.F		▶	
■; X	STOP		STOP		■; STOP		STOP/RETURN		STOP	
▬; ⏪	▬ (PAUSE/STOP)		▬		PLAY/PAUSE		PLAY/PAUSE		PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 70 F к AUX устройствам

Кнопки пульта IRC 70 F	Код 306		Код 307	
	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	KEY +		DVD/USB	
AUDIO ; NICAM	LANGUAGE		AUDIO	
VIDEO ; SYS	N/P		VIDEO	
☐ ; ZOOM	ZOOM		ZOOM	
▼ ; TV	KEY -			
☐ ; ↻	MODE		P/N	
☐ ; LOCK	L/R		DEFAULT	
▲ ; FAV	OPEN/CLOSE		▲	
⊖	⊖ ; POWER		⊖ ; SLEEP	
AV	ANGLE		ANGLE	
⌘	MUTE		MUTE	
MENU	PROGRAM		PROGRAM	
EXIT				
▲	▲		▲	
◀	◀		◀	
OK	ENTER/PLAY		ENTER	
▶	▶		▶	
▼	▼		▼	
⌘ ; SETUP	SETUP		SETUP	
♪ ; TITLE	TITLE/RETURN		TITLE	VOCAL
☐	PBC		PBC	
GUIDE	DIGEST		VOL/MIC	
⊖	TIME		SHUFFLE	
☐	SUBTITLE		SUB-T	
RED ; ●	REPEAT		REPEAT	
GREEN ; ▹	STEP		STEP	
YELLOW ; ◀	A-B		A-B	
BLUE ; ▹	SLOW		SLOW	
☐	OSD		OSD	
☐	TITLE/RETURN		GOTO	
VOL -	VOL -		VOL -	
VOL +	VOL +		VOL +	
CH V ; ◀	◀ ; PREV		◀ ; PREV	
CH A ; ▶	▶ ; NEXT		▶ ; NEXT	
± ; SAT	10+		10+	
CLEAR ; X			CLEAR	
◀ ; ●	◀ ; REV		◀ ; F.B	
▶ ; i	ENTER/PLAY		PLAY/PAUSE	
▶ ; ?	▶ ; FWD		▶ ; F.F	
■ ; X	■ ; STOP		STOP/RETURN	
■ ; ⬇	■ ; PAUSE		PLAY/PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 70 F к TV устройствам

Кнопки пульта IRC 70 F	Коды 501-799	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM		
VIDEO ; SYS		
☐ ; ZOOM		
▼ ; TV		
☐ ; ↻		
☐ ; LOCK		
▲ ; FAV		
⊖	POWER ; ⊖	
AV	TV/VIDEO ; TV/AV	
⌘	MUTE ; ⌘	
MENU		
EXIT		
▲		
◀		
OK		
▶		
▼		
⌘ ; SETUP		
♪ ; TITLE		
☐		
GUIDE		
⊖		
☐		
RED ; ●		
GREEN ; ▹		
YELLOW ; ◀		
BLUE ; ▹		
☐		
☐		
VOL -	VOLUME ▼ ; ◀-	
VOL +	VOLUME ▲ ; ▶+	
CH V ; ◀	CHANNEL ▼ ; P-	
CH A ; ▶	CHANNEL ▲ ; P+	
± ; SAT		
CLEAR ; X		
◀ ; ●		
▶ ; i		
▶ ; ?		
■ ; X		
■ ; ⬇		
1, 2, ... 9, 0	1, 2, ... 9, 0	

Для просмотра функций кнопок баз кодов 8 и 9 (SAT, STB, DVB устройства) перейдите по следующей ссылке <http://www.pult-irc.ru/files/manual/SatCodesForIrcF.pdf>