

Приложение IRC 85 F (версия 22.06.28 16:10)

Модели оригинальных пультов и соответствующие им коды пульта IRC приведены в разделе "Коды пульта IRC 85 F".

Функции всех кнопок для каждого кода пульта IRC можно узнать из таблиц данного приложения.

Пульт IRC может иметь дополнительные функции (если указаны в столбце "Доп. функция"). Доступ к ним осуществляется при помощи кнопки SHIFT (см. в инструкции рис. 1, п.16). Для доступа к дополнительным функциям нажмите кнопку SHIFT и, удерживая её нажатой, нажмите ту кнопку, дополнительная функция которой Вам необходима.

После первой установки батареек

Кнопка устройства пульта IRC	Код пульта IRC	Кнопка устройства пульта IRC	Код пульта IRC
TV	101	SHIFT + TV*	105
VCR	102	SHIFT + VCR*	201
AUX	103	SHIFT + AUX*	202
SAT	104	SHIFT + SAT*	203

* Нажмите кнопку SHIFT и, удерживая её нажатой, нажмите и отпустите одну из кнопок пульта: TV, VCR, AUX или SAT.

Доступные коды пульта IRC 85 F

Номер базы кодов (диапазон кодов)	Устройство базы кодов	Доступные коды пульта IRC
1 (101-199)	TV	101 - 111
2 (201-299)	VCR	201 - 210
3 (301-399)	AUX	301 - 309
4 (401-499)	-	Нет
5 (501-599)	TV	501 - 599
6 (601-699)	TV	601 - 688
7 (701-799)	-	Нет
8 (801-899)	SAT	801 - 899
9 (901-999)	SAT	901 - 999

Коды пульта IRC 85 F

Коды к устройствам

Модель*	Устр-во	Код
1171000 (CD)	AUX, CD, DVD	303
1171000 (LIGHT)	VCR	208
1171000 (TV)	TV	107
1171000 (V.MEM)	VCR	207
5638071	VCR	201
8052575 (CD)	AUX, CD, DVD	302
8052575 (LIGHT)	VCR	206
8052575 (TV)	TV	106
8052575 (V TAPE)	VCR	205
BEO1	TV	102
BEO4 (CD)	AUX, CD, DVD	301
BEO4 (LIGHT)	HOME APPLIANCES	203
BEO4 (TV)	TV	103
BEOLINK 1000 MK2 (AUX)	AUX, CD, DVD	301
BEOLINK 1000 MK2 (TV)	TV	101
BEOLINK 1000 MK2 (VIDEO)	VCR	204
BEOLINK 1000 MK3 (AUX)	AUX, CD, DVD	301
BEOLINK 1000 MK3 (TV)	TV	101
BEOLINK 1000 MK3 (VIDEO)	VCR	204
BEOLINK 5000	TV	104
BEOLINK 5000 (LIGHT)	TV	103
BEOVISION	TV	105
MCMXCVII (CD)	AUX, CD, DVD	302
MCMXCVII (LIGHT)	VCR	206
MCMXCVII (TV)	TV	106
MCMXCVII (V TAPE)	VCR	205
RC 8052624	TV	102
SOME MODELS	VCR	201
SOME MODELS	VCR	202

* По каталогу «IRC»

Коды к TV устройствам различных марок

Марка	Код
AEG	544
AIWA	502, 503, 523, 528, 579, 634, 678
AKAI	501, 503, 512, 516, 520, 522, 524, 525, 537, 538, 540, 545, 546, 547, 550, 571, 572, 582, 583, 584, 585, 596, 598, 608, 613, 626, 652, 673
AKIRA	511, 514, 516, 522, 524, 525, 537, 538, 541, 545, 547, 556, 577, 586, 594, 597, 598, 601, 623, 626, 629, 631, 649, 666, 680
AMCOL	501, 525, 545
ANITECH	501, 525, 616
ATLANTA	501
AVEST	537, 538, 539
BBK	522, 551, 594, 597, 684
BEKO	525, 530, 535, 559
BIGSTON	501, 503
BLAUPUNKT	512
BORK	525, 547, 646
BROKSONIC	501
CAMERON	538, 550, 567, 675
CASIO	529
CHANGHONG	516, 596, 642
CLATRONIC	501, 545, 559, 571
CONTEC	501, 603, 604, 613
CORTLAND	644
CROWN	501, 503, 511, 524, 525, 530, 571
DAEWOO	501, 508, 518, 520, 525, 526, 536, 538, 539, 546, 565, 571, 576, 598, 613, 685, 687
DARTLAND	501
DAYTRON	501
DEXP	516, 579, 596, 684
DIGITAL	547
DISTAR	562, 616
DNS	596
DOFFLER	684
ELEKTA	501, 503, 520, 525, 527, 615
ELEKTRONIKA	583
ELENBERG	538, 545, 550, 565, 567, 579, 581, 644, 655, 676, 683
EPLUTUS	537, 644, 677, 682
ERC	537, 631
ERISSON	511, 514, 516, 525, 526, 537, 538, 541, 550, 556, 561, 568, 586, 596, 599, 623, 626, 629, 631
EVGO	538, 540, 630
FINLUX	501, 511, 583, 589, 608
FUJITSU	544, 573
FUNAI	501, 502, 503, 504, 505, 525, 537, 538, 581, 603
FUSION	596, 642
GBS	501, 520, 525, 571, 583
GENERAL	537, 556
GOLD STAR - LG	501, 512, 518, 525, 527, 559, 570, 583, 584, 589, 609, 613, 642
GRUNDIG	501, 512, 525, 606, 662
HAIER	518, 526, 561, 574, 657, 667, 669
HAPPY	501
HCM	501, 503, 525
HIL	503
HISENSE	525
HITACHI	501, 515, 518, 522, 525, 537, 544, 548, 554, 578, 584, 587, 588, 604, 613, 640
HORIZONT	525, 540, 545, 550, 559, 583, 664, 672
HPC	546
HYUNDAI	516, 518, 522, 525, 526, 537, 538, 540, 541, 546, 547, 550, 556, 580, 596, 597, 599, 626, 642, 648, 650, 655
INNO-HIT	501, 525, 571
IRBIS	596
IVA (ИВА)	537, 561, 637
IZUMI	516, 537, 596, 663
JINLIPIU	537, 637
JVC	513, 515, 593, 604
KAMACROWN	571
KANSAI	501, 525
KENSTAR	516
KITT	503, 613, 616
KONKA	537, 538, 560, 561, 581, 616, 626
KRONMARK	596
LOEWE	542
MEDION	525
MITSUBISHI	501, 520, 522, 525, 604, 611
MIYOTA	537, 644, 656
MTC	501, 583
MULTITECH	501, 525
MYSTERY	516, 537, 597, 642, 650, 653
NAD	518, 525
NASH	537
NEC	501, 517, 520, 526, 552, 604, 625
NESCO	501, 525
NOKIA	519, 584, 610, 614, 616
NOVA	501, 616, 638
NOVEX	516, 546, 599
OMEGA	501, 571
ONIDA	513
ONIKS	516, 525, 537, 545, 546, 547, 680
ONWA	524, 525
OPERA	644, 666, 682
ORBITA	635
ORION	501, 503, 506, 507, 509, 516, 525, 528, 537, 591, 603, 617, 619, 627, 641, 643, 664
ORSON	526, 537
PANASONIC	512, 531, 532
PHANTOM	644
PHILIPS	501, 511, 524, 525, 540, 549, 628, 639
PHOENIX	613
PIONEER	548, 555, 566, 575, 647, 666
PIXELVIEW	525
POLAR	525, 526, 537, 538, 540, 543, 546, 547, 581, 596, 599, 663, 664, 683
POLAROID	525
PRESTIGIO	564, 656
PRIMA	522, 547
PROLOGY	653, 655

Коды к TV устройствам различных марок

Марка	Код
RADUGA	525, 545, 569, 583
RAINFORD	525, 537, 544, 545
RECOR	511, 525
REKORD	520, 525, 526, 537, 538, 539, 545, 547
RFT	535, 618
ROADSTAR	501, 508, 525, 571
ROLSEN	503, 516, 525, 537, 538, 540, 543, 546, 564, 576, 592, 594, 596, 649, 656, 669, 684
ROVERSCAN	662
ROYAL	501, 503, 525, 616
RUBIN	504, 516, 525, 537, 546, 583, 619, 665
SABA	509, 510, 521, 602
SALORA	584
SAMSUNG	501, 525, 526, 529, 563, 580, 595, 596, 608, 612, 613, 622, 641, 645, 688
SANSUI	524, 525, 538, 556
SANYO	501, 519, 522, 525, 530, 540, 544, 550, 558, 604, 608, 610, 618, 621
SCARLETT	541, 545
SCHNEIDER	525, 540, 571
SEURO	520
SHARP	526, 544, 548, 604
SHERION	616
SHIVAKI	501, 503, 508, 516, 518, 520, 525, 526, 527, 536, 538, 539, 540, 545, 546, 547, 550, 556, 580, 583, 585, 596, 599, 609, 619, 630, 632, 635, 636, 643, 644, 664, 681
SIEMENS	512, 525, 660
SIESTA	501, 537, 637
SILELIS	613
SILVER	633
SITRONICS	503, 516, 525, 537, 538, 540, 543, 545, 594, 626, 629, 661, 671, 672, 674, 679, 680, 686
SOKOL	516, 525, 547, 635
SONY	533, 604, 659
SPEKTR	525, 538, 668
START	525, 537, 546, 546, 547
STASSFURT	535, 618
STINOL	525
SUPER	537, 561, 644, 653, 654, 655, 666, 677, 682
SUPER GENERAL	537
SUPRA	501, 508, 516, 518, 520, 522, 525, 527, 529, 536, 537, 541, 563, 579, 580, 596, 597, 612, 642, 643, 687
SUZUKI	516, 556
SVEN	574
TCL	521, 538, 540, 642
TEAC	525
TECHNICS	531, 537, 538
TECHNO	501, 525, 538, 544, 546, 556, 568, 579, 596, 599, 644, 664
TECKTON	522, 582, 601, 669, 670
TELEFUNKEN	510, 521, 561, 590, 602, 605, 642
TELEVISION	501, 525, 616
THOMSON	509, 510, 521, 550, 579, 602, 624, 642
TOSHIBA	516, 544, 553, 604, 651
TRONY	516, 525, 537, 538, 550, 574, 657
TVT	511, 525, 530, 535, 538, 583, 586, 620, 630
UNITED	525
VARTA	642
VESTEL	525, 544, 556, 583, 619
VIEWSONIC	557
VITA	547
VITEK	537, 650
VITYAS	525
VOLNA (ВОЛНА)	635
VR	516, 537, 565, 598
WALTHAM	503, 509, 511, 583, 584, 607, 613
XORO	522, 526, 545
XPX	663
НЕИЗВЕСТНАЯ МАРКА	525, 546, 574, 596, 648, 656, 666

Коды к SAT устройствам различных марок

Марка	Код
AIRTONE	968
ALFA GOLD	828
AMINO (СТРИМ)	829, 902
ARION	835
ARRIS	883, 963, 974
ASTON	811
BBK	931
BIG STAR	965
BIGSAT	839, 840, 903, 936
CADENA	958, 962
CONTINENT	886, 975
COSHIP	855
DAEWOO	872
D-COLOR	946, 961
DELTA SYSTEMS	985
DIGIFORS	946
DIVISAT	957, 958
D-LINK	923
DNS	950, 968
DR.HD	983
DRE	804, 888
DREAM	819
DUNE	927, 934
ECHOSPACE	862
ECHOSTAR	808, 809, 822
ELTEX	987
EPLUTUS	961
EUROSKY	840, 981
EUROSTAR	863
EUSTON	825
EVO	965
GALAXY INNOVATIONS (GI)	878, 881, 908, 911, 912, 917, 924
GENERAL SATELLITE	804, 868, 888, 907, 933, 954
GLOBALTEQ	833
GLOBO	909, 915, 925, 935, 945, 956, 971, 973, 995, 999
GOLD STAR - LG	871
GOLDEN INTERSTAR	821, 841, 879, 918
GOLDEN MEDIA	847, 912
GOLDMASTER	911
HD BOX	847, 911
HITACHI	824, 832
HIVION	929
HOME	968
HOMECAST (ВОЛЯ)	820, 831, 836
HUAVEE	946
HUMAX	803, 804, 823, 848, 860, 861, 905, 949
HYUNDAI	968
ID DIGITAL	804
INTEK	964
INTERCROSS	988
INTRO	978
KAON	820, 949
KARTINA TV	934
KOSMOS	855, 856
LANS	970
LOCUS	946
LUMAX	852, 873, 907, 913, 965, 994
MAG	988
MEDIA COM	825
MOTOROLA	883, 884, 901, 974
MYSTERY	910, 997
NDS	814
NEXT	864
NOKIA	813
NOT	941
ONLIME	905
OPENBOX	827, 835, 869, 870, 911, 990, 991
OPENTECH	972
OPENTEL	865
OPTICUM	971
ORBITA	946, 995
ORIEL	887, 926, 941, 948, 955, 986
PACE	801, 932, 953
PATIX DIGITAL	946, 967, 992
PAUXIS	842, 859
PERFEO	960, 981
PHILIPS	857, 899
PIONEER	851
POLAR	858
REFLECT	959
REXANT	977
RIKOR	916, 947
ROLSEN	930, 941, 942, 961
SAGEMCOM	906
SAMSUNG	803, 810, 812, 854
SEG	818
SELENGA	946
SEZAM	882
SKY VISION	952, 966, 977, 982
SKYMASTER	830
SKYWAY	911
SKYWORTH	989
STAR	833
STAR TRACK	826, 835, 943
STARNET	885
STRONG	805, 806, 815, 816, 817, 828, 830, 914
SUNNIWELL	875
SUPERBOX	903

Коды к SAT устройствам различных марок

Марка	Код
SUPERMAX	821, 866, 880, 924
SUPRA	950, 960, 962
TECHNOSAT	852, 853
TEL-ANT	960
TELEFUNKEN	961, 968
TESLER	926
TOP BOX	965
TOPFIELD	837, 838, 877, 891
TOSHIBA	876
TV STAR	967
TVJET	946, 976
VESTEL	820, 824
VU+	919, 920, 921, 922
WORLD VISION	821, 928, 951, 952, 961, 968
XSAT	801, 807
XSAT (НТВ+)	801, 802, 807, 906, 972, 984, 998
YUXING	904
ZYXEL	874
АРБАКОМ	967
БИЛЛАЙН	883, 884, 901, 923
ВОЛГАТЕЛЕКОМ	842, 843, 844, 845, 846, 847, 849, 850, 858, 867
ДОМ.RU	820, 905
ДОМОЛИНК	874, 904
МТС	829, 855, 902, 964, 974, 979, 980, 989, 993
НЕИЗВЕСТНАЯ МАРКА	834, 835, 842, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 903, 904, 937, 938, 939, 940, 944, 945, 969, 971, 978, 996
РОСТЕЛЕКОМ	874, 904, 923, 963, 988, 993
СИГНАЛ	867, 968
ТВОЁ ТВ	820
ТЕЛЕКАРТА	867, 909, 973
ТЕЛЕЦИФРА	968

Функции кнопок пульта IRC 85 F к TV устройствам

Кнопки пульта IRC 85 F	Код 101		Код 102		Код 103		Код 104		Код 105	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	DVD				DVD; CDV		CD			
AUDIO; NICAM	MONO				A.MEM; A TAPE	A.TAPE2	A.TAPE	A RECORD		
VIDEO; SYS	V.AUX				V.MEM; V TAPE	V.TAPE2	V.TAPE	V RECORD		
☐; ZOOM	FORMAT				FORMAT	LARGE			QS ← →; RA.	
▼; TV	TV				TV		TV		TV	
⏪; ⏩	P-IN-P	SEARCH M.; TUNE			P-IN-P	STORE	STORE		STOP;HALT;STORE	
☒; LOCK	RESET	STORE			RESET	STAND	RESET		RESET; ⏪	
▲; FAV	LARGE				CD	MONO	LINK			
●	●		●		●	POWER OFF	●		POWER; ●	
AV	AV				AV	V.AUX	A/V		AV; 16; 0	
⏸	MUTE		MUTE		MUTE	MUTE	MUTE		⏸; ▼	
MENU	MENU				MENU		MENU		M; SP	
EXIT	EXIT				EXIT		GOTO		C; CC	
▲	▲		▲		▲		▲		☼ +; BRILLIANCE +	
◀	<; ▼; F-		◀		◀		◀		○ -	
OK	GO; PLAY		GO		GO		PLAY			
▶	>; ▲; F+		▶		▶		▶		○ +	
▼	▼		▼		▼		▼		☼ -; BRILLIANCE -	
☼; SETUP	PICTURE				PICTURE	LIGHT	PICTURE			
🔊; TITLE	SPEAKER; SOUND				SPEAKER; SOUND	RADIO	SOUND	RADIO	REVEAL; ⏪; TUNE	
☐	TEXT				TEXT	MIX	TEXT		☐; TEXT	
GUIDE	MIX				UPDATE		TURN			
⌚	CLOCK				CLOCK		CLOCK		UHR ⌚; TIME	
☐	SUBCODE				LIST	TUNE; PAGE			LARGE	
RED; ●	RED	BASS	REC		RED	RECORD	REC START	REC START (?)	F/T -; ⏪	
GREEN; ▶	GREEN; ●	TREBLE			GREEN; ●	RECORD2	REC STOP	REC STOP (?)	F/T +; UP SOUND	
YELLOW; ◀	YELLOW	LOUDNSS			YELLOW; ●●	BASS	PHONO		☼ -; COLOUR -	
BLUE; ▶	BLUE	CAMCORD			BLUE	TREBLE	CDV		☼ +; COLOUR +	
☐	LIST		DISPLAY		LOUDNSS		STATUS		☐	
↻	UPDATE				RETURN		RETURN	RETURN (?)	UPDATE	
VOL -	▼		▼		▼		▼		⏪ -; VOLUME -	
VOL +	▲		▲		▲		▲		⏪ +; VOLUME +	
CH V; ⏪	<; ▼; F-		▼		▼		▼		⏪ -; PROGRAM -	
CH A; ⏩	>; ▲; F+		▲		▲		▲		⏪ +; PROGRAM +	
⏸; SAT	SAT				DTV; SAT		SAT		11	
CLEAR; X	CLEAR				CLEAR		CLEAR		12	
◀; ●	<<; LARGE; FT-		◀		◀	SUBCODE	◀		13	
▶; i	GO; PLAY		GO		GO	INDEX	PLAY		14	
▶; ?	>>; MIX; FT+		▶		▶	REVEAL	▶		15	
☐; ⏸	STOP		STOP		STOP		STOP		16	
⏸; ●	STAND				CAMCORD					
1, 2, ... 9, 0	1, 2, ... 9, 0				1, 2, ... 9, 0			1, 2, ... 9, 0		1, 2, ... 9, 0

Функции кнопок пульта IRC 85 F к TV устройствам

Кнопки пульта IRC 85 F	Код 106		Код 107		Код 108		Код 109		Код 110	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	DVD; CDV		DVD; CDV		DVD; CDV		DVD; CDV		DVD; CDV	
AUDIO; NICAM	A.MEM; A TAPE	A.TAPE2	A.MEM; A TAPE	A.TAPE2	A.MEM; A TAPE	A.TAPE2	A.MEM; A TAPE	A.TAPE2	A.MEM; A TAPE	A.TAPE2
VIDEO; SYS	V.MEM; V TAPE	V.TAPE2	V.MEM; V TAPE	V.TAPE2	V.MEM; V TAPE	V.TAPE2	V.MEM; V TAPE	V.TAPE2	V.MEM; V TAPE	V.TAPE2
☐; ZOOM	FORMAT	LARGE	FORMAT	LARGE	FORMAT	LARGE	FORMAT	LARGE	FORMAT	LARGE
▼; TV	TV		TV		TV		TV		TV	
⏪; ⏩	P-IN-P; P-AND-P	STORE	P-IN-P; P-AND-P	STORE	P-IN-P; P-AND-P	STORE	P-IN-P	STORE	P-IN-P; P-AND-P	STORE
☒; LOCK	RESET	STAND	RESET	STAND	RESET	STAND	RESET	STAND	RESET	STAND
▲; FAV	CD	MONO	CD	MONO	CD	MONO	CD	MONO	CD	MONO
●	●	● (LONG)	● (SHORT)	● (LONG)	●	● (LONG)	●		●	● (LONG)
AV	AV	V.AUX	AV	V.AUX	AV	V.AUX	AV	V.AUX	AV	V.AUX
⏸	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE
MENU	MENU	TUNE; PAGE	MENU	TUNE; PAGE	MENU	TUNE; PAGE	MENU		MENU	TUNE; PAGE
EXIT	EXIT; BACK (LONG)	BACK (SHORT)	BACK (SHORT)	BACK (LONG)	EXIT; BACK (LONG)	BACK (SHORT)	EXIT		EXIT; BACK (LONG)	BACK (SHORT)
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀		◀		◀	
OK	GO; PLAY	OK	OK		GO; PLAY	OK	GO		GO; PLAY	OK
▶	▶		▶		▶		▶		▶	
▼	▼		▼		▼		▼		▼	
☼; SETUP	PICTURE	LIGHT	PICTURE	LIGHT	PICTURE	LIGHT	PICTURE	LIGHT	PICTURE	LIGHT
🔊; TITLE	SPEAKER; SOUND	RADIO	SPEAKER; SOUND	RADIO	SPEAKER; SOUND	RADIO	SPEAKER; SOUND	RADIO	SPEAKER; SOUND	RADIO
☐	TEXT	MIX	TEXT	MIX	TEXT	MIX	TEXT	MIX	TEXT	MIX
GUIDE	UPDATE	MOTS	UPDATE	MOTS	UPDATE	MOTS	UPDATE		UPDATE	MOTS
⌚	CLOCK		CLOCK		CLOCK		CLOCK		CLOCK	
☐	LIST	LIST	LIST	LIST	LIST	LIST	LIST	TUNE; PAGE	LIST	LIST
RED; ●	RED	RECORD	RED	RECORD	RED	RECORD	RED	RECORD	RED	RECORD
GREEN; ▶	GREEN; ●	RECORD2	GREEN; ●	RECORD2	GREEN; ●	RECORD2	GREEN; ●	RECORD2	GREEN; ●	RECORD2
YELLOW; ◀	YELLOW; ●●	BASS	YELLOW; ●●	BASS	YELLOW; ●●	BASS	YELLOW; ●●	BASS	YELLOW; ●●	BASS
BLUE; ▶	BLUE	TREBLE	BLUE	TREBLE	BLUE	TREBLE	BLUE	TREBLE	BLUE	TREBLE
☐	LOUDNSS		LOUDNSS		LOUDNSS		LOUDNSS		LOUDNSS	
↻	RETURN	RANDOM	RETURN	RANDOM	RETURN	RANDOM	RETURN		RETURN	RANDOM
VOL -	▼		▼		▼		▼		▼	
VOL +	▲		▲		▲		▲		▲	
CH V; ⏪	▼		▼		▼		▼		▼	
CH A; ⏩	▲		▲		▲		▲		▲	
⏸; SAT	DTV; SAT		DTV; SAT		DTV; SAT		DTV; SAT		DTV; SAT	
CLEAR; X	CLEAR		CLEAR		CLEAR		CLEAR		CLEAR	
◀; ●	◀	SUBCODE	◀	SUBCODE	◀	SUBCODE	◀	SUBCODE	◀	SUBCODE
▶; i	GO; PLAY	INDEX	PLAY	INDEX	GO; PLAY	INDEX	GO	INDEX	GO; PLAY	INDEX
▶; ?	▶	REVEAL	▶	REVEAL	▶	REVEAL	▶	REVEAL	▶	REVEAL
☐; ⏸	STOP		STOP		STOP		STOP		STOP	
⏸; ●	CAMCORD		CAMCORD		CAMCORD		CAMCORD		CAMCORD	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 85 F к TV устройствам

Кнопки пульта IRC 85 F	Код 111	
	Функция	Доп. функция
▲ ; DVD	DVD ; CDV	
AUDIO ; NICAM	A.MEM ; A TAPE	A.TAPE2
VIDEO ; SYS	V.MEM ; V TAPE	V.TAPE2
⏏ ; ZOOM	FORMAT	LARGE
▼ ; TV	TV	
⏏ ; ↻	P-IN-P ; P-AND-P	STORE
⏏ ; LOCK	RESET	STAND
▲ ; FAV	CD	MONO
⊙	●	● (LONG)
AV	AV	V.AUX
⏏	MUTE	MUTE
MENU	MENU	TUNE ; PAGE
EXIT	EXIT ; BACK (LONG)	BACK (SHORT)
▲	▲	
◀	◀◀	
OK	GO ; PLAY	OK
▶	▶▶	
▼	▼	
* ; SETUP	PICTURE	LIGHT
♪ ; TITLE	SPEAKER ; SOUND	RADIO
⏏	TEXT	MIX
GUIDE	UPDATE	MOTS
⊙	CLOCK	
⏏	LIST	LIST
RED ; ●	RED	RECORD
GREEN ; ■	GREEN ; ●	RECORD2
YELLOW ; ◀	YELLOW ; ●●	BASS
BLUE ; ▶	BLUE	TREBLE
⏏	LOUDNSS	
↻	RETURN	RANDOM
VOL -	V	
VOL +	Λ	
CH V ; ◀◀	▼	
CH A ; ▶▶	▲	
± ; SAT	DTV ; SAT	
CLEAR ; X	CLEAR	
◀◀ ; ●	◀◀	SUBCODE
▶ ; i	GO ; PLAY	INDEX
▶▶ ; ?	▶▶	REVEAL
■ ; ⏏	STOP	
■ ; ⊙	CAMCORD	
1, 2, ... 9, 0	1, 2, ... 9, 0	

Функции кнопок пульта IRC 85 F к VCR устройствам

Кнопки пульта IRC 85 F	Код 201		Код 202		Код 203		Код 204		Код 205	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD			DVD	TRACKING ▲	DVD					
AUDIO ; NICAM			AUDIO ; ♪		A.MEM ; A TAPE				MONO	
VIDEO ; SYS			SYSTEM		V.MEM ; V TAPE		V. TAPE		V TAPE	
⏏ ; ZOOM	X2		◀⇒ ; GO-TO							
▼ ; TV			SV/V+	TRACKING ▼	TV					
⏏ ; ↻			⏏	CH SEARCH	STORE					
⏏ ; LOCK	RESET		⏏ ; CH MEMO	⏏						
▲ ; FAV			▲ ; EJECT		CD					
⊙	POWER		⊙ ; VCR POWER		●		●		● (SHORT)	● (LONG)
AV	VCR		VCR/TV	VCR	AV					
⏏	OFF		MUTE (TV)		MUTE				MUTE	
MENU	PROG		MENU ; DISPLAY	-	MENU		MENU		MENU	
EXIT			SKIP;SKIP SEARCH		EXIT		EXIT		EXIT	
▲			▲	VAR. SLOW ▲	▲				▲	
◀			◀	← INDEX	◀◀				◀◀	
OK	SELECT		SEL;P/C;CH/PRG.;-	⇒ INDEX	GO				GO	
▶			▶	→ INDEX	▶▶				▶▶	
▼			▼	VAR. SLOW ▼	▼				▼	
* ; SETUP	ON		M ; MEMO COUNT.	-	SETUP					
♪ ; TITLE			SP/LP;REC.;SPEED	-	RADIO					
⏏	SET	10-26	⏏		TEXT		TURN		MOTS	
GUIDE	A. DIR.	11-27	CLOCK	CLOCK					TRACKING	
⊙	CLOCK	12-28	⊙ ; MENU							
⏏	CLOCK SET	13-29	TIMER SET		LIST				LIST	
RED ; ●	REPEAT	● REC	OTR ; OTR ●	● ; A ●	RED	RECORD	RED	RECORD	RED	RECORD2
GREEN ; ■		14-30	⏏ ; ⏏		GREEN ; ●		GREEN		GREEN ; ●	
YELLOW ; ◀		15-31	◀		YELLOW ; ●●		YELLOW		YELLOW ; ●●	
BLUE ; ▶		16-32	▶ ; SLOW	FRAME ADVAN. ; ▶	BLUE		BLUE		BLUE	
⏏	COUNTER		⏏ ; EXIT/STATUS		LIGHT		LIST		COUNTER	
↻			SEL;P/C;CH/PRG.;-	⏏	GO TO				RANDOM	
VOL -	▼ ; ◀◀		◀	◀ (TV)	V		<		V	
VOL +	▲ ; ▶▶		▶	▶ (TV)	Λ		>		Λ	
CH V ; ◀◀	P -		- ; CH ▼		▼		<		▼	
CH A ; ▶▶	P +		+ ; CH ▲		▲		>		▲	
± ; SAT	±		± ; +		DTV ; SAT					
CLEAR ; X	CANCEL		X;RES.;CLEAR;CAN.							
◀◀ ; ●	◀◀ (REW)		◀◀	⏏	◀◀		<<		◀◀	
▶ ; i	▶ (PLAY)		▶ ; PLAY	3▶ ; N▶ ; X2 PLAY	GO		GO ; PLAY		GO	
▶▶ ; ?	▶▶ (F.FWD)		▶▶	⏏	▶▶		>>		▶▶	
■ ; ⏏	■ (STOP)	■	■ ; STOP ; ■		STOP		STOP		STOP	
■ ; ⊙	■ (PAUSE)		■ ; ■ ; F.ADV	■						
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 85 F к VCR устройствам

Кнопки пульта IRC 85 F	Код 206		Код 207		Код 208		Код 209		Код 210	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD										
AUDIO ; NICAM			SPEAKER				MONO			
VIDEO ; SYS			V.MEM				TRACKING			
☐ ; ZOOM			FORMAT							
▼ ; TV										
☐ ; ↻	STORE		P-AND-P						STORE	
☐ ; LOCK			STAND							
▲ ; FAV										
○	●		● (SHORT)	● (LONG)	● (SHORT)	● (LONG)	●		●	
AV	LIGHT						V TAPE		LIGHT	
⏸	MUTE		MUTE				MUTE		MUTE	
MENU	MENU		MENU		MENU		MENU		MENU	
EXIT	EXIT		BACK SHORT		BACK SHORT		EXIT		EXIT	
▲	▲		▲		▲		▲		▲	
◀	◀		◀		◀		◀		◀	
OK	LAMP ; GO		OK		OK		GO		LAMP ; GO	
▶	▶▶		▶▶		▶▶		▶▶		▶▶	
▼	▼		▼		▼		▼		▼	
* ; SETUP	SETUP		MOTS		LIGHT				SETUP	
♪ ; TITLE			RANDOM		MORNING					
☐			TEXT		HOME					
GUIDE			LIST		LIST					
○					SLEEP					
☐	LIST		LIST		LIST		LIST		LIST	
RED ; ●	RED		RED		RED		RED	RECORD2	RED	
GREEN ; ▶	GREEN ; ●		GREEN		GREEN		GREEN ; ●		GREEN ; ●	
YELLOW ; ◀	YELLOW ; ●●		YELLOW		YELLOW		YELLOW ; ●●		YELLOW ; ●●	
BLUE ; ▶	BLUE		BLUE		BLUE		BLUE		BLUE	
☐	LIGHT				LEAVING		COUNTER		LIGHT	
↻			BACK LONG		BACK LONG					
VOL -	V		V		V		V		V	
VOL +	Λ		Λ		Λ		Λ		Λ	
CH V ; ◀◀	▼		▼		▼		▼		▼	
CH A ; ▶▶	▲		▲		▲		▲		▲	
⊕ ; SAT										
CLEAR ; X										
◀◀ ; ●	◀◀		◀◀		◀◀		◀◀		◀◀	
▶ ; i	LAMP ; GO		PLAY		PLAY		GO		LAMP ; GO	
▶▶ ; ?	▶▶		▶▶		▶▶		▶▶		▶▶	
■ ; Ⅹ	STOP		STOP		STOP		STOP		STOP	
; ●										
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 85 F к AUX устройствам

Кнопки пульта IRC 85 F	Код 301		Код 302		Код 303		Код 304		Код 305	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	CD		CD	DVD	CD	DVD	CD	DVD	CD	
AUDIO ; NICAM	A.TAPE		SPEAKER ; SOUND	A.MEM	SPEAKER ; SOUND	A.MEM	SPEAKER ; SOUND	A.MEM	SPEAKER ; SOUND	
VIDEO ; SYS	A.TAPE		REPEAT	V.MEM	REPEAT	V.MEM	REPEAT	V.MEM	REPEAT	
☐ ; ZOOM	RANDOM		BASS		BASS		BASS		RANDOM	
▼ ; TV	PHONO		TV	DTV	TV	DTV	TV	DTV	BASS	
☐ ; ↻	STORE		MOTS		MOTS		MOTS		TREBLE	
☐ ; LOCK	RESET		RESET		RESET		RESET		RESET	
▲ ; FAV	LOUDNESS		TREBLE		TREBLE		TREBLE		LOUDNESS	
○	●		●	● (LONG)	● (SHORT)	● (LONG)	●	● (LONG)	●	
AV	AUX		LOUDNESS		LOUDNESS		LOUDNESS			
⏸	MUTE		MUTE		MUTE		MUTE		MUTE	
MENU	MENU		MENU		MENU		MENU		MENU	
EXIT	EXIT	EXIT	EXIT ; BACK (LONG)	BACK (SHORT)	BACK (SHORT)	BACK (LONG)	EXIT ; BACK (LONG)	BACK (SHORT)	EXIT	
▲	▲		▲		▲		▲		▲	
◀	◀		◀◀		◀◀		◀◀		◀◀	
OK	PLAY		GO ; PLAY	OK	OK		GO ; PLAY	OK	GO	
▶	>		▶▶		▶▶		▶▶		▶▶	
▼	▼		▼		▼		▼		▼	
* ; SETUP	MENU		SELECT	LIGHT	SELECT	LIGHT	SELECT	LIGHT	SELECT	
♪ ; TITLE	SOUND		RADIO		RADIO		RADIO		RADIO	
☐	TURN		TEXT		TEXT		TEXT		TRACK	
GUIDE	RADIO		EDIT		EDIT		EDIT		EDIT	
○			CLOCK		CLOCK		CLOCK		CLOCK	
☐	LIST		LIST	LIST	LIST	LIST	LIST	LIST	LIST	
RED ; ●	RED	RECORD	RED	RECORD	RED	RECORD	RED	RECORD	RED	RECORD
GREEN ; ▶	GREEN		GREEN ; ●	RECORD2	GREEN ; ●	RECORD2	GREEN ; ●	RECORD2	GREEN ; ●	RECORD2
YELLOW ; ◀	YELLOW		YELLOW ; ●●		YELLOW ; ●●		YELLOW ; ●●		YELLOW ; ●●	
BLUE ; ▶	BLUE		BLUE		BLUE		BLUE		BLUE	
☐			TRACK		TRACK		TRACK			
↻	GO-TO		RETURN	RANDOM	RETURN	RANDOM	RETURN	RANDOM	RETURN	
VOL -	<		V		V		V		V	
VOL +	>		Λ		Λ		Λ		Λ	
CH V ; ◀◀	▼		▼		▼		▼		▼	
CH A ; ▶▶	▲		▲		▲		▲		▲	
⊕ ; SAT	BASS		MONO		MONO		MONO		MONO	
CLEAR ; X	TREBLE		RETURN		RETURN		RETURN		RETURN	
◀◀ ; ●	<<		◀◀		◀◀		◀◀		◀◀	
▶ ; i	GO ; PLAY		GO ; PLAY		PLAY		GO ; PLAY		GO	
▶▶ ; ?	>>		▶▶		▶▶		▶▶		▶▶	
■ ; Ⅹ	STOP		STOP		STOP		STOP		STOP	
; ●			STAND		STAND		STAND			
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 85 F к AUX устройствам

Кнопки пульта IRC 85 F	Код 306		Код 307		Код 308		Код 309	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	CD		CD		CD		CD	
AUDIO ; NICAM	SPEAKER ; SOUND		SPEAKER ; SOUND		SPEAKER ; SOUND		SPEAKER ; SOUND	
VIDEO ; SYS	REPEAT		REPEAT		REPEAT		REPEAT	
⏮ ; ZOOM	RANDOM		RANDOM		RANDOM		RANDOM	
▼ ; TV	BASS		BASS		BASS		BASS	
⏪ ; ↻	TREBLE		TREBLE		TREBLE		TREBLE	
⏭ ; LOCK	RESET		RESET		RESET		RESET	
▲ ; FAV	LOUDNESS		LOUDNESS		LOUDNESS		LOUDNESS	
⏻	●		●		●		●	
AV	RADIO		RADIO		RADIO		RADIO	
⏮	MUTE		MUTE		MUTE		MUTE	
MENU	MENU		MENU		MENU		MENU	
EXIT	EXIT		EXIT		EXIT		EXIT	
▲	▲		▲		▲		▲	
◀	◀◀		◀◀		◀◀		◀◀	
OK	RADIO		RADIO		RADIO		RADIO	
▶	▶▶		▶▶		▶▶		▶▶	
▼	▼		▼		▼		▼	
* ; SETUP	SELECT		SELECT		SELECT		SELECT	
♪ ; TITLE	RADIO		RADIO		RADIO		RADIO	
■	TRACK		TRACK		TRACK		TRACK	
GUIDE	EDIT		EDIT		EDIT		EDIT	
⌚	CLOCK		CLOCK		CLOCK		CLOCK	
☰	LIST		LIST		LIST		LIST	
RED ; ●	RED	RECORD	RED	RECORD	RED	RECORD	RED	RECORD
GREEN ; ▶▶	GREEN ; ●	RECORD2	GREEN ; ●	RECORD2	GREEN ; ●	RECORD2	GREEN ; ●	RECORD2
YELLOW ; ◀◀	YELLOW ; ●●		YELLOW ; ●●		YELLOW ; ●●		YELLOW ; ●●	
BLUE ; ▶▶	BLUE		BLUE		BLUE		BLUE	
⏮	GO		GO		GO		GO	
↺	RETURN		RETURN		RETURN		RETURN	
VOL -	V		V		V		V	
VOL +	Λ		Λ		Λ		Λ	
CH V ; ◀◀	▼		▼		▼		▼	
CH Λ ; ▶▶	▲		▲		▲		▲	
⊕ ; SAT	MONO		MONO		MONO		MONO	
CLEAR ; X	RETURN		RETURN		RETURN		RETURN	
◀◀ ; ●	◀◀		◀◀		◀◀		◀◀	
▶▶ ; i	GO		GO		GO		GO	
▶▶ ; ?	▶▶		▶▶		▶▶		▶▶	
■ ; Ⅹ	STOP		STOP		STOP		STOP	
⏮ ; ●	O LONG		O LONG		O LONG		O LONG	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 85 F к TV устройствам

Кнопки пульта IRC 85 F	Коды 501-688	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM		
VIDEO ; SYS		
⏮ ; ZOOM		
▼ ; TV		
⏪ ; ↻		
⏭ ; LOCK		
▲ ; FAV		
⏻	POWER ; ⏻	
AV	TV/VIDEO ; TV/AV	
⏮	MUTE ; ⏮	
MENU		
EXIT		
▲		
◀		
OK		
▶		
▼		
* ; SETUP		
♪ ; TITLE		
■		
GUIDE		
⌚		
☰		
RED ; ●		
GREEN ; ▶▶		
YELLOW ; ◀◀		
BLUE ; ▶▶		
⏮		
↺		
VOL -	VOLUME ▼ ; ◀-	
VOL +	VOLUME ▲ ; ▶+	
CH V ; ◀◀	CHANNEL ▼ ; P -	
CH Λ ; ▶▶	CHANNEL ▲ ; P +	
⊕ ; SAT		
CLEAR ; X		
◀◀ ; ●		
▶▶ ; i		
▶▶ ; ?		
■ ; Ⅹ		
⏮ ; ●		
1, 2, ... 9, 0	1, 2, ... 9, 0	

Для просмотра функций кнопок баз кодов 8 и 9 (SAT, STB, DVB устройства) перейдите по следующей ссылке <http://www.pult-irc.ru/files/manual/SatCodesForIrcF.pdf>