

Краткое приложение IRC 03 F (версия 23.01.22 01:39)

Модели оригинальных пультов и соответствующие им коды пульта IRC приведены в разделе "Коды пульта IRC 03 F". В таблице могут быть указаны не все модели оригинальных пультов: полный список и рисунки всех заменяемых оригинальных пультов смотрите на сайте www.pult-irc.ru в разделе «Инструкции к пультам».

Функции всех кнопок для некоторых кодов пульта IRC можно узнать из таблиц данного приложения и для каждого кода пульта IRC на сайте www.pult-irc.ru в разделе «Инструкции к пультам».

Пульт IRC может иметь дополнительные функции (если указаны в столбце "Доп. функция"). Доступ к ним осуществляется при помощи кнопки SHIFT (см. в инструкции рис.1, п.16). Для доступа к дополнительным функциям нажмите кнопку SHIFT и, удерживая её нажатой, нажмите ту кнопку, дополнительная функция которой Вам необходима.

Доступные коды пульта IRC 03 F

Номер базы кодов (диапазон кодов)	Устройство базы кодов	Доступные коды пульта
1 (101-199)	TV	101 - 135
2 (201-299)	VCR	201 - 215
3 (301-399)	AUX	301 - 315
4 (401-499)	SAT	401
5 (501-599)	TV	501 - 599
6 (601-699)	TV	601 - 699
7 (701-799)	TV	701 - 770
8 (801-899)	SAT	801 - 899
9 (901-999)	SAT	901 - 999

Базы кодов 5 – 9 являются бонусными и подходят к устройствам различных марок. Тип их устройств указан в столбце «Устройство базы кодов». Список заменяемых марок и коды к ним смотрите на сайте www.pult-irc.ru в разделе «Инструкции к пультам».

Коды пульта IRC 03 F

Коды к устройствам

Модель	Устр-во	Код
10V-0	TV	102
143401300C	VCR	201
20111VR	TV	101
2155	TV	102
2211101402	TV	103
290600190A	TV	102
290600370A	TV	103
2906004400B	TV	123
290600510A	TV	123
4880N1011E	TV	103
97P0457100	VCR	204
97P0457200	VCR	203
97P04701	VCR	206
97P04701-A1	VCR	206
97P04794-2	VCR	211
97P04794-3	VCR	211
97P04858	AUX, CD, DVD	301
97P1803700 1	VCR	209
97P1803700 2	VCR	210
97P1803700 4	VCR	203
97P1809300C	VCR	201
97P1R2BT05	VCR	202
97P1R2BU02	VCR	201
97P1R2KCA0 (DVD)	AUX, CD, DVD	303
97P1R2KCA0 (TV)	TV	110
97P1R2PAA4	VCR	206
97P1R2RAB0	VCR	212
97P1R2ZJA0	AUX, CD, DVD	301
97P1R2ZJA6	AUX, CD, DVD	301
97PA204720	VCR	205
97PA206620	VCR	205
97PA217200	VCR	205
97PA224700	VCR	205
AF004B	AUX, CD, DVD	304
AM-41D	AUX, CD, DVD	304
AM-43D	AUX, CD, DVD	304
AM-44VM	AUX, CD, DVD	312
AMI-960	AUX, CD, DVD	313
CD-01	AUX, CD, DVD	313
CD-02	AUX, CD, DVD	312
CD-03	AUX, CD, DVD	315
CR-501	AUX, CD, DVD	302
DCS2034VR	TV	102
DCS412IR	TV	101
DL-9417	HOME APPLIANCES	214

Модель	Устр-во	Код
DLT2000	TV	117
DLT-RC01	TV	128
DMQ2072	TV	110
DTK2065VK	TV	103
DTT2173VF	TV	104
DV-1350S	AUX, CD, DVD	302
DV-3000	AUX, CD, DVD	305
DV-700S	AUX, CD, DVD	302
DVD2200	AUX, CD, DVD	306
DVD5900M	AUX, CD, DVD	307
DVD-R801	AUX, CD, DVD	304
DVF24	VCR	202
DVF44	VCR	202
DVR4286	VCR	204
DVR4783	VCR	201
DVR5179D	VCR	203
DVR8388	VCR	204
DVT2085DF	TV/VCR	109
EN-3190SD	TV	130
HOF-54B	TV/AUX	121
HYDFSFR-0048U0CDU	TV	127
JRC-3612	AUX, CD, DVD	312
JX-2002E	AUX, CD, DVD	311
JX-9006	AUX, CD, DVD	309
KM-638	AUX, CD, DVD	308
KM-668	AUX, CD, DVD	310
KOR-K4603	TV	119
PK11V00840I	TV	118
PP5170	TV	103
R-10W	TV	104
R-10W-1	TV	104
R11	TV	103
R11AD-17	TV	103
R-16	TV	103
R-17	TV	113
R-18	TV	103
R-18A07	TV	103
R-18H43	TV	103
R-22	TV	108
R-23A01	TV	108
R-25	TV	108
R-26	TV	108
R-26A	TV	108
R-28A	TV	110
R-28B03	TV	108

Модель	Устр-во	Код
R-28B04	TV	108
R-29C06	TV/VCR	109
R-29C13	TV/VCR	109
R-29C13A	TV/VCR	109
R-30F21	TV	108
R-30F31	TV	108
R-33	TV	108
R-33C	TV	108
R-35F20	TV/VCR	112
R-40A01	TV	111
R-40A04	TV	111
R-40A10	TV	111
R-40A12	TV	111
R-40A15	TV	111
R-40B02	TV	108
R-40B07	TV	108
R-43	TV	122
R-44C07	TV	111
R-44C13	TV	111
R-46C04	TV/VCR	114
R-46C19	TV/VCR	114
R-46C21	TV/VCR	114
R-46C32	TV/VCR	114
R-46K35	TV	124
R-46L36	TV	115
R-47B04	TV	115
R-48A01	TV	111
R-49C05	TV	115
R-49C07	TV	115
R-50K14	TV	115
R-50K18	TV	115
R-53 (SAT)	SAT, STB, DVB	401
R-53 (TV)	TV	125
R-53 (VCR/DVD)	AUX, CD, DVD	314
R-54D06	TV	130
R-55C03	TV	115
R-55G10	TV	130
R-55H11	TV	130
R-59A01	TV	115
R-59C02	TV	111
R-9	TV	103
R-9A	TV	103
RC-0126B	VCR	206
RC-403BI	TV	132
RC-530BS	TV	133

Модель	Устр-во	Код
RC-55E05	TV	131
RC-753BI	TV	135
RC-DWT01-V01	TV/AUX	120
RD309E	TV	102
RS17-8891A	TV	129
RS41	TV	134
R-V1 (DSS)	HOME APPLIANCES	207
R-V1 (TV)	TV	126
R-V1 (VCR)	VCR	213
R-V28A	TV	116
R-V2A	TV	116
SOME MODELS	TV	105
SOME MODELS	TV	106
SOME MODELS	TV	107
VCR-01	VCR	201
VCR-02	VCR	201
VCR-03	VCR	208
XG-335MP	AUX, CD, DVD	312

* По каталогу «IRC»

Функции кнопок пульта IRC 03 F

Кнопки пульта IRC 03 F	Код 101		Код 102		Код 103		Код 104		Код 105	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	>; FIN +		COLOUR +; ● +		⊙ ⊗ ▲		DBB	HUE +	DNR; PWR PIX	+; [RECALL]
AUDIO; NICAM							H-I; Ⓞ; [STEREO]		[H-I; SAP; [S/M/D]	
VIDEO; SYS			MODE; P/S		SYSTEM		PAL/SECAM; NIC.		[16:9]	[Y]
[ZOOM]			SIZE				[TV; [HUE -		[Y	
▼; TV	<; FIN -		COLOUR -; ● -		⊙ ⊗ ▼					
[TV]	AUTO.S		PIP		PRESET		▶▶; AST; SEAR.; Q.V.		[▶▶; INSTALL; [▶]	
[LOCK]			STILL				→←; P.P.; OK		→←; PP; [▶]	[▶]
▲; FAV			FC				MEMO		[▶]	
⊙	⊙; POWER		POWER; ⊙		⊙		⊙; OFF; STAND BY		⊙; POWER	
AV	AV; TV/AV		TV/VIDEO; TV/AV		Ⓞ AV		AV; Ⓞ; VIDEO	[▶▶]; CLEAR	Ⓞ; [▶]; EXT.; AV	[▶▶]
Ⓞ	MUTE; MUTING		MUTE; [MUTE]		Ⓞ; MUTE		Ⓞ; MUTE; [▶]		Ⓞ	
MENU			FUNCT; MENU				MENU		MENU; [▶]	FEATURE
EXIT							Arret		OFF; EXIT; OUT	WHITE; E; i
▲	⊗ ⊕ +		FUN+; +; ▲; ZOOM		AUTO/S ▲		⊙ +; ▲	⊗ +	MENU +; ▲	⊗ +
◀			⊗ -; ⊙ -		FT ▼		FINE -; FT; TUNE ◀	⊙ -	◀	⊙ -
OK			PIC SEL; FUNCT		SELECT		MENU; F; PIC; SEL		ENTER; OK	SEL
▶			⊗ +; ⊙ +		FT ▲		FINE+; FT+; TUNE ▶	⊙ +	▶	⊗ +
▼	⊗ ⊙ -		FUN-; -; ▼; -P-		AUTO/S ▼		⊙ -; ▼	⊗ -	MENU -; ▼	⊗ -
*; SETUP	PIC; M.CH		PIC; SET ON TIME		Q.VIEW		SMART CONT. PICT		SMART Picture [▶]	PICTURE; [▶]
♪; TITLE	BAND		X ON TIME		AFT/BAND		SMART CO. SOUND		SMART Sound [▶]	SOUND; [▶]
[▶]			MIN; MINUTE		ON TIMER		[▶]; TTR; TTX	[▶]; MIX; TMM	[▶]	[▶]
GUIDE			HOUR; HR CLOCK		TIMER ENABLE		SYS; 13-24		[▶]	LIST
⊙	TIMER; NORM		SLEEP; OFF TIME; [▶]		SLEEP		TIMER; SLEEP; [▶]		SLEEP; [▶]	⊙
[▶]					HOUR		[▶]; SPAT.; [▶]		[▶]	[▶]
RED; ●	13		1-; 10-		2-		RED; [▶]; Pon	▶ -	RED; A; PICTURE	INSTANT; ●
GREEN; [▶]	14		2-		3-		GREEN; [▶]; Pst	▶ +	GREEN; B; S-ND; [▶]	●
YELLOW; [▶]	15		3-; SCAN		4-		YELLOW; [▶]; Psz	◀	YELLOW; C; TIME; [▶]	DBB
BLUE; [▶]	16		4-; MSG		MINUTE		BLUE; [▶]; [▶]	▶	BLUE; D; GAME; [▶]	[▶]; RADIO
[▶]			RECALL; DISPLAY		CH CALL		DISPLAY; STAT.; [▶]		[▶]; RECALL; OSD	[▶]; [▶]
[▶]			[▶]; Q. VIEW; [▶]				P; P; Q.VIEW; [▶]		PP; A/CH; P/C; [▶]	⊗
VOL -	◀; VOL. DOWN		VOLUME ▼; [▶]		◀		VOL -; [▶]; [▶]	◀; [▶]; [▶]	▶ -; VOL. -; V-	SMART CONTROL-
VOL +	▶; VOL. UP		VOLUME ▲; [▶]		▶		VOL +; [▶]; [▶]	▶; [▶]; [▶]	▶ +; VOL. +; V+	SMART CONTROL+
CH V; [▶]	# -; CH. DOWN		CHANNEL ▼; P-		PR ▼		P -; CH -; PROG -	↓ -	P -; CHANNEL -	PIP -
CH A; [▶]	# +; CH. UP		CHANNEL ▲; P+		PR ▲		P +; CH +; PROG +	↓ +	P +; CHANNEL +	PIP +
+; SAT	11		+;		1-		-/-; PAGE +; [▶]		-/-	SAT
CLEAR; X	12		RESET; CANCEL; X		SKIP		P/C; TPD; PAGE; [▶]	[▶]; SYS; PIP; [▶]	X [▶]; [▶]	CC
[▶]; [▶]							[▶]; TSC; SUB.PAGE		[▶]	[▶]
[▶]; [▶]							[▶]; X; T INDEX; [▶]		[▶]; WHITE; [▶]	2
[▶]; [▶]							[▶]; [▶]; REV		[▶]; [▶]	X2
[▶]; [▶]							[▶]; [▶]; TPH; STORE		[▶]; [▶]	[▶]
[▶]; [▶]							[▶]; [▶]; TST		[▶]; [▶]	[▶]; [▶]
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 03 F

Кнопки пульта IRC 03 F	Код 106		Код 107		Код 108		Код 109		Код 110	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	▶▶; LIST				CH ▲		INDEX ▶▶			
AUDIO; NICAM	AUDIO				SURROUND				LANGUAGE	
VIDEO; SYS					SYSTEM; L/F/T					
[ZOOM]			H.ADJ		16.9					
▼; TV	[▶▶]; HOLD				CH ▼		INDEX [▶▶]			
[TV]					PinP	STORE	SEARCH		AUTO SEARCH	
[LOCK]	FREEZE				STILL		COUNTER RESET		NORMAL/OK	
▲; FAV	FAV		M.ADJ		SWAP					
⊙	⊙		⊙; POWER		OFF; [▶]		TV POWER	POWER	⊙	
AV	SOURCE		TV/AV		Ⓞ; TV/VIDEO; [▶]; [▶]	TV/VIDEO	TV/AV		Ⓞ; TV/VIDEO	
Ⓞ					Ⓞ; MUTE		Ⓞ		Ⓞ	
MENU	MENU				MENU; [▶]		MENU		MENU; 100	
EXIT	[▶▶]; EXIT				MENU OFF				E; [▶]; TV/CATV	
▲	▲				⊙ ▲		▲		▲	
◀	◀		PICT -; -				◀			
OK	OK				E; ENTER; OK; [▶]; [▶]		▶		SET/RESET	
▶	▶		PICT +; +				▶			
▼	▼				⊙ ▼		▼			
*; SETUP	PICTURE		PICTURE		[▶]; TV/TEXT				PICTURE	
♪; TITLE	SOUND				Ⓞ/II					
[▶]	TEXT				[▶]; TEXT; [▶]		ATK		[▶]; RECALL	
GUIDE	[▶]; TV GUIDE				2 PIC					
⊙	REC LIST		⊙; SLEEP		SLEEP; [▶]; [▶]		SLEEP		SLEEP	
[▶]	[▶]; CH LIST				NORMAL; [▶]; [▶]					
RED; ●	RED; AUDIO	●			RED; DEL; DELETE			REC/OTR	TIMER	
GREEN; [▶]	GREEN; SUBTITLE				GREEN; MOVE				HOUR	
YELLOW; [▶]	YELLOW; FAV				YELLOW; TIME; [▶]				MINUTE	
BLUE; [▶]	BLUE; AD				BLUE; MODE		[▶]; SLOW		QUICK VIEW	
[▶]	[▶]; INFO		RECALL; [▶]		POSITION		OSD			
[▶]	[▶]; BACK		RECALL; [▶]		RECALL; [▶]				2-; P/C	
VOL -	◀		◀		VOL ◀; [▶]; [▶]		VOL/V-LOCK ▼		◀	
VOL +	▶		▶		VOL ▶; [▶]; [▶]		VOL/V-LOCK ▲		▶	
CH V; [▶]	CH -	[▶▶]; HOLD	PROG -		PR ▼; ▼		CH/TRK. ▼	INDEX [▶▶]	PR ▼	
CH A; [▶]	CH +	[▶▶]; LIST	PROG +		PR ▲; ▲		CH/TRK. ▲	INDEX [▶▶]	PR ▲	
+; SAT			1-; 11		-/-		SPEED		1-; -/-	
CLEAR; X			2-; 12		SKIP; [▶]; [▶]; WOOF.	SKIP	COUNTER [▶] STOP		3-	
[▶]; [▶]	[▶▶]; LANGUAGE		3-; 13		TIME; [▶]		[▶▶]; REW		4-	
[▶]; [▶]			14		[▶]		[▶▶]; PLAY		E; [▶]; TV/CATV	
[▶]; [▶]	[▶▶]; REVEAL	REVEAL	15		[▶]		[▶▶]; F.FWD			
[▶]; [▶]	[▶▶]; FREEZE	HOLD	16		SURROUND; [▶]		[▶▶]; STOP			
[▶]; [▶]	[▶▶]; TEXT				[▶]		[▶▶]; PAUSE/STILL			
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	