

# Краткое приложение IRC 456 F (версия 24.06.08 13:11)

Модели оригинальных пультов и соответствующие им коды пульта **IRC** приведены в разделе "**Коды пульта IRC 456 F**". В таблице могут быть указаны не все модели оригинальных пультов: полный список и рисунки всех заменяемых оригинальных пультов смотрите на сайте [www.pult-irc.ru](http://www.pult-irc.ru) в разделе «Инструкции к пультам».

Функции всех кнопок для некоторых кодов пульта **IRC** можно узнать из таблиц данного приложения и для каждого кода пульта **IRC** на сайте [www.pult-irc.ru](http://www.pult-irc.ru) в разделе «Инструкции к пультам».

Пульт **IRC** может иметь дополнительные функции (если указаны в столбце "**Доп. функция**"). Доступ к ним осуществляется при помощи кнопки **SHIFT** (см. в инструкции рис.1, п.16). Для доступа к дополнительным функциям нажмите кнопку **SHIFT** и, **удерживая её нажатой**, нажмите ту кнопку, дополнительная функция которой Вам необходима.

## Доступные коды пульта IRC 456 F

Номер базы кодов (диапазон кодов)	Устройство базы кодов	Доступные коды пульта
<b>1 (101-199)</b>	-	<b>Нет</b>
<b>2 (201-299)</b>	-	<b>Нет</b>
<b>3 (301-399)</b>	<b>AUX</b>	<b>301 - 315</b>
<b>4 (401-499)</b>	-	<b>Нет</b>
<b>5 (501-599)</b>	<b>TV</b>	<b>501 - 599</b>
<b>6 (601-699)</b>	<b>TV</b>	<b>601 - 699</b>
<b>7 (701-799)</b>	<b>TV</b>	<b>701 - 799</b>
<b>8 (801-899)</b>	<b>SAT</b>	<b>801 - 899</b>
<b>9 (901-999)</b>	<b>SAT</b>	<b>901 - 999</b>

Базы кодов 5 – 9 являются бонусными и подходят к устройствам различных марок. Тип их устройств указан в столбце «Устройство базы кодов». Список заменяемых марок и коды к ним смотрите на сайте [www.pult-irc.ru](http://www.pult-irc.ru) в разделе «Инструкции к пультам».

## Коды пульта IRC 456 F

### Коды к устройствам

Модель	Устр-во	Код
DM-50	AUX, CD, DVD	301
RC-1048	AUX, CD, DVD	308
RC-1048 (iPod)	AUX, CD, DVD	309
RC-1097	AUX, CD, DVD	305
RC-1117	AUX, CD, DVD	310
RC-1117 (iPod)	AUX, CD, DVD	309
RC-1165	AUX, CD, DVD	306
RC-1167 (MAIN)	AUX, CD, DVD	306
RC-1167 (ZONE2)	AUX, CD, DVD	307
RC-1168	AUX, CD, DVD	306
RC-1168 (ZONE2)	AUX, CD, DVD	307
RC-1169	AUX, CD, DVD	306
RC-1181	AUX, CD, DVD	306
RC-1182	AUX, CD, DVD	306
RC-1182 (ZONE2)	AUX, CD, DVD	307
RC-1183 (MAIN)	AUX, CD, DVD	306
RC-1183 (ZONE2)	AUX, CD, DVD	307
RC-1184 (MAIN)	AUX, CD, DVD	306
RC-1184 (ZONE2)	AUX, CD, DVD	307
RC-1189	AUX, CD, DVD	306
RC-1189 (ZONE2)	AUX, CD, DVD	307
RC-1192 (MAIN)	AUX, CD, DVD	306
RC-1192 (ZONE2)	AUX, CD, DVD	307
RC-1196	AUX, CD, DVD	311
RC-1211 (MAIN)	AUX, CD, DVD	306
RC-1211 (ZONE2)	AUX, CD, DVD	307
RC-1216	AUX, CD, DVD	306
RC-1217 (MAIN)	AUX, CD, DVD	306
RC-1217 (ZONE2)	AUX, CD, DVD	307
RC-1218 (MAIN)	AUX, CD, DVD	306
RC-1218 (ZONE2)	AUX, CD, DVD	307
RC-1219 (MAIN)	AUX, CD, DVD	306
RC-1219 (ZONE2)	AUX, CD, DVD	307
RC-1221	AUX, CD, DVD	306
RC-1226	AUX, CD, DVD	306
RC-1227 (MAIN)	AUX, CD, DVD	306
RC-1227 (ZONE2)	AUX, CD, DVD	307
RC-1228 (MAIN)	AUX, CD, DVD	306
RC-1228 (ZONE2)	AUX, CD, DVD	307
RC-1235 (MAIN)	AUX, CD, DVD	306
RC-1235 (ZONE2)	AUX, CD, DVD	307
RC-1239 (MAIN)	AUX, CD, DVD	306
RC-1239 (ZONE2)	AUX, CD, DVD	307
RC-1240 (MAIN)	AUX, CD, DVD	306
RC-1240 (ZONE2)	AUX, CD, DVD	307

Модель	Устр-во	Код
RC-136	AUX, CD, DVD	312
RC-136 (CD)	AUX, CD, DVD	314
RC-136 (DECK)	AUX, CD, DVD	313
RC-152	AUX, CD, DVD	302
RC-176	AUX, CD, DVD	302
RC-230	AUX, CD, DVD	314
RC-30	AUX, CD, DVD	315
RC-410	AUX, CD, DVD	313
RC-416	AUX, CD, DVD	313
RC-546	AUX, CD, DVD	303
RC-552	AUX, CD, DVD	303
RC-554	AUX, CD, DVD	303
RC-843 (CD,DECK)	AUX, CD, DVD	302
RC-843 (MD)	AUX, CD, DVD	304
RC-985	AUX, CD, DVD	303

\* По каталогу «IRC»

Функции кнопок пульта IRC 456 F

Кнопки пульта IRC 456 F	Код 301		Код 302		Код 303		Код 304		Код 305	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	DISC SKIP; EON		AUX; DVD/AUX		V.S.S.; VIRTUAL		DVD/AUX			
AUDIO; NICAM	TONE/SDB		PHONO		AUDIO	S.AUDIO; CD SETUP	PHONO			
VIDEO; SYS			CD		NTSC/PAL		CD			
⏏; ZOOM	RANDOM; RDS		RANDOM (CD)		ZOOM					
▼; TV	TUNER		TUNER		SELECT (PURE)		TUNER		TUNER	
⏪; ⏩			TAPE-1; TAPE-		MEMORY (PURE DI.)		TAPE-1/DAT		DIMMER	
🔒; LOCK			APE-2; TAPE-2/MD		ANGLE		TAPE-2/MD			
▲; FAV			DISC SKIP (CD)		OPEN/CLOSE; ▲					
⏻	SYSTEM POWER		POWER AMP		POWER ON		POWER		ON/STANDBY	
AV					POWER OFF				SOURCE	
⏪			MUTING				MUTING		MUTE	
MENU	FUNCTION				MENU	SEARCH MODE			MENU/SET	
EXIT					RETURN					
▲			PRESET ▲ (TUNER)		▲		PRESET ▲ (TUNER)		▲	
◀					◀				◀	
OK	ENTER MEMORY				ENTER				ENTER/MEMO	
▶					▶				▶	
▼			PRESET ▼ (TUNER)		▼		PRESET ▼ (TUNER)		▼	
⚙; SETUP	EDIT				SET UP	PICTURE ADJUST			DAB/RDS	
🎵; TITLE	TITLE/CHARACTER				TOP MENU				SDB/TONE	
📺					MODE				PROG/DIRECT	
GUIDE	PROG/DIRECT; CT				PROG/DIRECT				REMOTE/BROWSE	
⏻	SLEEP				RANDOM				SLEEP	
🕒	TIME				SUBTITLE				CLOCK	
RED; ●	REPEAT; PTY		POWER CD	●; REC (DECK)	DIMMER		●; REC (MD)		REPEAT	
GREEN; ⏪	▶/   (MD)		POWER DECK		MARKER				▶/   (USB)	
YELLOW; ◀	◀ (TAPE)		POWER TUNER	◀; PLAY (REV)	HDMI/DVI SELECT				RANDOM	
BLUE; ▶	▶ (TAPE)				HDMI/DVI FORMAT				▶/   (iPod)	
📺	DISPLAY				DISPLAY	A-B REPEAT			TIME/DISPLAY	
📺	CALL; PANEL		REPEAT (CD)		CALL	REPEAT			FOLDER MODE	
VOL -	VOLUME ▼		VOLUME ▼; DOWN		PAGE -		VOLUME ▼; DOWN		VOLUME ▼	
VOL +	VOLUME ▲		VOLUME ▲; UP		PAGE +		VOLUME ▲; UP		VOLUME ▲	
CH V; —	—; PRESET ▼		— (CD)		◀; SKIP -		◀; (MD)		◀; CH -	
CH A; ▶▶	▶▶; PRESET ▲		(CD)		▶▶; SKIP +		▶▶; (MD)		▶▶; CH +	
⊕; SAT	+10		A/B (DECK)		+10				+10	
CLEAR; X	CLEAR				CLEAR				CLEAR/DEL	
◀; ●	◀; TUNING ▼		◀ (CD)	◀; REW (DECK)	◀; SLOWSEARCH		◀ (MD)		◀; TU -	
▶; i	▶/   (CD)	▶/   (CD-R)	▶; PLAY (CD)	▶; ▶ (DECK)	▶; PLAY		▶; PLAY (MD)		▶/   (CD)	
▶▶; ?	▶▶; TUNING ▲		▶▶ (CD)	▶▶; FF (DECK)	▶▶; SLOWSEARCH		▶▶ (MD)		▶▶; TU +	
■; ⌘	■; BAND		■; STOP (CD)	■; STOP (DECK)	■; STOP		■ STOP (MD)		■	
; ⏻	▶/   (CD)	▶/   (CD-R)	; PAUSE (CD)	; PAUSE (DECK)	; STILL/PAUSE		; PAUSE (MD)		▶/   (CD)	
1, 2, ..., 9, 0	1, 2, ..., 9, 10		DISC 1, 2, ..., 6		1, 2, ..., 9, 0				1, 2, ..., 9, 0	

Функции кнопок пульта IRC 456 F

Кнопки пульта IRC 456 F	Код 306		Код 307		Код 308		Код 309		Код 310	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD	DVD		DVD		DVD/DVP		iPod		DVD	
AUDIO; NICAM	TV AUDIO		TV AUDIO		PARA; AUDIO		AUDIO DELAY		PHONO	
VIDEO; SYS	CD		CD		SYSTEM; SETUP				VCR	
⏏; ZOOM	MEDIA PLAYER		CBL/SAT		CD-R/TAPE		D/ST		DVR	
▼; TV	TUNER		TUNER; FM		TV/CBL		FM/AM		TV	
⏪; ⏩	PHONO		PHONO		VCR		SEARCH		V.AUX	
🔒; LOCK	BLUETOOTH		BLUETOOTH		STD		RESTORER		STD	
▲; FAV	USB; iPod/USB		USB; iPod/USB		CD				CD	
⏻	⏻; POWER (MAIN)		⏻; POWER		OFF				OFF	
AV	AUX 1; AUX	AUX 2	AUX 1; AUX	AUX 2 (ZONE2)	ON/SOURCE		SOURCE SELECT		ON/SOURCE	
⏪	⏪; MUTE		⏪; MUTE		MUTING		DYN VOL		MUTE	
MENU	OPTION	FAV. STATION 1	MEDIA PLAYER		MODE		DYN EQ		MENU	
EXIT	BACK	FAV. STATION 2	BACK		V. SELECT		RETURN		CH LEVEL	
▲	▲	QUICK SELECT 1	▲		▲				▲	
◀	◀	QUICK SELECT 2	◀		◀				◀	
OK	ENTER	QUICK SELECT 3	ENTER		ENT		SELECT iPod		ENT	
▶	▶	QUICK SELECT 4	▶		▶				▶	
▼	▼	QUICK SELECT 5	▼		▼				▼	
⚙; SETUP	SETUP	FAV. STATION 3			DIMMER		XM		V.SEL	
🎵; TITLE	SOUND MODE	SPEAKER	INTERNET RADIO		TUNER		XM RADIO		TUNER	
📺	BLU-RAY		BLU-RAY		MULT EQ				INPUT MODE	
GUIDE	GAME	INTERNET RADIO	GAME		5CH/7CH				SPEAKERS	
⏻	SLEEP		SLEEP		SIMU		SLEEP		SIMU	
🕒	🕒; ECO				STATUS				MULT EQ	
RED; ●	⏪ (CD)	SOUND M. MUSIC	SOUND M. MUSIC		AUX				HDP	
GREEN; ⏪	▶▶ (CD)	SOUND M. MOVIE	SOUND M. MOVIE		V.AUX				CINEMA	
YELLOW; ◀	◀; TUNE -	SOUND M. PURE	SOUND M. PURE		CINEMA				MUSIC	
BLUE; ▶	▶▶; TUNE +	SOUND M. GAME	SOUND M. GAME		MUSIC				PURE	
📺	INFO		⏻; ON. MUSIC		DISPLAY		MEMORY		STATUS	
📺	⏻; ON. MUSIC		BACK		TEST; DISPLAY		PEPEAT			
VOL -	VOLUME ▼	PRESET ⏪	VOLUME ▼	⏪; TUNE -	▼				▼	
VOL +	VOLUME ▲	PRESET	VOLUME ▲	▶▶; TUNE +	▲				▲	
CH V; —	CH/PAGE ▼	PAGE ▼	CH/PAGE ▼	⏪ (CD)	CH -; ⏪		⏪ iPod		CH -; ⏪	
CH A; ▶▶	CH/PAGE ▲	PAGE ▲	CH/PAGE ▲	▶▶ (CD)	CH +; ▶▶		▶▶ iPod		CH +; ▶▶	
⊕; SAT	CBL/SAT	+10	⏪; TUNE -		+10		SAT TU		SAT/CBL	
CLEAR; X	DIMMER		▶▶; TUNE +		NIGHT				SHIFT (TUNER)	
◀; ●	◀; BAND	◀ (CD)	◀; BAND	◀ (CD)	TUNING -		◀ iPod		TUNING ▼	
▶; i	▶/	▶/   (CD)	▶/	▶/   (CD)	MODE (TUNER)		▶ iPod		MODE (TUNER)	
▶▶; ?	▶▶; MEMORY	▶▶ (CD)	▶▶; MEMORY	▶▶ (CD)	TUNING +		▶ iPod		TUNING ▲	
■; ⌘	■; MODE	■ (CD)	■; MODE	■ (CD)	MEMORY (TUNER)		■ iPod		MEMORY (TUNER)	
; ⏻	▶/	▶/   (CD)	▶/	▶/   (CD)	BAND (TUNER)		iPod		BAND (TUNER)	
1, 2, ..., 9, 0	1, 2, ..., 9, 0		QUICK SEL. 1,2,3,4		1, 2, ..., 9, 0		QUICK SEL. 1,2,3		1, 2, ..., 9, 0	